

**Cyndy Davenport
Ishka Voiculescu**



Mastering AutoCAD® Civil 3D® 2015

Table of Contents

[Cover](#)

[Title Page](#)

[Copyright](#)

[Publisher's Note](#)

[Acknowledgments](#)

[About the Authors](#)

[Introduction](#)

[Who Should Read This Book](#)

[What You Will Learn](#)

[What You Need](#)

[The Mastering Series](#)

[What Is Covered in This Book](#)

[How to Contact the Authors](#)

[Chapter 1: The Basics](#)

[The Interface](#)

[Civil 3D Templates](#)

[Creating Lines](#)

[Creating Curves](#)

[Using Transparent Commands](#)

[The Bottom Line](#)

[Chapter 2: Survey](#)

[Setting Up the Databases](#)

[Configuring Description Keys for Point Import](#)

[Understanding the Survey Database](#)

[Other Survey Features](#)

[Using Inquiry Commands](#)

[The Bottom Line](#)

[Chapter 3: Points](#)

[Anatomy of a Point](#)

[Creating Basic Points](#)

[Basic Point Editing](#)

[Point Tables](#)

[User-Defined Properties](#)

[The Bottom Line](#)

[Chapter 4: Surfaces](#)

[Understanding Surface Basics](#)

[Creating Surfaces](#)

[Additional Surface Creation Methods](#)

[Refining and Editing Surfaces](#)

[Surface Analysis](#)

[Comparing Surfaces](#)

[Labeling the Surface](#)

[Point Cloud Surfaces](#)

[The Bottom Line](#)

[Chapter 5: Parcels](#)

[Introduction to Sites](#)

[Creating a Boundary Parcel](#)

[Creating Subdivision Lot Parcels Using Precise Sizing Tools](#)

[Editing Parcels by Deleting Parcel Segments](#)

[Best Practices for Parcel Creation](#)

[Labeling Parcel Areas](#)

[Labeling Parcel Segments](#)

[The Bottom Line](#)

[Chapter 6: Alignments](#)

[Alignment Concepts](#)

[Creating an Alignment](#)

[Editing Alignment Geometry](#)

[Alignments as Objects](#)

[The Bottom Line](#)

[Chapter 7: Profiles and Profile Views](#)

[The Elevation Element](#)

[Editing Profiles](#)

[Profile Views](#)

[Editing Profile Views](#)

[Profile Labels](#)

[Profile Utilities](#)

[The Bottom Line](#)

[Chapter 8: Assemblies and Subassemblies](#)

[Subassemblies](#)

[Building Assemblies](#)

[Specialized Subassemblies](#)

[Advanced Assemblies](#)

[Organizing Your Assemblies](#)

[The Bottom Line](#)

[Chapter 9: Basic Corridors](#)

[Understanding Corridors](#)

[Recognizing Corridor Components](#)

[Working with Corridor Feature Lines](#)

[Understanding Targets](#)

[Editing Sections](#)

[Creating a Corridor Surface](#)

[Performing a Volume Calculation](#)

[Building Non-Road Corridors](#)

[The Bottom Line](#)

[Chapter 10: Advanced Corridors, Intersections, and Roundabouts](#)

[Using Multiregion Baselines](#)

[Modeling a Cul-de-Sac](#)

[Moving Up to Intersections](#)

[Using an Assembly Offset](#)

[Understanding Corridor Utilities](#)

[Using a Feature Line as a Width and Elevation Target](#)

[Tackling Roundabouts: the Mount Everest of Corridors](#)

[The Bottom Line](#)

[Chapter 11: Superelevation](#)

[Preparing for Superelevation](#)

[Applying Superelevation to the Design](#)

[Calculating Cants for Rail](#)

[Superelevation and Cant Views](#)

[The Bottom Line](#)

[Chapter 12: Cross Sections and Mass Haul](#)

[Section Workflow](#)

[Creating Section Views](#)

[Calculating and Reporting Volumes](#)

[Adding Section View Final Touches](#)

[Using Mass Haul Diagrams](#)

[The Bottom Line](#)

[Chapter 13: Pipe Networks](#)

[Setting Up a Pipe Network](#)

[Creating a Waste Water Network](#)

[Editing a Pipe Network](#)

[Creating an Alignment from Network Parts](#)

[Drawing Parts in Profile View](#)

[Adding Pipe Network Labels](#)

[Creating an Interference Check](#)

[Creating Pipe Tables](#)

[Setting and Using a Pressure Pipes Network](#)

[Understanding Part Builder](#)

[Part Builder Orientation](#)

[The Bottom Line](#)

[Chapter 14: Grading](#)

[Working with Grading Feature Lines](#)

[Grading Objects](#)

[Finishing Touches](#)

[The Bottom Line](#)

[Chapter 15: Plan Production](#)

[Preparing for Plan Sets](#)

[Using View Frames and Match Lines](#)

[Creating Plan and Profile Sheets](#)

[Creating Section Sheets](#)

[Drawing Templates](#)

[The Bottom Line](#)

[Chapter 16: Advanced Workflows](#)

[Data Shortcuts](#)

[Sharing Data with a Non-Civil 3D World](#)

[The Bottom Line](#)

[Chapter 17: Quantity Takeoff](#)

[Employing Pay Item Files](#)

[Keeping Tabs on the Model](#)

[Inventorying Your Pay Items](#)

[The Bottom Line](#)

[Chapter 18: Label Styles](#)

[Label Styles](#)

[Line and Curve Labels](#)

[Pipe and Structure Labels](#)

[Profile and Alignment Labels](#)

[Advanced Style Types](#)

[The Bottom Line](#)

[Chapter 19: Object Styles](#)

[Getting Started with Object Styles](#)

[Creating Linear Object Styles](#)

[Creating Surface Styles](#)

[Creating Pipe and Structure Styles](#)

[Creating Profile View Styles](#)

[Creating Section View Styles](#)

[The Bottom Line](#)

[Appendix A: The Bottom Line](#)

[Chapter 1: The Basics](#)

[Chapter 2: Survey](#)

[Chapter 3: Points](#)

[Chapter 4: Surfaces](#)

[Chapter 5: Parcels](#)

[Chapter 6: Alignments](#)

[Chapter 7: Profiles and Profile Views](#)

[Chapter 8: Assemblies and Subassemblies](#)

[Chapter 9: Basic Corridors](#)

[Chapter 10: Advanced Corridors, Intersections, and Roundabouts](#)

[Chapter 11: Superelevation](#)

[Chapter 12: Cross Sections and Mass Haul](#)

[Chapter 13: Pipe Networks](#)

[Chapter 14: Grading](#)

[Chapter 15: Plan Production](#)

[Chapter 16: Advanced Workflows](#)

[Chapter 17: Quantity Takeoff](#)

[Chapter 18: Label Styles](#)

[Chapter 19: Object Styles](#)

[Appendix B: Autodesk AutoCAD Civil 3D 2015 Certification](#)

[End User License Agreement](#)

List of Illustrations

[Figure 1.1](#)

[Figure 1.2](#)

[Figure 1.3](#)

[Figure 1.4](#)

[Figure 1.5](#)

[Figure 1.6](#)

[Figure 1.7](#)

[Figure 1.8](#)

[Figure 1.9](#)

[Figure 1.10](#)

[Figure 1.11](#)

[Figure 1.12](#)

[Figure 1.13](#)

[Figure 1.14](#)

[Figure 1.15](#)

[Figure 1.16](#)

[Figure 1.17](#)

[Figure 1.18](#)

[Figure 1.19](#)

[Figure 1.20](#)

[Figure 1.21](#)

[Figure 1.22](#)

[Figure 1.23](#)

[Figure 1.24](#)

[Figure 1.25](#)

[Figure 1.26](#)

[Figure 1.27](#)

[Figure 1.28](#)

[Figure 1.29](#)

[Figure 1.30](#)

[Figure 1.31](#)

[Figure 1.32](#)

[Figure 1.33](#)

[Figure 1.34](#)

[Figure 1.35](#)

[Figure 1.36](#)

[Figure 1.37](#)

[Figure 1.38](#)

[Figure 1.39](#)

[Figure 1.40](#)

[Figure 1.41](#)

[Figure 1.42](#)

[Figure 1.43](#)

[Figure 1.44](#)

[Figure 1.45](#)

[Figure 1.46](#)

[Figure 1.47](#)

[Figure 1.48](#)

[Figure 1.49](#)

[Figure 1.50](#)

[Figure 1.51](#)

[Figure 1.52](#)

[Figure 1.53](#)

[Figure 1.54](#)

[Figure 1.55](#)

[Figure 1.56](#)

[Figure 1.57](#)

[Figure 1.58](#)

[Figure 1.59](#)

[Figure 1.60](#)

[Figure 1.61](#)

[Figure 1.62](#)

[Figure 1.63](#)

[Figure 1.64](#)

[Figure 2.1](#)

[Figure 2.2](#)

[Figure 2.3](#)

[Figure 2.4](#)

[Figure 2.5](#)

[Figure 2.6](#)

[Figure 2.7](#)

[Figure 2.8](#)

[Figure 2.9](#)

[Figure 2.10](#)

[Figure 2.11](#)

[Figure 2.12](#)

[Figure 2.13](#)

[Figure 2.14](#)

[Figure 2.15](#)

[Figure 2.16](#)

[Figure 2.17](#)

[Figure 2.18](#)

[Figure 2.19](#)

[Figure 2.20](#)

[Figure 2.21](#)

[Figure 2.22](#)

[Figure 2.23](#)

[Figure 2.24](#)

[Figure 2.25](#)

[Figure 2.26](#)

[Figure 2.27](#)

[Figure 2.28](#)

[Figure 2.29](#)

[Figure 2.30](#)

[Figure 2.31](#)

[Figure 2.32](#)

[Figure 2.33](#)

[Figure 2.34](#)

[Figure 2.35](#)

[Figure 2.36](#)

[Figure 2.37](#)

[Figure 2.38](#)

[Figure 2.39](#)

[Figure 2.40](#)

[Figure 2.41](#)

[Figure 3.1](#)

[Figure 3.2](#)

[Figure 3.3](#)

[Figure 3.4](#)

[Figure 3.5](#)

[Figure 3.6](#)

[Figure 3.7](#)

[Figure 3.8](#)

[Figure 3.9](#)

[Figure 3.10](#)

[Figure 3.11](#)

[Figure 3.12](#)

[Figure 3.13](#)

[Figure 3.14](#)

[Figure 3.15](#)

[Figure 3.16](#)

[Figure 3.17](#)

[Figure 3.18](#)

[Figure 3.19](#)

[Figure 3.20](#)

[Figure 3.21](#)

[Figure 3.22](#)

[Figure 3.23](#)

[Figure 3.24](#)

[Figure 3.25](#)

[Figure 3.26](#)

[Figure 3.27](#)

[Figure 3.28](#)

[Figure 3.29](#)

[Figure 3.30](#)

[Figure 3.31](#)

[Figure 4.1](#)

[Figure 4.2](#)

[Figure 4.3](#)

[Figure 4.4](#)

[Figure 4.5](#)

[Figure 4.6](#)

[Figure 4.7](#)

[Figure 4.8](#)

[Figure 4.9](#)

[Figure 4.10](#)

[Figure 4.11](#)

[Figure 4.12](#)

[Figure 4.13](#)

[Figure 4.14](#)

[Figure 4.15](#)

[Figure 4.16](#)

[Figure 4.17](#)

[Figure 4.18](#)

[Figure 4.19](#)

[Figure 4.20](#)

[Figure 4.21](#)

[Figure 4.22](#)

[Figure 4.23](#)

[Figure 4.24](#)

[Figure 4.25](#)

[Figure 4.26](#)

[Figure 4.27](#)

[Figure 4.28](#)

[Figure 4.29](#)

[Figure 4.30](#)

[Figure 4.31](#)

[Figure 4.32](#)

[Figure 4.33](#)

[Figure 4.34](#)

[Figure 4.35](#)

[Figure 4.36](#)

[Figure 4.37](#)

[Figure 4.38](#)

[Figure 4.39](#)

[Figure 4.40](#)

[Figure 4.41](#)

[Figure 4.42](#)

[Figure 4.43](#)

[Figure 4.44](#)

[Figure 4.45](#)

[Figure 4.46](#)

[Figure 4.47](#)

[Figure 4.48](#)

[Figure 4.49](#)

[Figure 4.50](#)

[Figure 4.51](#)

[Figure 4.52](#)

[Figure 4.53](#)

[Figure 4.54](#)

[Figure 4.55](#)

[Figure 4.56](#)

[Figure 4.57](#)

[Figure 4.58](#)

[Figure 4.59](#)

[Figure 4.60](#)

[Figure 4.61](#)

[Figure 5.1](#)

[Figure 5.2](#)

[Figure 5.3](#)

[Figure 5.4](#)

[Figure 5.5](#)

[Figure 5.6](#)

[Figure 5.7](#)

[Figure 5.8](#)

[Figure 5.9](#)

[Figure 5.10](#)

[Figure 5.11](#)

[Figure 5.12](#)

[Figure 5.13](#)

[Figure 5.14](#)

[Figure 5.15](#)

[Figure 5.16](#)

[Figure 5.17](#)

[Figure 5.18](#)

[Figure 5.19](#)

[Figure 5.20](#)

[Figure 5.21](#)

[Figure 5.22](#)

[Figure 5.23](#)

[Figure 5.24](#)

[Figure 5.25](#)

[Figure 5.26](#)

[Figure 5.27](#)

[Figure 5.28](#)

[Figure 5.29](#)

[Figure 5.30](#)

[Figure 5.31](#)

[Figure 5.32](#)

[Figure 5.33](#)

[Figure 5.34](#)

[Figure 5.35](#)

[Figure 5.36](#)

[Figure 5.37](#)

[Figure 5.38](#)

[Figure 5.39](#)

[Figure 5.40](#)

[Figure 5.41](#)

[Figure 5.42](#)

[Figure 5.43](#)

[Figure 5.44](#)

[Figure 5.45](#)

[Figure 5.46](#)

[Figure 5.47](#)

[Figure 5.48](#)

[Figure 5.49](#)

[Figure 5.50](#)

[Figure 5.51](#)

[Figure 5.52](#)

[Figure 5.53](#)

[Figure 5.54](#)

[Figure 5.55](#)

[Figure 5.56](#)

[Figure 5.57](#)

[Figure 5.58](#)

[Figure 5.59](#)

[Figure 5.60](#)

[Figure 5.61](#)

[Figure 5.62](#)

[Figure 5.63](#)

[Figure 5.64](#)

[Figure 5.65](#)

[Figure 5.66](#)

[Figure 6.1](#)

[Figure 6.2](#)

[Figure 6.3](#)

[Figure 6.4](#)

[Figure 6.5](#)

[Figure 6.6](#)

[Figure 6.7](#)

[Figure 6.8](#)

[Figure 6.9](#)

[Figure 6.10](#)

[Figure 6.11](#)

[Figure 6.12](#)

[Figure 6.13](#)

[Figure 6.14](#)

[Figure 6.15](#)

[Figure 6.16](#)

[Figure 6.17](#)

[Figure 6.18](#)

[Figure 6.19](#)

[Figure 6.20](#)

[Figure 6.21](#)

[Figure 6.22](#)

[Figure 6.23](#)

[Figure 6.24](#)

[Figure 6.25](#)

[Figure 6.26](#)

[Figure 6.27](#)

[Figure 6.28](#)

[Figure 6.29](#)

[Figure 6.30](#)

[Figure 6.31](#)

[Figure 6.32](#)

[Figure 6.33](#)

[Figure 6.34](#)

[Figure 6.35](#)

[Figure 6.36](#)

[Figure 6.37](#)

[Figure 6.38](#)

[Figure 6.39](#)

[Figure 6.40](#)

[Figure 6.41](#)

[Figure 6.42](#)

[Figure 6.43](#)

[Figure 6.44](#)

[Figure 6.45](#)

[Figure 6.46](#)

[Figure 6.47](#)

[Figure 6.48](#)

[Figure 6.49](#)

[Figure 6.50](#)

[Figure 6.51](#)

[Figure 6.52](#)

[Figure 6.53](#)

[Figure 7.1](#)

[Figure 7.2](#)

[Figure 7.3](#)

[Figure 7.4](#)

[Figure 7.5](#)

[Figure 7.6](#)

[Figure 7.7](#)

[Figure 7.8](#)

[Figure 7.9](#)

[Figure 7.10](#)

[Figure 7.11](#)

[Figure 7.12](#)

[Figure 7.13](#)

[Figure 7.14](#)

[Figure 7.15](#)

[Figure 7.16](#)

[Figure 7.17](#)

[Figure 7.18](#)

[Figure 7.19](#)

[Figure 7.20](#)

[Figure 7.21](#)

[Figure 7.22](#)

[Figure 7.23](#)

[Figure 7.24](#)

[Figure 7.25](#)

[Figure 7.26](#)

[Figure 7.27](#)

[Figure 7.28](#)

[Figure 7.29](#)

[Figure 7.30](#)

[Figure 7.31](#)

[Figure 7.32](#)

[Figure 7.33](#)

[Figure 7.34](#)

[Figure 7.35](#)

[Figure 7.36](#)

[Figure 7.37](#)

[Figure 7.38](#)

[Figure 7.39](#)

[Figure 7.40](#)

[Figure 7.41](#)

[Figure 7.42](#)

[Figure 7.43](#)

[Figure 7.44](#)

[Figure 7.45](#)

[Figure 7.46](#)

[Figure 7.47](#)

[Figure 7.48](#)

[Figure 7.49](#)

[Figure 7.50](#)

[Figure 7.51](#)

[Figure 7.52](#)

[Figure 7.53](#)

[Figure 7.54](#)

[Figure 7.55](#)

[Figure 7.56](#)

[Figure 7.57](#)

[Figure 7.58](#)

[Figure 7.59](#)

[Figure 7.60](#)

[Figure 7.61](#)

[Figure 7.62](#)

[Figure 7.63](#)

[Figure 7.64](#)

[Figure 7.65](#)

[Figure 7.66](#)

[Figure 7.67](#)

[Figure 7.68](#)

[Figure 7.69](#)

[Figure 7.70](#)

[Figure 7.71](#)

[Figure 7.72](#)

[Figure 7.73](#)

[Figure 7.74](#)

[Figure 7.75](#)

[Figure 7.76](#)

[Figure 7.77](#)

[Figure 7.78](#)

[Figure 8.1](#)

[Figure 8.2](#)

[Figure 8.3](#)

[Figure 8.4](#)

[Figure 8.5](#)

[Figure 8.6](#)

[Figure 8.7](#)

[Figure 8.8](#)

[Figure 8.9](#)

[Figure 8.10](#)

[Figure 8.11](#)

[Figure 8.12](#)

[Figure 8.13](#)

[Figure 8.14](#)

[Figure 8.15](#)

[Figure 8.16](#)

[Figure 8.17](#)

[Figure 8.18](#)

[Figure 8.19](#)

[Figure 8.20](#)

[Figure 8.21](#)

[Figure 8.22](#)

[Figure 8.23](#)

[Figure 8.24](#)

[Figure 8.25](#)

[Figure 8.26](#)

[Figure 8.27](#)

[Figure 8.28](#)

[Figure 8.29](#)

[Figure 8.30](#)

[Figure 8.31](#)

[Figure 8.32](#)

[Figure 8.33](#)

[Figure 8.34](#)

[Figure 8.35](#)

[Figure 8.36](#)

[Figure 8.37](#)

[Figure 8.38](#)

[Figure 8.39](#)

[Figure 8.40](#)

[Figure 8.41](#)

[Figure 8.42](#)

[Figure 8.43](#)

[Figure 8.44](#)

[Figure 8.45](#)

[Figure 8.46](#)

[Figure 8.47](#)

[Figure 8.48](#)

[Figure 8.49](#)

[Figure 8.50](#)

[Figure 9.1](#)

[Figure 9.2](#)

[Figure 9.3](#)

[Figure 9.4](#)

[Figure 9.5](#)

[Figure 9.6](#)

[Figure 9.7](#)

[Figure 9.8](#)

[Figure 9.9](#)

[Figure 9.10](#)

[Figure 9.11](#)

[Figure 9.12](#)

[Figure 9.13](#)

[Figure 9.15](#)

[Figure 9.14](#)

[Figure 9.16](#)

[Figure 9.17](#)

[Figure 9.18](#)

[Figure 9.19](#)

[Figure 9.20](#)

[Figure 9.21](#)

[Figure 9.22](#)

[Figure 9.23](#)

[Figure 9.24](#)

[Figure 9.25](#)

[Figure 9.26](#)

[Figure 9.27](#)

[Figure 9.28](#)

[Figure 9.29](#)

[Figure 9.30](#)

[Figure 9.31](#)

[Figure 9.32](#)

[Figure 9.33](#)

[Figure 9.34](#)

[Figure 9.35](#)

[Figure 9.36](#)

[Figure 9.37](#)

[Figure 9.38](#)

[Figure 9.39](#)

[Figure 9.40](#)

[Figure 9.41](#)

[Figure 9.42](#)

[Figure 9.43](#)

[Figure 9.44](#)

[Figure 9.45](#)

[Figure 9.46](#)

[Figure 9.47](#)

[Figure 9.48](#)

[Figure 9.49](#)

[Figure 9.50](#)

[Figure 9.51](#)

[Figure 9.52](#)

[Figure 9.53](#)

[Figure 10.1](#)

[Figure 10.2](#)

[Figure 10.3](#)

[Figure 10.4](#)

[Figure 10.5](#)

[Figure 10.6](#)

[Figure 10.7](#)

[Figure 10.8](#)

[Figure 10.9](#)

[Figure 10.10](#)

[Figure 10.11](#)

[Figure 10.12](#)

[Figure 10.13](#)

[Figure 10.14](#)

[Figure 10.15](#)

[Figure 10.16](#)

[Figure 10.17](#)

[Figure 10.18](#)

[Figure 10.19](#)

[Figure 10.20](#)

[Figure 10.21](#)

[Figure 10.22](#)

[Figure 10.23](#)

[Figure 10.24](#)

[Figure 10.25](#)

[Figure 10.26](#)

[Figure 10.27](#)

[Figure 10.28](#)

[Figure 10.29](#)

[Figure 10.30](#)

[Figure 10.31](#)

[Figure 10.32](#)

[Figure 10.33](#)

[Figure 10.34](#)

[Figure 10.35](#)

[Figure 10.36](#)

[Figure 10.37](#)

[Figure 10.38](#)

[Figure 10.39](#)

[Figure 10.40](#)

[Figure 10.41](#)

[Figure 10.42](#)

[Figure 10.43](#)

[Figure 10.44](#)

[Figure 10.45](#)

[Figure 10.46](#)

[Figure 10.47](#)

[Figure 10.48](#)

[Figure 10.49](#)

[Figure 10.50](#)

[Figure 10.51](#)

[Figure 10.52](#)

[Figure 10.53](#)

[Figure 10.54](#)

[Figure 10.55](#)

[Figure 10.56](#)

[Figure 10.57](#)

[Figure 10.58](#)

[Figure 10.59](#)

[Figure 10.60](#)

[Figure 10.61](#)

[Figure 10.62](#)

[Figure 10.63](#)

[Figure 10.64](#)

[Figure 10.65](#)

[Figure 10.66](#)

[Figure 10.67](#)

[Figure 10.68](#)

[Figure 10.69](#)

[Figure 10.70](#)

[Figure 10.71](#)

[Figure 10.72](#)

[Figure 10.73](#)

[Figure 10.74](#)

[Figure 10.75](#)

[Figure 10.76](#)

[Figure 10.77](#)

[Figure 10.78](#)

[Figure 10.79](#)

[Figure 11.1](#)

[Figure 11.2](#)

[Figure 11.3](#)

[Figure 11.4](#)

[Figure 11.5](#)

[Figure 11.6](#)

[Figure 11.7](#)

[Figure 11.8](#)

[Figure 11.9](#)

[Figure 11.10](#)

[Figure 11.11](#)

[Figure 11.12](#)

[Figure 11.13](#)

[Figure 11.14](#)

[Figure 11.15](#)

[Figure 11.16](#)

[Figure 11.17](#)

[Figure 11.18](#)

[Figure 11.19](#)

[Figure 11.20](#)

[Figure 11.21](#)

[Figure 11.22](#)

[Figure 11.23](#)

[Figure 11.24](#)

[Figure 11.25](#)

[Figure 11.26](#)

[Figure 11.27](#)

[Figure 11.28](#)

[Figure 11.29](#)

[Figure 12.1](#)

[Figure 12.2](#)

[Figure 12.3](#)

[Figure 12.4](#)

[Figure 12.5](#)

[Figure 12.6](#)

[Figure 12.7](#)

[Figure 12.8](#)

[Figure 12.9](#)

[Figure 12.10](#)

[Figure 12.11](#)

[Figure 12.12](#)

[Figure 12.13](#)

[Figure 12.14](#)

[Figure 12.15](#)

[Figure 12.16](#)

[Figure 12.17](#)

[Figure 12.18](#)

[Figure 12.19](#)

[Figure 12.20](#)

[Figure 12.21](#)

[Figure 12.22](#)

[Figure 12.23](#)

[Figure 12.24](#)

[Figure 12.25](#)

[Figure 12.26](#)

[Figure 12.27](#)

[Figure 12.28](#)

[Figure 12.29](#)

[Figure 13.1](#)

[Figure 13.2](#)

[Figure 13.3](#)

[Figure 13.4](#)

[Figure 13.6](#)

[Figure 13.5](#)

[Figure 13.7](#)

[Figure 13.8](#)

[Figure 13.9](#)

[Figure 13.10](#)

[Figure 13.11](#)

[Figure 13.12](#)

[Figure 13.13](#)

[Figure 13.14](#)

[Figure 13.15](#)

[Figure 13.16](#)

[Figure 13.17](#)

[Figure 13.18](#)

[Figure 13.19](#)

[Figure 13.20](#)

[Figure 13.21](#)

[Figure 13.22](#)

[Figure 13.23](#)

[Figure 13.24](#)

[Figure 13.25](#)

[Figure 13.26](#)

[Figure 13.27](#)

[Figure 13.28](#)

[Figure 13.29](#)

[Figure 13.30](#)

[Figure 13.31](#)

[Figure 13.32](#)

[Figure 13.33](#)

[Figure 13.34](#)

[Figure 13.35](#)

[Figure 13.36](#)

[Figure 13.37](#)

[Figure 13.38](#)

[Figure 13.39](#)

[Figure 13.40](#)

[Figure 13.41](#)

[Figure 13.42](#)

[Figure 13.43](#)

[Figure 13.44](#)

[Figure 13.45](#)

[Figure 13.46](#)

[Figure 13.47](#)

[Figure 13.48](#)

[Figure 13.49](#)

[Figure 13.50](#)

[Figure 13.51](#)

[Figure 13.52](#)

[Figure 13.53](#)

[Figure 13.54](#)

[Figure 13.55](#)

[Figure 13.56](#)

[Figure 13.57](#)

[Figure 13.58](#)

[Figure 13.59](#)

[Figure 13.60](#)

[Figure 13.61](#)

[Figure 13.62](#)

[Figure 13.63](#)

[Figure 13.64](#)

[Figure 13.65](#)

[Figure 13.66](#)

[Figure 13.67](#)

[Figure 13.68](#)

[Figure 13.69](#)

[Figure 13.70](#)

[Figure 13.71](#)

[Figure 13.72](#)

[Figure 13.73](#)

[Figure 13.74](#)

[Figure 13.75](#)

[Figure 13.76](#)

[Figure 13.77](#)

[Figure 13.78](#)

[Figure 13.79](#)

[Figure 13.80](#)

[Figure 13.81](#)

[Figure 13.82](#)

[Figure 13.83](#)

[Figure 13.84](#)

[Figure 13.85](#)

[Figure 13.86](#)

[Figure 13.87](#)

[Figure 13.88](#)

[Figure 13.89](#)

[Figure 13.90](#)

[Figure 13.91](#)

[Figure 13.92](#)

[Figure 13.93](#)

[Figure 13.94](#)

[Figure 13.95](#)

[Figure 13.96](#)

[Figure 13.97](#)

[Figure 13.98](#)

[Figure 13.99](#)

[Figure 13.100](#)

[Figure 13.101](#)

[Figure 13.102](#)

[Figure 13.103](#)

[Figure 14.2](#)

[Figure 14.1](#)

[Figure 14.3](#)

[Figure 14.4](#)

[Figure 14.5](#)

[Figure 14.6](#)

[Figure 14.7](#)

[Figure 14.8](#)

[Figure 14.9](#)

[Figure 14.10](#)

[Figure 14.11](#)

[Figure 14.12](#)

[Figure 14.13](#)

[Figure 14.14](#)

[Figure 14.15](#)

[Figure 14.16](#)

[Figure 14.17](#)

[Figure 14.18](#)

[Figure 14.19](#)

[Figure 14.20](#)

[Figure 14.21](#)

[Figure 14.22](#)

[Figure 14.23](#)

[Figure 14.24](#)

[Figure 14.25](#)

[Figure 14.26](#)

[Figure 14.27](#)

[Figure 14.28](#)

[Figure 14.29](#)

[Figure 14.30](#)

[Figure 14.31](#)

[Figure 14.32](#)

[Figure 14.33](#)

[Figure 14.34](#)

[Figure 14.35](#)

[Figure 14.36](#)

[Figure 14.37](#)

[Figure 14.38](#)

[Figure 14.39](#)

[Figure 14.40](#)

[Figure 14.41](#)

[Figure 15.1](#)

[Figure 15.2](#)

[Figure 15.3](#)

[Figure 15.4](#)

[Figure 15.5](#)

[Figure 15.6](#)

[Figure 15.8](#)

[Figure 15.7](#)

[Figure 15.9](#)

[Figure 15.10](#)

[Figure 15.11](#)

[Figure 15.12](#)

[Figure 15.13](#)

[Figure 15.14](#)

[Figure 15.15](#)

[Figure 15.16](#)

[Figure 15.17](#)

[Figure 15.18](#)

[Figure 15.19](#)

[Figure 15.20](#)

[Figure 15.21](#)

[Figure 15.22](#)

[Figure 15.23](#)

[Figure 15.24](#)

[Figure 15.25](#)

[Figure 15.26](#)

[Figure 15.27](#)

[Figure 15.28](#)

[Figure 15.29](#)

[Figure 15.30](#)

[Figure 15.31](#)

[Figure 15.32](#)

[Figure 15.33](#)

[Figure 16.1](#)

[Figure 16.2](#)

[Figure 16.3](#)

[Figure 16.4](#)

[Figure 16.5](#)

[Figure 16.6](#)

[Figure 16.7](#)

[Figure 16.8](#)

[Figure 16.9](#)

[Figure 16.10](#)

[Figure 16.11](#)

[Figure 16.12](#)

[Figure 16.13](#)

[Figure 16.14](#)

[Figure 16.15](#)

[Figure 16.16](#)

[Figure 16.17](#)

[Figure 16.18](#)

[Figure 16.19](#)

[Figure 16.20](#)

[Figure 16.21](#)

[Figure 16.22](#)

[Figure 16.23](#)

[Figure 16.24](#)

[Figure 16.25](#)

[Figure 16.26](#)

[Figure 16.27](#)

[Figure 17.1](#)

[Figure 17.2](#)

[Figure 17.3](#)

[Figure 17.4](#)

[Figure 17.5](#)

[Figure 17.6](#)

[Figure 17.7](#)

[Figure 17.8](#)

[Figure 17.9](#)

[Figure 17.10](#)

[Figure 17.11](#)

[Figure 17.12](#)

[Figure 17.13](#)

[Figure 17.14](#)

[Figure 17.15](#)

[Figure 17.16](#)

[Figure 17.17](#)

[Figure 17.18](#)

[Figure 17.19](#)

[Figure 17.20](#)

[Figure 17.21](#)

[Figure 17.22](#)

[Figure 17.23](#)

[Figure 17.24](#)

[Figure 18.1](#)

[Figure 18.2](#)

[Figure 18.13](#)

[Figure 18.3](#)

[Figure 18.4](#)

[Figure 18.5](#)

[Figure 18.6](#)

[Figure 18.7](#)

[Figure 18.8](#)

[Figure 18.9](#)

[Figure 18.10](#)

[Figure 18.11](#)

[Figure 18.12](#)

[Figure 18.15](#)

[Figure 18.14](#)

[Figure 18.16](#)

[Figure 18.17](#)

[Figure 18.18](#)

[Figure 18.19](#)

[Figure 18.20](#)

[Figure 18.21](#)

[Figure 18.22](#)

[Figure 18.23](#)

[Figure 18.24](#)

[Figure 18.25](#)

[Figure 18.26](#)

[Figure 18.27](#)

[Figure 18.28](#)

[Figure 18.29](#)

[Figure 18.30](#)

[Figure 18.31](#)

[Figure 18.32](#)

[Figure 18.33](#)

[Figure 18.34](#)

[Figure 18.35](#)

[Figure 18.36](#)

[Figure 18.37](#)

[Figure 18.38](#)

[Figure 18.39](#)

[Figure 18.40](#)

[Figure 18.41](#)

[Figure 18.42](#)

[Figure 18.43](#)

[Figure 18.44](#)

[Figure 18.45](#)

[Figure 18.46](#)

[Figure 18.47](#)

[Figure 18.48](#)

[Figure 18.49](#)

[Figure 18.50](#)

[Figure 18.51](#)

[Figure 18.52](#)

[Figure 18.53](#)

[Figure 18.54](#)

[Figure 18.55](#)

[Figure 18.56](#)

[Figure 18.57](#)

[Figure 18.58](#)

[Figure 18.59](#)

[Figure 19.1](#)

[Figure 19.2](#)

[Figure 19.3](#)

[Figure 19.4](#)

[Figure 19.5](#)

[Figure 19.6](#)

[Figure 19.7](#)

[Figure 19.8](#)

[Figure 19.9](#)

[Figure 19.10](#)

[Figure 19.11](#)

[Figure 19.12](#)

[Figure 19.13](#)

[Figure 19.14](#)

[Figure 19.15](#)

[Figure 19.16](#)

[Figure 19.17](#)

[Figure 19.18](#)

[Figure 19.19](#)

[Figure 19.20](#)

[Figure 19.21](#)

[Figure 19.22](#)

[Figure 19.23](#)

[Figure 19.24](#)

[Figure 19.25](#)

[Figure 19.26](#)

[Figure 19.27](#)

[Figure 19.28](#)

[Figure 19.29](#)

[Figure 19.30](#)

[Figure 19.31](#)

[Figure 19.32](#)

[Figure 19.33](#)

[Figure 19.34](#)

[Figure 19.35](#)

[Figure 19.36](#)

[Figure 19.37](#)

[Figure 19.38](#)

[Figure 19.39](#)

[Figure 19.40](#)

[Figure 19.41](#)

[Figure 19.42](#)

[Figure 19.43](#)

[Figure 19.44](#)

[Figure 19.45](#)

[Figure 19.46](#)

[Figure 19.47](#)

[Figure 19.48](#)

[Figure 19.49](#)

[Figure 19.50](#)

[Figure 19.51](#)

[Figure 19.52](#)

[Figure 19.53](#)

[Figure 19.54](#)

[Figure 19.55](#)

[Figure 19.56](#)

[Figure 19.57](#)

[Figure 19.58](#)

[Figure 19.59](#)

[Figure 19.60](#)

[Figure 19.61](#)

[Figure 19.62](#)

[Figure 19.63](#)

[Figure 19.64](#)

[Figure 19.65](#)

[Figure 19.66](#)

[Figure 19.67](#)

[Figure 19.68](#)

List of Tables

[Table 1.1](#)

[Table 1.2](#)

[Table 2.1](#)

[Table 2.2](#)

[Table 2.3](#)

[Table 2.4](#)

[Table 11.1](#)

[Table 12.1](#)

[Table 13.1](#)

[Table 16.1](#)

[Table B.1](#)

Mastering AutoCAD® Civil 3D® 2015

Cyndy Davenport

Ishka Voiculescu



Senior Acquisitions Editor: Willem Knibbe Development Editor: Sara Barry Technical Editor: Tom Richardson Production Editors: Rebecca Anderson; Dassi Zeidel Copy Editor: Linda Recktenwald Editorial Manager: Pete Gaughan Vice President and Executive Group Publisher: Richard Swadley Associate Publisher: Chris Webb Book Designers: Maureen Forys, Happenstance Type-O-Rama; Judy Fung Proofreader: Kim Wimpsett

Indexer: Ted Laux

Project Coordinator, Cover: Patrick Redmond Cover Designer: Wiley

Cover Image: © iStock.com/negaprion Copyright © 2014 by John Wiley & Sons, Inc., Indianapolis, Indiana Published simultaneously in Canada ISBN: 978-1-118-86209-4

ISBN: 978-1-118-93239-1 (ebk.) ISBN: 978-1-118-86223-0 (ebk.) No part of this publication may be reproduced, stored in a retrieval system or transmitted in any form or by any means, electronic, mechanical, photocopying, recording, scanning or otherwise, except as permitted under Sections 107 or 108 of the 1976 United States Copyright Act, without either the prior written permission of the Publisher, or authorization through payment of the appropriate per-copy fee to the Copyright Clearance Center, 222 Rosewood Drive, Danvers, MA 01923, (978) 750-8400, fax (978) 646-8600. Requests to the Publisher for permission should be addressed to the Permissions Department, John Wiley & Sons, Inc., 111 River Street, Hoboken, NJ 07030, (201) 748-6011, fax (201) 748-6008, or online at <http://www.wiley.com/go/permissions>.

Limit of Liability/Disclaimer of Warranty: The publisher and the author make no representations or warranties with respect to the accuracy or completeness of the contents of this work and specifically disclaim all warranties, including without limitation warranties of fitness for a particular purpose. No warranty may be created or extended by sales or promotional materials. The advice and strategies contained herein may not be suitable for every situation. This work is sold with the understanding that the publisher is not engaged in rendering legal, accounting, or other professional services. If professional assistance is required, the services of a competent professional person should be sought. Neither the publisher nor the author shall be liable for damages arising herefrom. The fact that an organization or Web site is referred to in this work as a citation and/or a potential source of further information does not mean that the author or the publisher endorses the information the organization or Web site may provide or recommendations it may make. Further, readers should be aware that Internet Web sites listed in this work may have changed or disappeared between when this work was written and when it is read.

For general information on our other products and services or to obtain technical support, please contact our Customer Care Department within the U.S. at (877) 762-2974, outside the U.S. at (317) 572-3993 or fax (317) 572-4002.

Wiley publishes in a variety of print and electronic formats and by print-on-demand. Some material included with standard print versions of this book may not be included in e-books or in print-on-demand. If this book refers to media such as a CD or DVD that is not included in the version you purchased, you may download this material at <http://booksupport.wiley.com>. For more information about Wiley products, visit www.wiley.com.

Library of Congress Control Number: 2014937181

TRADEMARKS: Wiley, the Wiley logo, and the Sybex logo are trademarks or registered trademarks of John Wiley & Sons, Inc. and/or its affiliates, in the United States and other countries, and may not be used without written permission. Autodesk and Civil 3D are registered trademarks of Autodesk, Inc. All other trademarks are the property of their respective owners. John Wiley & Sons, Inc. is not associated with any product or vendor mentioned in this book.


Dear Reader,

Thank you for choosing *Mastering AutoCAD Civil 3D 2015*. This book is part of a family of premium-quality Sybex books, all of which are written by outstanding authors who combine practical experience with a gift for teaching.

Sybex was founded in 1976. More than 30 years later, we're still committed to producing consistently exceptional books. With each of our titles, we're working hard to set a new standard for the industry. From the paper we print on, to the authors we work with, our goal is to bring you the best books available.

I hope you see all that reflected in these pages. I'd be very interested to hear your comments and get your feedback on how we're doing. Feel free to let me know what you think about this or any other Sybex book by sending me an email at contactus@sybex.com. If you think you've found a technical error in this book, please visit <http://sybex.custhelp.com>. Customer feedback is critical to our efforts at Sybex.

Best regards,

A handwritten signature in black ink, appearing to read "John Wiley". The signature is fluid and cursive, with the first name "John" and last name "Wiley" clearly distinguishable.

Chris Webb

Associate Publisher,

Sybex, an Imprint of Wiley

Acknowledgments

Writing *Mastering AutoCAD® Civil 3D® 2015* was a tough journey for both of us, but we made it through. The work on the book happens after normal work hours and on weekends, so it has been five months of non-stop writing and editing. We'd like to thank Paul Gaughan and Willem Knibbe for giving us the opportunity to take on this project. We'd also like to thank the editors for helping us make this book as outstanding as it is: Sara Barry, Tom Richardson, Becca Anderson, and Linda Recktenwald. And finally, thanks to the readers who keep this book alive and going.

—*Cyndy Davenport and Ishka Voiculescu*

I'd like to thank Wiley for the second opportunity to participate in this project and the editors who kept me on task: Sara Barry and Tom Richardson. I'd also like to thank the company I work for, Bowman Consulting Group, for providing the dataset used in the majority of the book. Thanks to Ish for stepping in to partner with me on this expedition. And finally, thanks to those in my life who support and encourage me to achieve my dreams.

—*Cyndy Davenport*

First of all I'd like to thank Cyndy for taking me on this late-nights and full-weekends journey and Wiley and their editorial crew for the opportunity to be part of this wonderful project. Also, I have to thank our editors Tom and Sara for their helpful suggestions to steer this work in the right direction.

On a personal level, I know I could have not made it through without the support and love of my wonderful wife, Danielle, and the four bundles of joy that we share: Colin, Ethan, Liana, and Elsa. Thanks and love from Hubby and Daddy.

On a professional level, I am thankful for the awesome crew at Northern Engineering & Consulting Inc. (NECI) up in the frozen Bemidji, Minnesota, who brought me into this civil engineering world and helped me grow. Thanks are in order for Tom Groll from Tom Groll Engineering, PC, in Austin, Texas, an outstanding boss, who through his dedication to work inspired me to give my best in all that I do. Last, I am thankful for all the people I get to share my workday with from the Engineering Services Division of the City of Austin Public Works Department.

Finally, I want to thank to everyone who helps and supports me on this journey through the civil engineering wonderland.

—*Ishka Voiculescu*

About the Authors

Cyndy Davenport has been working in the land development industry for 28 years in the capacity of design, technology management, implementation, training, and support. She's earned repeated Civil 3D certifications in implementation, support, and training over the years. Cyndy is a regular speaker at Autodesk University and occasionally contributes workflow solutions on her blog to the Civil 3D community (c3dcougar.typepad.com).

Ishka Voiculescu received his B.S.M.E. majoring in industrial robotics from Transilvania University of Brasov, Romania, in 2005. After earning his degree, he moved to the United States and began working for a small civil engineering firm. He started as a civil technician/survey rodman, learning the skills of the trade, and acquired a more complex understanding of both the technical and software sides in a short time. With a previous knowledge of Autodesk products, he began using Autodesk® AutoCAD® Civil 3D® in 2007 after three years of design in AutoCAD LDD. He has vast experience in using the Autodesk suite of products for planning, design, and visualization. On the social networking side, he is a member of various engineering groups, an active forum contributor, and a blogger. On the Web, he can be found at the blog he contributes to on civil engineering issues (www.civildigest.com).

Introduction

The Autodesk® AutoCAD® Civil 3D® program was introduced in 2004 as a trial product. Over the past few years, the AutoCAD Civil 3D series has evolved from the wobbly baby introduced on those first trial discs to a mature platform used worldwide to handle the most complex dynamic engineering designs. With this change, many engineers still struggle with the transition. The civil engineering industry as a whole is an old dog learning new tricks.

We hope this book will help you in this journey. As the user base grows and users get beyond the absolute basics, more materials are needed, offering a multitude of learning opportunities. While this book is starting to move away from the basics and truly become a Mastering book, we hope that we are headed in that direction with the general readership. We know we cannot please everyone, but we do listen to your comments—all toward the betterment of this book.

Designed to help you get past the steepest part of the learning curve and teach you some guru-level tricks along the way, *Mastering AutoCAD Civil 3D 2015* is the ideal addition to any AutoCAD Civil 3D user's bookshelf.

Who Should Read This Book

The Mastering book series is designed with specific users in mind. In the case of *Mastering AutoCAD Civil 3D 2015*, we expect you'll have a solid knowledge of AutoCAD in general and some basic engineering knowledge as well. A basic understanding of AutoCAD Civil 3D will be helpful, although there are explanations and examples to cover many needs and experience levels. We expect this book will appeal to a large number of AutoCAD Civil 3D users, but we envision a few primary users:

Beginning Users Looking to Make the Move to Using AutoCAD Civil 3D These people understand AutoCAD and some basics of engineering, but they are looking to learn AutoCAD Civil 3D on their own, broadening their skill set to make themselves more valuable in their firms and in the market.

AutoCAD Civil 3D Users Looking for a Desktop Reference With the digitization of the official help files, many users still long for a book they can flip open and keep beside them as they work. These people should be able to jump to the information they need for the task at hand, such as further information about a confusing dialog or troublesome design issue.

Certification Objective

Users Looking to Prepare for the Autodesk Certification Exams This book focuses on the elements you need to pass the Professional exam with flying colors and includes margin icons to note topics of interest. Just look for the icon.

Classroom Instructors Looking for Better Materials This book was written with real data from real design firms. We've worked hard to make many of the examples match the real-world problems we have run into as engineers. This book also goes into greater depth than any other available text, allowing short classes to review the basics (and leave the in-depth material for self-discovery) and longer classes to cover the full material presented.

This book can be used front to back as a self-teaching or instructor-based instruction manual. Each

chapter has a number of exercises and most (but not all) build on the previous exercise. You can also skip to almost any exercise in any chapter and jump right in. We've created a large number of drawing files that you can download from www.sybex.com/go/masteringcivil3d2015 to make choosing your exercises a simple task.

What You Will Learn

This book isn't a replacement for training. There are too many design options and parameters to make any book a good replacement for training from a professional. This book teaches you to use the tools, explores a large number of the options, and leaves you with an idea of how to use each tool. At the end of the book, you should be able to look at any design task you run across, consider a number of ways to approach it, and have some idea of how to accomplish the task. To use one of our common analogies, reading this book is like walking around your local home-improvement warehouse. You see a lot of tools and use some of them, but that doesn't mean you're ready to build a house.

What You Need

Before you begin learning AutoCAD Civil 3D, you should make sure your hardware is up to snuff. Visit the Autodesk website, www.autodesk.com, and review graphic requirements, memory requirements, and so on. One of the most frustrating things that can happen is to be ready to learn only to be stymied by hardware-related crashes. AutoCAD Civil 3D is a hardware-intensive program, testing the limits of every computer on which it runs. You'll also want to download any service packs available.

We also strongly recommend using either a wide format or dual-monitor setup. The number of dialogs, palettes, and so on, makes AutoCAD Civil 3D a real estate hog. By having the extra space to spread out, you'll be able to see more of your design along with the feedback provided by the program itself.

You need to visit www.sybex.com/go/masteringcivil3d2015 to download all of the data and sample files. We recommend that you save these files locally on your computer in C:\Mastering\Ch# unless told otherwise.

Free Autodesk Software for Students and Educators

The Autodesk Education Community is an online resource with more than five million members that enables educators and students to download—for free (see website for terms and conditions)—the same software used by professionals worldwide. You can also access additional tools and materials to help you design, visualize, and simulate ideas. Connect with other learners to stay current with the latest industry trends and get the most out of your designs. Get started today at www.autodesk.com/joinedu.

The Mastering Series

The Mastering series from Sybex provides outstanding instruction for readers with intermediate and advanced skills in the form of top-notch training and development for those already working in their field and clear, serious education for those aspiring to become pros. Every Mastering book includes the following features:

- Real-world scenarios ranging from case studies to interviews that show how the tool, technique, or knowledge presented is applied in actual practice
- Skill-based instruction, with chapters organized around real tasks rather than abstract concepts or subjects
- A self-review section called “The Bottom Line,” so you can be certain you're equipped to do the job right

What Is Covered in This Book

This book contains 19 chapters and two appendixes:

- Chapter 1, “The Basics,” introduces you to the interface and many of the common dialogs in AutoCAD Civil 3D. This chapter discusses navigating the interface and customizing your drawing's settings. You will also explore various tools for creating linework.
- Chapter 2, “Survey,” examines the Survey tab of Toolspace and the unique toolset it contains for handling field surveying and for field book data handling. You will also look at various surveying relationships and analysis tools available on the Survey tab of the ribbon.
- Chapter 3, “Points,” introduces AutoCAD Civil 3D points and the various methods of creating them. You will also spend some time exploring the control of AutoCAD Civil 3D points with description keys and groups.
- Chapter 4, “Surfaces,” introduces the various methods of creating surfaces, using free and low-cost data to perform preliminary surface creation. Then you will investigate the various surface editing and analysis methods. The chapter also discusses point clouds and their use.
- Chapter 5, “Parcels,” examines the best practices for keeping your parcel topology tight and your labeling neat. It examines the various editing methods for achieving the desired results for the most complicated plats.
- Chapter 6, “Alignments,” introduces the basic horizontal layout element. This chapter also examines using layout tools that maintain the relationships between the tangents, curves, and spiral elements that create alignments.
- Chapter 7, “Profiles and Profile Views,” examines the vertical aspect of road design from the establishment of the existing profile to the design and editing of the proposed profile. In addition, you will explore how profile views can be customized to meet the required format for your design and plans.
- Chapter 8, “Assemblies and Subassemblies,” introduces the building blocks of AutoCAD Civil 3D cross-sectional design. You will look at the many subassemblies available in the tool palettes and look at how to build full design sections for use in any design environment.
- Chapter 9, “Basic Corridors,” introduces the basics of corridors—building full designs from horizontal, vertical, and cross-sectional design elements. You will look at the various components to understand how corridors work before moving to a more complex design set.
- Chapter 10, “Advanced Corridors, Intersections, and Roundabouts,” further examines using corridors in more complex situations. You will learn about building surfaces, intersections, and other areas of corridors that make them powerful in any design situation.

- Chapter 11, “Superelevation,” takes a close look at the tools used to add superelevation to roadways and railways. This functionality has changed greatly in the last few years, and you will have a chance to use the axis of rotation (AOR) subassemblies that can pivot from several design points.
- Chapter 12, “Cross Sections and Mass Haul,” looks at slicing sections from surfaces, corridors, and pipe networks using alignments and the mysterious sample line group. Working with the wizards and tools, you will see how to make your sections to order. You will explore mass haul functionality to demonstrate the power of AutoCAD Civil 3D for creation of the mass haul diagrams.
- Chapter 13, “Pipe Networks,” gets into the building blocks of the pipe network tools. You will look at modifying an existing part to add new sizes and then building parts lists for various design situations. You will then work with the creation tools for creating pipe networks and plan and profile views to get your plans looking like they should.
- Chapter 14, “Grading,” examines both feature lines and grading objects. You will look at creating feature lines to describe critical areas and then using grading objects to describe mass grading.
- Chapter 15, “Plan Production,” walks you through the basics of creating view frame groups, sheets, and templates used to automate the plan and profile drawing sheet process. In addition, you will look at creating section views and section sheets.
- Chapter 16, “Advanced Workflows,” looks at the various ways of sharing and receiving data. We describe the data-shortcut mechanism for sharing data between AutoCAD Civil 3D users. We also consider other methods of importing and exporting, such as XML and the new Export Civil 3D Drawing tool.
- Chapter 17, “Quantity Takeoff,” shows you the ins and outs of assigning pay items to corridor codes, blocks, areas, and pipes. You learn how to set up new pay items and generate quantity takeoff reports.
- Chapter 18, “Label Styles,” is devoted to editing and creating label styles. You learn to navigate the Text Component Editor and how to master label style conundrums you may come across.
- Chapter 19, “Object Styles,” examines editing and creating object styles. You will learn how to create styles for surfaces, profile views, and other objects to match your company standards.
- Appendix A, “The Bottom Line,” gathers together all the “Master It” problems from the chapters and provides a solution for each.
- Appendix B, “Autodesk AutoCAD Civil 3D 2015 Certification,” points you to the chapters in this book that will help you master the objectives for the Certified Professional Exam.

How to Contact the Authors

We welcome feedback from you about this book and/or about books you'd like to see from us in the future. Feel free to connect with us on LinkedIn:

- www.linkedin.com/pub/cyndy-davenport/13/61b/1a9
- www.linkedin.com/pub/istvan-voiculescu/2b/834/949/

You can also keep up with Cyndy Davenport on Twitter (C3DCougar) and Ishka Voiculescu (C3DIsh).

Sybex strives to keep you supplied with the latest tools and information you need for your work. Please check its website at www.sybex.com/go/masteringcivil3d2015, where we'll post additional content and

updates that supplement this book if the need arises.

Thanks for purchasing *Mastering AutoCAD Civil 3D 2015*. We appreciate it and look forward to exploring AutoCAD Civil 3D with you!

Chapter 1

The Basics

If you want to be a master in anything, you have to start with the basics. Since the Autodesk® AutoCAD® Civil 3D® platform has evolved so much over the years, now more than ever you have to have a good grip on the basics. With every new release of the product many features have been enhanced, while other new ones have been added. In order to get familiar with the software you will need to go through many dialogs, ribbons, tabs, menus, and icons. Some of them may be familiar, while others will be new. This chapter will help you get used to both the familiar and the new. When you learn the interface of the Civil 3D environment and understand the terminology used in the book, everything becomes easier to use. So please arm yourself with patience and take the time to understand every part of the workflow.

Let's go ahead and start learning about the interface and Civil 3D-specific terminology. Toward the end of the chapter we'll dive into the use of the Lines and Curves commands that, coupled with the use of transparent commands, offer multiple ways of drawing accurate lines and curves.

In this chapter, you will learn to

- Find any Civil 3D object with just a few clicks
- Modify the drawing scale and default object layers
- Navigate the ribbon's contextual tabs
- Create a curve tangent to the end of a line
- Label lines and curves

The Interface

If you are new to Civil 3D or not very familiar with the Civil 3D world, this part of the chapter is especially for you, since this section will introduce you to the terminology used throughout this book. This release introduces a new startup interface that streamlines the design process. In previous versions, on startup Civil 3D created a new drawing based on a default template; with the 2015 release, you are presented with a startup dashboard, as shown in [Figure 1.1](#). Within the startup landing dashboard four distinct sections are present: Get Started, Recent Documents, Notifications, and Connect.

- The Get Started section allows you to start a new drawing from a template that can be selected from the drop-down list or gives you the opportunity to open an existing file from a location, open a sheet set, find more industry-standard templates on the online repository, or open sample drawings that are provided through the software's installation.
- Recent Documents is pretty straightforward; it allows you to select and open a drawing from a list of most recently worked-on documents.
- The Notifications section provides feedback on software settings that might not be standard and suggestions related to the recommended values for these.
- The Connect section deals with the Autodesk online experience for AutoCAD-based products. While using the software, you can sign in with your Autodesk account to take advantage of the cloud-enabled

features within AutoCAD products. This section also provides a means to deliver software feedback to the development team.

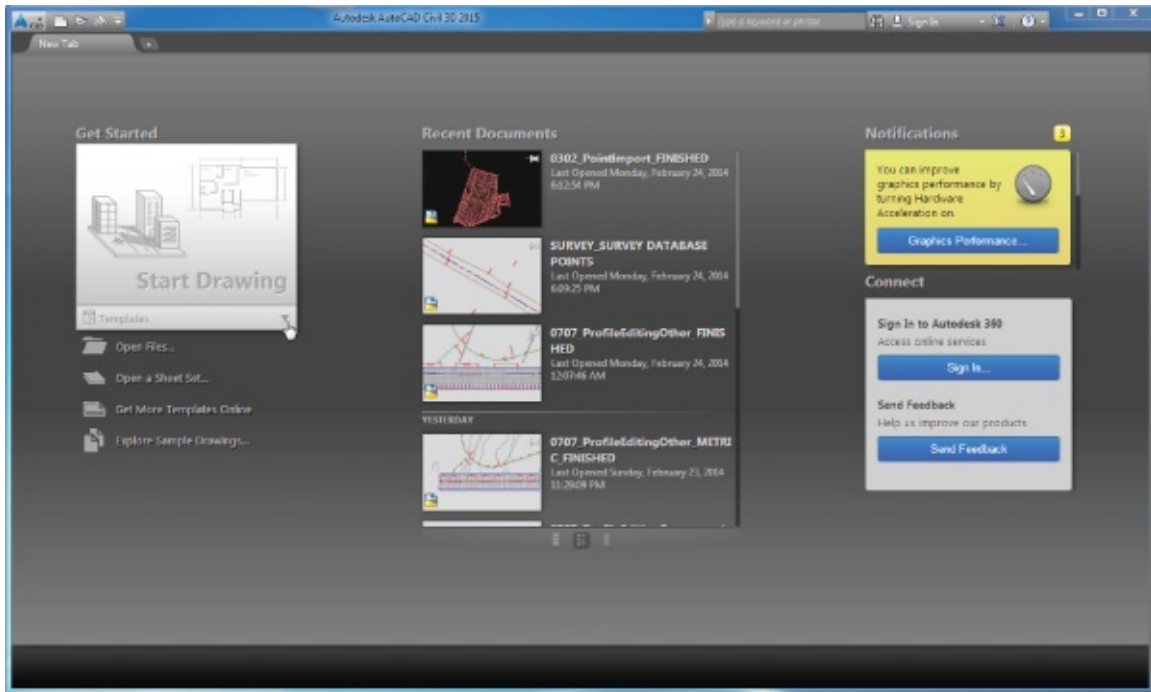


Figure 1.1 The new startup dashboard provides a quick way to get your design going.

The 2014 version introduced a new feature within the interface: tab-based access to all the files opened in the same working session. If you haven't experienced this feature in AutoCAD, you might be familiar with it in the latest browsers that use a tab-based display of open web pages, allowing quick access to any open web page, all in the same window. In the case of AutoCAD, this display shows the opened files. Using this feature, you can switch between the opened drawings just by clicking the desired file in the tab list. You can also switch between the opened drawings by using the old Ctrl+Tab key combination, but the tab-based file option lets you choose any drawing from the list of opened drawings without going through the whole list in the order in which the files were opened. On hovering over one of the file tabs, you will be presented with the option to switch between the Model and the Layout tabs for that file. [Figure 1.2](#) shows the new tab-based file feature. Other options related to the management of that tab are available when you right-click the tab.

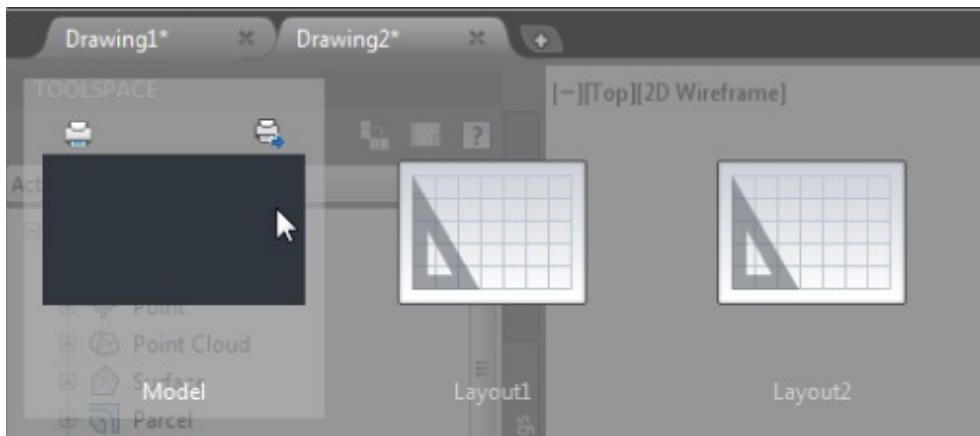


Figure 1.2 The tabbed file option allows easy switching between multiple open files and the Model and Layout tabs for the opened files.

Before we jump into the definition of the Civil 3D-specific interface items, we need to note that the overall organization of the tools and tool palettes is managed through workspaces. If you look on the top

right of the window, as shown in [Figure 1.3](#), you will notice that the current workspace is set to Civil 3D.

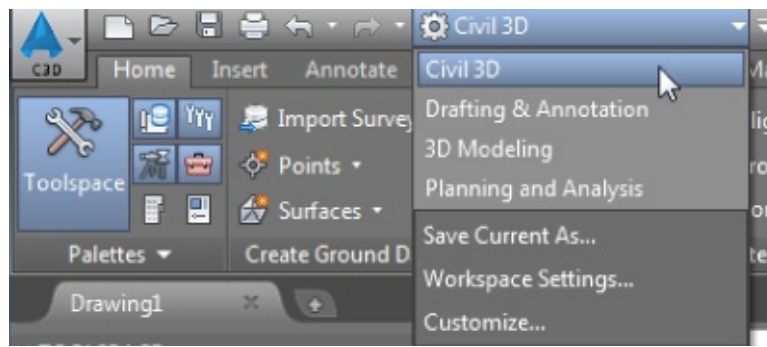


Figure 1.3 The workspace selection lets you organize the tools of the interface to suit your needs.

The *workspace* defines the display of the available tools based on a preset understanding of which tools are necessary for the specific tasks. The Civil 3D workspace interface is tailored to display the most common tools used for civil design, while the Planning And Analysis workspace is tailored for use with GIS and mapping-industry data. Two other workspaces are available that focus on the use of basic AutoCAD tools, stripping down the Civil 3D environment and leaving in place only the core AutoCAD tools. In other words, the last two available workspaces convert your environment from a civil design-based environment to a basic drafting one. Activating any of the workspaces will result in a reorganization of the tools based on the workspace's customization. You can also save the changes you make to the current workspace or customize the whole interface based on your company's preferred layout.

Civil 3D uses a ribbon-based interface consisting of tabs and panels that organize the civil design tools based on their use in workflows. If you're used to the menu-based interface of older versions of AutoCAD verticals, you can switch to it by changing the AutoCAD MENUBAR variable from the default 0 to 1. However, the use of that menu is discouraged since ribbon management of the tools is now standard in the Civil 3D environment and the menu layout may not include all the latest tools. Therefore, in this book, we will talk about the ribbon-based interface.

On the ribbon, each of the tabs and panels is associated with one or more of the major tasks in the design process. When working in the Civil 3D 2015 ribbon, the top level in the organizational chart is represented by the tabs. The default tab, which you will see upon opening any drawing and where you will spend the majority of your time, is the Home tab, shown in [Figure 1.4](#).

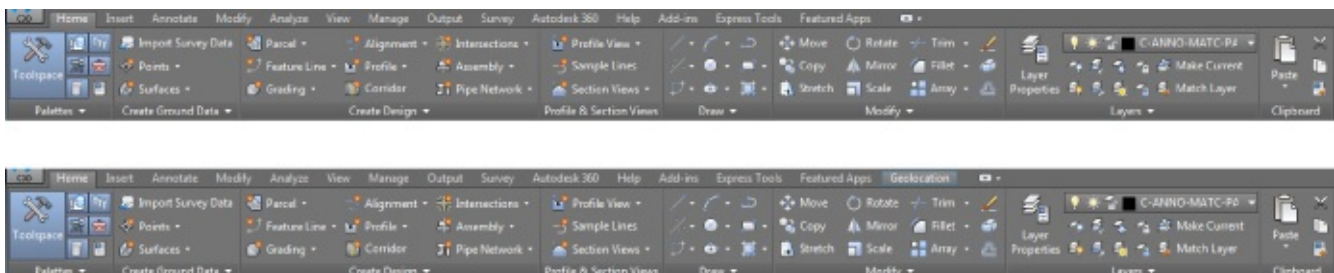


Figure 1.4 The Home tab of the ribbon and the default configuration of the ribbon for drawings with no coordinate systems assigned (top) and with them assigned (bottom).

Don't hesitate to dive into the other tabs to see the many tools available, noticing that the name of each tab is assigned based on the general function of the subset of tools available under it. Furthermore, each of the tabs will provide both Civil 3D environment-specific tools and basic AutoCAD tools, reinforcing the fact that Civil 3D is a vertical product that relies on AutoCAD as its engine. Following is a description of the each tab and its purpose:

Home Tab Contains the tools you use most often in Civil 3D, including the Civil 3D object-creation tools.

Insert Tab Provides the tools for both import and insertion of data into the current drawing. Here you will find the tools to link to outside databases, manage XRefs, and even manage point clouds, among others.

Annotate Tab Provides the tools to annotate both AutoCAD and Civil 3D objects within the drawing. Also in this area, the drawing-specific settings for the core AutoCAD annotative tools can be managed along with the annotative scales. You will learn more about Civil 3D annotation tools in Chapter 18, “Label Styles.”

Modify Tab Provides the modification and editing tools for both AutoCAD and Civil 3D objects.

Analyze Tab Provides the tools for performing various analyses and inquiries on the existing object data. Here you will find the tools to perform, for example, hydraulic area analysis, road design analysis, surface volumes, and estimation of quantities by means of quantity takeoffs. Also in this area is the startup for various side packages that come with Civil 3D such as the Hydraflow Suite.

View Tab Provides the tools that allow you to change the way things are displayed on the screen. Here you can define multiple viewports and customize the way objects are displayed, for example.

Manage Tab Provides the tools for referencing data across multiple drawings via data shortcuts. Also included in this area you will find the tools to define macros, customize the user interface file, load custom runtime files, and enforce CAD standards as well as the means to import Civil 3D styles and even purge unneeded styles from the current drawing.

Output Tab Provides for the production of plan sets, management of plotting, and export of data from Civil 3D to other Autodesk-based and third-party software platforms.

Survey Tab Provides the tools to manage Civil 3D survey databases. You will learn all about using and managing them in Chapter 2, “Survey.”

Autodesk 360 Tab Provides access to the cloud services managed by the Autodesk 360 platform.

Help Tab Provides access to help tools using multiple resources.

Add-ins Tab Provides access to both Autodesk and third-party tools that are installed as part of the core installation or by the user outside of the core installation.

Express Tools Tab Provides access to lots of useful AutoCAD sets of tools that have been part of the AutoCAD platform for many years.

Featured Apps Tab Provides a way to connect to the Autodesk Exchange store and displays a list of featured apps that can be installed from this store.

Geolocation Tab Provides access to the geolocation tools that were introduced in the 2014 release of the software. This is a contextual tab that is added to the list of tabs whenever a coordinate system is assigned to the drawing file.

While these are the default tabs found under Civil 3D, their number and description can vary based on the installed add-ons and/or the user interface customization.

Please note that you can expand your area of the screen by minimizing the ribbon to one of its minimization states. You can access these states from the drop-down options menu located at the top-right end of the ribbon tabs.

When a Civil 3D object is selected, you will see a *contextual tab* appearing in the ribbon as an extension to the default group of tabs. [Figure 1.5](#) shows the typical Civil 3D work environment. Besides the ribbon, you see the Quick Access toolbar, Toolspace, the Tool Palettes panel, and the Transparent Commands toolbar, among others.

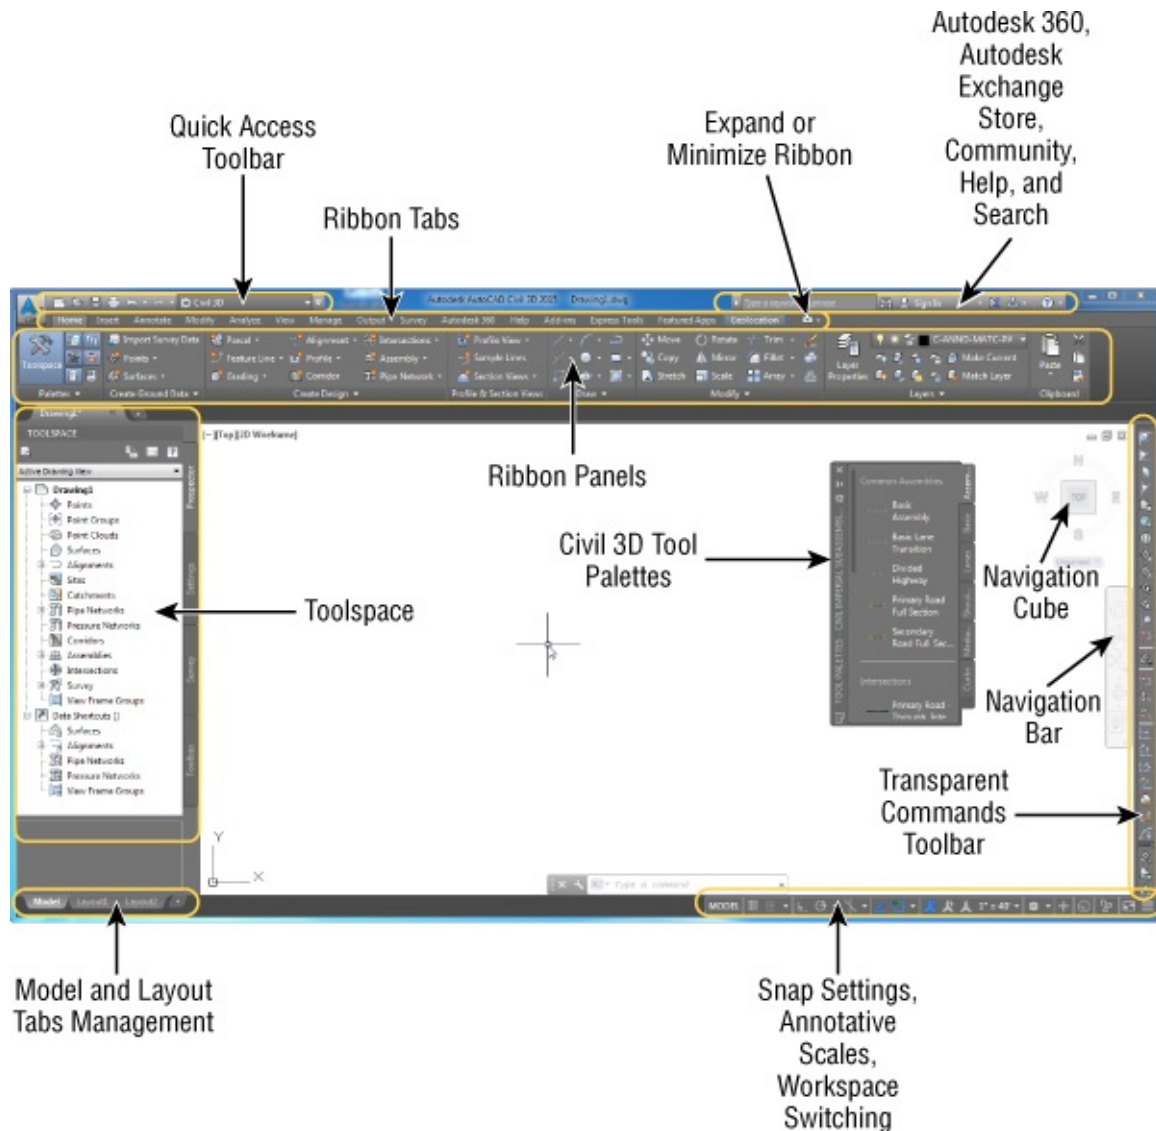


Figure 1.5 Overview of a Civil 3D environment. Toolspace is docked to the left, and the Tool Palettes panel floats over the drawing window. The ribbon is at the top of the workspace with the Quick Access toolbar above it.

On a side note, the Quick Access toolbar highlighted in [Figure 1.5](#) gives you access to often-used tools. By default it includes the tools to create new drawings from the default template set in the options for Civil 3D; it includes quick access to open and save files and printing and undo operations. On the Quick Access toolbar, you'll also find the workspaces drop-down menu. An example of customization within this toolbar is the addition of the layer manager, which gives you access to the layer list without being in the Home tab.

If you remember, we mentioned that the top level in the organizational chart of the ribbon belongs to the tabs. The second level belongs to the panels. Each of the tabs is composed of a group of panels. Panels are subgroups that further organize your tools. For example, the Palettes panel on the Home tab (shown in [Figure 1.6](#)) is where you can toggle on or off different tabs and palettes. A palette or tab is active or visible when its corresponding icon is highlighted in blue. Some of these icons enable the display of Toolspace tabs, while others enable the display of specific palettes.

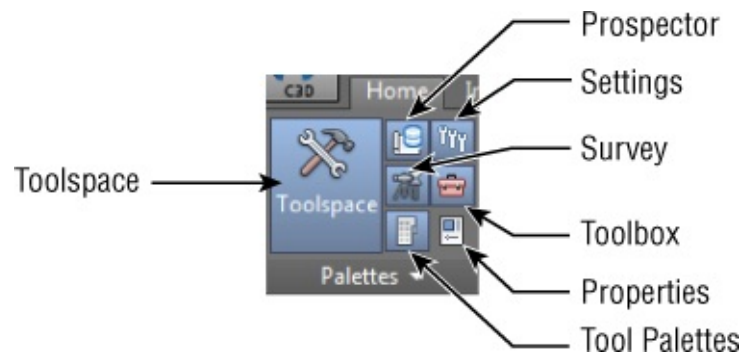


Figure 1.6 Palettes panel of the Home tab. The icons are blue when the palettes are active.

Not all the tools are visible within the panels, and you will notice that some of the tools are customized to be loaded on demand. If extra tools are available within the panel and are not visible, you will be presented with a drop-down arrow within the name of the panel that when clicked will give you access to the other tools. For example, in [Figure 1.7](#), notice that under the Home tab, the Create Design panel has a drop-down arrow; if you click it, the panel will expand and the list of extra tools available under the panel will appear. Also, when the panels are expanded, you have the option to lock the expansion in place by toggling the pin on the bottom-left side of the expanded panel.

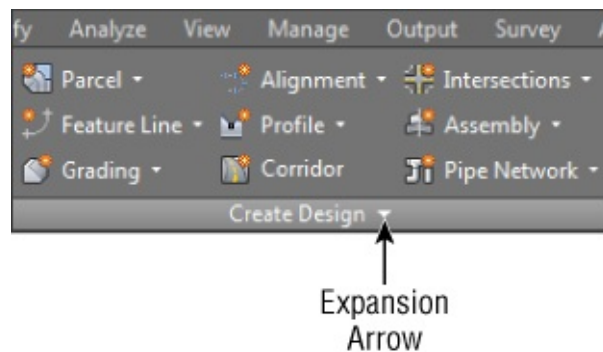


Figure 1.7 Some panels have more tools that can be displayed within the standard ribbon. The extra tools can be accessed by expanding the panel.

This expanded view will be locked as long as the ribbon tab is not switched. On switching to another tab, the expanded panel will minimize to the default view.

Toolspace



Toolspace defines a set of palettes that is specific to Civil 3D. We recommend that you have this set visible anytime you are working in the Civil 3D environment. If you do not see it, click the Toolspace button on the Palettes panel of the Home tab of the ribbon.

Toolspace has four tabs to manage drawing and user data, as follows:

- Prospector
- Settings
- Survey
- Toolbox

The tabs can be turned on or off by toggling the corresponding icon on the Palettes panel, but it is

perfectly fine to have them all up all the time.

Although each tab has a unique role to play in working with Civil 3D, the Prospector and Settings tabs will be your most frequently used tabs. Survey and Toolbox serve their specific purposes, which we will examine in the following sections.

Prospector

Prospector's purpose is to organize the Civil 3D objects present in the drawing based on their type, while providing tools to access and manage their definition, representation style, content, and Civil 3D object properties.

We will start with the top of Toolspace, where you will see a pull-down menu giving you the following options: Active Drawing View and Master View.

Active Drawing View will show you the following items:

- The current drawing
- Data shortcuts

Master View will show you these items:

- Open drawings
- Data shortcuts
- Drawing templates
- Refresh icon

Master View will list every drawing you have open in the active session as well as its contents. Besides the data shortcuts list that we mentioned previously, by using this view you will also have access to your templates that are loaded from the path defined in the configuration of the AutoCAD profile. When you use Master View, the name of the active drawing you are working with appears at the top of the list in bold. To make a drawing current, just right-click its name in Prospector and select Switch To.

Many users prefer to use Active Drawing View. Even though you can have more than one drawing file open, Prospector displays only the Civil 3D data that belongs to the active drawing file. Therefore, Active Drawing View will change to reflect whichever drawing is current.

Besides the two view options, Prospector has a series of icons across the top that toggle various settings on and off. Let's take a closer look at those icons:



Item Preview Toggle Turn this on if you wish to see a graphic preview of an item at the bottom of Prospector when certain items are selected.



Preview Area Display Toggle This icon will be active only when Toolspace is undocked or anchored. When active, this button moves the preview area from the bottom of the tree view to the right of the tree view area.



Panorama Display Toggle This button provides one of several ways to turn on and off the display of the Panorama window. This button will be grayed out if there are no active warnings or if you have not yet viewed data in the Panorama window.

You can always return to the Panorama regardless of your warning status, by clicking the Event Viewer button from the Home tab > Palettes panel.



Help Don't underestimate how helpful Help can be!

Help Using Help

At any time during your use of Civil 3D, you can use the F1 key to bring up the help file relevant to the dialog you are working in.

Even for seasoned users, Help provides a comprehensive reference to objects and options. The most difficult part of using Help is knowing what terminology is used to describe the task you are trying to perform. Luckily, you have this book to assist you with that!

In addition to the views in the top portion, Prospector uses the area below to display drawing-specific information, together with a list of the Civil 3D objects in the drawing. Within this part of the Toolspace, the Civil 3D objects are listed in workflow order, starting at the top of the list.

Moving below this area, you can find the Data Shortcuts list that provides access to shared Civil 3D objects across the project, objects that can be brought in the current drawing and updated dynamically from their source (you will learn about data shortcuts and how to work with and manage them in Chapter 16, “Advanced Workflows”). Each main grouping under the drawing name is referred to as a *collection*. If you expand a collection by clicking the plus sign next to its name, you will see the contents of that collection. Also you will notice that some of the collections are subcategorized based on their functional class. For example, by expanding the Alignments group you will notice the functional subdivision based on the purpose for that object. In the case of the alignments, this categorization is assigned on object creation, and you will learn about this in Chapter 6, “Alignments.”

Because all Civil 3D data is dynamically linked, you will see object dependencies as well. You can learn details about an individual object by expanding its group type collection and selecting the object ([Figure 1.8](#)).

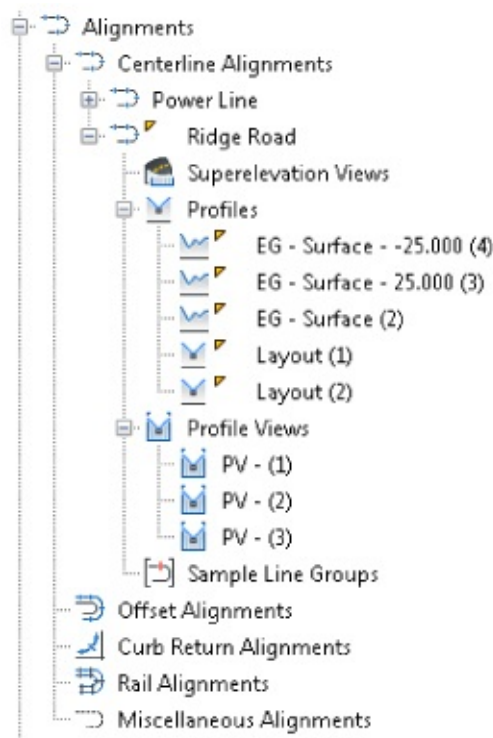


Figure 1.8 A look at the Alignments group collection of the Prospector tab. Profiles and Profile Views are linked to alignments; therefore, they appear under Alignments.

Anytime the parent collection of objects is selected you will notice at the bottom of Prospector a list of the objects under that collection. Clicking the plus sign next to the collection name also provides you the list of the objects available under that collection. The difference is that within the bottom listing you can easily access and define settings for that particular object without to have to go through its Civil 3D Properties dialog. Right-clicking the collection name gives you access to a number of commands that apply to all the members of that collection. For example, right-clicking the Point Groups collection brings up the menu shown in [Figure 1.9](#) (left).

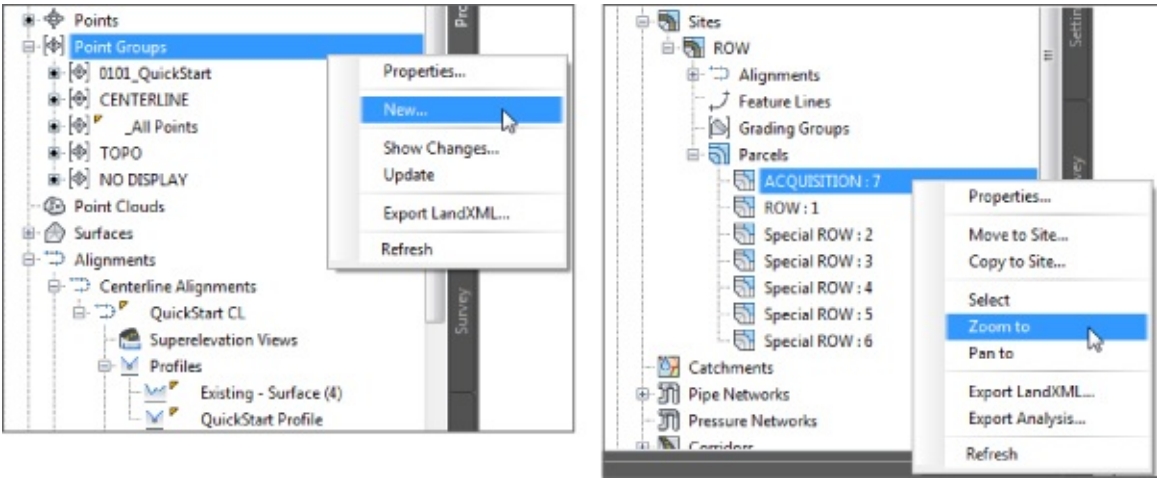


Figure 1.9 Context-sensitive menus in Prospector for creating new objects (left) and zooming to a specific object (right)

In addition, right-clicking the individual object in the collection offers many commands unique to Civil 3D, such as Zoom To and Pan To, shown in [Figure 1.9](#) (right). By using these commands, you can find any parcel, point, cross section, or other Civil 3D object in your drawing almost instantly.

For example, if you are interested in locating a parcel named ACQUISITION : 7 using the Zoom To command, locate the Sites collection on the Prospector tab of Toolspace. Expand Proposed Site and

highlight Parcels. Select the Parcel object either from the bottom list or from the expanded Parcels collection, right-click it, and select Zoom To. Civil 3D will locate the object and zoom to its whereabouts.

Also, note that by using the Properties option shown under the context menu for the object (see [Figure 1.10](#), left), you can access its settings. Within the dialog that opens, you can define the object's name, select its Civil 3D display style, and manage its definition, among other tasks (see [Figure 1.10](#), right).

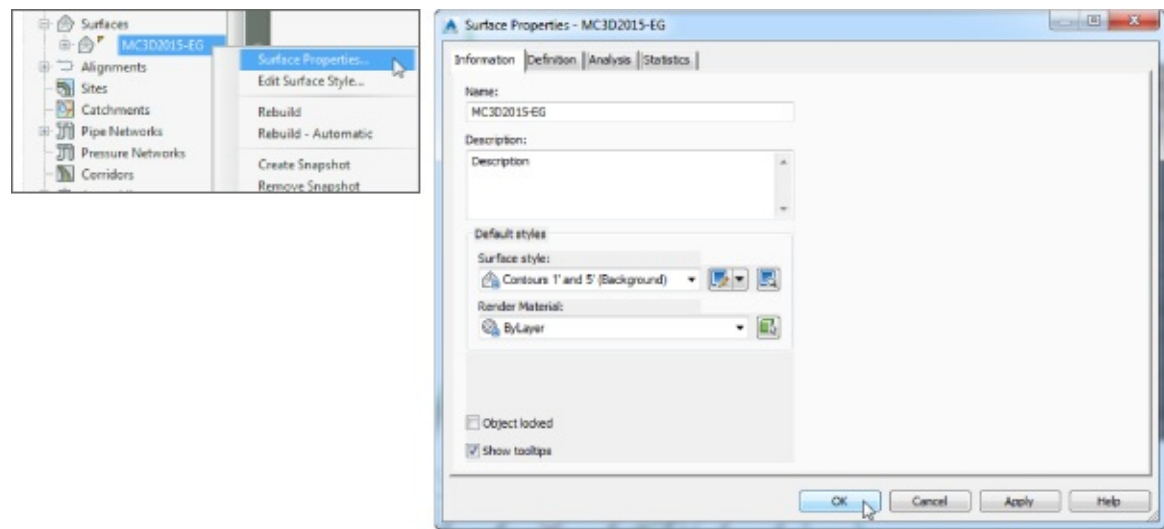









Figure 1.10 Civil 3D object Properties dialog allows you to define the object's name, style, and definition and perform specific tasks in some cases.

As you navigate the tabs of Toolspace, you will encounter many symbols to help you along the way. [Table 1.1](#) shows you a few that you should familiarize yourself with.

Table 1.1 Common Toolspace symbols and meanings

Symbol	Meaning
	The object or style is in use. Also appears when there is a dependency to the object or if the style has child styles. For example, you will see this icon on a surface when a profile has been created from it.
	Clicking this will expand the object collection of Toolspace.
	Clicking this will collapse the object collection of Toolspace.
	Data resides in this branch, and more information can be found at the bottom of Toolspace.
	Object needs to be rebuilt or updated. Can also indicate a broken data reference.
	Civil 3D may still be processing the object, or the collection of Prospector needs to be refreshed.
	This symbol represents a data reference in a drawing, and it's shown next to the data shortcuts section of the Prospector tab.

Hit the Road Running: Quick Start Project

Most new users are eager to get started on their first project before even getting past the basics. The following exercise will guide you through a quick workflow that will prove how easy and at the same time how complex the development of a project can be. Just think about it; even with the default settings and tools you can achieve great things, but how much more can you achieve when you use Civil 3D at its best? Well, this book will provide you the workflows that will take the complexity out of Civil 3D and make your work with the software easier.

The following exercise will give you a chance to work through a basic project. Unless otherwise specified, don't change the dialog box default options. After each relevant step, look for the pointers on where to go for in-depth explanation of the tools used.

1. Open the drawing 0101_QuickStart.dwg (0101_QuickStart_METRIC.dwg). You can download this and all other files related to this book from this book's web page, www.sybex.com/go/masteringcivil3d2015.

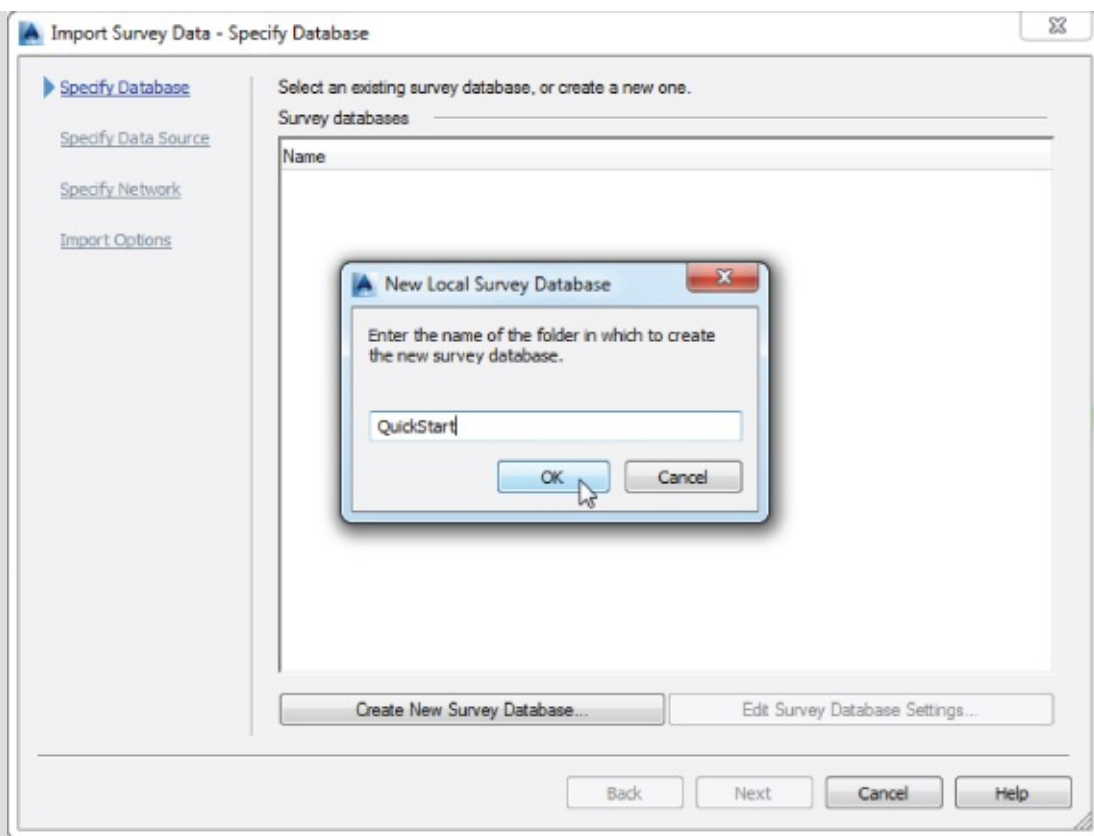
See the section “Civil 3D Templates” in this chapter, where you can read more on the importance of styles and settings and find a guide on starting your own Civil 3D drawing template.

2. From the Home tab of the ribbon, click the Import Survey Data button located within the Create Ground Data panel.



See Chapter 2 to learn more about importing survey data and the workflows associated with it.

3. Click Create New Survey Database.
4. In the New Local Survey Database dialog, name the new database **QuickStart** and click OK.




5. Click Next.

Where is this survey data stored? Find out in Chapter 2 in the section “Understanding the Survey Database.”

6. In the Import Survey Data – Specify Data Source dialog, follow these steps:

- a. Set Data Source Type to Point File.
- b. Click the plus sign to the right of the Selected Files box.
- c. Set your Files Of Type option to Text/Template/Extract File (*.txt), browse for 0101_QuickStart.txt (0101_QuickStart_METRIC.txt), and click OK.
- d. Set Specify Point File Format to PNEZD (Comma Delimited).
- e. Click Next.

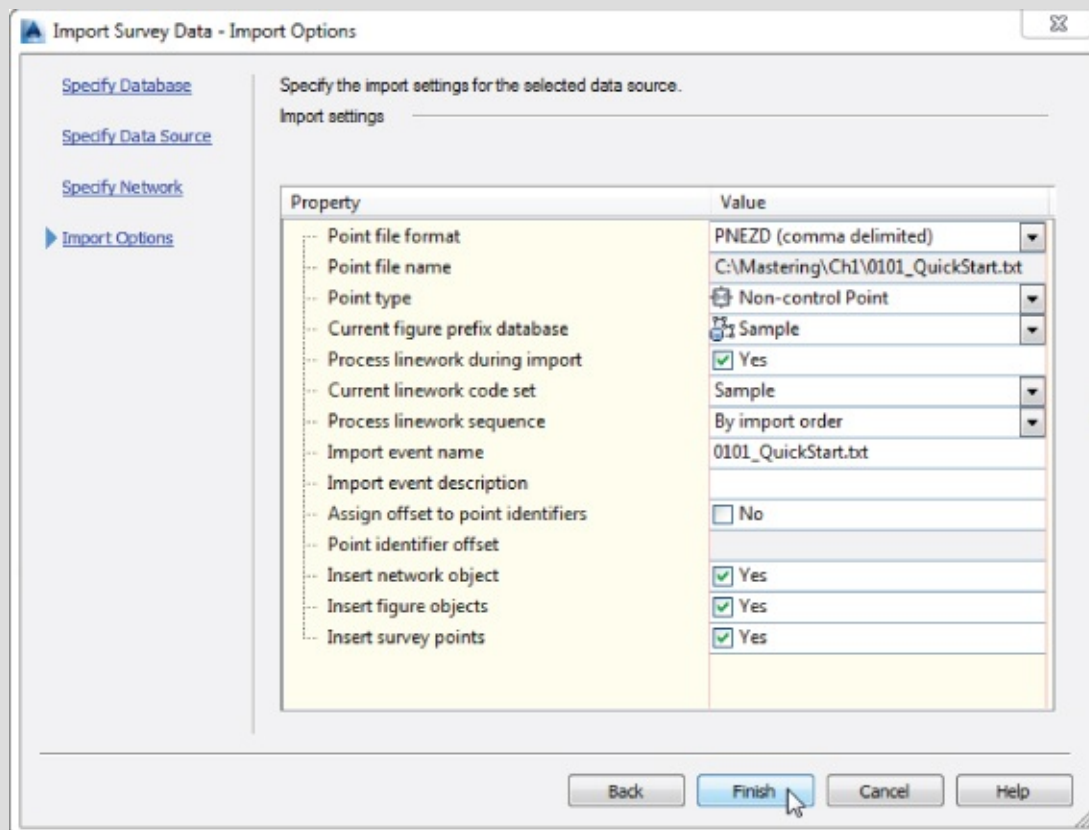
2. Place a check mark across from Insert Figure Objects.
3. Place a check mark across from Insert Survey Points.
4. Leave all other options at the default settings and click Finish.



See the sections “The Figure Prefix Database” and “The Linework Code Set Database” in Chapter 2 for more information on creating figures and importing survey data.

The first thing you will notice is that when the import process is complete, Civil 3D zooms to the area of the processed data. Also, did you notice that shots with the description TOPO look different from other survey points in the drawing? Find out why in Chapter 2 in the section “Configuring Description Keys for Point Import.”

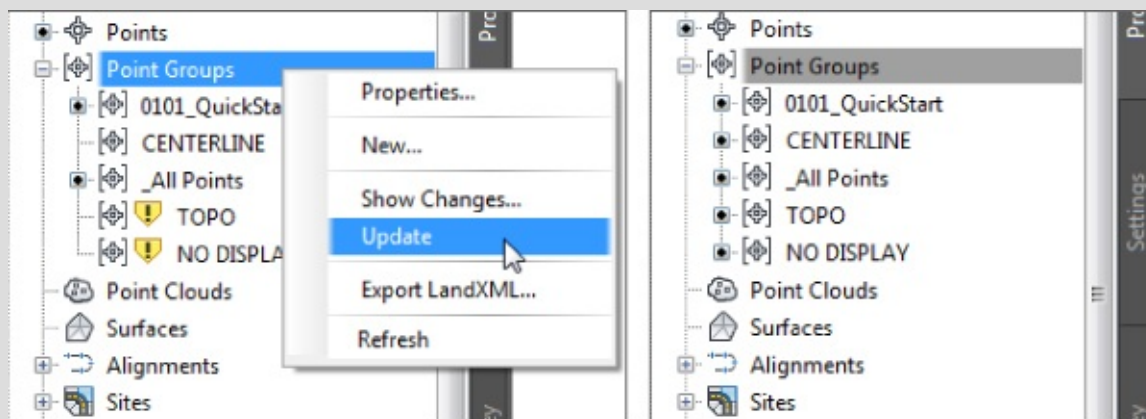12. Expand the Point Groups collection and notice that the TOPO point group that you will want to incorporate in the surface shows an exclamation mark. Remember that this is feedback from a point group that needs to be updated. So in order to have all the point groups updated, right-click the Point Groups collection and select the Update option, as shown on the left of the figure. After updating, the list of point groups will appear, as shown on the right side of the figure.



A list of Toolspace symbols and their meanings can be found in Table 1.1.

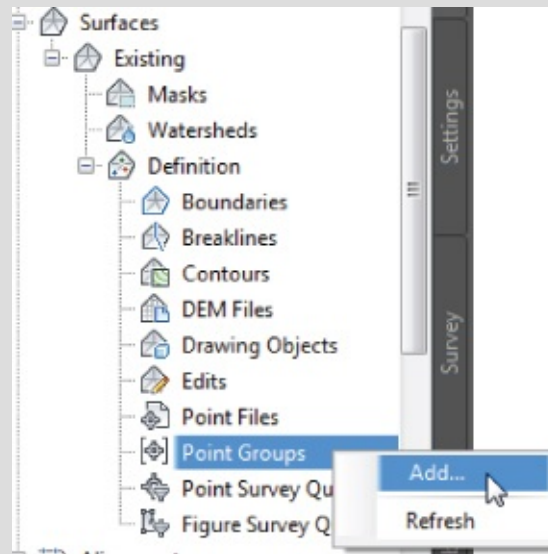
13. From the Home tab of the ribbon, find the Create Ground Data panel and choose Surfaces > FCreate Surface.

14. In the Create Surface dialog, change the name to **Existing** and click OK.

15. In the Prospector tab of Toolspace, expand Surfaces > Existing > Definition.

Chapter 4, “Surfaces,” contains the section “Creating Surfaces,” which describes the different types of data that can be used to define elevation in a surface model.

16. Right-click Point Groups and select Add.




For an in-depth look at the importance of point groups, be sure to read the section “Point Groups: Don't Skip This Section!” in Chapter 3, “Points.”

17. Select TOPO and click OK.


At this point you should see contours and the surface border. See Chapter 4 for more information on creating, editing, and displaying surfaces.

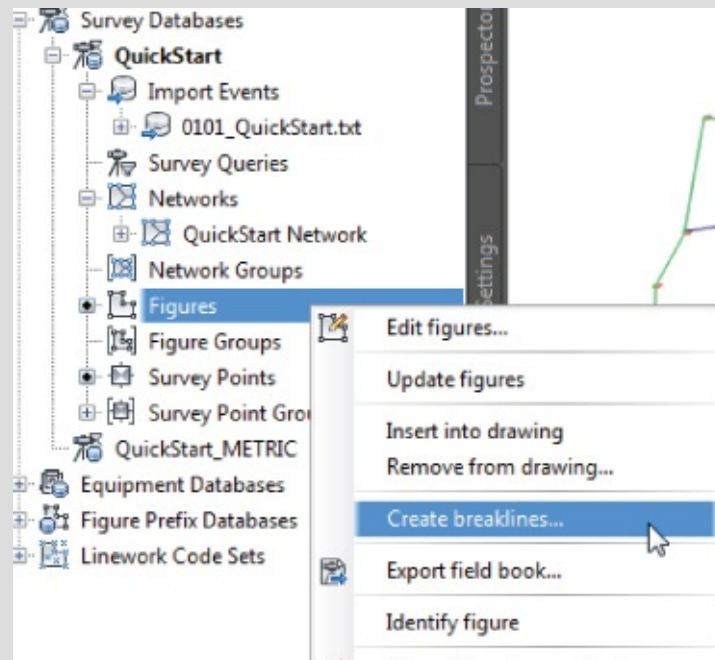18. On the Survey tab of Toolspace, right-click Figures and select Create Breaklines.



19. In the Create Breaklines dialog, note that you are adding breaklines to the surface you created

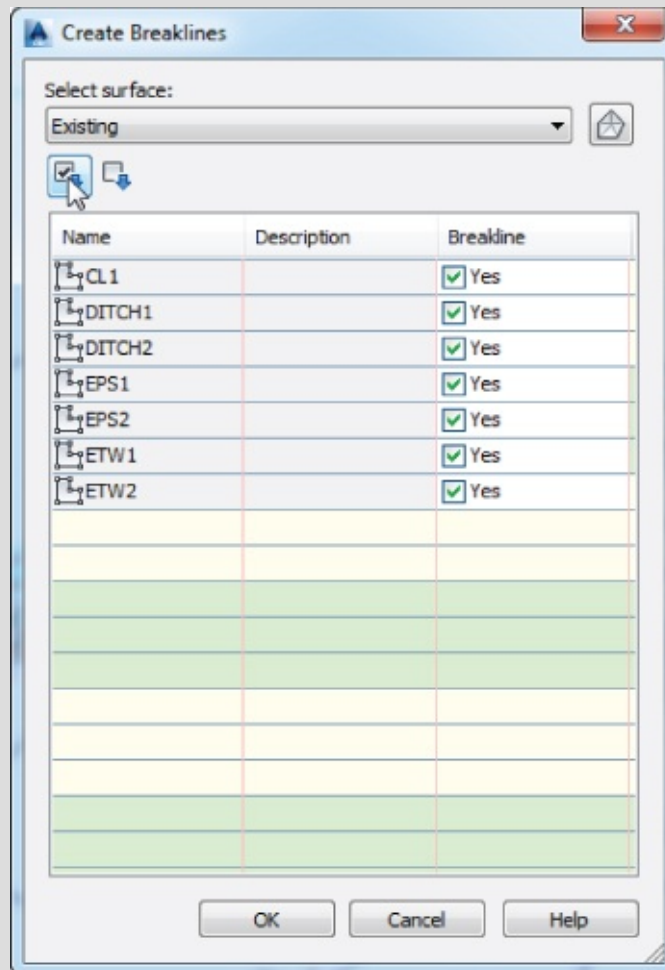
earlier. Click the Check All option and click OK.



20. In the Add Breaklines dialog, click OK. You might get a Panorama error. You can dismiss it by clicking the check mark on the top-right of the Panorama window.


See the section in Chapter 4 called “Adding Breaklines” for a detailed explanation.

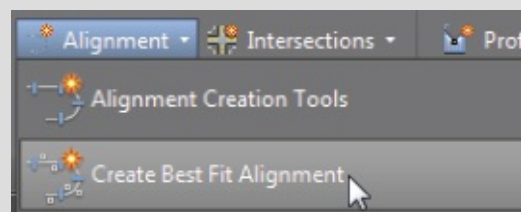21. Save the drawing.
22. From the Home tab of the ribbon, in the Create Design panel, click Alignment > Create Best Fit Alignment.



The many methods for creating and editing alignments are found in Chapter 6.

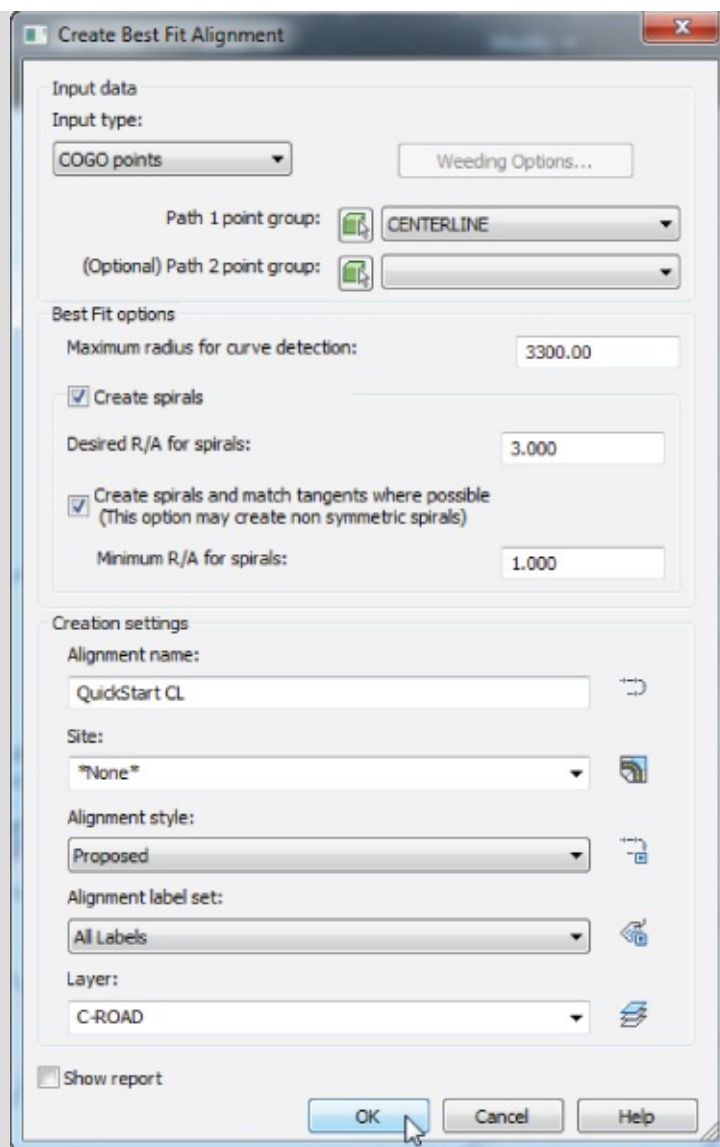
23. In the Create Best Fit Alignment dialog, do the following:
- Change the Input Type to COGO Points.
 - Change Path 1 Point Group to CENTERLINE.
 - Change the Alignment Name to **QuickStart CL**.
 - Clear the check box for Show Report.
 - Click OK.



24. Select the new alignment (the green line).


Want to know why the alignment appears green? See the section “Linear Object Styles” in Chapter 19, “Object Styles,” for more information.

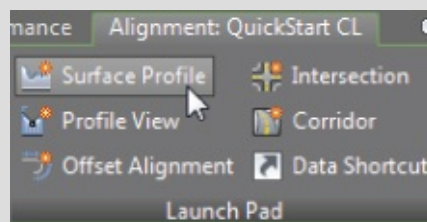25. From the Alignment contextual tab ➤ Launch Pad panel, click Surface Profile.




26. In the Create Profile From Surface dialog, click Add.

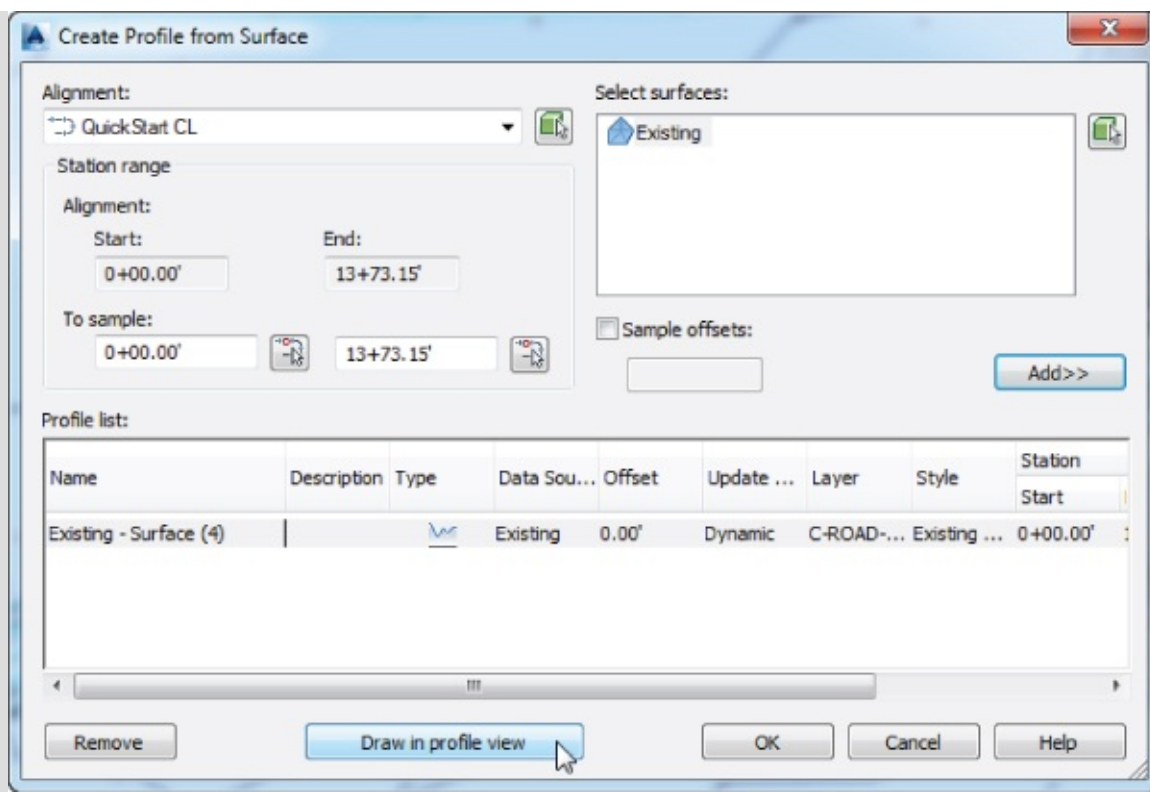27. Click Draw In Profile View.



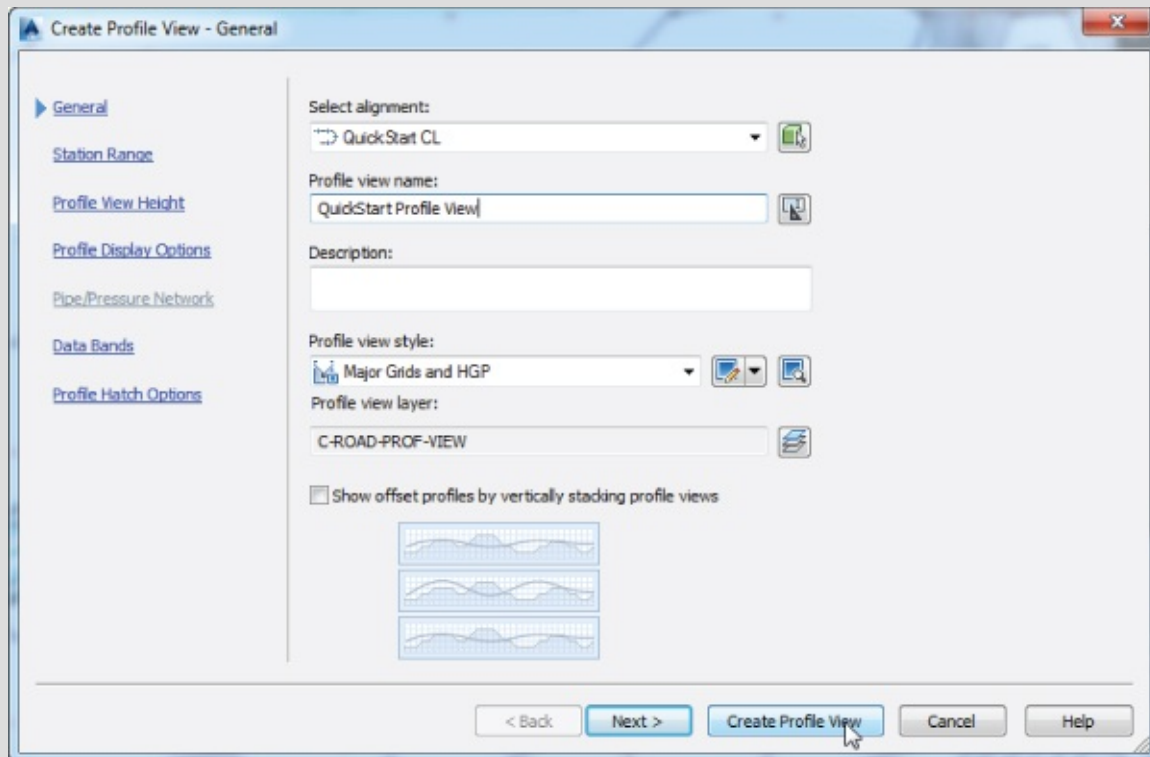28. In the Create Profile View – General dialog, change the Profile View Name to **QuickStart Profile View** and then click Create Profile View.




29. Click anywhere to the north of the site, outside the surface area, to select the origin point for the profile view.


30. Save the drawing.

You should now see the profile in the profile view. Chapter 7, “Profiles and Profile Views,” will take you through the details of these objects.

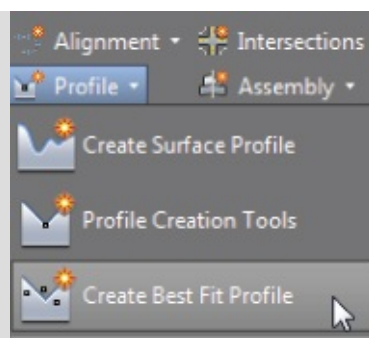
31. From the Home tab of the ribbon, in the Create Design panel, click Profile > Create Best Fit Profile.




32. When prompted to select a profile view, click the grid of the profile view you created in the previous steps.
33. In the Create Best Fit Profile dialog, follow these steps:
 - a. Set the input type to Surface Profile (the surface profile will automatically go to Existing – Surface (4)). If the name for your surface profile is not the same for any reason, don't worry about it, since there is just a single surface profile available for selection.
 - b. Change the profile name to **QuickStart Profile**.
 - c. Change the profile style to Design Profile.
 - d. Clear the check box for Show Report.
 - e. Click OK.

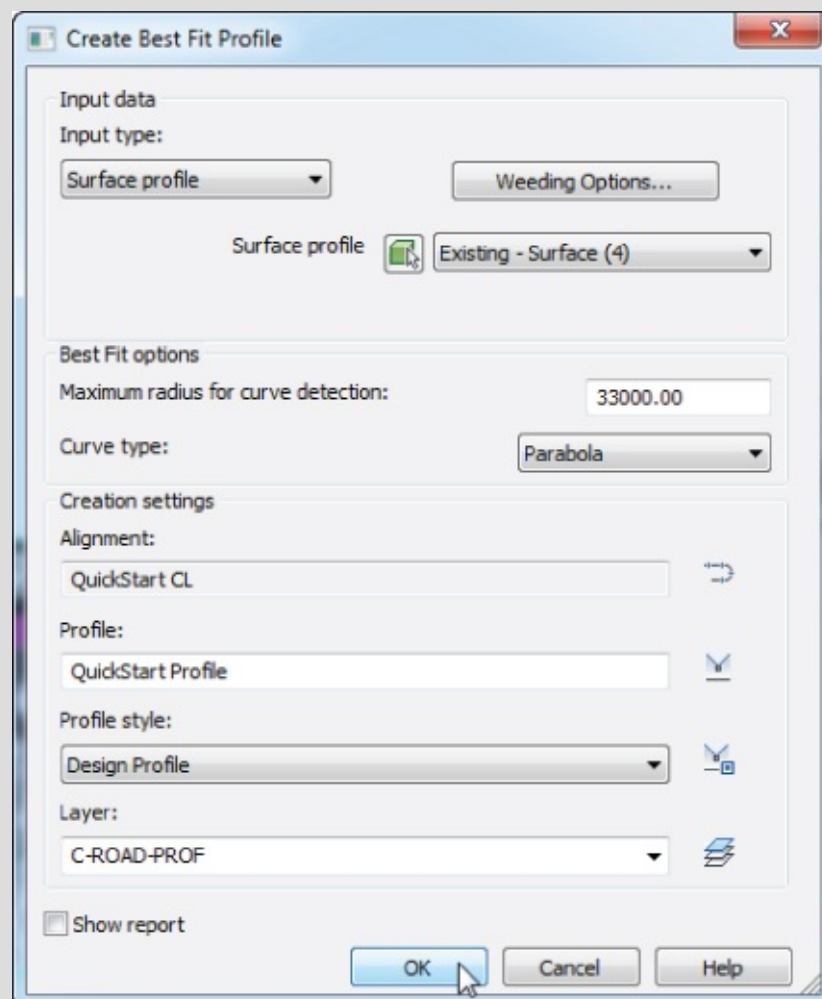

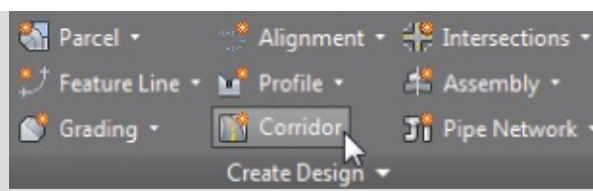34. From the Home tab of the ribbon, in the Create Design panel, click Corridor.



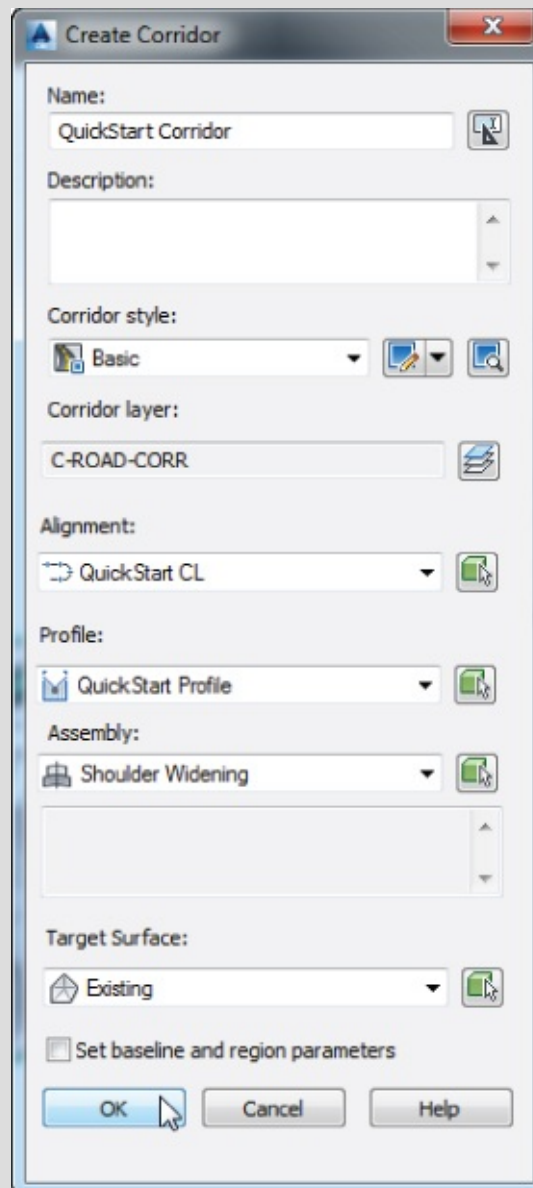35. In the Create Corridor dialog, do the following:
 - a. Set the name of the corridor to **QuickStart Corridor**.
 - b. Verify that the alignment is set to QuickStart CL.
 - c. Set Profile to QuickStart Profile.
 - d. Set Assembly to Shoulder Widening.
 - e. Set Target Surface to Existing.
 - f. Clear the check box for Set Baseline And Region Parameters.
 - g. Click OK.



36. If you receive any Event Viewer warnings, dismiss the Panorama window by clicking the green check mark in the upper-right corner of the Panorama window.
37. Save the drawing. You can explore the objects you created by expanding the specific object

collections. You can compare your drawing against the finished drawing for this exercise found on the book's web page, 0101_QuickStart_FINISHED.dwg (0101_QuickStart_METRIC_FINISHED.dwg).

You will learn all about assemblies and their role in the development of corridors in Chapter 8, “Assemblies and Subassemblies.” To learn about corridor creation and the meanings of various warnings associated with their creation, you will need to read Chapter 9, “Basic Corridors,” and to get deep into corridor modeling, you will need to visit Chapter 10, “Advanced Corridors, Intersections, and Roundabouts.”

Now that you've had your first taste of the power behind Civil 3D, you should be ready to buckle down and get more in depth with the details. This is just a sampling of the functionality of Civil 3D. You may want to learn about parcels (Chapter 5), pipe networks (Chapter 13), plan production (Chapter 15), grading (Chapter 14), or quantity takeoff (Chapter 17).

Settings

The Settings tab of Toolspace provides the tools to manage the way Civil 3D objects display in the drawing and define the default behavior of the commands associated with the creation of these objects. Any annotation or text that is placed by Civil 3D is controlled by *Label styles*. *Object styles* control the way the features of the Civil 3D objects are displayed within the drawing. So if you take, for example, an alignment, the dynamic annotation of the stationing, offsets, and the like is controlled by its Label styles, while its graphic representation is controlled by the Object styles. These settings and styles are defined and contained within the drawing itself; therefore, the need for a good template that defines these items before you begin working is obvious. When you have a standard defined for your Civil 3D drawings, these settings and styles will already be set, so that you can go ahead and start your design. Chapters 18 and 19 are dedicated to the management and definition of these styles. Later on in this chapter you will learn more about templates.

Drawing Settings

As with the Prospector tab, at the top of the Settings tab you will see the name of the drawing. When using Civil 3D, it is a common startup practice to make sure that your drawing settings match the requirements of the project. To access the overall settings for the current drawing, right-click its name and select Edit Drawing Settings from the displayed list, as shown in [Figure 1.11](#), to access the Drawing Settings dialog.

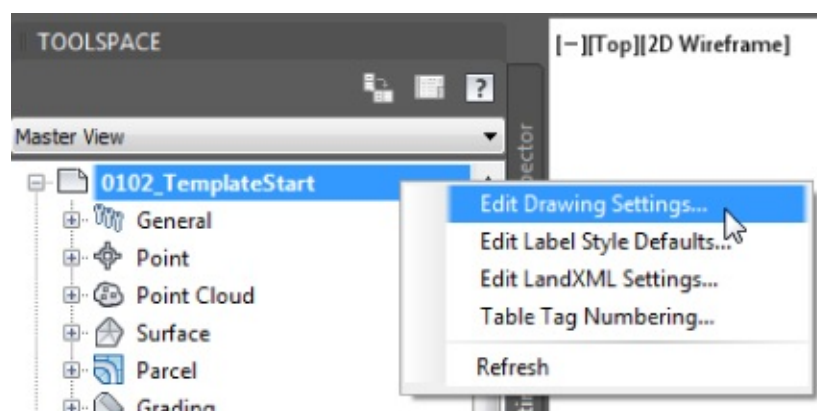


Figure 1.11 Accessing the Drawing Settings dialog

Each tab in this dialog focuses on the management of specific settings for the drawing. If the settings for the Object Layers, Abbreviations, and Ambient Settings tabs are usually the same over all your projects,

you can define them from a company-wide template. Because that does not usually apply for the drawing scale and coordinate information settings, which are project specific based on the desired output or its geographic location, you are likely to visit this tab at least once for each design file.

The Units And Zone Tab

On the Units And Zone tab, you have the option to define the default measurement system by selecting the default drawing units from the drop-down menu. In the same place you also have the option to define how the Imperial-to-metric conversion is handled. For the base template that ships with Civil 3D, by default the conversion takes the International Foot. If no coordinate system is assigned to the drawing, as in the case of the stock template, then by default your drawing will have assigned a No Datum, No Projection coordinate system. As soon as a coordinate system is selected from the Zone portion of the dialog, the Imperial To Metric Conversion option becomes grayed out. This happens because by assigning a coordinate system to the drawing, the coordinate system will take care of the conversion for you.

This tab also includes the options Scale Objects Inserted From Other Drawings and Set AutoCAD Variables To Match. The Set AutoCAD Variables To Match option sets the base AutoCAD angular units, linear units, block insertion units, hatch pattern, and linetype units to match the values set in this dialog. As shown in [Figure 1.12](#), even though these settings are enabled in the figure, the base template has them disabled in order to avoid issues that might arise based on work environments. So feel free to experiment with them and see how they affect your data.

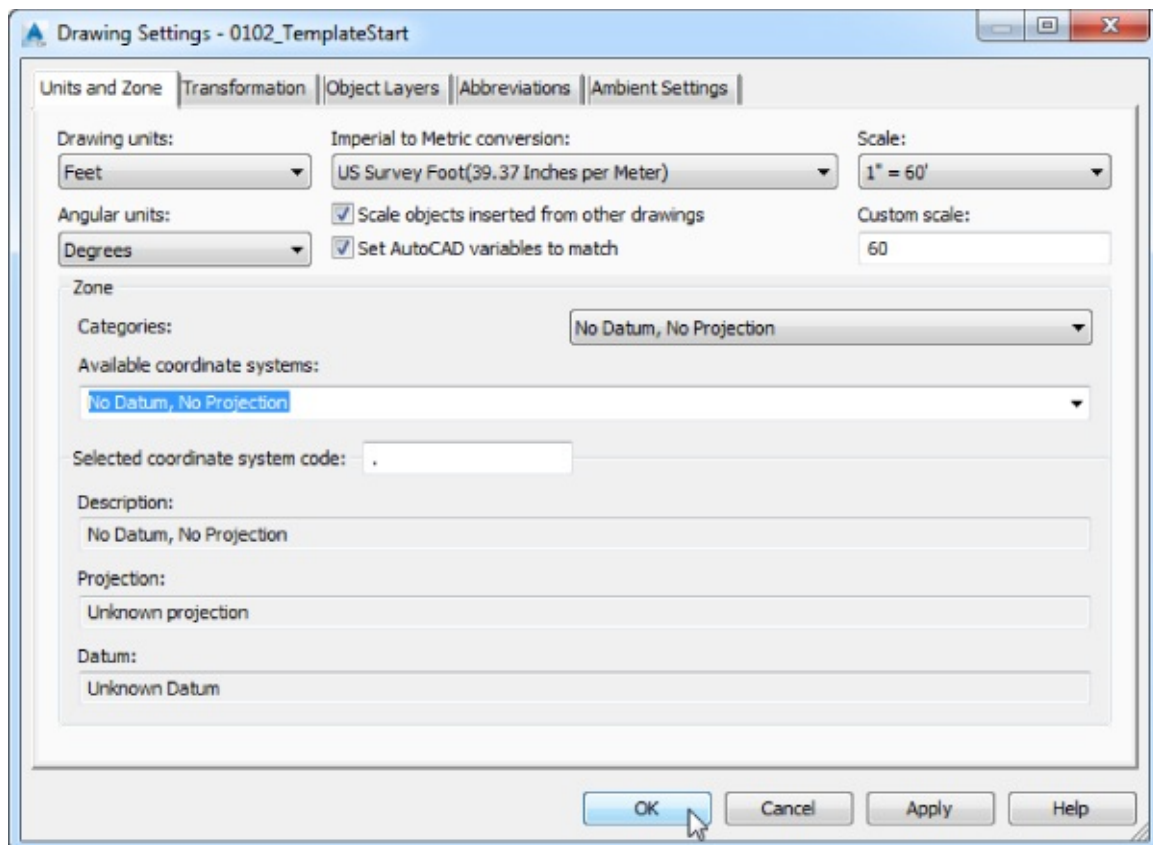


Figure 1.12 Before placing any project-specific information in a drawing, set the coordinate system in the Units And Zone tab of the Drawing Settings dialog.

The scale that you see on the right side of the Units And Zone tab is the same as your *annotation scale*. You can change it here, or you could change it by selecting the desired scale from the annotation scale list in the bottom-right corner of the drawing window. Note that this scale is available only in modelspace.

In the Zone area of the Units And Zone dialog, if you choose to work with the default No Datum, No

Projection option, then you will work using an assumed coordinate system. However, since most projects today are developed within a spatial reference, it is advisable to set the coordinate system to the one that is local to the area of your project. If your drawing file does not require the use and management of space-referenced data, then you can leave the coordinate system set to No Datum, No Projection. Civil 3D has an extensive database of coordinate systems that can be assigned. This database is common to and shared across multiple Autodesk products. The first step in assigning the coordinate system is to select the category that your coordinate system resides in. The categories are based on geographic location. Since Civil 3D is used worldwide, its coordinate system's database contains most of the standard coordinate systems (including the obsolete ones). Once the category is selected, the collection of coordinate systems that are available within that category will be listed in the Available Coordinate Systems drop-down. As soon as a coordinate system is selected, you will notice that the Selected Coordinate System Code, Description, Projection, and Datum areas will be filled with the specific data that define that coordinate system. If you use a coordinate system often, a quick way to select that system is by inputting its code in the Selected Coordinate System Code section of the dialog.

Try the following quick exercise to practice setting a drawing coordinate system:

1. Open the drawing `0102_TemplateStart.dwg` (`0102_TemplateStart_METRIC.dwg`). You can download this and all other files related to this book from this book's web page, www.sybex.com/go/masteringcivil3d2015.
2. Switch from Toolspace's Prospector tab to the Settings tab.
3. Right-click the filename and select Edit Drawing Settings.
4. Switch to the Units And Zone tab to display the options shown previously in [Figure 1.12](#).
5. Select USA, Texas from the Categories drop-down menu on the Units And Zone tab.
6. Select NAD83 Texas State Planes, Central Zone, US Foot (NAD83 Texas State Planes, Central, Meter) from the Available Coordinate Systems drop-down menu.

You could have also typed **TX83-CF (TX83-C)** in the Selected Coordinate System Code box.

7. Save the drawing for use in an upcoming exercise.

Notice that once you have set the coordinate system, the Geolocation tab becomes active in the ribbon, and you can use the tools that are available under this tab.

If you are used to having the coordinate system name displayed in the bottom bar, run the **mapstatusbar** command and change its status from the default of Hide to Show.

The Transformation Tab

Most survey-grade GPS equipment takes care of the transformation to local grid coordinates for you. In the United States, state plane coordinate systems already have regional projections taken into account. In the rare case that surveyors need to manually transform local observations from geoid to ellipsoid and ellipsoid to grid, the Transformation tab enables access to enter transformation factors.

With a base coordinate system selected, you can do any further refinement you'd like using the Transformation tab, shown in [Figure 1.13](#). The coordinate systems on the Units And Zone tab can be refined to meet local ordinances, tie in with historical data, complete a grid-to-ground transformation, or account for minor changes in coordinate system methodology.

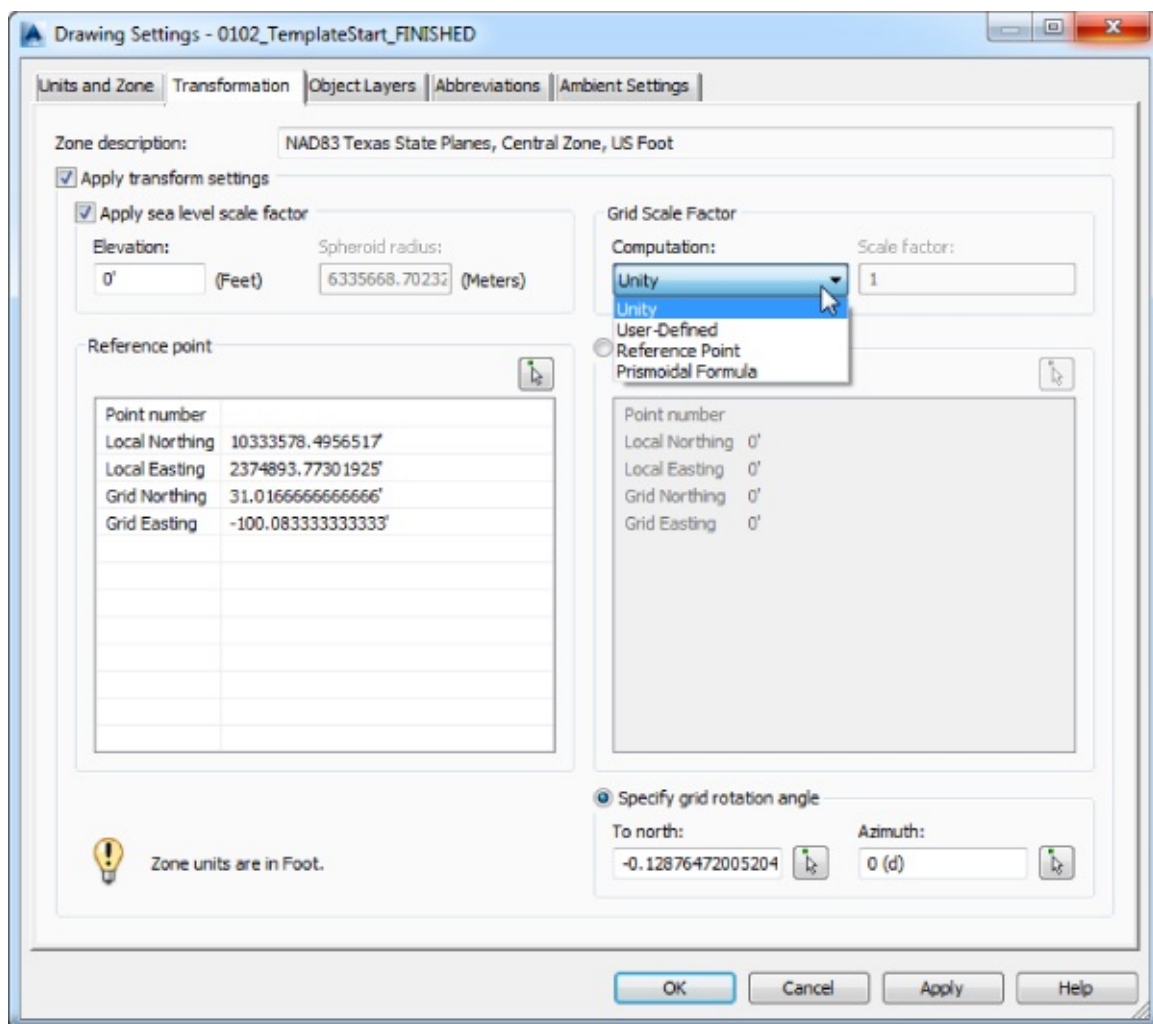


Figure 1.13 The Transformation tab

These changes can be made with the following options:

- Apply Sea Level Scale Factor** This value is known in some circles as *elevation factor* or *orthometric height scale*. The sea level scale factor takes into account the mean elevation of the site and the spheroid radius that is currently being applied as a function of the selected zone ellipsoid.
- Grid Scale Factor** At any given point on a projected map, there is a distortion between the “flat” measurement and the measurement on the ellipsoid. In the Grid Scale Factor area, you are presented with four options. When your selection is set to Unity, the grid factor is assumed to be 1, and that basically disables the grid scale factor. In the case of User-Defined, which is the most-used option, you will use one control point as the base point and apply the so-called combined scale factor. When you use this option, the Civil 3D Northing and Easting values define the localized or project coordinates, while the Grid Northing and Grid Easting values define an approximation of the grid coordinates for the point. If you choose Reference Point, Civil 3D will determine a scale factor that is based on a selected reference point. The last option is Prismoidal Formula, where Civil 3D defines a different grid scale factor for each point in the drawing.
- Reference Point** To apply the grid scale factor and the sea level factor correctly, you need to tell Civil 3D where you are on Earth. You can use Reference Point to set a singular point in the drawing field via the pick button or the Point Number, Local Northing and Local Easting, or Grid Northing and Grid Easting values.
- Rotation Point** Rotation Point can be used to set the reference point for rotation via the same methods as for the reference point.

Specify Grid Rotation Angle Some people may know this as the *convergence angle*. This is the angle between Grid North and True North. Enter an amount or set a line to north by picking an angle or deflection in the drawing. You can use this same method to set the azimuth if desired.

It should be noted that this is not the place to transform assumed coordinates to a predefined coordinate system. See Chapter 2 to learn how to translate a survey.

The Object Layers Tab

When you think about AutoCAD, you imagine lines, polylines, circles, and so on. Civil 3D adds its own specific entities, including points, surfaces, alignments, corridors, and others. All Civil 3D objects at the basic level comprise basic-level AutoCAD entities, but Civil 3D objects are dynamic elements.

Civil 3D is built on top of AutoCAD; therefore, all the objects reside on layers. When you define a basic AutoCAD object, you know the object will be created and placed in the current set layer. But what happens when you want to define a Civil 3D object? In which layer it will be stored? Here's where the object layers come into action. They define the layers in which the created Civil 3D objects will reside.

When you create an alignment in Chapter 6, for example, you will not have to think about the current layer, as you did in AutoCAD. This is because Civil 3D styles “push” the objects and labels to the template-assigned layer as part of their intelligence.

Layers are found in several areas of the Civil 3D template. The first location you will examine is the Drawing Settings area. The layers listed here represent overall layers where the objects will be created. For those of you who are familiar with AutoCAD blocks, it is useful to think of these layers in the same way as a block's insertion layer.

In the Object Layers tab, every Civil 3D object must have a layer set, as shown in [Figure 1.14](#). It is a common practice to not have any of the object layers set to 0. An optional modifier can be added to the beginning (prefix) or end (suffix) of the layer name to further separate items of the same type.

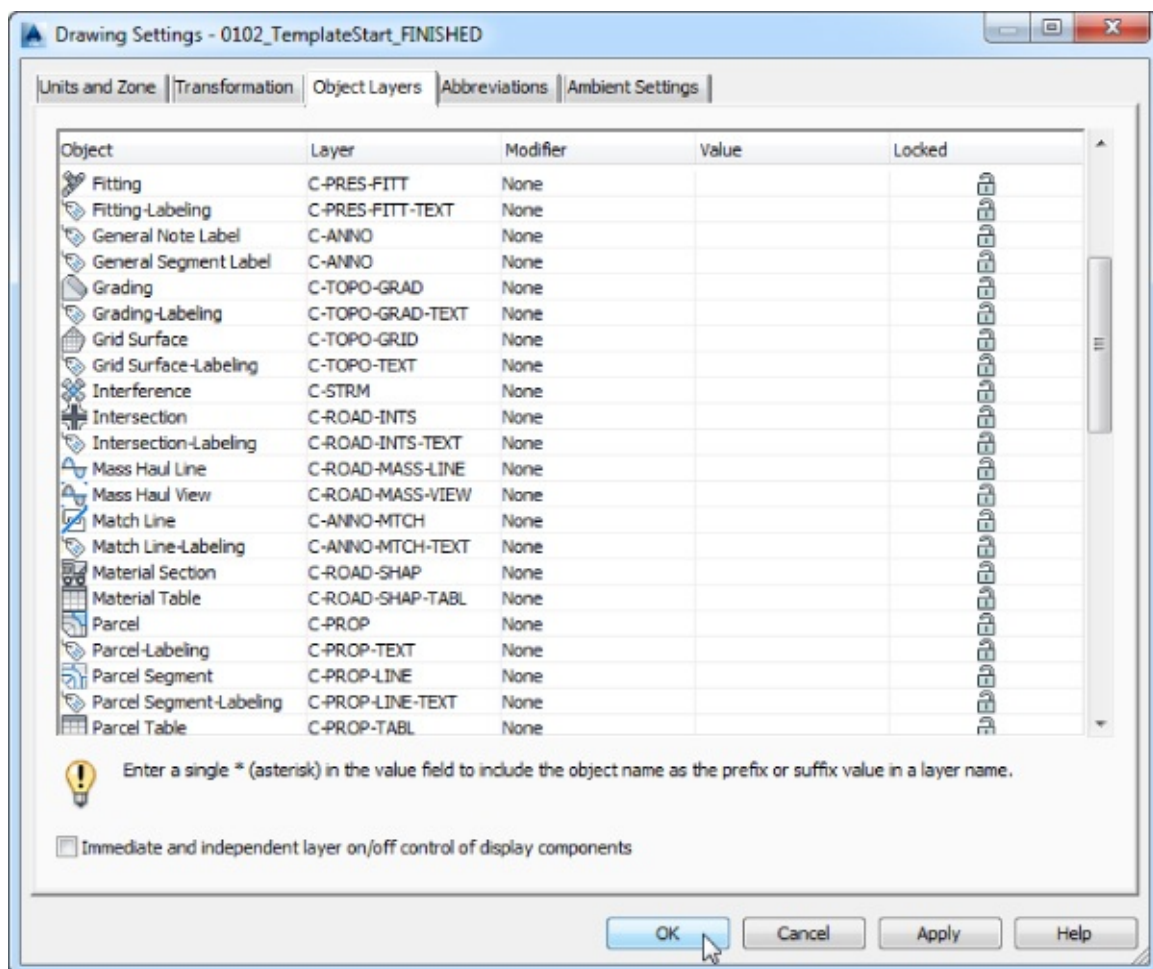


Figure 1.14 For each Civil 3D object type in the list a placement layer is defined for the new objects.

A common practice is to add wildcard suffixes to corridor, surface, pipe, and structure layers to make it easier to manipulate them separately. For example, if the layer for a corridor is specified to be C-ROAD-CORR and a suffix of -* (dash asterisk) is added as the modifier value, a new layer will automatically be created when a new corridor is created. The resulting layer will take on the name of the corridor in place of the asterisk. If the corridor is called Congress Ave, the new layer name will be C-ROAD-CORR-Congress Ave. This new layer is created once and is not dynamically linked to the object name. In other words, if you find out that you got the name of the street wrong and need to change it, you can't just change the name of the Civil 3D object.

If the layer name that you chose to use for an object does not exist in the drawing, you can create it as you work through the Object Layers dialog. In order to access the mentioned dialog and be able to create a new layer if needed, double-click the layer name assigned to the object within the Layer column, and if the layer is not within the list, click the New button, and set up the layer as needed, including color, lineweight, linetype, and so forth, as shown in [Figure 1.15](#).

you can just select it from the Layer Selection dialog's Layers list.

8. Set the layer for Catchment-Labeling to C-HYDR-CTCH-TEXT.
9. For the Corridor layer, keep the main layer as C-ROAD-CORR.
 - Set the modifier to Suffix by clicking the Modifier field and selecting Suffix from the drop-down list.
 - Set the modifier value to -* by clicking and typing it in the Value column field for the object.
 - The asterisk acts as a wildcard that will add the corridor name as part of a unique layer for each corridor, as previously described.
10. Scroll down to locate the Pipe object list.
11. Create several new layers and add suffix information:
 - For Pipe, create a layer called **C-NTWK-PIPE** with a modifier of Suffix and a value of -*.
 - For Pipe-Labeling, create a new layer called **C-NTWK-PIPE-TEXT**.
 - For Pipe And Structure Table, set the layer to C-NTWK-PIPE-TABL.
 - For Pipe Network Section, create a new layer called **C-NTWK-SECT**.
 - For Pipe Or Structure Profile, create a new layer called **C-NTWK-PROF**.
12. Scroll down a bit further and create a new layer for Structure called **C-NTWK-STRC**.
 - Add a modifier of Suffix and a value of -*.
13. For Structure-Labeling, create a new layer called **C-NTWK-STRC-TEXT**.
14. Add a modifier of Suffix to the Tin Surface object layer and a value of -*.

Your layers and suffixes should now resemble [Figure 1.16](#).

Object	Layer	Modifier	Value	Locked
Alignment	C-ROAD-ALIN	None		
Alignment-Labeling	C-ROAD-TEXT	None		
Alignment Table	C-ROAD-TABL	None		
Appurtenance	C-PRES-APRT	None		
Appurtenance-Labeling	C-PRES-APRT-TEXT	None		
Assembly	C-ROAD-ASSM	None		
Building Site	A-BLDG-SITE	None		
Cant View	C-ROAD-CANT-VIEW	None		
Catchment	C-HYDR-CTCH	None		
Catchment-Labeling	C-HYDR-CTCH-TEXT	None		
Corridor	C-ROAD-CORR	Suffix	.*	
Pipe	C-NTWK-PIPE	Suffix	.*	
Pipe-Labeling	C-NTWK-PIPE-TEXT	None		
Pipe and Structure Table	C-NTWK-PIPE-TABL	None		
Pipe Network Section	C-NTWK-SECT	None		
Pipe or Structure Profile	C-STRM-PROF	None		
Structure	C-NTWK-STRC	Suffix	.*	
Structure-Labeling	C-NTWK-STRC-TEXT	None		
Subassembly	C-ROAD-ASSM	None		
Superelevation View	C-ROAD-SE-VIEW	None		
Surface Legend Table	C-TOPO-TABL	None		
Survey Figure	V-SURV-FIGR	None		
Survey Figure-Labeling	V-SURV-FIGR-TEXT	None		
Survey Figure Segment ...	V-SURV-FIGR-TEXT	None		
Survey Network	V-SURV-NTWK	None		
Tin Surface	C-TOPO	Suffix	.*	
Tin Surface-Labeling	C-TOPO-TEXT	None		
View Frame	C-ANNO-VFRM	None		
View Frame-Labeling	C-ANNO-VFRM-TEXT	None		

Figure 1.16 Examples of the completed layer names in the Object Layers tab

- Click to place a check mark next to Immediate And Independent Layer On/Off Control Of Display Components.

As described previously, this setting will allow you to use the On/Off toggle in the layer manager to work with Civil 3D objects.

- Click Apply and then OK.
- Save the drawings. You can check your finished drawings against the completed file that can be downloaded from the book's web page. The file you will be looking for is 0102_TemplateStart_FINISHED.dwg (0102_TemplateStart_METRIC_FINISHED.dwg).

The Abbreviations Tab

When you add labels to certain objects, Civil 3D automatically uses the abbreviations assigned in this tab to indicate geometry features. For example, left is *L* and right is *R*. [Figure 1.17](#) shows a sampling of customizable abbreviations.

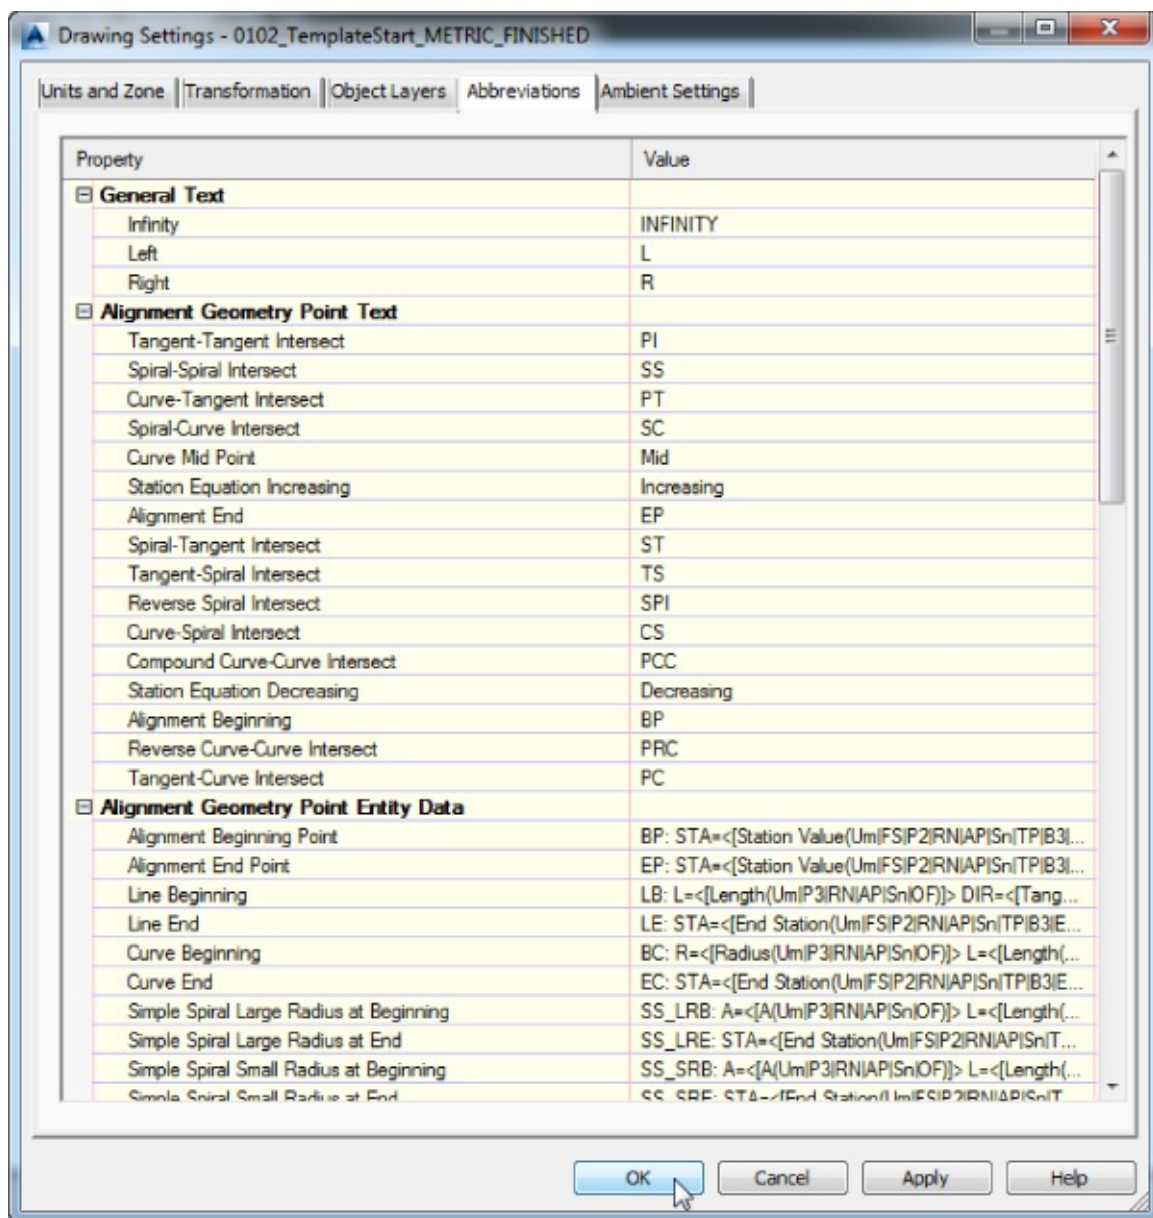


Figure 1.17 Features are customizable down to the letter on the Abbreviations tab.

Civil 3D uses industry-standard abbreviations wherever they are found. If necessary, you can easily change VPI to PVI for Point of Vertical Intersection. In most cases, changing an abbreviation is as simple as clicking in the Value field and typing a new one. You might notice that most of the abbreviations are simply defined, but some of them are defined by using macros, as in the case of the Alignment Geometry Point Entity Data. You will find that these macros are widely used in the naming conventions for the Civil 3D objects.

The Ambient Settings Tab

Examine the settings in the Ambient Settings tab to see what can be set here. The main options you'll want to adjust are in the General category, and the display precision settings are in the subsequent categories. You will also want to visit the Angle and Direction categories to verify the format of the angles.

The level of precision that you see in this dialog does not change the precision in labels. What you see here is the number of decimal places reported to you in various dialog boxes.

Becoming familiar with the way this tab works will help you farther down the line because almost every other settings dialog box in the program works like the one shown in [Figure 1.18](#).

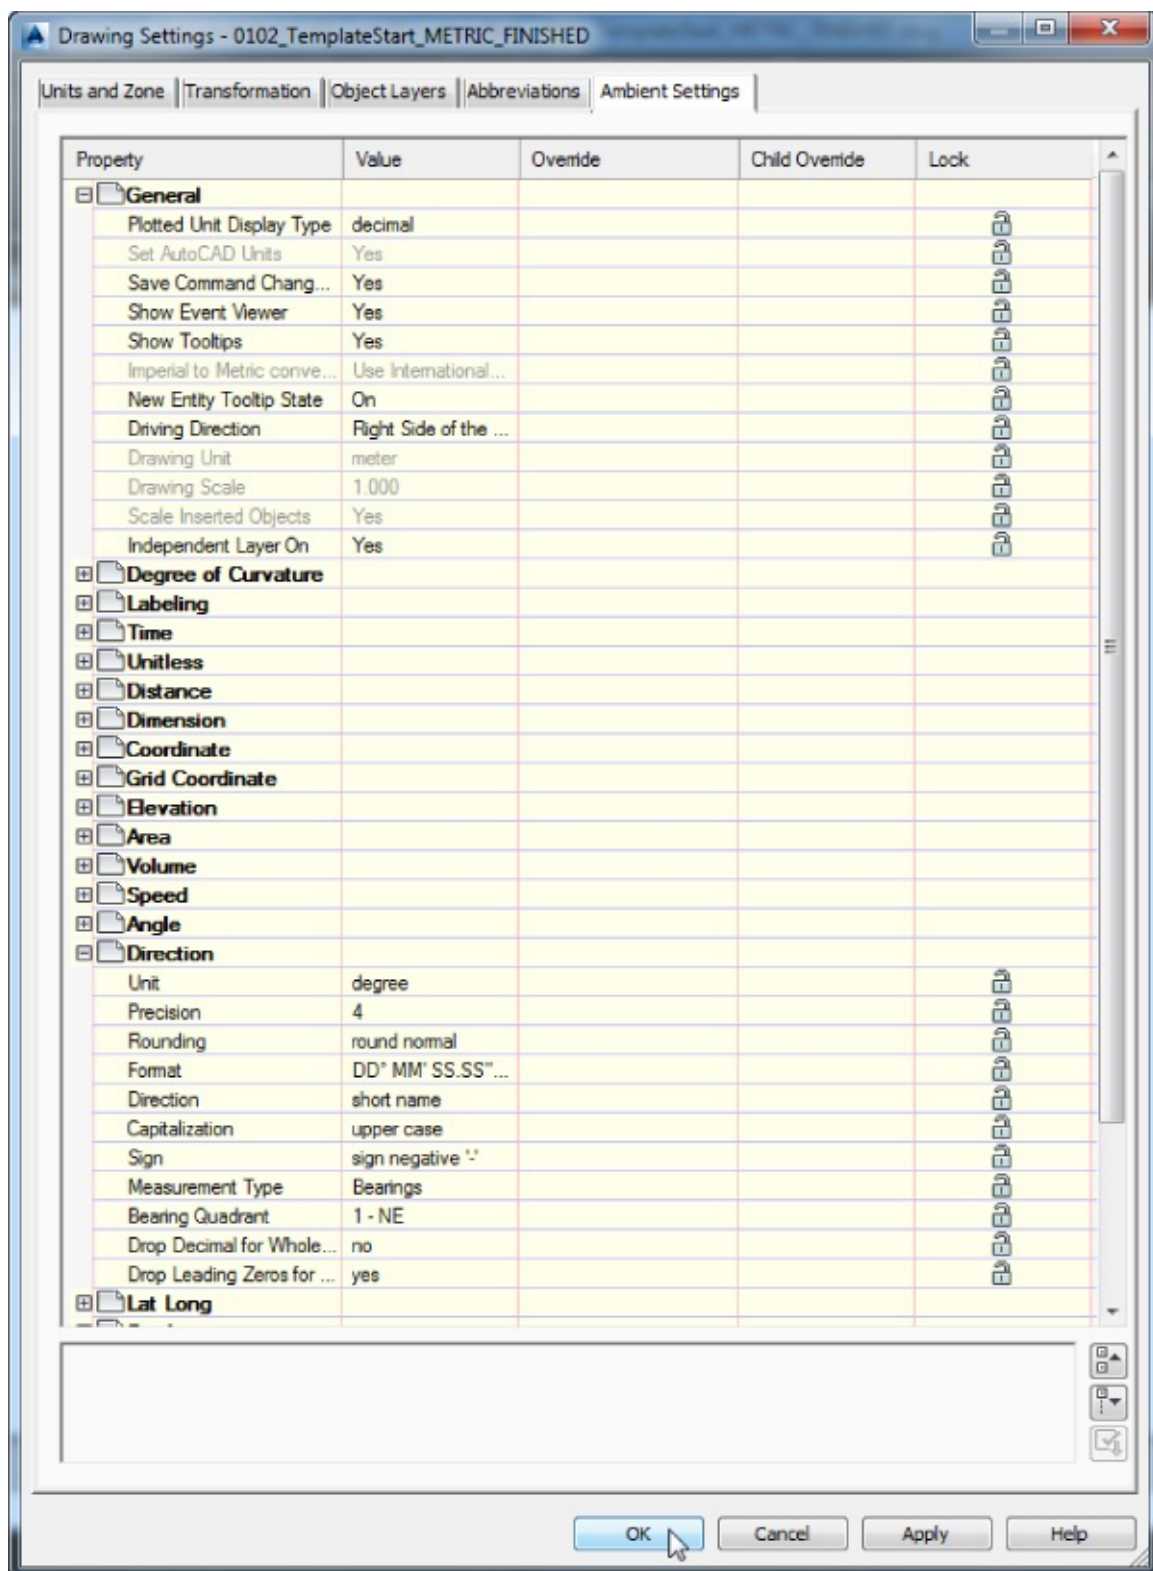


Figure 1.18 Ambient Settings at the main drawing level

You can set the following options in the General category:

Plotted Unit Display Type Civil 3D knows you want to plot at the end of the day. In this case, it's asking how you would like your plotted units measured. For example, would you like that bit of text to have a height of 0.25" or ¼"? In the civil engineering world there is mostly a consensus on the use of decimal units. For example, many people who used Land Desktop before Civil 3D are comfortable with the Leroy method of text heights (L80, L100, L140, and so on), so the decimal option is an obvious choice.

Set AutoCAD Units This option specifies whether Civil 3D should attempt to match AutoCAD

drawing units, as specified on the Units And Zone tab. This setting is specified on the Units And Zone tab but is displayed here for reference so you can lock it if desired.

Save Command Changes To Settings Set this to Yes. This setting is incredibly powerful but a secret to almost everyone. By setting it to Yes, you ensure that your changes to commands will be remembered from use to use. This means if you make changes to a command during use, the next time you call that Civil 3D command, you won't have to make the same changes. By setting it to Yes, you will save yourself the frustration of setting it over and over again.

Show Event Viewer Event Viewer is the main Civil 3D feedback mechanism, especially when things go wrong. Event Viewer uses the Panorama interface to display warnings such as when a surface contains crossing breaklines. Event Viewer will pop up with informational messages as well. If you have multiple monitors, it is a good idea to leave Panorama on but set aside for review.

Show Tooltips One of the cool features that people remark on when they first use Civil 3D is the small pop-up that displays relevant design information when the cursor is paused on the screen. If the cursor is paused over an object, it will display some basic properties about that object. If it is paused in a blank space on the screen, depending on the Civil 3D objects present in the drawing, it can provide horizontal and/or vertical data of the position of the cursor relative to those objects or within the definition area of the object. For example, for alignments it can provide name, station, and offsets of the cursor relative to all the alignments in the drawing as long as the cursor position from the alignments is perpendicular; for a surface it can provide the name and the elevation of the point the cursor is placed over. Once a drawing gets complex, the amount of data displayed in the tooltip can be overwhelming; therefore, Civil 3D offers the option to turn off these tooltips universally with this setting. If you want to micromanage these tooltips, then you have the option to toggle the tooltip display for each Civil 3D object individually by accessing the toggle found in the Information tab of the Properties dialog for those objects.

Imperial To Metric Conversion This setting displays the conversion method specified on the Units And Zone tab. The two options are US Survey Foot and International Foot.

New Entity Tooltip State This setting controls whether the tooltip is turned on at the object level for new Civil 3D objects. If you change this setting to Off partway through a project, the tooltip will not be displayed for any Civil 3D objects created after the change. Of course, you can go back to each of the objects and enable the tooltip if necessary.

Driving Direction This specifies the side of the road that forward-moving vehicles use for travel. This setting is important in terms of curb returns and intersection design.

Drawing Unit, Drawing Scale, and Scale Inserted Objects These settings are specified on the Units And Zone tab but are displayed here for reference and so that you can lock them if desired.

Independent Layer On This is the same control that is set on the Object Layers tab. Yes is the recommended setting, as described previously.

Moving down to the Direction category, you have the following choices:

Unit Degree, Radian, and Grad

Precision 0 through 8 decimal places

Rounding Round Normal, Round Up, and Truncate

Format Decimal, DD°MM' SS.SS", DD°MM'SS.SS" (Spaced) and DD.MMSSSS (decimal dms)

In most cases, people want to display DD°MM'SS.SS". Also, this setting controls how directions are entered at the command line.

Direction Short Name (spaced or unspaced) and Long Name (spaced or unspaced).

Capitalization You can preserve case or force uppercase, lowercase, or title caps.

Sign Gives you a choice of how negative numbers are displayed. You can use a minus sign to denote negative numbers only, use a set of parentheses to denote a negative, or use a sign regardless of value. The latter option will show a plus for positive values and a minus for negative values.

Measurement Type Bearings, North Azimuth, and South Azimuth.

Bearing Quadrant This should be left at the industry standard. 1 - NE, 2 - SE, 3 - SW, 4 - NW.

Certification Objective When you're using the Bearing Distance transparent command, for example, these settings control how you input your quadrant, your bearing, and the number of decimal places in your distance.

Besides the Direction category, you can explore the other categories, such as Angle, Lat Long, and Coordinate, and customize the settings to how you work.

At the bottom of the Ambient Settings tab is a Transparent Commands category. These settings control how (or if) you're prompted for the following information:

Prompt For 3D Points Controls whether you're asked to provide a z elevation after x and y have been located.

Prompt For Y Before X For transparent commands that require x and y values, this setting controls whether you're prompted for the y-coordinate before the x-coordinate. Most users prefer this value set to False so they're prompted for an x-coordinate and then a y-coordinate.

Prompt For Easting Then Northing For transparent commands that require Northing and Easting values, this setting controls whether you're prompted for Easting first and Northing second. Most users prefer this value set to False so they're prompted for Northing first and then Easting.

Prompt For Longitude Then Latitude For transparent commands that require Longitude and Latitude values, this setting controls whether you're prompted for Longitude first and Latitude second. Most users prefer this set to False so they're prompted for Latitude and then Longitude.

The settings that are applied here can be changed both at the drawing level and at the object level. For example, you may typically want elevation to be shown to two decimal places, but when looking at surface elevations, you might want just one. The Override and Child Override columns give you feedback about these types of changes. See [Figure 1.19](#).

Property	Value	Override	Child Override	Lock
General				
Degree of Curvature				
Labeling				
Time				
Unit	min			
Precision	3		↓	
Rounding	round normal			
Unitless				
Distance				
Unit	meter			
Precision	3		↓	
Rounding	round normal			
Sign	sign negative '-'			
Dimension				
Coordinate				
Grid Coordinate				
Elevation				
Unit	meter			
Precision	3		↓	
Rounding	round normal			
Sign	sign negative '-'			

Figure 1.19 The Child Override indicator in the Time, Distance, and Elevation values

The Override column shows whether the current setting is overriding something higher up. Because you're at the Drawing Settings level, these are clear. However, the Child Override column displays a down arrow, indicating that one of the objects in the drawing has overridden this setting. After a little investigation of the objects, you'll find the override in the Edit Feature Settings dialog of the Surface object, as shown in [Figure 1.20](#).

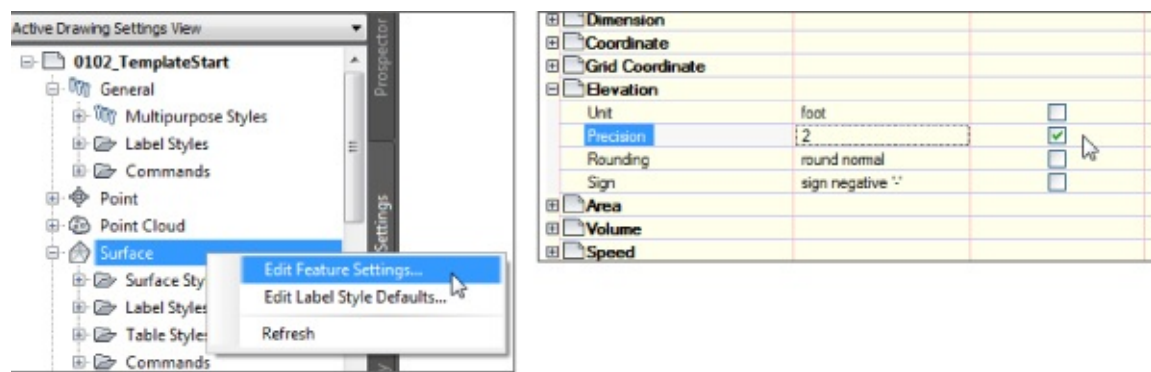


Figure 1.20 The Surface Edit Feature Settings and the Override indicator

Notice that in this dialog, the box for the Precision setting is checked in the Override column. This indicates that you're overriding the settings mentioned earlier, and it's a good alert that things have changed from the general drawing settings to this object-level setting.

But what if you don't want to allow those changes? Each settings dialog includes one more column: Lock. At any level, you can lock a setting, graying it out for lower levels. This can be handy for keeping users from changing settings at the lower level that perhaps should be changed at a drawing level, such as sign or rounding methods.

Survey

The Survey tab of Toolspace is displayed optionally and controls the use of the survey, equipment, linework code sets, and figure prefix databases. This tab can be toggled off and on by using the corresponding button under the ribbon's Home tab, Palettes panel. Surveying is an essential part of land-

development projects. Because of the complex nature of this tab, all of Chapter 2 is devoted to it.

Toolbox

The Toolbox tab of Toolspace is a launching point for add-ons and reporting functions. To display the Toolbox, from the Home tab of the ribbon, under the Palettes panel you can find the Toolbox icon to enable/disable the tab. The location of this icon is shown previously in [Figure 1.6](#). Out of the box, the Toolbox contains reporting tools created by Autodesk, but you can expand its functionality to include your own macros or reports. The buttons on the top of the Toolbox, shown in [Figure 1.21](#), allow you to customize the report settings and add new content. If you are an Autodesk® Subscription customer, here is where you will find lots of the add-ons released for subscription customers only.

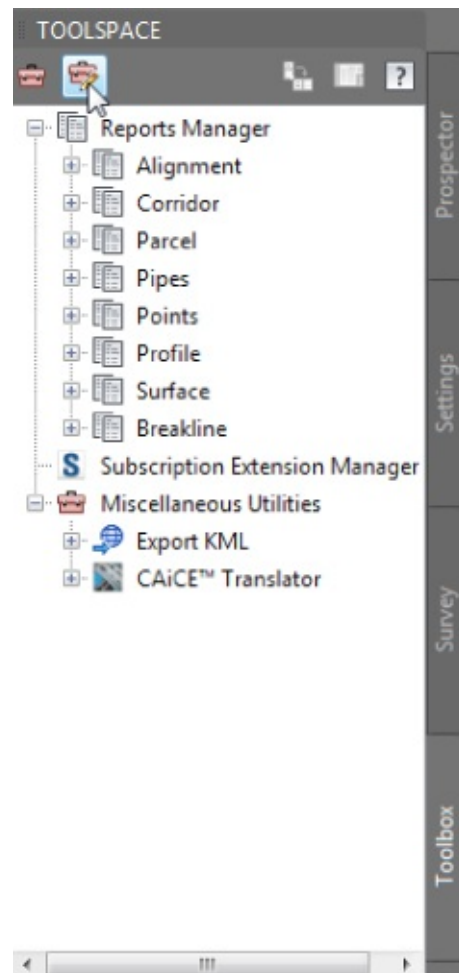


Figure 1.21 The Toolbox with the Edit Toolbox Content icon highlighted

Panorama

The Panorama window is the Civil 3D feedback and tabular editing mechanism. It's designed to be a common interface for a number of different Civil 3D–related tasks, and you can use it, for example, to provide input in the creation of profile views, to edit pipe or structure information, or to run basic volume analysis between two surfaces. For an example of Panorama in action, open it by going to the Home tab ➤ Palettes panel flyout and clicking the Event Viewer icon. You'll explore and use Panorama more during this book's discussion of specific objects and tasks.

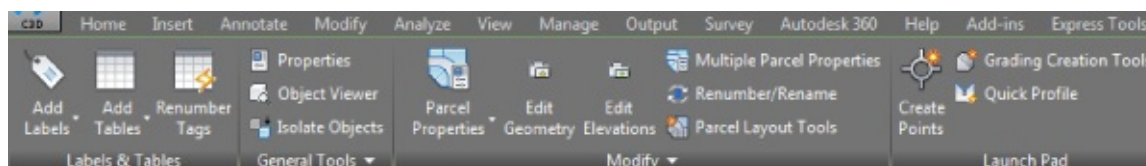
Contextual Ribbon Tab

As with AutoCAD, the ribbon is the primary interface for accessing Civil 3D commands and features.

When you select an AutoCAD Civil 3D object, the ribbon displays commands and features related to that object in a *contextual tab*. If several object types are selected, the Multiple contextual tab is displayed. Use the following procedure to familiarize yourself with the contextual tab of the ribbon:


1. Open 0103_Example.dwg (0103_Example_METRIC.dwg), which you will find at www.sybex.com/go/masteringcivil3d2015.
2. Select one of the parcel area labels (the labels in the middle of the lot areas).

Notice in the Parcel contextual tab that the Labels & Tables, General Tools, Modify, and Launch Pad panels are displayed, as shown in [Figure 1.22](#).



[Figure 1.22](#) The Parcels contextual tab within the ribbon

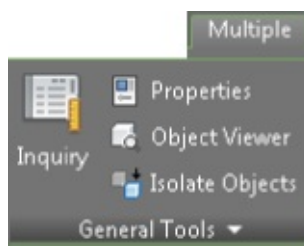3. Select a parcel line and notice the display of the Multiple contextual tab ([Figure 1.23](#)).



[Figure 1.23](#) When more than one object is selected, the Multiple contextual tab appears.

4. Use the Esc key to cancel all selections.
5. Reselect a parcel by clicking one of the numeric labels.
6. Select the down arrow next to the Modify panel name.
7. Click the pin at the bottom-left corner of the panel to keep it open.
8. Select the Properties command in the General Tools panel to open the AutoCAD Properties palette. Notice that the Modify panel remains open and pinned until the current selection set changes.

Styles and More Styles

Civil 3D uses *styles* to define the graphic display of its objects and labels. Styles control everything from which layer your surface contours will be displayed on to the number of decimal places displayed in a label.

Civil 3D has an extensive number of options when it comes to how you want your design elements to look. It is easy to get bogged down in the intricacies of object and label style creation. For this reason, within this book the management and definition of styles have their own chapters. Before getting deep into style management it is desirable to learn and understand the functionality of the Civil 3D environment. Once you have an understanding of how the tools operate, you can then define how your designs are represented graphically.

In this chapter and throughout the book, you will be using styles that have already been created for you. For an in-depth look at styles, refer to Chapter 18 and Chapter 19.

Civil 3D Templates

Styles and settings should be defined within your template. Some people manage to have all the settings and styles defined within a single file, while others take the approach of separating the templates based on the type of projects they deal with. Therefore, we go on the premise that your template will have all the styles you need for the type of project you are working on. If you find you are constantly changing style settings, you should reexamine your workflow.

When starting a project, or continuing a project from an outside source, it is important to start with a Civil 3D template file. You will find all the information you need on customizing the template to have the desired styles for both objects and annotations in Chapters 18 and 19.

Right after installing the software you will see two usable Civil 3D-specific templates ([Figure 1.24](#)).

Templates Used in This Book

By default when Civil 3D is installed either in an Imperial or metric work environment, every new file created will use a stock template, whose location and file are defined within the configuration portion of the software that can be accessed by using either the `Config` or `Options` command. In the same way, since you use the default configuration of Civil 3D, all the way through the book the CAD files that are supplied for your instruction will use the same templates. These template files may not necessarily reflect the standards for design of your company, but they represent a good startup file for the definition of your company's templates. Listed here are the stock templates that Civil 3D uses based on your unit work environment:

- `_AutoCAD Civil 3D (Imperial) NCS.dwt`
- `_AutoCAD Civil 3D (Metric) NCS.dwt`

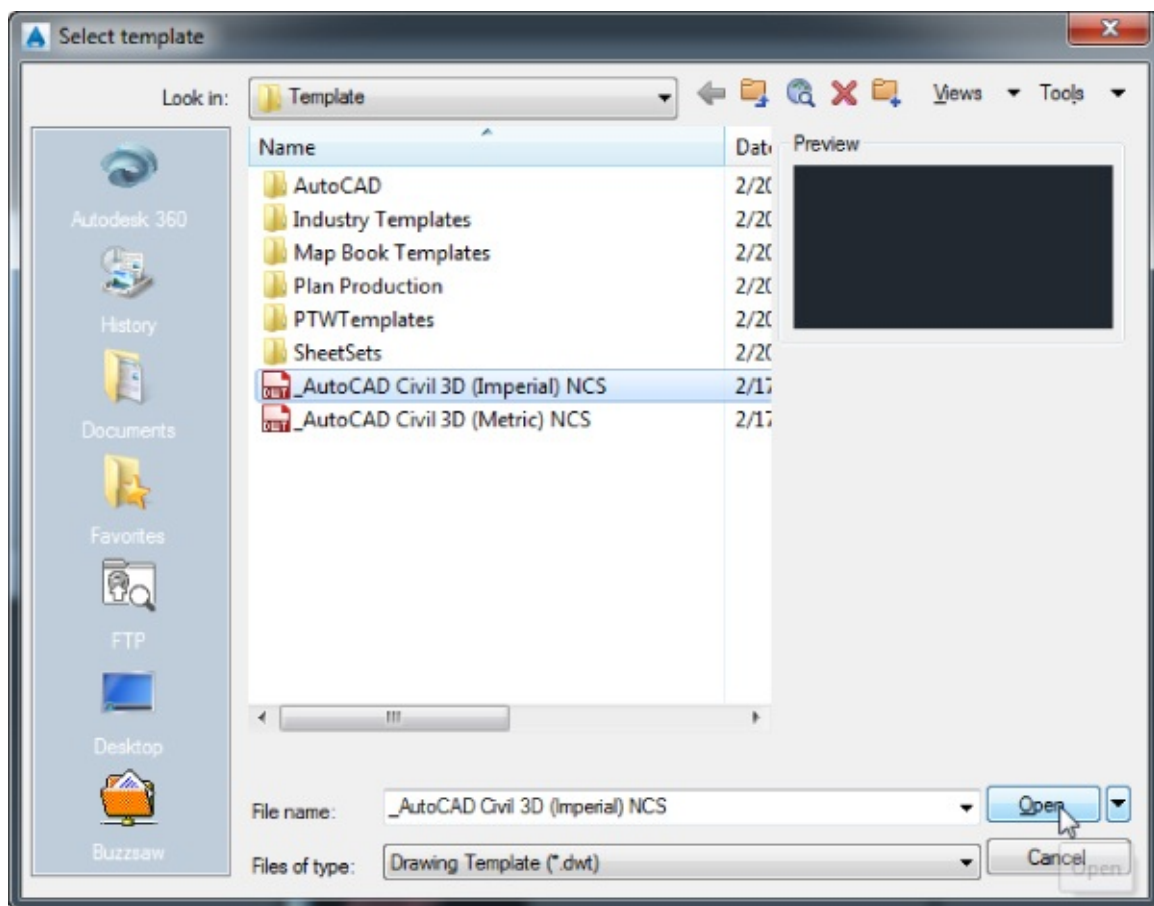


Figure 1.24 Selecting a Civil 3D template by going through the Application menu

Starting New Projects

When you start a project with the correct template file (defined by a .dwt file extension), the repetitive task of defining the basic framework for your drawing is already completed. Since Civil 3D runs on top of AutoCAD, the template will have two parts. The first part of the Civil 3D template is the AutoCAD side of the template, and it will contain the following:

- Unit type (architectural or decimal) and insertion scale (meters or feet)
- Layers and their respective linetypes, colors, and other properties
- Text, dimension, tables, and multileader styles
- Layouts and plot setups
- Block definitions

The second part is represented by the specific Civil 3D side. Therefore, in addition to the items just listed, you will encounter the following:

- More specific unit information (international feet, survey feet, or meters), together with the coordinate systems defined within the Drawing Settings dialog that you've learned about.
- Civil object layers, defined with the object layers. (You've learned about this one, as well.)
- Ambient settings. (Try to remember, did you see this one somewhere already?)
- Label styles and formulas (expressions). (There is an awesome chapter on this, Chapter 18.)
- Object styles. (Chapter 19 will give you all you need to know about them.)

- Command settings of which you'll learn more in this chapter. (The customization takes a new level when these are defined.)
- Object-naming templates defined by macros within command settings. (Your typing life will be so much easier when these are defined.)
- Report settings that can be found within the Toolbox tab of Toolspace.
- Description key sets. (You will learn how these can streamline your survey processing in Chapter 2.)

So now that you've learned what makes up the Civil 3D template, make sure to start your design adventure using the proper template. Many times you will receive files from people who don't use Civil 3D as their design platform. When these files are opened for the first time in Civil 3D, the template will create standard settings and styles. For this reason, opening a file within Civil 3D, when accessing the Settings tab of Toolspace, you will see that for each of the objects a Standard style is defined ([Figure 1.25](#)). This style is created for both object and labels and defines all of its properties using Layer 0. Also, there will be no specific object layers defined, since all of them will be set to Layer 0, so that any Civil 3D object you create will be placed by default in that layer. You will learn in this section about a feature that allows you to import the settings and styles from a template, taking away all the hassle of redefining that data for every drawing.



Real World Scenario

Best Practices for Receiving a Non-Civil 3D Drawing

Say someone sends you a drawing that was not done in Civil 3D. Perhaps it was exported from a non-AutoCAD-based product or created in an outdated civil drafting program. You now have the task of creating Civil 3D objects, but making this task even more difficult is that there are no Civil 3D styles present. Perhaps the drawing was created in Civil 3D but your organization's styles look completely different.

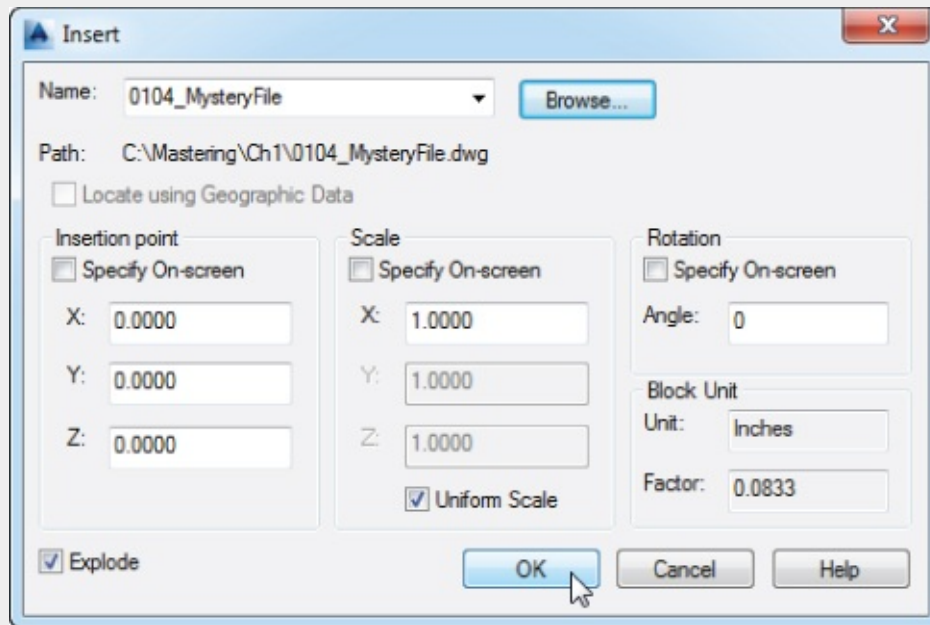
The best course of action to take when receiving an outside drawing is to insert it into a blank file that you started using your Civil 3D template. When you insert a drawing, Civil 3D does several things to help you:

- The Insert command will detect the units of the incoming drawing and scale it to match your drawing.
- If both drawings have a coordinate system defined, Civil 3D will place the incoming drawing by geographic data.
- All of your styles and settings will stay intact.

The following exercise walks you through exactly what you need to do in this situation:


1. Start by choosing Application > New > Drawing. Select either `_AutoCAD Civil 3D (Imperial) NCS.dwt` or `_AutoCAD Civil 3D (Metric) NCS.dwt` and click Open.
2. Click the Save icon from the Quick Access toolbar.
3. Save the drawing with the rest of your Mastering Civil 3D files as `0104_Project.dwg` (`0104_Project_METRIC.dwg`).

4. Go to the Insert tab of the ribbon. From the Block panel, click Insert.
5. Click Browse and locate the file 0104_MysteryFile.dwg (0104_MysteryFile_METRIC.dwg), which is part of the dataset for this chapter. Click Open.
6. Be sure that the Insertion Point, Scale, and Rotation check boxes are clear.
7. Select the Explode check box. Your Insert dialog should look like this:



Notice that AutoCAD has picked up the units of the 0104_MysteryFile.dwg (0104_MysteryFile_METRIC.dwg) file and is automatically scaling them as needed. If you used the English units template, you will see the conversion scale factor as 0.0833. If you used the metric template drawing, you will see the scale factor as 0.025.

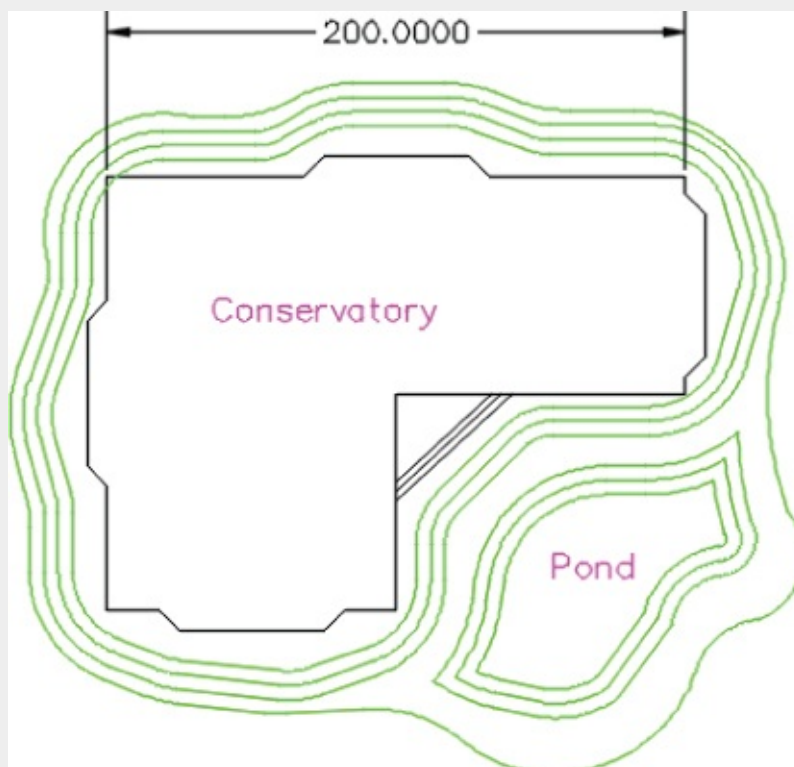8. Click OK. Using the Zoom command, expand the view to extents to see the result. You can check the resulting file against the completed file that can be found on the book's web page under the name 0104_Project_FINISHED.dwg (0104_Project_METRIC_FINISHED.dwg).



A quick measurement of the north wall of the conservatory building should reveal that it is 200' (61 m) in length.

At this point you can now work on the drawing in Civil 3D without re-creating any established standards. Everything from the outside source has come in, including blocks, layers, and dimension styles, but they will not override any of your blocks, layers, or styles if they happen to have the same name. Note that if the drawings are in different coordinate systems, the previously mentioned workflow will not deliver the desired result. For those cases the workflow is different and involves the use of AutoCAD Map tools.

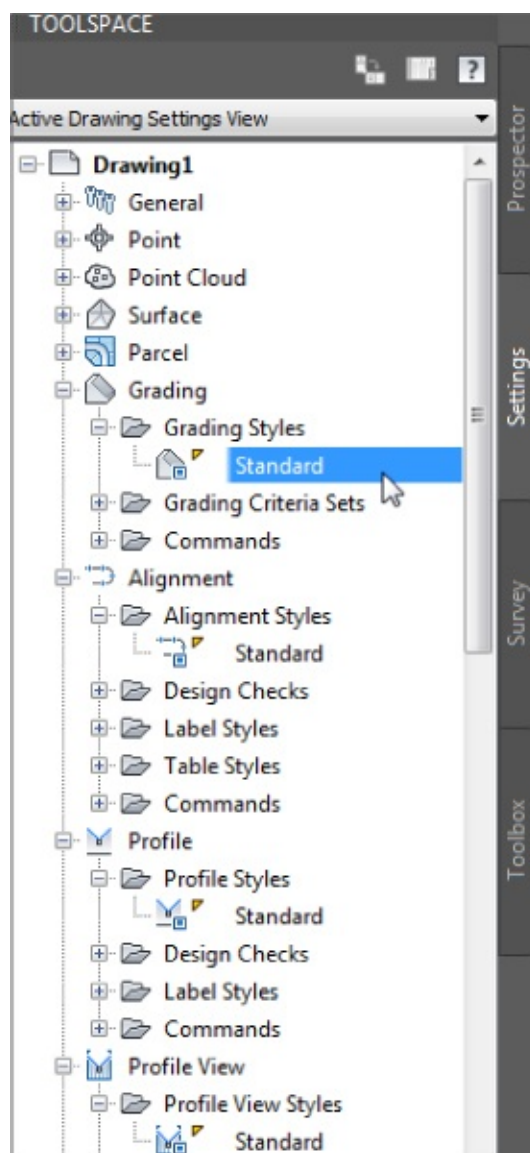


Figure 1.25 A non-Civil 3D DWG will list all styles as Standard, which is the Civil 3D equivalent to drawing on : Layer 0.

Importing Styles



Now let's imagine that you are working in your drawing, and your company's template was updated to include one or more object and label styles. There has also been a change to one of the properties of a style you commonly use, and you need to integrate that change within your drawing. How would you incorporate those changes within your drawing? Looking at the original styles and trying to re-create them within your drawing would be tedious work and prone to errors. That's where the recently introduced

Import Styles tool comes into action.

This tool allows you to import one or more object and label styles from a source drawing. You can also import from the source drawing its Table styles, Quantity Takeoff criteria, Alignment Design Check sets, Drawing Ambient settings, Feature settings, Command settings, and other user-defined settings like expressions, property classifications, and page layouts. The last three can be imported as long as they are referenced by any of the imported label or table styles. However, using this tool does not allow you to import description key sets and point file formats (see Chapter 2 for their definition), all the settings defined within the Drawing Settings dialog (except for the ambient settings mentioned previously), and the user-defined settings mentioned that are not referenced by a style. As shown in [Figure 1.26](#) this tool can be found under the Manage tab of the ribbon in the Styles panel. In the same panel, there is also an option to purge styles. But for now we will lay down the basics on importing styles.

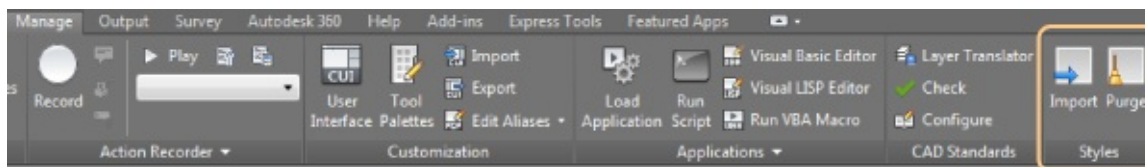


Figure 1.26 Import and Purge found on the Styles panel give you access to tools to import Object and Label styles from your drawing of choice into the current drawing.

Before importing styles, you must save the file. In case you forget, Civil 3D will be kind enough to prompt you to save the drawing before you can proceed with the import. The import workflow begins when you click the Import button of the Styles panel. First, you will be asked to select your source drawing for import of styles. This drawing can be either a DWG file or a template file, which is defined by the .dwt extension.

Once you select the file whose styles you will import, a dialog box similar to the one in [Figure 1.27](#) appears.

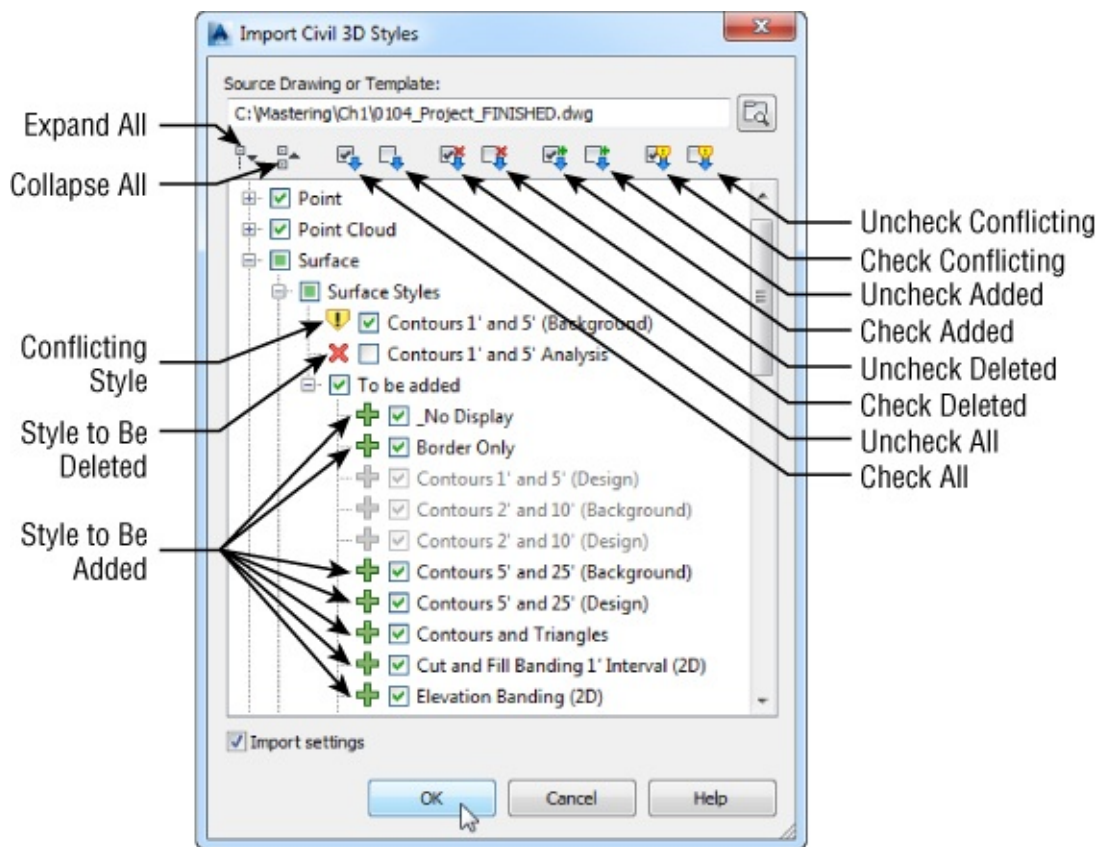


Figure 1.27 Import Civil 3D Styles dialog

The Import Civil 3D Styles dialog has the following options:

Import Settings Import Settings option is located at the bottom of the dialog. This option is turned on by default. If you want to import the styles with disregard to the drawing settings, then you can uncheck Import Settings. However, if you want to match your drawing in all aspects to the source drawing, you should leave the option checked, which is the default. As you look through the list of styles to be imported, you will notice that some items are grayed out and can't be modified.

The grayed-out styles represent items that are referenced by the command settings to be imported. As mentioned, the only time those styles would not be grayed out and available would be when the Import Settings box is not checked. You will learn about command settings toward the end of this section. Also note that you can either import all the styles from the source drawing or select which styles you want to import.

When importing styles, Civil 3D will do the following:

1. If the style is not within your drawing, the style will be added.
2. If the style already exists in your drawing, presenting the same style name, Civil 3D will recognize it as a conflict of styles and will check its settings against its equivalent in the source file; if the settings are different, they will be overwritten.
3. If a style is present in the drawing but not present in the source file, that style will be deleted, as long as it is not used (referenced) by an object in the drawing.

For each of the actions listed here, there is a way to toggle off one or more actions. Following you can see what happens when you use the toggles:

Uncheck/Check Conflicting You will also notice items with a warning symbol (see the Surface style Contours 1' and 5' (Background) in [Figure 1.27](#)). The warning symbol indicates that there is a style in

the current drawing with the same name as a style in the batch to be imported. Use the Uncheck Conflicting button if you do not want styles in your drawing to be overwritten by the style from the source file. As mentioned, if you leave these items selected, the incoming styles “win.” If you are not sure if there is a difference between the styles, pause your cursor over the style name and a tooltip will tell you what (if any) difference exists.

Uncheck/Check Added Use the Uncheck Added button if you only want styles with the same name to come in. Wherever possible, Civil 3D will release items in the To Be Added categories. In cases where a style is used by a setting, you will not be able to uncheck it unless you do not import settings.

Uncheck/Check Deleted A style in the current drawing will be deleted if the source drawing does not contain a style with the same name and the style is not in use. Use the Uncheck Deleted button to prevent the style from being deleted.

The Import Styles command does not replace the best practice of starting with a proper template. Again, note that many critical items will not get transferred with this tool. As we mentioned before, description key sets, expressions, and predefined point groups will not import. Unfortunately, expressions must be re-created if they are needed in additional drawings, or by using a separate style they can be brought in for use in the definition of other styles.

To bring the objects into your drawing that belong to the Settings tab in the Toolspace that cannot be imported, use the following steps:

1. Open the drawing that you want the styles to be imported into.
2. In the same session open the drawing that will be your source for the styles to be imported.
3. Switch your Toolspace tab to Settings. Make sure your view is set to Master View so that you can see both drawings at the same time.
4. Set active the source drawing, select the style that you want to import, and drag and release it over the name of the drawing you want this style to be copied to.

Command Settings

We have mentioned command settings many times in this chapter; now you'll learn what they are and their intended purpose. When you create a Civil 3D object, you define its properties, set design parameters, set default styles for objects, and so on. A Civil 3D object is defined through a command. In order to speed up the standardization of the creation process, the command settings take care of the default values used when a Civil 3D object is created. So, for example, in [Figure 1.28](#) you can see that most of the default settings that the CreateAlignmentLayout tool uses are defined within the command settings. The fact that most of the settings are defined at the drawing level can be seen by the small number of check marks in the Override column.

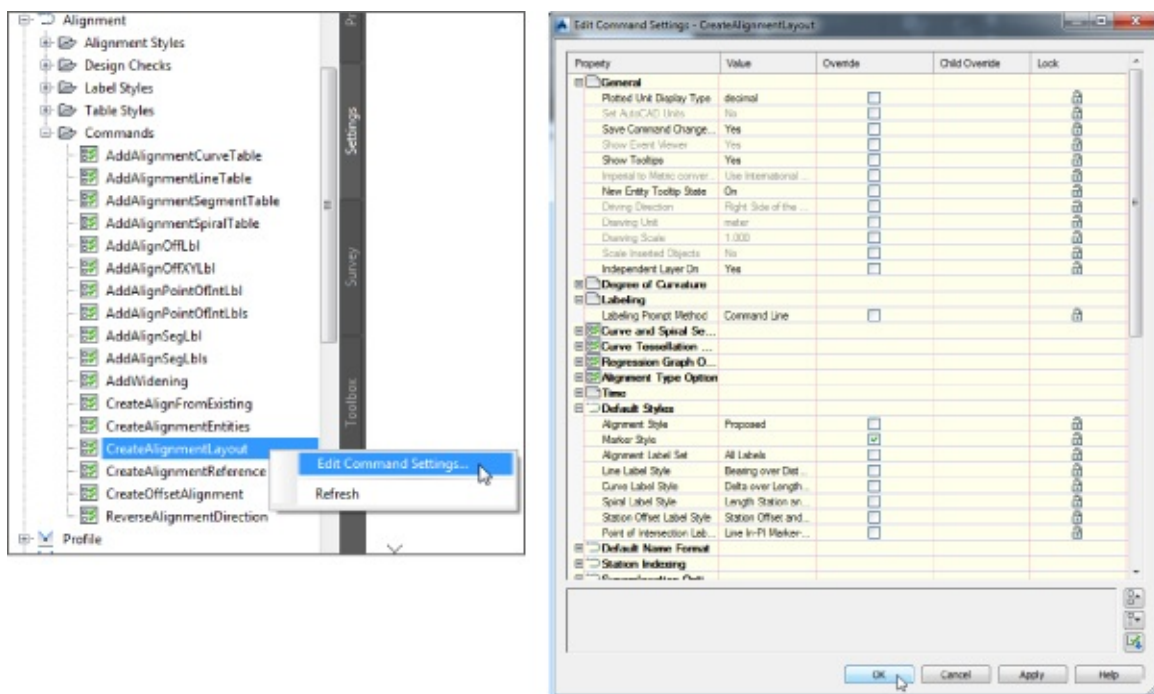


Figure 1.28 Command settings for CreateAlignmentLayout define the defaults when this tool is used.

You have the option to customize the defaults for the tool, so that every time the tool is launched you don't have to type in the same values. Even though the values will be prepopulated in the specific fields, the user still has the option to overwrite those choices within the creation dialog box. Note, however, that only part of the predefined defaults are available to the user within the dialog box. For most of the defaults, the specific command setting dialog is the only place where those values can be defined. Most of the settings within the command settings are defined on a global level for the drawing within the Ambient Settings tab. Going from a global level to the object level, the same settings can be found and overridden at the object level through the Edit Feature Settings for that type of object. From the object level you can move to the tool level, where within the command settings for the tool they can again be overridden to achieve the desired settings when using that tool.

Importing Object Layers

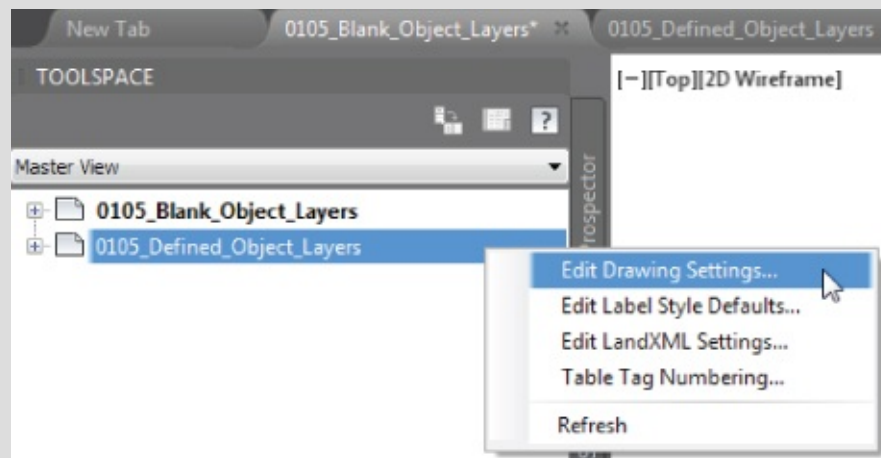
You know that object, table, and label styles can be imported using the Import Styles tool, but what about the object layers?

At this time, Civil 3D does not have a built-in tool to do that, so if you are provided with a drawing that does not have any object layers defined or doesn't have your company's object layers, you have two options: define or redefine the object layers for the drawing or use the workflow presented previously in this section. But what happens if you want to keep the current file as is and just define its object layers without too much hassle? Fortunately, there is a workflow that will take care of that. Follow these steps:

1. Open 0105_Blank_Object_Layers.dwg (0105_Blank_Object_Layers_METRIC.dwg) from this chapter's folder.
2. From the same folder, open 0105_Defined_Object_Layers.dwg (0105_Blank_Object_Layers_METRIC.dwg).
3. If you examine the object layers of the first drawing, you will notice that they are all set to 0,

while the object layers for the second drawing are defined. You will transfer the object layers from the second drawing to the first.

4. Set your Toolspace to the Settings tab. Make sure that the view is set to Master View, since you will want to have both drawings visible.
5. Make sure that the active drawing is set to 0105_Blank_Object_Layers. You will know it is the active one if it is at the top of the list and its name is bold. If it is not active, switch to the Prospector tab, right-click its name, and use the Switch To option to make it active or select it using the file tabs.
6. With drawing 0105_Blank_Object_Layers active in the Toolspace, right-click 0105_Defined_Object_Layers and select Edit Drawing Settings from the list. See the following figure for the layout:



7. On the dialog do not change any settings, and click OK. If you check now, you will notice that the object layers of your source drawing (0105_Defined_Object_Layers) have been transferred to the desired drawing. If you want to check the result of the transfer, you can download the finished file found under the name 0105_Blank_Object_Layers_FINISHED.dwg (0105_Blank_Object_Layers_METRIC_FINISHED.dwg).

Creating Lines

If you have used AutoCAD for a while, you will be familiar with the way you draw lines. Whether you use the command line or the ribbon, the same tools will be available both in Civil 3D and AutoCAD. However, Civil 3D takes it up a notch by providing multiple methods of defining these entities, though the end result will be the same—a line. The tools to draw lines are found in the Draw panel within the Home tab of the ribbon. [Figure 1.29](#) displays the available line commands.

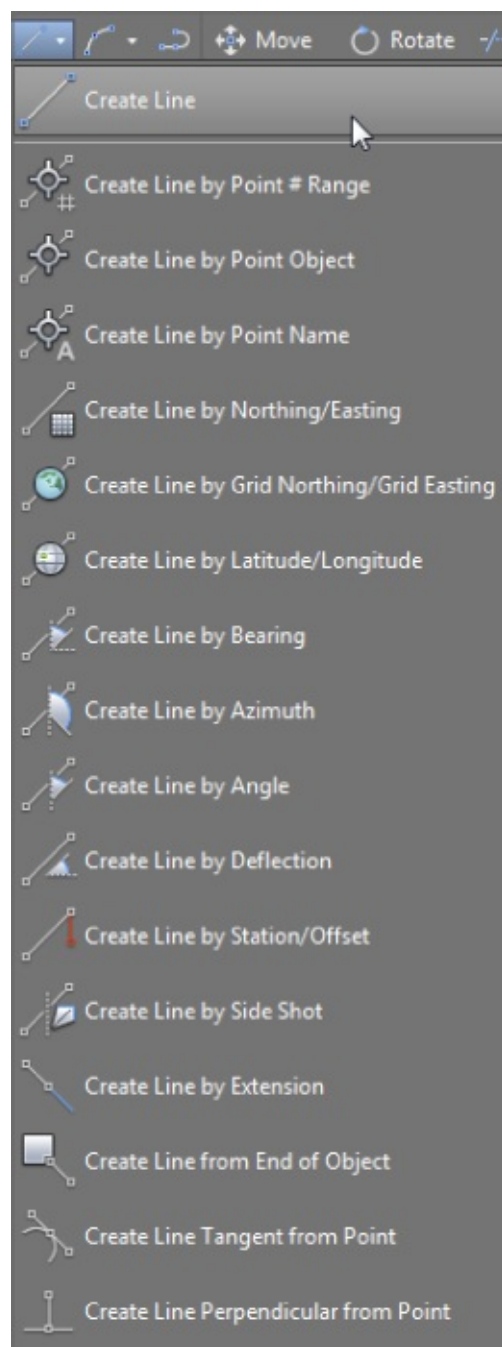


Figure 1.29 Line-creation tools

Later on in this chapter you will take a look at *transparent commands*. Transparent commands provide extra help in the definition of the elements, by expanding user's options of data input within a command.

COGO Line Commands

The next few commands help you create a line using Civil 3D points and/or coordinate inputs. Each command requires you to specify a Civil 3D point, a location in space, or a typed coordinate input. These line tools are useful when your drawing includes Civil 3D points that will serve as a foundation for linework, such as the edge of pavement shots, wetlands lines, or any other points you'd like to connect with a line.

Create Line Command



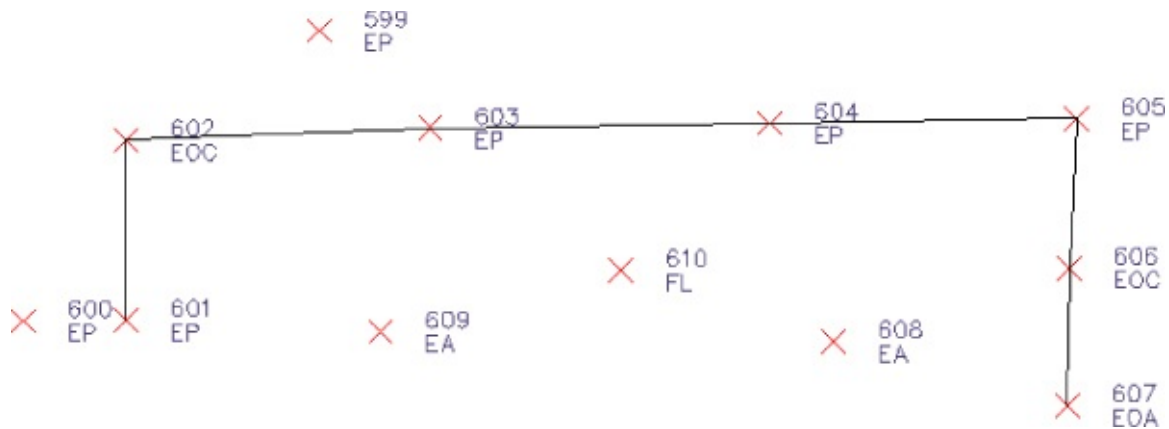
The Create Line command on the Draw panel of the Home tab of the ribbon issues the standard

AutoCAD Line command. It's equivalent to typing **line** on the command line or clicking the Line tool on the Draw toolbar.

Create Line By Point # Range Command




The Create Line By Point # Range command prompts you for a point number. You can type in an individual point number, press **↵**, and then type in another point number. A line is drawn connecting those two points. You can also type in a range of points, such as **601-607**. Civil 3D draws a line that connects those points in numerical order from 601 to 607 and so on (see [Figure 1.30](#)). The line that is created by this method connects point to point regardless of the description or type of point. Since a line is an element that allows each of its end vertices to hold different elevations, in this case each endpoint will inherit the elevation of the COGO point used for its definition.



[Figure 1.30](#) Lines created using 601-607 as input

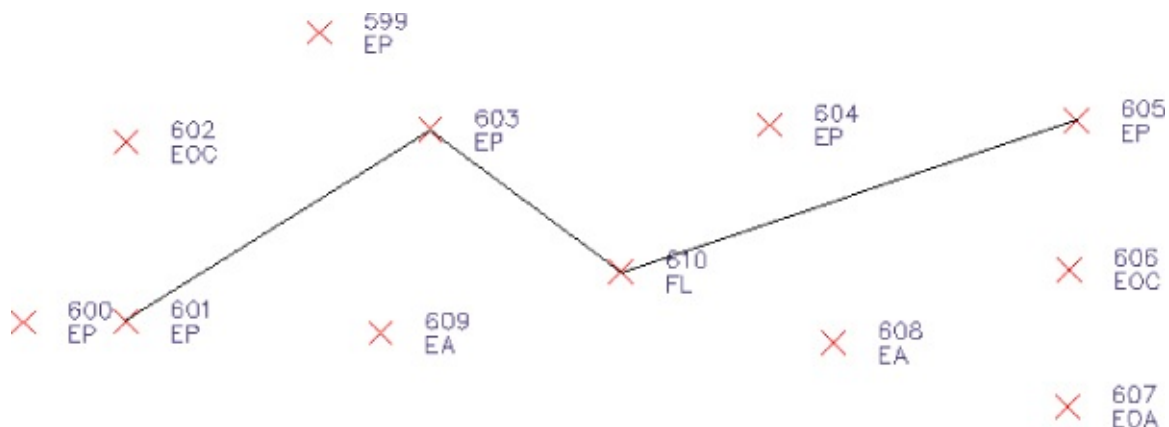Alternatively, you can enter a list of points such as **600, 603, 610, 605** ([Figure 1.31](#)). Civil 3D draws a line that connects the point numbers in the order of input. This approach is useful when your points were taken in a zigzag pattern (as is commonly the case when cross-sectioning pavement) or when your points appear so far apart in the AutoCAD display that they can't be readily identified.



[Figure 1.31](#) Lines created using 600, 603, 610, 605 as input

Create Line By Point Object Command



The Create Line By Point Object command prompts you to select a point object. To select a point object, locate the desired start point and click any part of the point. This tool is similar to using the

regular Line command and a Node object snap (also known as an Osnap); however, it will work on only Civil 3D points. Each endpoint will inherit the elevation of the point to which it is created.

Create Line By Point Name Command



The Create Line By Point Name command prompts you for a point name. A *point name* is a field in point properties, not unlike the point number or description. The difference between a point name and a *point description* is that a point name must be unique, just as point numbers are. It is important to note that some survey instruments name points rather than number points as is the norm.

To use this command, enter the names of the points you want to connect with linework. Each endpoint will inherit the elevation of the point used for its definition.

Create Line By Northing/Easting and Create Line By Grid Northing/Grid Easting Commands



The Create Line By Northing/Easting command lets you input northing (y) and easting (x) coordinates as endpoints for your linework.



The Create Line By Grid Northing/Grid Easting command also lets you input northing (y) and easting (x) coordinates as endpoints for your linework but requires that the drawing have an assigned coordinate system; otherwise, the command resumes to be used as a simple line command.

Create Line By Latitude/Longitude Command



The Create Line By Latitude/Longitude command prompts you for geographic coordinates to use as endpoints for your linework. This command also requires that the drawing have an assigned coordinate system. Enter the latitude and longitude as separate entries at the command line using degrees, minutes, and seconds.

Important Notes on Entering Data into Civil 3D

In this chapter, you will get your first taste of keying in data to the command line. Always keep an eye out for what is on your command line (or your tooltip, if dynamic input is on). Sometimes you are asked to confirm an option; other times you are asked for input.

As stated previously, most people prefer to enter angles by degrees, minutes, and seconds rather than decimal degrees. The ambient setting format will affect exactly how Civil 3D displays this information but is more flexible when it comes to your data entry. To enter angles into Civil 3D, you can use a *DD.MMSS* format. To input 15°21'35", you can use **15.2135**. Any numbers beyond four decimal places will be considered decimal seconds. To input 6°5'2", enter **6.0502**. You could also enter **6d5'2"** at the command line, but most people find it faster to use the former method.

When entering station values into Civil 3D, it is not necessary to use station notation. In English units, if you are asked to enter station 3+25, you can simply enter **325**. In metric, a station of 0+110 can be entered as **110**. Similarly, a metric station of 2+450 can be entered as **2450**.

Direction-Based Line Commands

The next few commands help you define a line and its direction. Each of these commands requires you to choose a start point for your line before you can specify the line direction. You can specify your start point by physically choosing a location, using an Osnap, or using one of the point-related line commands discussed earlier.

Many of these line commands require a line or arc and will not work with a polyline. Those commands include Create Line By Sideshot, Create Line By Extension, Create Line From End Of Object, Create Line Tangent From Point, and Create Line Perpendicular From Point.

Create Line By Bearing Command

Certification Objective The Create Line By Bearing command is one of the most commonly used line-creation commands.



This command prompts you for a start point, followed by prompts to input the Quadrant, Bearing, and Distance values. You can enter values on the command line for each input, or you can graphically choose inputs by picking them onscreen. The glyphs at each stage of input guide you in any graphical selections. After creating one line, you can continue drawing lines by bearing, or you can switch to any other method by clicking one of the other Line By commands on the Draw panel (see [Figure 1.32](#)).

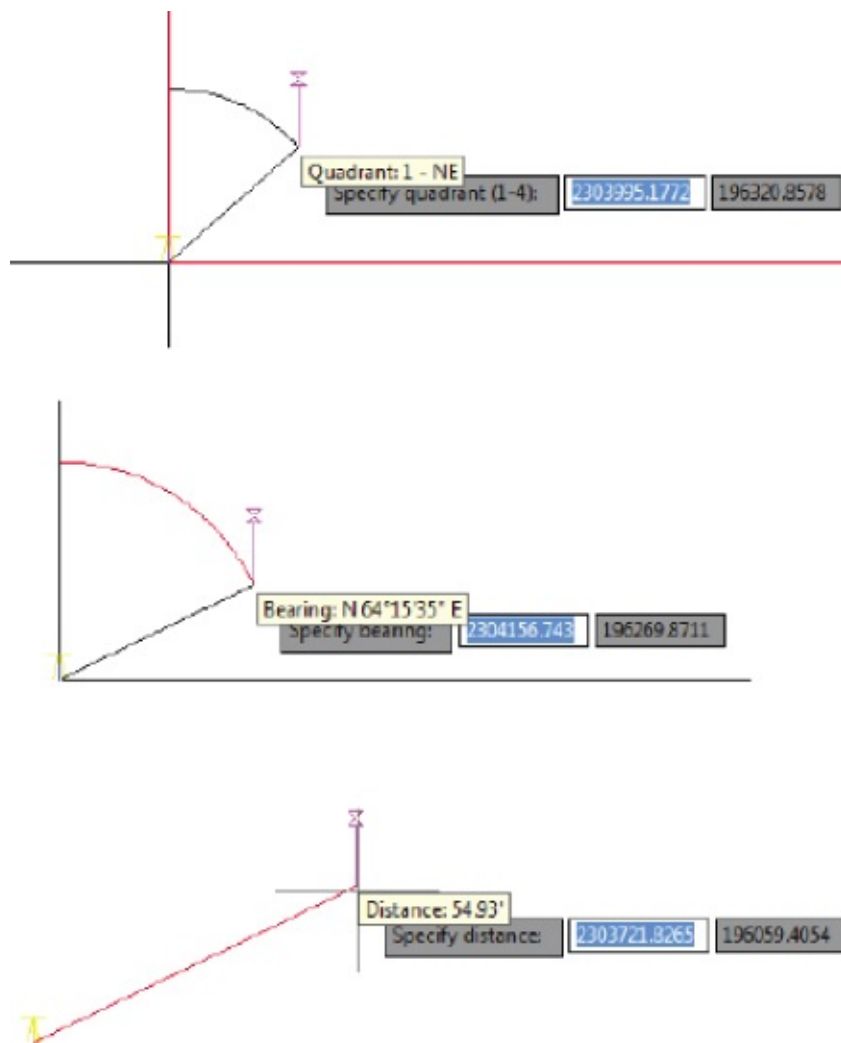


Figure 1.32 The tooltips for a quadrant (top), a bearing (middle), and a distance (bottom)

Create Line By Azimuth Command



The Create Line By Azimuth command prompts you for a start point, followed by a north azimuth, and then a distance ([Figure 1.33](#)).

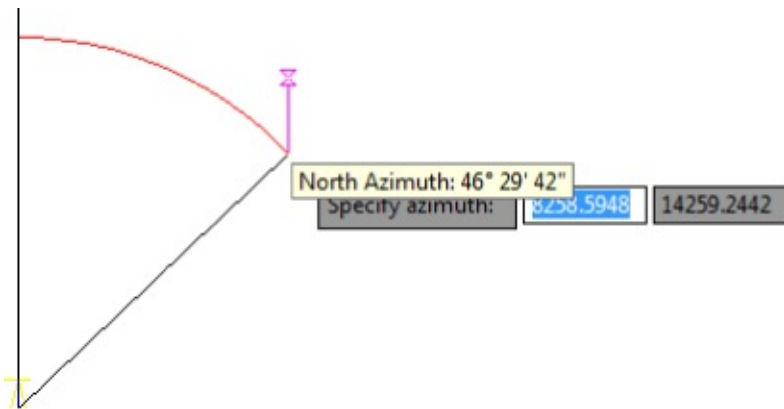



Figure 1.33 The tooltip for the Create Line By Azimuth command

Create Line By Angle Command



The Create Line By Angle command prompts you for a start point, an ending point to establish a

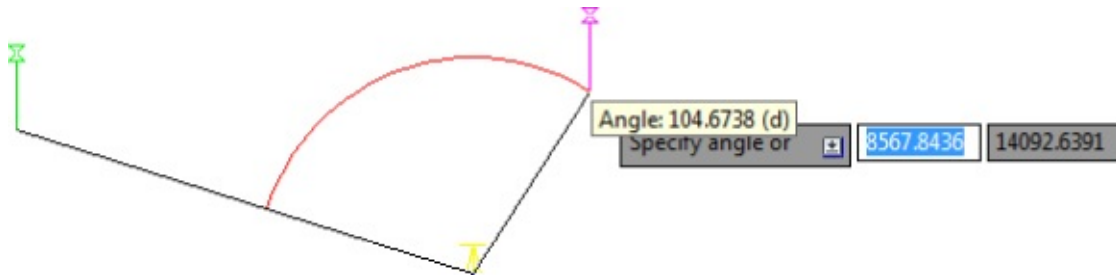backsight direction, a turned angle, and then a distance ([Figure 1.34](#)). By default this command assumes the angle-right surveying convention (clockwise from starting direction). However, an option to turn counterclockwise is offered at the command line if needed.




[Figure 1.34](#) The tooltip for the Create Line By Angle command

Create Line By Deflection Command



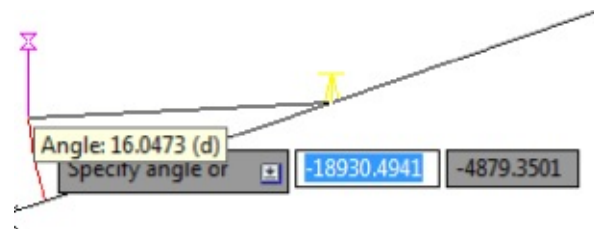By definition, a *deflection angle* is the amount of angular deviation (usually measured clockwise) from a backsight direction. In other words, 180 added to a given deflection angle would be an equivalent angle-right. When you use the Create Line By Deflection command, the command line and tooltips prompt you for a deflection angle followed by a distance ([Figure 1.35](#)).



[Figure 1.35](#) The tooltip for the Create Line By Deflection command

Create Line By Station/Offset Command



To use the Create Line By Station/Offset command, you must have a Civil 3D Alignment object in your drawing. The line created from this command allows you to start and end a line on the basis of a station and offset from an alignment.

You're prompted to choose the alignment and then input a station and offset value. The line *begins* at the station and offset value. You will not see a line form until at least two points are specified.

When prompted for the station, you're given a tooltip that tracks your position along the alignment, as shown in [Figure 1.36](#). You can graphically choose a station location by clicking it in the drawing. Alternatively, you can enter a station value on the command line.

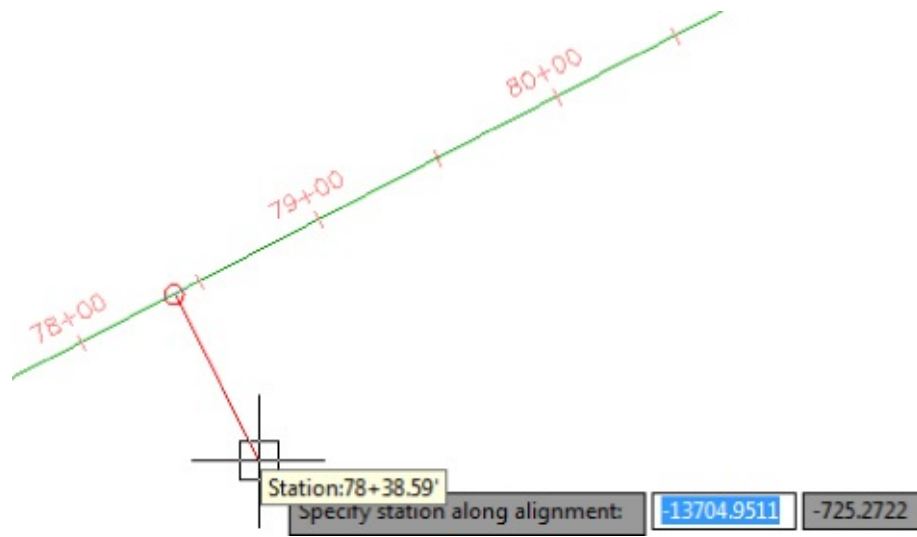


Figure 1.36 The Create Line By Station/Offset command provides a tooltip for you to track stationing along the alignment.

Once you've selected the station, you're given a tooltip that is locked on that particular station and tracks your offset from the alignment (see [Figure 1.37](#)). You can graphically choose an offset by clicking the station in the drawing, or you can type an offset value on the command line. A negative value for offset indicates an offset on the left side of the alignment.

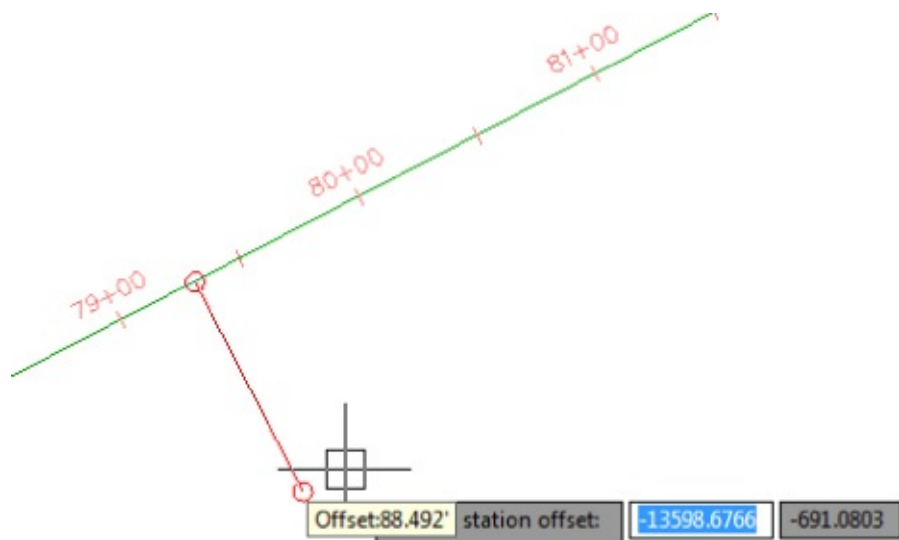


Figure 1.37 The Create Line By Station/Offset command provides a tooltip that helps you track the offset from the alignment.

Create Line By Side Shot Command



The Create Line By Side Shot command starts by asking you to select a line (or two points) that will be the backsight creating a new line. After you select the first line, you will see a yellow glyph indicating your occupied point (see [Figure 1.38](#)). By default, Civil 3D is looking for an angle-right and distance to establish the first point of the new line. However, you can follow the command prompts to change the angle entry to bearing, deflection, or azimuth, if needed. You can also use the command-line options to change to counterclockwise.

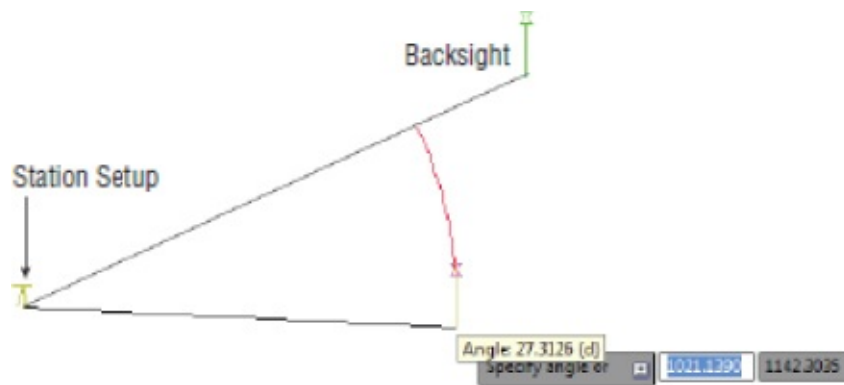


Figure 1.38 The tooltip for the Create Line By Side Shot command tracks the angle, bearing, deflection, or azimuth of the side shot.

Once you have entered data for the first point, you will be asked a second time for an angle and a distance to place the second point of the new line.

Create Line By Extension Command



The Create Line By Extension command is similar to the AutoCAD Lengthen command. This command allows you to add length to a line or specify a desired total length of the line. [Figure 1.39](#) shows the summary report that will pop up indicating the changes made to the line.

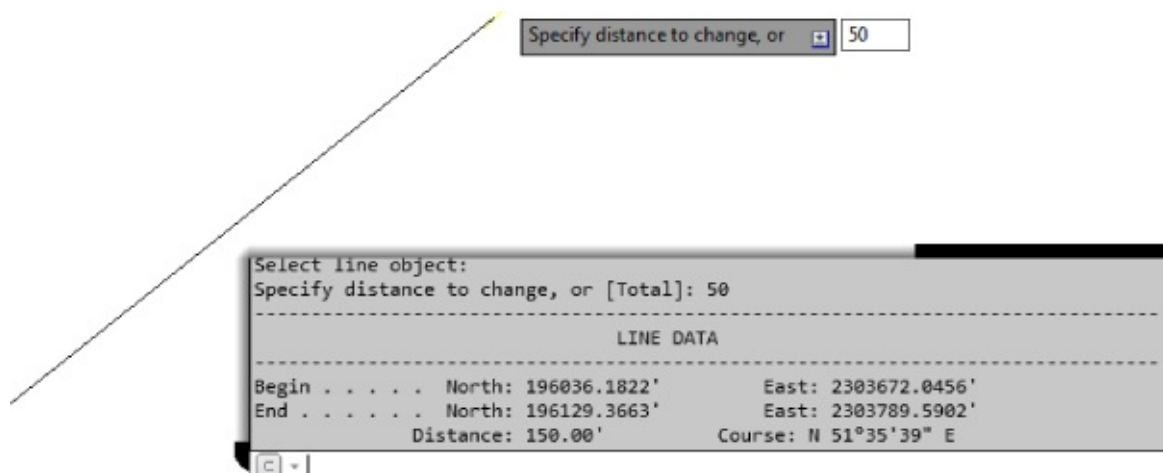


Figure 1.39 The Create Line By Extension command provides a summary of the changes to the line.

The advantage of the Create Line By Extension command over simply using the Lengthen command is the summary report that appears at the command line. The summary report shown in [Figure 1.40](#) shows the same beginning coordinate as in [Figure 1.39](#) but a different end coordinate, resulting in a total length of 100' (30.5 m).

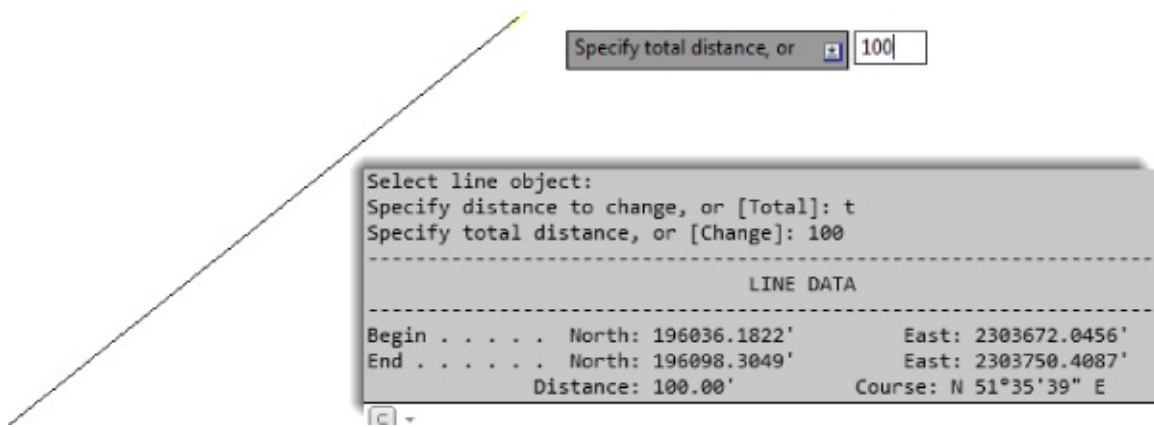


Figure 1.40 The summary report on a line where the command specified a total distance

Create Line From End Of Object Command



The Create Line From End Of Object command lets you draw a line tangent to the end of a line or arc (but not polyline) of your choosing, as shown in [Figure 1.41](#).

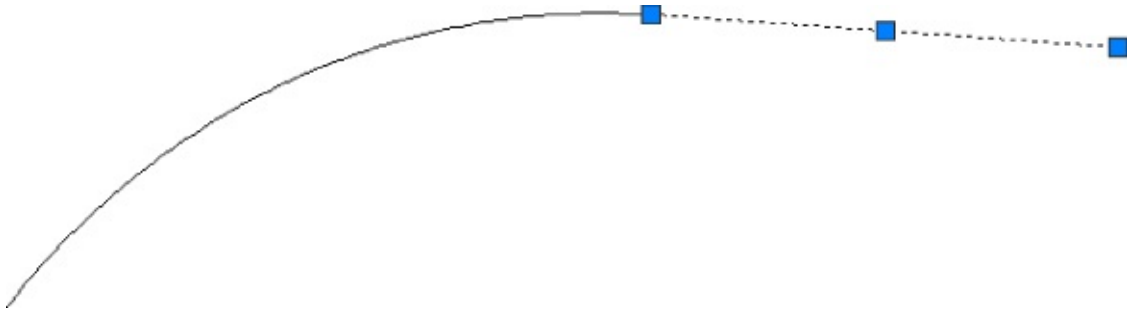


Figure 1.41 The Create Line From End Of Object command lets you add a tangent line to the end of an arc.

Create Line Tangent From Point Command



The Create Line Tangent From Point command is similar to the Create Line From End Of Object command, but Create Line Tangent From Point allows you to choose a point of tangency that isn't the endpoint of the line or arc. Use the Nearest or Midpoint Osnap to pick a point on the line. If you pick an endpoint, the command behaves the same as Create Line From End Of Object.

Create Line Perpendicular From Point Command



Using the Create Line Perpendicular From Point command, you can specify that you'd like a line drawn perpendicular to any point of your choosing along a line or arc. In the example shown in [Figure 1.42](#), a line is drawn perpendicular to the endpoint of the arc.



Figure 1.42 A perpendicular line is drawn from the endpoint of an arc using the Create Line Perpendicular From Point command.

Re-creating a Deed Using Line Tools

The upcoming exercise will help you apply some of the tools you've learned so far to reconstruct the overall parcel.

When you open up the file for the exercise, you will see a legal description with the following information (the metric file will have different lengths, of course):

From the POINT OF BEGINNING at a location of N 186156.65', E 2305474.07'
Thence, S 11° 45' 41.4" E for a distance of 693.77 feet to a point on a line.
Thence, S 73° 10' 54.4" W for a distance of 265.45 feet to a point on a line.
Thence, S 05° 59' 04.4" E for a distance of 185.89 feet to a point on a line.
Thence, S 45° 55' 02.4" W for a distance of 68.73 feet to a point on a line.
Thence, N 06° 04' 37.0" W for a distance of 217.80 feet to a point on a line.
Thence, N 73° 21' 22.5" E for a distance of 4.22 feet to a point on a line.
Thence, N 06° 04' 51.6" W for a distance of 200.14 feet to a point on a line.
Thence, S 87° 32' 10.4" W for a distance of 121.22 feet to a point on a line.
Thence, N 02° 25' 32.2" W for a distance of 168.91 feet to a point on a line.
Thence, N 15° 38' 57.5" E for a distance of 283.16 feet to a point on a line.
Thence, N 06° 19' 22.4" W for a distance of 79.64 feet to a point on a line.
N 76° 55' 49.8" E a distance of 250.00 feet Returning to the POINT OF BEGINNING;
Containing 5.58 acres (more or less)

Follow these steps (note that the legal description for metric users is located in the DWG file as text):

1. Open the 0106_Legal.dwg (0106_Legal_METRIC.dwg) file, which you can download from this book's web page at www.sybex.com/go/masteringcivil3d2015.
2. Turn off dynamic input by pressing F12 if it is enabled.
3. From the Draw panel on the Home tab of the ribbon, select the Line drop-down and choose the Create Line By Bearing command.
4. At the Select first point: prompt, use endpoint object snap to snap to the arrow head of the note indicating POB.
5. At the >>Specify quadrant (1-4): prompt, enter 2 to specify the SE quadrant, and then press ↵.
6. At the >>Specify bearing: prompt, enter 11.45414, and press ↵.
7. At the >>Specify distance: prompt, enter 693.77' (211.4615 m), and press ↵.
8. Repeat steps 5 through 7 for the rest of the courses and distances.
9. Press Esc twice to exit the creation workflow to exit the Create Line By Bearing command.

The finished linework should look like [Figure 1.43](#).

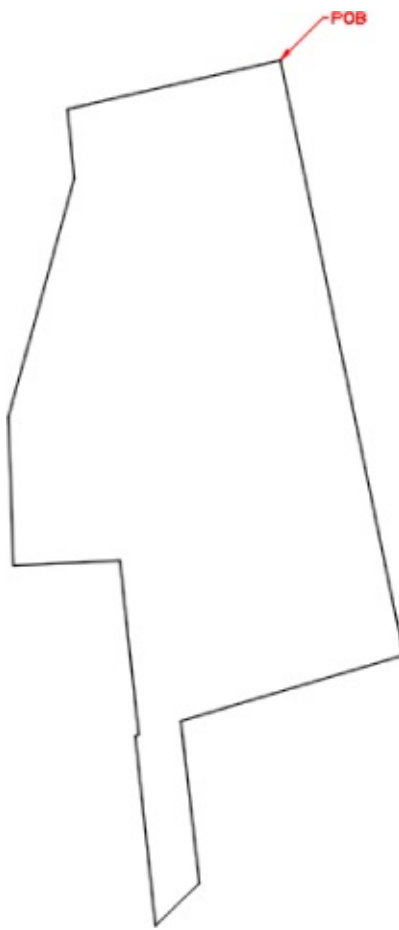


Figure 1.43 The finished linework

10. Save your drawing. You'll need it for the next exercise.

Creating Curves

Curves are an important part of surveying and engineering geometry. The curves you create in this chapter are no different from AutoCAD arcs. What make the curve commands unique from the basic AutoCAD commands isn't the resulting arc entity but the inputs used to draw the arc. Civil 3D wants you to provide directions to the arc commands using land surveying terminology rather than with generic Cartesian parameters. [Figure 1.44](#) shows the Create Curves menu options.


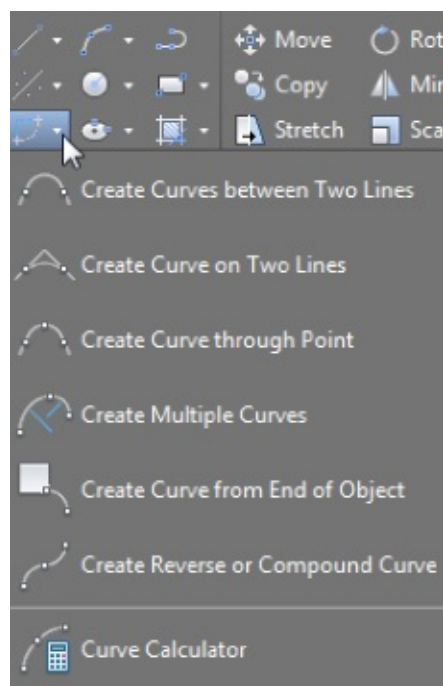


Figure 1.44 Create Curves commands

Standard Curves

When re-creating legal descriptions for roads, easements, and properties, users such as engineers, surveyors, and mappers often encounter a variety of curves. Although standard AutoCAD arc commands could draw these arcs, the AutoCAD arc inputs are designed to be generic to all industries. The following curve commands have been designed to provide an interface that more closely matches land surveying, mapping, and engineering language.

 Create Curve Between Two Lines Command



The Create Curve Between Two Lines command is similar to the AutoCAD Fillet command, except that by using this tool you also have other options to define a curve besides using the radius. The command draws a curve that is tangent to two lines of your choosing. This command also trims or extends the original tangents so their endpoints coincide with the curve endpoints. The lines are trimmed or extended to the resulting PC (point of curve, which is the beginning of a curve) and PT (point of tangency, or the end of a curve). You may find this command most useful when you're creating foundation geometry for road alignments, parcel boundary curves, and similar situations.

The command prompts you to choose the first tangent and then the second tangent. The command line gives the following prompt:

```
Select entry [Tangent/External/Degree/Chord/Length/Mid-ordinate  
min-dist/Radius]<Radius>:
```

Pressing \leftarrow at this prompt lets you input your desired radius. As with standard AutoCAD commands, pressing T changes the input parameter to Tangent, pressing C changes the input parameter to Chord, and so on.

As with the Fillet command, your inputs must be geometrically possible. For example, your two lines must allow for a curve of your specifications to be drawn while remaining tangent to both. [Figure 1.45](#)

shows two lines with a 25' (7.6 m) radius curve drawn between them. Note that the tangents have been trimmed so their endpoints coincide with the endpoints of the curve. If either line is too short to meet the endpoint of the curve, then the software returns a no solution result and you will need to adjust the length of the line.



Figure 1.45 Two lines using the Create Curve Between Two Lines command

Create Curve On Two Lines Command

**Certification
Objective**

The Create Curve On Two Lines command is identical to the Create Curve Between Two Lines command, except that in this case the tangents are not trimmed on curve creation.



Figure 1.46, for example, shows two lines with a 25' (7.6 m) radius curve drawn on them. The tangents haven't been trimmed and instead remain exactly as they were drawn before the Create Curve On Two Lines command was executed.



Figure 1.46 The original lines stay the same after you execute the Create Curve On Two Lines command.

Create Curve Through Point Command



The Create Curve Through Point command lets you choose two tangents for your curve followed by a pass-through point. This tool is most useful when you don't know the radius, length, or other curve parameters but you have two tangents and a target location. It isn't necessary that the pass-through location be a true point object; it can be any location of your choosing.

This command also trims or extends the original tangents so their endpoints coincide with the curve endpoints. The lines are trimmed or extended to the resulting PC and PT of the curve.

Figure 1.47, for example, shows two lines and a desired pass-through point. Using the Create Curve Through Point command allows you to draw a curve that is tangent to both lines and that passes through the desired point. In this case, the tangents have been trimmed to the PC and PT of the curve.



Figure 1.47 The first image shows two lines with a desired pass-through point. In the second image, the Create Curve Through Point command draws a curve that is tangent to both lines and passes through the chosen point.

Create Multiple Curves Command



The Create Multiple Curves command lets you create several curves that are tangentially connected. The resulting curves have an effect similar to an alignment spiral section. This command can be useful when you are re-creating railway track geometry based on field-survey data.

The command prompts you for the two tangents. Then, the command line prompts you as follows:

Enter Number of Curves:

The command allows for up to 10 curves between tangents.

One of your curves must have a flexible length that's determined on the basis of the lengths, radii, and geometric constraints of the other curves. Curves are counted clockwise, so enter the number of your flexible curve:

Enter Floating Curve #:

Enter curve 1 Radius:

Enter curve 2 Radius:

Enter curve 2 Length:

The floating curve number will prompt you for a radius but not a length.

As with all other curve commands, the specified geometry must be possible. If the command can't find a solution on the basis of your length and radius inputs, it returns no solution (see [Figure 1.48](#)).

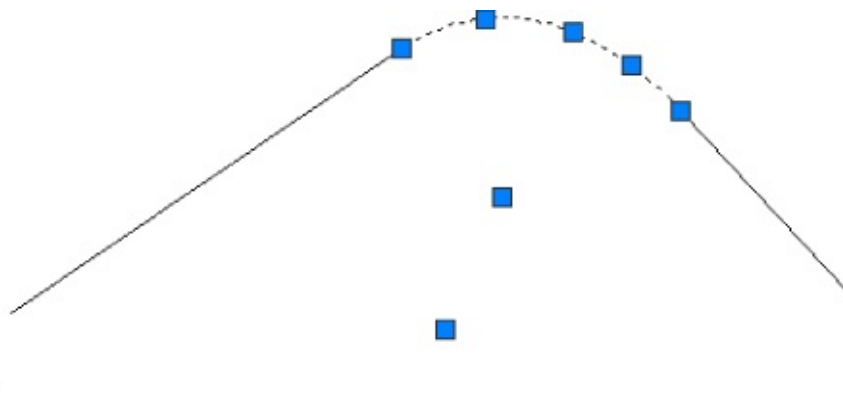


Figure 1.48 Two curves were specified with the #2 curve designated as the floating curve.

Create Curve From End Of Object Command



The Create Curve From End Of Object command enables you to draw a curve tangent to the end of

your chosen line or arc.

The command prompts you to choose an object to serve as the beginning of your curve. You can then specify a radius or a point for the way the curve will be defined. If a point is selected, then the curve will automatically be drawn ending at the selected point in the drawing. If a radius is selected, then you have the option to specify the radius or let the software determine the radius based on the arc's degree or the chord's degree. Finally, you can define its length by using an additional parameter (such as Delta or Length) (see [Figure 1.49](#)).

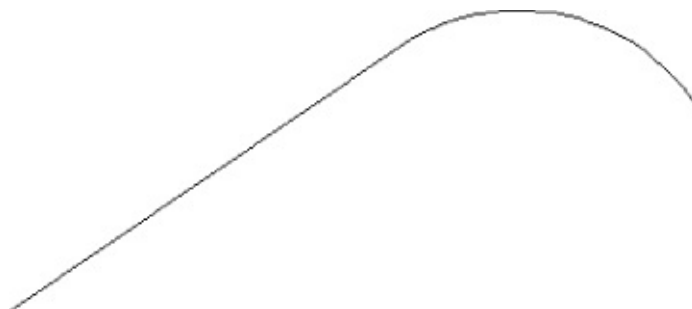


Figure 1.49 A curve, with a 25' (7.6 m) radius and a 30' (9.1 m) length, drawn from the end of a line

Create Reverse Or Compound Curve Command



The Create Reverse Or Compound Curve command allows you to add additional curves to the end of an existing curve. Reverse curves are drawn in the opposite direction (that is, a curve to the right tangent to a curve to the left) from the original curve to form an S shape. In contrast, compound curves are drawn in the same direction as the original curve (see [Figure 1.50](#)). This tool can be useful when you are re-creating a legal description of a road alignment that contains reverse and/or compound curves.



Figure 1.50 A tangent and curve before adding a compound curve (left); a reverse curve drawn from the end of the original curve (right)

The Curve Calculator



Certification Objective Sometimes you may not have enough information to draw a curve properly. Although many of the curve-creation tools assist you in calculating the curve parameters, you may find an occasion where the deed you're working with is incomplete.



The Curve Calculator found in the Curves drop-down on the Draw panel helps you calculate a full collection of curve parameters on the basis of your known values and constraints. It can also be found as part of the Transparent Commands toolbar that is discussed later in this chapter.

The Curve Calculator can remain open on your screen while you're working through commands. You can send any value in the Calculator to the command line by clicking the button next to that value (see [Figure](#)

1.51).

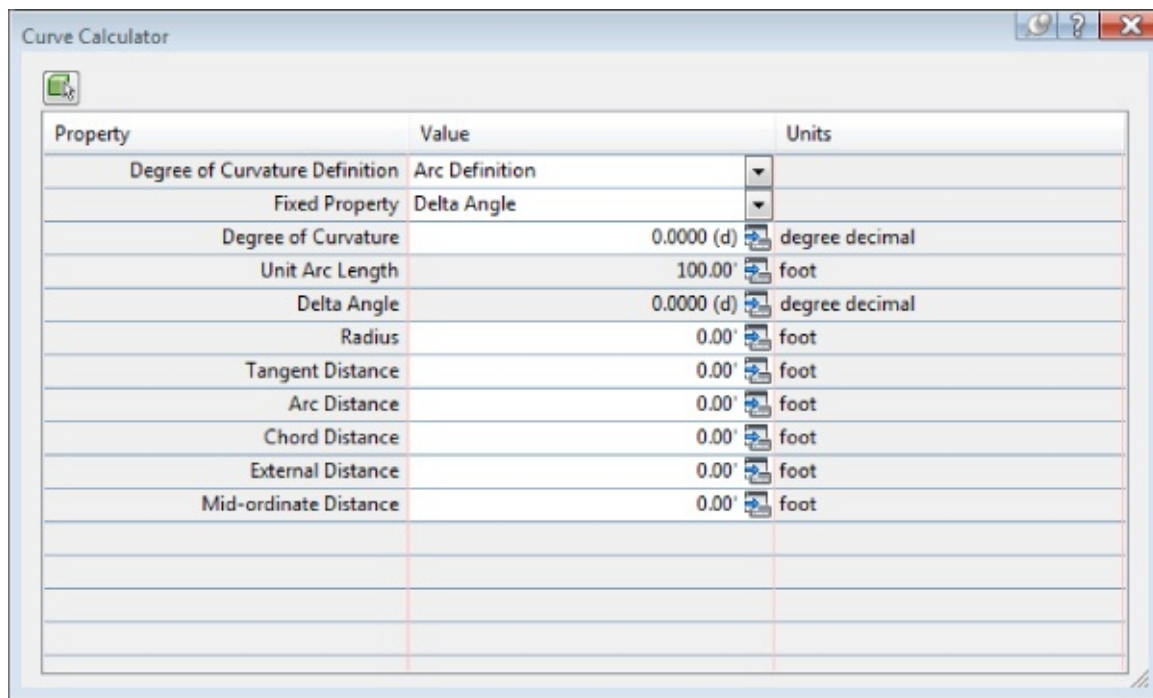



Figure 1.51 The Curve Calculator

The button at the upper left of the Curve Calculator allows you to pick an existing arc in the drawing, and the drop-down menu in the Degree Of Curvature Definition selection field allows you to choose whether to calculate parameters for an arc or a chord definition.


The drop-down menu in the Fixed Property selection field also gives you the choice of fixing your radius or delta angle when calculating the values for an arc or a chord, respectively. The parameter chosen as the fixed value is held constant as additional parameters are calculated.



 To send any value in the Curve Calculator to the command line, use the button next to that value. This ability is most useful while you're active in a curve command and would like to use a certain parameter value to complete the command.

To test your new line and curve knowledge, follow these steps. (You do not need to have completed the previous exercises to complete this one.)



1.  Continue working in the file 0106_Legal.dwg (0106_Legal_METRIC.dwg).
2. Start the Line By Northing/Easting command.
3. For Northing, enter **184898.42** (**56357.038** for metric users) and press \downarrow .
4. For Easting, enter **2305136.46** (**702605.593** for metric users) and press \downarrow .

You will not see any graphic indication that the line has been started. You will not see the segment until after you complete step 5.

5. You will again be prompted for Northing and Easting. Using the same procedure you used in step 2, type in the endpoint of the line at Northing = **185059.94** (**56406.270** for metric users), Easting = **2305413.52** (**702690.041** for metric users).
6. Press Esc once to end the Northing and Easting entry. Press Esc again to exit the line command. To

look at everything you have drawn until now you can zoom to extents.



7. Start the Create Curve From End Of Object command.
8. You are then prompted to select the Line or Arc object. Pan to the left, and click the east end of the line you created in steps 2–5.

You will then be prompted to select the entry.

9. Press \leftarrow to select the default Radius option.
10. Enter a Radius value of **550'** (**167.6 m**), and press \leftarrow .

Next you will see the Select entry [Tangent/Chord/Delta/Length/External/Mid-ordinate] <Length>: prompt.

11. Enter **D** (for Delta) and press \leftarrow .
12. Enter a delta angle of **40** and press \leftarrow . (Note: The degree symbol is not needed in angular entry.)

You should now have an arc tangent to the first segment.



13. Return to the Curves menu and select Create Reverse Or Compound Curve.
14. Select the arc you created in the previous steps.
15. When prompted with Select [Compound/Reverse] <Compound>:, press **R** and then \leftarrow to specify a reverse curve.
16. Enter a radius of **630'** (**192.0 m**) and press \leftarrow .
17. When you see the prompt Select entry [Tangent/Chord/Delta/Length/External/Mid-ordinate] <Length>:, press \leftarrow to accept the default.
18. Enter a length of curve value of **400'** (**121.9 m**), and press \leftarrow .



19. For the last tangent segment, return to the Lines menu and select Create Line From End Of Object.
20. Select the east end of the second arc you created in this exercise.
21. At the Specify Distance: prompt, enter **150'** (**45.7 m**) and press \leftarrow .

Your completed lines and arcs will look like [Figure 1.52](#), and they will be located just south of the property you entered in the previous exercise. You can check the result against the completed exercise as found on the book's web page and named 0106_Legal_FINISHED.dwg (0106_Legal_METRIC_FINISHED.dwg).

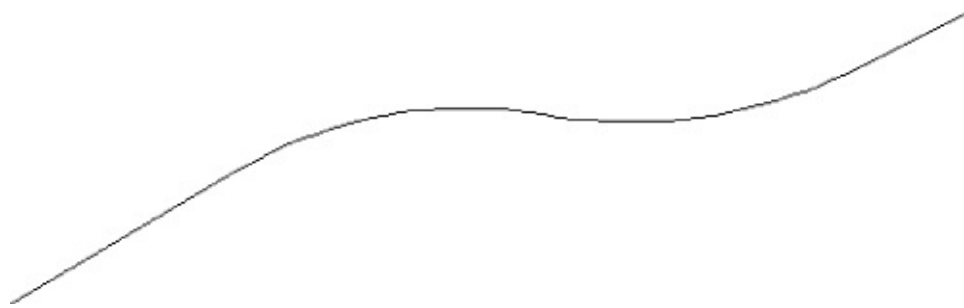


Figure 1.52 Lines and arcs of the completed exercise

Best Fit Entities

AutoCAD Civil 3D provides many tools for relating surveyed information to a graphic. Best fit tools like the ones in the following sections perform analysis on different types of irregular geometry to create uniform shapes (see [Figure 1.53](#)). Similar tools are available for alignment creation, as discussed in Chapter 6, “Alignments.”


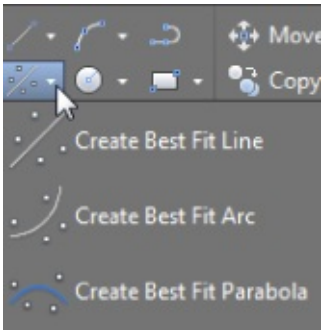


Figure 1.53 The Create Best Fit menu options

 Create Best Fit Line Command



The Create Best Fit Line command under the Best Fit drop-down on the Draw panel takes a series of Civil 3D points, AutoCAD points, entities, or drawing locations and draws a single best-fit line segment on the selected input. In [Figure 1.54](#), the Create Best Fit Line command draws a best-fit line through a series of points that aren't quite collinear. The best-fit line will adjust as more points are selected.

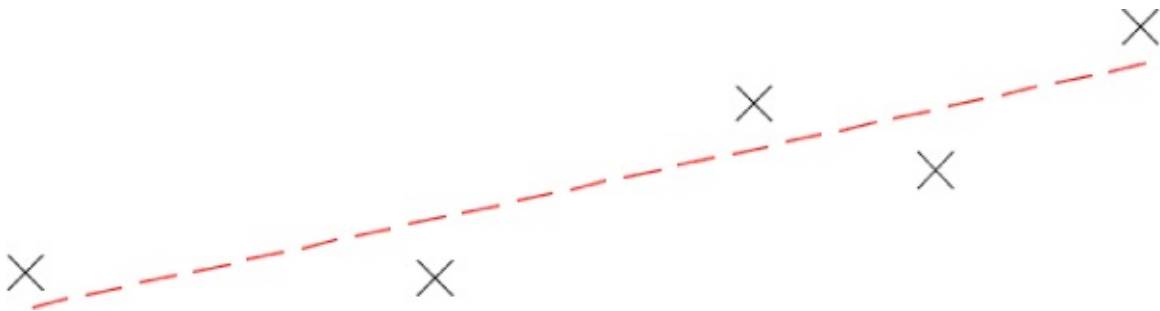


Figure 1.54 A preview line drawn through points that are not collinear

After you press Enter to complete the selection, a Panorama window appears with a regression data chart showing information about each point in the selection, as shown in [Figure 1.55](#).

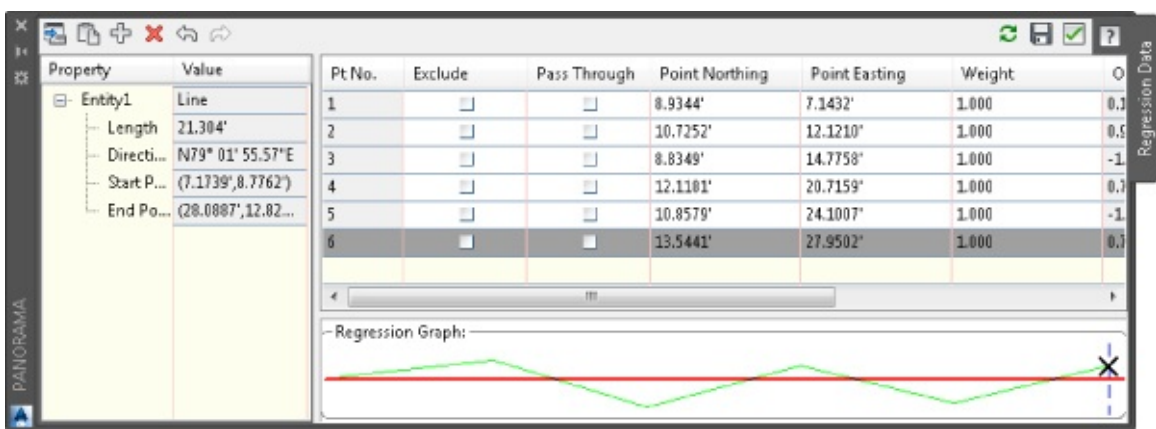


Figure 1.55 The Panorama window lets you optimize your best fit.

This interface allows you to optimize your best-fit element by adding more points, excluding points, selecting the check box in the Pass Through column to force one of your points on the line, or adjusting the value under the Weight column based on how important each point position should be in the definition of the element relative to the other points.

Create Best Fit Arc Command



The Create Best Fit Arc command on the Best Fit drop-down works the same as the Create Best Fit Line command, including the Panorama adjustment window, except that the resulting entity is a single arc segment as opposed to a single line segment (see [Figure 1.56](#)).

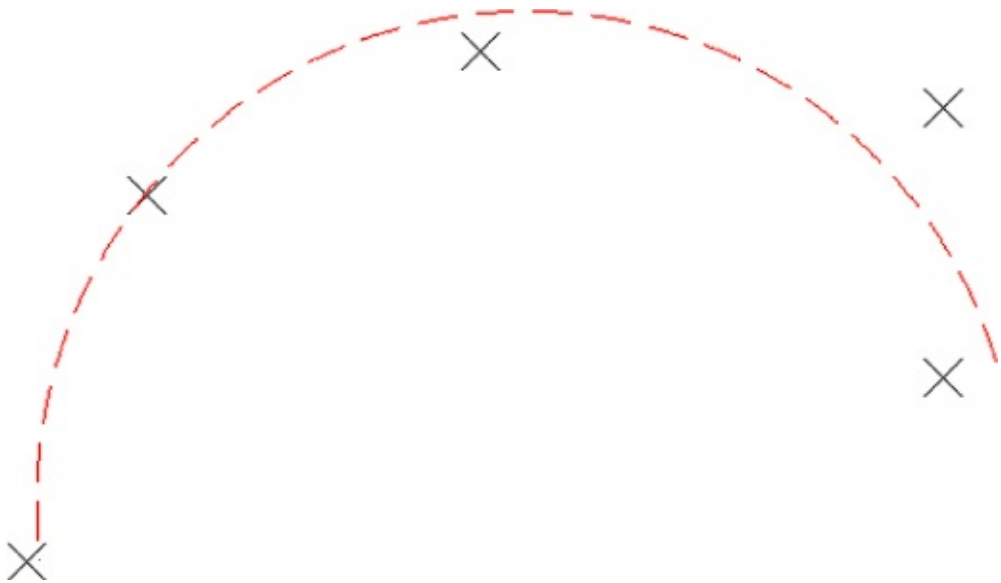


Figure 1.56 Preview of the curve created by best fit

Create Best Fit Parabola Command



The Create Best Fit Parabola command on the Best Fit drop-down is similar to the line and arc commands in how it works. After you select this command, the Parabola By Best Fit dialog appears (see [Figure 1.57](#)).

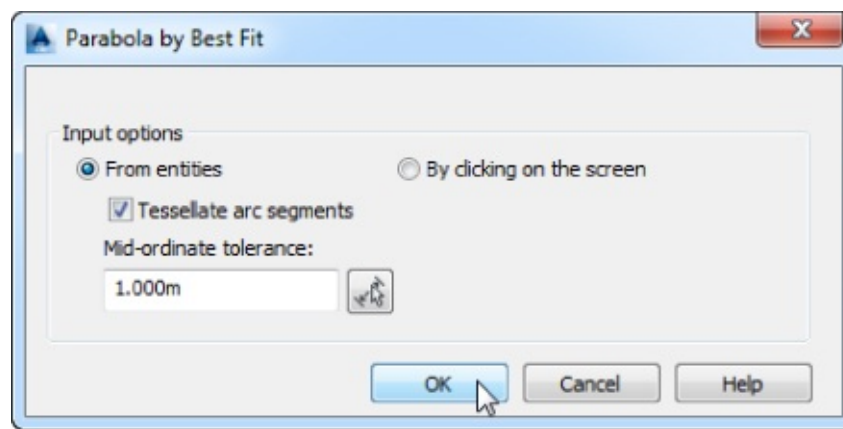


Figure 1.57 The Parabola by Best Fit dialog

You can select inputs from entities (such as lines, arcs, polylines, or profile objects) or by clicking onscreen. The command then draws a best-fit parabola on the basis of this information. In [Figure 1.58](#), the shots were represented by AutoCAD points; more points were added by selecting the By Clicking On The Screen option and using the Node Osnap to pick each point.

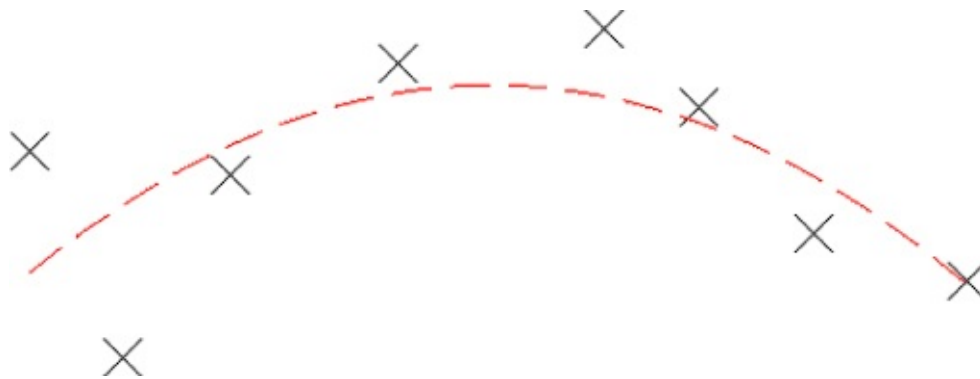


Figure 1.58 The best-fit preview line updates as more points are picked.

Once you've selected your points, a Panorama window (shown in [Figure 1.59](#)) appears, showing information about each point you chose. Also note the information in the left pane regarding K value, curve length, grades, and so forth. You can optimize your K value, length, and other values by adding more points, selecting one or more check boxes in the Pass Through column to force one of your points on the line, or adjusting the values under the Weight column.

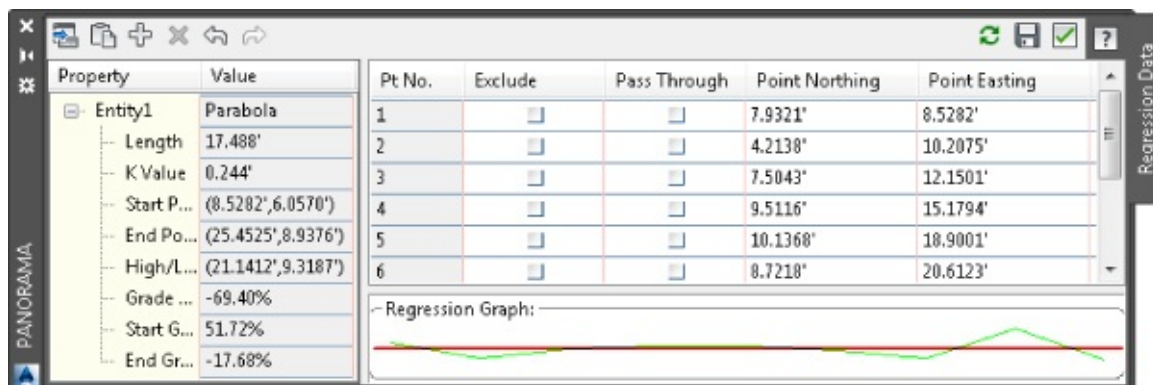


Figure 1.59 The Panorama window lets you make adjustments to your best-fit parabola.

Attach Multiple Entities

The Attach Multiple Entities command that can be called out in the command line as `attachmultiple` is a combination of the Line From End Of Object command and the Curve From End Of Object command.

Each entity created with this tool is tangent to the previous segment. Using this command saves you time because you don't have to switch between the Line From End Of Object command and the Curve From End Of Object command (see [Figure 1.60](#)).

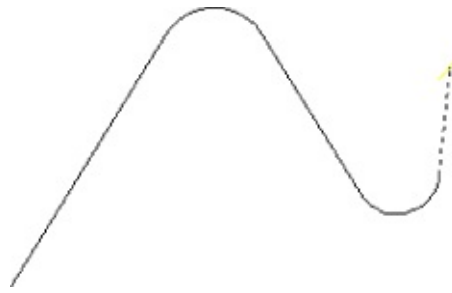


Figure 1.60 The Attach Multiple Entities command draws a series of lines and arcs so that each segment is tangent to the previous one.

Adding Line and Curve Labels



In Civil 3D the dynamic and intelligent labeling is not limited to Civil 3D objects alone. You can add dynamic linked labels to basic AutoCAD elements like lines and curves. These labels share the most common properties of the labels used for other Civil 3D objects such as parcels and alignments.

Our next exercise leads you through labeling the deed you entered earlier in this chapter:

1. Open the file 0107_Legal_Labels.dwg (0107_Legal_Labels_METRIC.dwg), which can be downloaded from the book's web page.



2. On the Annotate tab of the ribbon, choose Labels And Tables Panel > Add Labels.

The Add Labels dialog appears.

3. Choose Line And Curve from the Feature drop-down menu.

Your Add Labels dialog will look similar to [Figure 1.61](#).

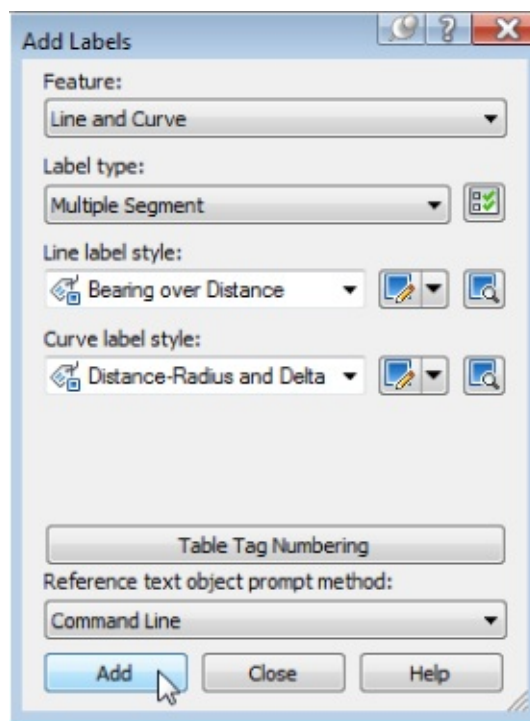


Figure 1.61 The Add Labels dialog, with Label Type set to Multiple Segment

4. Choose Multiple Segment from the Label Type drop-down menu.

The Multiple Segment option places the label at the midpoint of each selected line or arc.

5. Confirm that Line Label Style is set to Bearing Over Distance and that Curve Label Style is set to Distance-Radius And Delta (as shown in [Figure 1.61](#)).
6. Click the Add button.
7. At the `Select Entity:` prompt, select each line from the deed and the lines and arcs that you drew in the previous exercises.

A label appears on each entity at its midpoint, as shown in [Figure 1.62](#).



Figure 1.62 The labeled linework

8. Save the drawing and close it. You can check the result of your drawing against the completed file found on the web page for the book and named 0107_Legal_Labels_FINISHED.dwg (0107_Legal_Labels_METRIC_FINISHED.dwg).

The use of these labels does not stop at lines and curves; they can be used on polylines as well. Based on the selection of a single segment or multiple segments, Civil 3D can apply the labels to a single segment on the polyline or all segments of the polyline, assigning the specific label to lines and curves that define the polyline.

Using Transparent Commands

You might be surprised to know that you have already been using a form of the transparent commands if you tried to use, for example, the Line By Point # Range command or the Line By Bearing command. That's because each of those commands is a variation of the line command with a transparent command already built in.

Transparent commands are “helper” commands that make base AutoCAD input more surveyor- and civil designer–friendly. Transparent commands can be used only when another command is in progress. They are “commands within commands” that allow you to choose your input based on the available data you have to provide.

For example, you may have a plat whose information you are trying to input into AutoCAD. You may need to insert a block at a specific northing and easting. While the Line command has a built-in option for Northing Easting, the Insert command does not, and a transparent command will help you. In this case, you would start the Insert command with the Specify On Screen option checked. Before you click to place the block in the graphic, click the Northing Easting transparent command. The command line will then walk

you through placing the block at your desired location.

While a transparent command is active, you can press Esc once to leave transparent mode but stay active in your current command. You can then choose another transparent command if you'd like. For example, you can start a line using the Endpoint Osnap, activate the Angle Distance transparent command, draw a line-by-angle distance, and then press Esc, which takes you out of angle-distance mode but keeps you in the line command. You can then draw a few more segments using the Point Object transparent command, press Esc, and finish your line with a Perpendicular Osnap.

You can activate the transparent commands using keyboard shortcuts or the Transparent Commands toolbar. Be sure you include the Transparent Commands toolbar (shown in [Figure 1.63](#)) in all your Civil 3D and survey-oriented workspaces.












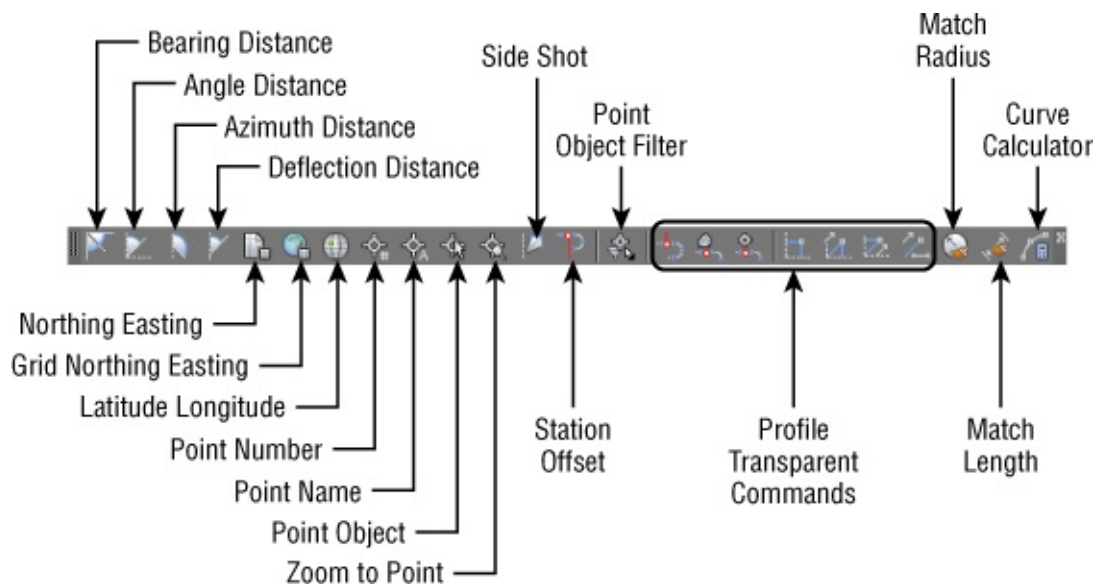




Figure 1.63 The Transparent Commands toolbar

The seven profile-related transparent commands will be covered in Chapter 7.

Standard Transparent Commands


Certification Objective The transparent commands shown in [Table 1.2](#) can be called out within any AutoCAD or Civil 3D draw command, such as a line, polyline, alignment, parcel segment, feature line, or pipe-creation command.

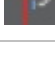
Table 1.2 The transparent commands used in plan view

Tool Icon	Menu Command	Key-In	Tool Icon	Menu Command	Key-In
	Angle Distance	'AD		Latitude Longitude	'LL
	Bearing Distance	'BD		Point Number	'PN
	Azimuth Distance	'ZD		Point Name	'PA
	Deflection Distance	'DD		Point Object	'PO
	Northing Easting	'NE		Zoom To Point	'ZTP
	Grid Northing Grid Easting	'GN		Side Shot	'SS
	Station Offset	'SO			

Matching Transparent Commands



You may have construction or other geometry in your drawing that you'd like to match with new lines, arcs, circles, alignments, parcel segments, or other entities.

 While actively drawing an object that has a radius parameter, such as a circle, an arc, an alignment curve, or a similar object, you can choose the Match Radius transparent command and then select an object in your drawing that has your desired radius. Civil 3D draws the resulting entity with a radius identical to that of the object you chose during the command.

 The Match Length transparent command works the same as the Match Radius transparent command except that it matches the length parameter of your chosen object.

Some people find working with transparent commands awkward at first. It feels strange to move your mouse away from the drawing area and click an icon while another command is in progress. If you prefer, each transparent command has a corresponding command-line entry.

Try a few transparent commands to get the feel for how they operate:

1. Open the drawing 0108_Transparent_Commands.dwg (0108_Transparent_Commands_METRIC.dwg).
2.  On the Home tab of the ribbon, click the Draw flyout > 3DPOLY.
3.  From the Transparent Commands toolbar, click the Point Number Transparent command.
4. At the Enter Point Number prompt, type **100-112** and press ↵.
The 3D polyline will connect the points in the drawing.
5. Press Esc once.
Notice that you are now back in the 3D polyline command with no transparent commands active.
6. Press Esc a second time.
This will exit the 3D polyline command.



7. On the Insert tab ➤ Block panel select the Insert tool.
8. From the Name pull-down, select the block Fire Hydrant 01.
You do not need to browse because this block is already defined in this example drawing.
9. Check the Specify On-Screen option for Insertion Point.
10. Uncheck the Explode option.
11. Verify that your settings match what is shown in [Figure 1.64](#), and click OK.

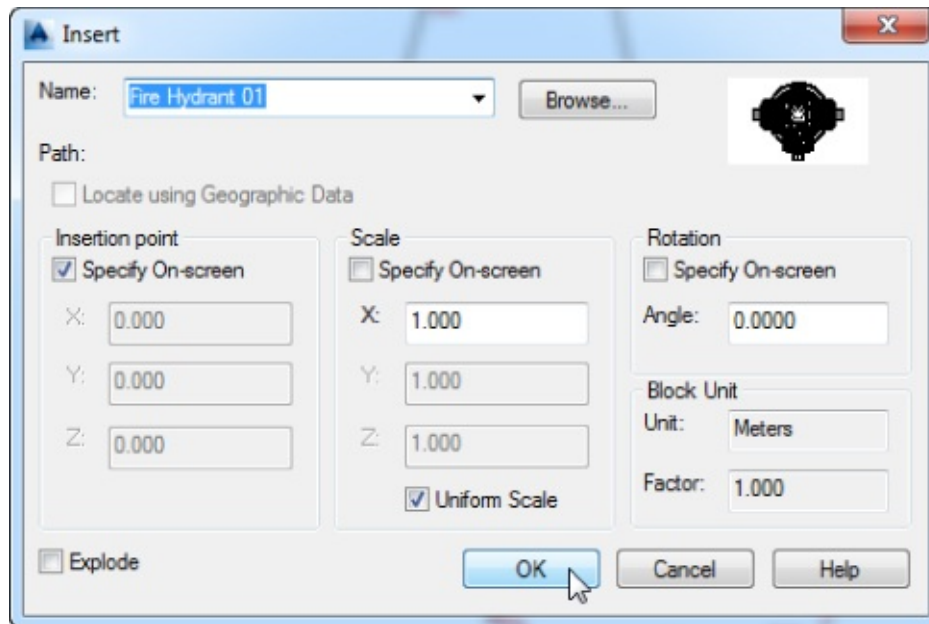


Figure 1.64 Using the Insert command to place a block



2. At the Specify insertion point: prompt, select the Station Offset transparent command.
You are then prompted to select an alignment.
3. Click the alignment to the south of the site. (Hint: Be sure to click the green line rather than the labels.)
4. At the Specify station along alignment: prompt, enter **450'** (175 m) and press ↵.
5. At the Specify station offset: prompt, enter **-30'** (-10 m) and press ↵.

You should now see the fire hydrant symbol at the specified station, on the left of the alignment. You can go ahead and save the drawing, and you can compare the final result against the completed file as found on the web page for the book under the name 0108_Transparent_Commands_FINISHED.dwg (0108_Transparent_Commands_METRIC_FINISHED.dwg).

The Bottom Line

Find any Civil 3D object with just a few clicks. By using Prospector to view object data collections, you can minimize the panning and zooming that are part of working in a CAD program. When common subdivisions can have hundreds of parcels or a complex corridor can have dozens of alignments, jumping to the desired one nearly instantly shaves time off everyday tasks.

Master It Open 0103_Example.dwg (0103_Example_METRIC.dwg) from

www.sybex.com/go/masteringcivil3d2015, and find parcel number 6 without using any AutoCAD commands or scrolling around on the drawing screen.

Modify the drawing scale and default object layers. Civil 3D understands that the end goal of most drawings is to create hard-copy construction documents. When you set a drawing scale, Civil 3D removes a lot of the mental gymnastics that other programs require when you're sizing text and symbols. When you set object layers for the entire drawing, Civil 3D makes uniformity of drawing files easier than ever to accomplish.

Master It Continue working in the file 0103_Example.dwg (0103_Example_METRIC.dwg). It is not necessary to have completed the previous exercise to continue. Zoom to extents and change the Annotation scale in the Model tab from the 50-scale drawing to a 100-scale drawing. (For metric users, change the scale from 1:250 to 1:1000.)

Navigate the ribbon's contextual tabs. As with AutoCAD, the ribbon is the primary interface for accessing Civil 3D commands and features. When you select an AutoCAD Civil 3D object, the ribbon displays commands and features related to that object. If several object types are selected, the Multiple contextual tab is displayed.

Master It Continue working in the file 0103_Example.dwg (0103_Example_METRIC.dwg). It is not necessary to have completed the previous exercise to continue. Using the ribbon interface, access the Alignment properties for QuickStart Alignment and rename it Existing CL.

Create a curve tangent to the end of a line. It's rare that a property stands alone. Often, you must create adjacent properties, easements, or alignments from their legal descriptions.

Master It Open the drawing MasterIt_0101.dwg (MasterIt_0101_METRIC.dwg). Create a curve tangent to the east end of the line labeled in the drawing. The curve should meet the following specifications:

- Radius: 200.00' (60 m)
- Arc Length: 66.58' (20 m)

Label lines and curves. Although converting linework to parcels or alignments offers you the most robust labeling and analysis options, basic line- and curve-labeling tools are available when conversion isn't appropriate.

Master It Add line and curve labels to each entity created in MasterIt_0101.dwg or MasterIt_0101_METRIC.dwg. It is recommended that you complete the previous exercise so you will have a curve to work with. Choose a label that specifies the bearing and distance for your lines and length, radius, and delta of your curve. Check your final result against the completed file found on the book's web page named MasterIt_0101_FINISHED.dwg (MasterIt_0101_METRIC_FINISHED.dwg).

Chapter 2

Survey


The Autodesk® AutoCAD® Civil 3D® software supports a collaborative workflow in many aspects of the design process but especially in the survey realm. Accurate data starts outdoors. A survey that has been consistently and correctly coded in the field can save hours of drafting time. Surveyors can collect line information for such things as swales, curbs, or even pavement markings and communicate this digitally to data collectors.


Civil 3D can often eliminate the need for third-party survey software because it can download and process survey data directly from a data collector. To enter data in a manner that is easily digested by Civil 3D, your survey process should incorporate the information from this chapter.

In this chapter, you will learn to

- Properly collect field data and import it into Civil 3D
- Set up description key and figure databases
- Translate surveys from assumed coordinates to known coordinates
- Perform traverse analysis

Setting Up the Databases

 Before any project-specific data is imported, you should do a bit of initial setup to improve the translation between the field and the office. For this chapter you will need to see your Survey tab in Toolspace. If you do not see this tab, click the Survey button on the Home tab > Palettes panel.

 Your survey database defaults, equipment database, linework code set, and the figure prefix database should be in place before you import your first survey. You can find the location of these files by going to Toolspace > Survey tab and clicking the Survey User Settings button in the upper-left corner of the palette. The dialog shown in [Figure 2.1](#) opens.

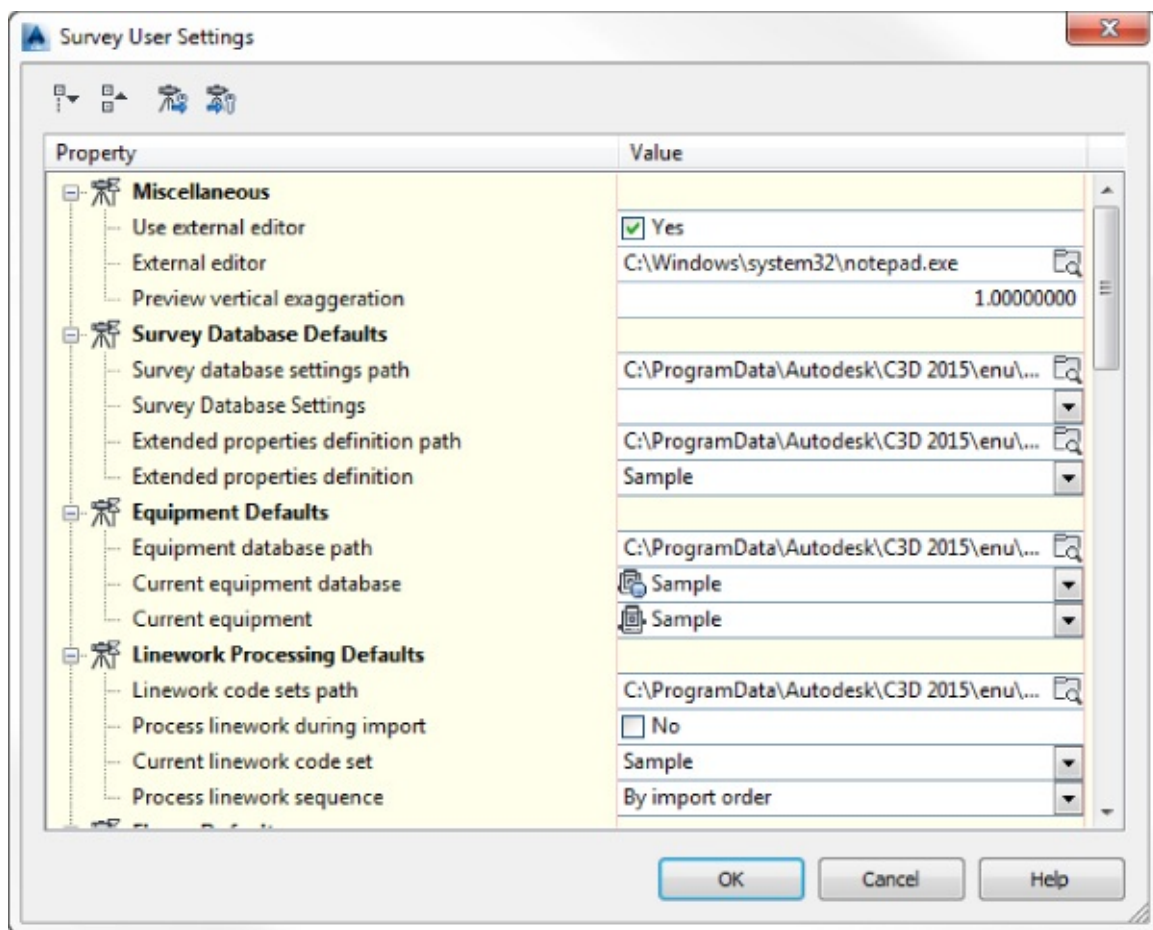


Figure 2.1 Survey User Settings dialog

The survey database settings path points to the locations of the equipment database, figure prefix database, and linework code sets. Note that these files are separate from the Civil 3D template. These databases are separate files that reside in `C:\ProgramData\Autodesk\C3D 2015\enu\Survey\` by default. It is common practice to place these files on a network server so your organization can share them. These paths can be set during the software installation process. Otherwise, change the paths in the Survey User Settings dialog on each individual computer and they will “stick” regardless of which drawing you have open.

Survey Database Defaults

Every survey database that is created for a project has settings that you will need to examine and verify. To create a new survey database for a project, click the Import Survey Data button from the Home tab of the ribbon or right-click Survey Databases from **Toolspace** > **Survey** tab and select New Local Survey Database.

Once the new database is created, you will be able to edit its properties, as outlined in the upcoming exercise. The Survey Database Settings dialog contains these settings:

Units Most likely, the Units setting is the only one you will ever need to modify in the Survey Database Settings dialog. Pay close attention to the units (Imperial versus US Foot) if you choose not to select a master coordinate zone. This section is where you set your master coordinate zone for the database. Potentially, your drawing and your incoming survey data may have different coordinate systems. If you insert any information stored in the database into a drawing with a different coordinate zone, the program will automatically translate that data to the drawing coordinate zone (upon initial import only). Your coordinate zone units will lock in the distance units in the Units section. Although

usually not necessary, you can also set the angle, direction, temperature, and pressure specific to the survey database here.

Precision This section is where you define and store the precision information of angles, distance, elevation, coordinates, and latitude and longitude specific to the database. Note that this affects display precision for the survey interface and is independent from label precision and drawing precision set in the Drawing Settings dialog discussed in Chapter 1, “The Basics.”

Measurement Type Defaults This section lets you tell Civil 3D what type of information to expect when importing survey data from a file. The information can be measurement types, such as angle type, distance type, vertical type, and target type.

Measurement Corrections This section is used to define the methods (if any) for correcting measurements. You will probably not need to change anything in this section because most data collectors will have processed this for you.

Traverse Analysis Defaults This section is where you choose what type(s) of traverse analysis you want to perform. You can control the method you wish to use and required precision and tolerances for each. There are four types of 2D traverse analysis methods: Compass Rule, Transit Rule, Crandall Rule, and Least Squares Analysis.

There are three potential types of 3D traverse analyses: Length Weighted Distribution, Equal Distribution, and Least Squares Vertical. Vertical options for Least Squares will be available only if it is first set as the Horizontal Adjustment Method. Of course, you can always choose None to omit that calculation from the analysis.

Least Squares Analysis Defaults If you are performing a Least Squares analysis, you must specify 2-Dimensional or 3-Dimensional adjustment type. Use 3-Dimensional if you are performing both horizontal and vertical Least Squares adjustment.

Survey Command Window In the rare event that you'll need it, the Survey Command window is the interface for manual survey tasks and for running survey batch files. This section lets you define the default settings for this window.

Error Tolerance Set tolerances for the survey database in this section. If you perform an observation more than one time and the tolerances established here are not met, an error will appear in the Survey Command window and you will be asked what action you want to take.

Extended Properties You may work with LandXML files that contain information beyond traditional “P,N,E,Z,D” data. If this is the case, you will want to turn both Extended Properties options to Yes. Create New Definitions Automatically will add extended properties to your survey database and populate the fields from the imported file. Display Warnings For Missing Required Fields will display the panorama if there is missing information in the imported file.

Change Reporting It is a great idea to turn this option to Yes by setting Logging Enabled to Yes. This will create an audit trail of changes to the database that occur after import. The changes to the database are stored in a LOG file (*.log) located in the same directory as your survey database. At any time, you can access the contents of the log by right-clicking the name of the survey database and selecting Display Change Report.

When you first configure your survey database settings, it is a good idea to create a test database for setting the defaults. Because survey database settings are independent of which drawing you are in, you can perform these steps with any file open. To create the test database, follow these steps:

1. In the Toolspace > Survey tab, right-click Survey Databases.
2. Select Set Working Folder.

Civil 3D will create a working folder to contain your survey database. Ideally, this will be stored in a network location for your organization's projects. For examples in this book, this will be set to your local C drive.
3. Verify that the C:\Civil 3D Projects folder is highlighted and click OK.
4. In the Toolspace > Survey tab, right-click Survey Databases and choose New Local Survey Database.
5. Name the new database **Test**, and click OK to continue.
6. Right-click the new Test database and select Edit Survey Database Settings.
7. Set your desired defaults for units, precision, and other options, as shown in [Figure 2.2](#).

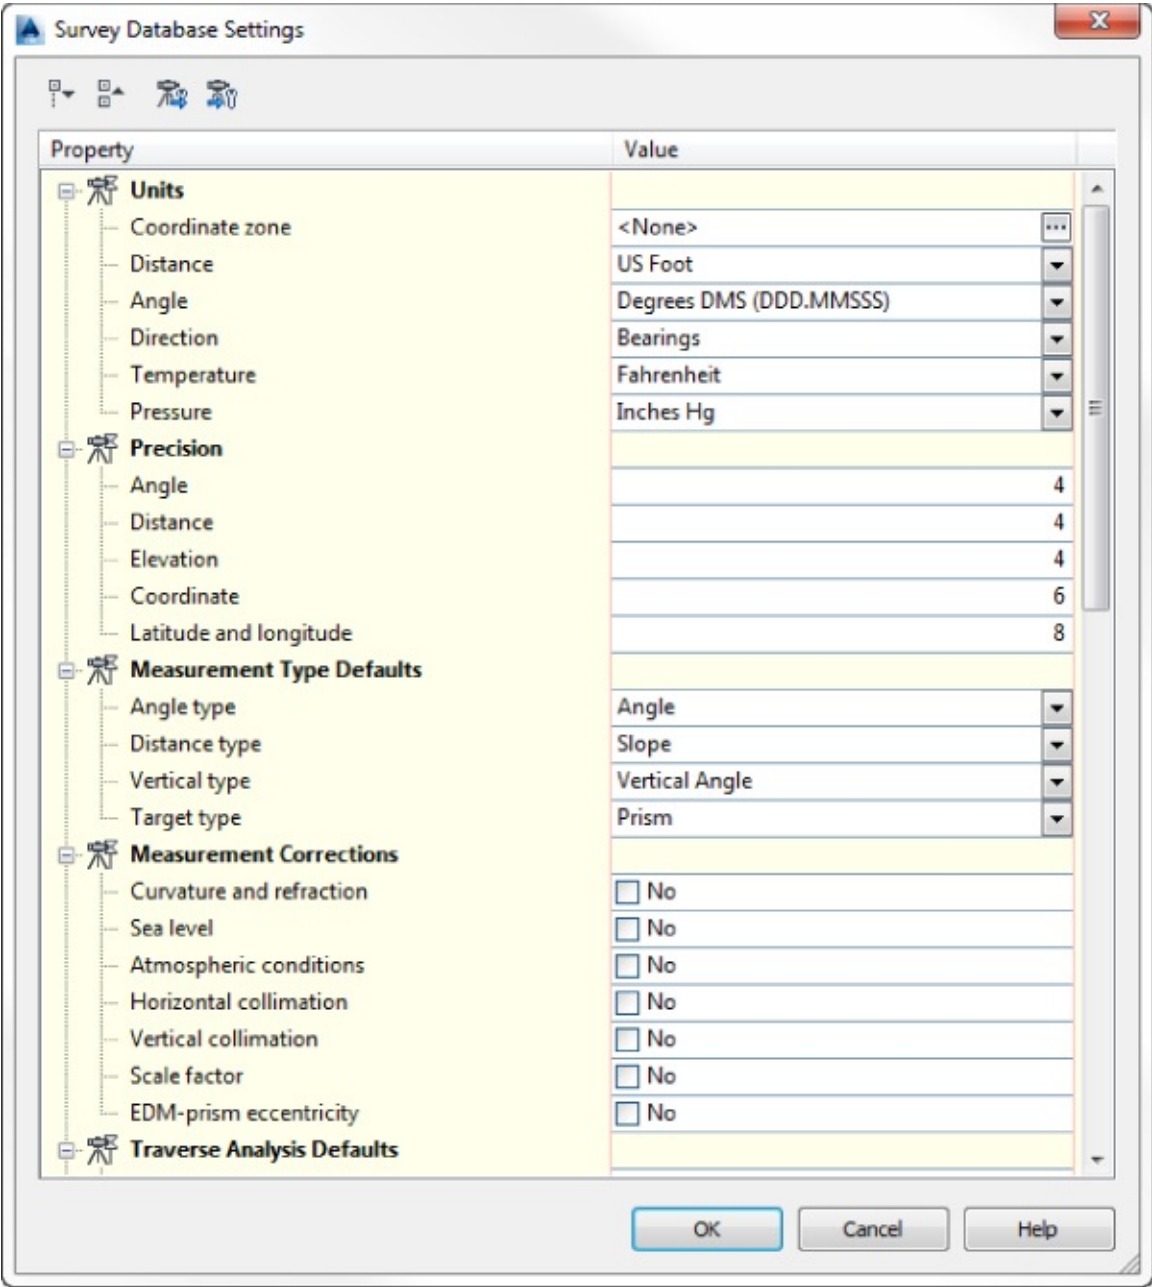



Figure 2.2 Survey Database Settings dialog

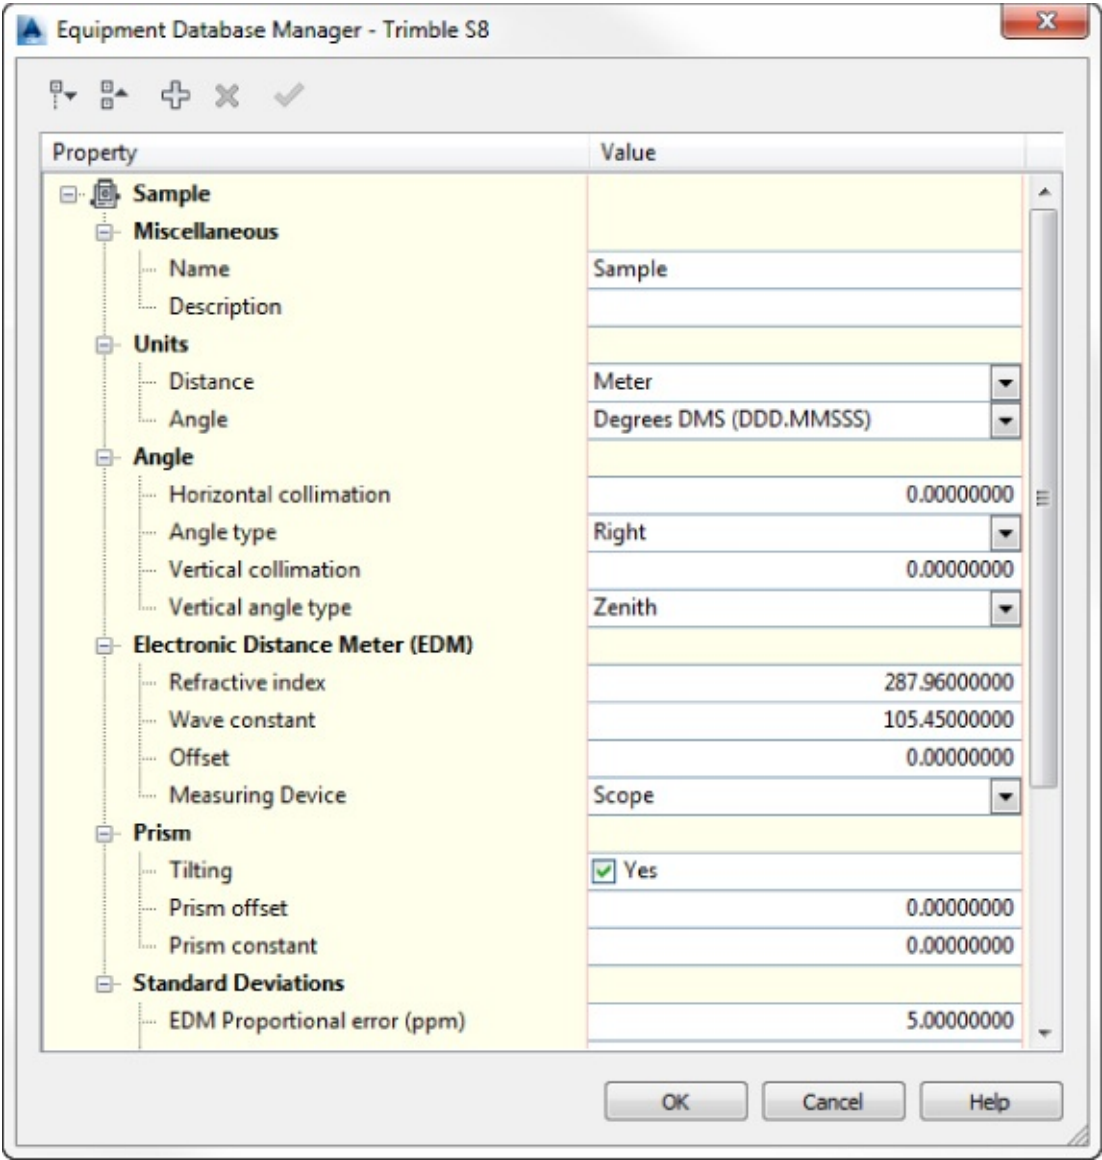
8.  Click the Export Settings To A File button.

9. Save the settings to the folder specified in the Survey User Settings dialog (see [Figure 2.1](#)) as `MySettings.sdb_set` and then click OK.

To delete your Test database, you will need to close the database from the Survey tab. To do so, locate the database in **Toolspace > Survey tab**. Right-click it and select **Close Survey Database**. Using Windows Explorer, you can then browse to the working folder containing the database and delete it. There is no way to delete a survey database from within the software.

The Equipment Database

 The equipment database is where you set up the various types of survey equipment that you are using in the field. Doing so allows you to apply the proper correction factors to your traverse analyses when it is time to balance your traverse. Civil 3D comes with a sample piece of equipment for you to inspect to see what information you will need when it comes time to create your equipment. The Equipment Database Manager dialog provides all the default settings for the sample equipment in the equipment database. On the Survey tab of Toolspace, expand **Equipment Databases**, right-click **Sample**, and click **Manage Equipment Database** to access this dialog, shown in [Figure 2.3](#).



The Equipment Database Manager dialog for the Trimble S8 instrument. The left pane shows a tree structure with expandable sections: Sample, Miscellaneous, Units, Angle, Electronic Distance Meter (EDM), Prism, and Standard Deviations. The right pane displays the corresponding settings for each section.

Property	Value
Sample	
Miscellaneous	
Name	Sample
Description	
Units	
Distance	Meter
Angle	Degrees DMS (DDD.MMSSS)
Angle	
Horizontal collimation	0.00000000
Angle type	Right
Vertical collimation	0.00000000
Vertical angle type	Zenith
Electronic Distance Meter (EDM)	
Refractive index	287.96000000
Wave constant	105.45000000
Offset	0.00000000
Measuring Device	Scope
Prism	
Tilting	<input checked="" type="checkbox"/> Yes
Prism offset	0.00000000
Prism constant	0.00000000
Standard Deviations	
EDM Proportional error (ppm)	5.00000000

Buttons: OK, Cancel, Help

Figure 2.3 Use Equipment Database Manager.

[Figure 2.3](#) shows the settings for a specific model of total station—the Trimble S8. When you input this data to an equipment database, consult your instrument's datasheet for specifications. The specifics of

total station equipment will vary by manufacturer and model.

You will want to create your own equipment entries and enter the specifications for your particular total station. Add a new piece of equipment to the database by clicking the plus sign at the top of the Equipment Database Manager window. If you are unsure of the settings to enter, refer to the user documentation that you received when you purchased your total station.

The Figure Prefix Database

Certification Objective The figure prefix database is used to translate descriptions in the field to lines in CAD. These survey-generated lines are called *figures*. If a description matches a listing in the figure prefix database, the figure is assigned the properties and style dictated by the database (see [Figure 2.4](#)).

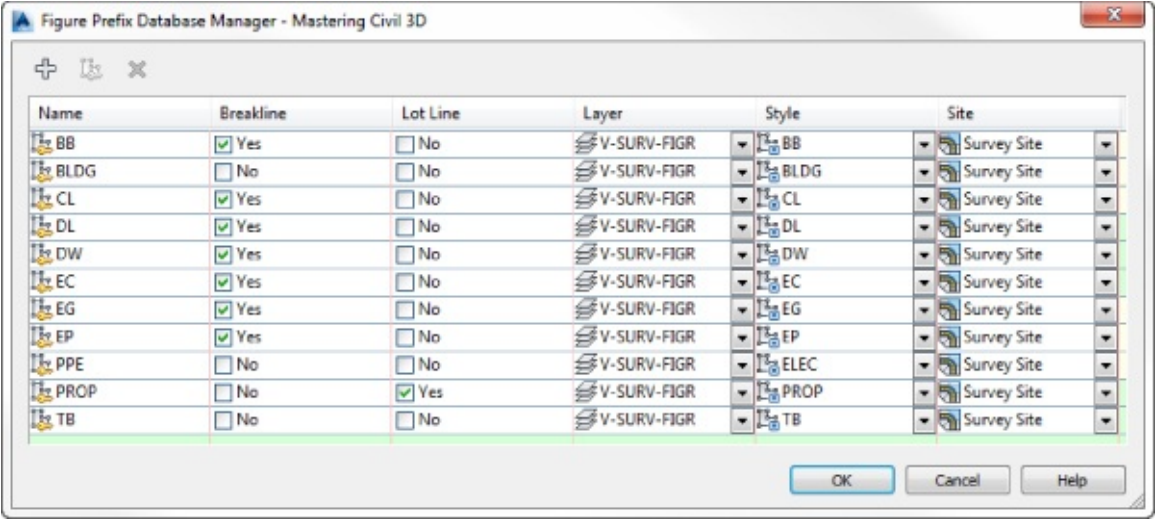


Figure 2.4 The Figure Prefix Database Manager

The Figure Prefix Database Manager contains these columns:

Name The figure name is important because it must match the description used by the surveyor in the imported survey file. For example, if the surveyor collects points along the back of curb using the description BC, then there must be a figure name called BC in the figure prefix database in order to create linework or figures with those points using the properties specified in the database. If the figure name doesn't match up with a figure prefix, the linework will be drawn using default settings specified on the Settings tab.

Breakline Placing a check mark in this column will allow you to flag a figure as a breakline. The most powerful use of this setting is the Create Breaklines command on the context menu of the Figures collection located within the survey database on the Toolspace > Survey tab. Figures with this setting on can be added to the definition of a surface model. Even if you don't flag a figure as a breakline, you can still add it to a surface model manually.

Lot Line This column specifies whether the figure should behave as a parcel segment. If a closed area is formed with figures of this kind, a parcel is formed automatically.

Layer This column specifies the insertion layer of the figure. If the layer already exists in the drawing, the figure will be placed on that layer. If the layer does not exist in the drawing, the layer will be created and the figure placed on the newly created layer. In the case of the latter, you may need to manually reset the layer properties so your figures display according to your standards. In the case where an incoming figure name doesn't match up with a figure prefix, the newly created figure will be

placed on the layer specified for Survey Figure on the Object Layer tab of Drawing Settings. Drawing Settings were discussed in Chapter 1.

Style This column specifies the style to be used for each figure. Figure styles will override color and linetype of the insertion layer if the style layer is set to something other than Layer 0. See the section on linear object styles in Chapter 19, “Object Styles,” for more information on this type of style.

Site This column specifies which site the figures should reside on when inserted into the drawing. As with previous settings, if the site exists in the drawing, the figure will be inserted into that site. If the site does not exist in the drawing, a site will be created with that name and the figure will be inserted into the newly created site.

Remember that figure prefix databases are not drawing specific. The only reason a drawing is needed is to access the styles that the figures will use.

You'll explore these settings in a practical exercise:

1. Open the drawing 0201_SurveySetup.dwg or 0201_SurveySetup_METRIC.dwg, which you can download from this book's web page, www.sybex.com/go/masteringcivil3d2015.

This file contains the survey figure styles needed to complete this exercise.

2. In Toolspace > Survey tab, right-click Figure Prefix Databases and select New.

The New Figure Prefix Database dialog opens.

3. Enter **Mastering Civil 3D** in the Name text box, and click OK to dismiss the dialog.

If you expand the Figure Prefix Database listing, you will see the Mastering Civil 3D entry.

4. Right-click the newly created Mastering Civil 3D figure prefix database and select Manage Figure Prefix Database.

The Figure Prefix Database Manager will appear.

5. Select the white + symbol in the upper-left corner of the Figure Prefix Database Manager to create a new figure prefix.
6. Click the default name, Sample, and change the name of the figure prefix to **BB** (for Bottom of Bank).
7. Click the check box next to the word *No* in the Breakline column. This will turn into a Yes, indicating that it will contain the breakline property.

Leave the box in the Lot Line column unchecked so that the figure will not be treated as a parcel segment.

8. Under the Layer column, select V-SURV-FIGR.

9. Under the Style column, select BB.

10. Under the Site column, leave the name of the site set to Survey Site.

11.  Complete the figure prefix database with the values shown in [Table 2.1](#).

Table 2.1 Figure settings

Name	Breakline	Lot Line	Layer	Style	Site
BLDG	No	No	V-SURV-FIGR	BLDG	SURVEY SITE
CL	Yes	No	V-SURV-FIGR	CL	SURVEY SITE
DL	Yes	No	V-SURV-FIGR	DL	SURVEY SITE
DW	Yes	No	V-SURV-FIGR	DW	SURVEY SITE
EC	Yes	No	V-SURV-FIGR	EC	SURVEY SITE
EG	Yes	No	V-SURV-FIGR	EG	SURVEY SITE
EP	Yes	No	V-SURV-FIGR	EP	SURVEY SITE
PPE	No	No	V-SURV-FIGR	ELEC	SURVEY SITE
PROP	No	Yes	V-SURV-FIGR	PROP	SURVEY SITE
TB	No	No	V-SURV-FIGR	TB	SURVEY SITE


Hint: For figures with similar properties, select a figure definition already in the database and then use the Copy Figure Prefix button.

12. Click OK to dismiss the Figure Prefix Database Manager.

Keep this drawing open to use in the next portion of the exercise.

You can choose whether lines are automatically formed in the linework code set when they match one of these figure prefixes.

The Linework Code Set Database

 The linework code set ([Figure 2.5](#)) lists what designators are used to start, stop, continue, or add additional segments to lines. For example, the B code that is typically used to begin a line can be replaced with an S, RT can be simplified to R for a right turn, and PC and PT can be used to begin and end curves. Linework code sets allow a survey crew to customize their data-collection techniques based on methods used by various types of software not related to Civil 3D.

Linework Option: Begin on Figure Prefix Match

There is a setting in the linework code set called Automatic Begin On Figure Prefix Match (as you can see in [Figure 2.5](#)). If you select this option, lines will start when a shot description matches one of your figure prefixes (such as EP or CL in [Figure 2.4](#)), with no additional coding needed.

Depending on your survey department's method for picking up linework, Automatic Begin On Figure Prefix Match can be a good thing or a bad thing. If the survey crew has fastidiously collected each line with its own name, such as CL1, CL2, EP1, EP2, and so on, with no repeats, it can work well. If they use start and stop codes but reuse line names throughout the survey, it can produce figures that connect unintentionally.

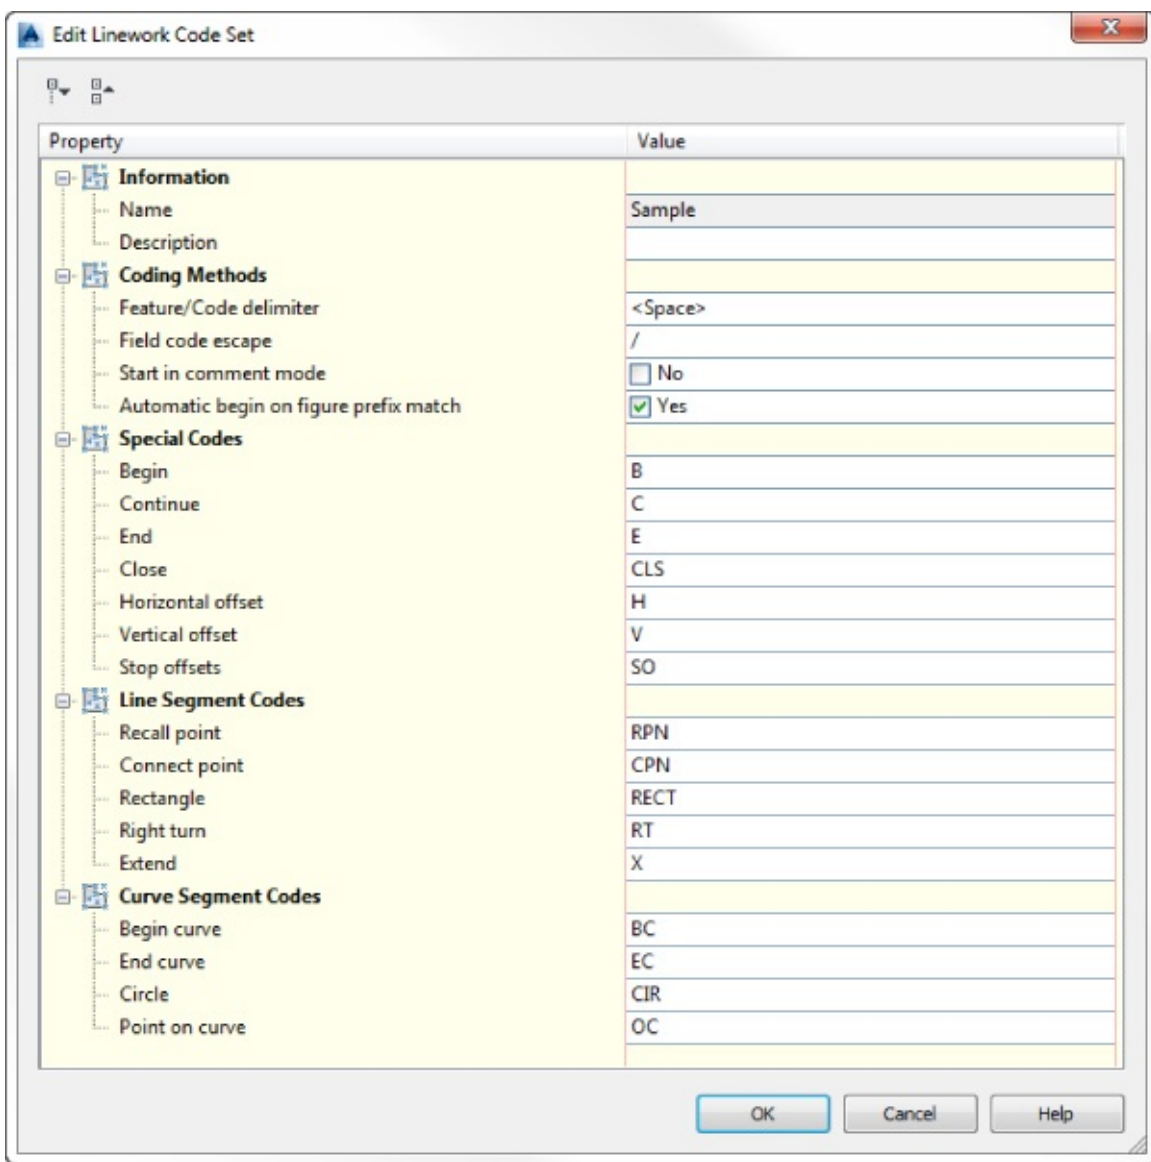


Figure 2.5 The Edit Linework Code Set dialog

Configuring Description Keys for Point Import

Certification Objective

Description keys bridge the gap between the field and the office. Unlike the linework code set and figure prefix database, which are each external files, description keys should be created and saved in your Civil 3D template. *The description key set* is a listing of field descriptions and parameters that control how points look and behave once they are imported into or manually created in Civil 3D.

For example, a surveyor collects a point with the description FH to indicate a fire hydrant. When the file is imported into Civil 3D either through the survey database or by point import from a text file (as you will do in Chapter 3, “Points”), it will be checked against the description key set. If FH exists in the list, as it is in [Figure 2.6](#), then the styles, format, layer, and several other parameters are applied to the point as it is placed in the drawing.

Code	Style	Point Label Style	Format	Layer	Scale Parameter	Fixed Scale Fac...	Use draw
BB*	<input checked="" type="checkbox"/> Basic	<input checked="" type="checkbox"/> Elevation Only	\$*	<input checked="" type="checkbox"/> V-NODE-WATR	<input type="checkbox"/> Parameter 1	<input type="checkbox"/> 1.000	<input type="checkbox"/> No
BLDG*	<input checked="" type="checkbox"/> Linework	<input checked="" type="checkbox"/> None	\$*	<input checked="" type="checkbox"/> V-NODE-BLDG	<input type="checkbox"/> Parameter 1	<input type="checkbox"/> 1.000	<input type="checkbox"/> No
CL*	<input checked="" type="checkbox"/> Basic	<input checked="" type="checkbox"/> Elevation Only	\$*	<input checked="" type="checkbox"/> V-NODE-TOPO	<input type="checkbox"/> Parameter 1	<input type="checkbox"/> 1.000	<input type="checkbox"/> No
CMP*	<input checked="" type="checkbox"/> Linework	<input checked="" type="checkbox"/> Invert	\$*	<input checked="" type="checkbox"/> V-NODE-STRM	<input type="checkbox"/> Parameter 1	<input type="checkbox"/> 1.000	<input type="checkbox"/> No
CPP*	<input checked="" type="checkbox"/> Linework	<input checked="" type="checkbox"/> Invert	\$*	<input checked="" type="checkbox"/> V-NODE-STRM	<input type="checkbox"/> Parameter 1	<input type="checkbox"/> 1.000	<input type="checkbox"/> No
DL*	<input checked="" type="checkbox"/> Basic	<input checked="" type="checkbox"/> Elevation Only	\$*	<input checked="" type="checkbox"/> V-NODE-TOPO	<input type="checkbox"/> Parameter 1	<input type="checkbox"/> 1.000	<input type="checkbox"/> No
DW*	<input checked="" type="checkbox"/> Basic	<input checked="" type="checkbox"/> Elevation Only	\$*	<input checked="" type="checkbox"/> V-NODE-DRIV	<input type="checkbox"/> Parameter 1	<input type="checkbox"/> 1.000	<input type="checkbox"/> No
EC*	<input checked="" type="checkbox"/> Basic	<input checked="" type="checkbox"/> Elevation Only	\$*	<input checked="" type="checkbox"/> V-NODE-CONC	<input type="checkbox"/> Parameter 1	<input type="checkbox"/> 1.000	<input type="checkbox"/> No
EG*	<input checked="" type="checkbox"/> Basic	<input checked="" type="checkbox"/> Elevation Only	\$*	<input checked="" type="checkbox"/> V-NODE-GRVL	<input type="checkbox"/> Parameter 1	<input type="checkbox"/> 1.000	<input type="checkbox"/> No
EP*	<input checked="" type="checkbox"/> Basic	<input checked="" type="checkbox"/> Elevation Only	\$*	<input checked="" type="checkbox"/> V-NODE-ROAD	<input type="checkbox"/> Parameter 1	<input type="checkbox"/> 1.000	<input type="checkbox"/> No
FH*	<input checked="" type="checkbox"/> Hydrant (existing)	<input checked="" type="checkbox"/> Description On	\$*	<input checked="" type="checkbox"/> V-NODE-WATR	<input type="checkbox"/> Parameter 1	<input type="checkbox"/> 1.000	<input type="checkbox"/> No
GS*	<input checked="" type="checkbox"/> Linework	<input checked="" type="checkbox"/> Elevation Only	\$*	<input checked="" type="checkbox"/> V-NODE-TOPO	<input type="checkbox"/> Parameter 1	<input type="checkbox"/> 1.000	<input type="checkbox"/> No
GUY*	<input checked="" type="checkbox"/> Guy Wire	<input checked="" type="checkbox"/> None	\$*	<input checked="" type="checkbox"/> V-NODE-POWR	<input type="checkbox"/> Parameter 1	<input type="checkbox"/> 1.000	<input type="checkbox"/> No
HW*	<input checked="" type="checkbox"/> Headwall	<input checked="" type="checkbox"/> Invert	\$*	<input checked="" type="checkbox"/> V-NODE-STRM	<input type="checkbox"/> Parameter 1	<input type="checkbox"/> 1.000	<input type="checkbox"/> No
IPF*	<input checked="" type="checkbox"/> Iron Pin	<input checked="" type="checkbox"/> Description On	\$*	<input checked="" type="checkbox"/> V-NODE-PROP	<input type="checkbox"/> Parameter 1	<input type="checkbox"/> 1.000	<input type="checkbox"/> No
IRF*	<input checked="" type="checkbox"/> Iron Pin	<input checked="" type="checkbox"/> Description On	\$*	<input checked="" type="checkbox"/> V-NODE-PROP	<input type="checkbox"/> Parameter 1	<input type="checkbox"/> 1.000	<input type="checkbox"/> No
MB*	<input checked="" type="checkbox"/> Mailbox	<input checked="" type="checkbox"/> Description On	MAILBOX	<input checked="" type="checkbox"/> V-NODE-SITE	<input type="checkbox"/> Parameter 1	<input type="checkbox"/> 1.000	<input type="checkbox"/> No
PED*	<input checked="" type="checkbox"/> Telephone Pedestal	<input checked="" type="checkbox"/> Description On	T PED	<input checked="" type="checkbox"/> V-NODE-COMM	<input type="checkbox"/> Parameter 1	<input type="checkbox"/> 1.000	<input type="checkbox"/> No
PP*	<input checked="" type="checkbox"/> Power Pole	<input checked="" type="checkbox"/> Description On	\$+	<input checked="" type="checkbox"/> V-NODE-POWR	<input type="checkbox"/> Parameter 1	<input type="checkbox"/> 1.000	<input type="checkbox"/> No
PROP*	<input checked="" type="checkbox"/> Linework	<input checked="" type="checkbox"/> None	\$*	<input checked="" type="checkbox"/> V-NODE-PROP	<input type="checkbox"/> Parameter 1	<input type="checkbox"/> 1.000	<input type="checkbox"/> No
RCP*	<input checked="" type="checkbox"/> Linework	<input checked="" type="checkbox"/> Invert	\$*	<input checked="" type="checkbox"/> V-NODE-STRM	<input type="checkbox"/> Parameter 1	<input type="checkbox"/> 1.000	<input type="checkbox"/> No
TB*	<input checked="" type="checkbox"/> Linework	<input checked="" type="checkbox"/> Elevation Only	\$*	<input checked="" type="checkbox"/> V-NODE-TOPO	<input type="checkbox"/> Parameter 1	<input type="checkbox"/> 1.000	<input type="checkbox"/> No
TR*	<input checked="" type="checkbox"/> Tree	<input checked="" type="checkbox"/> Description On	\$1* \$2	<input checked="" type="checkbox"/> V-NODE-TREE	<input checked="" type="checkbox"/> Parameter 1	<input type="checkbox"/> 1.000	<input type="checkbox"/> No
TRANS*	<input checked="" type="checkbox"/> Transformer	<input checked="" type="checkbox"/> Description On	TRANSFORMER	<input checked="" type="checkbox"/> V-NODE-POWR	<input type="checkbox"/> Parameter 1	<input type="checkbox"/> 1.000	<input type="checkbox"/> No
WM*	<input checked="" type="checkbox"/> Water Meter	<input checked="" type="checkbox"/> Description On	\$*	<input checked="" type="checkbox"/> V-NODE-WATR	<input type="checkbox"/> Parameter 1	<input type="checkbox"/> 1.000	<input type="checkbox"/> No

Figure 2.6 Description key set

To access your description key set, you will need to expand Toolspace > Settings tab > Point > Description Key Sets.

Right-click, select Edit Keys, and the Description Key Editor will open (using the Panorama interface) with the following columns for you to edit:

Code The code is the raw description or field code entered by the person collecting or creating the points. The code works as an identifier for matching the point with the correct description key. Click inside this field to activate it, and then type your desired code. Wildcards are useful when more information is added to the shot in addition to the field code. Right-click an existing code to copy or create a new description key or delete an existing one.

Codes are case sensitive! The code fh is read differently from FH. A match to the description key set will not be made if the capitalization does not match perfectly.

Style Style refers to the point style that will be applied to points that meet the code criteria. Check the box, and then click inside the field to activate a point style selection dialog. By default, styles set here will take precedence over styles set elsewhere (unless overridden in a point group, see Chapter 3). For more information on creating or modifying point styles, see Chapter 19.

Point Label Style The point label style that will be applied to points that meet the code criteria. Check the box, and then click inside the field to activate a style selection dialog. By default, styles set here will take precedence over styles set elsewhere (unless overridden in a point group). For more information on creating or modifying point label styles, see Chapter 18, “Label Styles.”

Format The Format column can convert a surveyor's shorthand into something that is more drafter friendly. In Civil 3D terms, the Format column converts the *raw description* to the *full description*. The default of \$* means the raw description and full description will have the same value. You can also use \$+, which means that information after the main description will appear as the full description. In [Figure 2.6](#), Format will convert all codes starting with MB to a full description of MAILBOX.

If a survey crew is consistent in coding, even fancier formats can be used. The code should always

come first, but the crew can use a space to indicate a *parameter*.

Consider this example raw description: TR 30 PINE ELIM. TR is the code, or \$0. Parameter 1 is 30, or \$1 in the Format field. PINE is the second bit of information after the code referred to as parameter 2, or \$2. ELIM is the third item after the code, so it is \$3. Based on the example description key set in [Figure 2.6](#), this would translate to a full description of PINE 30. You can have up to nine parameters after the code if your survey crew is feeling verbose. [Table 2.2](#) shows some example formats and the corresponding full description.

[Table 2.2](#) Format examples

Raw Description	Format	Full Description
TR 30 PINE ELIM	Tree	Tree
TR 30 PINE ELIM	\$*	TR 30 PINE ELIM
TR 30 PINE ELIM	\$0	TR
TR 30 PINE ELIM	\$1 "	30"
TR 30 PINE ELIM	\$2	PINE
TR 30 PINE ELIM	\$3	ELIM
TR 30 PINE ELIM	\$2 \$1	PINE 30
TR 30 PINE ELIM	\$+	30 PINE ELIM

Layer Points that match a description key will be inserted on the layer specified here. Click inside this field to activate a layer selection dialog. The layer set here will take precedence over layer defaults set in the point command settings or the point creation tools.

Scale Parameter The Scale parameter is used to tell Civil 3D which bit of information after the code will be used to scale the symbol. By default it is checked, but it won't do anything unless Apply To X-Y is also selected. Once you enable Apply To X-Y (or Apply To Z, which is less frequently used), you can change which parameter contains scale information.

In our example, TREE 30 PINE ELIM, 30 (\$1) is the Scale parameter.

Fixed Scale Factor Fixed Scale Factor is an additional scale multiplier that can be applied to the symbol size. A common use of Fixed Scale Factor is to convert a field measurement of inches to feet. If the 30 in our example represents a dripline measurement and is meant to be feet, no Fixed Scale Factor is needed. However, if the 30 represents inches (i.e., a trunk diameter), you would need to turn on Fixed Scale Factor and set the value to 0.0833.

Use Drawing Scale In most cases, you will leave this option unchecked. By default, marker styles dictate that they will grow or shrink based on the annotative scale of the drawing. Generally, this setting is not needed unless you want to scale your point symbol based on a parameter in addition to the scale factor.

Apply To X-Y If you wish to scale symbols based on information in the field code, you need to turn this option on by placing a check mark in the box. This option works with the marker style and the Scale parameter to increase the size of an item to a scale indicated by the surveyor in the raw description.

Apply To Z In most cases, you will leave this option unchecked. Most marker symbols are 2D blocks,

so selecting this option will have no effect on the point. If your marker symbol consists of a 3D block, it will be stretched by the parameter value, which is rarely needed.

Marker Rotate Parameter, Marker Fixed Rotation, Label Rotate Parameter, Label Fixed Rotation, and Rotation Direction These options are similar to the scale factor parameter except they dictate the rotation of a symbol or label. They are not widely used, however, because it is often more time effective to have the drafter rotate the points in CAD than to have the surveyor key in a rotation. If you would like to rotate the points for readability, the better method to rotate the text is in the point label style (discussed in Chapter 18).

Creating a Description Key Set

Description key sets appear on the Toolspace > Settings tab, under the Point branch. You can create a new description key set by right-clicking the Description Key Sets collection and choosing New, as shown in [Figure 2.7](#).

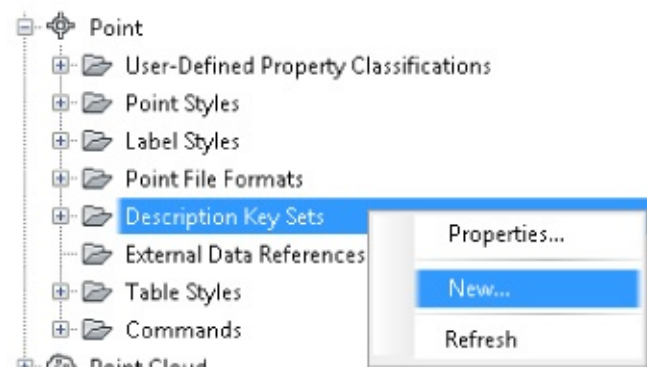


Figure 2.7 Creating a new description key set on the Settings tab of Toolspace

In the resulting Description Key Set dialog, give your description key set a meaningful name, such as your company name, and click OK. You'll create the actual description keys in another dialog.

Creating Description Keys

To enter the individual description key codes and parameters, go to and expand Toolspace > Settings tab > Point > Description Key Set. Click the description key set, as illustrated in [Figure 2.8](#), and select Edit Keys. The DescKey Editor in Panorama appears.

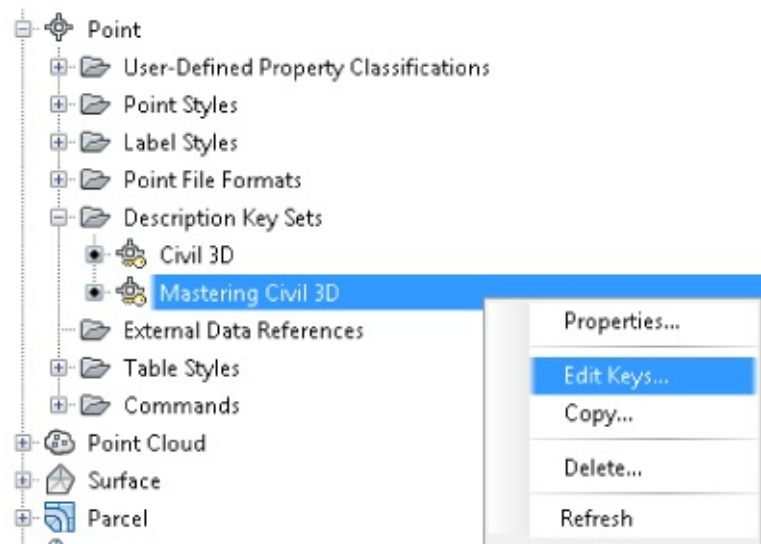


Figure 2.8 Editing a description key set

To enter new codes, right-click a row with an existing key in the DescKey Editor, and choose New or Copy from the context menu, as shown in [Figure 2.9](#).

Using Wildcards in Description Key Sets

Civil 3D can use several special characters to do more complex matching or exclusions in your Description Key Set Code field. You can use combinations of these wildcards to build intelligence into the translation between the field and Civil 3D.

- Most commonly, the asterisk (*) acts as a general wildcard and is recommended after most codes. An asterisk before or after your code will allow a surveyor to add more information to a shot without compromising the matching on the Civil 3D end.
- A hash mark or pound sign (#) signifies a single-digit numeric value 0 through 9.
- An “at” symbol (@) signifies any letter of the alphabet A through Z.
- A question mark (?) signifies any letter of the alphabet or a number.
- A period in a code signifies any character that is not alphanumeric, such as an ampersand (&) or a plus sign (+).
- A tilde (~) is an operator you can use to exclude characters or groups of characters. A tilde inside square brackets tells Civil 3D to not match characters inside the brackets.
- The use of square brackets is supported and allows for additional logic. Multiple characters inside brackets is like telling the description keys “Any of these will work.” You can even use a range such as [1-9] or [A-N]. Add the tilde to the brackets to signify “None of these will work.”

For the @ symbol, hash mark, question mark, and period, a character must be in place; blanks will not form the match.

Code	Example matches	Will not match
G*	GRGGAS	gX7
CL#	CL1CL2CL9	CLc1CLZ
1@	1A1z	121
A.	A+A!A<	A1ABA
F?	F7FZ	FF+
~*ASB*	XINLGRFL	INL-ASBASBCL
T[+-]	T+T-	TTR
[1-5]FL	1FL4FL	FL6FL
[~XE]SMH	ASMH1SMH+SMH	XSMHESMHSMH

Don't forget that description keys are case sensitive. Additionally, you can have multiple description key sets as discussed in the section “Activating a Description Key Set.” With the knowledge you have gained so far in this chapter, you can create a powerful tool for managing survey points.

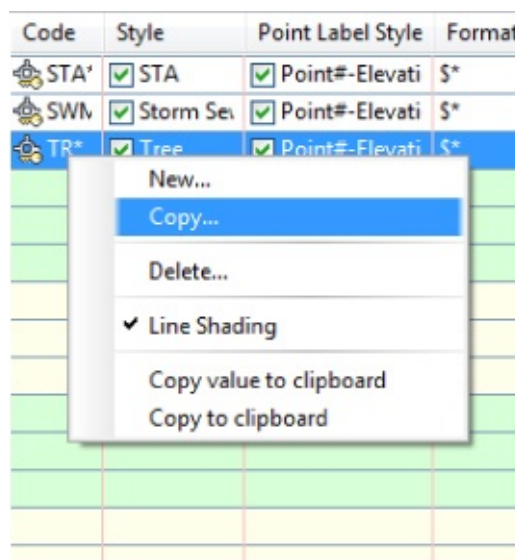


Figure 2.9 Creating or copying a description key

In the following exercise, you'll create and populate a description key set.

1. Continue working in your 0201_SurveySetup.dwg or 0201_SurveySetup_METRIC.dwg file. You must have completed the previous exercise.
2. From the Toolspace > Settings tab, expand the Points branch, right-click Description Key Sets, and click New.
3. In the Description Key Set - New DescKey Set dialog, type **Mastering Civil 3D** in the Name field. Click OK to continue.
4. From the Toolspace > Settings tab under the Points branch, expand Description Key Sets, right-click the Mastering Civil 3D description key set, and click Edit Keys. The DescKey Editor will open in the Panorama.
5. Create the description keys in [Table 2.3](#) by right-clicking a description key line in the list and clicking New.

Table 2.3 New description keys

Code	Style	Point Label Style	Format	Layer
BB*	Elevation Marker	Elevation Only	\$*	V-NODE-TOPO
BLDG*	Linework	No Display	\$*	V-NODE-BLDG
CL*	Elevation Marker	Elevation Only	\$*	V-NODE-TOPO
DL*	Elevation Marker	Elevation Only	\$*	V-NODE-TOPO
DW*	Elevation Marker	Elevation Only	\$*	V-NODE-DRIV
EC*	Elevation Marker	Elevation Only	\$*	V-NODE-CONC
EG*	Elevation Marker	Elevation Only	\$*	V-NODE-GRVL
EP*	Elevation Marker	Elevation Only	\$*	V-NODE-PVMT
FH*	Hydrant (existing)	No Display	\$*	V-NODE-WATR
GS*	Elevation Marker	Elevation Only	\$*	V-NODE-TOPO
GUY*	Guy Wire	No Display	\$*	V-NODE-POWR
IPF*	Iron Pin	Description Only	IRON PIN (F)	V-NODE-PROP
IRF*	Iron Pin	Description Only	IRON ROD (F)	V-NODE-PROP
MB*	Mailbox	Description Only	MAILBOX	V-NODE-SITE
PED*	Telephone Pedestal	Description Only	T PED	V-NODE-COMM
PP*	Power Pole	No Display	\$*	V-NODE-POWR
PROP*	Linework	No Display	\$*	V-NODE-PROP
TB*	Elevation Marker	Elevation Only	\$*	V-NODE-TOPO
TR*	Tree	Description Only	\$1 ² \$2	V-NODE-TREE
TRANS*	Transformer	Description Only	TRANS	V-NODE-POWR
WM*	Water Meter	Description Only	\$*	V-NODE-WATR
WV*	Water Valve	Description Only	\$*	V-NODE-WATR

You may have noticed an extra description key on the list called New DescKey, which was created by default when the description key set was made. This description key can be deleted by clicking it and selecting Delete from the context menu. Another option would be to edit the entry to represent a description key you need.

When this exercise is complete, you may close the drawing. A saved copy of this drawing (0201_SurveySetup_FINISHED.dwg or 0201_SurveySetup_METRIC_FINISHED.dwg) is available from the book's web page.

Activating a Description Key Set

Once you've created a description key set, you should verify the settings for your commands so that Civil 3D knows to match your newly created points with the appropriate key.

In Toolspace > Settings tab, expand Point > Commands and right-click CreatePoints. Select Edit Command Settings, as shown in [Figure 2.10](#).

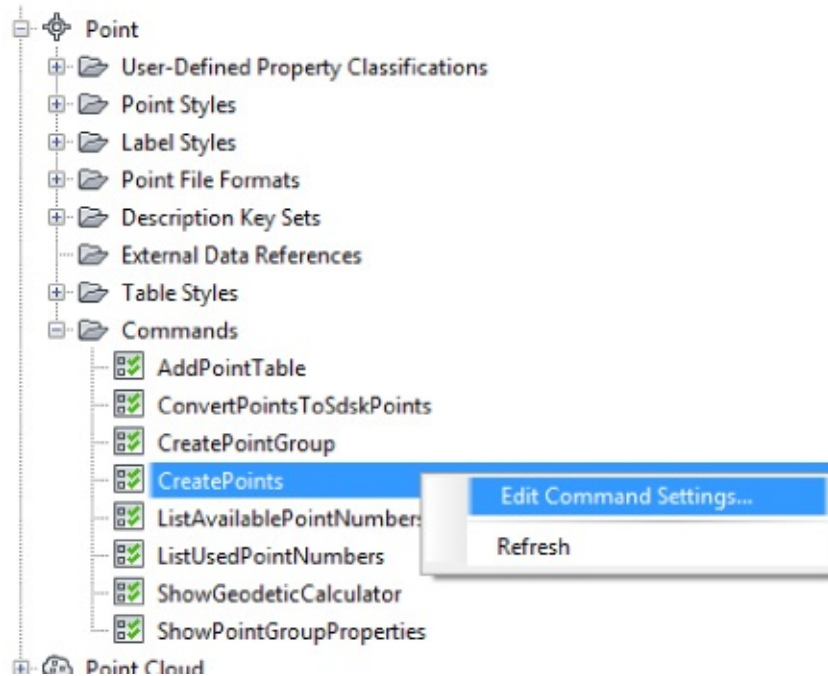


Figure 2.10 Right-click CreatePoints and choose Edit Command Settings.

In the Edit Command Settings – CreatePoints dialog, expand the Points Creation category and ensure that Match On Description Parameters is set to True and that Disable Description Keys is set to False, as shown in [Figure 2.11](#).


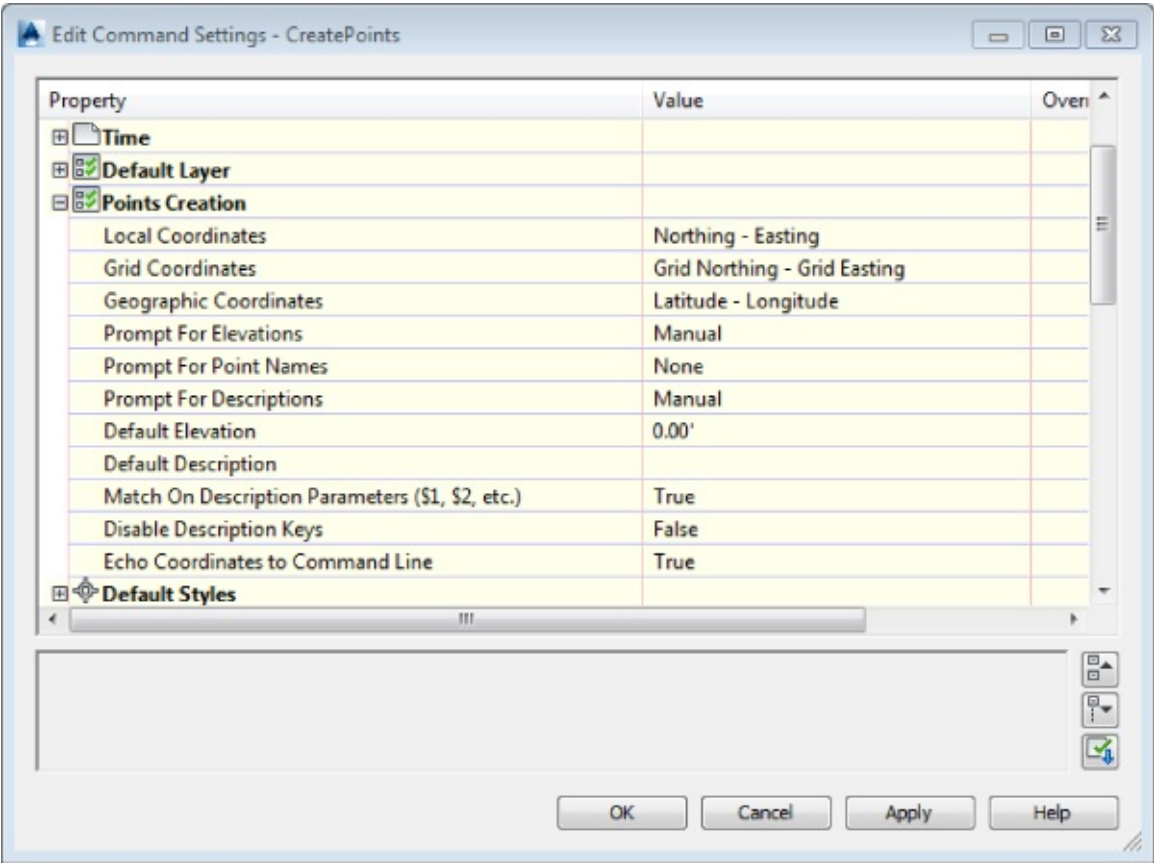


Figure 2.11 Verify that Match On Description Parameter is set to True and Disable Description Keys is set to False.

It is common to have multiple description key sets in your template. You can leverage description key sets for multiple clients or external survey firms that you work with. If you have multiple description key sets, they are all active, but if a set has a duplicate key, the first one Civil 3D runs across will take precedence.

For example, if one set uses FL for flowline but a second set uses FL for fence line, the second occurrence of the FL key gets ignored.

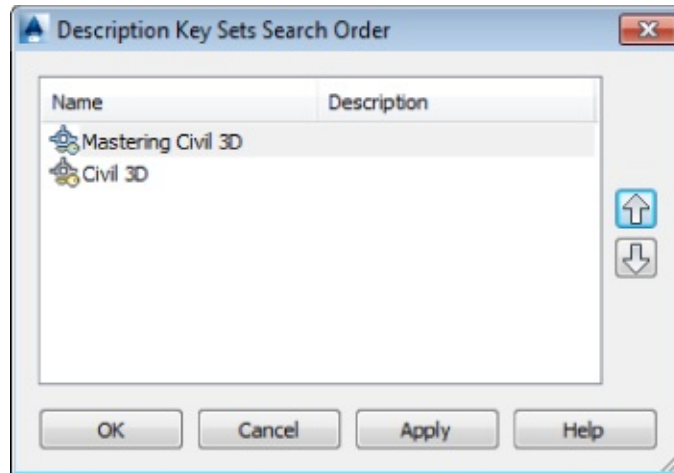You can control the search order from the Toolspace > Settings tab > Points branch by right-clicking Description Key Sets and selecting Properties. [Figure 2.12](#) shows the Description Key Sets Search Order dialog. Choose a description key set in the list and then use the arrows on the right side of the dialog to set the order. The set listed first takes first priority, then the second, and so on. Note that the listing in the Settings tab may not reflect the true listing in the properties.




[Figure 2.12](#) The Description Key Sets Search Order dialog

Understanding the Survey Database

Now that you know how to get everything set up, you are probably eager to get some real, live data into your drawing.


First, set your survey working folder to your desired survey storage location. The Civil 3D survey database is a set of external database files that reside in your survey working folder. By default, this folder is located in `c:\Civil 3d Projects\`. This is another item you will want to send to a network location in your own projects.

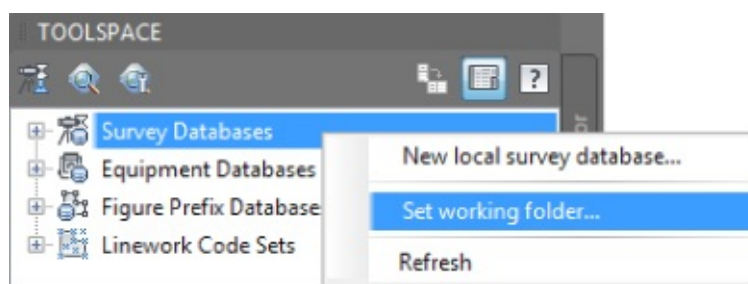On the Toolspace > Survey tab, right-click Survey Databases and select Set Working Folder, as shown in [Figure 2.13](#).




[Figure 2.13](#) Set the survey working folder.


In the current version of Civil 3D, this is a different, independent setting from the working folder for data shortcuts (as discussed in Chapter 16, "Advanced Workflows"). Most folks want this on a network location, tucked neatly into the survey folder for the project.

 To create a survey database, either you can right-click and select New Local Survey Database from Toolspace > Survey tab as mentioned earlier or you can select Import Survey Data from the Home tab's

Create Ground Data panel.

The contents of a survey database are organized into the following categories:

 **Import Events** Import events provide a framework for viewing and editing specific survey data, and they are created each time you import data into a survey database. The default name for the import event is the same as the imported filename. The Import Event collection contains the networks, figures, and survey points that are referenced from a specific import event and provides an easy way to remove, reimport, and reprocess survey data in the current drawing.

 **Survey Queries** Survey queries allow users to search for specific information within a survey database. You can use a query to locate and group related survey points and figures. For example, you may want all figures representing power lines in a query with survey points representing power poles. If you create a query containing your utilities, you can isolate specific figures and points to insert into another drawing.

A survey query can be used in conjunction with a surface. When a query containing points and figures is added to a surface model, the figures are automatically added as breaklines. [Figure 2.14](#) shows an example query that might be used for generating surface data.

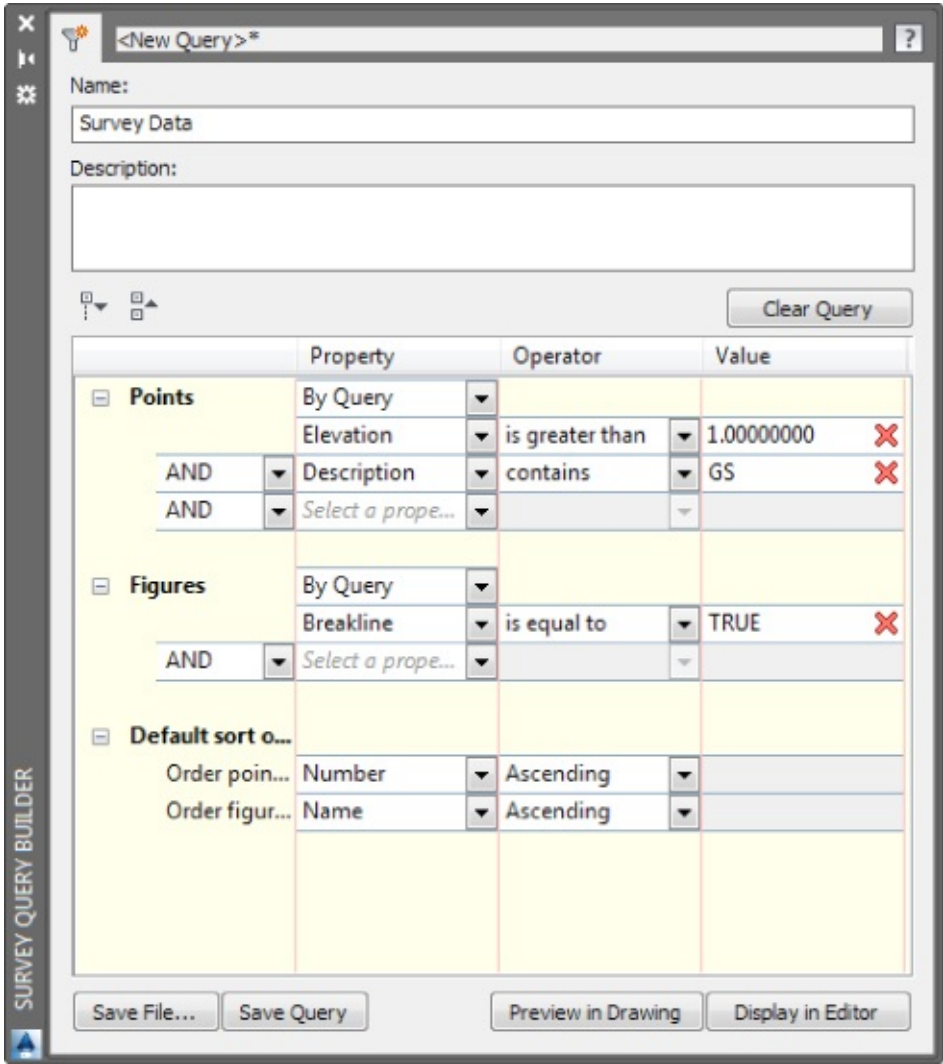






Figure 2.14 Survey database query


If the survey query you create is worthy of using in other databases, you can export it for use in other databases. Right-click Survey Queries and choose to export or import the query.


 **Networks** A survey network is a collection of related data that is collected in the field. The network consists of setups, control points, non-control points, directions, and traverses. A survey database can have multiple networks. For example, you can use different networks for different phases of a project.

 **Network Groups** Network groups are collections of various survey networks within a survey database. These groups can be created to facilitate inserting multiple networks into a drawing at once simply by dragging and dropping.

 **Figures** Figures are the linework created by codes and commands entered into the raw data file during data collection. The figure names typically come from the descriptor or description of a point.

 **Figure Groups** Similar to network groups, figure groups are sets of individual figures. These groups can be created to facilitate quick insertion of multiple figures into a drawing.

 **Survey Points** One of the most basic components of a survey database, points form the basis for each and every survey. Survey points look just like regular Civil 3D point objects, and their visibility can be controlled just as easily. However, one major difference is that a survey point cannot be edited within a drawing. Survey points are locked by the survey database, and the only way of editing them is to edit the observation that collected the data for the points. This provides the surveyor with the confidence that points will not be accidentally erased or edited. Like figures, survey points can be inserted into a drawing either by dragging and dropping from the Toolspace > Survey tab or by right-clicking Surveying Points and selecting the Points > Insert Into Drawing option.

 **Survey Point Groups** Just like network groups and figure groups, survey point groups are sets of points that can be easily inserted into a drawing. When these survey point groups are inserted into the drawing, a Civil 3D point group is created with the same name as the survey point group. This point group can be used to control the visibility or display properties of each point in the group.

In the following exercise, you'll create an import event and import an ASCII file with survey data. The survey data includes linework.

1. Open the drawing 0202_ImportSurveyData.dwg or 0202_ImportSurveyData_METRIC.dwg. If you did not complete the previous exercise, copy the file Mastering Civil 3D.fdb_xdef from the dataset to C:\ProgramData\Autodesk\C3D 2015\enu\Survey.

Note that this directory is hidden in Windows by default, so you will need to change the folder view options or type this path into the address bar of Windows Explorer.

2. From the Home tab > Create Ground Data panel, click Import Survey Data to open the Import Survey Data Wizard.
3. Click Create New Survey Database.
4. Enter **Ditch Survey** as the name of the folder in which your new database will be stored. Click OK. Ditch Survey is now added to the list of survey databases.
5. With Ditch Survey highlighted, click Edit Survey Database Settings and verify that the units are set to US Foot (or meter). Click OK to dismiss the dialog.
6. Click Next.
7. Set the Data Source Type pull-down to Point File.

8. Click the white plus sign on the right side of the Selected Files list to browse to the 0203_ImportPoints.txt or 0203_ImportPoints_METRIC.txt file, which you can download from this book's web page. If necessary, change the File Of Type drop-down selection to Text/Template/Extract File (*.txt).
9. Select the file and then click Open, and the name will be listed in the dialog, as shown in [Figure 2.15](#).

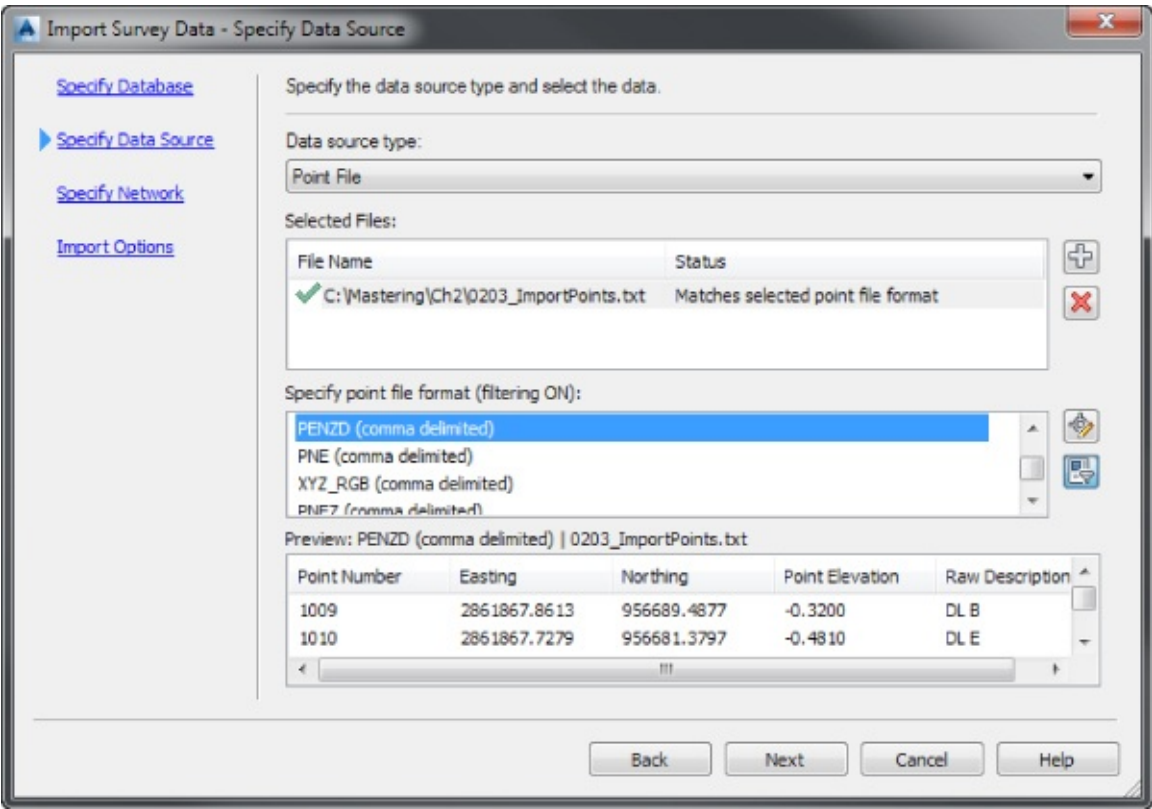


Figure 2.15 Select the correct source type, file, and format in the Import Survey Data Wizard.

10. Under Specify Point File Format, scroll through the list until you find PENZD (Comma Delimited).
11. Highlight the format.
- The preview will show that the correct data type is selected, as shown at the bottom of [Figure 2.15](#).
12. Click Next to continue.
13. Click Create New Network.
- Note that if you forget to create a network to place your points, you will not be able to manipulate this group apart from other points.
14. Enter **Ditch Survey 4-22-2014** as the name of the network and click OK. Highlight the new network and click Next to continue.
15. Set Current Figure Prefix Database to Mastering Civil 3D. Set the Process Linework During Import option to Yes. Be sure Insert Survey Points is set to Yes. When your import options match what is shown in [Figure 2.16](#), click Finish.

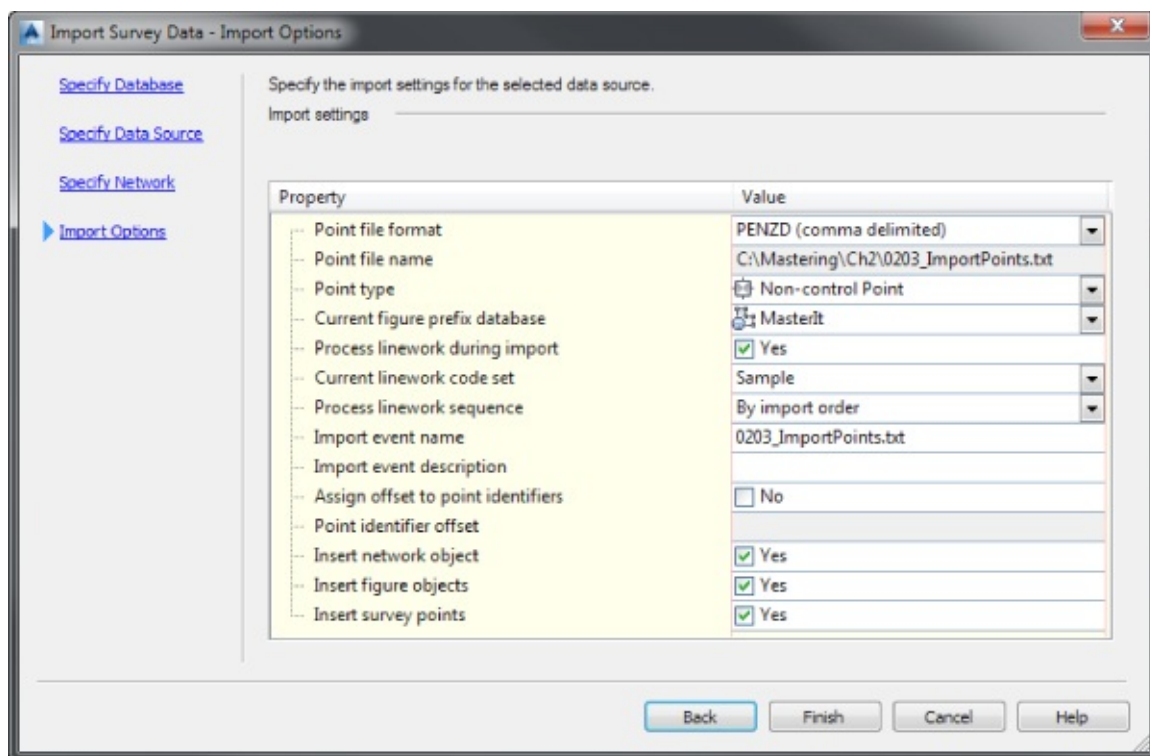


Figure 2.16 The Import Options page in the Import Survey Data Wizard

6. Save the file as **0203_DitchSurvey.dwg** to the same location as the rest of your downloaded example files. You will need it in the next exercise.

The data is imported and the linework is drawn; however, there are some mistakes in the coding, which is producing erroneous linework. The following steps will resolve this issue:

1. Continue working in the drawing from the previous exercise. In Toolspace > Survey tab, expand Survey Databases, and then select Ditch Survey > Networks > Ditch Survey 4-22-2014 > Non-Control Points.
2. Right-click Non-Control Points and select Edit to bring up the Non-Control Points Editor in Panorama.
3. Scroll to point Number 1104, right-click, and click Zoom To. The red line represents the flowline of the ditch. Notice in the drawing how the linework crosses over the brown top of bank line to the flowline of another ditch. The points along the ditches were collected simultaneously using the code DL for the left side and DL2 for the right side. Point 1104 representing the right side was obviously miscoded, and correcting the description in the editor will allow us to reimport the corrected linework.
4. In the Panorama, double-click your mouse on the Description field. Use the arrow keys on your keyboard to move your cursor to the end of the description DL. Add 2 ↵ to the end of the description, as shown in [Figure 2.17](#). This will correct the linework in this area.

Non-Control Points...

Number	Name	Easting	Northing	Elevation	Description
1093		2862189.8404	955766.5511	4.015	DL2 B
1094		2862185.4239	955768.4886	5.793	TB3 B CPN1092
1095		2862187.2096	955762.2865	4.083	DL2
1097		2862185.0709	955730.3573	6.313	TB4
1098		2862174.9618	955734.9362	4.336	DL2
1099		2862185.0709	955730.3573	6.313	TB4
1100		2862173.3301	955735.1090	5.258	TB3
1101		2862135.1437	955751.2307	4.972	TB2
1102		2862133.2322	955751.9830	4.169	DL
1103		2862161.8786	955715.1920	5.759	TB3
1104		2862164.9355	955713.9298	4.297	DL2
1105		2862174.0293	955707.1209	6.177	TB4
1106		2862164.8778	955686.2174	6.209	TB4
1107		2862154.4547	955690.4106	3.967	DL2
1108		2862152.1925	955691.4646	5.471	TB3
1109		2862151.5566	955684.1923	4.011	DL2
1110		2862145.2938	955676.5193	5.385	TB3

PANORAMA

Figure 2.17 Editing the import event to fix the linework representing the ditch flowline

The surveyor was simultaneously picking up points for two ditch lines coded DL and DL2. Miskeying codes is a common mistake when so much data is being collected.



- Click the Save icon in the upper-right corner of Panorama, and then click the green check mark in the upper right of the palette to apply changes and save your edits.

At this point you should see a yellow exclamation mark symbol next to the network name. This indicates that a change has been made to the survey database that has not yet been processed in the drawing. In the next steps, you will update the network to reflect the change graphically.

- Click Yes if you are asked to apply your changes.
- Right-click the network name (Ditch Survey 4-22-2014) and select Update Network.
- Click Close to dismiss the Survey Network Updated dialog.

Updating the survey network has triggered a change in the figures as indicated by the exclamation mark symbol next to the Figures branch.

- Right-click the Figures collection and select Update Figures.
- Click the green check mark in the upper right of the Panorama to dismiss the Event Viewer.
- While still working in Survey Databases > Ditch Survey, expand Import Events, and select 0202_ImportPoints.txt (0202_ImportPoints_METRIC.txt).
- Right-click the import event, and select Process Linework to bring up the Process Linework dialog.
- Click OK to reprocess the linework with your updated point description.

The ditch (DL2) figure line and your drawing should look something like [Figure 2.18](#). Repeat steps 2–3 to zoom to the point again.

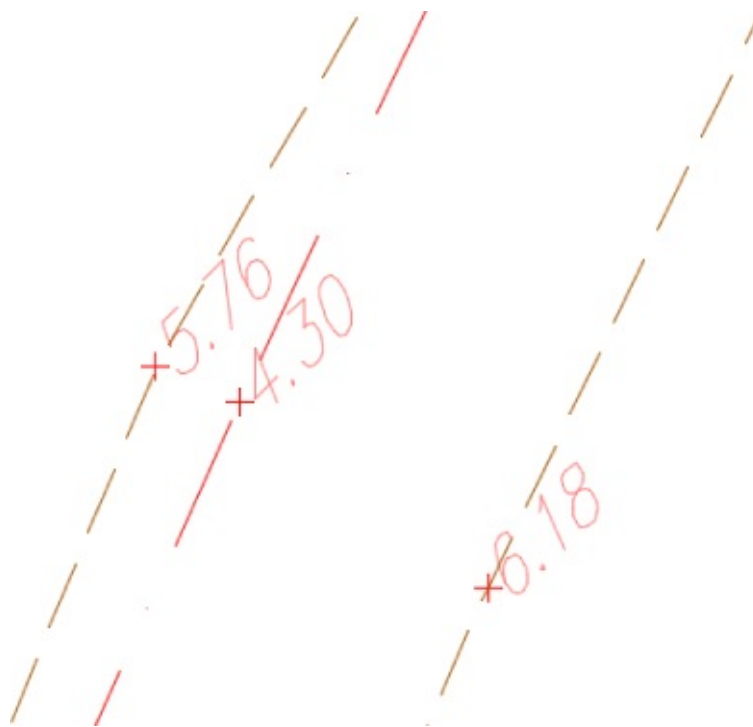


Figure 2.18 After editing and reprocessing the linework

4. Repeat steps 2–13 for the points in [Table 2.4](#). For three of the points, you will be adding a Begin command (**B**) after the description separated by a space.

Table 2.4 Corrections to non-control points

Number	New Description
1134	DL2
1864	DL1
1925	DL
2217	BB1 B
3966	BB1 B
4058	BB2 B
4060	BB1 B

When this exercise is complete, you may close the drawing. A saved copy of this drawing (0203_DitchSurvey_FINISHED.dwg or 0203_DitchSurvey_METRIC_FINISHED.dwg) is available from the book's web page.

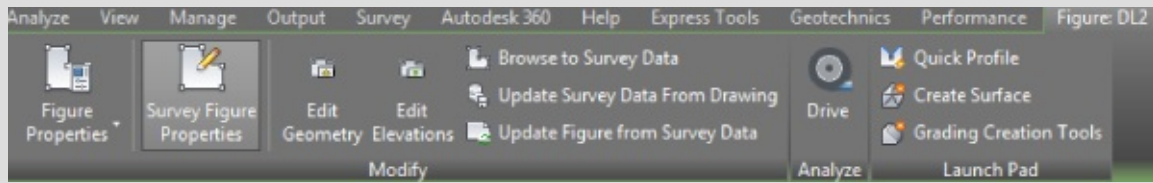
When you make modifications to survey data, only the Civil 3D database is changed. The original import file remains untouched. The survey database doesn't use the file unless you reimport the data.

If you edit raw data in the Survey tab, Civil 3D will recalculate all affected information. For example, if you modify an instrument height, all elevations that need to be updated will automatically adjust.

Keep in mind that if you edit the source file and reimport, the data in the Civil 3D database (and any edits you made) will be overwritten.


Fine-Tuning Figures

Survey figures are usually 3D lines (unless you have flattened them in the figure style). Figures can be edited with the same type of tools you use on feature lines, which you will learn about in Chapter 14, “Grading.” An editing tool unique to survey figures can be found in the Figure contextual tab of the ribbon.



Select the figure you wish to edit and select Survey Figure Properties.

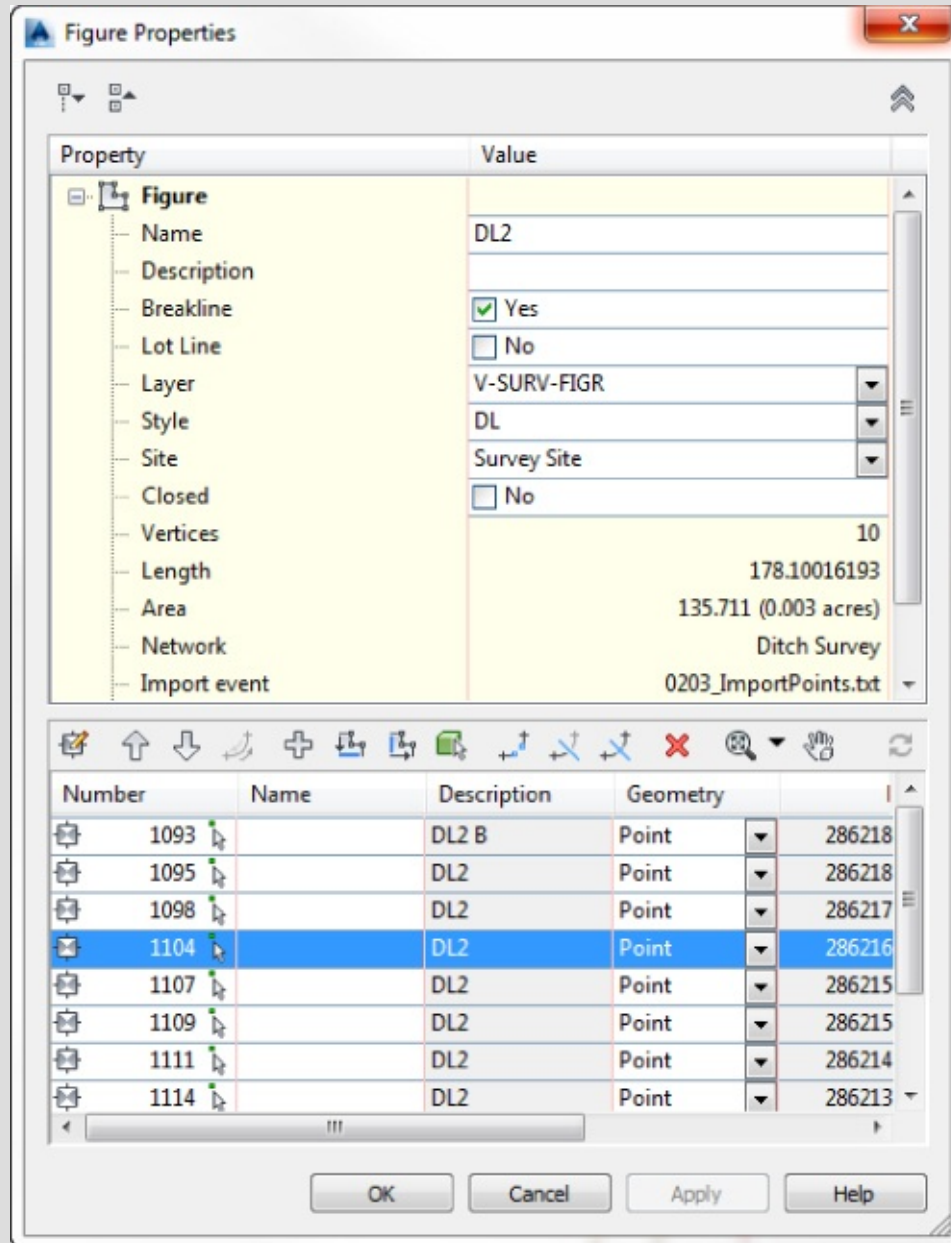You will then see the details of the figure in tabular form.



Once you are in the Figure Properties dialog, you can fix errors created by improper data collection or change fundamental qualities about the line, such as its name or breakline status. Explore the tools in this dialog to locate ways to modify vertices, add or delete vertices, reverse figure direction, and break, trim, and join figures.

When you have completed editing your figures with this method, clicking Update Survey Data From Drawing on the Figure contextual tab of the ribbon will commit the change to the survey database.

Working with Survey Networks

Once you import survey data into a network, expand the branch to see how Civil 3D helps you make sense of it. In each network, data is organized by type, as shown in [Figure 2.19](#).

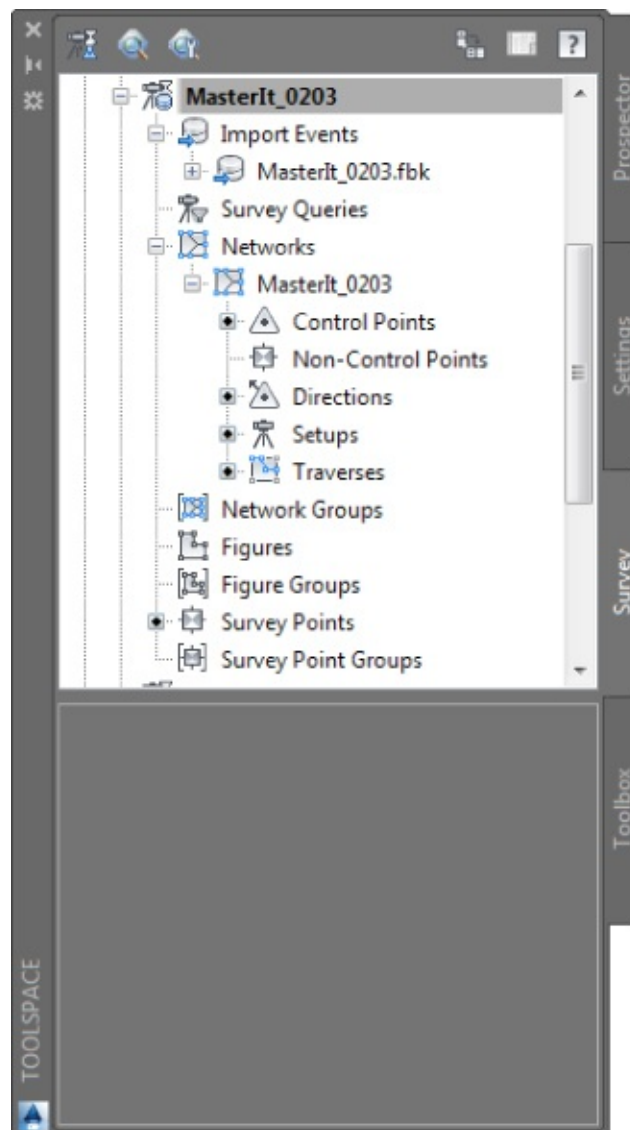





Figure 2.19 A typical survey database network with data

 **Control Points** Control points are created when data from an FBK file is imported. Inside the FBK, control points are prefaced by NE, NEZ, or LAT LONG. You can force any point to be listed as a control point by right-clicking this collection and selecting New.

 **Non-Control Points** Keyed-in points, GPS-collected points, and any point brought in through an ASCII file will appear as non-control points. This is the default type if no other information is known about the point.

 **Directions** The direction from one point to another must be manually entered into the data collector for the direction to show up later in the survey network for editing. The direction can be as simple as a compass shot between two initial traverse points that serves as a rough basis of bearings for a survey job.


 **Setups** If you imported data that contains setups and observations, Setups is where the meat of the


data is found. Every setup, as well as the points (side shots) located from that setup, can be found listed here. Setups will contain two components: the station (or occupied point) and the backsight. To see or edit the observations located from the setup, right-click Setups and select Edit Setups That Observe. The interface for editing setups is shown in [Figure 2.20](#). Angles and instrument heights can also be changed in this dialog.



Station Point	Backsight P...	Backsight Directi...	Backsight Orientat...	Instrument Hei...	Instrument Elevati...	Easting	Northing	Elevation	Longitude	Latitude	Setup Equip...
2	1	88.5953	0.0003	5.075	785.815	2156589.4514	13748905.9155	780.740			Sample
3	2	347.1006	0.0003	4.950	778.970	2156659.5500	13748598.1661	774.020			Sample
4	3	289.1347	0.0000	4.825	774.616	2158923.3678	13748596.1473	769.791			Sample
1	4	208.4848	0.0005	5.020	779.619	2157152.4411	13748905.9159	774.590			Sample

Figure 2.20 Setups can be changed in the Setups Editor.

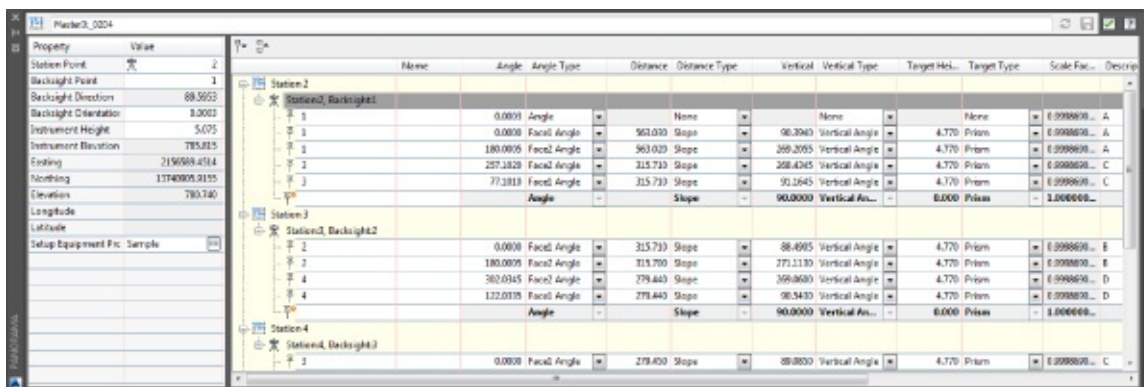 **Traverses** The Traverses section is where new traverses are created or existing ones are edited. These traverses can come from your data collector, or they can be manually entered from field notes via the Traverse Editor, as shown in [Figure 2.21](#). You can view or edit each setup in the Traverse Editor, as well as the traverse stations located from that setup.



Station	Name	Angle	Angle Type	Distance	Distance Type	Vertical	Vertical Type	Target Hei...	Target Type	Scale Fac...	Describe
Station 2	Station2, Backsight1										
1		0.0001	Angle		None					0.000000	A
2		0.0000	Face1 Angle	963.030	Slope	98.3940	Vertical Angle	4.770	Pivots	0.000000	A
3		180.0005	Face2 Angle	963.020	Slope	269.2055	Vertical Angle	4.770	Pivots	0.000000	A
4		257.1820	Face2 Angle	315.730	Slope	268.4245	Vertical Angle	4.770	Pivots	0.000000	C
3		77.1818	Face1 Angle	315.730	Slope	91.0445	Vertical Angle	4.770	Pivots	0.000000	C
		Angle			Slope	90.0000	Vertical Ang...	6.000	Pivots	1.000000	
Station 3	Station3, Backsight2										
2		0.0000	Face1 Angle	315.730	Slope	88.4995	Vertical Angle	4.770	Pivots	0.000000	B
3		180.0005	Face2 Angle	315.700	Slope	271.1130	Vertical Angle	4.770	Pivots	0.000000	B
4		382.0345	Face2 Angle	279.440	Slope	269.0600	Vertical Angle	4.770	Pivots	0.000000	D
4		122.0105	Face1 Angle	279.440	Slope	98.3430	Vertical Angle	4.770	Pivots	0.000000	D
		Angle			Slope	90.0000	Vertical Ang...	6.000	Pivots	1.000000	
Station 4	Station4, Backsight3										
3		0.0000	Face1 Angle	279.400	Slope	89.0800	Vertical Angle	4.770	Pivots	0.000000	C

Figure 2.21 The Traverse Editor

Once you have defined a traverse, you can adjust it by right-clicking its name and selecting Traverse Analysis. You can adjust the traverse either horizontally or vertically, using a variety of methods. The traverse analysis can be written to text files to be stored, and the entire network can be adjusted on the basis of the new values of the traverse.

In the following exercise, you will adjust a traverse:

1. Create a new drawing from the _AutoCAD Civil 3D (Imperial) NCS.dwt (_AutoCAD Civil 3D (Metric) NCS.dwt) template file.
2. Navigate to the Toolspace ► Survey tab.
3. Right-click Survey Databases and select New Local Survey Database.

The New Local Survey Database dialog opens.

4. Enter **Traverse** as the name of the folder in which your new database will be stored.
5. Click OK to dismiss the dialog.

The Traverse survey database is created as a branch under the Survey Databases branch.

6. Expand the Traverse branch, right-click Networks, and select New.

The New Network dialog opens.

- 7. Expand the Network branch in the dialog if needed.
- 8. Name your new network **Traverse Practice**, and click OK.
- 9. Right-click the Traverse Practice network and select Import > Import Field Book.
- 10. Select the file 0204_Traverse.fbk (0204_Traverse_METRIC.fbk), which you can download from this book's web page, and click Open.

The Import Field Book dialog opens.

- 11. Make sure you have checked the boxes shown in [Figure 2.22](#).

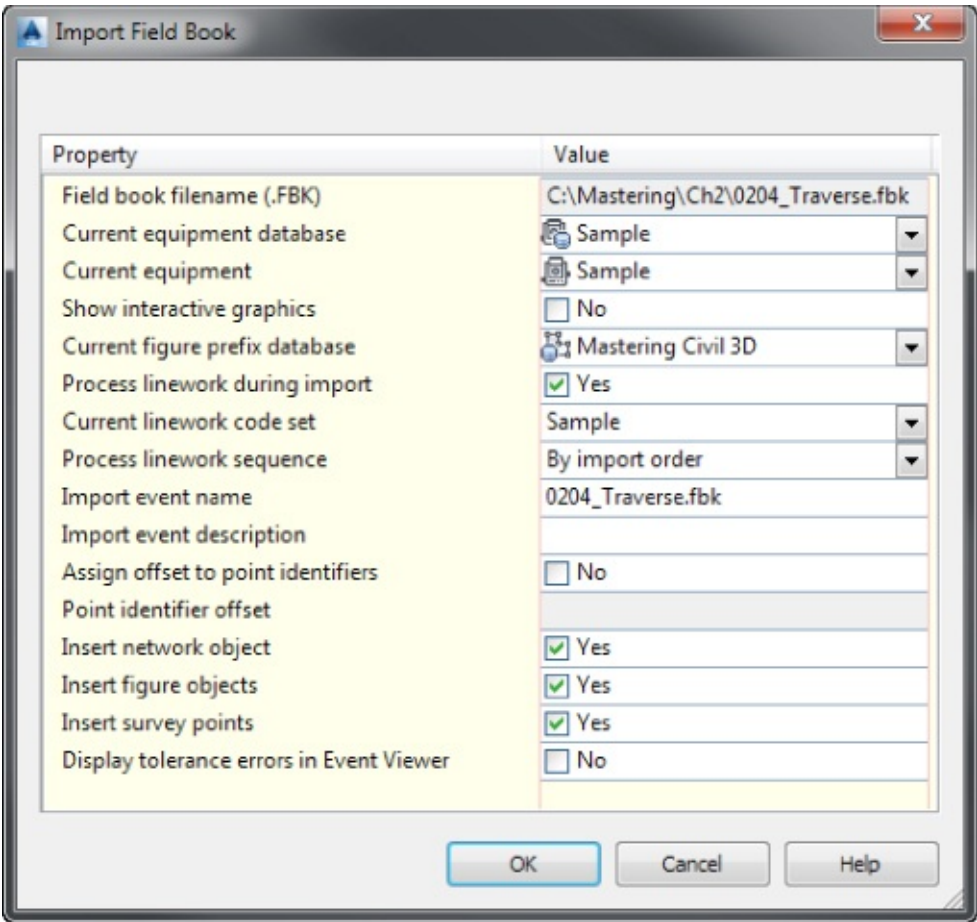


Figure 2.22 The Import Field Book dialog

There is no linework in this file because it is just traverse shots.

- 12. Click OK. Double-click your middle mouse wheel to zoom extents to get a look at the imported traverse.

The Traverse Practice network is now listed as a branch under Toolspace > Prospector > Networks.

- 13. Save the drawing as **0204_Traverse.dwg** for the next exercise.

Looking back at the Toolspace > Survey tab, expand the network you created earlier and inspect the data. You have one control point in the northwest corner that was manually entered into the data collector. There is one direction, and there are four setups. Each setup combines to form a closed polygonal shape that defines the traverse. Notice that there is no traverse definition. In the following exercise, you'll create that traverse definition for analysis.

Continue working in the drawing from the previous exercise:

- 1. Go to Toolspace > Survey > Survey Databases > Traverse > Networks > Traverse Practice; then right-

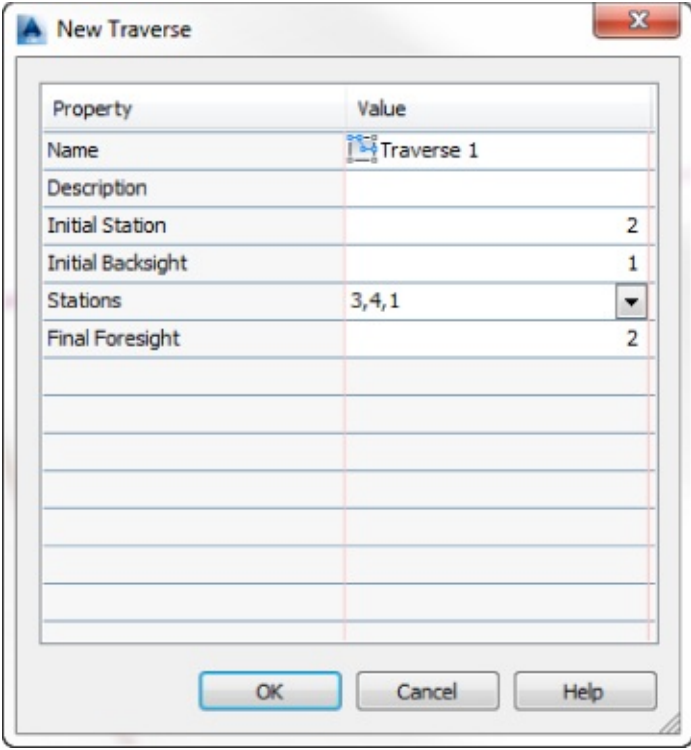
click Traverses and select New to open the New Traverse dialog.

2. Name the new traverse **Traverse 1**.

3. Type **2** as the Initial Station point number and press Enter.

The traverse will now pick up the rest of the stations in the traverse and enter them in the next box.

4. Verify that the points on the traverse match what is shown in [Figure 2.23](#).



The image shows a 'New Traverse' dialog box with a table for defining traverse properties. The table has two columns: 'Property' and 'Value'. The properties and their values are as follows:

Property	Value
Name	Traverse 1
Description	
Initial Station	2
Initial Backsight	1
Stations	3,4,1
Final Foresight	2

At the bottom of the dialog box are three buttons: 'OK', 'Cancel', and 'Help'.

Figure 2.23 Defining a new traverse

5. Click OK.

6. Right-click Traverse 1 in the bottom portion of Toolspace. Select Traverse Analysis.

7. In the Traverse Analysis dialog, ensure that Yes is selected for Do Traverse Analysis and Do Angle Balance.

8. Select Least Squares for both Horizontal Adjustment Method and Vertical Adjustment Method.

9. Set both Horizontal Closure Limit 1:X and Vertical Closure Limit 1:X to **20,000**.

10. Leave Angle Error Per Set at the default.

11. Make sure the option Update Survey Database is set to Yes.

The Traverse Analysis dialog will look like [Figure 2.24](#).

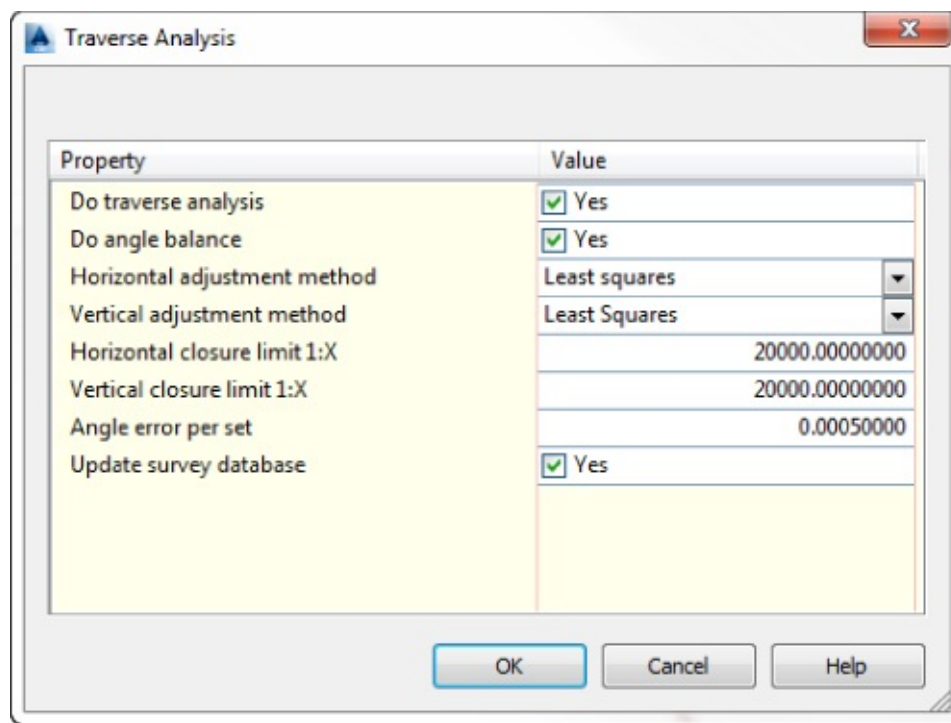


Figure 2.24 Specify the adjustment method and closure limits in the Traverse Analysis dialog.

2. Click OK.

The analysis is performed, and four text files are opened that show the results of the adjustment. These files are automatically saved in the survey working folder under the same directory as the survey database (in this example, it should be C:\Civil 3D Projects\Traverse\Traverse 1\). Note that if you look back at your survey network, all points are now control points because the analysis has upgraded all the points to control point status. Also, error ellipses are displayed in the drawing area at each station adjusted. The size of error ellipses are controlled by a scale factor set in the Survey Network style. If you are seeing extra-large ellipses, it is not an indication of an extra-large error. Styles will be discussed more in depth in Chapter 19.

Figure 2.25 shows the Traverse 1 Raw Closure.trv and Traverse 1 Vertical Adjustment.trv files that are generated from the analysis. The raw closure file shows that your new precision is well within the tolerances set in step 8. The vertical adjustment file describes how the elevations have been affected by the procedure.

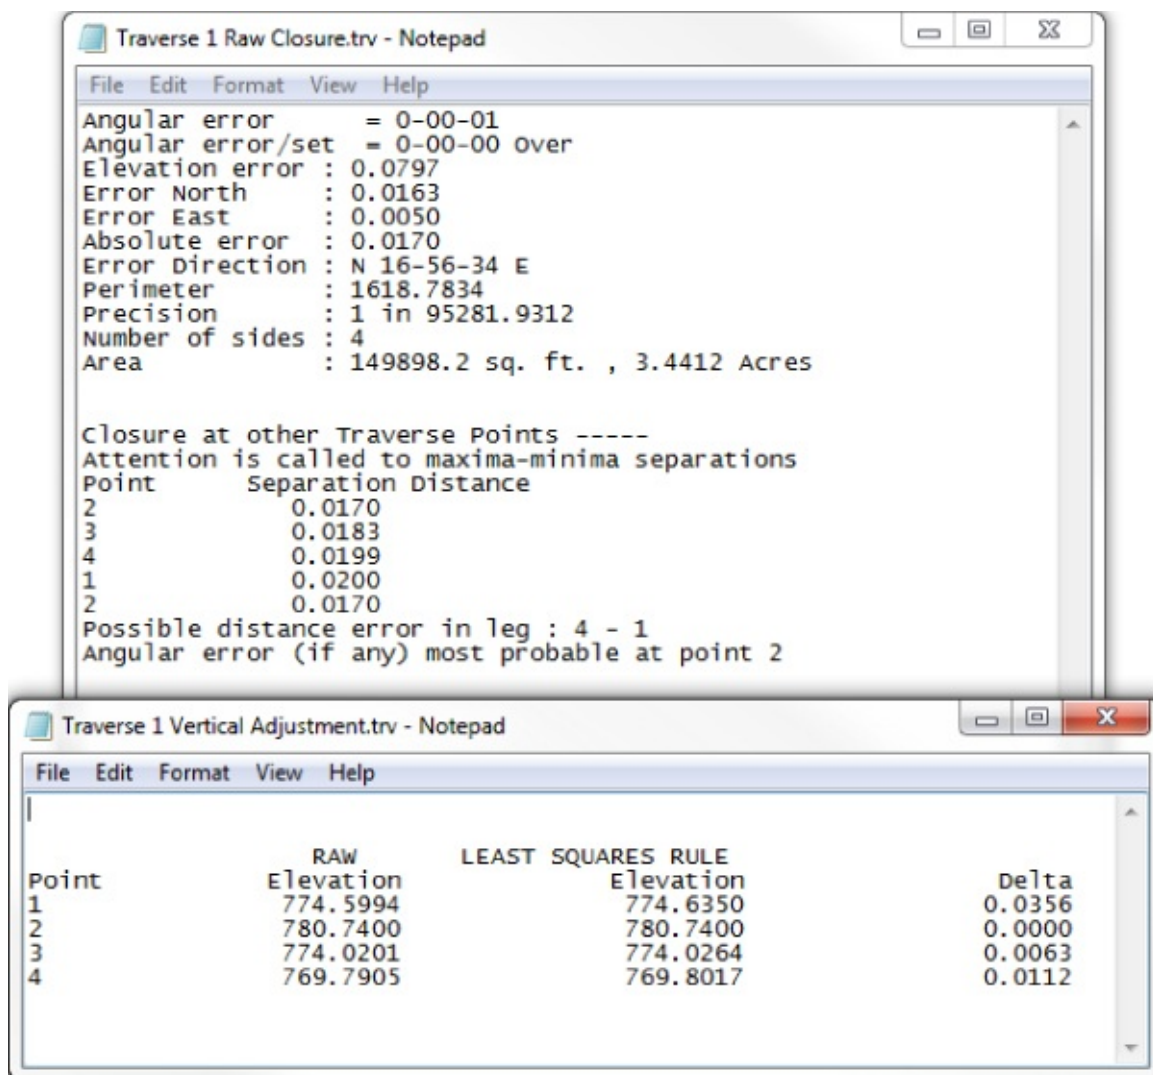


Figure 2.25 Horizontal and vertical traverse analysis results

Traverse 1.lso is the output file displaying the adjustments of the traverse analysis. The first part of the file, shown in [Figure 2.26](#), displays the various observations along with their initial measurements, standard deviations, adjusted values, and residuals. You can view other statistical data at the beginning of the file.

Traverse Liso - Notepad

File Edit Format View Help

SURVEY LEAST SQUARES CALCULATION
 Fri January 03 13:35:19 2014
 Project: Traverse
 Input File: C:\CIVIL 3D PROJECTS\TRAVERSE\TRAVERSE PRACTICE\TRAVERSE 1.LSI

Total # of unknown Points: 3
 Total # of Points : 4
 Total # of Observations : 41
 Degrees of Freedom : 32
 Confidence Level : 95%
 Number of Iterations : 2
 chi square value : 384.62561
 Goodness of Fit Test : Fails at the 5% Level

Standard Deviation of Unit weight: 3.46692

 OBSERVATIONS

Type	Pnt1	Pnt2	Pnt3	Measured	stdDev	Adjusted	Resid
AZ	2	1		79-29-00.0000	10.000	79-29-00.0000	0.00
SD	2	1		563.0270	0.017	563.0296	0.0026
VA	2	1		90-37-48.3000	2.800	90-38-20.0147	31.71*
SD	2	1		563.0170	0.017	563.0296	0.0126
VA	2	1		90-37-13.3000	2.800	90-37-10.0147	-3.29
SD	4	1		460.7690	0.017	460.7920	0.0230
VA	4	1		89-24-05.1000	3.200	89-24-13.8005	8.70
ANG	3	4	1	100-35-05.0000	6.800	100-35-04.4743	-0.53
DIST	4	1		460.7540	0.017	460.7666	0.0126
VD	4	1		4.8040	0.007	4.8334	0.0294*
ANG	3	4	1	100-35-05.1000	6.800	100-35-04.4743	-0.63
SD	3	4		279.4370	0.016	279.4386	0.0016

Figure 2.26 Statistical and observation data portion of text file

Figure 2.27 shows the second portion of this text file (you will need to scroll down to see it) and displays the adjusted coordinates, the standard deviation of the adjusted coordinates, and information related to error ellipses displayed in the drawing. If the deviations are too high for your acceptable tolerances, first check the instrument settings and tolerances in the equipment database. If everything is set correctly, you may need to redo the work or edit the field book.

Figure 2.27 displays the adjusted coordinate information portion of a text file. The data is presented in three tables within a Notepad window titled "Traverse 1.iso - Notepad".

Table 1: ADJUSTED COORDINATES

Point	Northing	Easting	Elevation
1	13740905.9355	2157152.4444	774.6350
3	13740513.3864	2156723.9875	774.0264
4	13740471.0583	2157000.1693	769.8017

Table 2: Standard Deviations - Adjusted Coordinates

Point	North	East	Elevation
1	0.026865	0.008341	0.003265
3	0.008517	0.015068	0.003629
4	0.020368	0.017793	0.003828

Table 3: Least Squares Error Ellipses at 95% Confidence Level

Point	Semi-Major Axis	Semi-Minor Axis	NE-Axis Azimuth
1	0.2438418757	0.0607871778	169-29-00
3	0.1432969460	0.0580918243	67-58-16
4	0.2347534324	0.0571615924	40-38-54

Figure 2.27 Adjusted coordinate information portion of text file

Figure 2.28 displays the final portion of this text file—Blunder Detection/Analysis. Civil 3D will look for and analyze data in the network that is obviously wrong and choose to keep it or throw it out of the analysis if it doesn't meet your criteria. If a blunder (or bad shot) is detected, the program will not fix it. You will have to edit the data manually, whether by going out in the field and collecting the correct data or by editing the FBK file.

Figure 2.28 shows a Notepad window titled "Traverse 1.iso - Notepad" displaying the output of a Blunder Detection/Analysis. The output is a table with columns: Type, Pnt1, Pnt2, Pnt3, Adjusted, Resid, Redun, Reliability Estimate, Marg, and Tests. The table lists various survey points (AZ, SD, VA, ANG, DIST, VD) and their associated measurements and results.

Type	Pnt1	Pnt2	Pnt3	Adjusted	Resid	Redun	Reliability Estimate	Marg	Tests
AZ	2	1		79-29-00.0000	0.000	0.000	<None>	F	F
SD	2	1		563.030	0.003	0.840	-0.003	P	P
VA	2	1		90-38-20.0147	31.715	0.818	-38.789	F	F
SD	2	1		563.030	0.013	0.840	-0.015	P	P
VA	2	1		90-37-10.0147	-3.285	0.818	4.018	P	P
SD	4	1		460.792	0.023	0.844	-0.027	P	P
VA	4	1		89-24-13.8005	8.701	0.805	-10.802	P	F
ANG	3	4	1	100-35-04.4743	-0.526	0.703	0.747	P	P
DIST	4	1		460.767	0.013	0.844	-0.015	P	P
VD	4	1		4.833	0.029	0.797	-0.037	F	F
ANG	3	4	1	100-35-04.4743	-0.626	0.703	0.890	P	P
SD	3	4		279.439	0.002	0.830	-0.002	P	P
VA	3	4		90-51-35.8216	-11.378	0.804	14.144	P	P
ANG	2	3	4	122-03-35.8498	-4.150	0.754	5.502	P	P
SD	3	4		279.439	0.002	0.830	-0.002	P	P
VA	3	4		90-52-35.8216	18.622	0.804	-23.148	P	F
ANG	2	3	4	122-03-35.8498	0.850	0.754	-1.127	P	P
SD	1	4		460.792	-0.012	0.844	0.014	P	P
VA	1	4		90-36-59.1995	27.799	0.805	-34.513	F	F
SD	1	4		460.792	-0.021	0.844	0.025	P	P

Figure 2.28 Blunder analysis portion of text file

Traverse 1.iso is the input file for the displaying the station-to-station observations of the traverse analysis. This file can be edited and used to rerun the analysis based on the revised observations.

Other Methods of Manipulating Survey Data

Often, it is necessary to edit the entire survey network at one time. For example, rotating a network to a known bearing or azimuth from an assumed one happens quite frequently. To find this hidden gem of functionality, go to **Toolspace > Survey tab > Survey Databases**, right-click the name of the database you wish to modify, and select **Translate Survey Database**, as shown in [Figure 2.29](#).



Manipulating the Network

Sometimes surveys performed in assumed coordinate systems need to be adjusted to match a known coordinate system. Along with changing coordinate systems, you will probably need to rotate the survey to the correct orientation. Additionally, networks may need to be adjusted from assumed elevations to a known datum. In this example, the DWG you will be working with contains two known points from the desired coordinate system. The file you will import is initially in an assumed coordinate system. You will use the **Translate** command to move and rotate the network accordingly.

1. Open the file **0205_Translate.dwg** (**0205_Translate_METRIC.dwg**).
2. In the **Toolspace > Survey tab**, right-click **Survey Databases** and select **New Local Survey Database**.

The **New Local Survey Database** dialog opens.

3. Enter **Translate** in the text box.

This is the name of the folder for the new database.

4. Click OK, and the Translate database will now be listed under the Survey Databases branch.
5. Select Networks under the new Translate branch.
6. Right-click and select New to open the New Network dialog.
7. Enter **Translate** as the name of this new network.
8. Click OK to dismiss the dialog.
9. Right-click the Translate network, and select Import > Import Point File.
10. Navigate to the file 0205_Translate.txt (0205_Translate_METRIC.txt), which you can download from this book's web page, and click Open.

The Import Point File dialog opens.

11. Verify that the point file format is PNEZD (Comma Delimited).
12. Verify that the Insert Survey Points option is set to Yes and click OK.
13. Zoom extents to view the points.

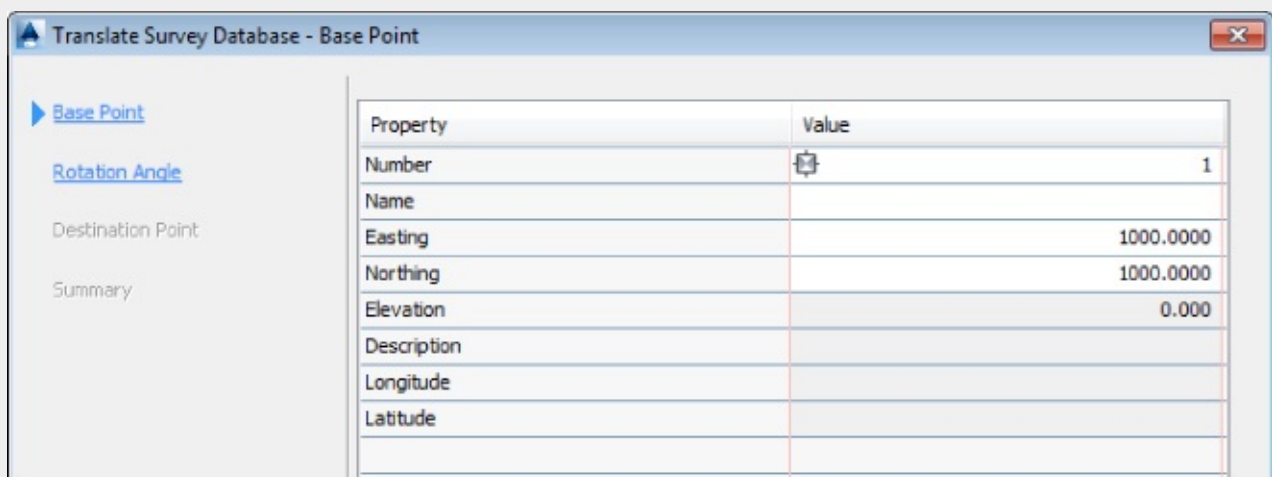
Points 1 and 47 from the newly imported network correspond to 10000 and 10001 from the actual coordinate system. This is all the information needed to perform a translation.

14. Make sure you are able to locate these points for the next steps by panning and zooming with your mouse.

It will also be helpful to turn on your Node object snap.

15. In the Toolspace > Survey tab, right-click the name of the survey database and select Translate Survey Database, as shown earlier in [Figure 2.29](#).
16. For Base Point Number, enter **1** and press **↵**.

Civil 3D will pick up the assumed coordinate of this point.



Property	Value
Number	1
Name	
Easting	1000.0000
Northing	1000.0000
Elevation	0.000
Description	
Longitude	
Latitude	

17. Click Next.
18. For the rotation angle, click the Pick In Drawing button in the bottom-left corner of the dialog.
You will be prompted for an initial direction.
19. For Initial Direction, use the Node Osnap to pick point 1 and then point 47.

You will then be prompted to specify a new direction.

20. Use the Node Osnap to pick points 10000 and 10001.

The resulting rotation angle should be 45°.

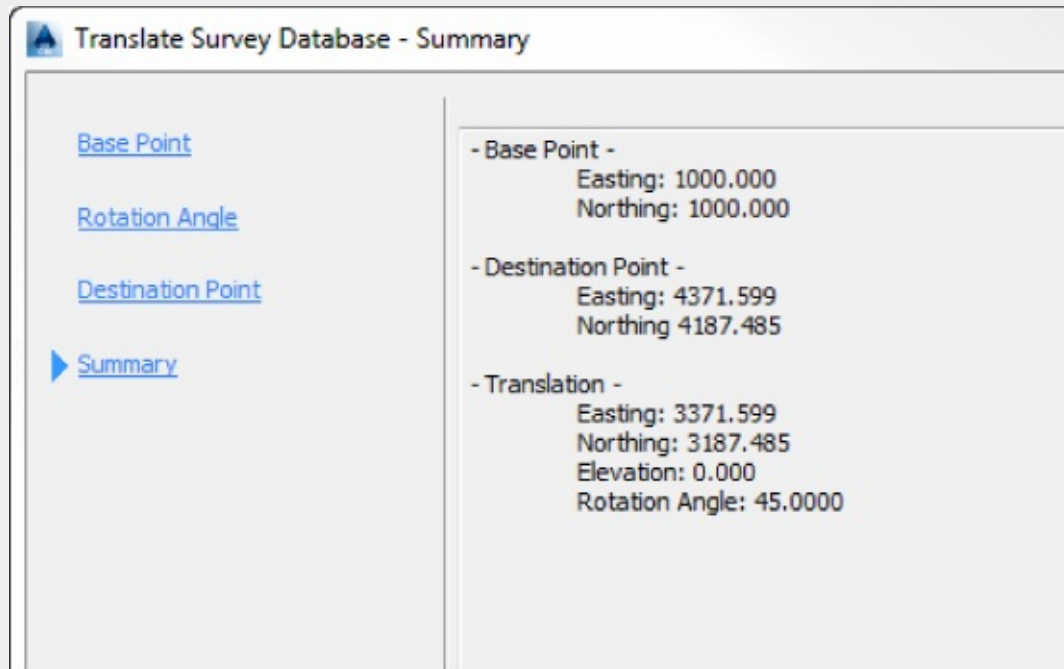
21. Click Next.

22. In the Destination Point screen, click Pick In Drawing.

23. Use the Node Osnap to select point 10000.

24. Click Next.

25. Verify your translation setup on the Summary screen and then click Finish.



26. Save and close the drawing.

The changes were made directly to the database and the network can be imported into any drawing.

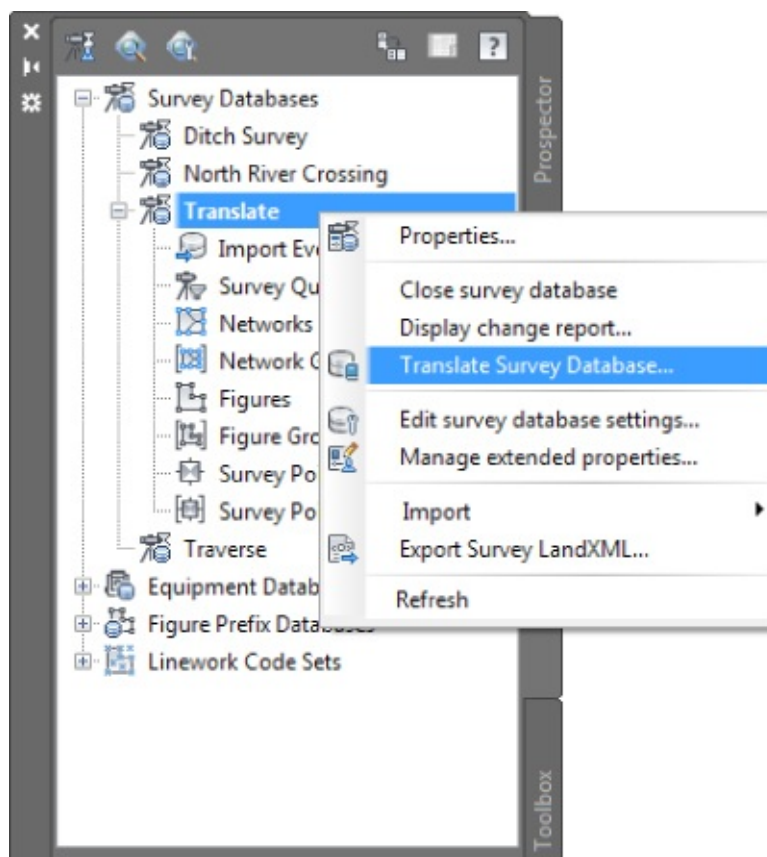


Figure 2.29 The elusive yet indispensable Translate Survey Database command

Other Survey Features

Other components of the survey functionality included with Civil 3D 2015 are the Astronomic Direction Calculator, the Geodetic Calculator, Mapcheck reports, and the Coordinate Geometry Editor. All of these features are accessed from the ribbon under Survey tab > Analyze panel.

The Astronomic Direction Calculator



The Astronomic Direction Calculator, shown in [Figure 2.30](#), is used to calculate sun shots or star shots. For the obscure art of these types of observations, Civil 3D has all the ephemeris data built in, making this a very convenient tool.

Astronomic Direction Calculator

Calculation type:
Sun shot calculation

Observation station data:

Property	Value
Station Point	3
Backsight Point	2
Station Latitude	N42° 45' 10.00"
Station Longitude	E73° 56' 30.00"

Ephemeris data:

Property	Value
GHA 00 Hours	182.3347
GHA 24 Hours	182.2748
Declination 00 Hours	-22.0633
Declination 24 Hours	22.1448

Observation Sets


	Backsight Observation	Sun Observation	Stop Time	Observed Dire...	Average Direction
Set:1					S41° 40' 10"E
Direct	0.0000	212.0040	0.001000	S41° 53' 47"E	
Reverse	180.0000	32.4024	0.030000	S41° 26' 33"E	
Set:2					S41° 39' 10"E
Direct	0.1401	212.1054	0.000010	S41° 54' 27"E	
Reverse	179.5444	32.5042	0.050000	S41° 23' 54"E	

Mean direction (Station to Backsight):
S41° 39' 40"E

Figure 2.30 The Astronomic Direction Calculator

The Geodetic Calculator

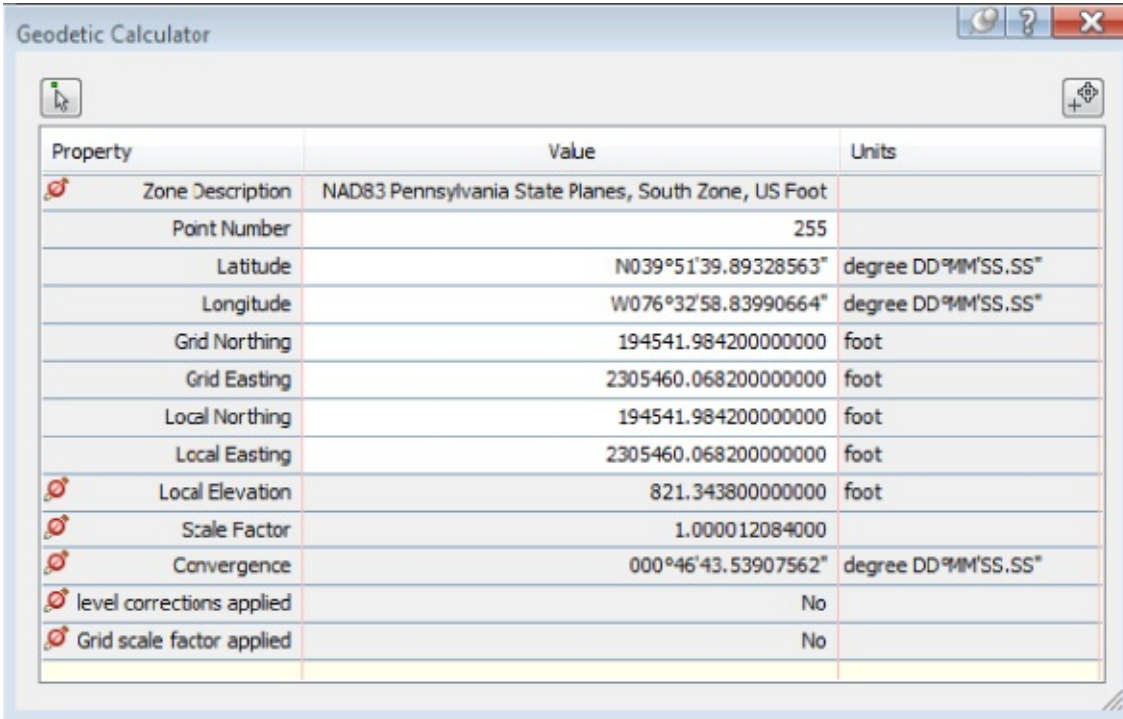The Geodetic Calculator is used to calculate and display the latitude and longitude of a selected point as well as its local and grid coordinates. It can also be used to calculate unknown points. If you know the grid coordinates, the local coordinates, or the latitude and longitude of a point, you can enter it in the Geodetic Calculator and create a point at that location. Note that the Geodetic Calculator works only if a coordinate system is assigned to the drawing in the Drawing Settings dialog. In addition, any transformation settings specified in this dialog will be reflected in the Geodetic Calculator, shown in [Figure 2.31](#).



Property	Value	Units
Zone Description	NAD83 Pennsylvania State Planes, South Zone, US Foot	
Point Number	255	
Latitude	N039°51'39.89328563"	degree DD°MM'SS.SS"
Longitude	W076°32'58.83990664"	degree DD°MM'SS.SS"
Grid Northing	194541.984200000000	foot
Grid Easting	2305460.068200000000	foot
Local Northing	194541.984200000000	foot
Local Easting	2305460.068200000000	foot
Local Elevation	821.343800000000	foot
Scale Factor	1.000012084000	
Convergence	000°46'43.53907562"	degree DD°MM'SS.SS"
level corrections applied	No	
Grid scale factor applied	No	

Figure 2.31 The Geodetic Calculator

The Mapcheck Report



The Mapcheck report computes closure based on line, curve, or parcel segment labels, as you'll see in the following exercise:

1. Open the 0206_Mapcheck.dwg (0206_Mapcheck_METRIC.dwg) file, which you can download from this book's web page.
2. Change to the Survey tab of the ribbon, and select Mapcheck from the Analyze panel to display the Mapcheck Analysis palette.



3. Click the New Mapcheck button at the top of the menu bar.
4. At the Enter name of mapcheck: prompt, type **Record Deed** and press Enter.
5. At the Specify point of beginning (POB): prompt, choose the north endpoint of the line representing the east line of the parcel (the longest line in the file).

A red glyph will appear to represent the POB.

6. Working clockwise, select each parcel label one at a time.

Be sure not to skip the small segment in the southwest portion of the site.

In the northwest portion of the site, you will encounter a label whose bearing is flipped. Before selecting the last segment, you will use the Mapcheck Reverse command to fix this in your Mapcheck report.

7. At the Select a label or [Clear/Flip/New/Reverse]: prompt, type **R** and then press ↵ to reverse direction.

The Mapcheck glyph will now appear in the correct location along the segment, as shown in [Figure 2.32](#).

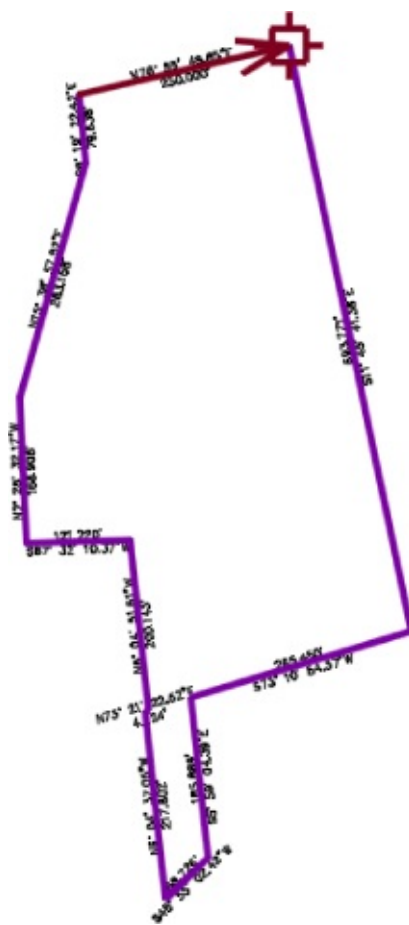


Figure 2.32 The Mapcheck glyph verifies that your input is correct.

8. Select the last line label along the north section of the parcel.
9. Press \leftarrow to complete the Mapcheck entry.

The completed parcel should have 12 sides.

10.  Select the output view as shown in [Figure 2.33](#) to verify closure.

Property	Value	Easting	Northing
Mapcheck 1: Record Deed			
Closure Summary			
... Precision, 1 part in	2166632.933'		
... Error distance	0.001'		
... Error direction	N27° 20' 46"W		
... Area	243196.02 Sq. Ft.		
... Square area	243196.016		
... Perimeter	2538.929'		
Point of Beginning		2305474.0657'	186156.6532'
Side 1: Line			
Side 2: Line			
Side 3: Line			
Side 4: Line			
Side 5: Line			
Side 6: Line			
Side 7: Line			
Side 8: Line			
Side 9: Line			
Side 10: Line			
Side 11: Line			
... Direction	N6° 19' 22"W		
... Angle	[158.0278 (d)]		
... Deflection angle	[-21.9722 (d)]		
... Distance	79.638'		
... Endpoint		2305230.5410'	186100.1211'
Side 12: Line			

Figure 2.33 The completed deed in the Mapcheck Analysis palette

The Coordinate Geometry Editor



The Coordinate Geometry Editor ([Figure 2.34](#)) is a powerhouse tool that makes creating and evaluating 2D boundaries easier than before. The functionality introduced with this feature supplants entering parcel data one segment at a time using the Line By Bearing And Distance command. Traverse analysis can be performed on manually entered segments, polylines, or COGO point objects without needing to define them in a survey database.

Coordinate Geometry Editor

Calculate Unknowns

Scale and Rotate Output Scale Factor Direction 1 Direction 2 Rotation Angle

1.000 0.000000

Traverse Control Point Name / Number Easting (X) Northing (Y)

Point of Beginning 1001 2305474.0657 186156.6532

Point of Closure 1 2305474.0657 186156.6532



	Side Type	Angle/Direction	Distance	Radius	Δ Angle	Description	Hold
1	Line	S 11°45'41" E	365.2154+147.3887+181.1671				
2	Line	S 73°10'54" W	265.4503				
3	Line	S 05°59'04" E	185.8889				
4	Chord ...	S 45°55'02" W	4 TO 5	-415.2300			
5	Line	N 06°04'37" W	217.8016				
6	Line	N 73°21'23" E	U				
7	Line	N 06°04'52" W	200.1427				
8	Line	S 87°32'10" W	121.2195				
9	Line	N 02°25'32" W	168.9083				
10	Line	N 15°38'58" E	283.1577				
11	Line	N 06°19'22" W	79.6377				
12	Line	12 TO 1	12 TO 1				
13	Line						

Close Help

Figure 2.34 Your new best friend, the Coordinate Geometry Editor

Boundary data can be entered in the Coordinate Geometry Editor using a mix of methods. As shown in the first line of the traverse seen in [Figure 2.34](#), you can use formulas to enter data. In the example shown, multiple segments with the same bearing have been consolidated into a single entry.

If a value is unknown, such as the distance in line 6 of [Figure 2.34](#), you can enter a **U**. Civil 3D will calculate the unknown value when you generate the traverse report.

  To enter data using points, use the Pick COGO Points In Drawing button to select the points in the direction of the traverse side. You may need to click the chevron button in the upper-right corner of the dialog to expand the toolbar button selection. Note that the direction and distance are entered independently of each other, so you will need to repeat the selection for each column of the table. You can also copy and paste between columns.

If a line has been entered in error, the Coordinate Geometry Editor offers a variety of tools for fixing problems. To remove a line of the table, highlight the row, right-click, and select Delete Row, as shown in [Figure 2.35](#).

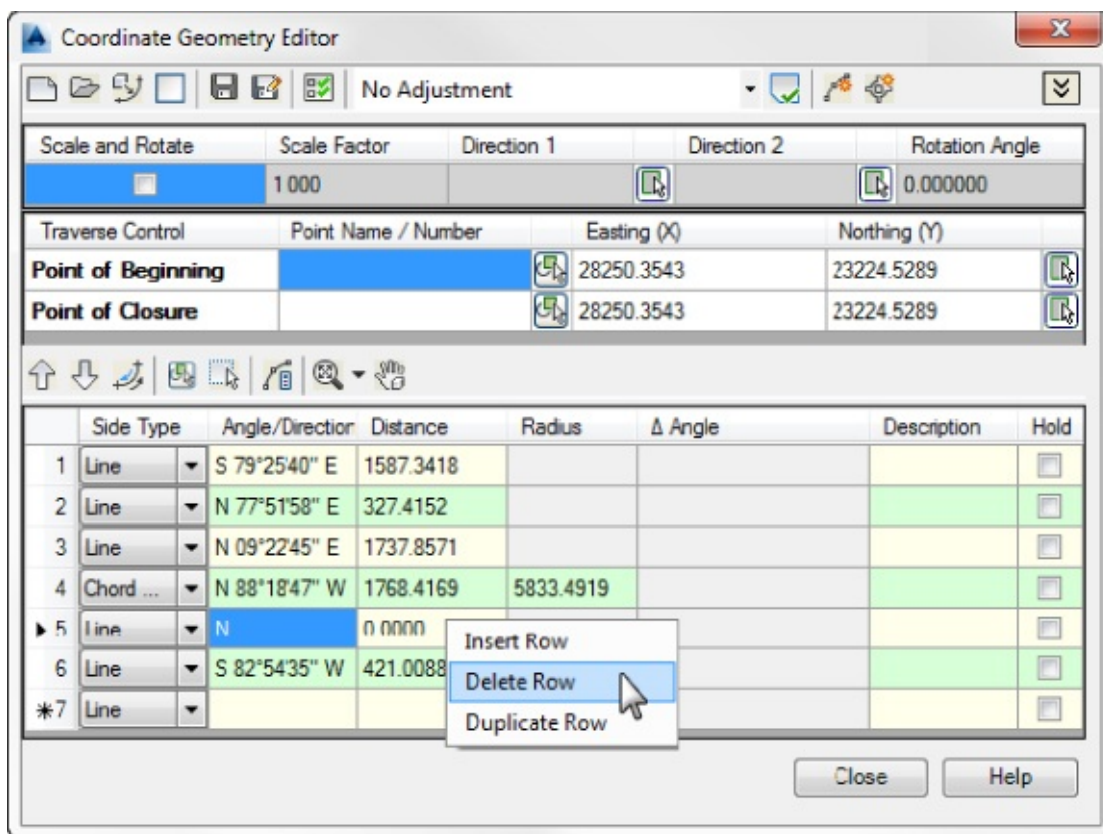


Figure 2.35 Removing unwanted traverse data

Similar to the glyphs you saw in the Mapcheck command, the Coordinate Geometry glyph will appear in the graphic showing the side directions and point of closure, as seen in [Figure 2.36](#).

Traverse Report

Closure

Total Traverse Length	2538.928
Error in Closure	0.001
Closure is one part in	1866445.9895
Error in North(Y)	0.0013
Error in East(X)	0.0004
Direction of Error	N 19°00'01" E

Traverse Control

	Point Name	Northing	Easting
Point of Beginning	1001	186156.6532	2305474.0657
Point of Closure	1	186156.6532	2305474.0657

Input Data


Side	Angle/Direction	Distance	Radius	#Delta Angle	Description
1	S 11°45'41" E	365.2154			
2	13 TO 14	13 TO 14			
3	S 11°45'41" E	181.1671			
4	S 73°10'54" W	265.4503			
5	S 05°59'04" E	185.8889			
6	S 45°55'02" W	68.7261	-393.6557		

[Figure 2.37](#) Traverse report created by the Coordinate Geometry Editor

Using Inquiry Commands

A large part of a surveyor's work involves querying lines and curves for their length, direction, and other parameters.

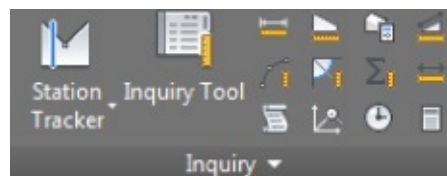The Inquiry commands panel ([Figure 2.38](#)) is on the Analyze tab of the ribbon, and it makes a valuable addition to your Civil 3D and survey-related workspaces. Remember, panels can be dragged away from the ribbon and set in the graphics environment much like a toolbar.



[Figure 2.38](#) The Inquiry commands panel

The Inquiry Tool (shown in [Figure 2.39](#)) provides a diverse collection of commands that assist you in studying Civil 3D objects. You can access the Inquiry Tool by going to the Analyze tab of the ribbon > Inquiry panel and clicking the Inquiry Tool button.

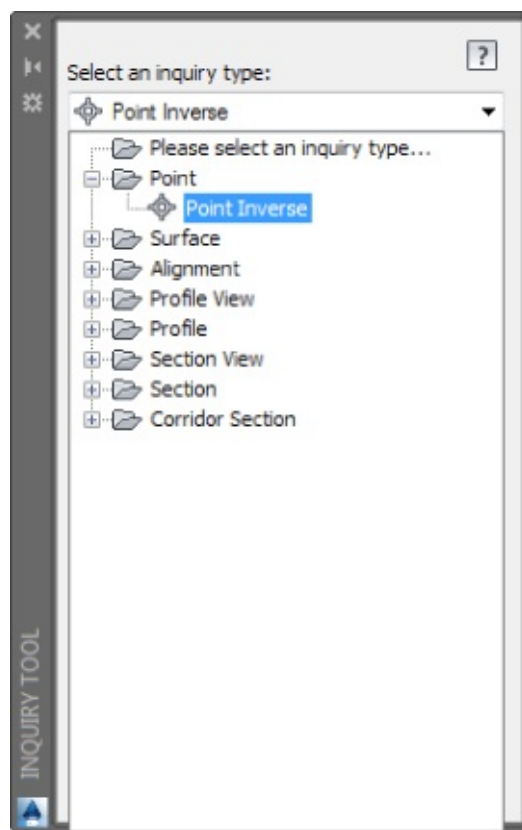


Figure 2.39 Choosing an inquiry type from the Inquiry Tool palette

To use the Point Inverse option in the Inquiry commands, first set the Select An Inquiry Type pull-down to Point ➤ Point Inverse, as shown in [Figure 2.40](#).

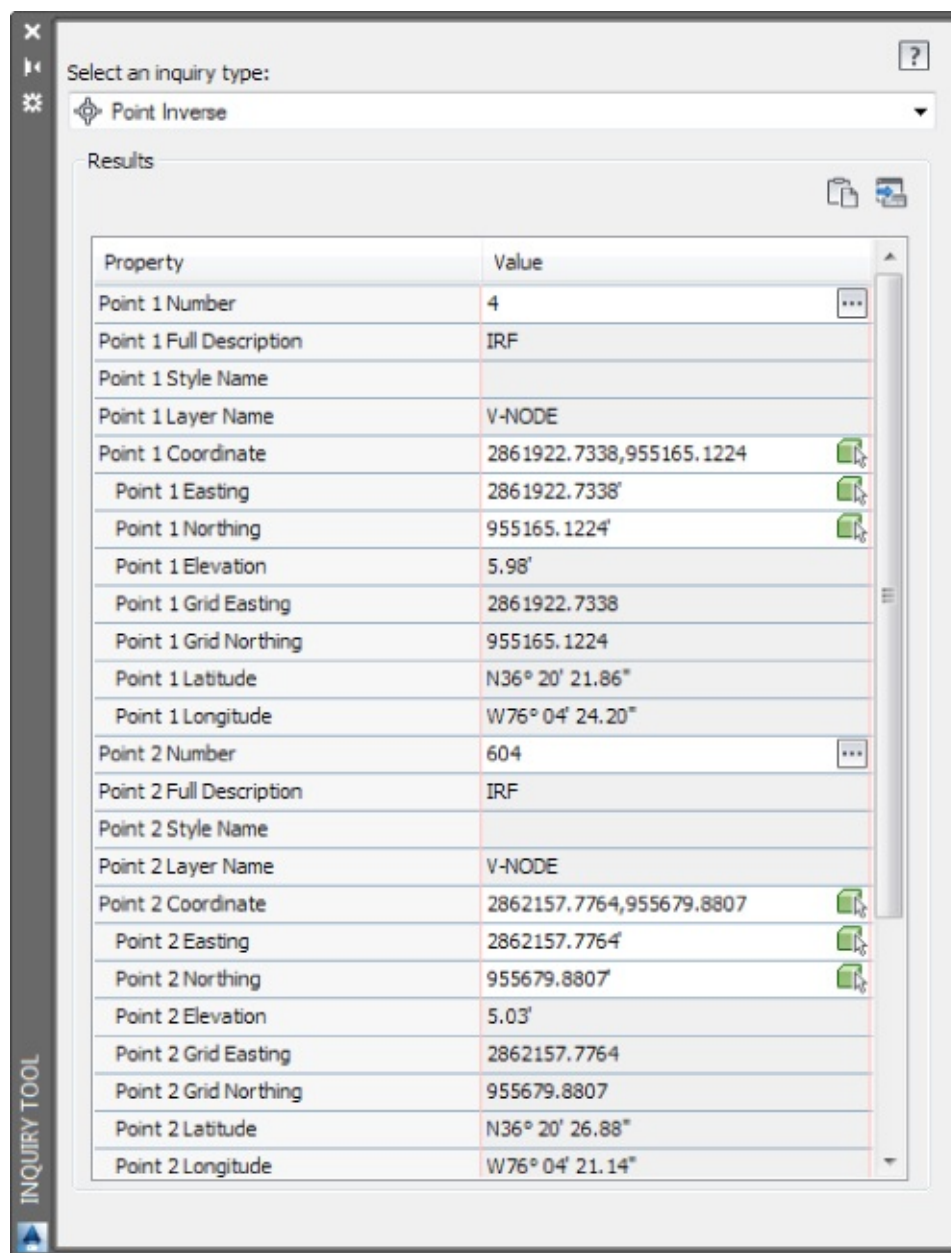





Figure 2.40 Point Inverse results

 You can enter the point number or use the Pick In CAD icon to select the points you wish to examine. If no point exists, the Pick In CAD option will pick up the northing and easting of the location. You could also type in a northing and easting if desired.

The other Inquiry commands that are specific to Civil 3D are also handy to the survey process.

 The List Slope tool provides a short command-line report that lists the elevations and slope of an entity (or two points) that you choose, such as a line or feature line.


 The Line And Arc Information tool provides a short report about the line or arc of your choosing (see [Figure 2.41](#)). This tool also works on parcel segments and alignment segments. Alternatively, you can type **P** and press Enter for points at the command line to get information about the apparent line that would connect two points onscreen.

Don't Get Burned by AutoCAD Angles

When looking for information about a line, use the Line And Arc tool rather than the base AutoCAD LIST command. The Civil 3D Line And Arc Information tool (CGLIST) works on more object types and is not affected by rotated coordinate systems.

When entering angles in base AutoCAD, the full N50d10'10"E is needed to denote a bearing. In Civil 3D commands, N50.1010E will denote the same thing and is much faster to type. However, as every surveyor knows, there is a huge difference between 50.1010° and 50°10'10".

A setting you will want to change in your Civil 3D template is the angular entry method for general angles, as shown here. This setting mainly affects the Angle Distance and Bearing Distance Transparent commands. Check back in Chapter 1, "The Basics," for more information on template settings and transparent commands.

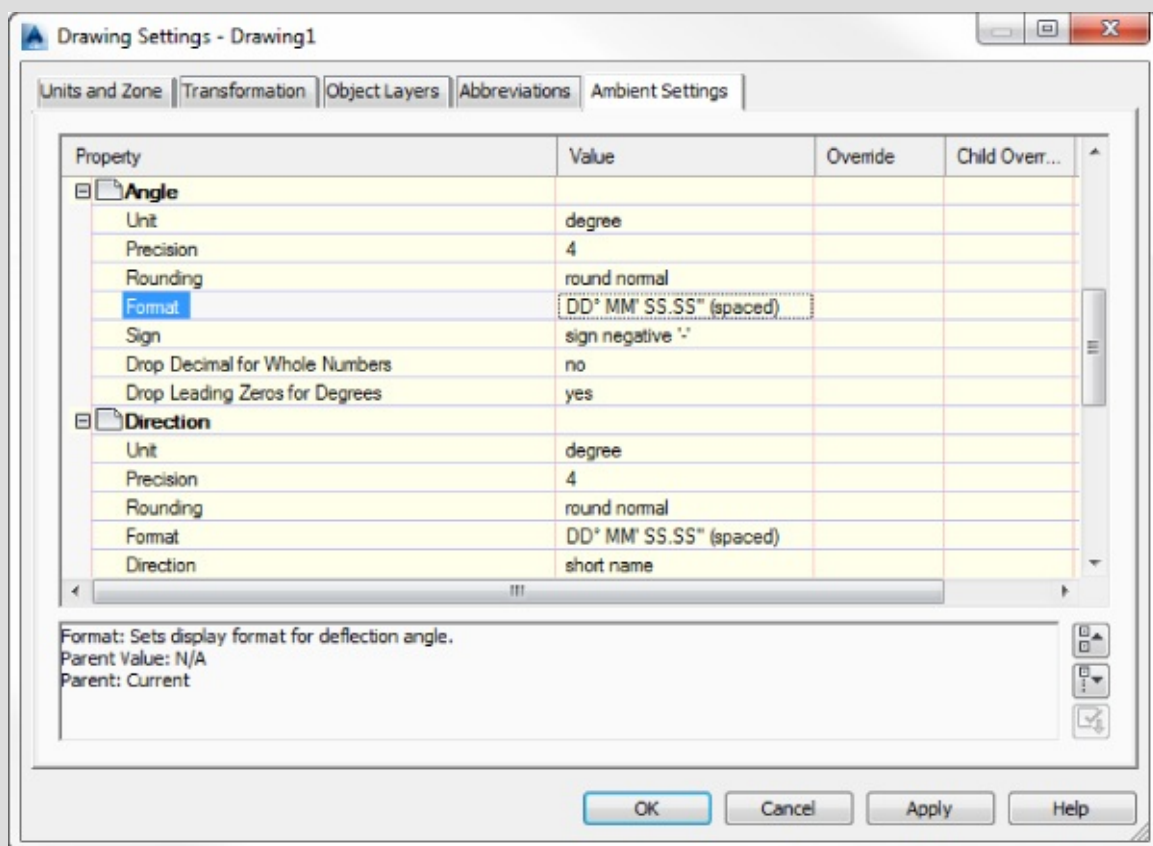

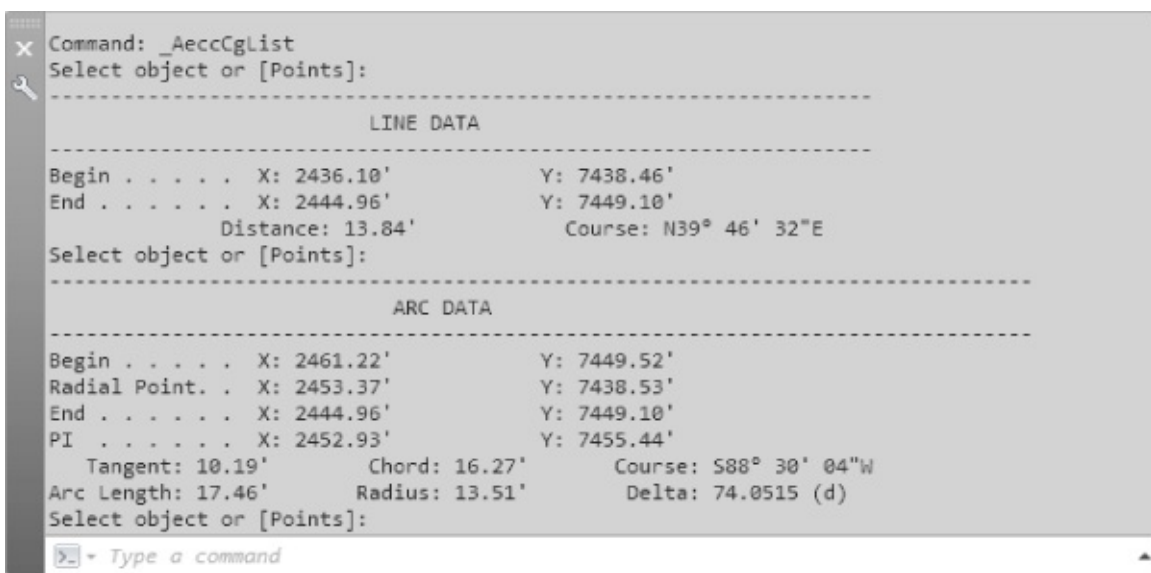




Figure 2.41 Command-line results of a line inquiry and arc inquiry

 The Angle Information tool lets you pick two lines (or a series of points on the screen). It provides information about the acute and obtuse angles between those two lines. Again, this also works for alignment segments and parcel segments.

 The Continuous Distance tool provides a sum of distances between several points on your screen or one base point and several points.

 The Add Distances tool is similar to the Continuous Distance command, except the points on your screen do not have to be continuous.

The Bottom Line

Properly collect field data and import it into Civil 3D. Once survey data has been collected, you will want to pull it into Civil 3D via the survey database. This will enable you to create lines and points that correctly reflect your field measurements.

Master It Open MasterIt_0201.dwg, create a new survey database, and import the MasterIt_0201.txt (or MasterIt_0201_METRIC.txt) file into the drawing. The format of this specific file is PENZD (comma-delimited).

Set up description key and figure databases. Proper setup is key to working successfully with the Civil 3D survey functionality.

Master It Create a new description key set and the following description keys using the default styles. Make sure all description keys are going to layer V-NODE:

- CL*
- EOP*
- TREE*
- BM*

Change the description key search order so that the new description key set takes precedence over

the default.

Create a figure prefix database called MasterIt containing the following codes:

- CL
- EOP
- BC

Test the new description key set and figure prefix database by importing the file MasterIt_CodeTest_0202.txt (use the same file for both US and metric units). Note that this file is a comma-delimited PNEZD file.

Translate surveys from assumed coordinates to known coordinates. Understanding how to manipulate data once it is brought into Civil 3D is important to making your field measurements match your project's coordinate system.

Master It Create a new drawing based on the template of your choice and start a new survey database. Import MasterIt_0203.fbk (or MasterIt_0203_METRIC.fbk). When you import the file, turn on the Insert Network Object option. Translate the database based on the following settings:

- Base Point 1
- Rotation Angle of 10.3053°

Perform traverse analysis. Traverse analysis is needed for boundary surveys to check for angular accuracy and closure. Civil 3D will generate the reports that you need to capture these results.

Master It Use the survey database and network from the previous “Master It” exercise. Analyze and adjust the traverse using the following criteria:

- Use an Initial Station value of 2 and an Initial Backsight value of 1.
- Use the Compass Rule option for Horizontal Adjustment.
- Use Length Weighted Distribution Method for Vertical Adjustment.
- Use a Horizontal Closure Limit value of 1:20,000.
- Use a Vertical Closure Limit value of 1:20,000.

Chapter 3

Points

In the previous chapter, “Survey,” you looked at a specific method for bringing in points and figures by the means of survey databases. In this chapter, you will take a closer look at the multiple ways of creating, modifying, and managing Autodesk® AutoCAD® Civil 3D® points.

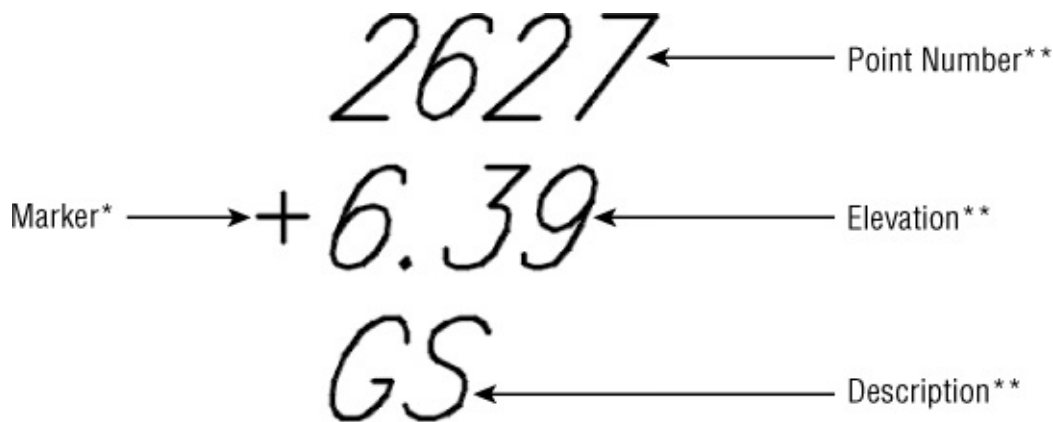
Most commonly, Civil 3D points are used to identify the location of existing features, such as trees and property corners; topography, such as ground shots; or stakeout information, such as road geometry points. However, their use is not limited to the data specified here. This chapter will both focus on traditional point uses and introduce ideas to apply the dynamic power of point editing, labeling, and grouping to other applications.

In this chapter, you will learn to

- Import points from a text file using description key matching
- Create a point group
- Export points to LandXML and ASCII format
- Create a point table

Anatomy of a Point

Civil 3D *points* (see [Figure 3.1](#)) are intelligent objects that represent x, y, and z locations in space. Each point has a unique number and, optionally, a unique name that can be used for additional identification and labeling.



***Marker is part of the marker style**
****Text components are part of the point label style**

Figure 3.1 A typical point object showing a marker, a point number, an elevation, and a description

Each Civil 3D point is represented graphically using two components: a marker and a label. Even though we will focus on the styles to display these components in Chapter 18, “Label Styles,” and Chapter 19, “Object Styles,” we will discuss the basics of these items here. Most of the users are familiar with the

representation of the marker as an + and the label in the form of number, elevation, and description, as shown in [Figure 3.1](#). The marker's representation is defined by an object marker style, while the label is defined by a label style. Note that even if the Civil 3D point object resides on a specified layer, its marker and label can reside on different layers based on the settings defined for those styles. Because of this, a well-defined set of styles in the definition of your template is vital to a functional and productive environment.

A Quick Word on Styles

Separating the point functionality discussed in this chapter from the styles that manage their graphical representation in the drawing is difficult. Since you won't get into the complexity of creating and manipulating label styles and point styles until Chapters 18 and 19, in this chapter you will work with styles that are already part of a drawing. This is true for points, labels, and tables.

COGO Points vs. Survey Points

In Chapter 2, “Survey,” you imported survey data that contained points. Points brought in through the methods described in Chapter 2 are referred to as *survey points*. In this chapter, you will import points from a delimited text file and place them in the drawing using the point-creation tools. Points created in this manner are referred to as *COGO points*. [Figure 3.2](#) shows the contextual tab differences between points brought in as COGO points (top) and points brought in through a survey database (bottom).

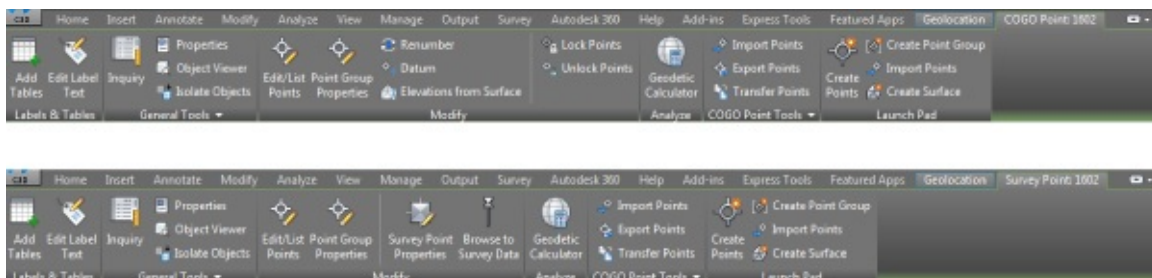


Figure 3.2 The context-sensitive ribbon reflects similarities and differences between COGO points (top) and survey points (bottom).

The differences between COGO points and survey points are subtle but important to note. The definition and graphical representation of a COGO point are stored in the drawing. For this reason its definition can be easily altered at any time, either through its Properties Toolspace or through the tabular view used in Panorama. On the other hand, a survey point has its definition stored within a survey database and its graphical representation stored in the drawing. In order to change its definition, you need to be able to access its survey database and have the rights to write changes to it. Because of these controls and the legal implications that arise from unwanted changes to the topographic data, the use of survey points and databases is becoming more prevalent in today's market. Since these points are managed by the survey database, the place to manage any changes to their definition is within the Survey tab of Toolspace. Regardless of their origin, both COGO points and survey points obey the principles outlined in this chapter.

Creating Basic Points

Certification Objective You can create points in many ways using the Points menu in the Create Ground Data panel on the Home tab of the ribbon. Points can also be imported from text files or external databases or converted from AutoCAD points or other legacy point types.

Point Settings

When we talk about point settings we're actually referring to what is known as *command settings* for points. We provided a quick introduction to command settings in the first chapter, so you know that all the settings that define the creation of Civil 3D objects are available as command settings in the Settings tab of Toolspace. As we discuss the creation and management of Civil 3D points, it is recommended to have the previously mentioned settings readily available for on-the-fly modifications. Whether or not the changes you make on the fly are remembered the next time you create points depends on your template settings.

To make sure that the settings you change hold every time you create points, follow these steps:

1. On the Settings tab of Toolspace, locate the Point collection and click the plus sign to expand the branch.
2. Click the plus sign to expand Commands.
3. As shown in the first screen in [Figure 3.3](#), right-click the command CreatePoints and select Edit Command Settings.

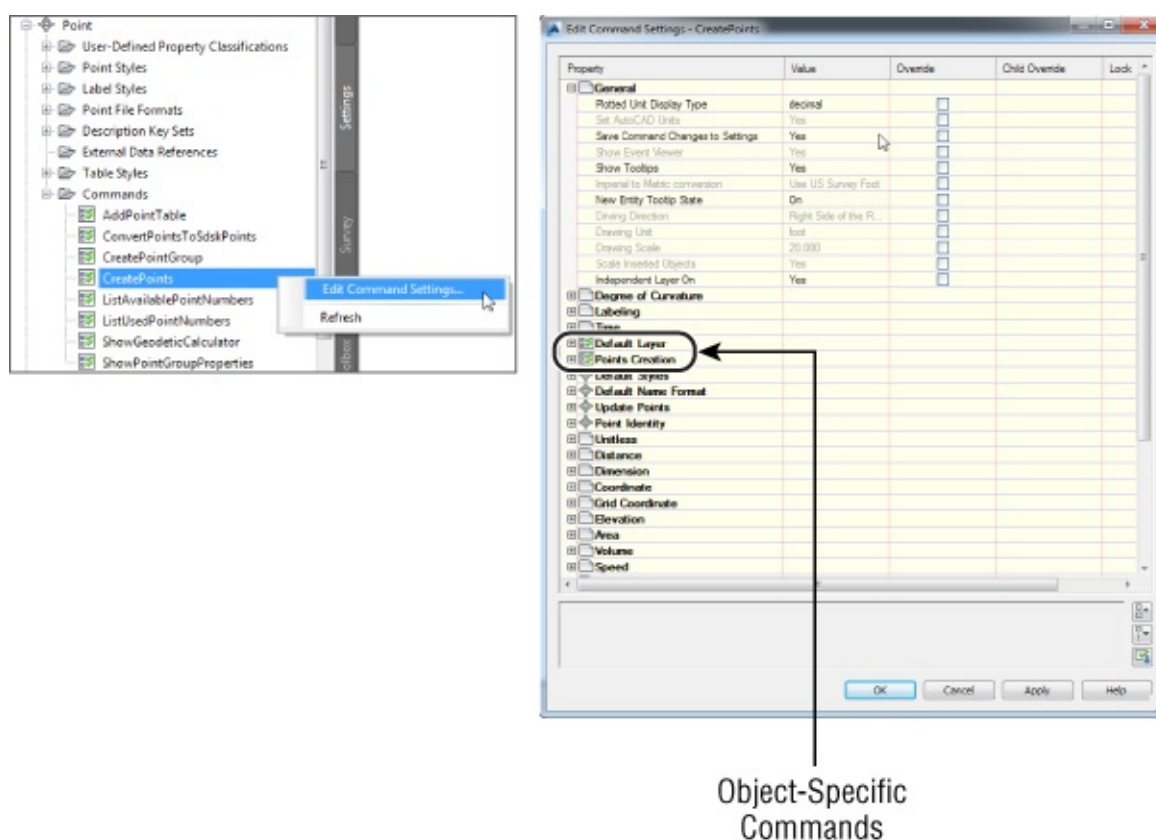


Figure 3.3 In your Civil 3D template, make sure Save Command Changes To Settings is set to Yes for Points.

4. Expand the General section and verify that Save Command Changes To Settings is set to Yes. You will notice that this change affects only the CreatePoints command. If you want to save the settings at the Point collection level for all the commands related to point creation, you will do that from the Edit Feature Settings option that can be selected when you right-click the Point collection.

By setting the Save Command Changes To Settings option to Yes, you are ensuring that changes you make on the CreatePoints toolbar will be saved for the next time you use the command. If you explore the command settings further, you will see the options Default Layer and Points Creation. You will notice that these commands are represented with a different icon from the other settings. This is because these are object-specific command settings defined at the object level, while the others are defined as part of the overall drawing level within the Ambient Settings tab of the Drawing Settings. You will find a defined subset of the options available within the command settings in the Create Points toolbar.

To access the Create Points toolbar, follow these steps:

- 1. Go to the Home tab of the ribbon.
- 2. In the Create Ground Data panel, select Points > Point Creation Tools.
- 3. Expand the toolbar by clicking the chevron button on the far-right side ([Figure 3.4](#)).

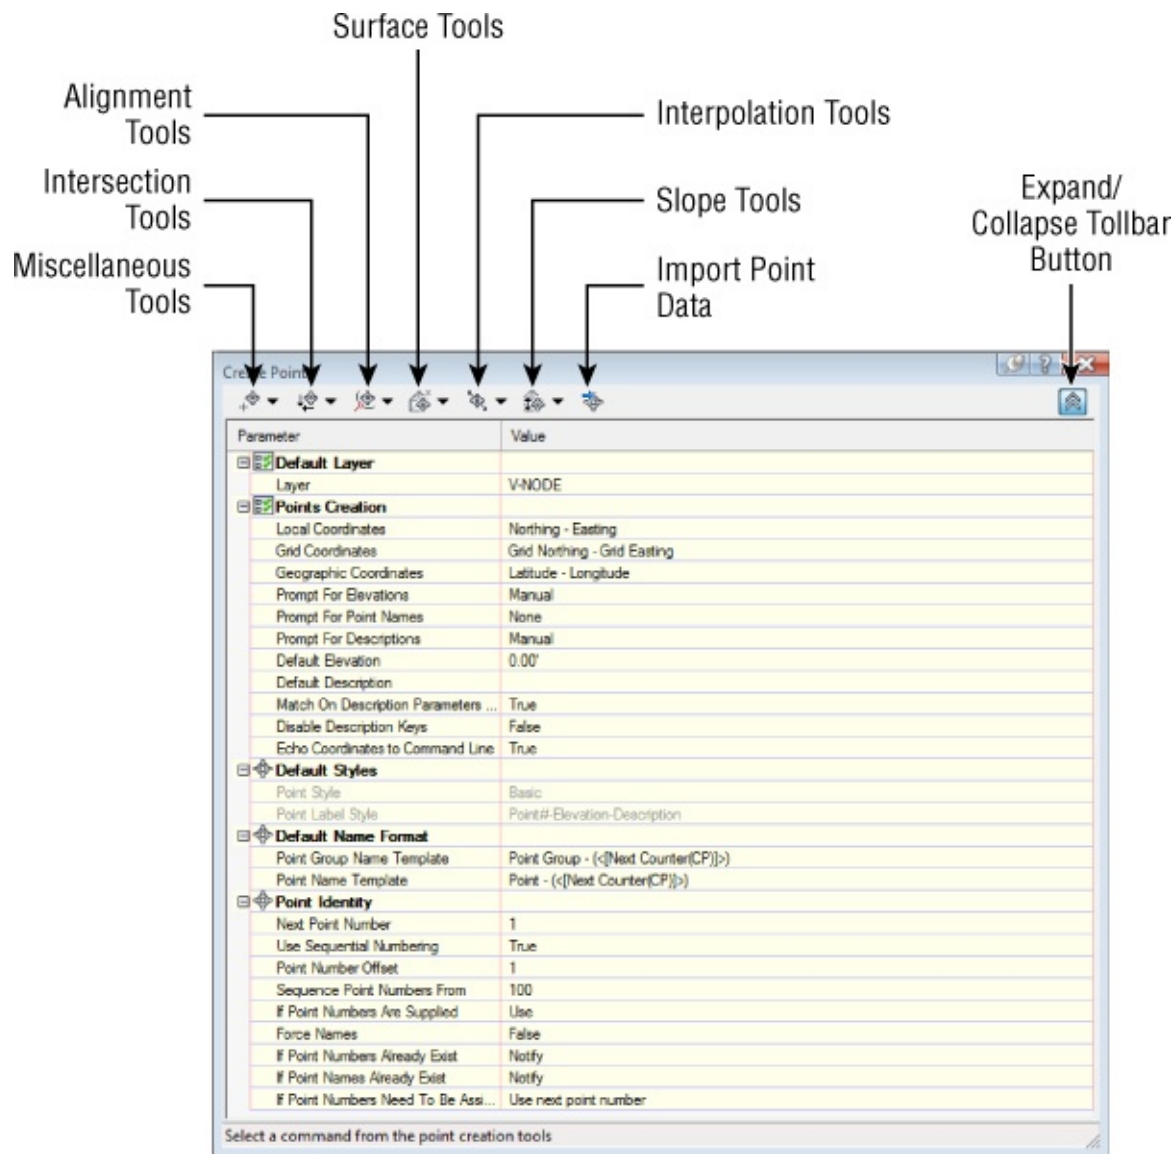


Figure 3.4 Overview of the Create Points toolbar

Default Layer

For most Civil 3D objects, the object layer is established in the drawing settings. In the case of points, the layer depends on whether or not it matches a description key when a description key set is present in the drawing or the point's creation command settings when a default layer is defined. When a description key set is present and active in the drawing, the layer assignment set by the description key set takes precedence over the one defined as the default layer. In other words, when there is no description key set in the drawing or when the point's raw description does not match any of the keys, then the layer for the specific point will be the one set as default in the Default Layer section of the Create Points dialog (see [Figure 3.5](#)). Review Chapter 2 for more information about description key sets.

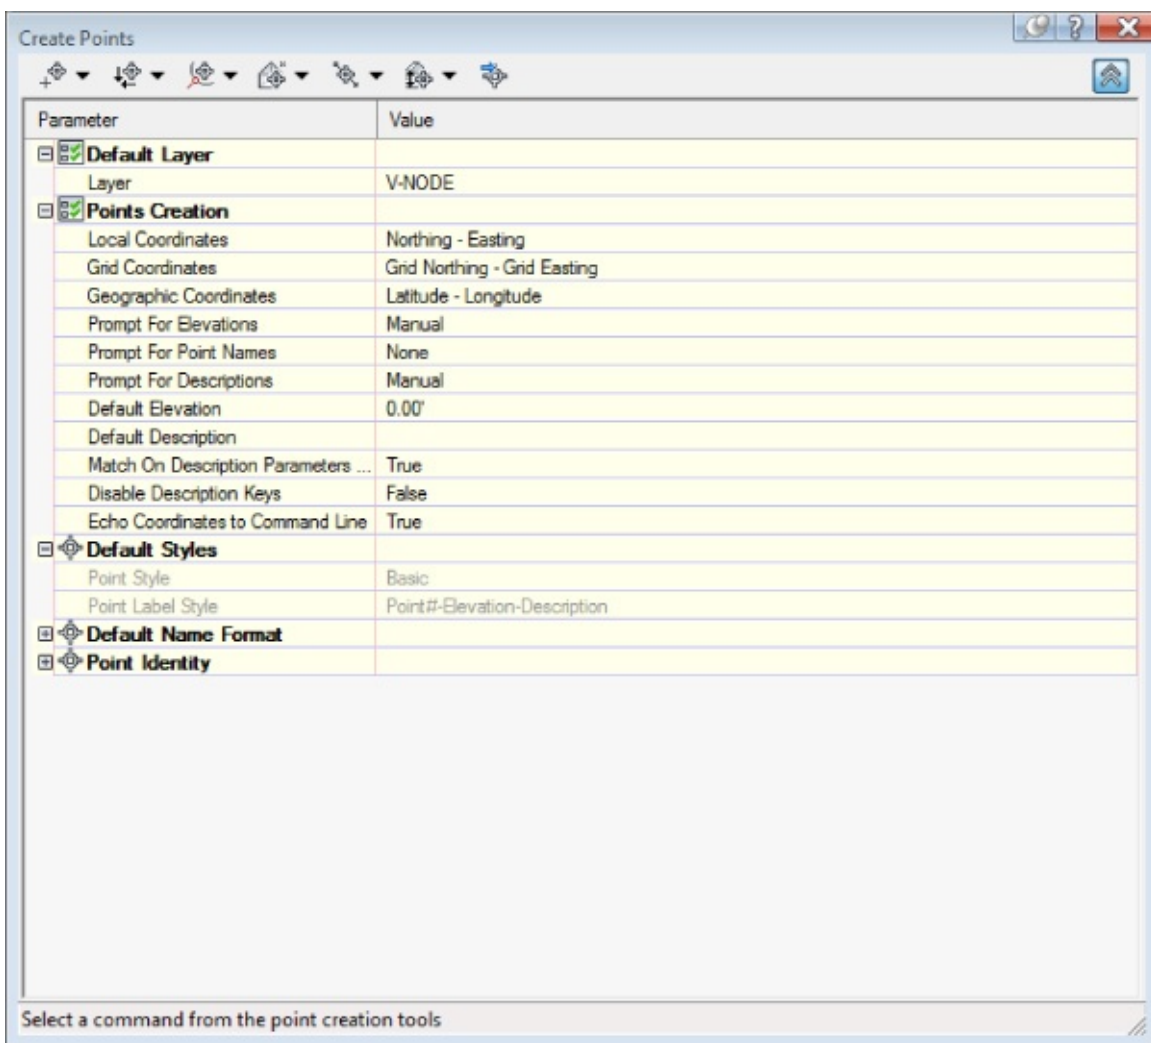


Figure 3.5 Verify the point object layer before creating points.

Points Creation and Default Styles

When creating points in your drawing, you have the option of being prompted for elevations, point names, and descriptions (see [Figure 3.5](#)). This process can be changed to take advantage of the intelligent environment of Civil 3D in the case of creating points from alignment geometry, when you can choose to have points pick up descriptions using the Automatic – Object option. Initially, the Default Description option is blank. In many cases, you'll want to leave these options set to Manual. That way, the command line will ask you to assign an elevation and description for every point you create. Even though the point names option is available, it is best to avoid using them in general (as described later in this section); therefore, leave the Prompt For Point Names option set to None.

If you're creating a batch of points that have the same description or elevation, you can change the Prompt toggle from Manual to Automatic and then provide the description and elevation in the default cells. For example, if you're setting a series of trees at an elevation of 10', you can establish settings as shown in [Figure 3.6](#).

Points Creation	
Local Coordinates	Northing - Easting
Grid Coordinates	Grid Northing - Grid Easting
Geographic Coordinates	Latitude - Longitude
Prompt For Elevations	Manual
Prompt For Point Names	None
Prompt For Descriptions	Manual
Default Elevation	10.00'
Default Description	TREE
Match On Description Parameters ...	True

Figure 3.6 Default settings for placing tree points at an elevation of 10'

Note that these settings apply only to points created from this toolbar. The settings do not affect the elevation or description of points imported from a file.

Also note that the use of description key sets can be disabled in the creation of points, when the Disable Description Keys option is changed from the default False to True. The status of this toggle also defines the availability of options in the Default Styles section of the dialog. When the toggle is set to allow the use of key descriptors, then the Default Point and Label Style options are grayed out, since the descriptors will define those settings. But when the use of key descriptors is disabled, the default styles for points and labels can be customized. However, the default styles used in the creation of points can be changed even with the description keys enabled. You will learn more about this in Chapter 18 and Chapter 19.


Default Name Format and Point Identity

The Default Name Format section is where you can define the macros that manage the naming of the point groups and point names when these are created. You will learn about point groups and point names in the following sections. The Point Identity section is where you can define the settings used in the numbering of the point data both when it's created in the drawing by using the creation tools and when it is imported from outside sources. For example, here you have the option to define the starting number used, whether to use sequential numbering, and what offset should be used in the numbering. Also among these options you will find the settings that define the way to resolve conflicts in the numbering. You will usually run into these kinds of conflicts in the case of point data imported from outside sources that has point numbers that match existing points. In that case you have the option to define how the software should proceed when one of these conflicts arises.

What's in a Name?

Users often confuse a point's *name* with its *description*. The name is a unique, alphanumeric sequence that some software programs use in lieu of a point number. The description refers to the all-important code given to a point out in the field. In Civil 3D terms this is referred to as the Raw Description property for the point. You learned about this and how it is used in the description key set in Chapter 2. Even though you could use point names as well, Civil 3D workflow favors the use of point numbers, so the Prompt For Point Names option is usually set to None. If you do have a point file that uses a name instead of a point number, you will need to create a custom point format, as described later in this chapter.

Importing Points from a Text File

 **Certification Objective** One of the most common means of creating points in your drawing is to import an external text file (see [Figure 3.7](#)). The Import Points tool can be accessed either from the Create Points toolbar or from the Import Panel of the Insert tab on the ribbon.

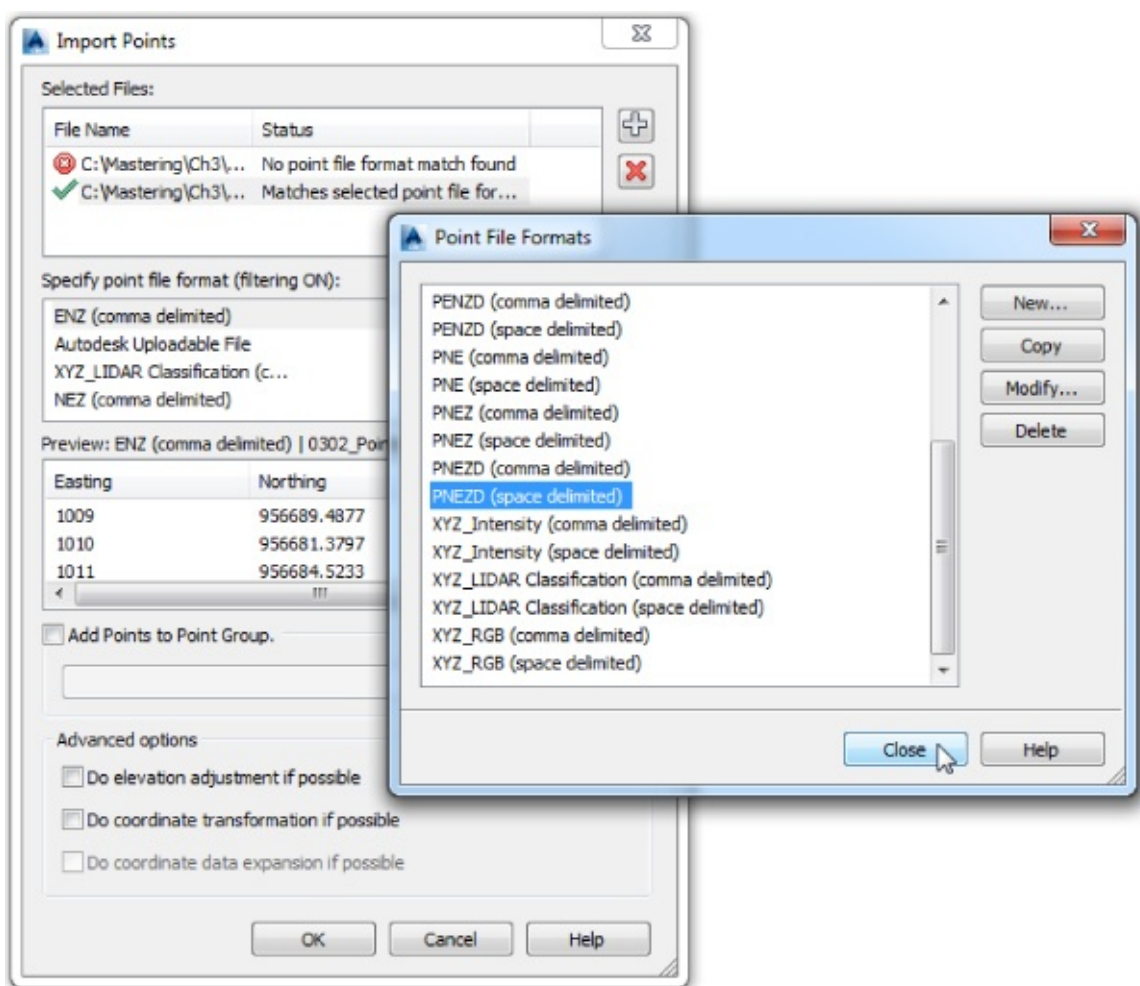





Figure 3.7 The Import Points and Point File Formats dialogs

 To add a file to your Import Points dialog, click the white plus sign to browse. You can add multiple files at once if they are in the same point format—such as a comma-delimited point number, northing, easting, elevation, description (i.e., PNEZD). The import process supports most text formats as well as Microsoft Access database (MDB) files. Later in this chapter, you will experience adding your own text format.

When your file is listed in the top of the dialog, a green check mark indicates that Civil 3D can parse the information. Be careful, though, because Civil 3D does not know the difference between a northing and an easting or a point number and an elevation. You still need to select the correct file format. When the format of the imported data does not match any of the present formats, a red mark will be displayed, and you will not be able to proceed without defining a custom import format that matches the layout of the data, as shown in [Figure 3.7](#).

 The file format filter is available to help you. Civil 3D recognizes how the file is delimited (i.e., tab, comma, space) and shows you only the formats that apply. If you don't want the help, you can turn the filtering off by clicking the Filter icon. This will give you access to the full list of formats defined in the drawing.

Custom Point File Formats and Advanced Options

 If the file format you need is not available or you wish to use the adjustment and transformation capabilities, you can do so by clicking the Manage Formats button. Many types of data are available for

adding to a point format, including LIDAR classification and various latitude-longitude types.

As you can see in [Figure 3.7](#) (shown previously), advanced options are available at the bottom of the Import Points dialog.

- Do Elevation Adjustment If Possible
- Do Coordinate Transformation If Possible
- Do Coordinate Data Expansion If Possible

These options will not affect your points unless the point file format has adjustment, transformation, or expansion built into it.

You can make an elevation adjustment if the point file contains additional columns for thickness, Z+ or Z-. To get Civil 3D to recognize these extra data columns, a new point file format is needed. You can perform a coordinate system transformation if a coordinate system has been assigned both to your drawing (under the drawing settings) and as part of a custom point format. In this case, the program can also do a coordinate data expansion, which calculates the latitude and longitude for each point.



Real World Scenario

The Name Game

A common use of importing points using point file formats is the case of a name-based point file. Since point file formats used for import are stored in the drawing, this is another item that you would want to have already set up in your Civil 3D template. In the following example, you will create a new file format to accommodate names (instead of point numbers):

1. Open the drawing 0301_PointFileFormat.dwg (0301_PointFileFormat_METRIC.dwg), which you can download from this book's web page at www.sybex.com/go/masteringcivil3d2015.
2. Select the Settings tab of Toolspace and choose Point > Point File Formats.
You can also access this functionality on the fly from the Import Points dialog.
3. Right-click Point File Formats and select New.
4. Select User Point File and click OK.
5. Name the format **Name-NEZD (Comma Delimited)**.
6. Toggle on the Delimited By option and place a comma in the field.
7. Click the first <unused> column heading, select Name from the Column Name pull-down, and click OK.
8. Click the next <unused> column and select Northing from the Column Name pull-down.
9. Leave the Invalid Indicator and Precision fields at their defaults and click OK.
10. Repeat the process for Easting, Point Elevation, and Raw Description.

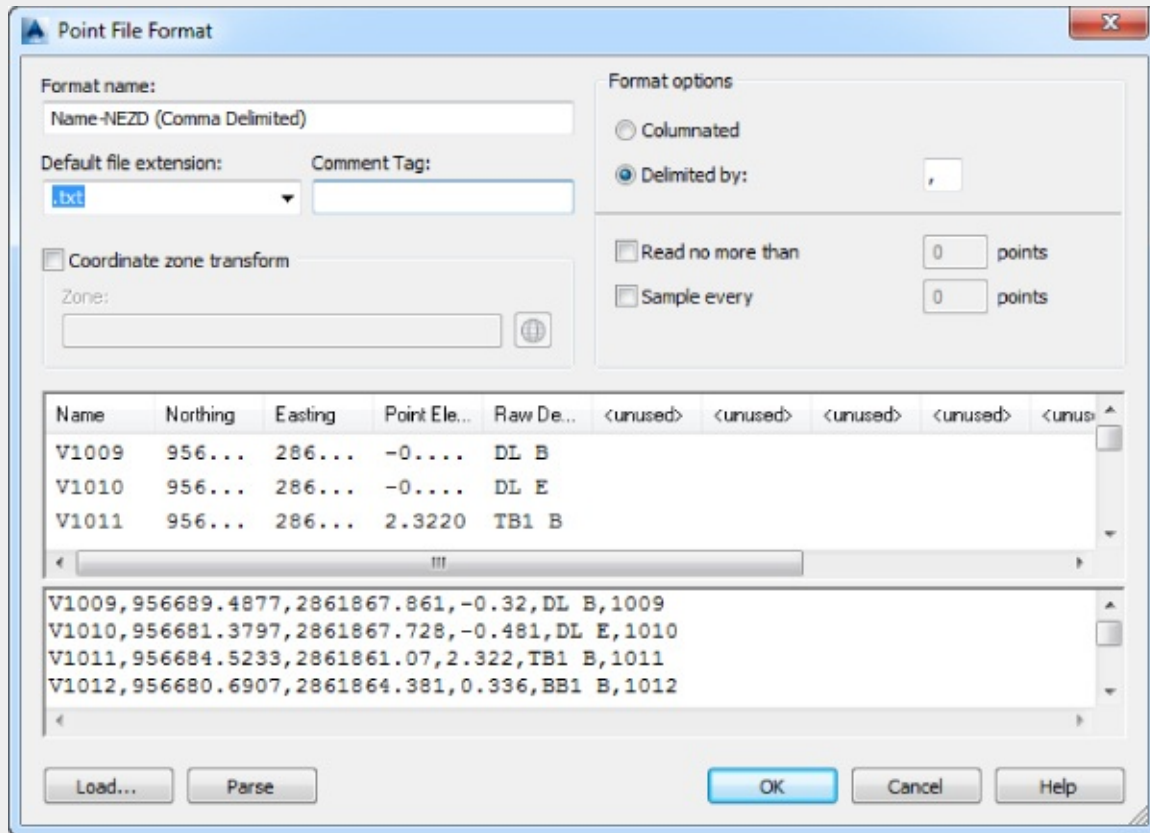
Be sure to add the columns in the correct order or the format will not work with the example file. You may notice that as you use an item from the Column Name list, it is no longer available for

use in another column.

11. To test the format, click Load, select the file 0301_TestFormat.txt (0301_TestFormat_METRIC.txt), and click Open.

12. Click Parse.

If the format has been created successfully, you will see the file preview, as shown here.




13. Click OK to complete the format.

After you learn how, revisit this drawing and import points. You will see that Civil 3D assigns point numbers in addition to using the names.

To compare your work with a completed example, see 0301_PointFileFormat_FINISHED.dwg (0301_PointFileFormat_METRIC_FINISHED.dwg).

Importing a Text File of Points

In this exercise, you'll learn how to import a TXT file of points into Civil 3D:

1. Open the 0302_PointImport.dwg (0302_PointImport_METRIC.dwg) file, which you can download from this book's web page.
2. On the Home tab > Create Ground Data panel > Points, select Point Creation Tools.
3.  On the Create Points toolbar, click the Import Points button.
4. Click the white + button to the right of the Selected Files field, and navigate to locate the 0302_Points.txt (0302_Points_METRIC.txt) file.
5. Select the file and click Open.
6. In the Specify Point File Format field, set the format to PNEZD (Comma Delimited).



7. Place a check mark in the box next to **Add Points To Point Group** and click the **Create Point Group** icon. Name the point group **Mastering Survey Data** and click OK.

8. Leave the boxes under **Advanced Options** unchecked.

9. Click OK.

You may have to use **Zoom Extents** to see the imported points. (Hint: Double-click your middle mouse wheel for zooming extents.)

10. Save the drawing.

To compare your work with a completed example, see `0302_PointImport_FINISHED.dwg` (`0302_PointImport_METRIC_FINISHED.dwg`).

Converting Points from Non-Civil 3D Sources

Base AutoCAD points, Land Desktop points, and Softdesk points are types of data that Civil 3D can readily convert from within a drawing. Other types of data that can be converted to Civil 3D points are represented by blocks. To convert, blocks must minimally be defined so that the insertion point's coordinates coincides with the coordinate values of the point and have an assigned z value that defines the elevation. If a block also has the number, description, and elevation as block attributes, it is even easier to convert them to Civil 3D points. Therefore, whenever possible, your best course of action would be to request the survey in text format or LandXML that can be easily imported into Civil 3D. However, if you need to migrate a drawing that contains legacy point data, tools are available to convert that data to Civil 3D point objects.

A Land Desktop point database (the `Points.mdb` file found in the `COGO` folder in a Land Desktop project) can be directly imported into Civil 3D in the same interface in which you'd import a text file.

Land Desktop point objects, which appear as `AECC_POINTS` in the AutoCAD Properties palette, can also be converted to Civil 3D points via the **Convert Land Desktop Points** option (see [Figure 3.8](#)). Upon their conversion, this tool gives you the opportunity to assign styles, create a point group, and more.

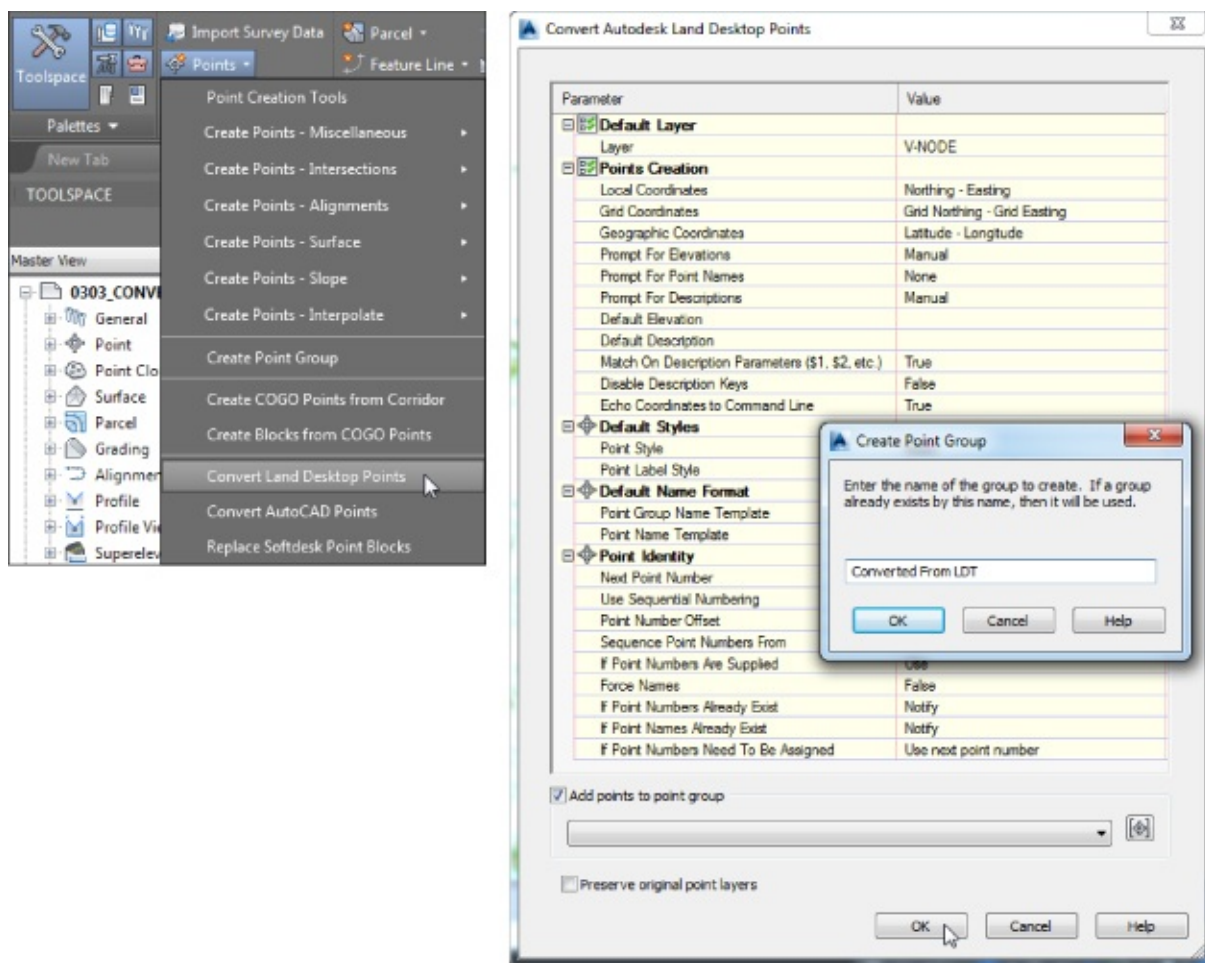


Figure 3.8 Selecting the Convert Land Desktop Points option (left) opens the Convert Autodesk Land Desktop Points dialog (right).

Converting Points

In this exercise, you'll convert Land Desktop point objects into Civil 3D points and export the data to LandXML and ASCII format files.

1. Open the 0303_ConvertPoints.dwg (0303_ConvertPoints_METRIC.dwg) file, which you can download from this book's web page.
2. Use the List command or the AutoCAD Properties palette to confirm that most of the objects in this drawing are AECC_POINTS, which are points from Land Desktop.
3. On the Home tab > Create Ground Data panel > Points menu, select Convert Land Desktop Points. Note that the Convert Autodesk Land Desktop Points dialog allows you to choose point-creation settings and styles.
4. Place a check mark next to Add Points To Point Group.
5. Click the Create A New Point Group button.
6. Name the group **Converted From LDT**, as shown in [Figure 3.8](#), and click OK.
7. Clear the Preserve Original Point Layers check box.

This option will move the resulting points to the layer specified in the description key set if there is a match. If there is no match, the point will go to the default layer.

8. Click OK to complete the conversion process.

Civil 3D scans the drawing looking for Land Desktop point objects.

9. Once Civil 3D has finished the conversion, zoom in on any of the former Land Desktop points.
The points should now show as COGO points in the AutoCAD Properties palette, confirming that the conversion has taken place. The Land Desktop points have been replaced with Civil 3D points, and the original Land Desktop points are no longer in the drawing.
10. In Toolspace > Prospector tab, expand the Point Groups category.
Notice that there is a yellow exclamation shield symbol indicating that the Converted From LDT point group needs to be updated.
11. Right-click Point Groups and select Update.
12. On update, the points will display using the defined settings.
13. Select the Converted From LDT point group and right-click it. Select Export Points from the menu. Set the export format to PNEZD (Comma Delimited), define the destination file as a text file, name it **0303_ConvertPoints.txt (0303_ConvertPoints_METRIC.txt)**, and click Open. By default the selection of points is limited to the selected group. Clear the advanced options check marks if any are selected. Click OK.
14. Select the Converted From LDT point group once more, right-click it, and from the context menu select the Export LandXML option found toward the bottom of the menu. In the dialog box, by default your point group is selected to be exported. All you need to do is to click OK. You will be prompted to save the LandXML file, and the suggested name should be fine. Save the file.
15. Once the export is done, save the drawing file.

To compare your work with a completed example, see 0303_ConvertPoints_FINISHED.dwg (0303_ConvertPoints_METRIC_FINISHED.dwg).

Converting Blocks

In this exercise, you'll convert blocks with data that can be extracted into Civil 3D points:

1. Open the 0304_ConvertBlocks.dwg (0304_ConvertBlocks_METRIC.dwg) file, which you can download from this book's web page.

Notice the point data in the form of blocks. You'll see that all of them are instances of the same block, their insertion point coincides with the origin of the field shot, they have a z value assigned to each that corresponds to the field elevation, and the attribute data assigned to each instance actually contains fields that you can use. This is the best scenario for conversion of blocks (see [Figure 3.9](#)).

■ 2240
■ 5.944
■ GS

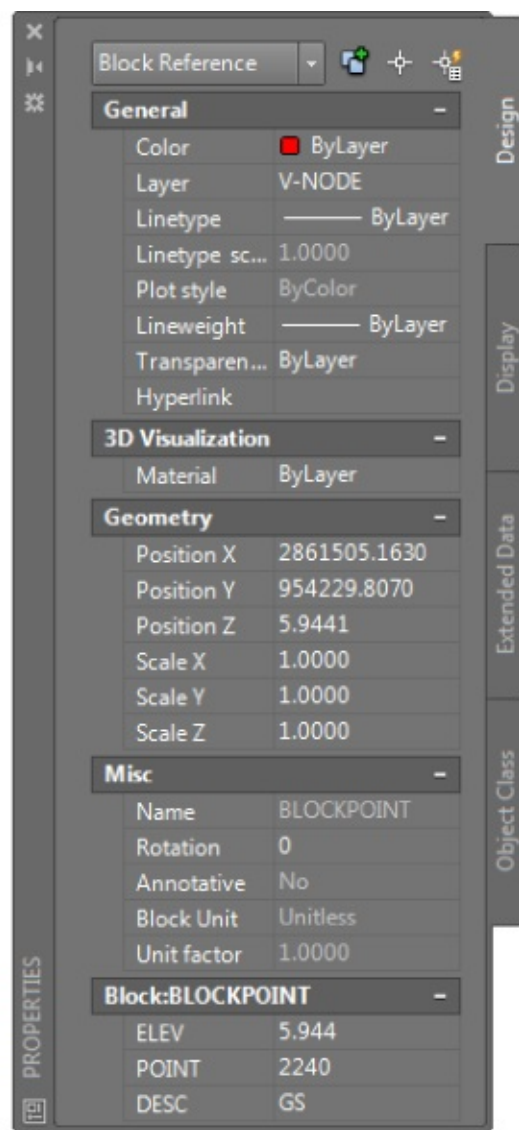


Figure 3.9 Block with data that can be extracted to a text file and reimported as a Civil 3D point

To convert the data you need to generate the text file that you can import back and create points.


2. Go to the Insert tab ➤ Linking & Extraction Panel and click the Extract Data button.
3. In the Data Extraction - Begin (Page 1 Of 8) dialog, select Create A New Data Extraction. Click Next. You will be prompted to save your data extraction as a new .dxe file. Select the location and give it a proper name. Click Save to go to the next step.
4. In the Data Extraction - Define Data Source (Page 2 Of 8) dialog, change the selection from the default to Select Objects In The Current Drawing, and by using the selection button to the right of the option select the point blocks. Click Next.
5. In the Data Extraction - Select Objects (Page 3 Of 8) dialog, clear the selection for everything but the BLOCKPOINT object. Click Next.
6. In the Data Extraction - Select Properties (Page 4 Of 8) dialog, in the Category Filter area, clear the selection for everything but the Attribute and Geometry filters. Once these two filters are selected, you will have options for which properties you want to extract. In order to have a working PNEZD file, you will need to select and extract the following: POINT property for the Point Number, Position Y for the Northing, Position X for the Easting, ELEV property for Elevation, and DESC property for Description. Since the block already has a z value assigned to it, you can swap if needed the ELEV property for the Position Z, but for this exercise you will just use the ELEV property. Therefore, check

the selection for the items listed here, clear the ones not in the list, and click Next.

7. In the Data Extraction - Refine Data (Page 5 Of 8) dialog, clear the selections for Show Count Column and Show Name Column. You will be left with the five known columns for a PNEZD file, which you will need to rearrange to meet your point format requirement. Select the column headers and drag them into this order from left to right: POINT, Position Y, Position X, ELEV, and DESC. Click Next.
8. In the Data Extraction - Choose Output (Page 6 Of 8) dialog, select to output data to an external file. When you see the file path and file type the data will be saved into, click the ellipsis button to select a new path. Select where you want to save, the name for the file, and choose .x1s from the Files Of Type drop-down menu. Click Save to exit the dialog and Next to advance to the next step.
Clicking Next will take you to Page 8. In this particular workflow, you will not see Page 7.
9. In the Data Extraction - Finish (Page 8 Of 8) dialog, click the Finish button to end the extraction process.
10. Open the file in Microsoft Excel and delete the first row, which contains the header cells. Save the modified file as CSV (Comma Delimited) by browsing to a location of your choice, assigning a name to the file, and disregarding the Excel warning regarding the loss of functionality when saving to CSV. The dialog box might provide you with different warnings based on what version of the Office suite you have.
11. In Civil 3D, use the Import Points option from the Creation Points toolbar, choose PNEZD (Comma Delimited) as the format for points, and select the created CSV file as the source for the data. Add the points to a point group. A point group called Mastering Survey Data is already in the drawing, so you can use that as the point group for the insertion of this data.
12. Once the import is complete, the points will be created in the drawing and you can safely delete the source blocks or change their layer if you still want to keep them in the drawing.
13. The Extraction file (.dxe) can be used for future extractions that match the settings for your non-Civil 3D data.
14. Save the drawing.

To compare your work with a completed example, see 0304_ConvertBlocks_FINISHED.dwg (0304_ConvertBlocks_METRIC_FINISHED.dwg).

A Closer Look at the Create Points Toolbar

 In Civil 3D 2015, you can find point-creation tools directly under the Home tab **Create Ground Data Panel > Points** drop-down as well as in the **Create Points** toolbar. The toolbar is *modeless*, which means it stays on your screen even when you switch between tasks. If you go back to [Figure 3.4](#), you'll see the available point-creation methods.

As you place points using these tools, a few general rules apply to all of them. If you place a point on an object with elevation, the point will automatically inherit the elevation of the object. If you use the surface options, the point will automatically inherit the elevation of the surface you choose.

Miscellaneous Point-Creation Options The options in the Miscellaneous category allow you to create a point by manually specifying its location on screen or relative to existing basic objects in the drawing. Also within this category are the options to convert data from AutoCAD points

or Softdesk point blocks (see [Figure 3.10](#)).

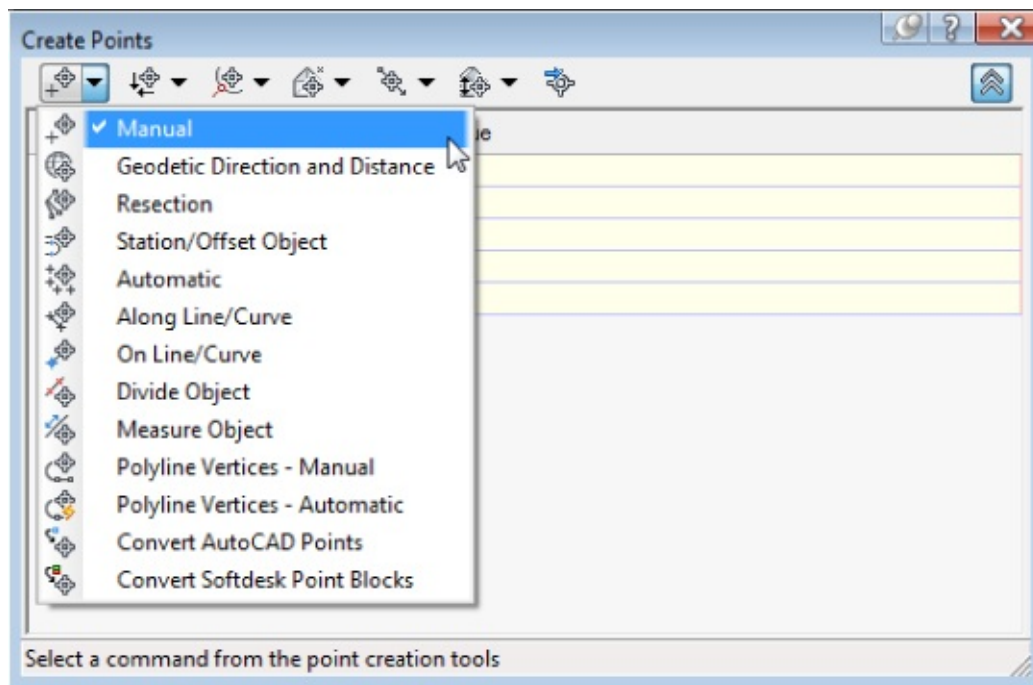


Figure 3.10 Miscellaneous point-creation options

Intersection Point-Creation Options The options in this category allow you to place points based on the calculated intersection of specific items without defining construction lines. For example, if you needed a point at the intersection of two bearings, you could draw two construction lines using the Bearing Distance transparent command, manually place a point where they intersect, and then erase the construction lines. By using the tools within this category, you could use the Direction/Direction tool to accomplish the same without using construction lines (see [Figure 3.11](#)).

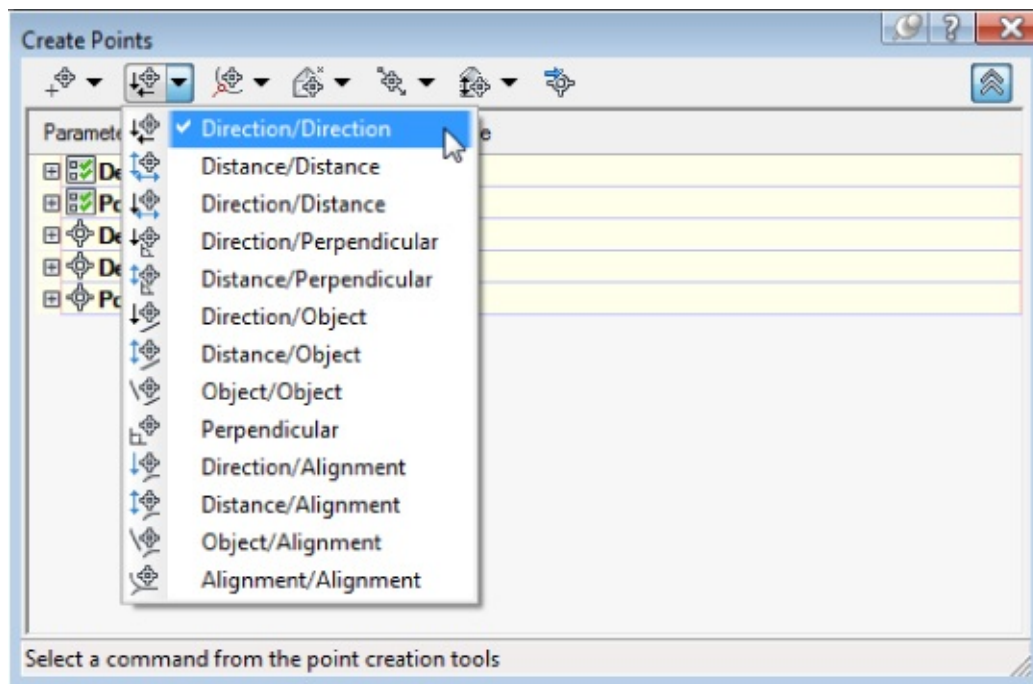


Figure 3.11 Intersection point-creation options

Alignment Point-Creation Options The options in the Alignment category are designed for creating stakeout points based on a road centerline or other alignments. You can also set profile geometry points along the alignment using a tool from this menu. See [Figure 3.12](#).

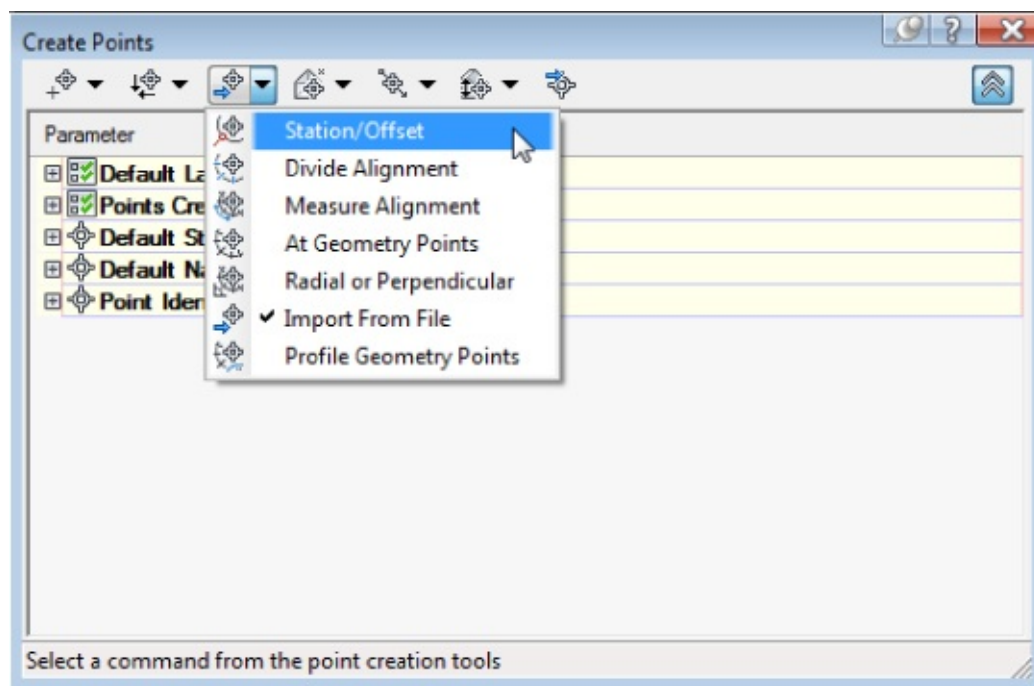


Figure 3.12 Alignment point-creation options

Surface Point-Creation Options The options in the Surface category let you set points that harvest their elevation data from a surface. Note that these are points, not labels, and therefore aren't dynamic to the surface. You can set points manually, along a contour or a polyline, or in a grid (see [Figure 3.13](#)).

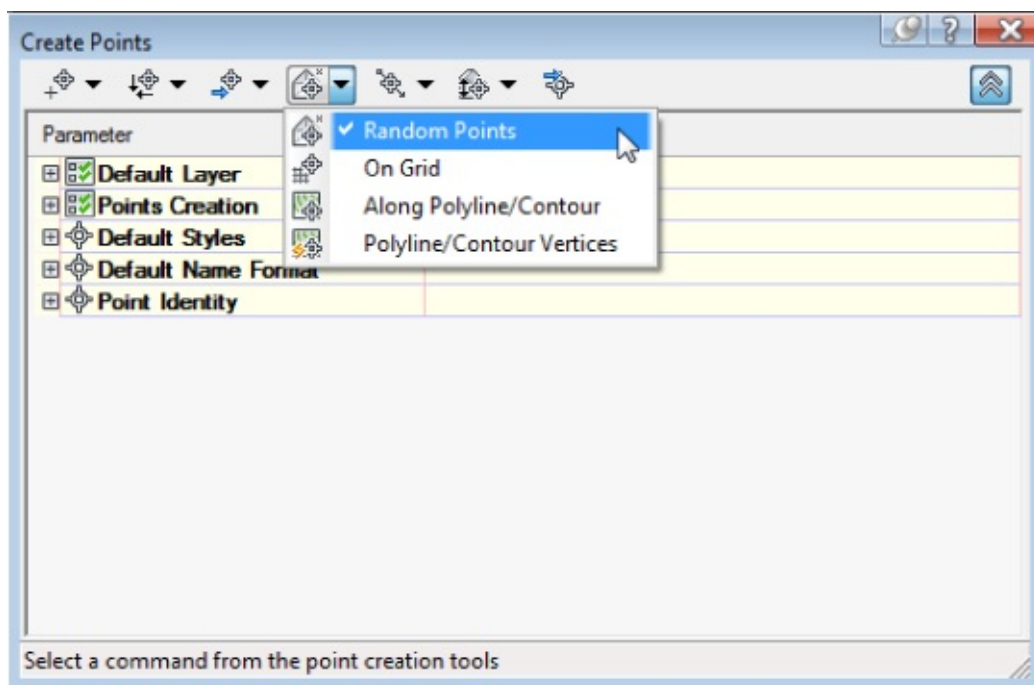


Figure 3.13 Surface point-creation options

Interpolation Point-Creation Options The Interpolation category lets you fill in missing information from survey data or establish intermediate points for your design tasks. For example, suppose your survey crew picked up centerline road shots every 100' (30 m) and you'd like to interpolate intermediate points every 25' (8 m). Instead of doing a manual slope calculation, you could use the Incremental Distance tool to create additional points (see [Figure 3.14](#)).

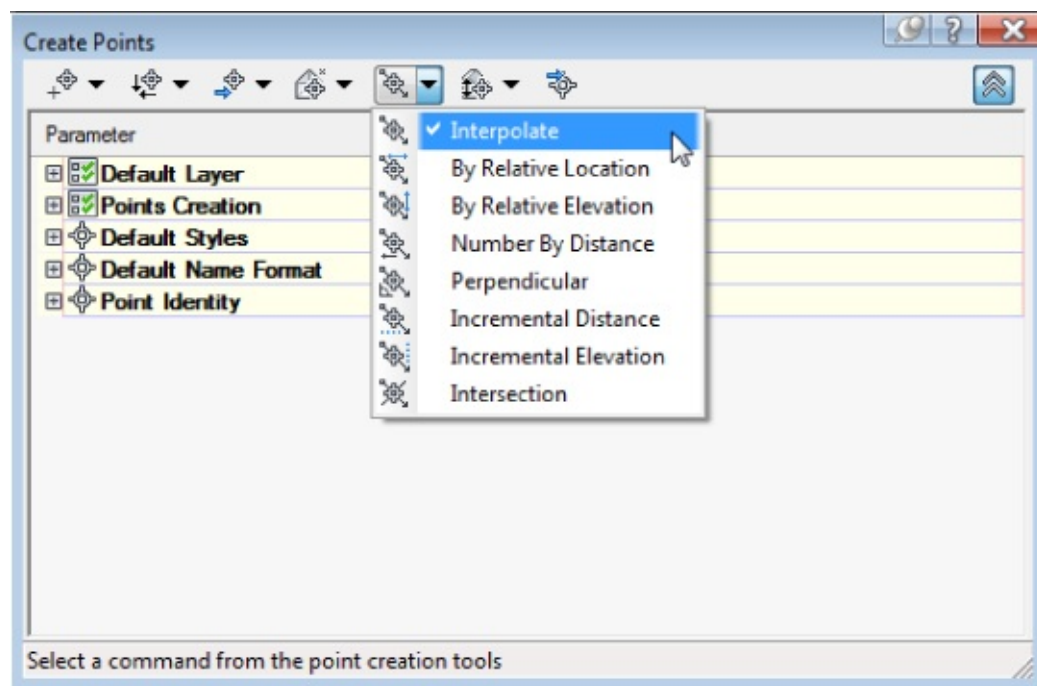


Figure 3.14 The Interpolation point-creation options

Another use would be to set intermediate points along a pipe stakeout. You could set points for the starting and ending inverts and then set intermediate points along the pipe to assist the field crew.

Slope Point-Creation Options The Slope category allows you to set points between two known elevations by setting a slope or grade. Similar to the options in the Interpolation and Intersection categories, these tools save you time by eliminating construction geometry and hand calculations (see [Figure 3.15](#)).

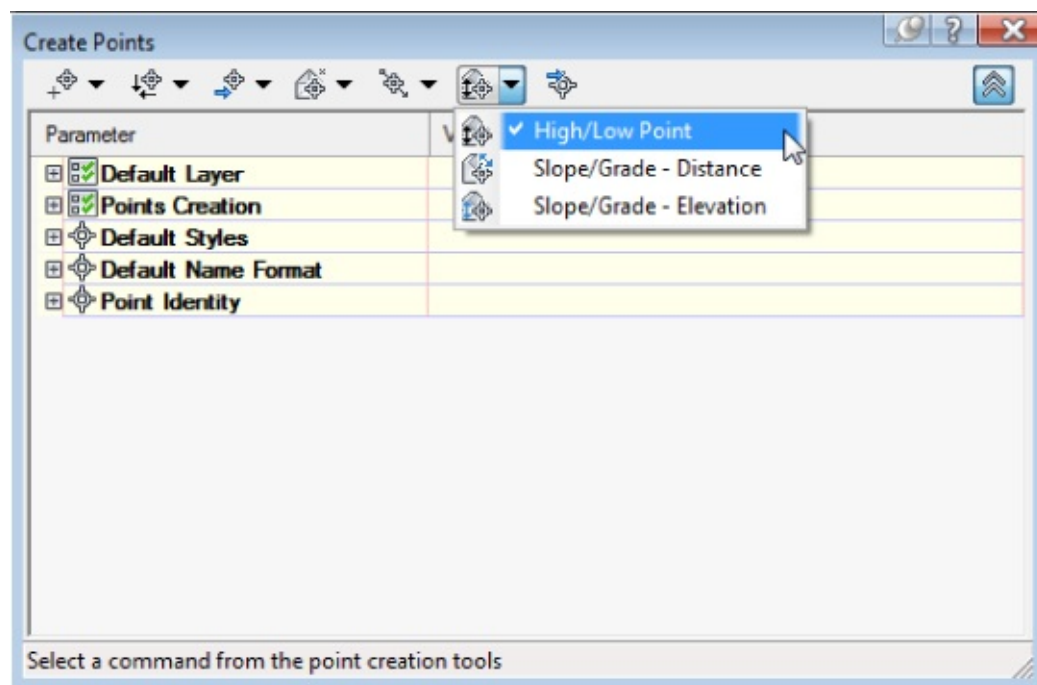


Figure 3.15 Slope point-: creation options

Using the Automatic – Object Option

The Description option in the point settings Automatic – Object can be used only when placing points along an alignment. For example, when you're placing points using the At Geometry Points option, the point will inherit the alignment's name, the station value of the point, and the type of geometry as its description.

For all other point-placement options, Automatic – Object will behave exactly the same as Automatic.

Creating Points

In this exercise, you'll learn how to create points along a parcel segment and along a surface contour:

1. Open `0305_PointCreation.dwg` (`0305_PointCreation_METRIC.dwg`), which you can download from this book's web page.
Note that the drawing includes alignments, a series of parcels, and an existing ground surface.
2. On the Home tab > Create Ground Data panel > Points menu, click Point Creation Tools.
3. If it is not already expanded, click the chevron icon on the right to expand the dialog.
4. Expand the Points Creation category.
5. Change the Prompt For Elevations value to None and the Prompt For Descriptions value to Automatic by clicking in the respective cell in the Value column, clicking the down arrow, and selecting the appropriate option.
6. Enter LOT for Default Description (see [Figure 3.16](#)).

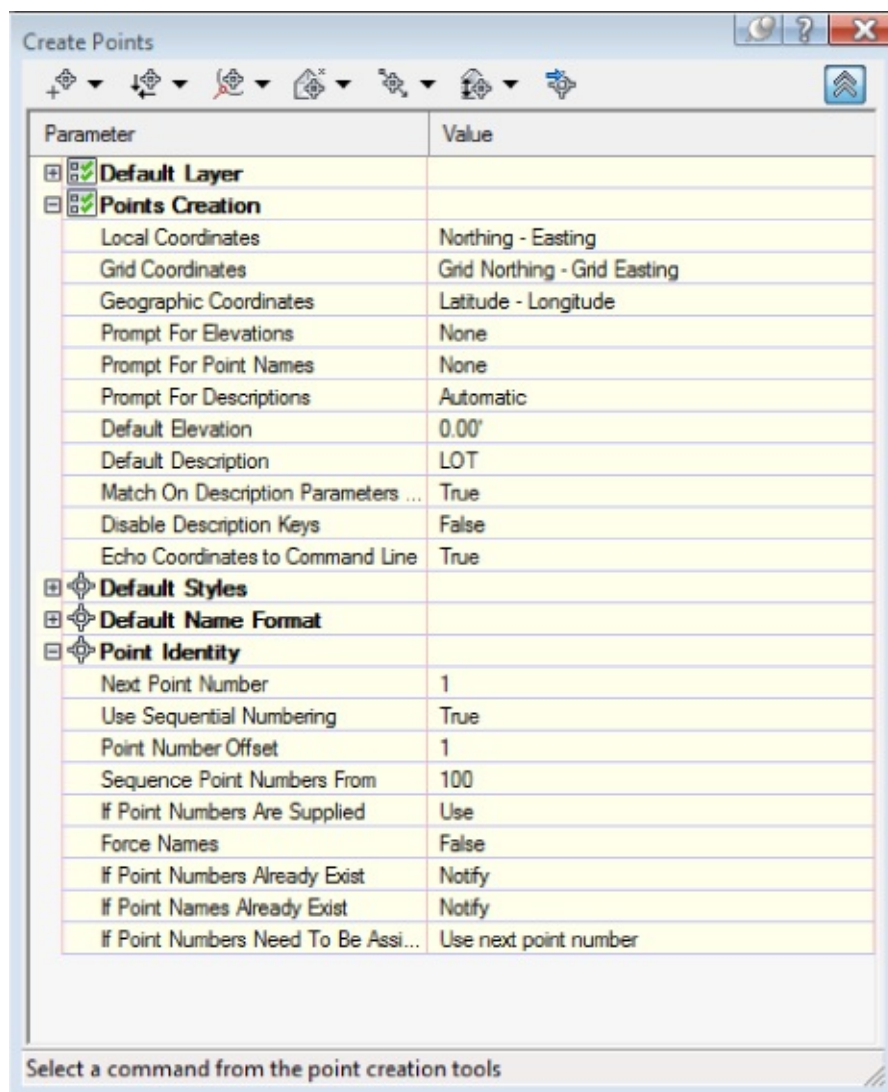


Figure 3.16 Point-creation settings in the Create Points dialog

This will save you from having to enter a description and elevation each time. Because you're setting stakeout points for rear lot corners, you will disregard elevation for now.



7. Select the Automatic tool from the Miscellaneous flyout (the first button flyout on the top left of the Create Points toolbar).
8. Focusing on the area at end of the cul-de-sac you will find the parcel named BCG_Lots : 1. Select that parcel by selecting one of its segments. Press **↵**.
9. Press **Esc** to exit the command.

A point is placed at each property corner and at the endpoints of each curve. Even if the marker is visible you will not see the point label. The reason is that since there is no description key within the set to manage the LOT key, the point's labeling is managed by the settings of the point group it belongs to. It belongs to the only point group defined in the drawing, the default **_All Points**, which has by default the labeling for its points set to **<none>**.

10. Right-click the **_All Points** group within the Point Groups collection in the Prospector tab of Toolspace and choose **Properties**, as shown in [Figure 3.17](#). Then choose **Description Only** from the Point Label Style drop-down on the Information tab of the Points Group Properties - **_All Points** dialog. Click **OK** to exit the dialog.

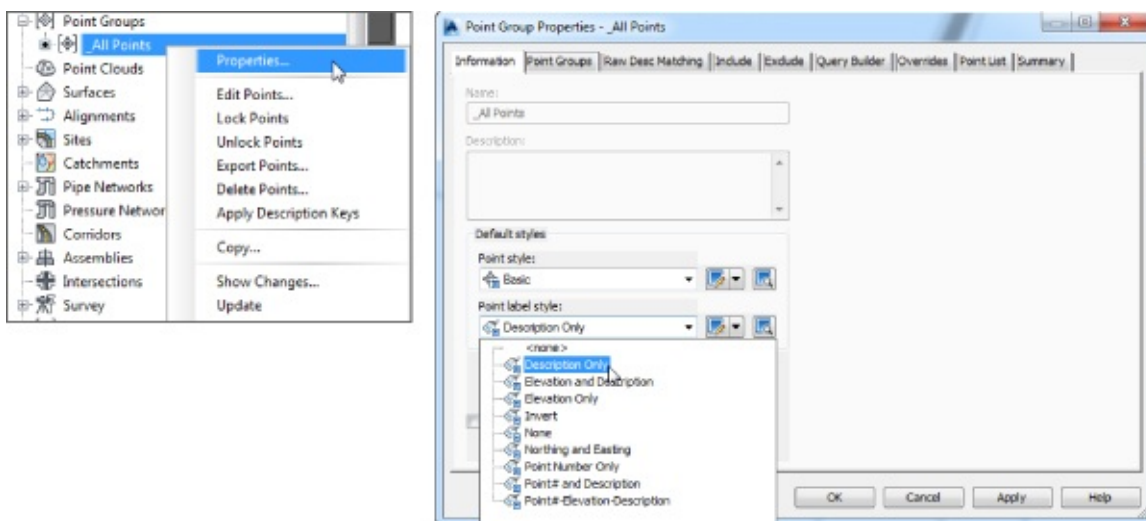






Figure 3.17 To assign a label style to the _All Points group, access its properties (left) and assign the desired style (right).

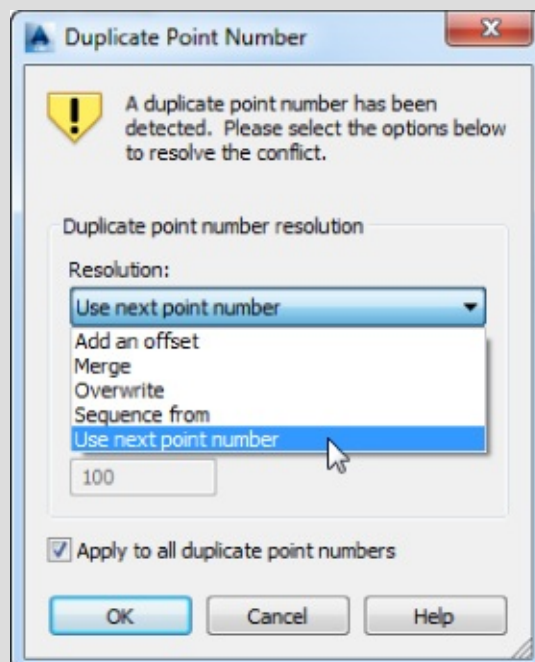
11.  Select the Measure Object tool from the Miscellaneous flyout.
12. Click anywhere on the parcel boundary for BCG_Lots : 29.
After you select the parcel boundary for BCG_Lots : 29, this tool prompts you for starting and ending stations.
13. Press **↵** twice to accept the default starting and ending stationing and again to accept the default of 0 for the offset.
14. At the Interval prompt, enter 25 if you are working in feet and 10 if you are working in metric units. Press Enter to continue.
15. Press Esc to exit the command.
A point is placed at 25' (10 m) intervals along the property boundary.
- Next, you'll experiment with the Direction/Direction option from the Intersection Point flyout. Be sure your Endpoint Osnap is on for the next steps.
16.  Let's focus now on BCG_Lots : 33. Click the Direction/Direction icon and click the northwest endpoint of the parcel line that this property shares with BCG_Lots : 1.
17. Click the opposite endpoint of the segment that the two of them share to establish the direction of the line.
The yellow arrow that appears indicates the direction.
18. Press **↵** to specify the default of 0 for the offset.
19. Click the southeast corner of BCG_Lots : 33 on the property line that this property shares with BCG_Lots : 34 and then click the endpoint of the same property line to establish the second direction.
20. Press **↵** to specify a zero offset.
A point is generated where the two lines would intersect if they were to be extended. Press Esc to exit the command.
21. In the point-creation settings, change Prompt For Descriptions to Automatic – Object.

12.  From the Alignments flyout, choose **At Geometry Points**.
13. When prompted for an alignment, select the green centerline alignment, **ROAD G**.
You are now prompted for a profile.
14. Select **FG-ROAD G** from the drop-down and click **OK**.
15. Press **↵** twice to confirm the starting and ending station values along the alignment.
16. Press **Esc** to exit the command.
You should now see points whose names are based on alignment information.
17. Return to the Point Settings category and change **Prompt For Elevations** to **Manual** and **Default Description** to **EG**.
The next round of points you'll set will be based on the existing ground elevation.
18.  Select the **Along Polyline/Contour** tool in the **Surface** flyout.
19. When prompted with **Distance between points<10.0000>**, key in **9** for feet (3 for meters) and press **Enter** to continue.
20. Click the magenta polyline inside **BCG_Lots : 1**. Notice that the points will be created, but their label style will not use the default of the **_All Points** group. You will know why if you look at the description key for the **EG** code.
21. Press **Esc** to exit the command, close the **Create Points** toolbar, save the drawing, and keep it open for the next exercise.

You can go ahead and experiment with the variety of point-creation tools available.

Double Troubles

Civil 3D does not allow two points to share the same point number or name. If a duplicate point number is detected, Civil 3D will warn you and ask you how you would like to handle it.



The Duplicate Point Number dialog allows you to take action. You have several options in the Resolution drop-down:

Add An Offset This option allows you to add a value to all incoming points. Specifying an offset of 1000 would turn 1, 2, and 5 into 1001, 1002, and 1005.

Merge If the existing point has a description but no elevation and the incoming point has an elevation and no description, Civil 3D will fill in the gaps with the incoming information. If there is no missing data and the coordinates are identical, the incoming point will be ignored. Be careful using Merge; it will behave similar to the Overwrite option if the coordinates don't match.

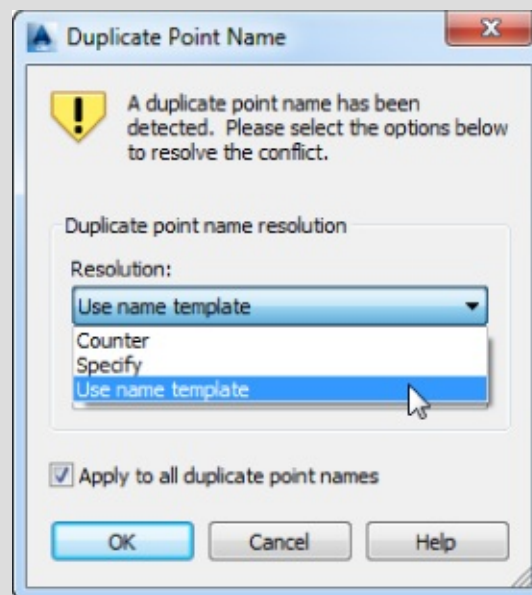
Overwrite This option deletes the existing point and replaces it with the incoming point.

Sequence From This option will restart the numbering at a higher value. Unlike with adding an offset, the original point number is ignored. Setting a sequence from 1000 would turn 1, 2, and 5 into 1001, 1002, and 1003.

Use Next Point Number The default option in the Resolution drop-down, Use Next Point Number, finds the next-available point number and assigns it to the point on import.

Point numbers are assigned using the Point Identity settings in the Create Points dialog or the point file from which they originated. To list available point numbers, enter `ListAvailablePointNumbers` on the command line, or select any point to open the COGO Point contextual tab and choose **COGO Point Tools > List Available Point Numbers**.

In the case of duplicate point names, options exist to ensure that you keep these unique as well.



The Duplicate Point Name dialog gives you options to resolve duplicates. In the Resolution drop-down you will find the following options:

Counter This option takes the name and adds a numeric counter. For example, if you are attempting to import duplicate number V100, the new name will become V100(1).

Specify This option lets you type in the name you want for the new point. Even though names are optional for points in general, this option requires you to key in a name before allowing you to proceed.

Use Name Template

This is the default option, which looks back at the point-creation command settings. The existing point name is ignored and overridden by the setting from the point name template.

Please note that for both of the options for dealing with duplicates a check box in the dialog box allows the selected resolution to be applied automatically to all the conflicts found. If you'd rather apply the same resolution to all the conflicts than select the resolution on a point-by-point basis, make sure to check that box.

Basic Point Editing

Despite your best efforts, the point data will often be placed in the wrong location or need additional editing to bring it to the desired status. For example, points may need to be rotated as a group to match a different horizontal datum or may need to be raised or lowered to match a different benchmark.

Graphic Point Edits

Points can be moved, copied, rotated, deleted, and more using standard AutoCAD commands and grip edits. When you pause your cursor over a grip, a special grip menu will appear with different options. [Figure 3.18](#) (left) shows the grip menu options for the label. [Figure 3.18](#) (right) shows the options available directly on the point. Using the options shown here, you can move the point and rotate it independently of the text and rotate the text label independently of the marker.


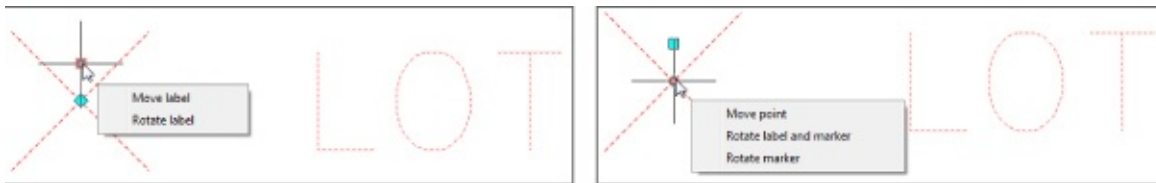


Figure 3.18 The top grip allows label modifications (left); the center grip allows marker modifications (right).

Panorama and Prospector Point Edits

You can access many point properties through the Point Editor in Panorama:

 1. Continue working in the drawing from the previous exercise, or open `0305_PointCreation_FINISHED.dwg` (`0305_PointCreation_METRIC_FINISHED.dwg`) and choose a point (or several points).



2. From the COGO Point contextual tab > Modify panel, select Edit/List Points.

Panorama brings up information for the selected point(s) (see [Figure 3.19](#)).

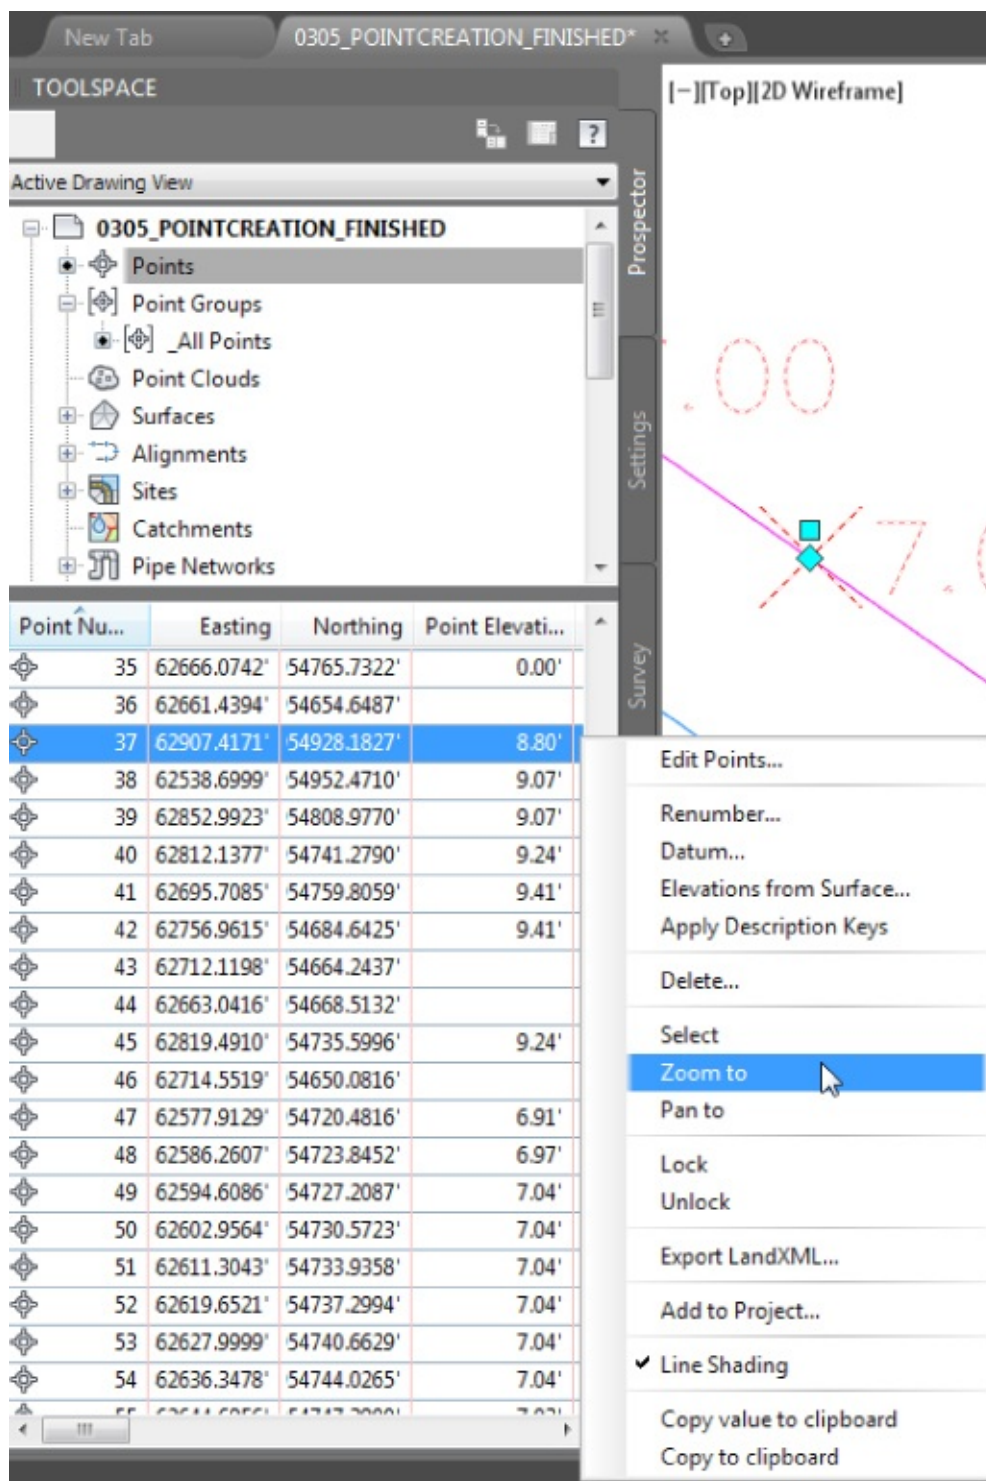


Figure 3.20 Prospector lets you view your entire Points collection at once.

2. In either location, right-click the point or points you wish to examine and select Zoom To.

Prospector works like a spreadsheet in many ways. You can sort by any column by clicking the heading of the column. Clicking the column a second time will sort the data in the opposite order. For example, if you'd like to list your points alphabetically by description, click the Description column heading.

3. Click the Raw Description column heading to re-sort the points.
4. You can close Panorama for editing the points and close the file. It is up to you whether you want to save any modifications to the file.

Also note that the same interface is available for editing points when dealing with point groups.

Point Groups: Don't Skip This Section!



Working with point groups is one of the most powerful techniques you will learn from this chapter. Do you want to select all your ground shots from within the survey? Make a point group! Want to move up last week's survey by the blown instrument height difference? Make a point group! Want to prevent invert shots from throwing off your surface model? You get it. Use a point group!

A *point group* is a collection of points that results when a criteria-based filter is applied to the point data in the drawing. For the filter criteria you can use any point property or combination of properties such as description, elevation, and point number, or you can select specific points in the drawing.

You will see that a point group is already created by default in any Civil 3D drawing: the `_All Points` group. This group contains all points in the drawing regardless of filter criteria. This group cannot be renamed or deleted, nor can it have its properties modified to exclude any points. Therefore, you should create point groups for collections of points you might wish to separate from others, as shown in [Figure 3.21](#).

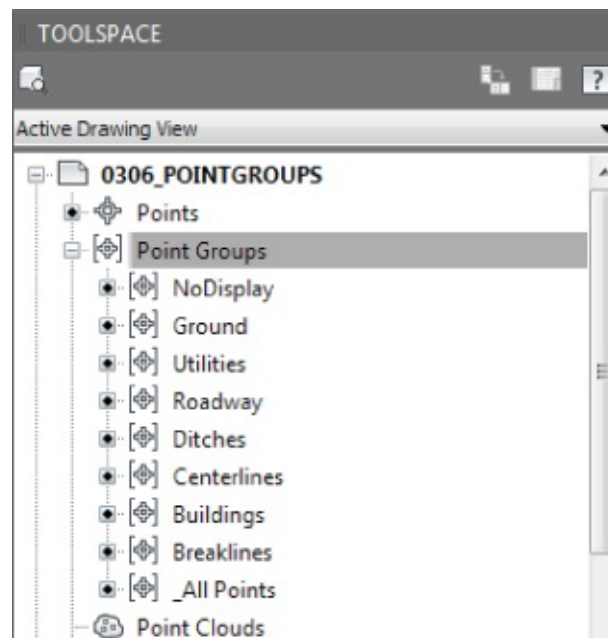


Figure 3.21 An example of useful point groups in Prospector

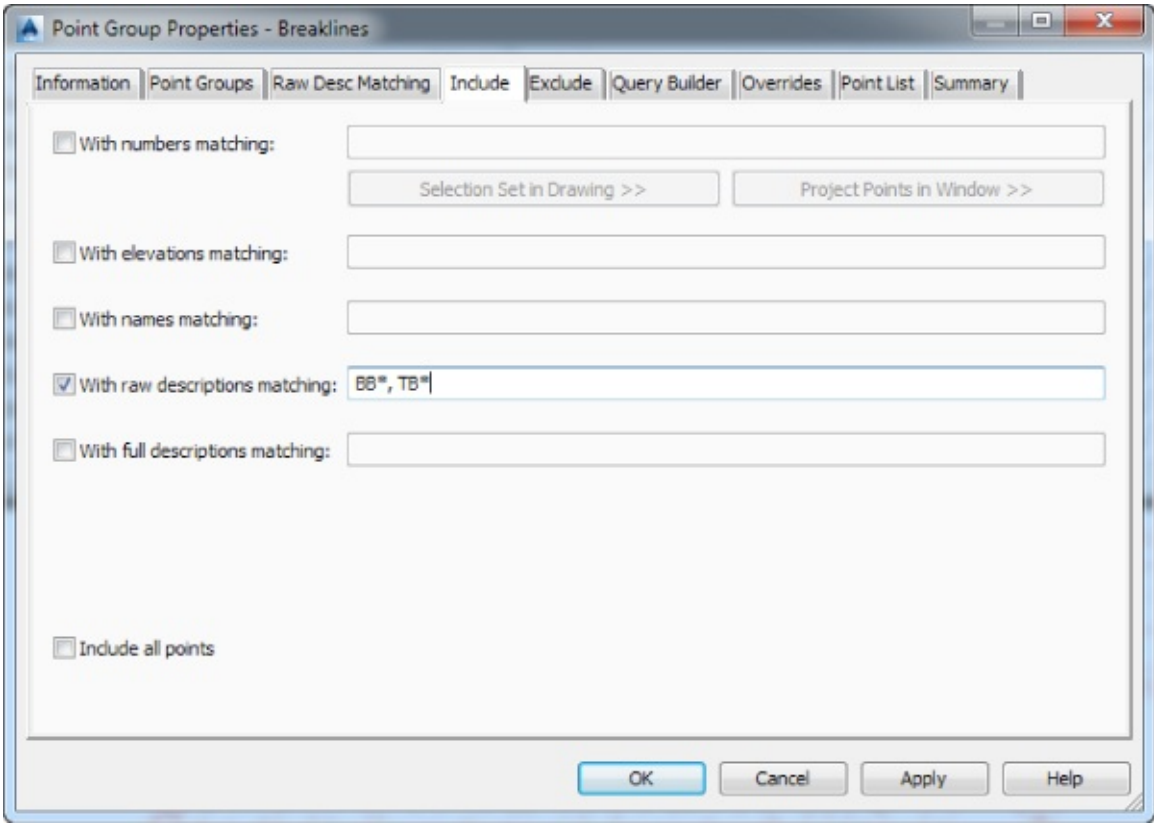
Point groups can (and should!) be created upon import of a text file, as shown previously in [Figure 3.7](#). It is a good practice to create a point group for any new survey data added to the drawing so that if a problem comes to light about that group of points (such as incorrect instrument height), they can be isolated and dealt with apart from other points. Create a new point group by right-clicking the main point group category and selecting **New**.

In this exercise, you'll learn how to use point groups to separate points into usable categories:

1. Open the drawing `0306_PointGroups.dwg` (`0306_PointGroups_METRIC.dwg`), which you can download from this book's web page.
2. In Prospector, right-click **Point Groups** and select **New**.
3. On the **Information** tab, name the point group **Breaklines**.
4. Set **Point Style** to **Basic Circle**.


- 5. Set Point Label Style to Description Only.
- 6. Switch to the Include tab and place a check mark next to With Raw Descriptions Matching.
- 7. In the With Raw Descriptions Matching field, type BB*,TB*.

The asterisk acts as a wildcard to include points that may have additional information after the description. You are adding multiple descriptions by separating them with a comma, as shown in [Figure 3.22](#).



[Figure 3.22](#) The Include tab of the Breaklines point group properties

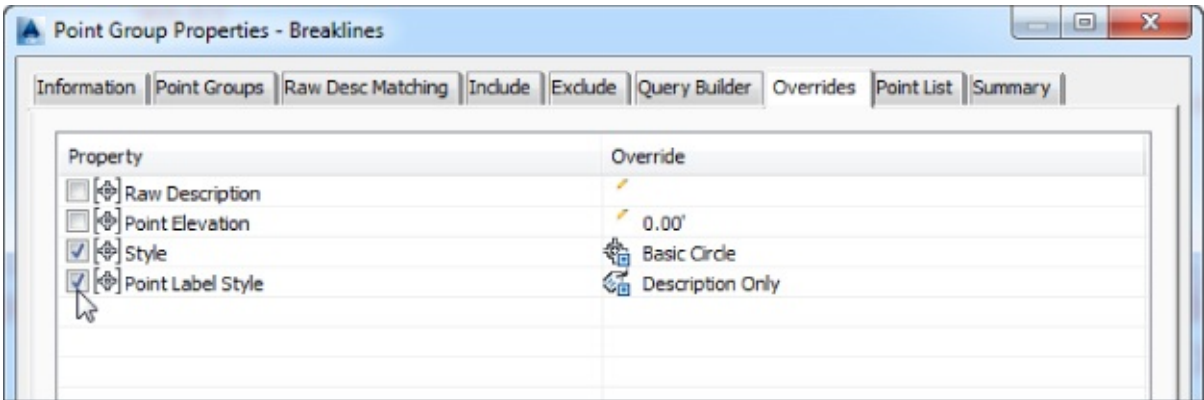- 8. Switch to the Overrides tab.
- 9. Place check marks next to Style and Point Label Style, as shown in [Figure 3.23](#).




[Figure 3.23](#) Overrides force the styles to conform by point group rather than the description key.

Doing so ensures that the point group, instead of the description keys, will control the styles.

- 10. Switch to the Point List tab and examine the points that have been picked up by the group.
Only points beginning with BB and TB should appear in the list.
- 11. Click OK.

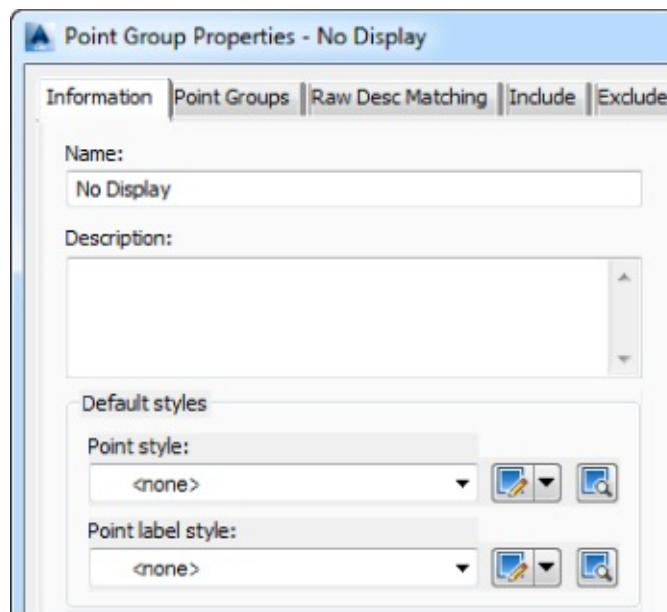12. Again, right-click Point Groups and select New.
13. On the Information tab, name the group No Display, as shown in [Figure 3.24](#).



[Figure 3.24](#) Most drawings should contain a No Display point group with styles set to <none>.

14. Set both Point Style and Point Label Style to <none>.
 15. Switch to the Include tab, and at the bottom of the dialog, put a check mark next to Include All Points.
 16. Switch to the Overrides tab and place a check mark next to Style and Point Label Style.
 17. Click OK.
- All the points are hidden from view as a result of the point group.
18. Create another point group called Topo.
 19. Set Point Style to Basic Cross and Point Label Style to Elevation and Description.
 20. Switch to the Exclude tab and place a check mark next to With Elevations Matching.
 21. Type ≤ 0 in the accompanying field.
 22. Place a check mark next to With Raw Descriptions Matching.
 23. Type PP*, TRANS*, WV*, WM*, FH*, MB*, PED*, GUY* in the accompanying field, as shown in [Figure 3.25](#), and click OK. You may need to use the AutoCAD REGEN command to refresh the graphic and show your points again.

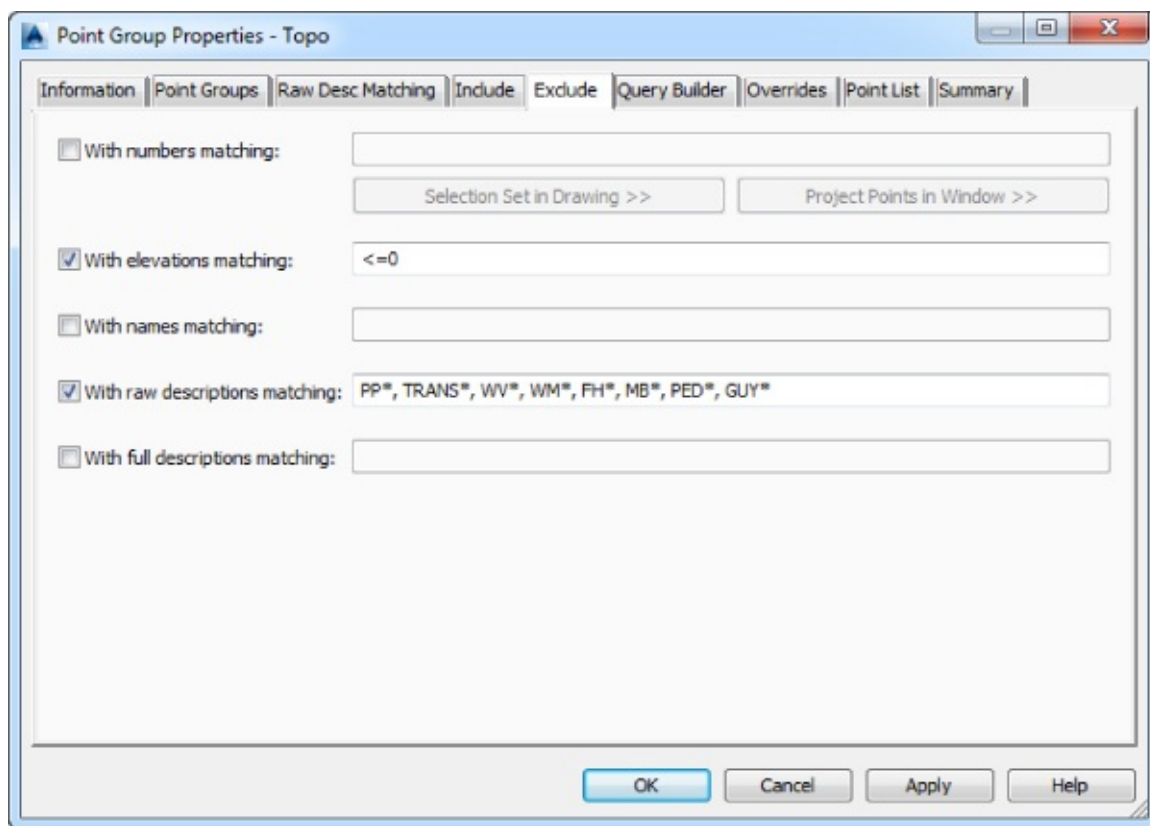


Figure 3.25 Use Exclude to create a Topo point group.

4. Save the drawing.

To compare your work with a completed example, see `0306_PointGroups_FINISHED.dwg` (`0306_PointGroups_METRIC_FINISHED.dwg`).

Point groups will dictate point and label styles only if the description key set does not manage those properties. If a description key set manages the point and label styles for the point, then the only way to override it is to use the settings in the Overrides tab for the point group. For example, if you have a point group that encompasses all your ground shots and the description key set defines their marker as an X, you could change that representation to + for the point group on the Overrides tab by toggling the setting for Point Style and selecting the style that has the desired representation. So in this case these settings take control of the styles away from the description key and place it with the point group.

Best Practice: Control Point Display Using Point Groups Rather Than Layers

Civil 3D drawings have many layers. It is much easier to switch the display of the point groups rather than create layer states for each point-visibility scenario.

A point can belong to more than one group at once. For instance, a water valve cover with elevation may be in a Topo group to be used in the definition of the surface, a Utilities group since it is part of the utilities point data, and the `_All Points` group since this is the default Civil 3D all-inclusive group. In these cases, the order in which the point groups are displayed in Prospector determines which point group controls the display of a specific point.

In this exercise, we will walk you through an example of how point group display order works:

1. Open the drawing `0307_PointDisplay.dwg` (`0307_PointDisplay_METRIC.dwg`), which you can download from this book's web page.
2. In Prospector, right-click Point Groups and select Properties (see [Figure 3.26](#)).

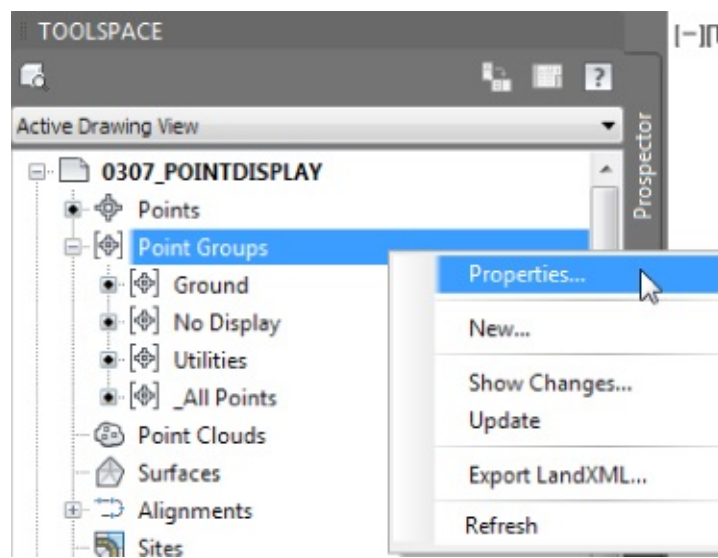


Figure 3.26 Select Point Groups > Properties to change point group display precedence.

3. Using the arrows on the far right of the Point Groups listing, select Utilities and move it to the top of the list.
4. Move No Display so that it is listed directly below Utilities, as shown in [Figure 3.27](#).

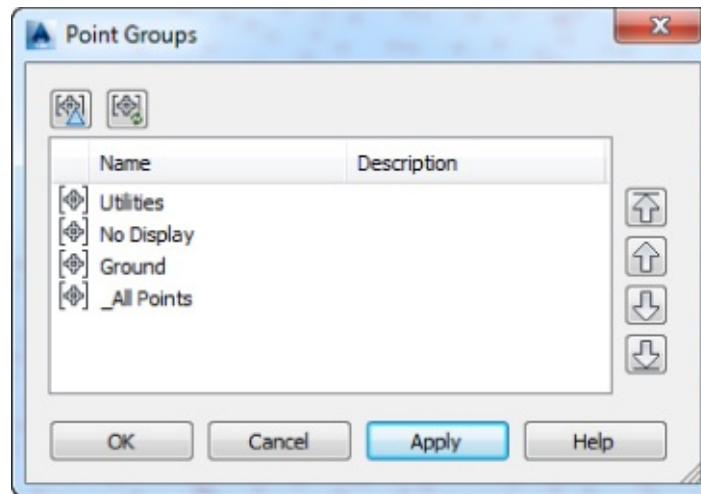


Figure 3.27 The order in which the point groups appear in this list controls precedence.

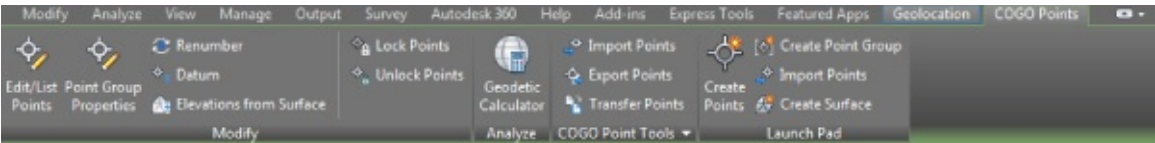
5. Click OK. If the displayed objects are not updated to reflect the change, run a regen command. Notice that only points defined by the Utilities group are visible.
6. Experiment with changing the order of the point groups using the properties.
7. Save the drawing.

To compare your work with a completed example, see 0307_PointDisplay_FINISHED.dwg (0307_PointDisplay_METRIC_FINISHED.dwg).

Changing Point Elevations


We've already discussed the idea that points placed on or along an object that has elevation will automatically inherit the object's elevation. For the same reason, points placed with tools in the Surface flyout will automatically inherit the elevation of a surface model. If you have chosen to place points with manual elevation entry and then press **↵** when prompted to specify an elevation, the elevation will be null (no elevation).

You are never stuck with a COGO point's elevation. It can be changed individually or as a group using the Panorama window. Additional tools are available for manipulating points (see [Figure 3.28](#)) in the COGO Points contextual tab that opens when you select a point object.



[Figure 3.28](#) Point-editing commands in the ribbon

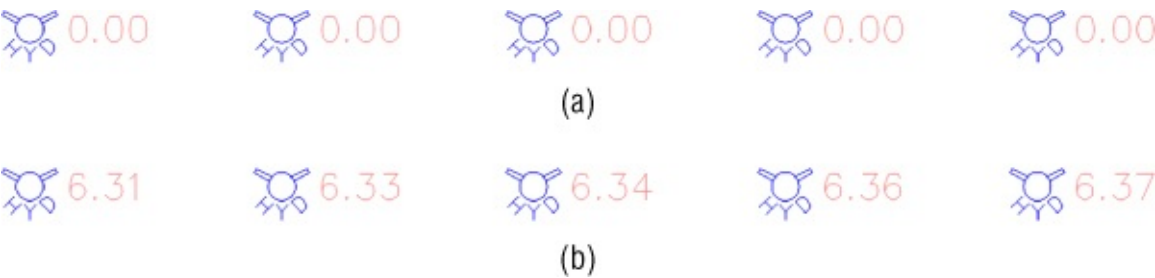
 Elevations From Surface is an extremely handy tool for forcing points to a surface elevation (see [Figure 3.29](#)).



[Figure 3.29](#) Hydrant Points as placed (a); hydrant points moved up to surface elevation (b)

In the event that you change the datum, you are most likely going to move a group of points' elevations. Right-click the name of the point group in Prospector and select Edit Points. Panorama will appear for your point-editing delight.

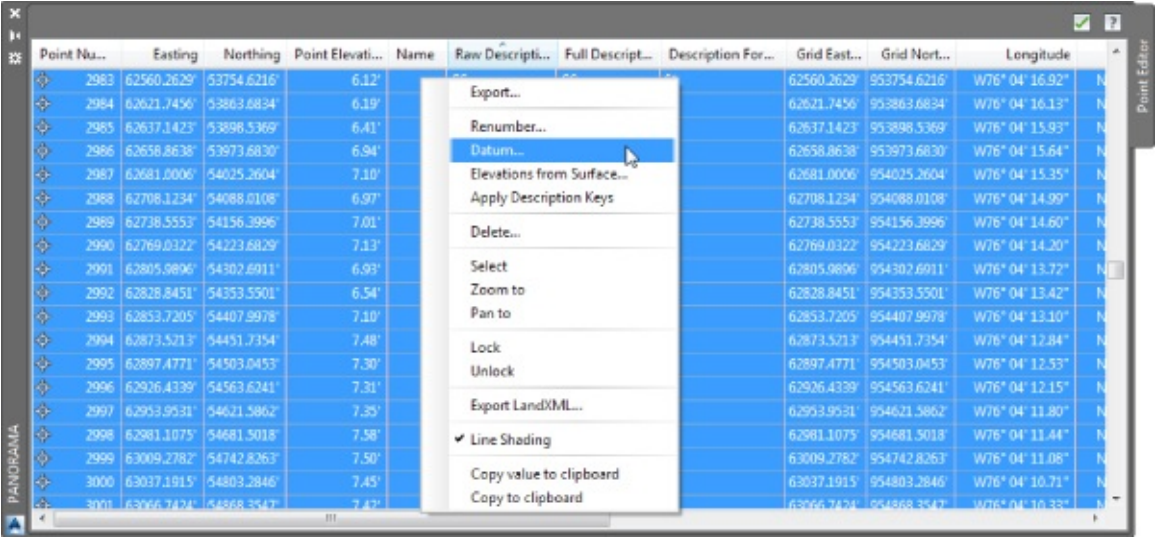Use Windows keyboard tricks to control which points are selected for modification. Pressing Ctrl+A will select all points in the Panorama listing, as shown in [Figure 3.30](#). When you have finished selecting points, right-click and choose Datum. The command line will prompt you to specify the change in elevation you require.



[Figure 3.30](#) Right-click to access point-modification tools from Panorama.

Point Tables

You've seen some of the power of dynamic point editing; now let's look at how those dynamic edits can be used to your advantage in point tables.

Most commonly, you may need to create a point table for survey or stakeout data; it could be as simple as a list of point numbers, northing, easting, and elevation. These types of tables are easy to create using the standard point-table styles as a beginning reference. Follow these steps to create a point table:

1. Open the 0308_PointTable.dwg (0308_PointTable_METRIC.dwg) file, which you can download from this book's web page.

This file will appear empty, but it isn't. First, you will review reordering point group properties to change the display of points. You don't need to see points to make a point table from a group, but this will help you see that the table reflects the specific group.

2. In Prospector, expand Point Groups.

You will see that No Display is listed on the top, which means the styles set in its properties are taking over the other point groups.

3. Right-click Point Groups and select Properties.

4. In the listing, move the group Corners To Locate to the top by using the arrows on the right. Click OK.

5. Right-click the Corners To Locate point group and select the Zoom To option to focus on the desired points.

6. Switch to the Annotate ribbon tab and click Add Tables ➤ Add Point Table.



7. Verify that Table Style is set to Corner To Locate, and click the Point Group icon.

8. Select Corners To Locate, and click OK.

9. Verify that the check box next to Split Table is clear. When all your settings match those in [Figure 3.31](#), click OK.

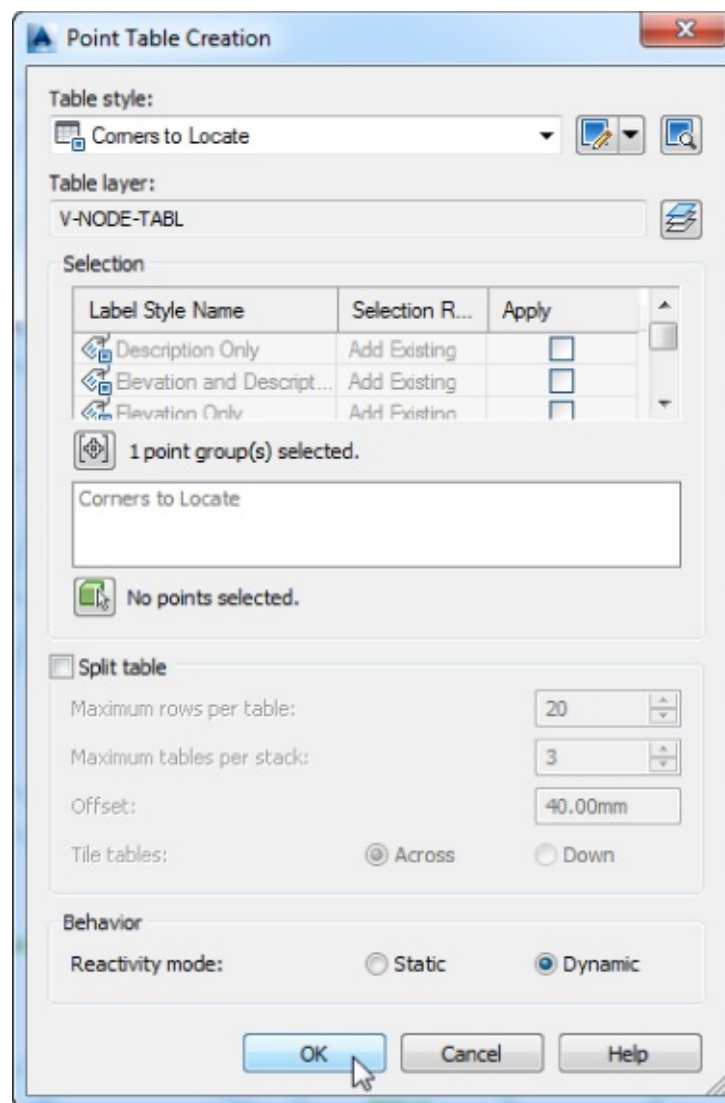


Figure 3.31 Point Table Creation options

10. Click anywhere in the graphic to place the table.
11. Save the drawing.

To compare your work with a completed example, see 0308_PointTable_FINISHED.dwg (0308_PointTable_METRIC_FINISHED.dwg).

User-Defined Properties

Standard point properties include items such as number, easting, northing, elevation, name, description, and the other entries you see when examining points in Prospector or Panorama. Now, what if you'd like to assign extra information to a point object and the field data for that information is not among the standard fields that ship with the software? Civil 3D is versatile in this situation since it provides the means to add custom fields to suit your needs.

It's common to receive points from a soil scientist that list additional information, such as groundwater elevation or subsurface elevation. Surveyed manhole points often include invert elevations or flow data. Tree points may also contain information about species or caliber measurements. All this additional information can be added as user-defined properties to your point objects. By using user-defined properties, you will be able to parse the nonstandard information and attach it to the point data during the import process. You can then use user-defined properties in point labeling, analysis, point tables, and more.



How Can Civil 3D Work with Soil Boring Data?

There are several options for users who want to work with subsurface data in Civil 3D. One option is the Autodesk Geotechnical Module. This subscription-only tool allows users to import borehole data in several formats including AGS31, AGS4, and CSV and from a Keynetix HoleBASE database. The boreholes created with this tool are not point objects. For more information about the Autodesk Geotechnical Module, log into subscription.autodesk.com.

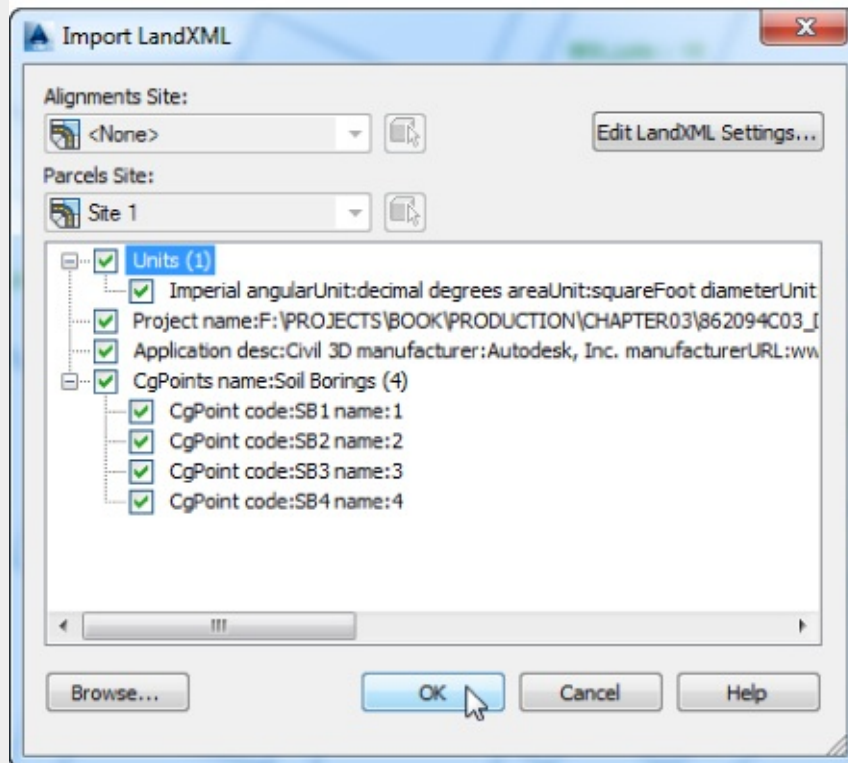
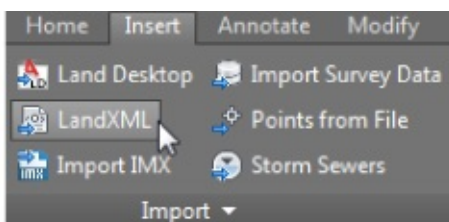
The option discussed here involves using user-defined properties on points to enter subsurface data. This option does not require any special downloads.

In the following example, you will add user-defined properties to some soil boring points and leverage point groups to work with the data. The skills you learn in this example can be applied to multiple soil boring values for the purposes of creating subsurface data.

1. Open the file `0309_SoilBorings.dwg` (`0309_SoilBorings_METRIC.dwg`).


This file contains an existing ground surface together with the property linework for the site using Civil 3D Parcels.

2. Import into the drawing the soil boring points that are provided to you in a LandXML file by using the LandXML tool that is found under the Insert tab of the ribbon, Import panel. The file that you will need is located under this chapter's data folder and is named `0309_SoilBorings.xml`.




Take a moment to examine the soil boring points and the current elevation listing.

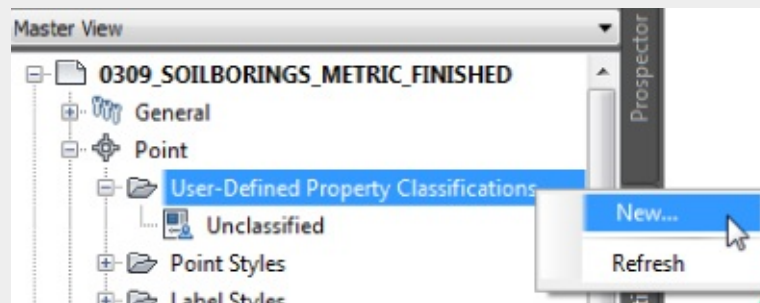3. From the Settings tab of Toolspace, expand the Point collection, right-click User-Defined Property Classifications, and select New.



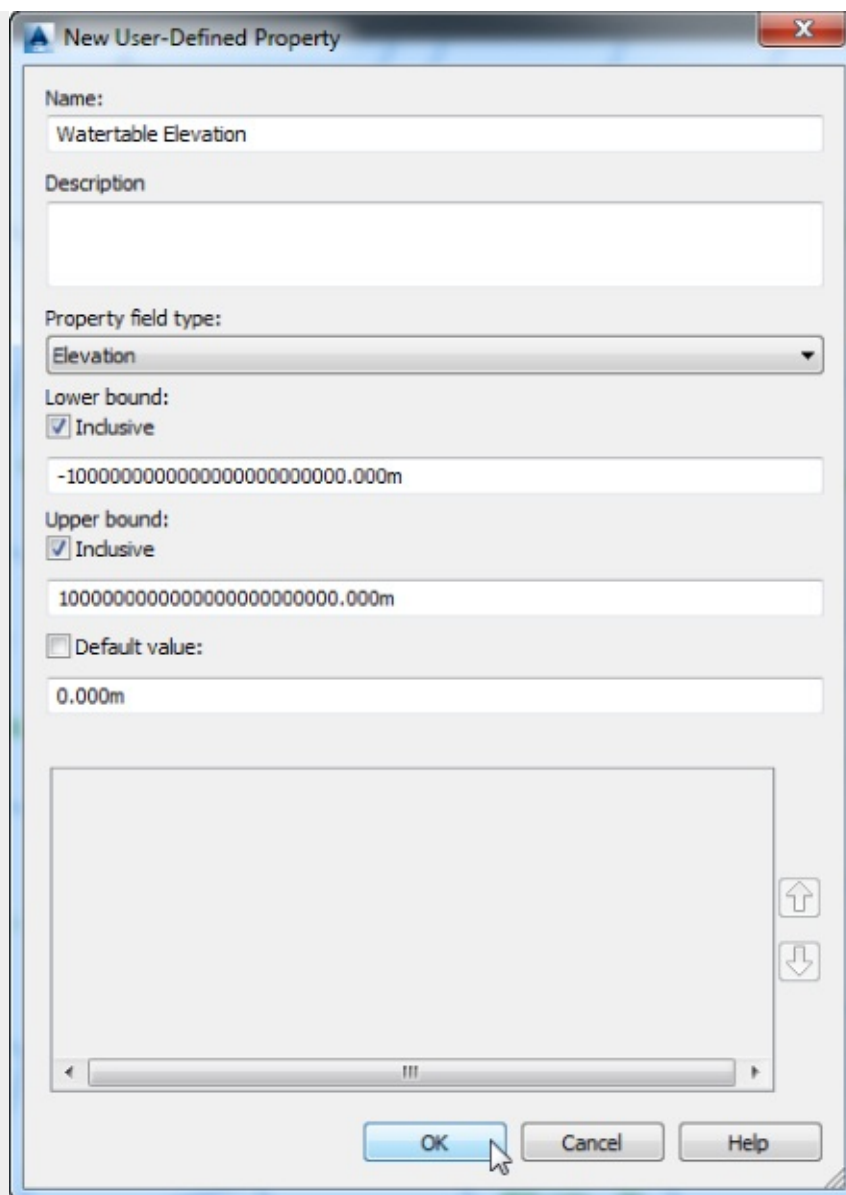4. Name the new classification Soil Borings and click OK.
5. Expand the User-Defined Property Classifications category (if it is not already), and right-click Soil Borings. Select New.
6. Name the new property Watertable Elevation.
7. Set Property Field Type to Elevation, uncheck Default Value, and then click OK.



8. Jump back to the Toolspace > Prospector tab, and highlight the main Point Groups listing.

At the very bottom of Toolspace you will see a listing of all the point groups, as shown here.

Name	Descript...	Style	Label...	Num...	Class...
Soil Borings		Test Pit	Point#-	4	None
_All Points		Basic	< default	4	None
					Unclassified
					Soil Borings
					All

9. Set the classification as shown in the screen shot.

10. Right-click the Soil Borings point group and select Edit Points.

11. Scroll over in Panorama until you locate the new classification column named Watertable Elevation.

This is the information you added in the previous steps.

12. Add the Watertable Elevation entries in Panorama, as shown here. Dismiss Panorama when you've finished.

Notice that the elevation labels for the five points are listed as the water table elevations.

To compare your work with a completed example, see 0309_SoilBorings_FINISHED.dwg (0309_SoilBorings_METRIC_FINISHED.dwg).

The Bottom Line

Import points from a text file using description key matching. Most engineering offices receive text files containing point data at some time during a project. Description keys provide a way to automatically assign the appropriate styles, layers, and labels to newly imported points.

Master It Open Masterit_0301.dwg (Masterit_0301_METRIC.dwg), which you can download from the book's web page. Revise the Civil 3D description key set to contain only the parameters listed next.

Code	Point style	Point label style	Format	Layer
GS*	Basic	Elevation Only	Ground Shot	V-NODE
EP*	Basic	Elevation and Description	Road Edge	V-NODE
HYD*	Hydrant (existing)	Elevation and Description	Hydrant	V-NODE-WATR
SW*	Basic	Elevation and Description	Sidewalk	V-NODE
TREE*	Tree	Elevation and Description	Tree	V-NODE-TREE

Import the PENZD (space delimited) file MasterIt_0301.txt (MasterIt_0301_METRIC.txt). Confirm that the description keys made the appropriate matches by looking at a handful of points of each type. Do the trees look like trees? Do the hydrants look like hydrants?

Save the resulting file for use in the remaining exercises.

Create a point group. Building a surface using a point group is a common task. Among other criteria, you may want to filter out any points that tend to have erroneous elevations such as utilities or vegetation.

Master It Create a new point group called Topo that includes all points *except* those with descriptor code of TREE and HYD. Use the DWG created in the previous “Master It” exercise or start with MasterIt_0301_FINISHED.dwg (MasterIt_0301_METRIC_FINISHED.dwg).

Export points to LandXML and ASCII format. It's often necessary to export a LandXML or ASCII file of points for stakeout or data-sharing purposes. Unless you want to export every point from your drawing, it's best to create a point group that isolates the desired point collection.

Master It Create a new point group that includes all the points with a raw description of SW. Export this point group via LandXML and a PENZD comma-delimited text file.

Use the DWG created in the previous “Master It” exercise or start with MasterIt_0302_FINISHED.dwg (MasterIt_0302_METRIC_FINISHED.dwg).

Create a point table. Point tables provide an opportunity to list and study point properties. In addition to basic point tables that list number, elevation, description, and similar options, you can

customize point table formats to include user-defined property fields.

Master It Use the DWG created in the previous “Master It” exercise or start with `MasterIt_0303_FINISHED.dwg` (`MasterIt_0303_METRIC_FINISHED.dwg`). Create a Centerline point group to include all the centerline points, and create a point table for this point group using the PNEZD format table style.

Chapter 4

Surfaces

One of the most fundamental elements in a three-dimensional model of any design is the surface model. As you learned in the previous chapter, once survey information is gathered and points are set with elevations, you can proceed to turn some of that information into an intelligent surface model. This chapter examines various methods of surface creation and editing. Then it moves into discussing ways to view, analyze, and label surfaces and explores how they interact with other parts of your project.

In this chapter, you will learn to

- Create an existing ground surface using points
- Modify and update a TIN surface
- Prepare a slope analysis
- Label surface contours and spot elevations
- Import a point cloud into a drawing and create a surface model

Understanding Surface Basics

A surface in the Autodesk® AutoCAD® Civil 3D® program is generated using the principle of triangulation. At the very simplest, a surface consists of points. The computer generates a triangular plane using a group of three points. Each triangular plane shares an edge with another, and a continuous surface is made. This methodology is referred to as a *triangulated irregular network (TIN)*, as shown in [Figure 4.1](#).

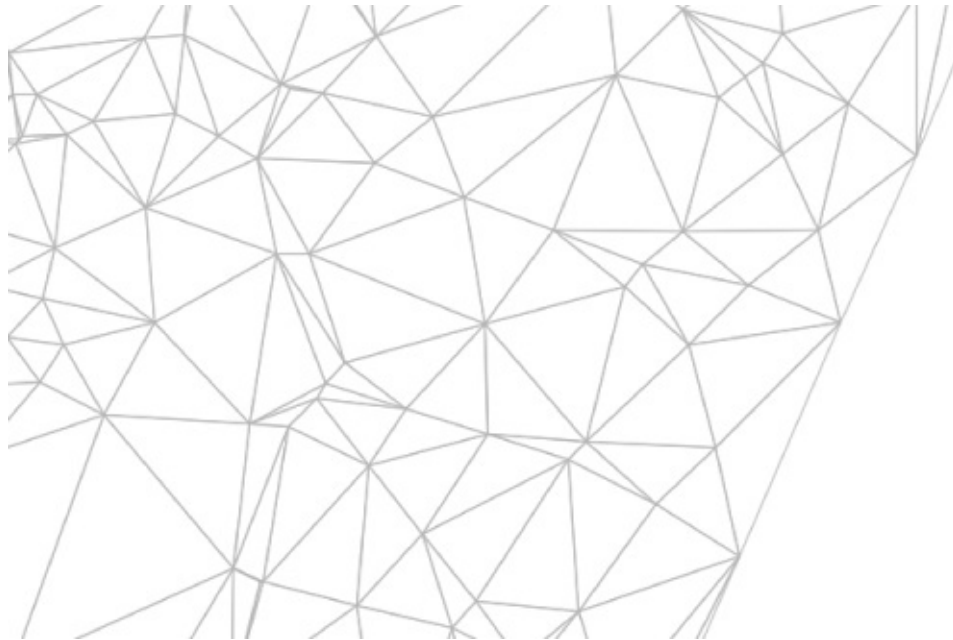


Figure 4.1 A triangulated irregular network, or TIN

For any given (x,y) point, there can be only one unique z value within the surface (since slope is equal to rise over run, when the run is equal to 0, the result is “undefined”). What does this mean to you? It means

surfaces created by Civil 3D have several rules:

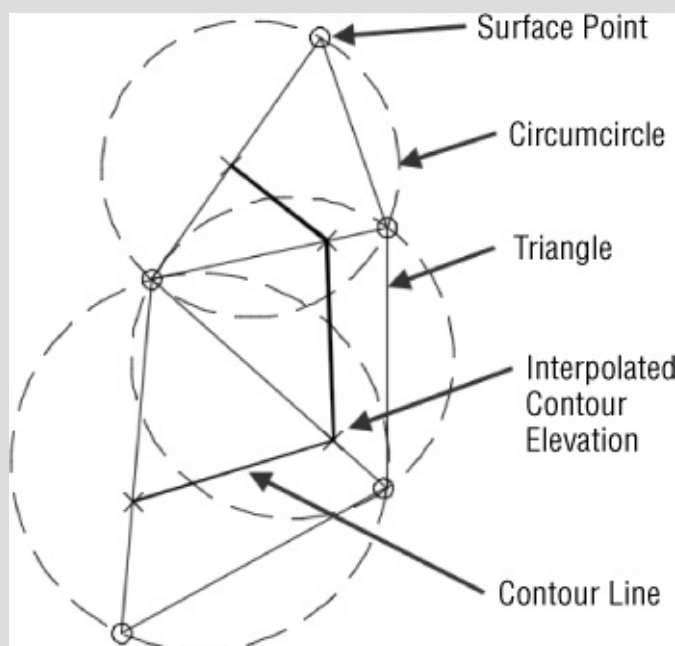
No Thickness Modeled surfaces can be thought of as a sheet draped over a surface; they have no thickness in the vertical direction associated with them.

No Vertical Faces Vertical faces cannot exist in a TIN because two points on the surface cannot have the same (x,y) coordinate pair. Vertical walls or curb structures must have a slight offset of at least 0.001' (0.0001 m); otherwise they will appear flattened.

No Caves or Tunnels The triangular planes that make up a TIN cannot overlap. If a design requires any tunnel-like structures, you will need to accomplish this with several surfaces instead.

Understanding Triangulation Mathematics

TIN surface calculations are based on computational geometry known as Delaunay triangulation. Delaunay triangulation takes a set of points, isolates three in close proximity, and applies a circle intersecting those three points, producing a triangle. This algorithm is repeated for the remaining points, resulting in a collection of circles called *circumcircles*, which produce a network of triangles. Elevation interpolation occurs along those triangle lines, which determines where contours are drawn.



It's very important that the points used in surface calculations be a good representation of surface elevations. This means that points representing fire hydrants, power poles, or trees, for example, should be excluded since those points more than likely were not collected at ground level.

Other information we provide to a surface definition influences how those triangles are drawn. Breaklines prevent triangle lines from being drawn through them but allow them to be drawn along them. Boundaries prevent interpolation from occurring inside or outside their extents depending on the type of boundary defined. Surface edits can override the Delaunay triangulation. Surface property settings can be used to apply a set of rules governing how the surface is created.

There are four types of surfaces in Civil 3D: TIN surfaces, grid surfaces, grid volume surfaces, and TIN volume surfaces. A TIN surface is based on a set of points using Delaunay triangulation. A grid surface is based on a Digital Elevation Model (DEM file) consisting of a set of data points arranged in a regularly

spaced grid configuration. DEM files can be obtained from various mapping agencies. Volume surfaces are built by measuring vertical distances between two surfaces. Volume surfaces can be created from two grid or two TIN surfaces.

Creating Surfaces

Certification Objective

When you first create a surface in Civil 3D, you give it a name and set its style. Initially, your surface will be empty, containing no data; your next step is to add data to the surface definition.

In Prospector, you can view the contents of the surface by expanding its branch and then further expanding the Definition area, as shown in [Figure 4.2](#).

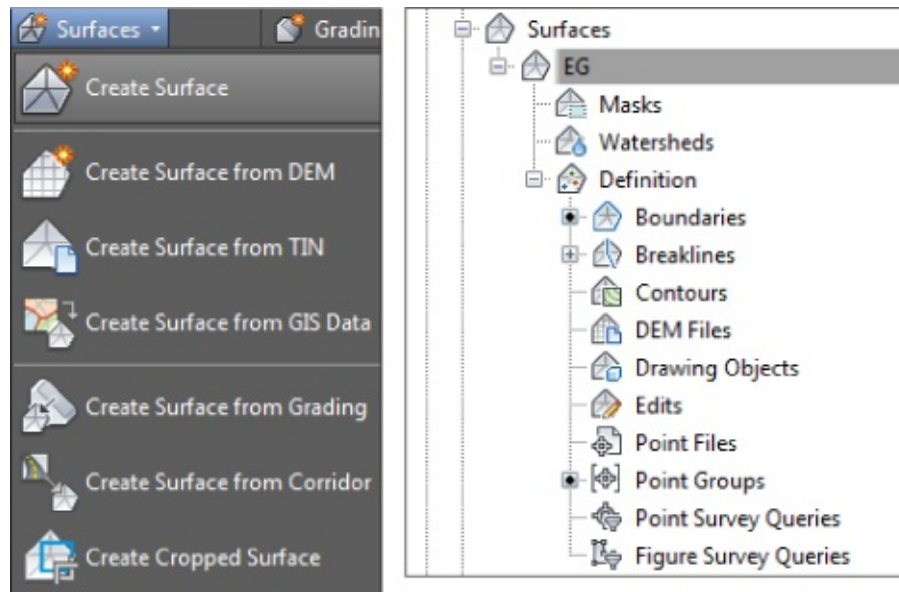


Figure 4.2 Create a new surface (left). Expand a surface's definition to add or modify elevation data (right).

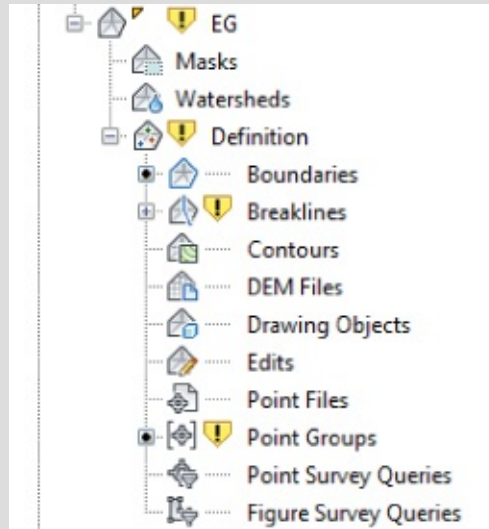
The following components can be used as part of a surface definition:

Boundaries *Boundaries* are closed polylines that determine data inclusion and visibility for the surface. A boundary can be a 2D polyline, a 3D polyline, or even a feature line, but only the horizontal information will be used to generate the boundary—the elevation of the polyline is ignored. If the polyline that created the boundary is modified, the surface will become out of date.

Breaklines *Breaklines* are used to create triangulation paths, thereby preventing triangle lines that could be generated off adjacent points from crossing these paths. Breaklines are mandatory for defining flow lines, curb lines, ditch lines, pavement edges, or any linear representation of ridges or valleys. Breaklines can be defined using lines, arcs, 2D polylines, 3D polylines, survey figures, parcels, or feature lines. Similar to boundaries, if a breakline is modified, the surface will become out of date, thus requiring a rebuild. Breaklines will be discussed in more detail later in this chapter.

The Yellow Exclamation Point Flag

At some point you are bound to see a yellow exclamation point status icon in Prospector. This is a flag showing you that some elements are out of date and require rebuilding. In the image shown here, the EG surface needs to be rebuilt because the Point Groups branch is out of date.



No matter what type of definition in a surface is out of date, to rebuild the surface, right-click the surface's name (in this example that would be EG) and select Rebuild. You could also select Rebuild Automatic, which would result in the surface always rebuilding when required instead of you always having to manually select Rebuild.

Contours Polyline representations of surfaces can be used to create a Civil 3D surface. These polylines must be assigned the elevation of the contour they represent. Points will be placed along the contours to be used in the triangulation process. In addition, algorithms are run to ensure that the Civil 3D contours generated closely match the polyline contours used to define the surface. This process will be discussed in more detail later in this chapter. Similar to boundaries, if the polyline contour is modified, the surface will become out of date, thus requiring a rebuild. Adding contour data will be discussed further later in this chapter.

DEM Files *Digital Elevation Model (DEM)* files are the standard format files from governmental agencies and GIS systems. These files are typically very large in scale but can be great for planning purposes.

Drawing Objects AutoCAD objects that have an insertion point at an elevation (e.g., text, blocks, lines, AutoCAD points, 3D faces, or polyfaces) that can be used to populate a surface with elevation data. For text and blocks, the text insertion point z position is used as the elevation. Changes to these objects will not cause the surface to become out of date.

Edits Any manipulation after the surface is completed, such as adding or removing triangles or changing the datum, will be part of the edit history. These changes can be viewed in the surface properties, where edits can be toggled on and off individually to simplify reviewing and changing. They can also be reordered, since edits are applied in the order in which they are added.

Point Files Point files work well when you're working with large data sets where the points themselves don't necessarily contain extra information. Examples include laser scanning or aerial

surveys. A drawing will stay referenced to a point file. If the point file is moved or deleted, the reference in the drawing will be broken unless a surface snapshot is taken. Snapshots will be discussed later in the chapter.

Point Groups Civil 3D point groups or survey point groups can be created to isolate a set of points used to build a surface. The surface is linked to that point group. If points are added, removed, or modified in the point group, the surface will become out of date and must be rebuilt.

Point Survey Queries and Figure Survey Queries Point survey queries and figure survey queries perform similar tasks. A saved survey query created on the Survey tab of Toolspace can be used similarly to a point group for populating surface elevation data. If the query contains both points and figures, you can choose to use both types of data, only points, or only figures. Unlike a point group, data from the query can be added without the points or figures being inserted in the drawing. Prior to adding point survey queries or figure survey queries to surfaces, you must open the survey database containing those queries.

Creating a Surface with Point Groups

Usually, existing surfaces are created from data collected from topographic surveys. From that data, a set of relevant surface points can be isolated by defining a point group. This point group is a quick means of adding point data to a surface definition. Point groups are covered in Chapter 3.

In the exercise that follows, you'll build your first basic surface with a point group:

1. Open the file 0401_SurfaceFromPointGroup.dwg (0401_SurfaceFromPointGroup_METRIC.dwg), which you can download from this book's web page, www.sybex.com/go/masteringcivil3d2015.
2. On the Home tab of the ribbon > Create Ground Data panel, select Surfaces > Create Surface.
3. In the Create Surface dialog, shown in [Figure 4.3](#), click in the field for Name.

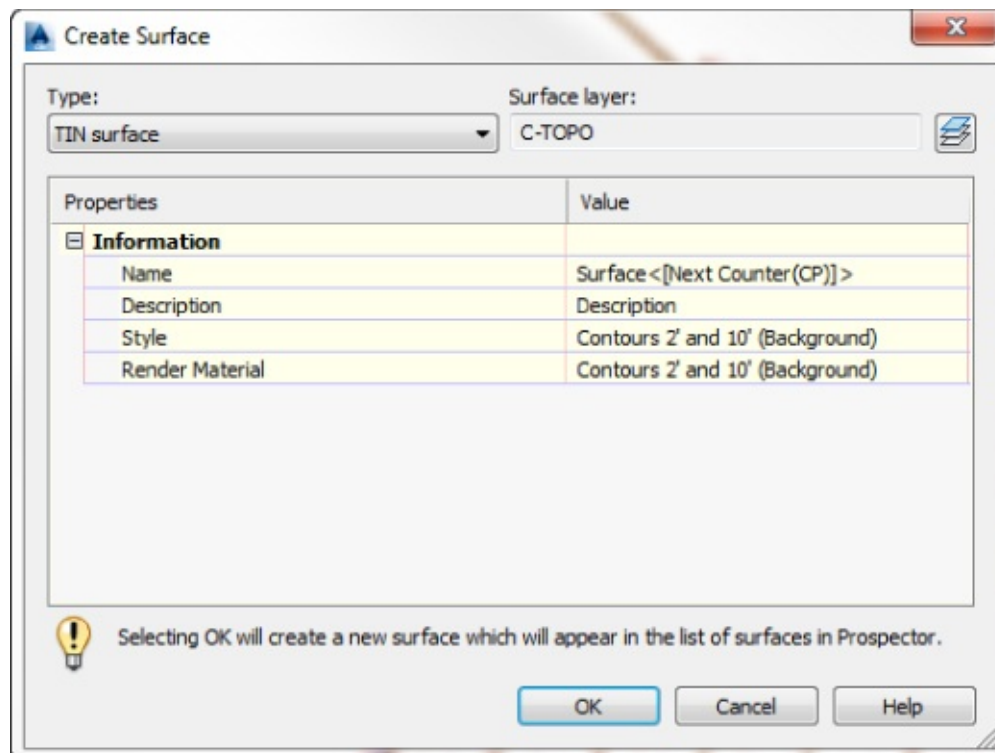


Figure 4.3 Creating your first new TIN surface

4. Remove the default text by highlighting it and replacing it with the name **Existing Surface**.

5. Set Style to Contours 1' and 5' (Background) or Contours 0.5 m and 2.5 m (Background) for metric users and click OK.
6. In Prospector, expand the Surfaces branch. You should now see your new surface in the listing.
7. Expand Existing Surface and then expand Definition by clicking the tiny plus sign to the left of the listing in Prospector.
8. Right-click Point Groups and select Add.
9. In the Point Groups dialog, highlight TOPO Shots and click OK. You should now see contours for your surface.
10. Save your drawing at the conclusion of the exercise. Compare your work with 0401_SurfaceFromPointGroup_FINISHED.dwg or 0401_SurfaceFromPointGroup_METRIC_FINISHED.dwg if desired.

Adding Breaklines

Breaklines change the triangulation of a surface by forcing triangle edges to follow along the segments of the breakline. Breaklines represent linear features where a change in the slope of a surface occurs. Examples of such features would be ridges, streams, ditches, curbs, and retaining walls, just to name a few.

There are several methods for adding breaklines to a surface. On the Prospector tab of Toolspace, you can select the Breakline branch of the surface definition, right-click, and select Add. Additionally, you can easily add survey figures by going to the Survey tab of Toolspace, right-clicking the Figures branch, and selecting Create Breaklines. When feature lines are selected, an Add To Surface As Breakline option is displayed in the contextual tab.

Breakline Types

No matter which method you use to add breaklines to a surface's definition, you will need to configure the type of breakline that it is. The breakline types are as follows:

Standard Standard breaklines can be 2D or 3D polylines, arcs, lines, splines, feature lines, figures, or parcels. These entities have the actual elevations for the surface assigned at their vertices. The vertex elevations become surface points, TIN lines are drawn along the breakline, and then the remaining triangulation is calculated. Standard breaklines represent both the horizontal and vertical locations of linear features of a surface.

Proximity Proximity breaklines represent horizontal location only. In fact, if the entity used to define the proximity breakline is 3D, the vertex elevation will be ignored. The elevation of each vertex is determined from a nearby surface point already added to the surface.

Wall Wall breaklines can be used to define near-vertical drops like retaining walls or curb lines. You would define a wall breakline very much the same as you would define a standard breakline. After selecting the feature, you would define a horizontal offset side and then an elevation difference at each vertex or for the entire length of the feature.

From File The From File option is needed only if you have an FLT text file containing breakline data. This file type is usually the result of output from another program and contains XYZ data on each vertex for the lines described in the file. Once the FLT file has been imported, the effect on the surface is identical to a standard breakline. File Link options can be dynamically linked to the file, or the link

can be broken so the surface will no longer be dependent on the file.

Non-destructive Non-destructive breaklines neither change elevation nor change grades of the surface model. Non-destructive breaklines simply control the horizontal orientation of triangle lines. You may find yourself needing a non-destructive breakline in anticipation of cleaning up triangle data, as discussed later in this chapter, in the section “Manual Surface Edits.”

By far, standard is the most frequently used type of breakline, followed by proximity and wall breaklines.

Weeding Factors

Turning on Weeding Factors in the Add Breaklines dialog allows you to omit extraneous data from your surface. You will want to consider weeding when your breaklines contain a lot of vertices very close together. Each vertex is added to your surface as a point, so when you weed, your aim is to exclude extraneous point data. This not only reduces the size of your surface but helps to eliminate the formation of skinny triangles, which can produce saw-toothed contours.

Weeding requires that a distance and angle be entered in the Add Breaklines dialog. With these settings, the program will examine each vertex as follows:

1. It measures the length of the segment leading into the vertex.
2. It measures the length of the segment leaving the vertex.
3. If the sum of both lengths is less than the entered distance value, it checks the delta angle.
4. If the delta angle is less than the entered angle value, it omits the vertex.

Supplementing Factors

Turning on Supplementing Factors in the Add Breaklines dialog enables you to add additional surface points along your breaklines. Doing this helps to eliminate the generation of long triangle lines. It also allows you to define breaklines more precisely along curves.

The Distance setting works like the AutoCAD measure command. When breaklines are added to a surface, Civil 3D will add additional vertices based on this increment value.

The Mid-ordinate Distance setting is applied to arc segments in your breaklines. If this setting were absent, the program would create a single breakline segment from the PC to the PT of the arc. With this setting in place, the program creates shorter segments along the arc. With each segment considered to be tiny chords, the Mid-ordinate Distance value is the resulting measurement from the midpoint of each chord to the midpoint of each segmented arc.

In this example, you'll add in some breaklines that describe road and ditch features:

1. Open the 0402_SurfaceFromBreaklines.dwg file or the 0402_SurfaceFromBreaklines_METRIC.dwg file.

This drawing is similar to the drawing used in the first exercise. It contains a surface created with a point group. It also contains 3D survey figures. Without the survey database, you'll have to add the figures conventionally, meaning through the Breakline branch of the surface.

2. Inspect the drawing by panning and zooming along the linework. Notice that the TIN lines are not drawn along the figures representing the edge of pavement, centerline of roads, flowline of ditches, and top of banks.

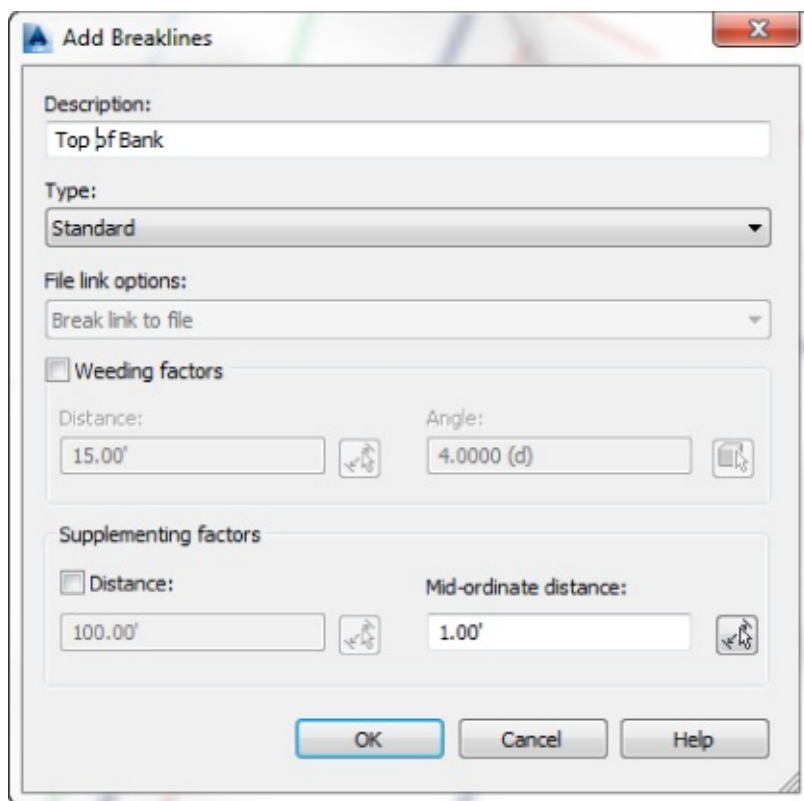
3. Select and then right-click one of the brown figures representing the top of bank, and choose the Select Similar option. The tooltip will indicate a figure prefix style of TB.

All the brown figures representing the tops of banks are now highlighted.

4. In Prospector, expand the Surfaces > Existing Surface > Definition branches.
5. Right-click Breaklines and select the Add option.

The Add Breaklines dialog appears.

6. Enter the description **Top of Bank** and leave all other settings at their default, as shown in [Figure 4.4](#).



[Figure 4.4](#) Entering a description in the Add Breaklines dialog

7. Click OK to accept the settings and close the dialog.

You can dismiss Panorama if it appears.

8. Repeat steps 3–9 for figures DL (Flowline of Ditch), BB (Bottom of Bank), CL (Centerline of Road), and EP (Edge of Pavement).
9. Zoom extents and notice that the TIN lines are now running along the survey figures now acting as breaklines.

As shown in [Figure 4.5](#), by adding the breaklines, you force the TIN lines to align with them, thus cleaning up the contours and making them follow the ridgelines of the road centerline, gutter lines, and shoulders as well as the changes in grade around the small detention area.

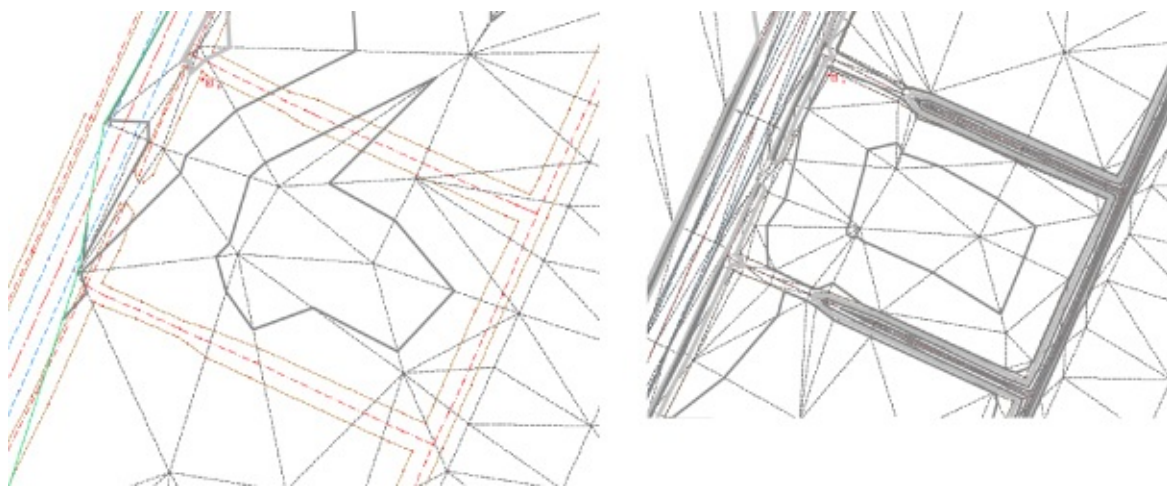


Figure 4.5 Existing surface with contours displayed before breaklines are added (left) and after (right)

When this exercise is complete, you may close the drawing. A completed version of this drawing is available from the book's web page with the filename 0402_SurfaceFromBreaklines_FINISHED.dwg or 0402_SurfaceFromBreaklines_METRIC_FINISHED.dwg.

Crossing Breaklines

Eventually, you will see Panorama pop up with a message about crossing breaklines. In general, Civil 3D does not like breaklines that cross themselves. The Resolve Crossing Breaklines tool will let you examine those situations. To use the Resolve Crossing Breaklines tool, do the following:

1. Click a surface with breaklines.
2. From the TIN Surface contextual tab > Analyze panel, choose Resolve Crossing Breaklines.
3. At the Please specify the types of breakline you want to find or [surveyDatabase Figure Surface]: prompt, enter S ↵ to select the surface option.

The Crossing Breaklines tab on Panorama lists the crossing breaklines. You can decide how you want to resolve them using Use Higher Elevation, Use Lower Elevation, Use Average Elevation, or Specify Elevation, as shown here.



4. Select each breakline and click the Resolve button, which is located underneath the drop-down list shown in the preceding screen shot; the conflict disappears from the Crossing Breaklines conflict list.

Adding Boundaries

Use boundaries when you want to restrict the area where triangles are being generated. Many object types can be used as surface boundaries, such as survey figures, feature lines, 2D polylines, and 3D polylines. Whatever type of line you choose as your boundary, it must be closed and cannot cross itself (i.e., no “loop-the-loops”). Elevations of the boundaries are ignored. There are four types of surface boundaries:

Outer Outer boundaries are used to conceal surface components (triangles, contours, or points) occurring outside the boundary extents.

Hide Hide boundaries are used to conceal surface components inside the boundary extents. For example, consider a hide boundary to hide any interpolation occurring inside a building perimeter.


Show Show boundaries are used to reveal surface components inside a hide boundary. If a hide boundary was used around a building perimeter, a show boundary can be applied to reveal contours in the building's courtyard for landscape purposes. Show boundaries can also be used to show surface areas outside an outer boundary.

Data Clip A data clip is a type of boundary drawn around the extents of a site. It is used to prevent surface calculations from occurring beyond its extents. The data clip boundary should be the first component added to the surface definition. For example, if a DEM file representing the surface of an entire county will be used to create a surface, a data clip boundary can be applied first to exclude the grid information outside the construction site. Using a data clip boundary will result in smaller surfaces (fewer surface points), which will impact your file size.


Destructive vs. Non-destructive Boundaries

The boundary types outer, show, and hide all have the option to be destructive (i.e., the Non-destructive Breakline check box is cleared) or non-destructive (i.e., the Non-destructive Breakline option is checked). What Civil 3D is “destroying” are the triangles that underlie all TIN surfaces.


The following image shows a schematic of a surface model before a boundary is added. For illustration purposes, triangle vertices have been highlighted with different shapes. The stars represent surface data points inside the boundary, and the circles represent points outside of the boundary.

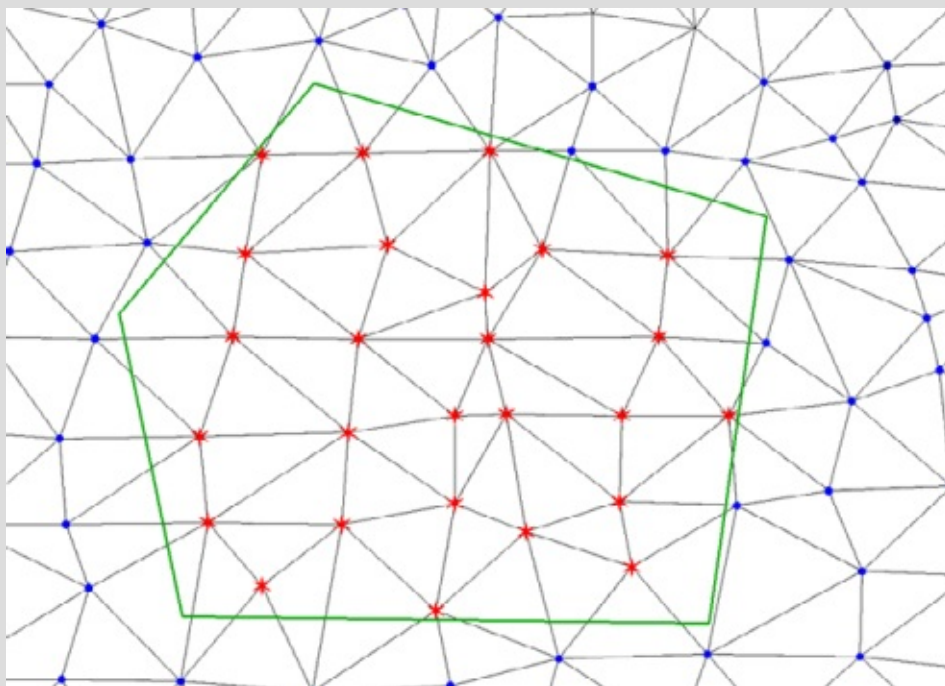

Use the Non-destructive Breakline option when the data you are working with is valid right up to the boundary edge. A boundary added as a non-destructive breakline will retriangulate the surface and create triangles up to the boundary, as shown in the following image. The squares show locations where Civil 3D has interpolated a surface data point at the boundary. The portion of the surface that would be hidden by adding a boundary is being shown in light gray for illustration purposes.

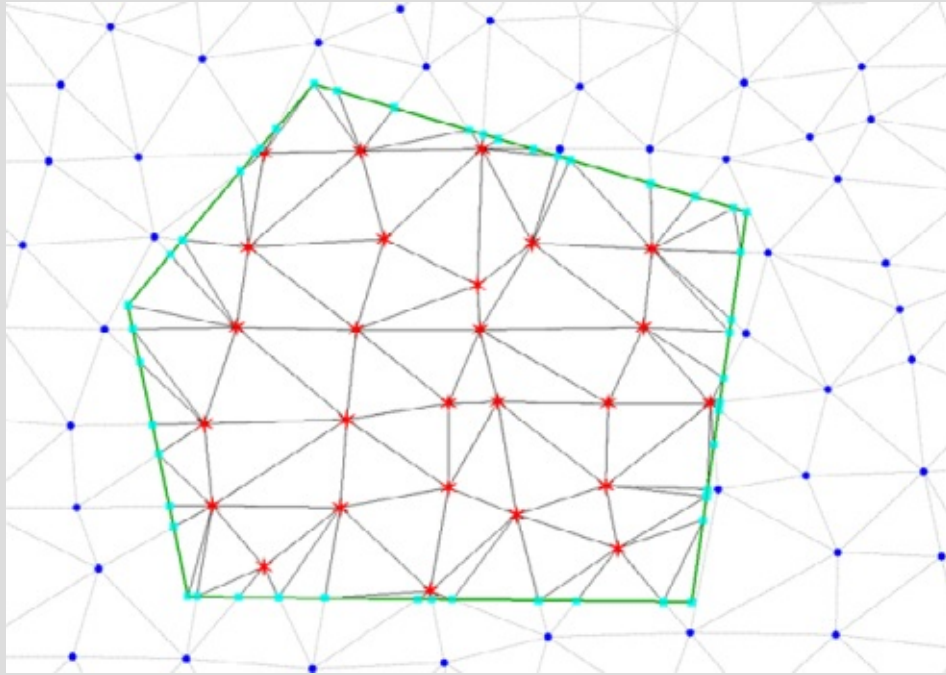

Use a destructive boundary if the line you are adding as a boundary is an approximation of the area you want to rein in. A boundary added as destructive will remove any triangle lines it crosses. The following image shows the illustration surface with the same boundary as before but added as destructive. The portion of the surface that would be hidden by adding a boundary is being shown in gray for illustration purposes. Notice how the outermost triangle legs of the surface are all inside the boundary.

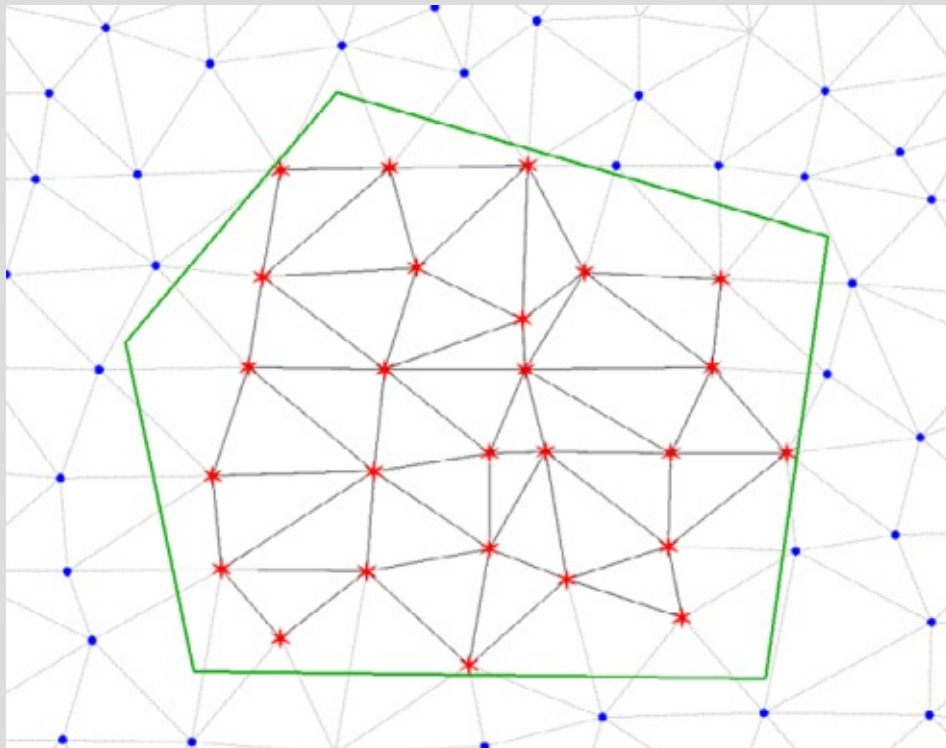

Consider a surface that needs an outer boundary, for example. If you create a rough polyline that encloses the points you wish to include as your surface model, add the polyline to the surface as an

outer boundary with the non-destructive option cleared.


If you deliberately created the polyline by snapping each vertex of the boundary to a surveyed point, for example, you could add it as a non-destructive breakline.

You will need to use your professional judgment to know when to use the Non-destructive Breakline option and when to use the Destructive Breakline option, but a good rule of thumb is that outer boundaries are usually destructive. Hide and show boundaries are usually non-destructive.

With the exception of data clip boundaries, you'll want to have your boundaries among the last operations in your surface-building process. Therefore, as future edits are made, you may want to move the Add Boundary build operation back to the bottom of the Data Operations list on the Definition tab in the Surface Properties dialog, which will be discussed later in this chapter.

The addition of every boundary is considered a separate part of the building operations. This means that the order in which the boundaries are applied controls their final appearance. For example, a show boundary listed before a hide boundary created in the same area will be overridden by that hide operation.

One way to start defining more accurate boundaries is to first extract the boundary defining the extents of the surface to a polyline and then edit the polyline to the optimum shape. The Extract Objects From Surface utility allows you to re-create any displayed surface element (contours, border, and the like) as an independent AutoCAD entity. It is important to note that only the objects that are currently visible in the surface style can be extracted. In this exercise, you'll extract the existing surface boundary as a starting point for creating a more refined boundary that will limit triangulation:

1. Open the 0403_SurfaceBoundary.dwg or 0403_SurfaceBoundary_METRIC.dwg file.
2. Select the surface.
3.  From the TIN Surface contextual tab > Surface Tools panel, choose Extract Objects to open the Extract Objects From Surface dialog.
4. Leave the Border object selected and deselect the Major Contour, Minor Contour, and Points options, as shown in [Figure 4.6](#).

10. Pick the 3D polyline border that you previously extracted.
11. Working your way around the site clockwise, grip-edit the polyline you created in step 6 to exclude some of the area at the northwest area of the site around the ditch where there are no points. Use the Add Vertex option from the grip menu, as shown in [Figure 4.8](#). Note that this process does not require you to use object snaps. This boundary only needs to be approximate. You will see the surface dynamically update with each grip edit since the surface is set to Rebuild Automatic.

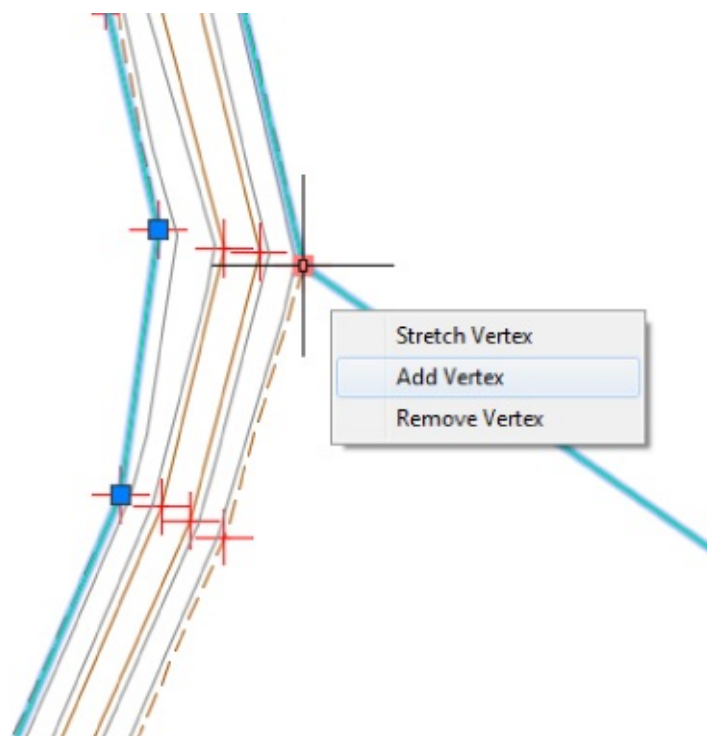


Figure 4.8 Using the grips to adjust the border

12. If time permits, edit the entire boundary.

On a large site, you can see that this is a time-consuming process but worth the effort to clean up the site nicely ([Figure 4.9](#)). Thankfully, there are other methods you can use to clean up the surface border; we will discuss these methods in later exercises.

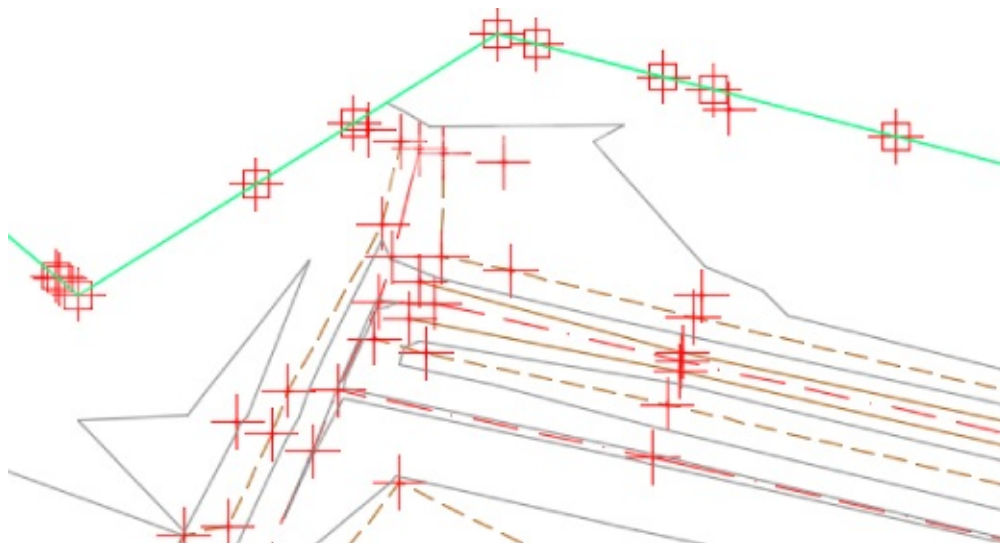


Figure 4.9 A non-destructive outer boundary in action

Save the drawing and keep it open for the next portion of the exercise.

Notice in some areas along the outer boundary how the edge of the triangulation includes points

shown as a square with a + symbol; these are the additional points created along the boundary line where it intersects with the triangles it crosses. The points you attempted to exclude from the surface are still being included in the calculation of elevations for this point; they are just excluded from the display and calculations. This isn't the result you were after, so let's fix it now.

13. In Prospector, expand the Surfaces > Existing Surface > Definition branches and select Boundaries.

A listing of the boundaries appears in the preview area of Toolspace.

14. Right-click the boundary you just created and select the Delete option.

15. Click OK in the warning dialog that tells you the selected definition items will be permanently removed from the surface.

You can dismiss Panorama if it appears.

16. In Prospector, right-click Boundaries and select the Add option again.

The Add Boundaries dialog appears.

17. Enter the name **Outer**, leave Type set to Outer, and leave the check box unchecked next to the Non-destructive Breakline option; then click OK.

18. Pick the revised 3D polyline again.

Notice that no triangles intersect your boundary now where it does not connect points, as shown in [Figure 4.10](#).

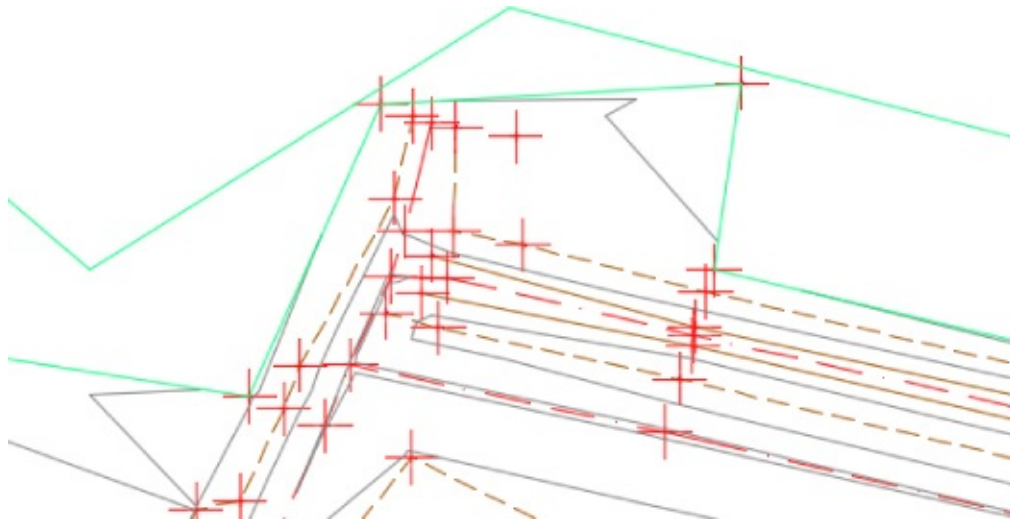


Figure 4.10 A destructive outer boundary in action

Next, you will add a hide boundary to the surface.

19. In Prospector, right-click Boundaries and select the Add option again.

20. Name the boundary **Buildings** and change Type to Hide. Make sure that Non-destructive Breakline is checked, as shown in [Figure 4.11](#), and click OK.

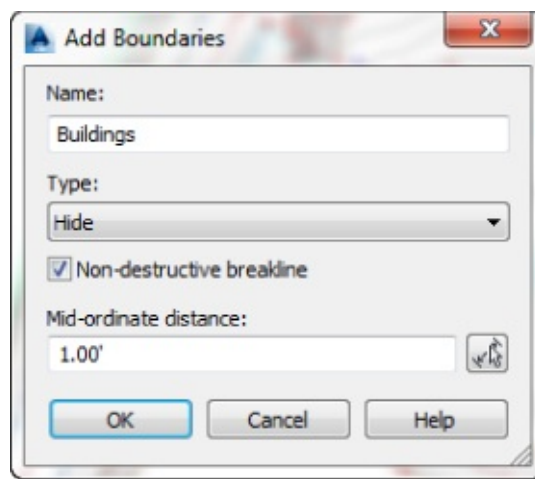


Figure 4.11 Adding buildings as non-destructive, hide boundaries

21. Select the outer outline of the cyan building in the northwest portion of the site. Press Enter.
You should now have a void in your surface where the building exists.
22. Right-click Boundaries and select the Add option one last time.
23. Name the boundary **Courtyard**, set the type to Show, and verify that Non-destructive Breakline is checked.
24. Click OK, and then click the closed polyline inside the building outline.

You should now see an island of surface data inside the previously hidden location.

When this exercise is complete, you may close the drawing. A finished copy of this drawing is available from the book's web page with the filename 0403_SurfaceBoundary_FINISHED.dwg or 0403_SurfaceBoundary_METRIC_FINISHED.dwg.

Working with Large Surfaces

A surface has a limit to the number of points it can contain before caching out its definition to an external file. The only way to prevent this is to reduce the amount of data in the surface definition. If this is not an option, the cache file will be created in the same folder where the drawing file has been saved. This file must remain in the folder with the drawing file for the surface definition to remain in the drawing. If the cache file is deleted, moved, or renamed, the surface will no longer appear in the Prospector or function in the drawing. What will remain in the drawing will be a proxy entity.

The cache file will bear the name of the drawing file along with its AutoCAD object handle (<drawing_name>_<surface object handle>). For grid surfaces, the limit for the number of points is about 1 million and the file extension of the cache file will be .grs. For TIN surfaces, the limit is about 2 million and the file extension of the cache file will be .mms.

There are several options for working with large surfaces depending on the situation:

Data Clip Boundaries As discussed earlier, a data clip boundary is a type of boundary that can be added before any elevation data is added. This is the best option to use if you have information covering a large geographic area but are working only in a smaller area.

Cropped Surface The Create Cropped Surface command can be found in the contextual tab of your surface, hidden in the Surface Tools panel flyout. This command will break off a piece of a surface model and allow you to send the smaller piece to a new drawing. This is a fast way to create a new drawing containing the desired surface data. The major disadvantage to the cropped surface tool is that there is no connection between the original surface and its spawn. In other words, if the original surface is changed, the new surface will not be affected.

Data Shortcuts The best of both worlds, data shortcuts allow you to work in a new file but remain connected to the surface's source data. Another major advantage of using data shortcuts is that multiple users can access the surface data without duplicating it. Data shortcuts are discussed at length in Chapter 16, “Advanced Workflows.”

Here are some other hints that will be helpful in increasing performance when working with large surfaces:

- Turn on the Level Of Detail option in Views panel of the View tab.
- Do not use the Rebuild-Automatic option.
- Turn off the selection preview on the Selection tab of the Options dialog. (Search AutoCAD Help for “visual effect settings” for more information.)
- Clear the Show Tooltips option in the Surface Properties dialog.

Additional Surface Creation Methods

Many forms of data can be processed by Civil 3D to create a surface. The data types discussed in the following sections are common when working with organizations that are not using Civil 3D.

File types like TIN and LandXML are often best for moving data from other civil design software

programs into Civil 3D. DEM files can be used to create surfaces for preliminary drainage analysis.

TIN Files A TIN file represents a surface that was generated by AutoCAD Land Desktop. The corresponding PNT file from the Land Desktop surface folder must be present in the same folder as well. These files contain the baseline TIN information from the original surface and can be used to regenerate it easily.

LandXML Files LandXML files can be exported from most land development software applications for use in another land development software application. LandXML has become a common means of migrating data in the land development industry. LandXML files contain the point elevations along with the associated 3D face definitions resulting from the creation and surface edits performed in the originating software application.

Digital Elevation Models Digital Elevation Model (DEM) files are used by the U.S. Department of the Interior's United States Geological Survey (USGS) and are commonly produced by government organizations for their GIS systems. The DEM format can be read directly by Civil 3D, but the USGS typically distributes the data in a complex format called Spatial Data Transfer Standard (SDTS). The files can be converted using a freely available program named `sdt2dem`. This DOS-based program converts the files from the SDTS format to the DEM format you need. Once you are in possession of a DEM file, creating a surface from it is relatively simple.

Surface from LandXML Files

Oftentimes, the engineering and survey tasks for a land development project are performed by separate companies. If you are tasked with the engineering design and are receiving a DWG file representing the existing site with contours from another firm, you should ask for a LandXML export of the existing surface. It is much more precise than using the contours to build your existing surface. It will also save time as compared with building the surface from scratch with points and breaklines.

1. Create a new drawing using the `_AutoCAD Civil 3D (Imperial) NCS` template. Metric users should use the `_AutoCAD Civil 3D (Metric) NCS` template.
2. Imperial users, change the coordinate system to NAD83 North Carolina State Planes, US Foot (NC83F). Metric users, change the coordinate system to NAD83 North Carolina State Planes, Meters (NC83).
3. From the Insert tab ➤ Import panel, choose LandXML.

The Import LandXML dialog appears.

4. Select `0404_SurfaceFromFile.XML` and click Open to continue.

The Import LandXML dialog changes, as shown in [Figure 4.12](#).

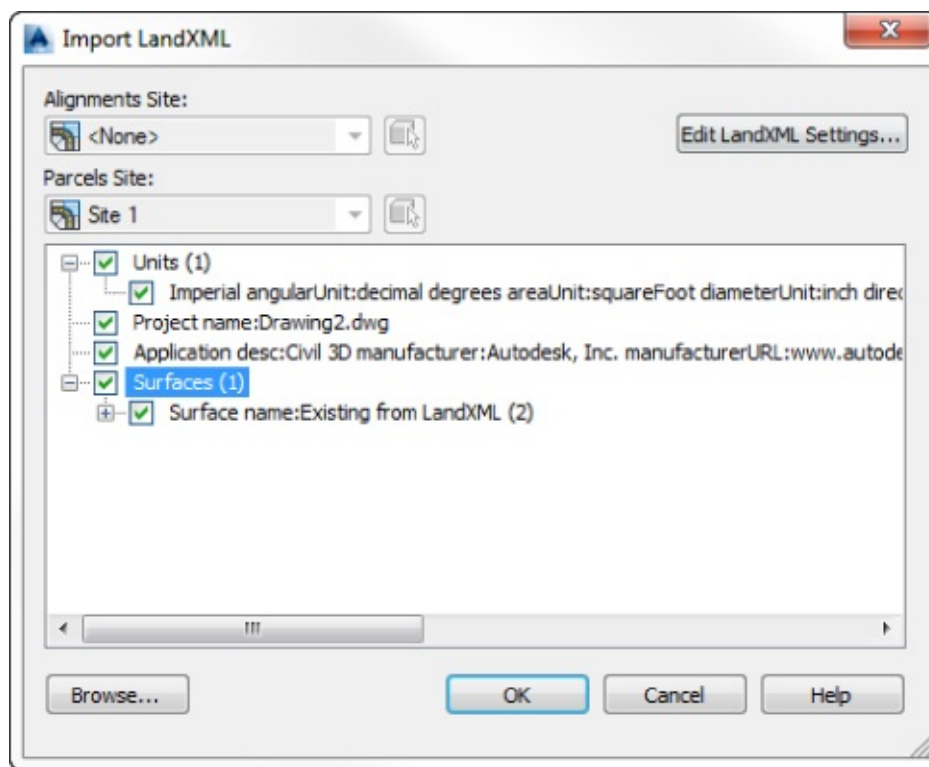


Figure 4.12 Understanding the Import LandXML dialog

5. In the Import LandXML dialog, expand the Surfaces collection.

Notice the check boxes. A LandXML file can contain many forms of design data like alignments, profiles, parcels, points, and pipe networks as well as surfaces. If you receive a file with multiple forms of design data, here in this dialog is where you would uncheck what you do not want to export into the immediate drawing. It isn't possible to uncheck Units, Project Name, or Application Description. These lines are in there for informational purposes only, giving a history of the file: originating units, originating drawing name, originating application. In this example, the originating application was Civil 3D. Sometimes, firms make it a policy of not sharing their object data (in this case, the existing surface) when performing file exchanges. This is so they can retain ownership of the model and keep their styles in house. We'll discuss more about styles in Chapter 19.

6. Click Edit LandXML Settings.

The LandXML Settings dialog appears.

7. Expand the Surface Import Settings collection and configure these settings to match [Figure 4.13](#).

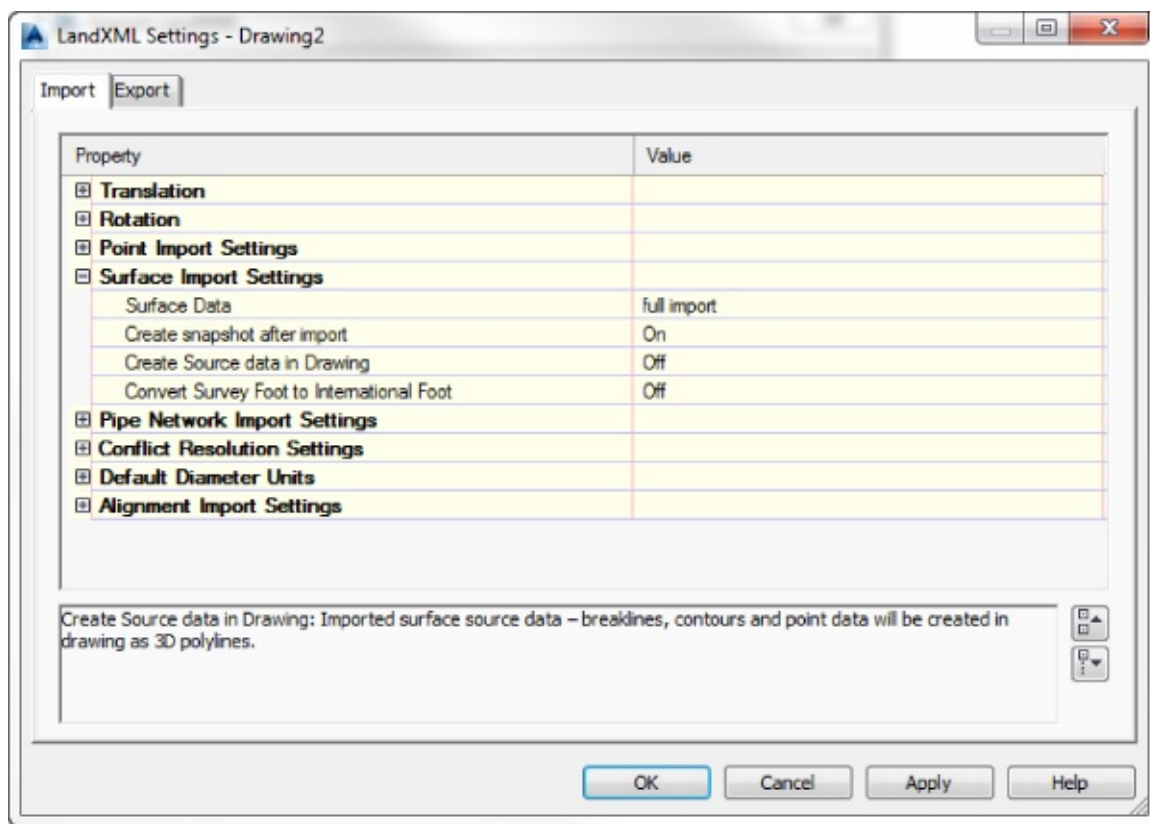


Figure 4.13 Configuring Surface Import Settings

8. Click OK to continue and OK again to close the Import LandXML dialog.

After the surface imports, Civil 3D will zoom extents.

9. In Prospector, expand the Surfaces > Existing From LandXML > Definition collection and click Definition.

Notice in the list view that no data is being used in the surface definition. The definition of this surface is coming directly from the LandXML file. As a matter of fact, if this LandXML file were moved or deleted, the surface definition would be lost if it weren't for the automatic creation of a snapshot.

10. Right-click Existing From LandXML Surface and click Surface Properties.
11. On the Definition tab, notice the Data Operations list on the bottom half of the dialog.



The first item on the list is the Import XML File operation. Notice the Browse button next to the path to the file. This button can be used to redefine the path to the LandXML file if the location must change or the file gets renamed. The next line contains the Create Snapshot operation, which preserves the surface definition in case the XML file is lost. Either line can be deleted from the surface definition. Since a snapshot ignores any previous surface operations, if a new XML file is sent to you containing an updated surface definition, you would need to delete and then re-create the snapshot based on the new definition.

12. Click OK to close the Surface Properties dialog.

A completed version of this drawing is available from the book's web page (0404_SurfaceFromFile_FINISHED.dwg or 0404_SurfaceFromFile_METRIC_FINISHED.dwg).

Surface Snapshots

A *surface snapshot* captures the state of the surface at the time it was created. If there is a snapshot in a surface, a surface's rebuild will start at the snapshot since the snapshot summarizes all of the previous build operations.

As mentioned previously, a drawing will stay referenced to any external data used to create it, most commonly a point file, LandXML file, or breakline file. If the external data is moved or deleted, the reference in the drawing will be broken. To prevent this from affecting the surface, you can create a snapshot of the surface while the surface is still working as intended. Then if anything happens to the external data, the surface will remain intact if a snapshot exists.

If you right-click a surface's name in Prospector, you will see three options related to snapshots:

Create Snapshot By creating a snapshot, you add a build operation that captures the surface information in the current state. Once a snapshot is created, the icon next to Definition in the Prospector tree will change to a camera icon.



Remove Snapshot This option will remove the snapshot from the build operation. After a snapshot is removed, the surface will behave as if the snapshot was never there.

Rebuild Snapshot If the operations prior to the snapshot become outdated, you will see a yellow status icon next to its node in the Prospector tree. If you rebuild the snapshot, a new snapshot is created, incorporating all changes to the surface model from the point of its initial creation. In many cases, you will want to leave the snapshot in place if you do not want the changes to affect the surface.

Surface from DEM Files

In the following exercise, you will be creating a surface from a DEM file:

1. Start a new drawing from the `_AutoCAD Civil 3D (Imperial) NCS` template that ships with Civil 3D. Metric users should use the `_AutoCAD Civil 3D (Metric) NCS` template.
2. Switch to the Settings tab of Toolspace, right-click the drawing name, and select Edit Drawing Settings.

The Drawing Settings dialog appears.

3. Imperial users should set the zone category to USA, North Carolina, and set the coordinate system to NAD83 North Carolina State Planes, US Foot (NC83F) via the Units And Zone tab of the Drawing Settings dialog. Metric users should set the zone category to USA, North Carolina, and set the coordinate system to NAD83 North Carolina State Planes, Meter (NC83).
4. Click OK.

The coordinate system of the DEM file that you will import will be adjusted to the coordinate system of the drawing.

5. From the Home tab > Create Ground Data panel, choose Surfaces > Create Surface.

The Create Surface dialog appears. If a coordinate system transformation wasn't necessary, Create Surface From DEM would be a quicker method for creating this surface. However, Create Surface From DEM produces a grid surface, which cannot be adjusted.

6. Accept the options in the dialog, and click OK to create the surface.

This surface is added as Surface1 to the Surfaces collection in Prospector.

7. In Prospector, expand the Surfaces > Surface1 > Definition branch.
8. Right-click DEM Files and select the Add option (see [Figure 4.14](#)).

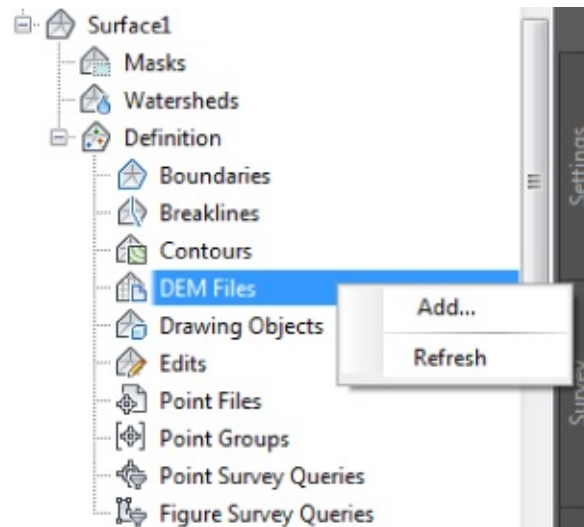


Figure 4.14 Adding DEM data to a surface

 
The Add DEM File dialog appears.



9. Use the button to the right of the DEM File Name area to navigate to the 0405_Camden_NC.DEM file and click Open.

Remember, all data and drawing files for this book can be downloaded from www.sybex.com/go/masteringcivil3d2015. The DEM file information will populate in the Add DEM File dialog, showing that the DEM file you are using is UTM Zone 18, NAD27 Datum, Meters.

10. In the Add DEM File dialog, click in the Value column next to CS Code to display the ellipsis button; click that button to display the Select Coordinate Zone dialog.
11. Both Imperial and metric users, set the coordinate system code (CS code) to match the DEM file by selecting UTM With NAD27 Datum, Zone 18, Meter; Central Meridian 75d W (UTM27-18), as shown in [Figure 4.15](#), and click OK.



The Add DEM File dialog should now match the one shown in [Figure 4.16](#).



- Click OK in the Add DEM File dialog.

You may receive a message regarding the level of detail, which is discussed later in this chapter. If a Level Of Detail dialog appears, click the Keep The Current Display Mode option.

3. In Prospector, right-click Surface1 and select Zoom To to bring the surface into view.
4. Select the surface. From the Surface contextual tab of the ribbon > Modify panel, click the Surface Properties icon.


The Surface Properties dialog appears. Earlier, in the Create Surface dialog, you allowed the default surface name to be used, which created the name of Surface1. Since the default name does not provide much information, you will now revise the default name to something that offers more information to the user.

5. On the Information tab, change the Name field entry to **Camden Point NC**.
6. Change the Surface Style drop-down list to Contours And Triangles, and then click OK to accept the settings in the Surface Properties dialog.

Once you have the DEM data imported, you can pause over any portion of the surface and see that feedback showing the surface elevation is provided through a tooltip. This surface can be used for preliminary analysis but isn't accurate enough for construction purposes.

The main drawback to DEM data is the sheer bulk of the surface size and point count. The 0405_Camden_NC.DEM file you just imported contains 173,185 points and covers more than 60 square miles. This much data can be overwhelming, and it covers an area much larger than the typical site. If you try zooming in and out on the surface, you may notice performance lag. To ease the processing and activate the Level Of Detail display, do the following:

1. Switch to the View tab on the ribbon.
2. Expand the bottom of the Views panel.
3. Select Level Of Detail. A Level Of Detail Display warning message may appear. If so, click Close.

 After these steps are complete, you will notice that a new icon appears in the upper-left corner of your model space, showing you that Level Of Detail is activated. To turn off Level Of Detail, follow the same steps.

Turning on the Level Of Detail display does not change the data in the surface but simply changes what is viewable at the different zoom levels. [Figure 4.17](#) shows the same area of the surface before turning on Level Of Detail (left) and after (right). The left version of the surface appears shaded because that is how dense the triangles are. You'll look at some data reduction methods later in this chapter.

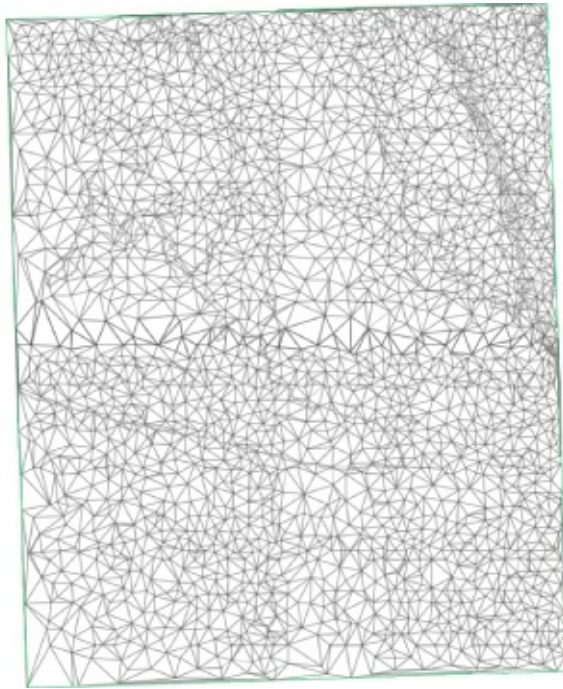


Figure 4.17 DEM surface: shown without Level Of Detail (left), zoomed out with Level Of Detail (right)

With Level Of Detail turned on, save your drawing at the conclusion of the exercise. Compare your work with 0405_SurfaceFromDEM_FINISHED.dwg or 0405_SurfaceFromDEM_METRIC_FINISHED.dwg if desired.

Surface from GIS Data

Whether the source is internal or from an outside firm, elevation data from *geographic information systems (GIS)* is becoming increasingly common. Civil 3D understands GIS and can work with the data given. In this section, we'll show you how to import GIS data pertaining to surfaces:

1. Start a new drawing by using the _AutoCAD Civil 3D (Imperial) NCS template and set the coordinate system to NAD83 Virginia State Planes, North Zone, US Foot (VA83-NF). Metric users should use the _AutoCAD Civil 3D (Metric) NCS template and set the coordinate system to NAD83, Virginia State Planes, North Zone, Meter (VA83-N).
2. From the Home tab > Create Ground Data panel, choose Surfaces > Create Surface From GIS Data. The Create Surface From GIS Data – Object Options page appears.
3. Set Name to **GIS Data**, change Description to **Import from GIS Data**, and set the style to Contours 5' and 25' (Background), or Contours 2 m and 10 m (Background) for metric users, as shown in [Figure 4.18](#), and click the Next button.

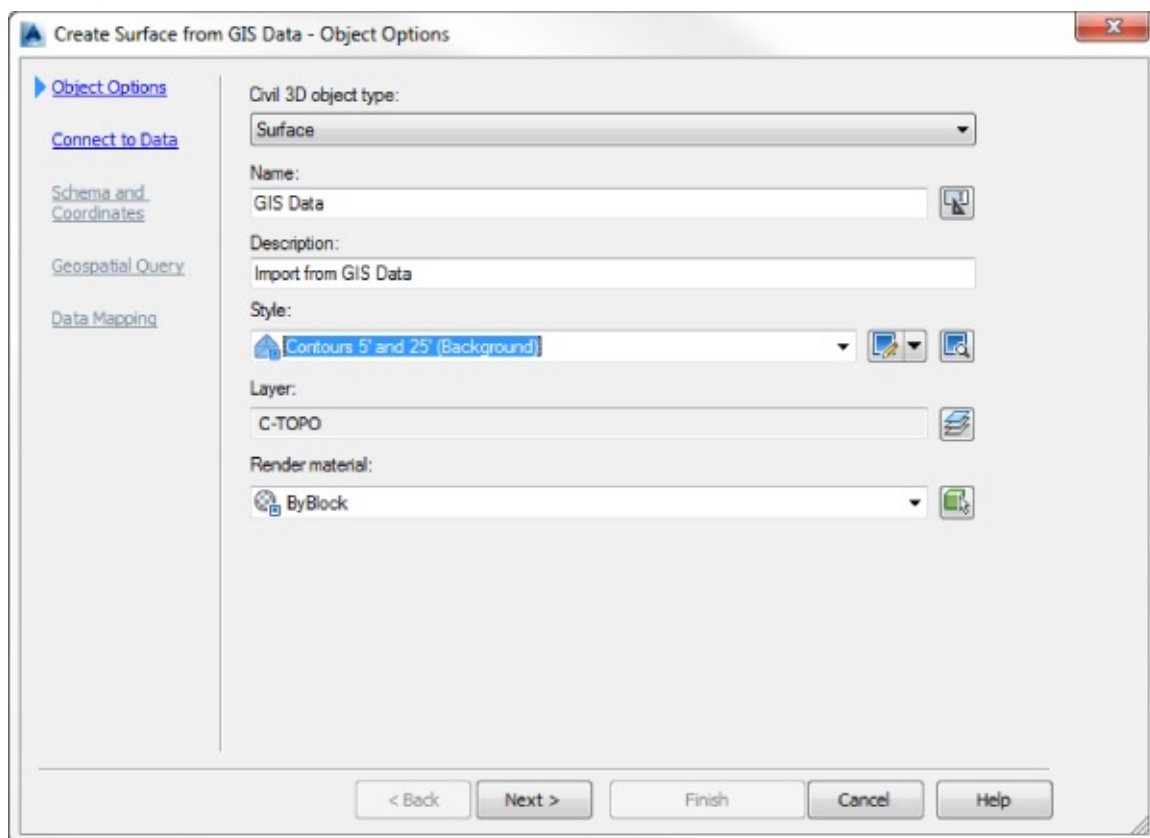


Figure 4.18 The Create Surface From GIS Data – Object Options page

The Create Surface From GIS Data – Connect To Data page appears.

4. You are importing a SHP file, so change Data Source Type to SHP.
5. Click the ellipsis next to SHP Path. Locate the 0406_Contours.shp file (which you'll find at www.sybex.com/go/masteringcivil3d2015). Then click Open.

The path is now populated with the location of the SHP file, as shown in [Figure 4.19](#).

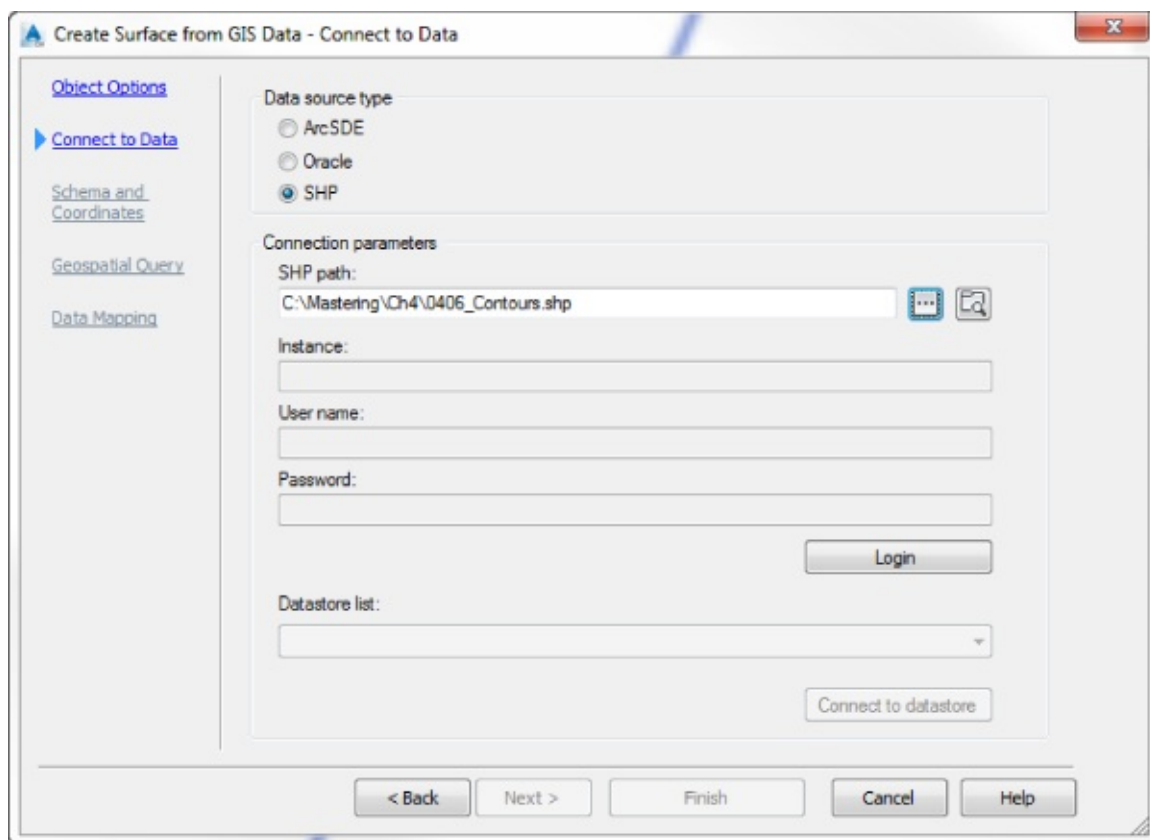


Figure 4.19 The Create Surface From GIS Data – Connect To Data page

6. Click the Login button.

Don't worry; you won't need a username or password to log in.

The Create Surface From GIS Data – Schema And Coordinates page now appears ([Figure 4.20](#)).


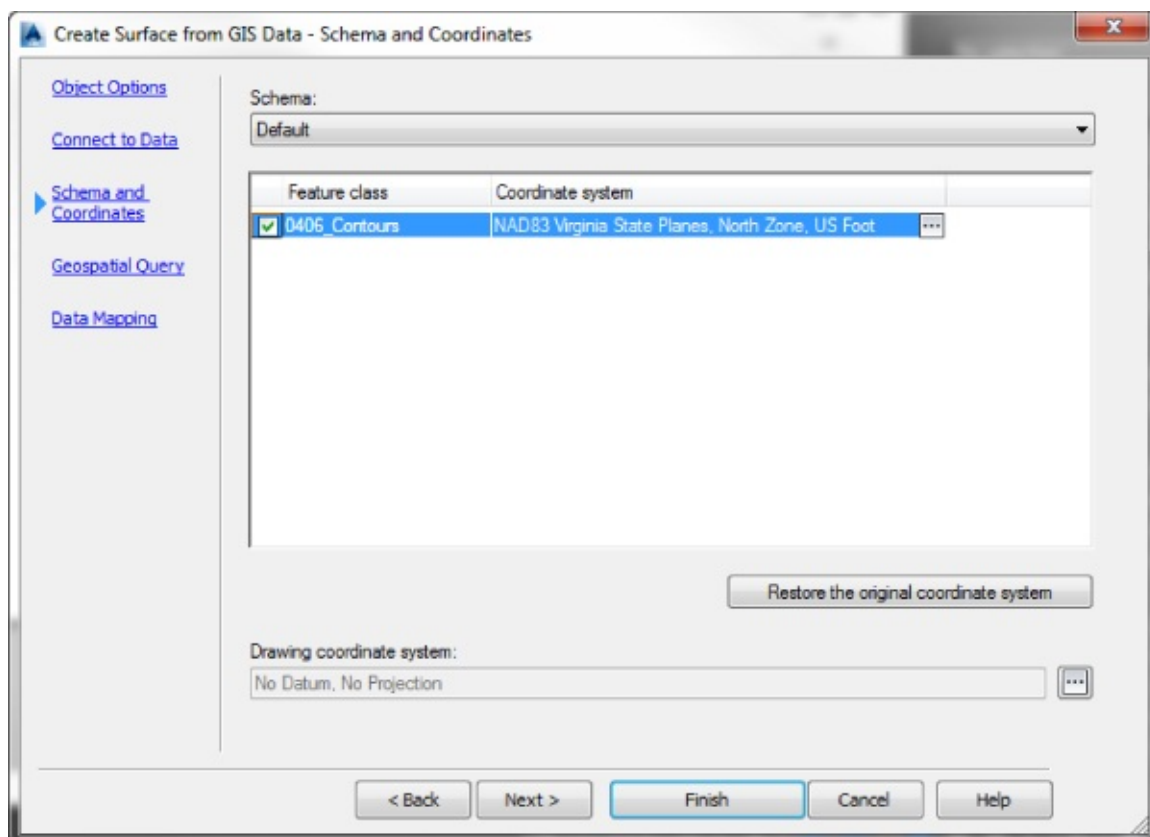


Figure 4.20 The Create Surface From GIS Data – Schema And Coordinates page

You will notice that the name of the file appears as well as the coordinate system in which the SHP was created. If you are an Imperial user, the NAD83 Virginia State Planes, North Zone, US Foot system matches what you set the drawing up with. For metric users, the coordinate system of the SHP file is different than the drawing coordinate system.

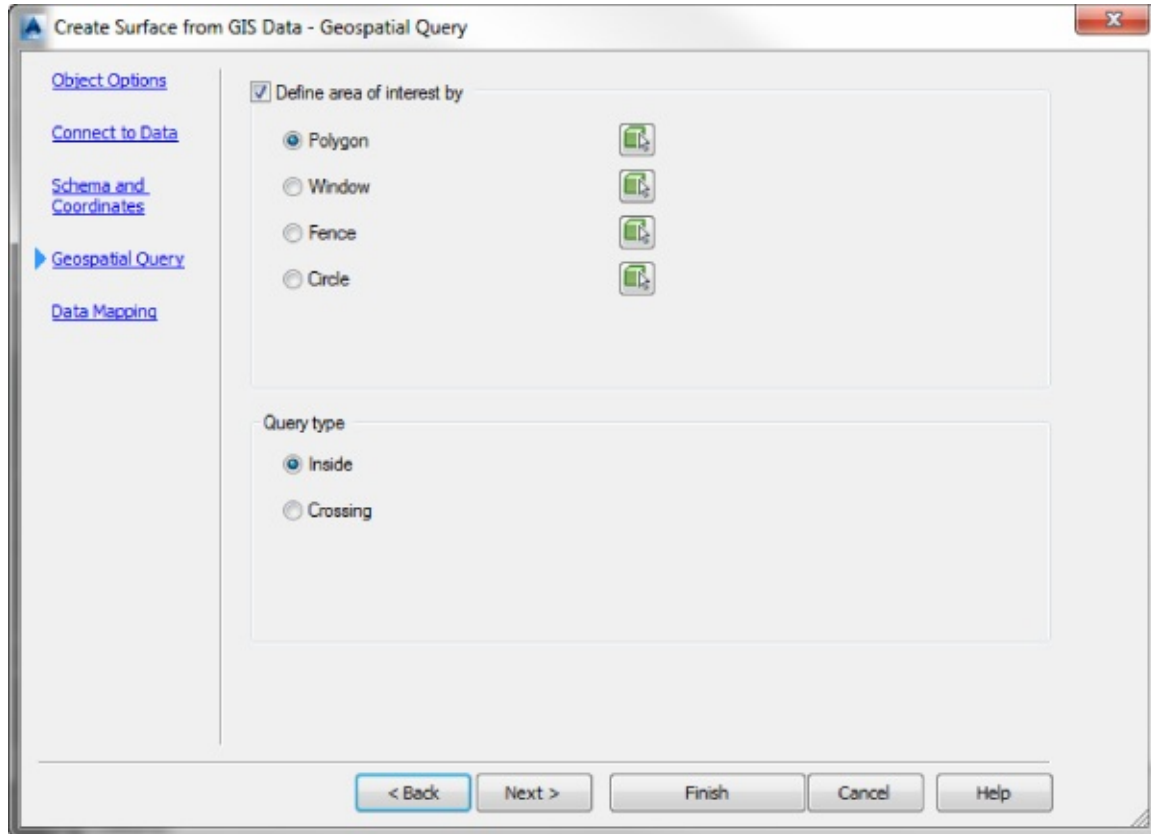7. Verify that the 0406_Contours check box is checked under Feature Class and click Next.
8. On the Create Surface From GIS Data – Geospatial Query page, look at the settings for future reference but do not make any changes ([Figure 4.21](#)). Click Next.



[Figure 4.21](#) The Create Surface From GIS Data – Geospatial Query page

9. On the Create Surface From GIS Data – Data Mapping page, click the drop-down list next to FLABEL in the GIS Field column and select Elevation, as shown in [Figure 4.22](#).

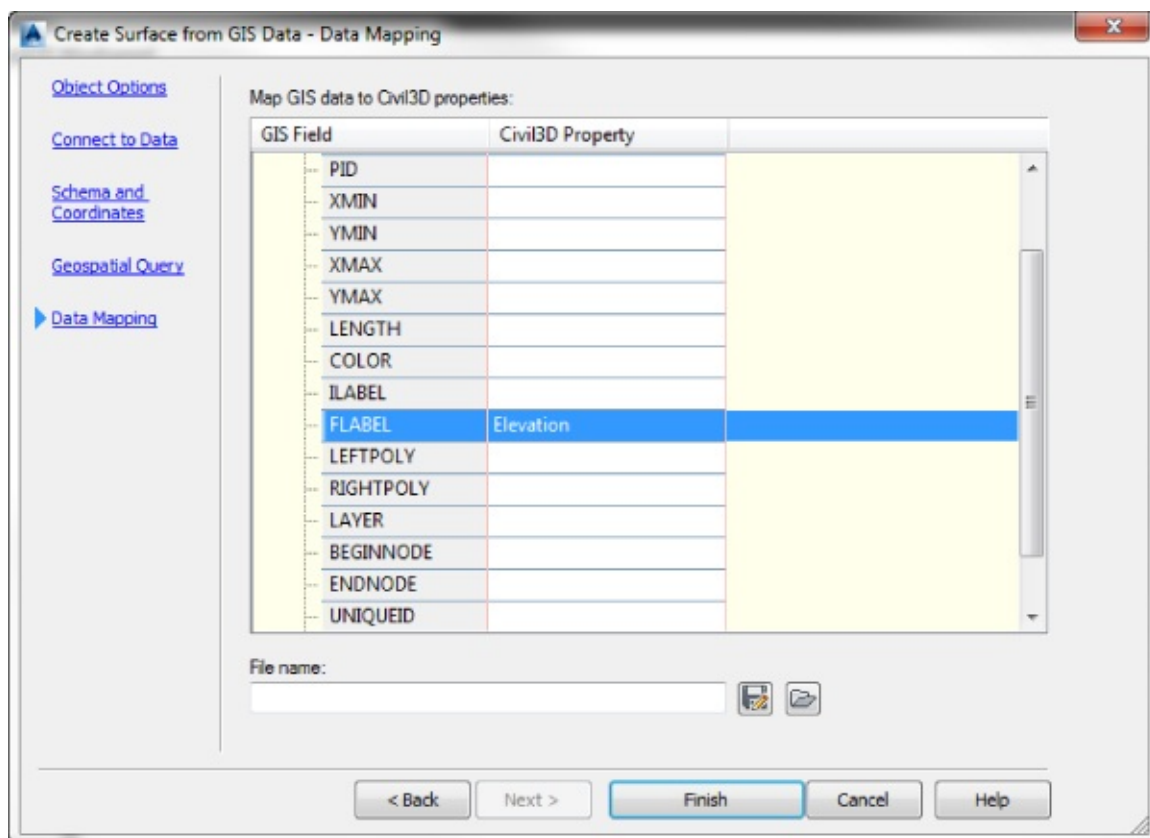


Figure 4.22 The Create Surface From GIS Data – Data Mapping page

Many dialogs throughout the software use tables such as those shown on this page for you to input data. If at any time the column is not wide enough for you to view all of the contents, you may modify the column width by clicking between the column headings.

At the bottom of the Create Surface From GIS Data – Data Mapping page you will notice a File Name field as well as Save and Open icons. That means you can save the current data mapping information that you've set for future use.

10. Click the Finish button.
11. Dismiss Panorama and zoom extents to see the surface based on the SHP file ([Figure 4.23](#)). If the Level Of Detail Display setting is still on from the previous exercise, turn it off (View tab > Views panel expanded > Level Of Detail).

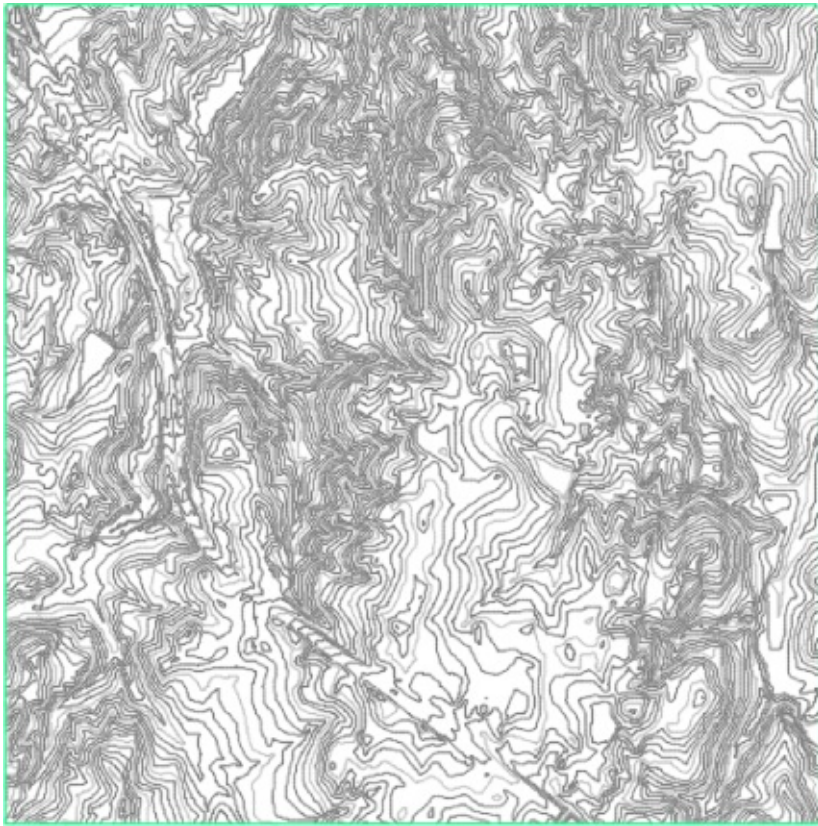


Figure 4.23 The finished imported GIS contours

When this exercise is complete, you may close the drawing. A finished copy of this drawing is available from the book's web page with the filename `0406_SurfaceFromGIS_FINISHED.dwg` or `0406_SurfaceFromGIS_METRIC_FINISHED.dwg`.

This is just another avenue for getting data from other sources into Civil 3D.

Surfaces from Polylines

The quality of the data you receive if you are working with contours varies greatly. The contour interval and smoothing factors will affect the result when imported to Civil 3D. The resulting surface may not accurately reflect the original survey data. This is because elevation information is provided along the contour lines but not in between the contour lines, causing the interpolation between the contours to lack accuracy. Civil 3D includes a series of surface algorithms that work very well at matching the resulting surface to the original contour data by providing additional derived data points. You'll look at those surface edits in this series of exercises:

1. Open the `0407_SurfaceFromPolylines.dwg` file (or the `0407_SurfaceFromPolylines_METRIC.dwg` file).
Note that the contours in this file are composed of polylines with elevation values.
2. In Prospector, right-click the Surfaces branch and select the Create Surface option.
The Create Surface dialog appears.
3. Leave the Type field set to TIN Surface but change the Name value to **EG-Polylines**.
4. Change Description to **Surface From Polylines**.
5. Click in the Value column next to Style to display the ellipsis button; once it's visible, click the ellipsis button to display the Select Surface Style dialog.

6. From the drop-down list, select Contours 5' And 25' (Background), or Contours 2m And 10m (Background) for metric users, and click OK to close the Select Surface Style dialog.
 7. Click OK to close the Create Surface dialog.
 8. In Prospector, expand the Surfaces > EG-Polylines > Definition branch.
 9. Right-click Contours and select the Add option.
- The Add Contour Data dialog appears.
10. Set Description to **Polylines**. Under Weeding Factors, set Distance to **15** (or **5** for metric users) and Angle to **4** degrees. Under Supplementing Factors, set Distance to **100** (or **30** for metric users) and Mid-Ordinate Distance to **1** (or **0.3** for metric users).
 11. Verify that none of the check boxes are checked, as shown in [Figure 4.24](#), and click OK.

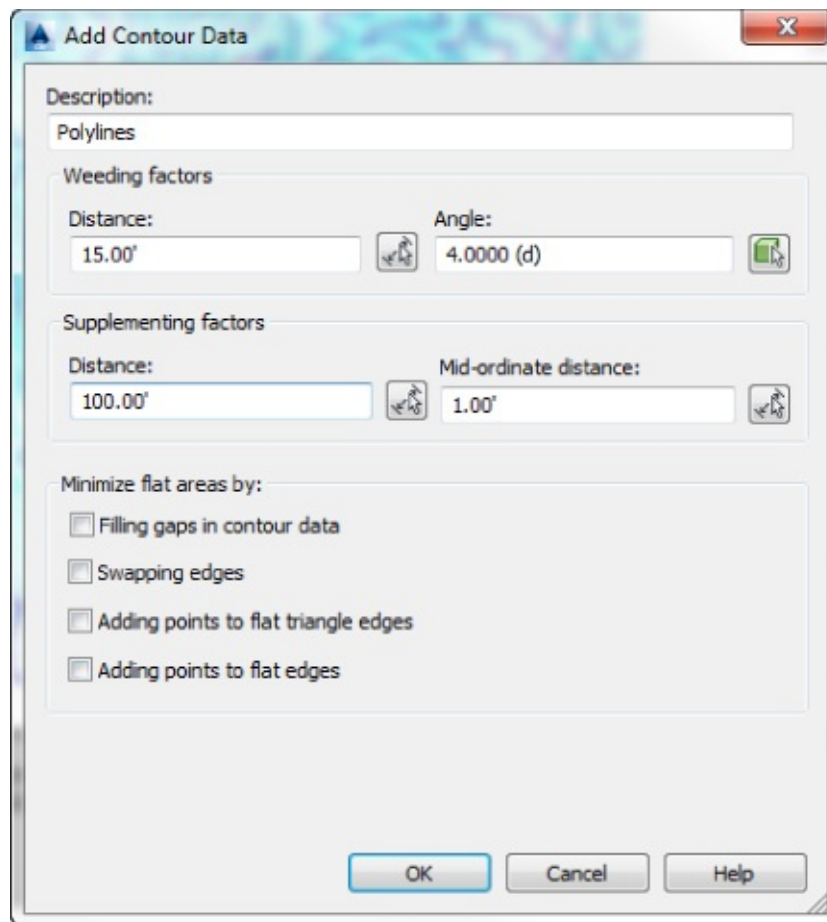


Figure 4.24 The Add Contour Data dialog

In this example it is okay to leave all the Minimize Flat Areas By options unchecked. You will return to the Minimize Flat Areas By options in a bit.

12. At the Select contours: prompt, enter **ALL** ↵ to select all the entities in the drawing and press ↵ again to end the command.

You can dismiss Panorama if it appears by clicking the green check mark. Save the drawing and keep it open for the next portion of the exercise.

The contour data has some tight curves and flat spots where the basic contouring algorithms simply fail. Zoom into any portion of the site, and you can see these areas by looking for the blue and cyan original contours not matching the new Civil 3D-generated contour, as shown in [Figure 4.25](#).



Figure 4.25 Contour surface without minimizing flat areas

You'll fix that now.

3. In Prospector, expand the Definition branch of the EG-Polylines surface if it's not already open from the previous exercise and right-click Edits.

4. Select the Minimize Flat Areas option to open the Minimize Flat Areas dialog.

Note that the dialog has the same options found in that portion of your original Add Contour Data dialog.

5. Click OK to accept the defaults.

Save the drawing and keep it open for the next portion of the exercise.

Now the contours displayed more closely match the original contour information, as shown in [Figure 4.26](#). There might be a few instances where gaps exist between old and new contour lines, but in a cursory analysis, none was off by more than 0.4' in the horizontal direction—not bad when you're dealing with almost a square mile of contour information.



Figure 4.26 Contour surface with minimizing flat areas

6. Zoom into an area with a dense contour spacing and select the surface to make the contextual tab

associated with the TIN Surface: EG-Polylines appear.

17. From the TIN Surface contextual tab ► Modify panel, choose the Surface Properties icon to display the Surface Properties dialog.
18. On the Information tab, set Surface Style to Contours And Points, and click OK to see a drawing similar to [Figure 4.27](#). Hit the Esc key to deselect the surface.

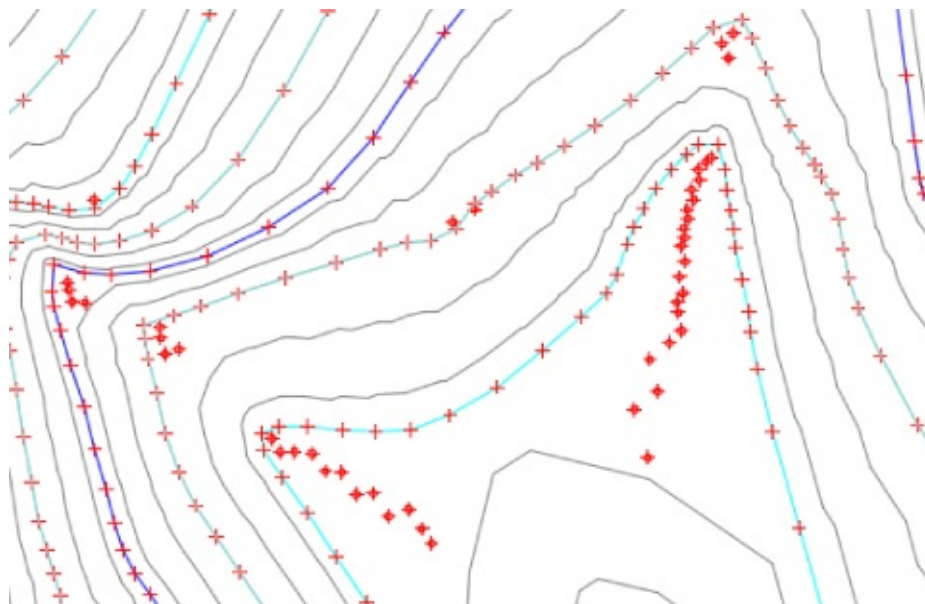


Figure 4.27 Surface data points and derived data points

In [Figure 4.27](#), you're seeing the points the TIN is derived from, with some styling applied to help you understand the creation source of the points. Although you can't see the colors in the printed figure, on the screen the points are shown in color to help you differentiate them. Each point shown as a red + symbol is a point picked up from the contour data itself. The magenta points shown with a circle symbol circumscribed over a + symbol are all added data on the basis of the Minimize Flat Areas edits. These points make it possible for the Civil 3D surface to match almost exactly the input contour data.

At this point, the original polylines are still present in the drawing, and you may find yourself tempted to delete them. Before doing so, you will want to change the surface property Copy Deleted Dependent Objects, as discussed in the section “Surface Build Options” later in this chapter.

When this exercise is complete, you may close the drawing. A completed version of this drawing is available from the book's web page with the filename 0407_SurfaceFromPolylines_FINISHED.dwg or 0407_SurfaceFromPolylines_METRIC_FINISHED.dwg.

Now that you have learned how to add several types of data to a surface definition, you will need to fine-tune your surface models for better accuracy.

Refining and Editing Surfaces

Certification Objective

Once a basic surface is built, and in some cases even before it is built, you can do some cleanup and modification to the TIN construction that make it much more usable and realistic. Some of these edits include limiting the input data, tweaking the triangulation, adding breakline information, and hiding areas from view. In the following sections, you'll explore a number of ways of refining surfaces to end up with the best possible model from which to build.

Surface Properties

The most basic steps you can perform in making a better model are right in the Surface Properties dialog. The surface object contains information about the build and edit operations, along with some values used in surface calculations.

Surface Build Options

There are two main places you can set surface build options. The first location is on the Settings tab of Toolspace under Surfaces > Commands > Create Surface. If you right-click Create Surface, you will find an option to edit command settings. You can set these at the beginning of a project to automatically set the options for all surfaces as they are created. It is a great idea to configure the command settings in your template so your preferred triangulation defaults will be set on all projects.

The second place you will see the build options for a surface is in Surface Properties on the Definition tab. Changing the settings under Surface Properties will affect only the individual surface you are working with.

The basic options are listed here:

Copy Deleted Dependent Objects When you select Yes and an object (such as a surface boundary or breakline) that is part of the surface definition is deleted, the information derived from that object is copied into the surface definition. If this option is set to No for the surface, when elevation source objects (such as polylines added as contours) are deleted, they will be removed from the surface definition when the surface is rebuilt.

Exclude Elevations Less Than Setting Exclude Elevations Less Than to Yes allows you to set a surface's lowest valid elevation in the Elevation < field. Note that Elevation < is a “less than” operation, not “less than or equal to,” so to rectify the problem caused by items at 0, you will need to set this to 1, for example.

Exclude Elevations Greater Than Setting this to Yes will allow you to set the Elevation > field. This option allows you to set a highest valid elevation value.

Use Maximum Angle Setting this option to Yes will allow you to set a value for Maximum Angle Between Adjacent TIN Lines. This setting will omit long “sliver” triangles that typically get generated along the exterior of the TIN.

Use Maximum Triangle Length Setting this option to Yes will allow you to set a value for Maximum Triangle Length. If a triangle leg is excessively long, it is often an indicator that valid elevation data for triangulation is sparse, as often occurs near the edges of a site. If you are using this option to minimize long triangle lines, double-check your TIN to make sure the length you specified isn't creating interior holes.

Convert Proximity Breaklines To Standard Toggling this option to Yes will create standard breaklines out of the entities used as proximity breaklines. The surface will no longer be dependent on the proximity entities. The standard breakline will be created internal to the surface but can be drawn by right-clicking the breakline in the surface definition and selecting Insert Into Drawing.

Allow Crossing Breaklines Setting this option to Yes allows you to set the Elevation To Use option. These options specify what Civil 3D should do if two breaklines in a surface definition intersect in the X,Y plane with different elevations at the intersection. Leaving this option set to No will cause the surface to totally throw out both offending breaklines.

In this exercise, you'll go through a couple of the basic surface-building controls that are available. You'll use them one at a time in order to observe their effects on the final surface display.

1. Open the 0408_SurfaceProperties.dwg file (or the 0408_SurfaceProperties_METRIC.dwg file).
2. Locate the portion of the surface that contains poor elevation data inside the magenta circle. Use your mouse to pan and zoom in the drawing.

You will know you have found the correct location when you zoom into the portion of the surface that resembles [Figure 4.28](#). This blob is a batch of densely packed contours where the surface is incorrectly picking up elevations at zero.



Figure 4.28 EG surface showing a batch of densely packed contours, indicating bad elevations

3. Select the surface by clicking any part of it in the graphic.
From the TIN Surface: EG contextual tab, click the Surface Properties icon.
4. The Surface Properties dialog appears.
5. Select the Definition tab.
6. Under Definition Options at the top of the dialog ([Figure 4.29](#)), expand the Build branch by clicking the + symbol.

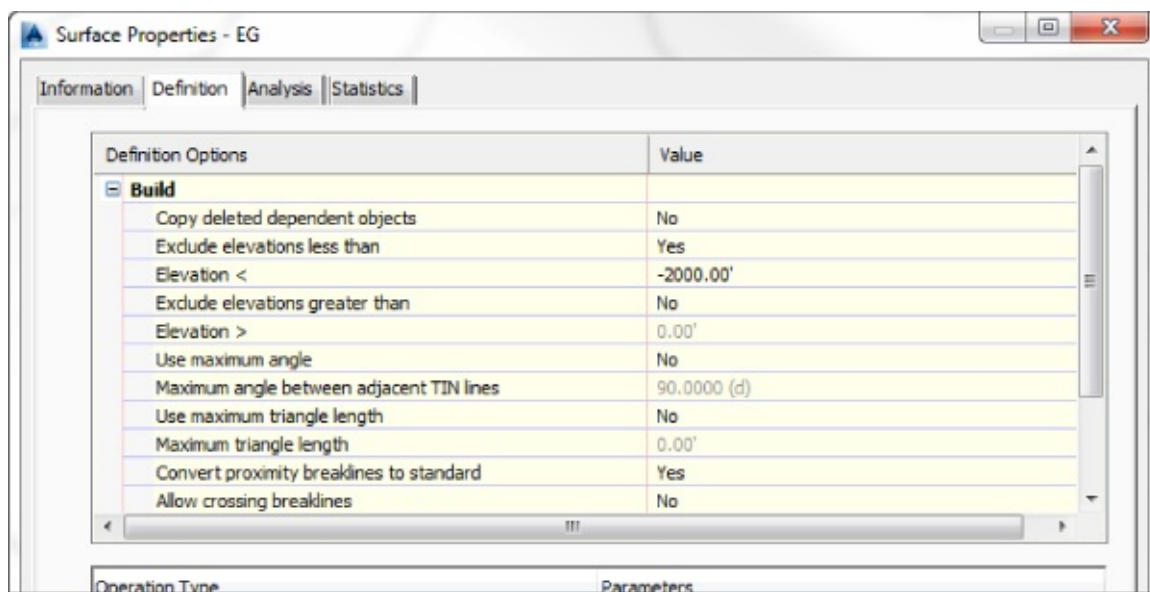


Figure 4.29 Surface Properties Definition Options

7. Verify that the Exclude Elevations Less Than value is Yes.
 8. Set the value to **200** (**60** for metric users) and click OK to accept the settings in the dialog.
A warning message will appear. Civil 3D is warning you that your surface definition has changed.
 9. Click Rebuild The Surface to rebuild the surface.
 10. You may see a message appear in Panorama indicating that three points were ignored because they are below the given limit. If this is the case, close the Panorama window by clicking the green check mark.
 11. Zoom extents to view the full surface by double-clicking your middle mouse wheel.
- When this step is complete, the surface will look similar to [Figure 4.30](#). Save the drawing and keep it open for the next portion of the exercise.

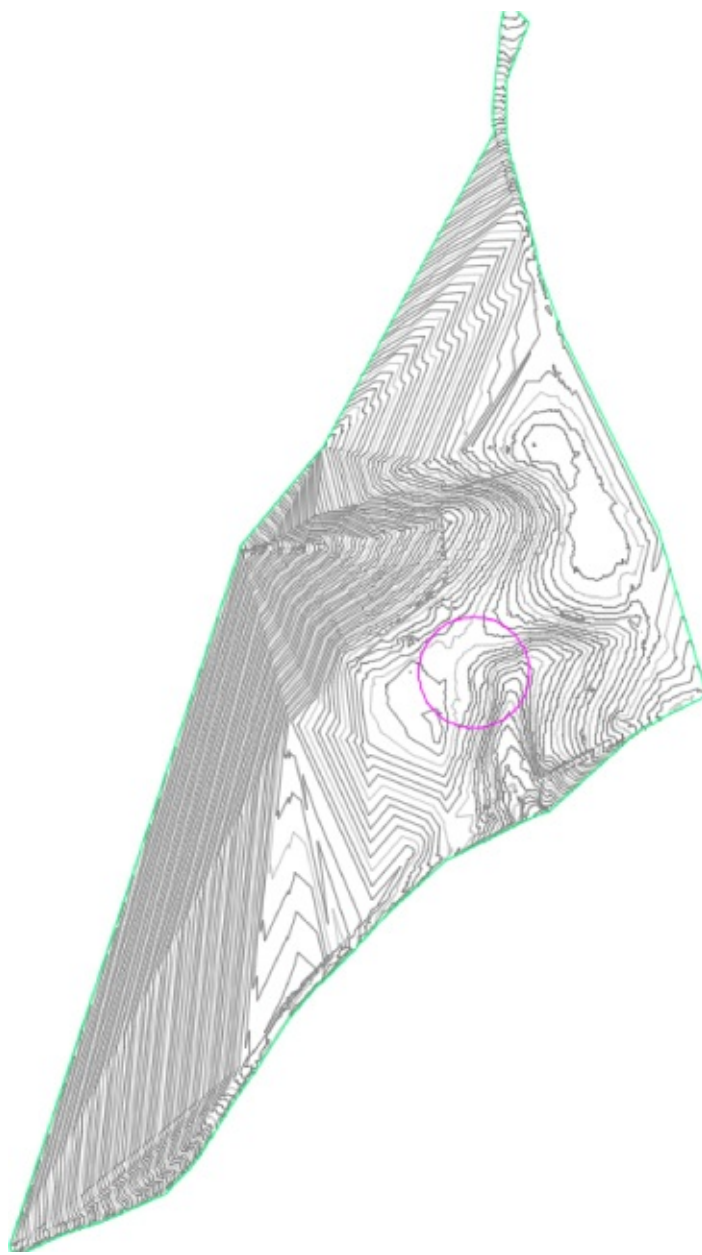


Figure 4.30 EG surface after ignoring low elevations

Although this surface is improving, there are still large areas being contoured that shouldn't be. By changing the style to review the surface, you can see where you still have some issues.

2. Open the Surface Properties dialog again, and switch to the Information tab.
3. Change the Surface Style field to Contours And Triangles.
4. Click Apply. Doing so makes the changes without exiting the dialog.
5. Drag the dialog to the side so you can see the site.

On the outer edges of the site, you can see some long triangles formed in areas where there was no survey taken but the surface decided to connect the triangles anyway ([Figure 4.31](#), left).

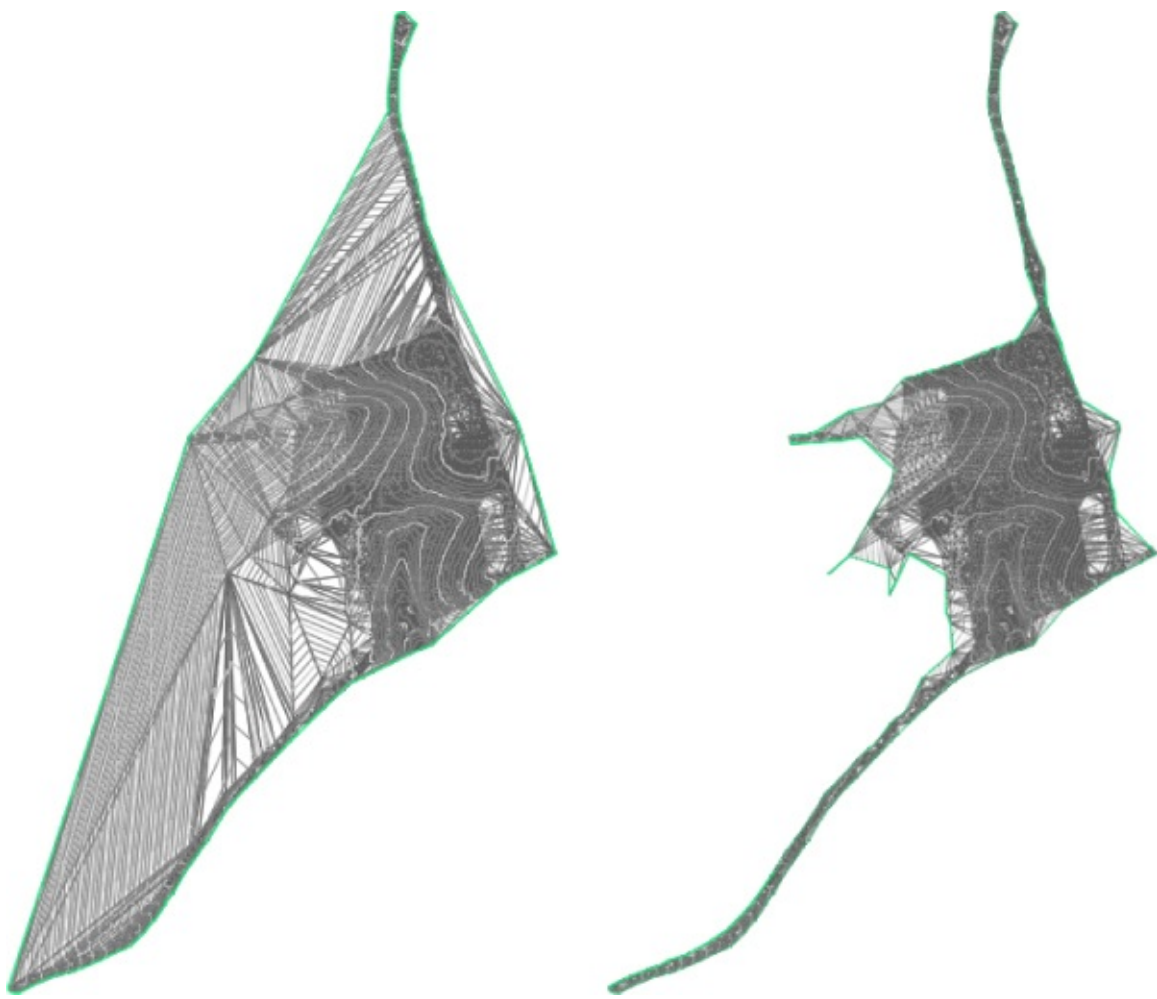


Figure 4.31 EG surface before Use Maximum Triangle Length was applied (left) and after (right). Note that the Level Of Detail display option is on in these figures

16. In the Surface Properties dialog, switch to the Definition tab.
17. Expand the Build category by clicking the + symbol.
18. Set the Use Maximum Triangle Length value to Yes.
19. In the Maximum Triangle Length value field, enter **300** (or for metric, **70**).
20. Click OK to apply the settings and close the dialog.
21. Click Rebuild The Surface to update and dismiss the warning message to see the revised surface ([Figure 4.31](#), right).

When this exercise is complete, you may close the drawing. A completed version of this drawing is available from the book's web page with the filename `0408_SurfaceProperties_FINISHED.dwg` or `0408_SurfaceProperties_METRIC_FINISHED.dwg`.



Real World Scenario

Reordering Build Operations

The order in which you add data to a surface can make a significant difference in how elevation data is processed. You want the surface to process the most reliable data first (such as surveyed points

and breaklines) and then work its way down to the least reliable data (contours from polylines, for example). Additionally, you want the surface to process boundaries last so that the triangulation gets reined in as expected. Luckily, if you forget to add items in the correct order, you can easily change how Civil 3D processes elevation information.

In the following example, you will fix surface problems simply by changing the order in which elevation data is processed. The Operation Type listing is displayed at the bottom of the Definition tab in the Surface Properties dialog.

1. Open the file `0409_SurfaceBuildOrder.dwg` or `0409_SurfaceBuildOrder_METRIC.dwg`.

This surface comprises a mélange of data types. It contains contours from polylines, points, a breakline, 3D faces, and a boundary.

If you zoom and pan over the surface to examine, you will see that there are some strange contour formations due to the order in which data was added to the surface definition. In the southwest part of the surface, contours shoot across a gap in the data where the boundary is not being respected.

2. Select the surface by clicking any part of it in the graphic.
3. From the TIN Surface: Existing contextual tab, click the Surface Properties icon.
4. Switch to the Definition tab.

The Operation Type listing at the bottom of the dialog shows the order in which Civil 3D is using surface elevation information. Items near the top of the list are processed first if conflicting elevation information is added. In this example, the elevations from contours are conflicting with the point data.

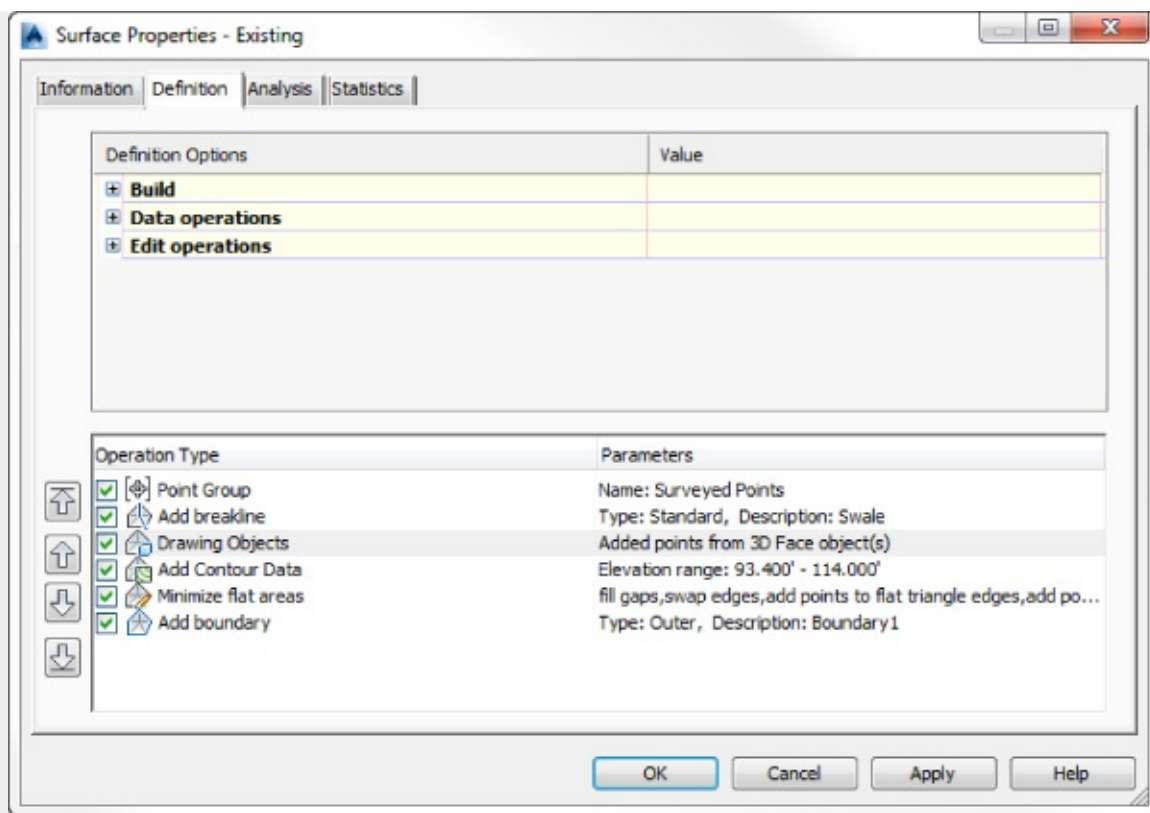
5. Highlight the listing for Point Group and use the topmost arrow on the left side of the dialog to move it to the top of the Operation Type list.

You'll see the warning symbol appear to the left of all the data types whose place in Operation Type order is affected by the change.


6. Click OK and then click Rebuild The Surface when prompted to do so.

Examine the surface again by zooming and panning around the drawing. The contours are now forming as expected in the areas where surveyed point data is taking precedence over the rest of the elevation data.

7. Return to Surface Properties by clicking the surface and clicking the Surface Properties icon from the TIN Surface: Existing contextual tab.
8. Use the arrow buttons to reorder the Operation Type listing to match what is shown in the following image.



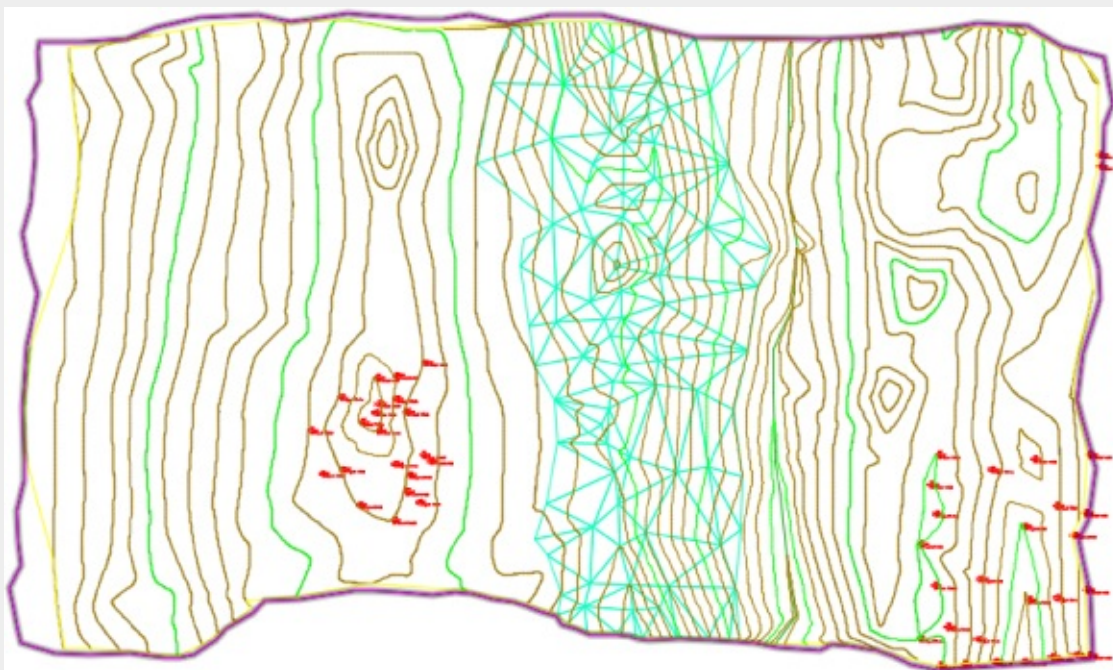9. Click OK and then click Rebuild The Surface when prompted to do so.



The surface with completed edits will look like the following image.

A completed version of the file is available on the book's web page called
 0409_SurfaceBuildOrder_FINISHED.dwg or
 0409_SurfaceBuildOrder_METRIC_FINISHED.dwg.

You will need to use your professional judgment and a little common sense to determine the best order of operations for different surface data scenarios. If you would like to see what the surface would look like without a particular operation, you can clear the check box next to its listing in the Definition tab. You can completely remove operations from the list by right-clicking the item in the list and selecting Remove From Definition.

Manual Surface Edits

Manual edits allow further surface refinement by changing the surface at its core—the triangles. A number of manual edits can be performed on a surface. These edit options become part of the definition of the surface and include the following:

Add Line Connects two points where a triangle did not exist before. This option essentially adds a breakline to the surface, so adding a breakline would generally be a better solution. This option is not available on grid surfaces.

Delete Line Removes the connection between two points. In addition to using outer boundaries, this option is used frequently to clean up the edge of a surface or to remove internal data where a surface should have no triangulation at all. This can be an area such as a building pad or water surface, although hide boundaries are recommended in these scenarios.

Swap Edge Changes the direction of the triangulation methodology. For any four points, there are two solutions to the internal triangulation, and the Swap Edge option alternates from one solution to the other. The necessity of numerous swap edge operations can be limited by the use of appropriate breaklines. This option is not available on grid surfaces.

Add Point Allows for the manual addition of surface data. This function is often used to add a peak to a digitized set of contours that might have a flat spot at the top of a hill.

Delete Point Allows for the manual removal of a data point from the surface definition. Generally, it's better to fix the source of the bad data, but this option can be a fix if the original data is not editable (in the case of a LandXML file, for example).

Modify Point Allows for changing the elevation of a surface point. Only the TIN point is modified, not the original data input.

Move Point Is limited to horizontal movement. Like Modify Point, only the TIN point is modified, not the original data input. This option is not available on grid surfaces.

Minimize Flat Areas Performs the edits you saw earlier in this chapter to add supplemental information to the TIN and to create a more accurate surface, forcing triangulation to work in the z direction instead of creating flat planes. This option is not available on grid surfaces.

Raise/Lower Surface A simple arithmetic operation that moves the entire surface in the positive or negative z direction. This option is useful for testing rough grading schemes for balancing dirt or for adjusting entire surfaces after a new benchmark has been observed.

Smooth Surface Presents a pair of methods for supplementing the surface TIN data (note that this option is not available on grid surfaces). Both smoothing methods work by extrapolating more information from the current TIN data, but they are distinctly different in their methodology:

Natural Neighbor Interpolation (NNI) Adds points to a surface on the basis of the weighted average of nearby points. This data generally works well to refine contouring that is sharply angular because of limited information or long TIN connections. NNI works only within the bounds of a surface; it cannot extend beyond the original data.

Kriging Adds points to a surface based on one of five distinct algorithms to predict the elevations at additional surface points. These algorithms create a trending for the surface beyond the known information and can therefore be used to extend a surface beyond even the available data. Kriging is very volatile, and you should understand the full methodology before applying this information

to your surface. Kriging is frequently used in subsurface exploration industries such as mining, where surface (or strata) information is difficult to come by and the distance between points can be higher than desired.

Paste Surface Pulls in the TIN information from the selected surface and replaces the TIN information in the host surface with this new information while keeping the dynamic relationship to the original surface. This option is helpful in creating composite surfaces that reflect both the original ground and the design intent. This option is not available on grid surfaces. We'll look at pasting in Chapter 14, "Grading."

Simplify Surface Allows you to reduce the amount of TIN data being processed while maintaining the accuracy of the surface. This is done using one of two methods: Edge Contraction, wherein Civil 3D tries to collapse two points connected by a line to one point, or Point Removal, which removes selected surface points based on algorithms designed to reduce data points that are similar. This option is not available on grid surfaces.

Manual editing should always be the last step in updating a surface. Fixing the surface is a poor substitution for fixing the underlying data the TIN is built from, but in some cases, it is the quickest and easiest way to make a more accurate surface.

Triangle Editing

In this section, you'll remove triangles manually and then finish your surface by swapping triangle edges.

1. Open the 0410_SurfaceEdits.dwg file (or the 0410_SurfaceEdits_METRIC.dwg file). Confirm that the EG surface style is set to Contours And Triangles.

Note that if you have Level Of Detail turned on, a red circle warning will appear if you are not zoomed in enough to view the true triangulation. You will want to turn Level Of Detail off by going to the View tab ➤ Views panel flyout. If the Level Of Detail button appears blue, that means it is on. Click the Level Of Detail button to turn it off.

2. Select the surface model by clicking it.
3. From the TIN Surface: Existing Surface contextual tab ➤ Modify panel, click Edit Surface ➤ Delete Line.
4. At the Select edges: prompt, enter **F** ↵ to use the Fence selection mode.

In Fence selection mode you will draw a multisegment selection line, and any objects that cross the line will be selected.

5. Pick close to the center of the circle labeled A at the northwest corner of the site, as shown in [Figure 4.32](#); move to the left as shown; pick toward the center of the circle labeled B; and press ↵ twice.

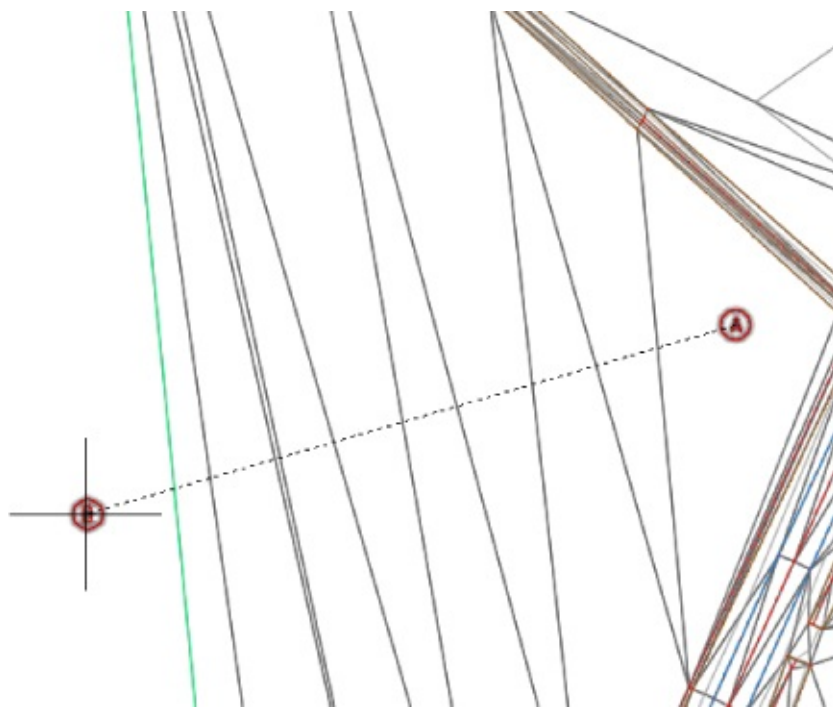


Figure 4.32 Using a Fence selection

Note that only triangles visible onscreen will be removed. In other words, if you zoom or pan such that some of the triangles you selected are not visible in your drawing area, they will not be removed from the surface definition. Be sure to zoom out so that points A and B are visible before proceeding to the next step.

6. Press \leftarrow to finish the selection set.
7. Repeat this process, for the following segments, removing triangles until your site resembles the image on the right in [Figure 4.33](#).

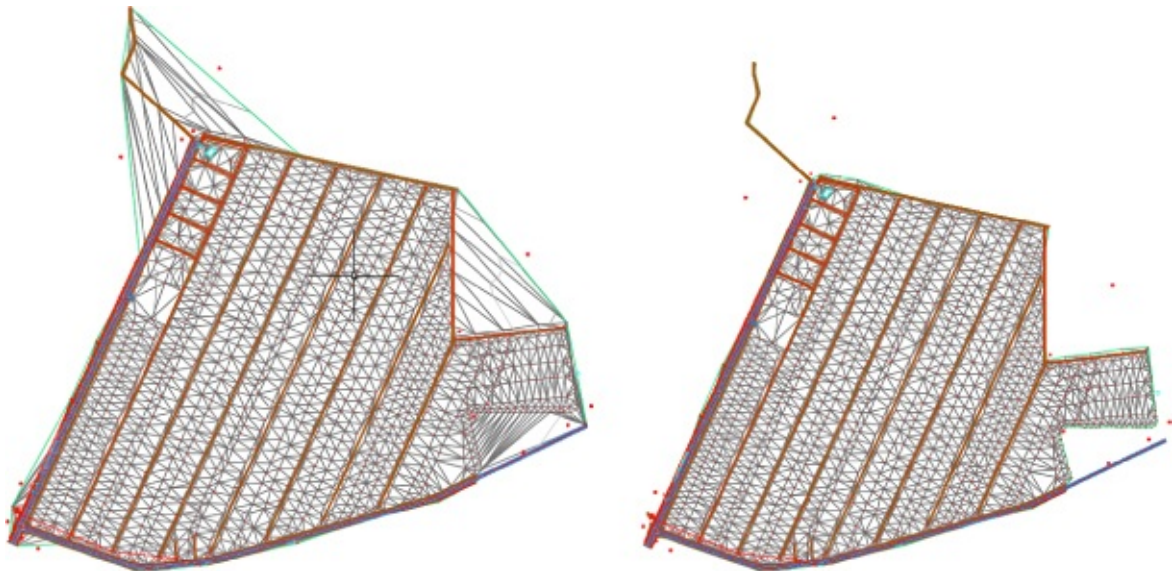


Figure 4.33 Surface before removal of extraneous triangles (left) and after (right)

8.
 1. a. C–D
 2. E–F
 3. G–H

4. I-J
5. K-L
6. M-N
7. O-P

8. Use your best judgment to remove remaining extraneous triangles.

9. Zoom to the green box in the southwest area of the site, and you'll notice a collection of contours that should be representing the shape of a ditch.

Four red circles were placed on some triangle edges that are causing these contours to be pulled either away or toward the ditch line. Using the Swap Edge routine will redraw the triangle edges to available vertices nearby.

10. Select the surface. From the Tin Surface: Existing Surface contextual tab, click Edit Surface > Swap Edge.
11. Zoom in on the area very closely.
12. Place the pick box inside each circle and select the triangle edges; notice the immediate change in the contouring.
13. Press **↵** when you have finished selecting edges to complete the command. The resulting contours should resemble the right side of [Figure 4.34](#).

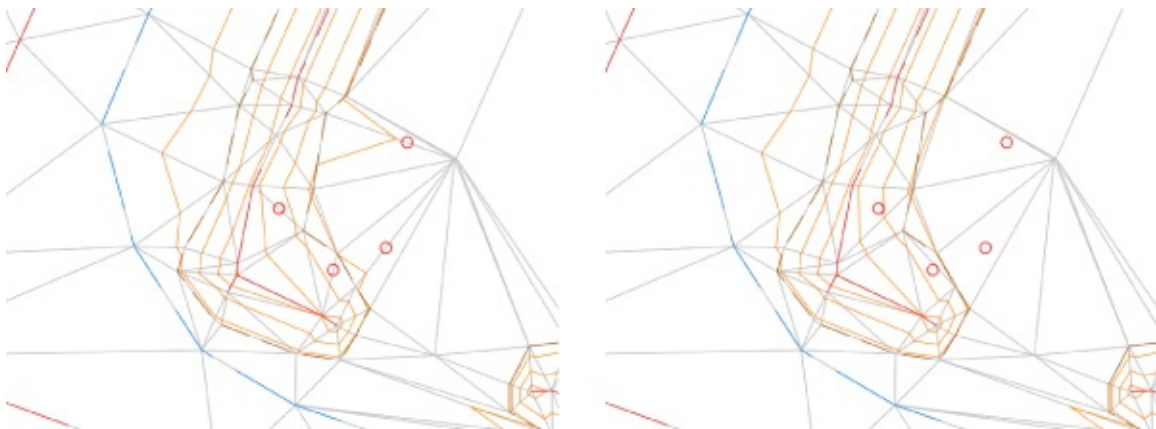


Figure 4.34 Surface before triangle swap (left) and after (right)

14. You may pan around and experiment with this command even further. Remember that any edit surface operations can be removed on the Definition tab in Surface Properties.

When this exercise is complete, you may save the drawing and keep it open to continue to the next exercise.

Surface Smoothing

If you examine a surface when a style showing both contours and triangles is active, you could follow a contour and trace its path. What you would see is that contours are always a straight line across a triangle face. Civil 3D generates contours triangle by triangle.

If your goal is to create more flowing, natural-looking contours, the best thing to do would be to create a surface style for which contour smoothing is turned on in the Contours tab.

If your goal is to change the surface and change the physical characteristics of the surface, the Smooth

Surface tool is the way to go. Surface smoothing will interpolate additional points on the surface, forming more triangles and giving the contours a less-angular appearance. Surface smoothing is often a first step before running a watershed analysis on the site because smoothing will blunt sharp ridges and create a more undulating form.

Use surface smoothing mindfully, however. Surface smoothing will smooch breakline locations, making a retaining wall look more like a mudslide. Additionally, since this tool adds points, you are making the surface bigger from a data perspective. Similar to when applying boundaries, surface smoothing should be at/near the bottom of the list in the Definition tab of a surface. If additional changes are made to a surface, the order should be updated.

In this exercise, you'll use the NNI smoothing algorithm to reduce surface anomalies and create a more visually pleasing contour set:

1. Continue working in the `0410_SurfaceEdits.dwg` file (or the `0410_SurfaceEdits_METRIC.dwg` file).
2. Select the surface.
3. From the Tin Surface: Existing Surface contextual tab, click Edit Surface ► Smooth Surface.
4. Expand the Smoothing Methods branch, and verify that Natural Neighbor Interpolation is the Select Method value.
5. Expand the Point Interpolation/Extrapolation branch, and click in the Select Output Region value field.
6. Click the ellipsis button.
7. At the Select region or [rEctangle polygon Surface]: prompt, pick the large magenta rectangle located on the surface for smoothing, and then press ↵ to return to the Smooth Surface dialog.
8. Enter **10** for the Grid X-Spacing and Grid Y-Spacing values (metric users should enter **3** for both values), and then click OK.

Note that Civil 3D will tell you how many points you are adding to the surface immediately below this input area by the value given in the Number Of Output Points field, as shown in [Figure 4.35](#). It's grayed out, but it does change on the basis of your input values.

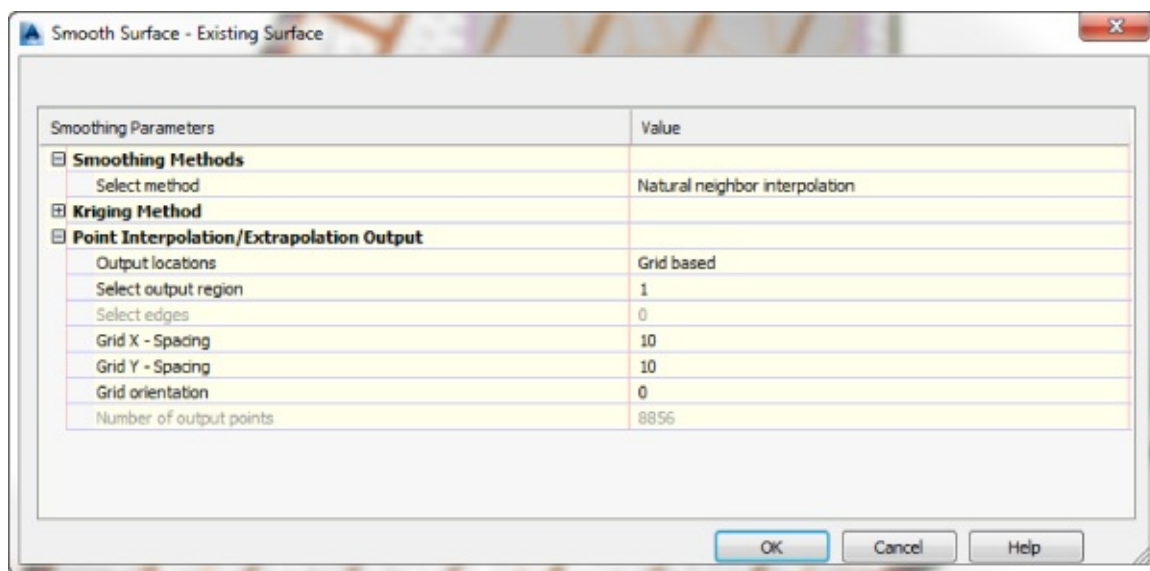


Figure 4.35 Smooth Surface dialog

- Click OK and the surface will be smoothed, similar to what is shown on the right in [Figure 4.36](#).

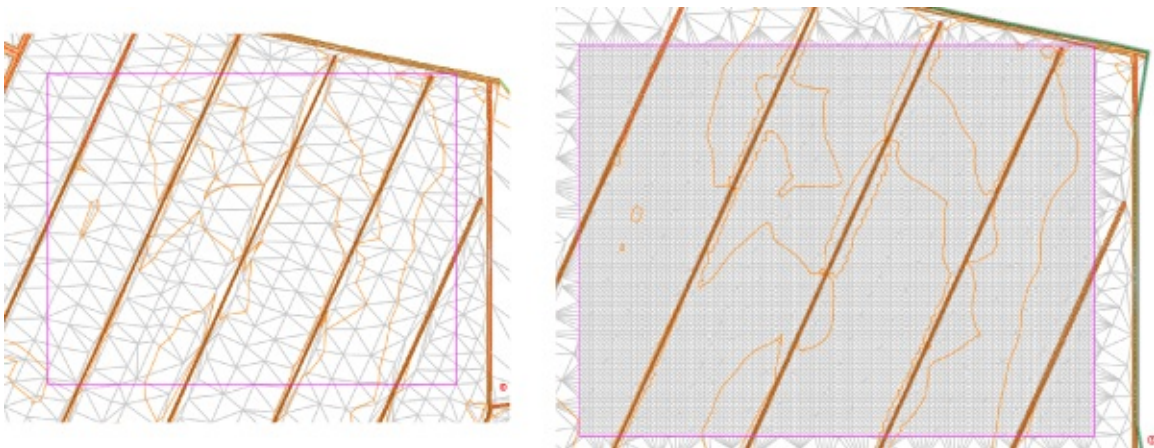


Figure 4.36 Surface before NNI smoothing (left) and after (right)

A completed version of this drawing is available from the book's web page with the filename 0410_SurfaceEdits_FINISHED.dwg or 0410_SurfaceEdits_METRIC_FINISHED.dwg. Zoom in and examine the ditches. Notice how the ditch shape is retained, thus respecting the breaklines used to define the flow lines and embankments.

When this exercise is complete, you may close the drawing.

Surface Simplifying

Because of the increasing use in land development projects of GIS and other data-heavy inputs, it's critical that Civil 3D users know how to simplify the surfaces produced from these sources. In this exercise, you'll simplify the surface created from a drawing earlier in this chapter.

- Open the 0411_SurfaceSimplify.dwg file (or the 0411_SurfaceSimplify_METRIC.dwg file). For reference, the surface statistics of the GIS Data surface are shown in [Figure 4.37](#).

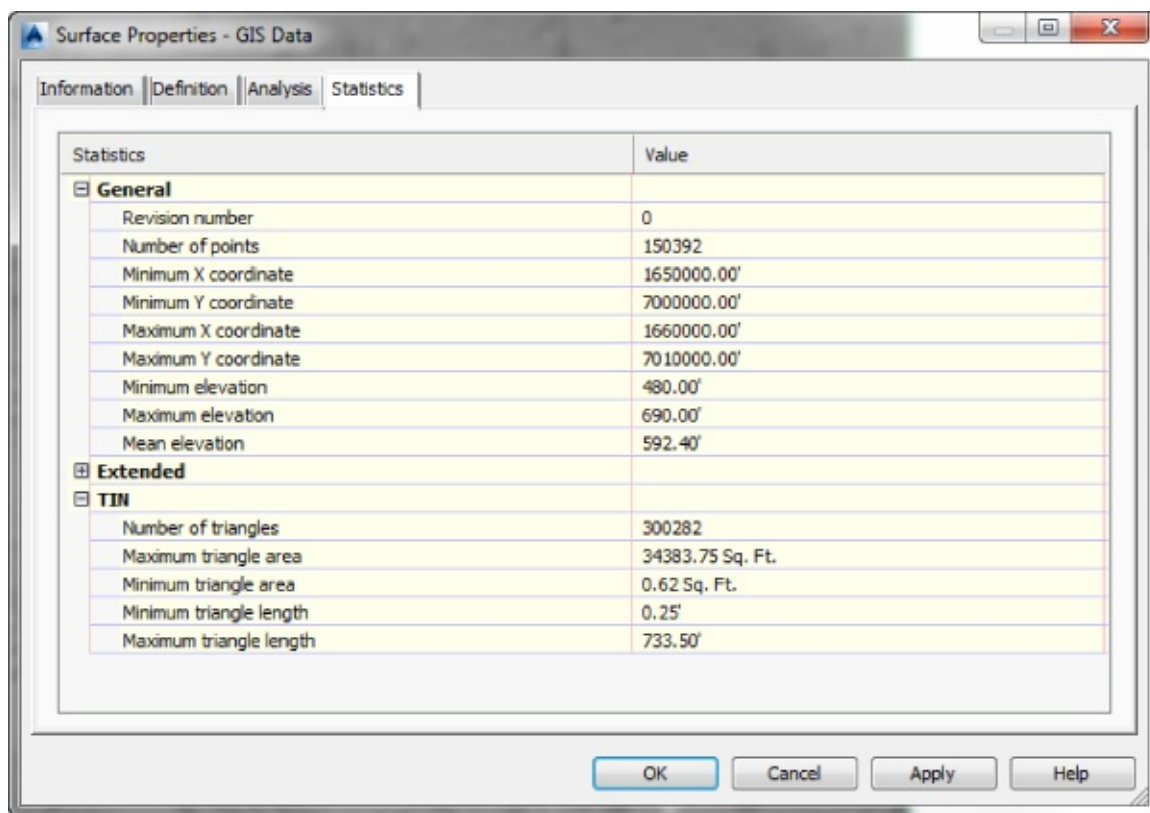


Figure 4.37 GIS Data surface statistics before simplification

2. Select the surface by clicking anywhere on it in the graphic.
3. From the Tin Surface: GIS Data contextual tab, click Edit Surface ► Simplify Surface.
4. Select the Point Removal radio button, as shown in [Figure 4.38](#), and click Next to move to the Region Options page.

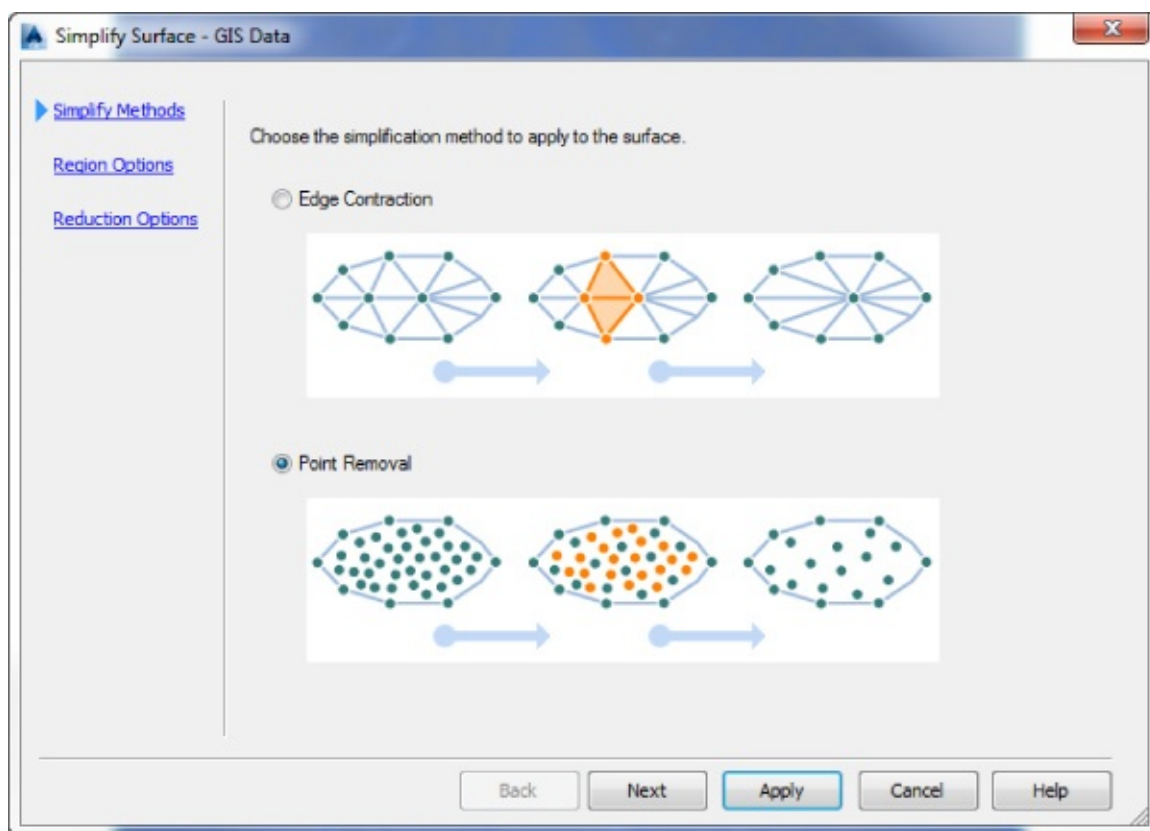


Figure 4.38 The Simplify Surface – Simplify Methods page

5. Accept the Region Options defaults, as shown in [Figure 4.39](#), and click Next to move to the Reduction Options page.

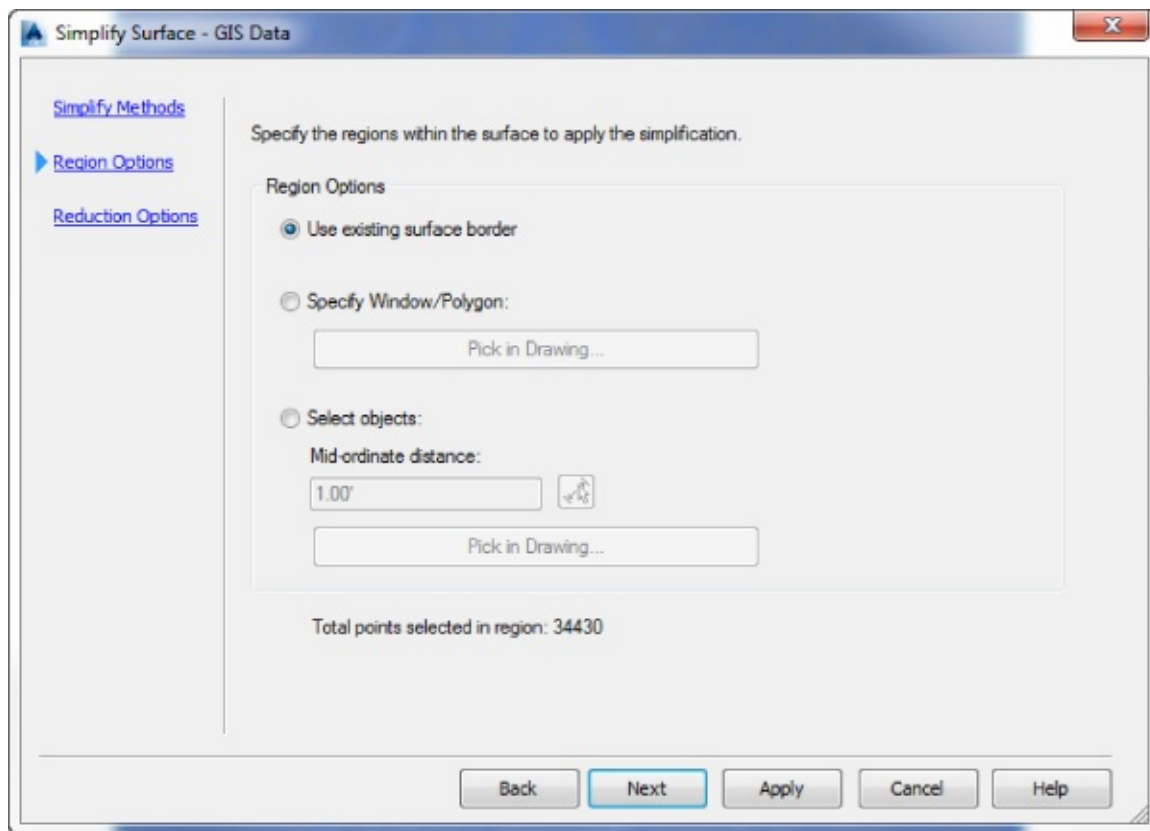


Figure 4.39 The Simplify Surface – Region Options page

6. Set Percentage Of Points To Remove to 20 percent and then deselect the Maximum Change In Elevation option.

This value is the maximum change allowed between the surface elevation at any point before or after the simplify process has run.

7. Click Apply.

The program will process this calculation and display a Total Points Removed number, as shown in [Figure 4.40](#). You can adjust the slider or place a check mark in the Maximum Change In Elevation option to experiment with different values. Note that every time you click Apply or Finish, the number of points in the simplified surface decreases again by that percentage.

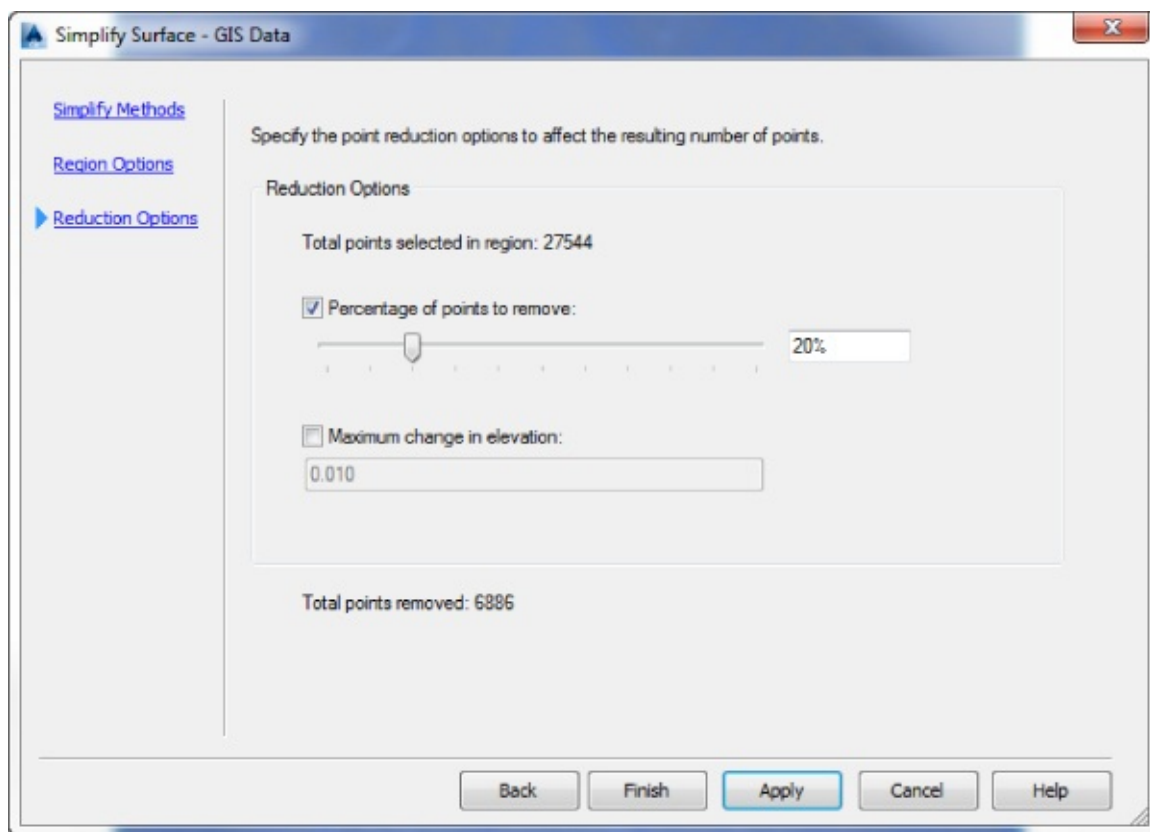


Figure 4.40 The Simplify Surface – Reduction Options page

8. Click Finish to close the wizard and commit the Simplify edit.

A Word about the Simplify Build Operation

Notice that the Simplify build operation is listed twice in the preview area of Prospector under Edits. This is because the command was run once when you clicked Apply and a second time when you clicked Finish. If you want to run the Simplify Surface command only once, you should click Apply and then click Cancel or just click Finish without clicking Apply first.

When this exercise is complete, you may close the drawing. A finished copy of this drawing is available from the book's web page with the filename 0411_SurfaceSimplify_FINISHED.dwg or 0411_SurfaceSimplify_METRIC_FINISHED.dwg.

A quick visit to the Surface Properties Statistics tab shows that the number of points has been reduced, as shown in [Figure 4.41](#). On something like an aerial topography or DEM, reducing the point count probably will not reduce the usability of the surface, but this simple point reduction will decrease the file size. Remember, you can always delete the edit or deselect the operation on the Definition tab of the Surface Properties dialog to “un-simplify” the surface.

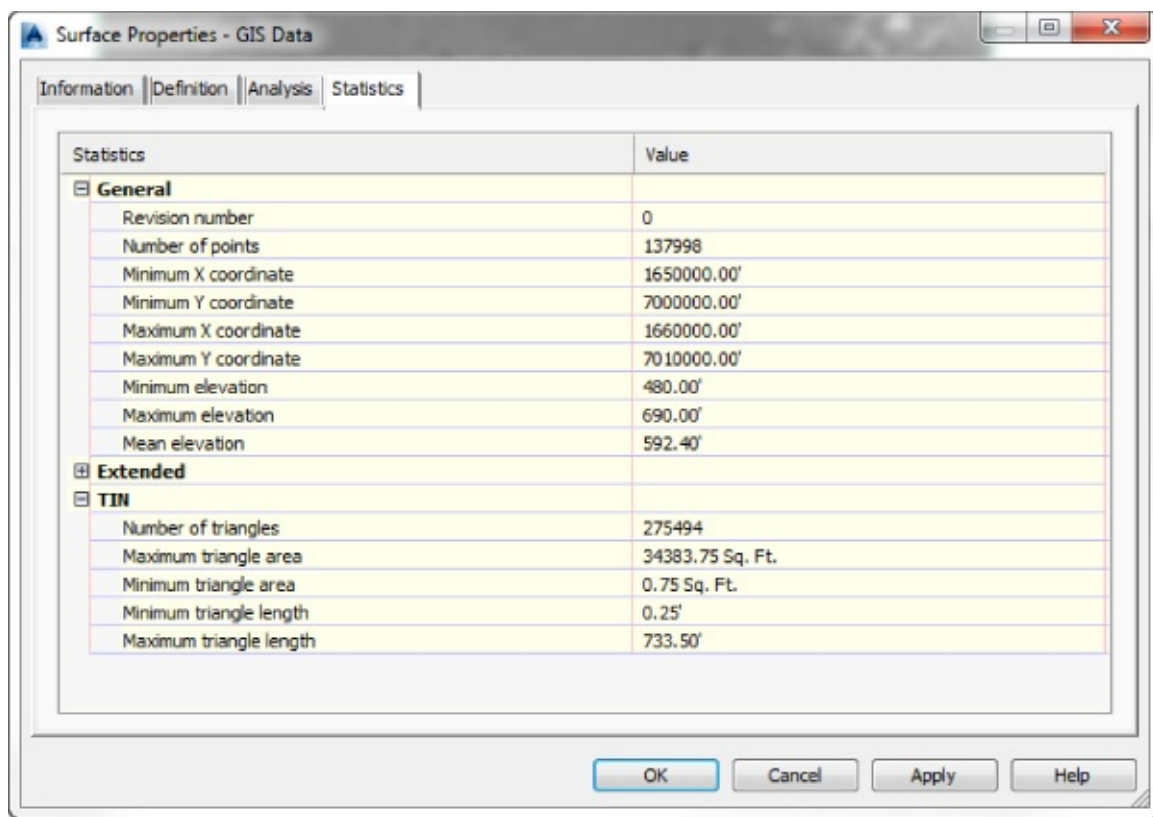


Figure 4.41 EG-GIS surface statistics after simplification

The creation of a surface is merely the starting point. Once you have a TIN to work with, you have a number of ways to view the data using analysis tools and varying styles.

Surface Analysis

Certification Objective


Once a surface is created, you can display information in a number of ways. The most common so far has been contours and triangles, but those are the basics. By using various styles, you can show a large amount of data with one single surface. Surface styles are discussed further in Chapter 19, “Object Styles.” While some of the styles are used for generating plans (such as contours), others lend themselves to analyzing the surface during creation.

For a surface object in plan view, Points, Triangles, Border, Major Contour, Minor Contour, User Contours, and Gridded are standard components and are controlled like any other object component. Directions, Elevations, Slopes, Slope Arrows, and Watershed components are unique in that their display is controlled elsewhere in the surface style. Note that the Layer, Color, and Linetype fields are grayed out for these components. Each of these components has its own special coloring scheme, which we'll look at later in the section “Comparing Surfaces.” In the following sections, you will explore the elevation and slope analysis styles.

Elevation Banding

Displaying surface information as bands of color is one of the most common display methods for engineers looking to make a high-impact view of the site. Elevations are a critical part of the site design process, and understanding how a site varies in terms of elevation is an important part of making the best design. Elevation analysis typically falls into two categories: showing bands of information on the basis of pure distribution of linear scales or displaying a lesser number of bands to show some critical

information about the site. In this first exercise, you'll use a standard style to illustrate elevation distribution along with a prebuilt color scheme that works well for presentations:

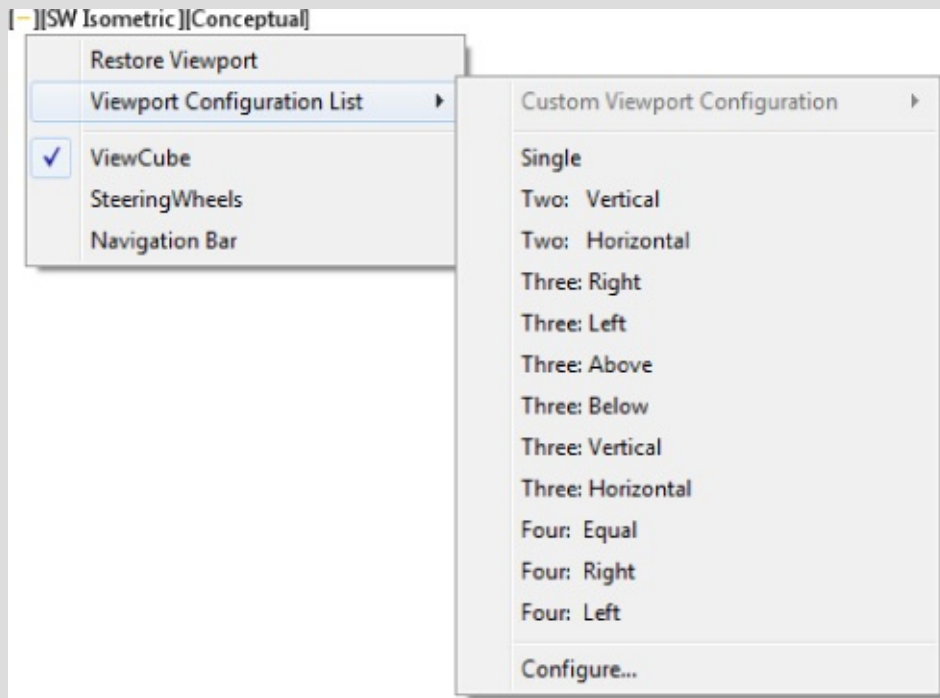
1. Open the 0412_SurfaceAnalysis.dwg file (or the 0412_SurfaceAnalysis_METRIC.dwg file).
2. Select the surface on your screen to activate the contextual tab.
3. From the Existing Surface contextual tab > Modify panel, choose the Surface Properties icon.
4. On the Information tab, change the Surface Style field to Elevation Banding (3D).
5. Switch to the Analysis tab for the Elevations analysis type.
6.  Set Create Ranges By to Number Of Ranges and set that value to 6. Then click the Run Analysis arrow in the middle of the dialog to populate the Range Details area.
7. Click OK to close the Surface Properties dialog.

Notice that only the border is currently showing because the surface is being shown in plan view.


[-][Top][2D Wireframe]

You may have noticed three pieces of text in the upper-left corner of your modelspace. If you click any of these viewport controls, you will find that they are drop-down lists that you can use to change what you are looking at.


The first set of bracketed text will either be [-] (denoting that one viewport is being displayed) or [+] (if two viewports are being displayed).



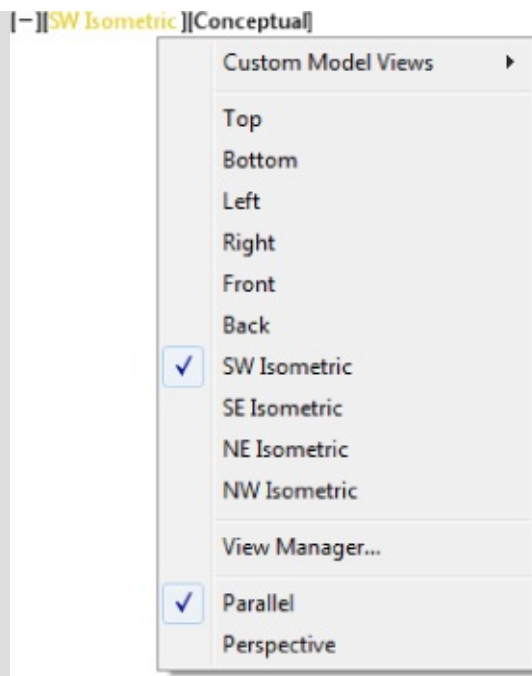The second set of bracketed text is the View Control and will list the current view within the brackets.



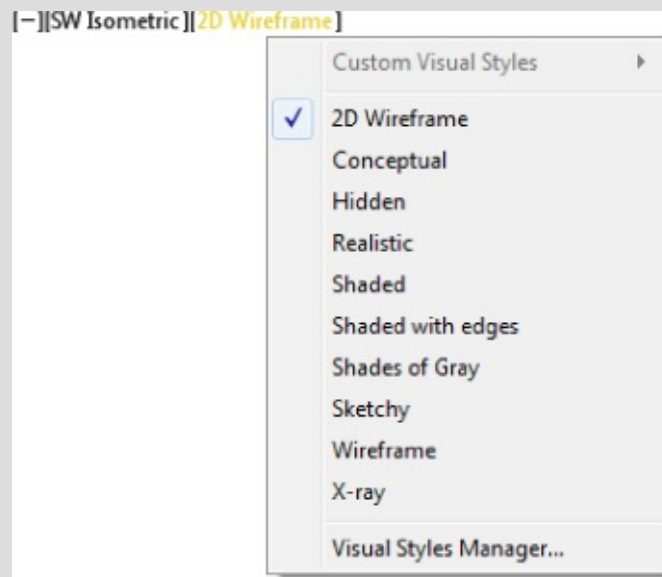The third set of bracketed text is the Visual Style Control and will list the current visual style within the brackets.



All of these commands can also be changed from the View tab. If Level Of Detail is currently active, an additional small icon will appear below this line of text.

These three pieces of text provide valuable information for easy reference while you work.

8. From the View Control, select SW Isometric.
9. Zoom in if necessary to get a better view of the surface.
10. From the Visual Style Control, select the Conceptual option to see a semi-rendered view that should look something like [Figure 4.42](#).


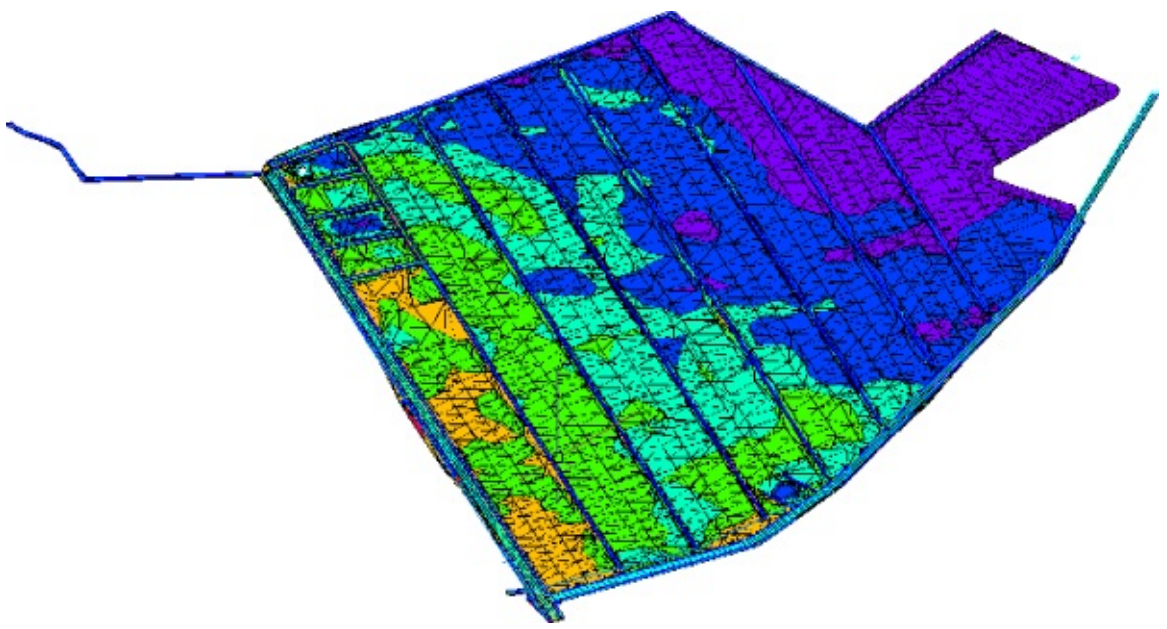


Figure 4.42 Conceptual view of the site with the Elevation Banding style

Save and keep the drawing open for the next portion of the exercise.

AutoCAD Visual Styles

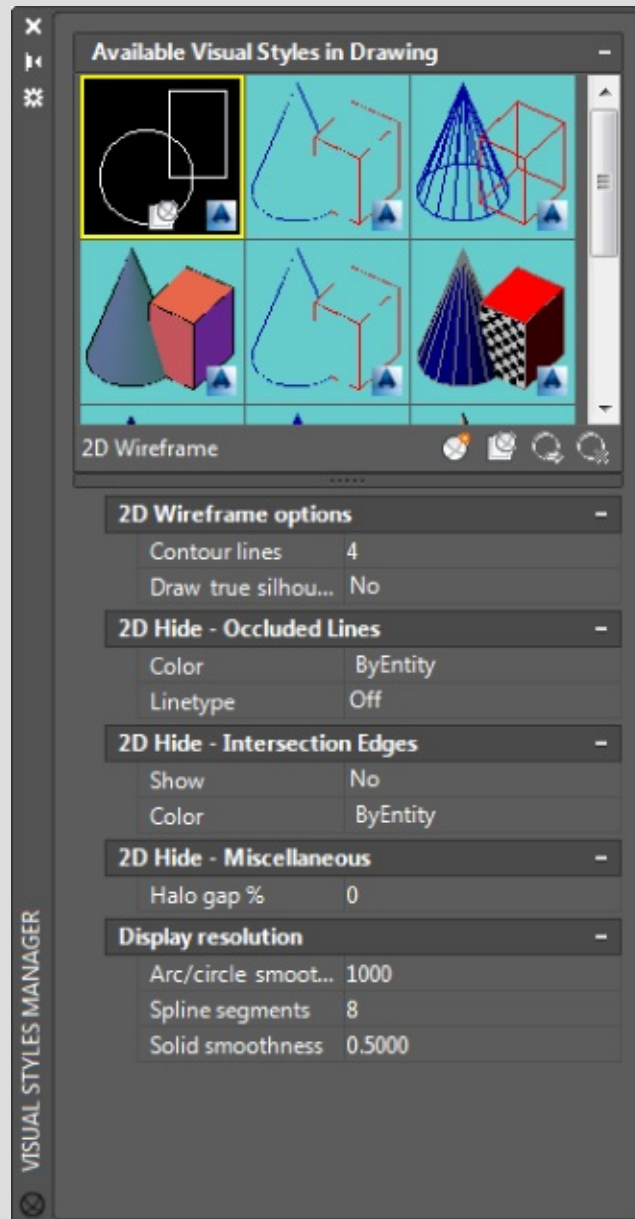When you see triangles on a surface in the Object Viewer, they are visible because of the view style and can be modified via the Visual Styles Manager. Turning the Edge mode off will leave you with a nicely gradated view of your site. You can edit the visual style by clicking the Visual Style Control at the upper left of your drawing screen. You can also access the Visual Styles Manager on the View tab > Visual Styles panel by clicking the small arrow in the lower-right corner of the panel. The Visual Styles Manager is shown here.



The Realistic visual style will allow you to see the render material applied to your surface—with some conditions. You must have triangles turned on in the Surface Style dialog, and you must have a render material specified in the Surface Properties dialog.

You'll use a 2D elevation to clearly analyze the lower elevations of the site. Next, you'll manually tweak the maximum elevation value to further understand how the site drains.

1. Click the View Control and select Top.
2. Click the Visual Style Control and select 2D Wireframe. Zoom extents if necessary.

13. Select the surface by clicking on the border. Right-click and choose the Surface Properties option. The Surface Properties dialog appears.
14. On the Information tab, change the Surface Style field to Elevation Banding (2D).
15. On the Analysis tab, change Number Of Ranges to 1 and click the Run Analysis button.
16. Change Maximum Elevation for ID 1 to 5 (or 1 for metric users), as shown in [Figure 4.43](#).

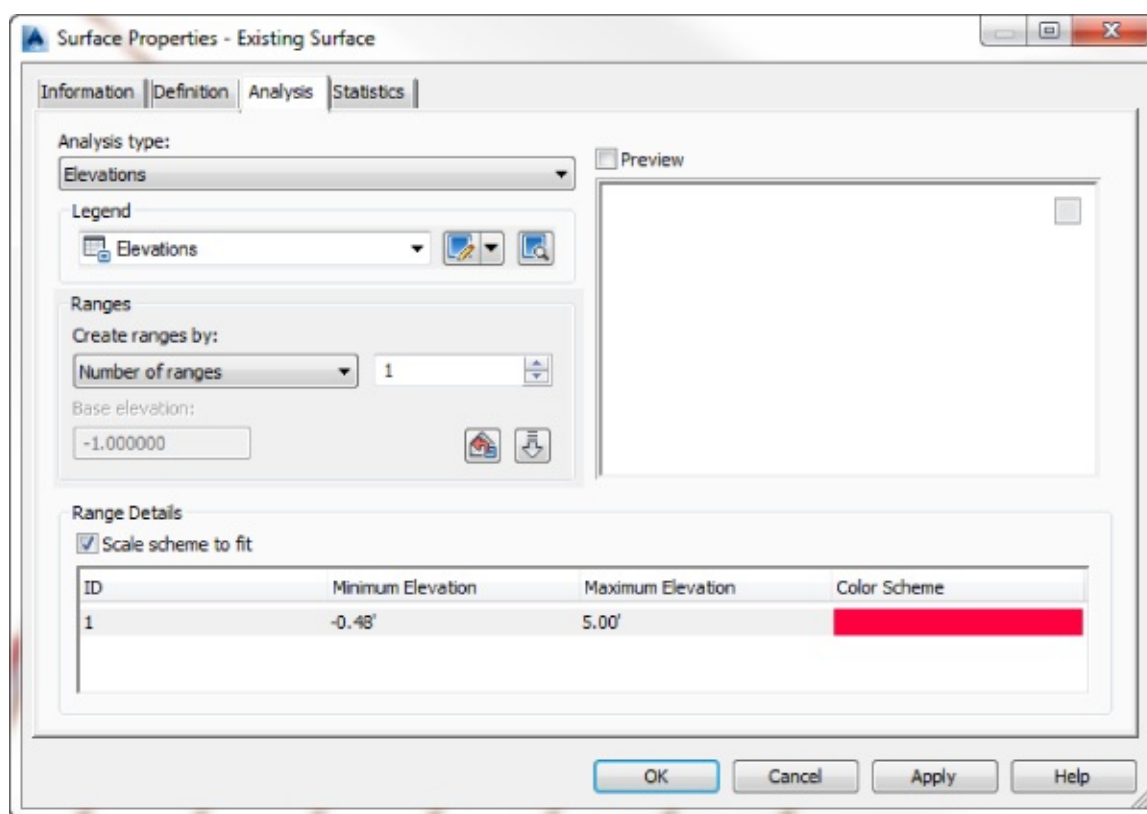


Figure 4.43 The Surface Properties dialog after manual editing


17. Click Apply to apply the settings in the Surface Properties dialog and the surface.
18. Drag the Surface Properties dialog to the side. Notice the red solid fill in the ditch areas indicating elevations equal to or less than the maximum elevation entered.
19. Back on the Analysis tab in the Surface Properties dialog, change the Maximum Elevation value to 6 (1.5 for metric users) and click Apply.
20. Review the drawing area for the expansion of the red fill indicating elevations equal to or less than 6 (or 1.5 for metric users).
21. Repeat steps 19 and 20 for a maximum elevation of 7 (or 2 for metric users).
22. Click OK to close the Surface Properties dialog.
23. Save the drawing for use in the next exercise.

Understanding surfaces from a vertical direction is helpful, but many times the slopes are just as important. In the next section, you'll take a look at using the slope analysis tools in Civil 3D.

Slopes and Slope Arrows

Beyond the bands of color that show elevation differences in your models, you also have tools that display slope information about your surfaces. This analysis can be useful in checking for drainage

concerns, meeting accessibility requirements, or adhering to zoning constraints. Slope is typically shown as areas of color similar to the elevation banding or as colored arrows that indicate the downhill direction and slope. In this exercise, you'll look at the existing surface and run the two slope analysis tools:

1. Continue working in the 0412_SurfaceAnalysis.dwg file (or the 0412_SurfaceAnalysis_METRIC.dwg file).
2. Select the surface on your screen to activate the contextual tab.
3. From the Existing Surface contextual tab ➤ Modify panel, choose the Surface Properties icon.
4. On the Information tab, change the Surface Style field to Slope Banding (2D).
5. Switch to the Analysis tab of the Surface Properties dialog.
6. Choose Slopes from the Analysis Type drop-down list.
7.  Set the Number field in the Ranges area to **6** and click the Run Analysis arrow in the middle of the dialog to populate the Range Details area.

The Range Details area will populate. You could change the minimum and maximum values as you did in the previous exercise, but this time you'll keep the defaults.

8. Click OK to close the dialog.

The colors are nice to look at, but they don't mean much, and slopes don't have any inherent information that can be portrayed by color association. To make more sense of this analysis, you'll add a legend table.

9. Select the surface again, and on the Existing Surface contextual tab ➤ Labels & Tables panel, choose Add Legend.
10. At the Enter table type [Directions Elevations Slopes slopeArrows Contours Usercontours Watersheds]: prompt, enter **S** ↵ to select Slopes.
11. At the Behavior [Dynamic Static]: <Dynamic> prompt, press ↵ again to accept the default value of a Dynamic legend.
12. At the Select upper left corner: prompt, pick a point on screen to draw the legend, which is shown in [Figure 4.44](#).







<i>Slopes Table</i>				
<i>Number</i>	<i>Minimum Slope</i>	<i>Maximum Slope</i>	<i>Area</i>	<i>Color</i>
<i>1</i>	<i>0.00%</i>	<i>0.37%</i>	<i>1822051.41</i>	
<i>2</i>	<i>0.37%</i>	<i>0.84%</i>	<i>1667289.03</i>	
<i>3</i>	<i>0.84%</i>	<i>3.07%</i>	<i>776911.42</i>	
<i>4</i>	<i>3.07%</i>	<i>20.09%</i>	<i>286508.15</i>	
<i>5</i>	<i>20.09%</i>	<i>54.91%</i>	<i>104714.53</i>	
<i>6</i>	<i>54.91%</i>	<i>1497.70%</i>	<i>106016.32</i>	


Figure 4.44 The slopes legend table

By including a legend, you can make sense of the information presented in this view. Because you know what the slopes are, you can also see which way they go.

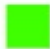3. Select the surface, and on the Existing Surface contextual tab ➤ Modify panel, choose the Surface Properties icon.

The Surface Properties dialog appears.

4. On the Information tab, change the Surface Style field to Slope Arrows.
5. Switch to the Analysis tab of the Surface Properties dialog.
6. Choose Slope Arrows from the Analysis Type drop-down list.

7.  Verify that the Number field in the Ranges area is set to **6**, and click the Run Analysis arrow in the middle of the dialog to populate the Range Details area.

8. Click OK to close the dialog.

The benefit of arrows is in looking for “birdbath” areas that will collect water. These arrows can also verify that inlets are in the right location, as shown in [Figure 4.45](#). Look for arrows pointing to the proposed drainage locations and you'll have a simple design-verification tool.

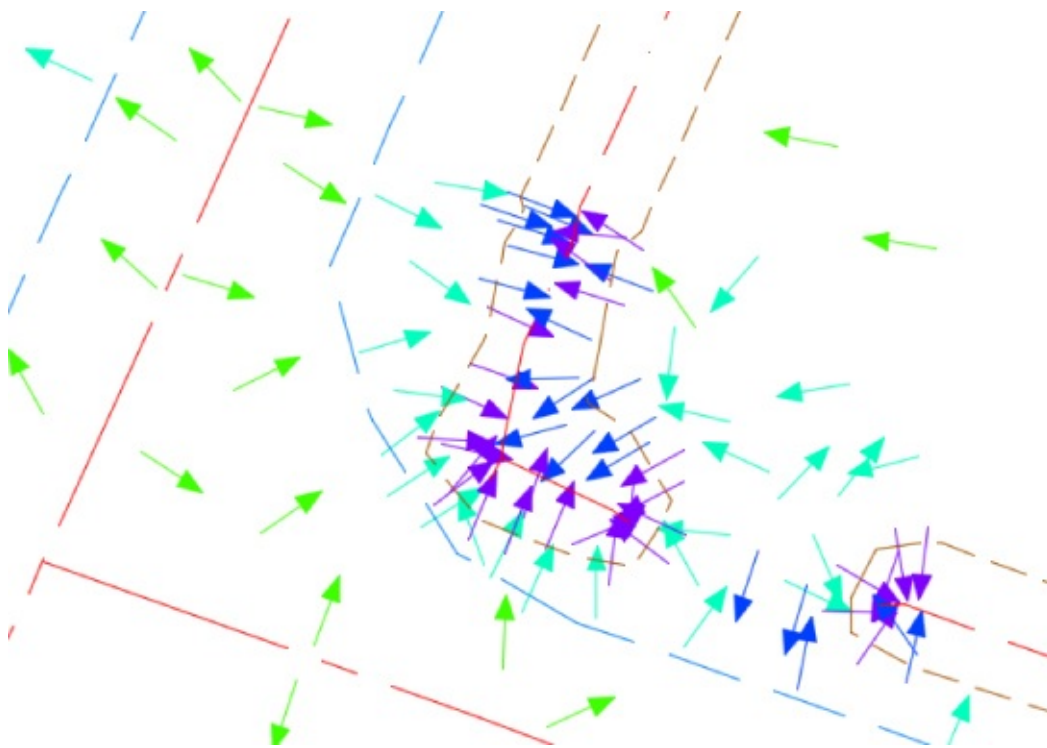


Figure 4.45 Slope arrows pointing to a proposed inlet location

When this exercise is complete, you may close the drawing. A finished copy of this drawing is available from the book's web page with the filename `0412_SurfaceAnalysis_FINISHED.dwg` or `0412_Surface Analysis_METRIC_FINISHED.dwg`.

With these simple analysis tools, you can show a client the areas of their site that meet their constraints. Visually compelling and simple to produce, this is the kind of information that a 3D model makes available. Beyond the basic information that can be represented in a single surface, Civil 3D also contains a number of tools for comparing surfaces. You'll compare this existing ground surface to a proposed grading plan in the next section.

Visibility Checker

The Zone Of Visual Influence tool allows you to explore what-if scenarios. In this example, a 40' (12 m) tower has been proposed for the site. A concerned neighbor wants to make sure that it won't obstruct their scenic view. You want to check it from the proposed surface:

1. Open `0413_VisibilityCheck.dwg` or `0413_VisibilityCheck_METRIC.dwg`.
2. In Prospector, expand the Surfaces branch, right-click the FG surface, and choose the Select option.
3. On the TIN Surface contextual tab > Analyze panel, choose Visibility Check > Zone Of Visual Influence.
4. At the Specify location of object: prompt, use the Intersection Osnap to select the center of the proposed tower located on the southern portion of the site (denoted by a large white square with an X inside).
5. At the Specify height of object: prompt, enter **40** ↵ to set the tower height to 40' (metric users, enter **12** ↵).
6. At the Specify the radius of vision extent: prompt, pan to and select the endpoint at the upper-right corner of the cyan-colored house located at the northeastern corner of the site.

Save the drawing and keep it open for the next portion of the exercise.

The drawing now has bands of color:

7.

- Green near the tower location indicates that the object is completely visible.
- Yellow indicates that the object is partially visible.
- Red indicates that the object is not visible.

So in our example, the homeowner on the upper right will be happy to know that the proposed 40' tower will not appear in their view.

In the next portion of this exercise, you will use the Point To Point tool.

8. Using the same drawing, zoom to the intersection of Syrah Way and Cabernet Court, where you will see a car driving on the right-hand side of the road.

We want to check the sight distance.

9. If it is not already selected, select the FG surface.

10. On the TIN Surface contextual tab > Analyze panel, choose Visibility Check > Point To Point.

11. At the Specify height of eye: prompt, enter **3.5 ↵** (metric users enter **1 ↵**).

This sets the height of the eye of a driver sitting in a typical car.

12. At the Specify location of eye: prompt, click where the driver would normally be seated in the vehicle.

13. At the Specify height of target: prompt, enter **6 ↵** (metric users enter **1.8 ↵**).

A rubber-banding sightline ray appears.

14. Click along the path where oncoming cars would be seen.

A sightline arrow is drawn on the screen:

15.

- If the arrow is green, it means that the view is unobstructed and the command line will tell you the distance from the eye.
- If any portion of the arrow is red, it indicates that the view is obstructed and the command line will tell you the distance at which the obstruction occurs.

When this exercise is complete, you may close the drawing. A finished copy of this drawing is available from the book's web page with the filename 0413_SurfaceVisibility_FINISHED.dwg or 0413_SurfaceVisibility_METRIC_FINISHED.dwg.

Unfortunately, these visual tools are not dynamic; if you change the surface, you will need to rerun the visual tools.

Comparing Surfaces

Civil 3D contains a number of surface analysis tools designed to calculate earthwork quantities, and you'll look at them in the following sections. First, a simple comparison provides feedback about the

volumetric difference, and then a more detailed approach enables you to perform an analysis on this difference.

For years, civil engineers have performed earthwork using a section methodology. Sections were taken at some interval, and a plot was made of both the original surface and the proposed surface. Comparing adjacent sections and multiplying by the distance between them yields an end-area method of volumes that is generally considered acceptable. The main problem with this methodology is that it ignores the surfaces in the areas between sections. These areas could include areas of major change, introducing some level of error. In spite of this limitation, this method worked well with hand calculations, trading some accuracy for ease and speed.

With the advent of full-surface modeling, more precise methods became available. By analyzing both the existing and proposed surfaces, a volume calculation can be performed. Keep in mind that the quality of the result is highly dependent on the quality of the input surfaces. At every TIN vertex in both surfaces, a distance is measured vertically to the other surface. These delta amounts can then be used to create a third dynamic surface called a volume surface, which represents the difference between the two original surfaces.

TIN Volume Surface

Using the volume utility for initial design checking is helpful, but quite often contractors and other outside users want to see more information about the grading and earthwork for their own uses. This requirement typically falls into two categories: a cut-fill analysis showing colors or contours or a grid of cut-fill tick marks.

Color cut-fill maps are helpful when reviewing your site for the locations of movement. Some sites have areas of better material or can have areas where the cost of cut is prohibitive (such as rock). In this exercise, you'll use two of the surface analysis methods to look at the areas for cut-fill on your site:

1. Open the 0414_VolumeSurface.dwg or the 0414_VolumeSurface_METRIC.dwg file.



2. From the Analyze tab > Volumes And Materials panel, choose the Volumes Dashboard tool to display the Volumes Dashboard in Panorama.



3. Click the Create New Volume Surface button to display the Create Surface dialog.

Notice that Type is already set to TIN Volume Surface. You also have the option to select Grid Volume Surface.

4. Change the name to **Pond Volume** and set the style to Elevation Banding (2D).
5. Click the <Base Surface> field next to Base Surface to display the ellipsis button; once it's visible, click the ellipsis to select the Existing Surface and then click OK.
6. Click the <Comparison Surface> next to Comparison Surface to display the ellipsis button; once it's visible, click the ellipsis to select the Pond surface and click OK.

The Create Surface dialog should now look similar to [Figure 4.46](#).

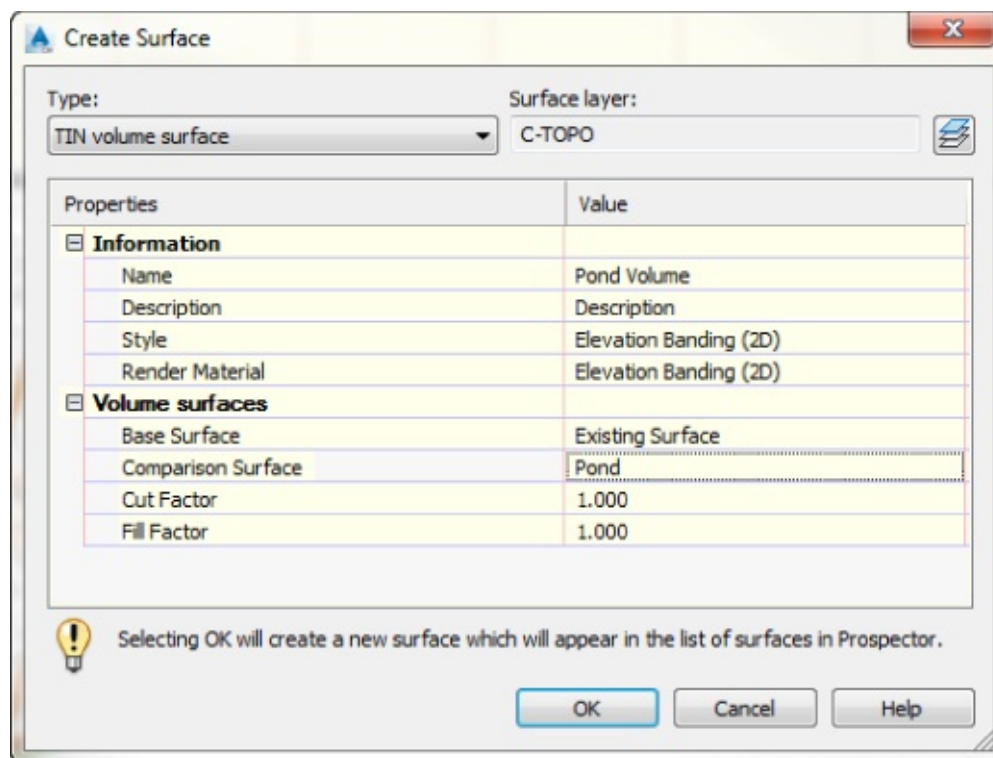


Figure 4.46 Creating a volume surface

7. Click OK to accept the settings in the Create Surface dialog.

Civil 3D will calculate the volume ([Figure 4.47](#)).

Name	Mid-Ordinate	Cut Fact.	Fill Fact.	Style	2d Area(Sq. Ft.)	Cut(adjusted)(Cu. Yds.)	Fill(adjusted)(Cu. Yds.)	Net(adjusted)(Cu. Yds.)	Net Graph
✓ Pond Volume		1.000	1.000	Elevation B...	166488.52	12600.62	211.59	12389.03 <Cut>	

Figure 4.47 Composite volume calculated

Note that you can scroll right and left in Panorama to display additional information, including the ability to apply a cut or fill factor by typing directly into the cells for these values.

This new volume surface appears in Prospector's Surfaces collection, but notice that the icon is slightly different, showing two surfaces stacked on each other.

8. **Pond Volume** Leave Panorama open, expand Surfaces, right-click Pond Volume, and select Surface Properties.

9. On the Analysis tab, change Number Of Ranges to **2** and click the Run Analysis button.

10. Change the Maximum Elevation to **0** for ID 1 and the Minimum Elevation to **0** for ID 2.

According to the color scheme, cut will now be displayed in red and fill will be displayed as purple.

11. Click OK to close the Surface Properties dialog.

12. In Prospector, expand the Surfaces > Pond > Definition branches.

13. Right-click Edits and select the Raise/Lower Surface option.

14. Enter **-0.25** at the command line to drop the pond 3" (metric users enter **-0.075**).

Notice that a yellow exclamation point status flag has appeared next to the volume surface in Panorama as well as in Prospector. Panorama no longer lists the volumes and instead states “Out of date.”

15. Right-click the Pond Volume surface in Panorama and select the Rebuild option.
16. Right-click the Pond Volume surface again and select Surface Properties.
17. On the Analysis tab, click the Run Analysis button to rerun the analysis.

Notice the minimum and maximum elevations update.

18. Change Maximum Elevation for ID 1 and Minimum Elevation for ID 2 to **0**, and click OK to update the color mapping.
19. In Prospector under the Definition branch of the Pond surface, click Edits, right-click the Raise/Lower edit in the preview area, and select Delete.
20. A dialog will appear warning you that the selected definition item will be permanently removed from the surface. Click OK.
21. Return to Panorama, right-click the Pond Volume surface, and select Rebuild All to return the original volume calculation.
22. Close Panorama when complete.
23. In Prospector, right-click Pond Volume in the Surfaces branch and select the Surface Properties option.

The Surface Properties dialog appears.

24. In the Surface Properties dialog, switch to the Statistics tab and expand the Volume branch.

The value shown for Net Volume (Unadjusted) is the same as that shown in Panorama in the first part of this exercise.

25. In the Surface Properties dialog, switch to the Analysis tab for the Elevations analysis type.
26. Verify that Create Ranges By is set to Number Of Ranges and that the value is set to **3**; then click the Run Analysis button to populate the Range Of Details area.
27. Change Maximum Elevation for ID 2 and Minimum Elevation for ID 3 to **0.25** (or **0.08** for metric users).
28. Change Maximum Elevation for ID 1 and Minimum Elevation for ID 2 to **-0.25** (or **-0.08** for metric users).
29. Modify your color scheme.

The recommended colors are red, yellow, and green, where red indicates the worst-case cut, green represents the worst-case fill, and yellow represents a balance.

[Figure 4.48](#) shows the completed elevation analysis settings.

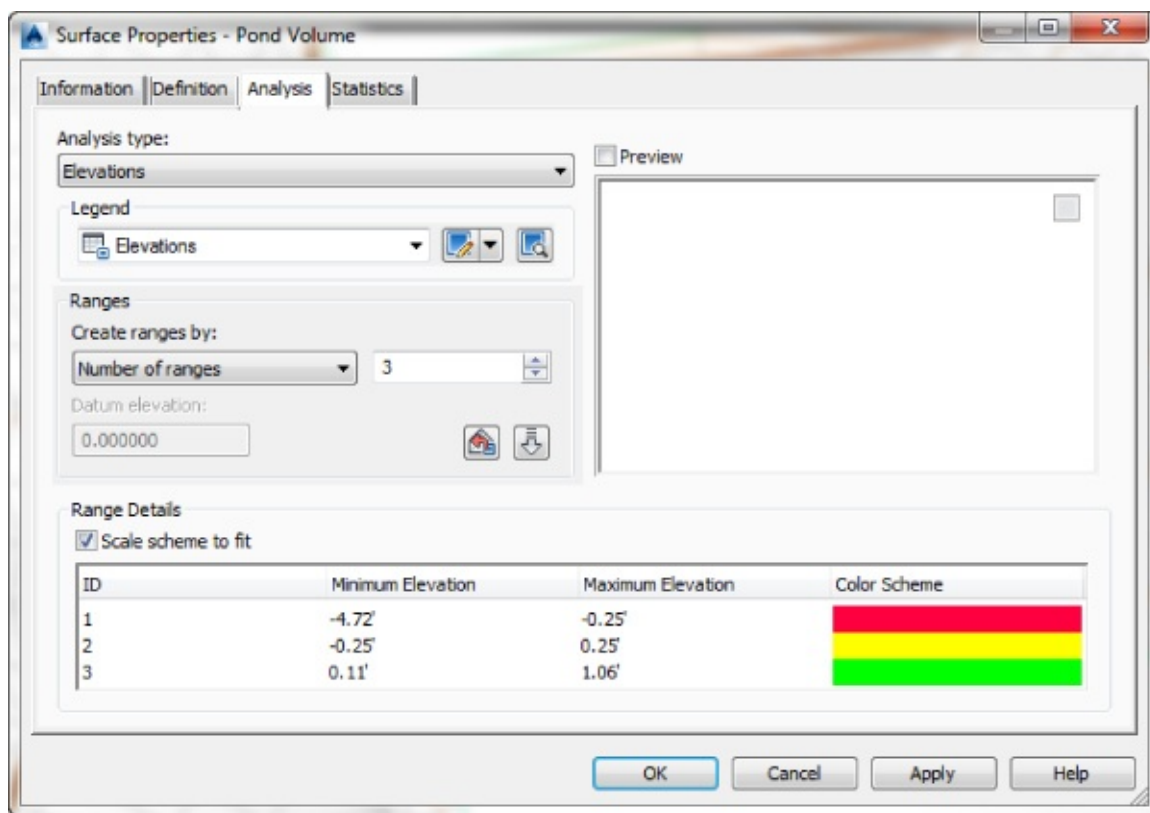


Figure 4.48 Elevation analysis settings for earthworks

30. Click OK to close the Surface Properties dialog.

Save the drawing and keep it open for the next portion of the exercise.

The volume surface now indicates areas of cut, areas of fill, and areas that are nearly balanced, similar to [Figure 4.49](#).

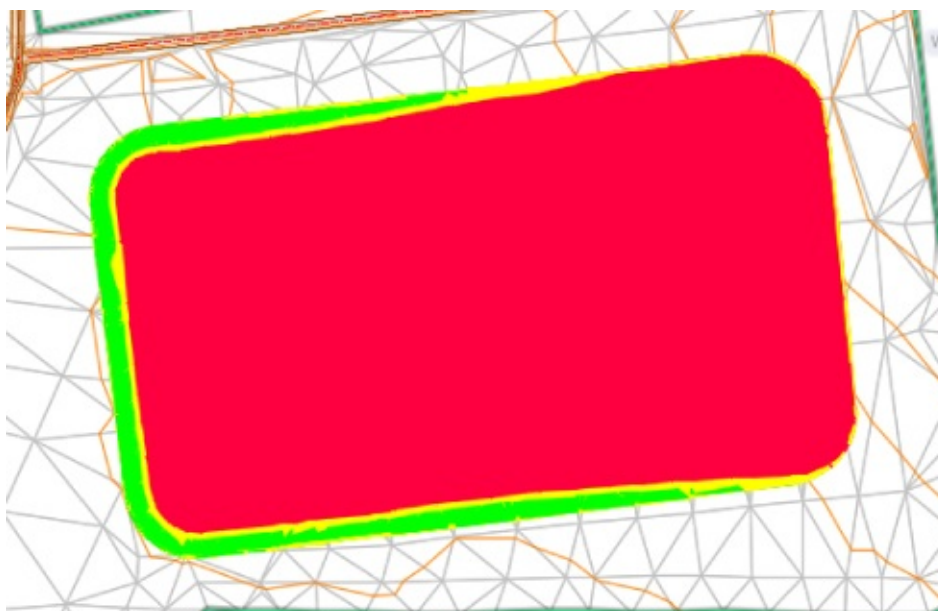



Figure 4.49 Completed elevation analysis


To show where large amounts of cut or fill could incur additional cost (such as compaction or excavation protection), you would simply modify the analysis range as required.

The Elevation Banding surface is great for onscreen analysis, but the color fills are too dense for most plotting purposes and can slow down the performance of the drawing. In the next steps, you use the Contour Analysis tool to prepare cut-fill contours in these same colors.

31. In Prospector, right-click Pond Volume in the Surfaces branch and select the Surface Properties option to display the Surface Properties dialog again.
32. On the Analysis tab, choose Contours from the Analysis Type drop-down list.
33. Verify that the Number field in the Ranges area is set to **3** and click the Run Analysis arrow in the middle of the dialog to populate the Range Details area.
34. Change the ranges to match those you entered in the previous portion of the exercise (as shown in [Figure 4.48](#)).

35.  In the Major and Minor Contour columns, click the small button to the far right of each to display the AutoCAD Select Color dialog, and set a color for each ID.

Typical contour colors are as follows:

36.
 - Shades of red for cut
 - A yellow for the balance line
 - Shades of green for fill
37. Switch to the Information tab on the Surface Properties dialog, and change the Surface Style to Contours 1' and 5' (Design) or Contours 0.5m and 2m (Design).
38.  Click the down arrow next to the Style field and select the Copy Current Selection option.

The Surface Style Editor appears.

39. On the Information tab, change the Name field to **Contours 0.25' and 1.25' (Earthworks)** or **Contours 0.15m and 0.7m (Earthworks)**.
40. On the Contours tab, expand the Contour Ranges branch.
41. Change the value of the Use Color Scheme property to True.

It's okay to ignore the range values here because you already set them in the surface properties.
42. Expand the Contour Intervals branch and change the Minor Interval to **0.25** (or **0.15** for metric users). The Major Interval will automatically update to 5× the Minor Interval value.
43. Click OK to close the Surface Style Editor and click OK again to close the Surface Properties dialog.

When this exercise is complete, you may close the drawing. A finished copy of this drawing is available from the book's web page with the filename 0414_VolumeSurface_FINISHED.dwg or 0414_VolumeSurface_METRIC_FINISHED.dwg.

The volume surface can now be analyzed on a lot-by-lot basis or labeled using the surface-labeling functions to show the depths of cut and fill, which you'll look at in the next sections.

Labeling the Surface



Once the three-dimensional surface model has been created, it is time to communicate the model's information in various formats. This includes labeling contours, creating legends for the analysis

you've created, adding spot labels, or labeling the slope. These exercises work through these main labeling requirements and building styles for each.

Contour Labeling

The most common requirement is to place labels on surface-generated contours. In Land Desktop, this was one of the last steps because a change to a surface required erasing and replacing all the labels. Once labels have been placed, their styles can be modified.

Contour labels in Civil 3D are created by special lines that understand their relationship with the surface. Everywhere one of these lines crosses a contour line, a label is placed. This label's appearance is based on the style applied and can be a major, minor, or user-defined contour label. Each label can have styles selected independently, so using some AutoCAD selection techniques can be crucial to maintaining uniformity across a surface. In this exercise, you'll add labels to your surface and explore the interaction of contour label lines and the labels themselves:

1. Open the 0415_SurfaceLabeling.dwg or 0415_SurfaceLabeling_METRIC.dwg file.
2. Select the EG surface in the drawing to display the TIN Surface contextual tab.
3. From the TIN Surface contextual tab > Labels & Tables panel, choose Add Labels > Contour – Single.
4. Pick any spot on a major contour to add a label.
5. Press **↵** when complete and press Esc to deselect the surface.
6. From the Annotate tab > Labels & Tables panel, choose Add Labels > Surface > Contour – Multiple.
7. Pick a point to the west of the site and then a second point to the south of the site, crossing a number of contours in the process.
8. Press **↵** to end the picking.
9. From the Annotate tab > Labels & Tables panel, click the Add Labels > Add Surface Labels to display the Add Labels dialog.
10. Verify that Feature is set to Surface and Label Type to Contour – Multiple At Interval.
11. Click the Add button.
12. Pick a point to the west of the site and then a second point to the north of the site.
13. At the Interval along contour <100.00> prompt, enter **200** (for metric **60**) at the command line for an interval value.


Save the drawing and keep it open for the next portion of the exercise.

You've now labeled your site in three ways to get contour labels in a number of different locations. You will need additional labels in the northeast and southwest to complete the labeling because you did not cross these contour objects with your contour label line.

The contour label line is a handy tool. It does not plot, but it does have grips you can use to stretch it over other contours, which produces additional labels. You can also stretch it for the purpose of relocating labels. You can also copy the label line to other locations. Using the Properties dialog, you can turn it off, or you can turn it off by default on the Settings tab > Surface branch in Feature Settings. However, if a contour label is selected, the grips will reveal, and you can still use them to manipulate the position of the label.

Next, you'll fill in the labeling to the northeast.

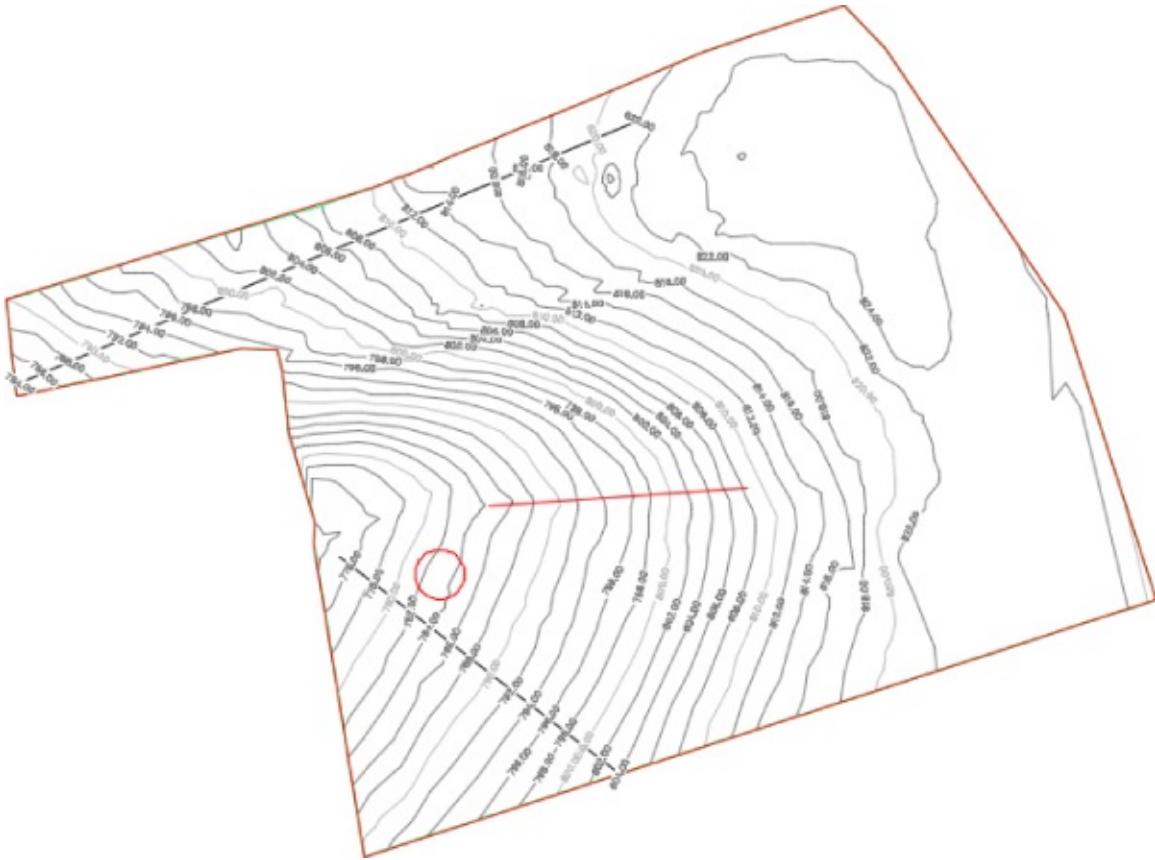14. Zoom to the northeast portion of the site, and notice that some of the contours are labeled only along the boundary or not at all, as shown in [Figure 4.50](#).



[Figure 4.50](#) Contour labels applied

15. Zoom in to any contour label placed using the Contour – Multiple At Interval button, and pick the text. Three grips will appear. The original contour label lines are quite apparent, but in reality, every label has a label line beneath it.
16. Grab the northernmost grip and drag across an adjacent contour northeast of the original label, as shown in [Figure 4.51](#).

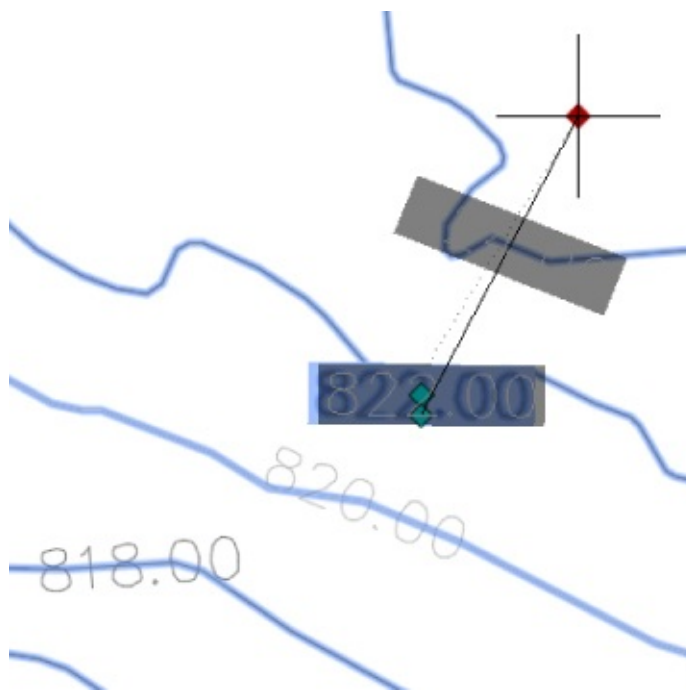


Figure 4.51 Grip-editing a contour label line

New labels will appear everywhere your dragged line now crosses a contour.

17. Drop the grip somewhere to create labels as desired. Be sure to press Esc a few times when you have finished labeling the contours to end the command.

Save the drawing and keep it open for the next portion of the exercise.

By using the created label lines instead of adding new ones, you'll find it easier to manage the layout of your labels.

Additional Surface Label Types

With Civil 3D's surface modeling, spot labels are dynamic and react to changes in the underlying surface. By using surface labels instead of points or text callouts, you can generate a grading plan early on in the design process and begin the process of creating sheets. In the following sections, you'll label surface slopes in a couple of ways, create a single spot label for critical information, and conclude by creating a grid of labels similar to the labels in many estimation software packages.

Labeling Slopes

Beyond the specific grade at any single point, most grading plans use slope labels to indicate some level of trend across a site or drainage area. Civil 3D can generate the following two slope labels:

One-Point Slope Labels One-point slope labels indicate the slope of an underlying surface triangle. These work well when the surface has large triangles, typically in pad or mass grading areas.

Two-Point Slope Labels Two-point slope labels indicate the slope trend on the basis of two points selected and their locations on the surface. A two-point slope label works by dividing the surface elevation distance between the points by the planar distance between the pick points. This works well in existing ground surface models to indicate a general slope direction but can be deceiving in that it does not consider the terrain between the points.

In this next exercise, you'll apply both types of slope labels:

1. Continue working in 0415_SurfaceLabeling.dwg or 0415_Surface Labeling_METRIC.dwg. It is not necessary to have completed the previous exercise before proceeding.
2. Select the surface to display the TIN Surface contextual tab.
3. From the TIN Surface contextual tab > Labels & Tables panel, choose Add Labels > Slope. (Alternatively, you can go to the Annotate tab > Labels & Tables panel and choose Add Labels > Surface > Slope.)
4. At the Create Slope Labels or [One-point Two-point]: <One-point> prompt, press \downarrow to select the default one-point label style.
5. Zoom in on the circle drawn on the western portion of the site and use a Center Osnap to place a label at its center, similar to that shown in [Figure 4.52](#).

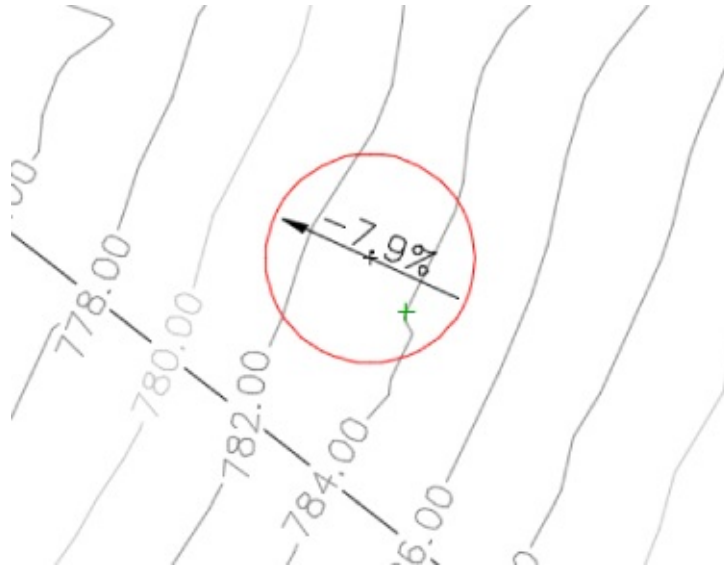


Figure 4.52 A one-point slope label

6. Press Esc or \downarrow to exit the command.
7. From the TIN Surface contextual tab > Labels & Tables panel, choose Add Labels > Slope.
8. At the Create Slope Labels or [One-point Two-point]: <One-point> prompt, enter T \downarrow to switch to a two-point label style.
9. Pan to the central portion of the site, and use an Endpoint Osnap to pick the left end of the line.
10. Use an Endpoint Osnap to select the right end of the line to complete the label.
11. Press Esc or \downarrow to exit the command and view the label, shown in [Figure 4.53](#).



Figure 4.53 A two-point slope label

This second label indicates the average slope of the property. By using a two-point label, you get a better understanding of the trend as opposed to a specific point.

When this exercise is complete, you may close the drawing. A finished copy of this drawing is available

from the book's web page with the filename 0415_SurfaceLabeling_FINISHED.dwg or 0415_SurfaceLabeling_METRIC_FINISHED.dwg.

Surface Grid Labels

Multiple labels placed in a grid pattern on the plan can be a huge help for grading contractors and estimators. In this exercise, you'll use the volume surface you generated earlier in this chapter to create a set of surface labels on a volume surface that reflect depth of cut and fill:

1. Open the 0416_GridSurfaceLabels.dwg file (or the 0416_GridSurfaceLabels_METRIC.dwg file).
2. From the Annotate tab > Labels & Tables panel, choose Add Labels > Surface > Spot Elevations On Grid.
3. At the Select a surface <or press enter key to select from list>: prompt, select one of the surface triangles and click OK.
4. At the Specify a grid basepoint: prompt, pick a point southwest of the Pond Volume surface to set a base point for the grid.
5. At the Grid rotation: prompt, pick a point to the right that defines a line relatively parallel to the surface.
6. At the Grid X spacing: prompt, enter **25** ↵ (7 ↵ for metric users).
7. At the Grid Y spacing: prompt, enter **25** ↵ (7 ↵ for metric users).
8. At the Specify the upper right location for the grid: prompt, pick a point northeast of the Pond Volume surface to set the area for the labels.
9. Verify that the preview window encompasses the Pond Volume surface, and press ↵ at the command line to continue.

Back at step 4, a triangle edge from Existing Surface was selected. Therefore, the resulting labels are displaying elevations of this surface instead of depth labels of the Pond Volume surface. As a new feature of Civil 3D 2015, you can now change the object a label is referencing.

10. Click a label, right-click, and choose Select Similar.
11. Type **PR** ↵ to open the Properties palette.
12. On the Properties palette under the second General section, click in the value field next to Surface to change the surface being referenced by the labels to Pond Volume surface.
13. Press Esc to deselect the elevation labels.

Your drawing should look similar to [Figure 4.54](#). Incidentally, any labels placed over Existing Surface that do not coincide with Pond Volume will appear as question marks. These can be deleted.

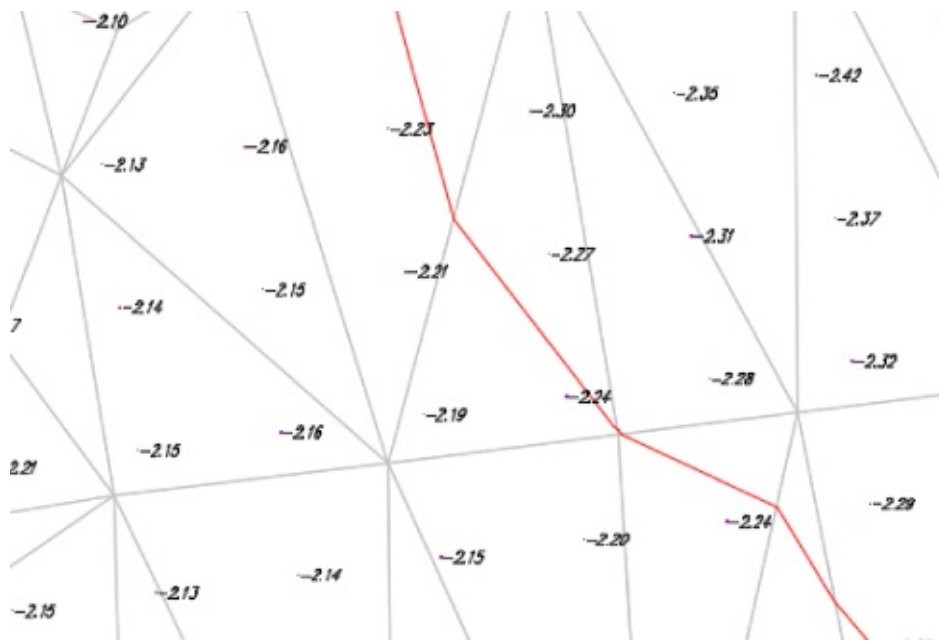


Figure 4.54 Volume surface with grid labels

When this exercise is complete, you may close the drawing. A finished copy of this drawing is available from the book's web page with the filename 0416_SurfaceGridLabels_FINISHED.dwg or 0416_SurfaceGridLabels_METRIC_FINISHED.dwg.

Point Cloud Surfaces

A point cloud is a huge bunch of 3D points, usually collected by laser scanner or *Light Detection and Ranging (LiDAR)*. In a geographic information system (GIS), point clouds are often used as a source for a *Digital Elevation Model (DEM)*. The technology has gotten less expensive and more accurate over the last few years, allowing LiDAR to quickly take over from traditional methods of collecting photogrammetry data.

Point clouds in many formats can be imported to Civil 3D. The most common format is the Log ASCII Standard (LAS) file. This binary format is a public format and at minimum contains x, y, and z data. LAS format can also include color, classification, and other information. For more information on the LAS standard, visit www.asprs.org.

Civil 3D can import a point cloud and use it in several ways. For instance, a laser scan of a bridge can be imported and placed for reference when you're designing a road through an existing abutment. In the example that follows, you will convert LiDAR data into a Civil 3D surface. It is important to note that point clouds often contain millions of points and require a beefy computer (and a little patience on your part) to process.

Importing a Point Cloud

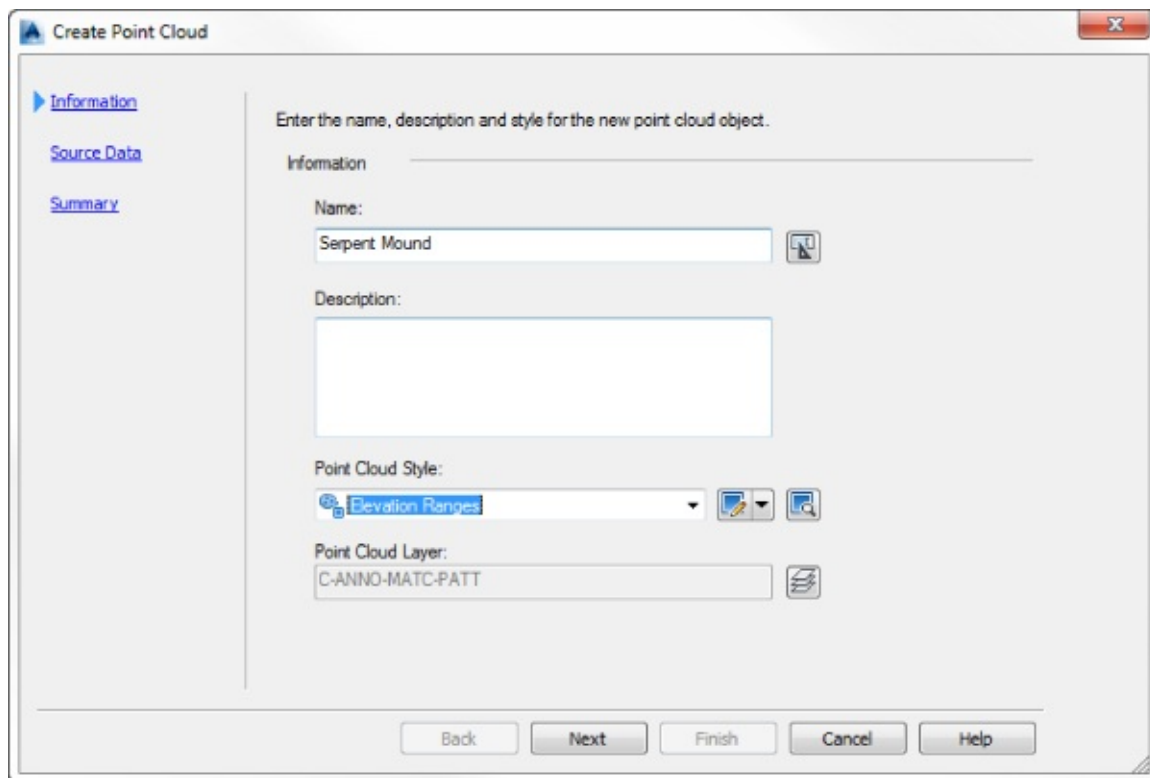
A typical point cloud contains millions of points. These large files are kept external to Civil 3D in a point cloud database. After the LAS has been imported, the data is passed to three files: PRMD, IATI, and ISD. The ISD file contains the points themselves and is the only file needed by CAD if the point cloud would need to be re-created or used in base AutoCAD. By default these files get created in the same directory as the DWG but the location can be changed when importing the information.

If the point cloud you are working with contains coordinate system information (as all the examples in this

book do), the software will automatically convert the point cloud to the units and coordinate system of the drawing. For the exercises in this chapter, it does not matter whether you choose the Metric or the Imperial template.

Civil 3D may take a long time to process these files, and you must ensure that you have sufficient disk space to store them, as you will find in the following exercise. It is also a good idea to close the software and then reopen it to help clear some memory before starting memory-intensive tasks such as working with point clouds. The following exercise will show you how to import and work with a point cloud:

1. Start a new file by using the default Civil 3D template of your choice. Save the file before proceeding as **0417_PointCloud.dwg**.
2. Imperial users, set the coordinate system to UTM with NAD83 datum, Zone 17, US Foot; Central Meridian 81d W (UTM83-17F). Metric users, set the coordinate system to UTM with NAD83 datum, Zone 17, Meter; Central Meridian 81d W (UTM83-17).
3. In Prospector, right-click the Point Clouds branch and select the Create Point Cloud option to display the Create Point Cloud Wizard, shown in [Figure 4.55](#).



[Figure 4.55](#) The Create Point Cloud – Information page

4. Set the name of the point cloud to **Serpent Mound**.
5. Set Point Cloud Style to Elevation Ranges, as shown in [Figure 4.55](#), and click the Next button. The Source Data page is displayed, as shown in [Figure 4.56](#).

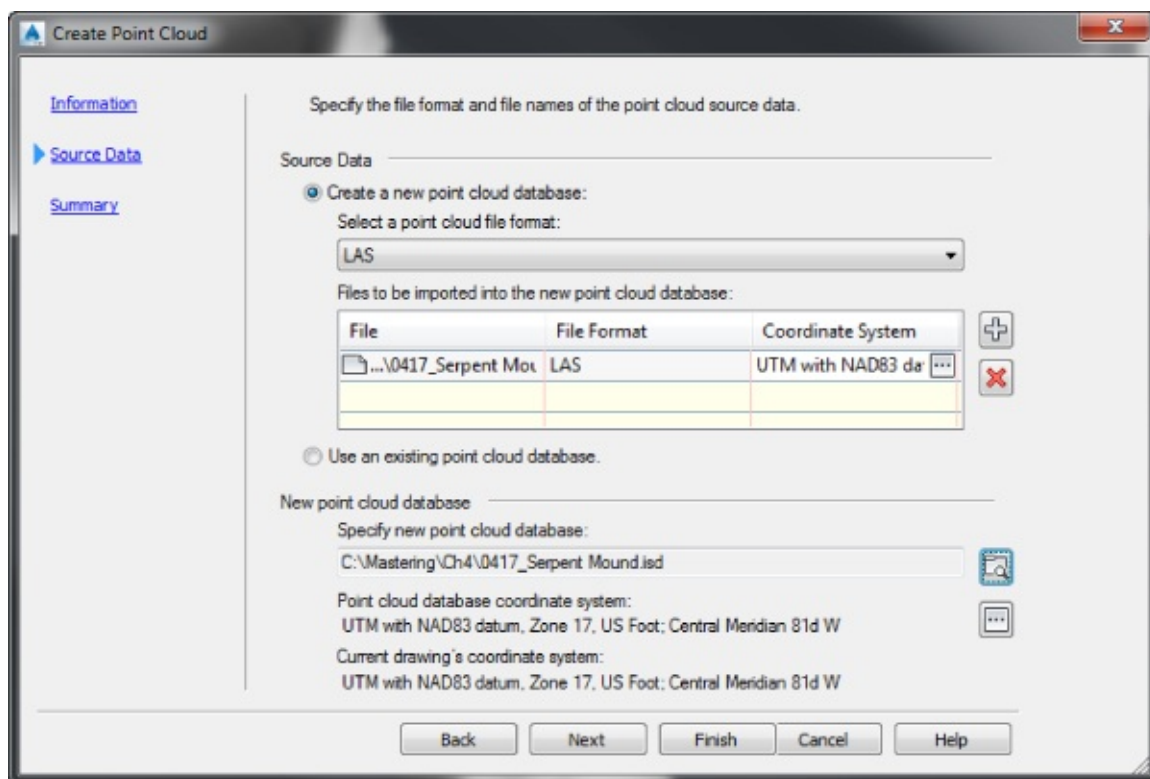


Figure 4.56 The Create Point Cloud – Source Data page

- Using the white plus sign, browse to the 0417_Serpent Mound.las file (both Imperial and metric users can use this file).

Remember, all data and drawing files for this book can be downloaded from www.sybex.com/go/masteringcivil3d2015.

This is a large (90 MB) file containing roughly 1.4 million points and may require a minute or two to process.

- Once the file appears in the Source Data page of the wizard, click the Next button to display the Summary page, shown in [Figure 4.57](#).

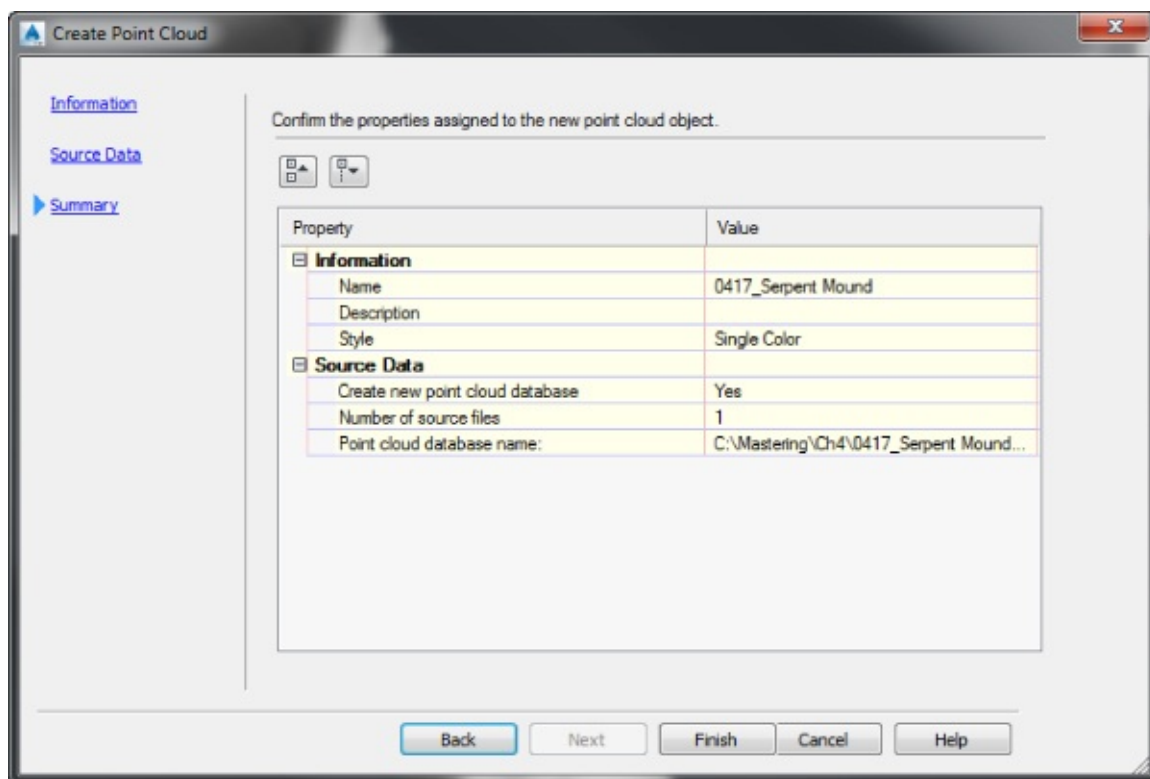


Figure 4.57 The Create Point Cloud – Summary page

8. Accept the defaults, as shown in [Figure 4.57](#), and click Finish to process the point cloud.
9. If the New Point Cloud Database – Processing In Background dialog appears, click Close to dismiss it.

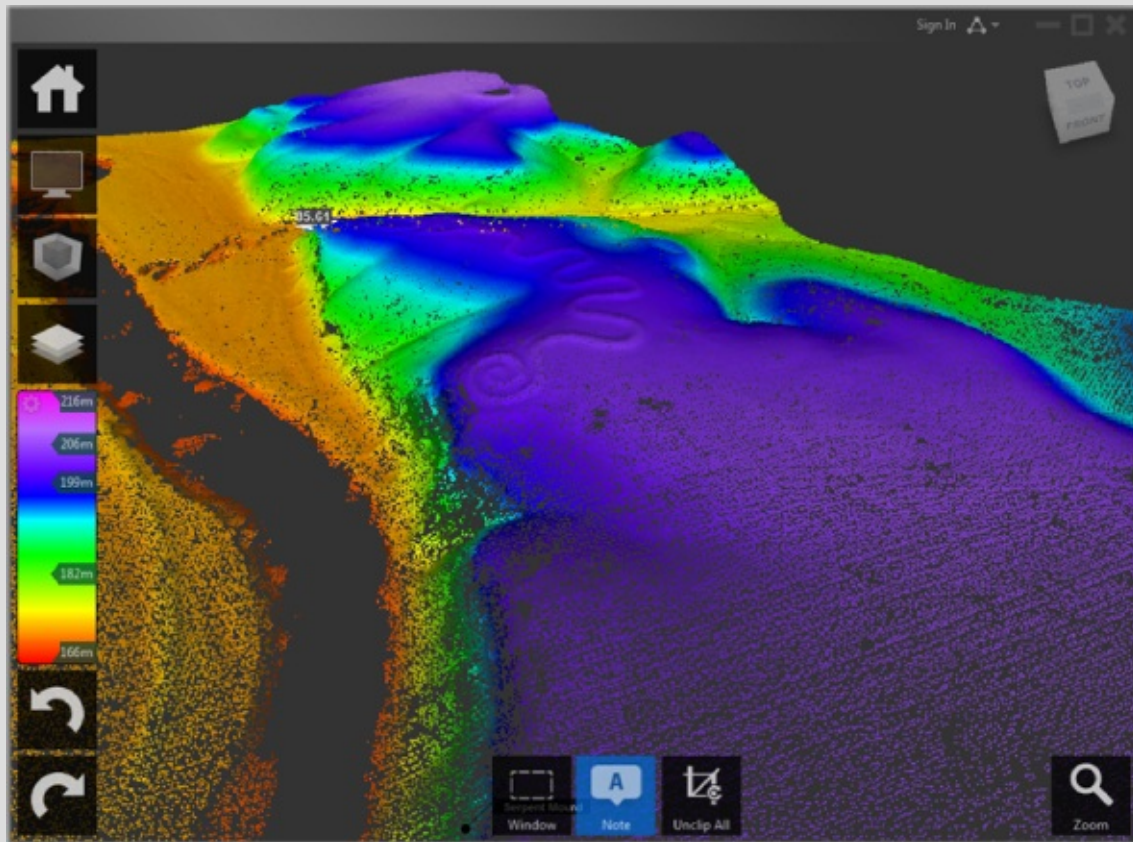
You may notice a pop-up message in the lower-right corner of your screen indicating that the point cloud database is being created in the background. The components of the point cloud are being processed, including the graphic that will display in the drawing file.

10. Once the point cloud is created in the graphic, it will disappear, and a new pop-up message will appear stating that the point cloud has been created and providing a link that says Click Here To Zoom. Click this link.

When the exercise is complete, a portion of a bounding box outlining a portion of the point cloud is displayed in the center of the screen. Save the drawing but leave it open to complete the next exercise. A finished drawing will not be provided due to the large file size.

Autodesk® ReCap™ Software

Included with your installation of Civil 3D 2015 is the Autodesk product called ReCap. ReCap allows you to look at laser-scanned data in a zippy environment outside of Civil 3D.



Using ReCap, you can consolidate, measure, crop, and visualize your scanned data before bringing into Civil 3D.

Working with Point Clouds

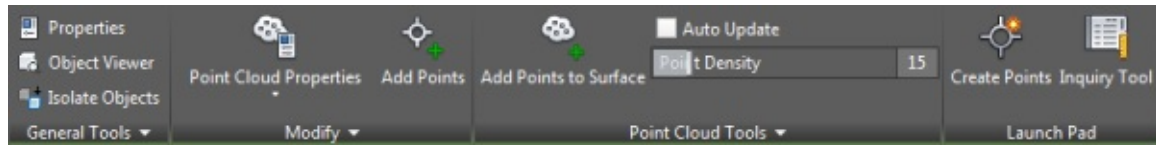
Once the point cloud is visible in your drawing, you'll want to follow a few rules of thumb to prevent performance problems. The key-in POINTCLOUDDENSITY value controls what percentage of the full point cloud displays on the screen at once. You can also access this value using a slider bar in the Point Cloud contextual tab. However, it is easier to hit the percentage you want on the first try if you use the key-in value. The lower this value, the fewer points are visible; hence the easier it will be to navigate your drawing. The POINTCLOUDDENSITY value does not have any effect on the number of points used when generating a surface model (this is similar to the Level Of Detail value used to aid surface processing).

When you are changing view directions on a point cloud, we recommend that you use preset views and named views to flip around the object. The orbit commands should not be used because they are a surefire way to max out your computer's RAM. If you used the default template, your surface will be located on the V-SITE-SCAN layer. We suggest that you freeze the layer if you do not need to see the point cloud. Use Freeze instead of Off for layer management so the point cloud is not accounted for during pan, zoom, and regen operations (this is true for all AutoCAD objects, but it makes a huge difference when working with point clouds).

Creating a Point Cloud Surface


By specifying either an entire point cloud or a small region of a point cloud, you can create a new TIN surface in your drawing. Any changes to the point cloud object will render the surface definition out of date. In the following exercise, a new TIN surface is created from the point cloud previously imported:

1. Continue using the 0417_PointCloud.dwg file that you created in the previous exercise.
2. Select the bounding box representing the point cloud to display the Point Cloud: Serpent Mound contextual tab, shown in [Figure 4.58](#).



[Figure 4.58](#) The Point Cloud contextual tab

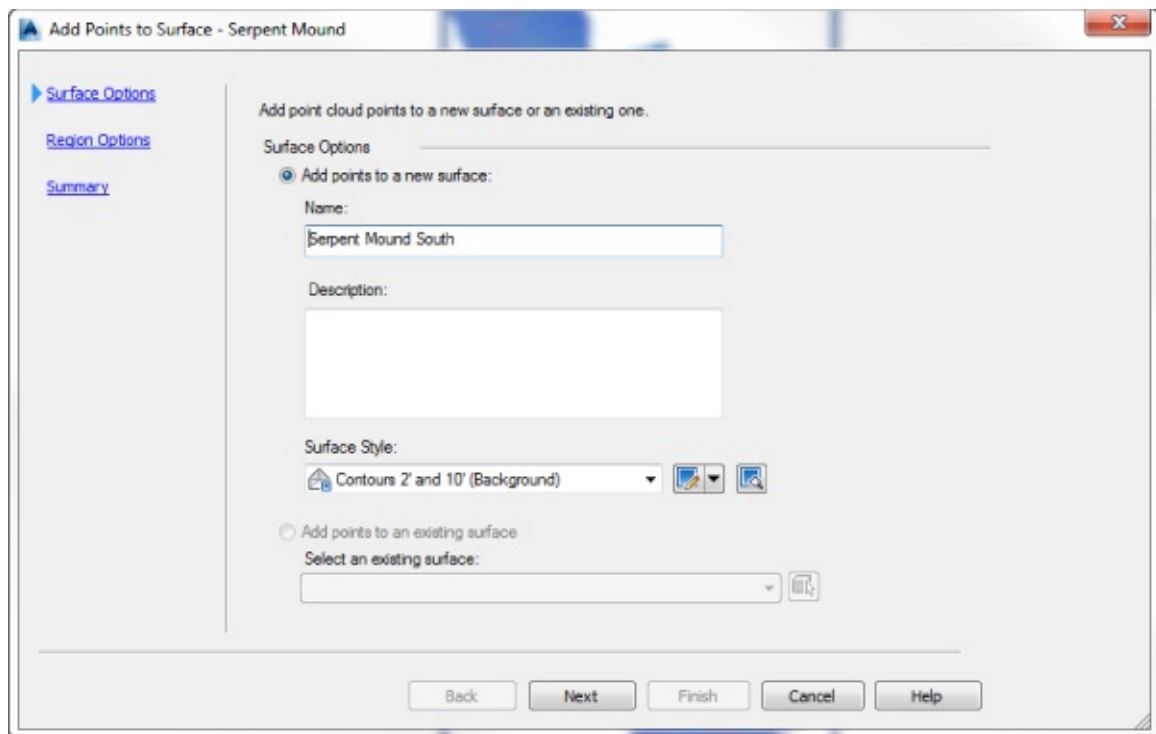3. From the Point Cloud contextual tab > Point Cloud Tools panel, choose Add Points To Surface to display the Add Points To Surface Wizard, shown in [Figure 4.59](#).



[Figure 4.59](#) The Add Points To Surface – Surface Options page

4. Name the surface **Serpent Mound South**. Leave the style set to the default.
5. Click Next and the Region Options page is displayed ([Figure 4.60](#)).

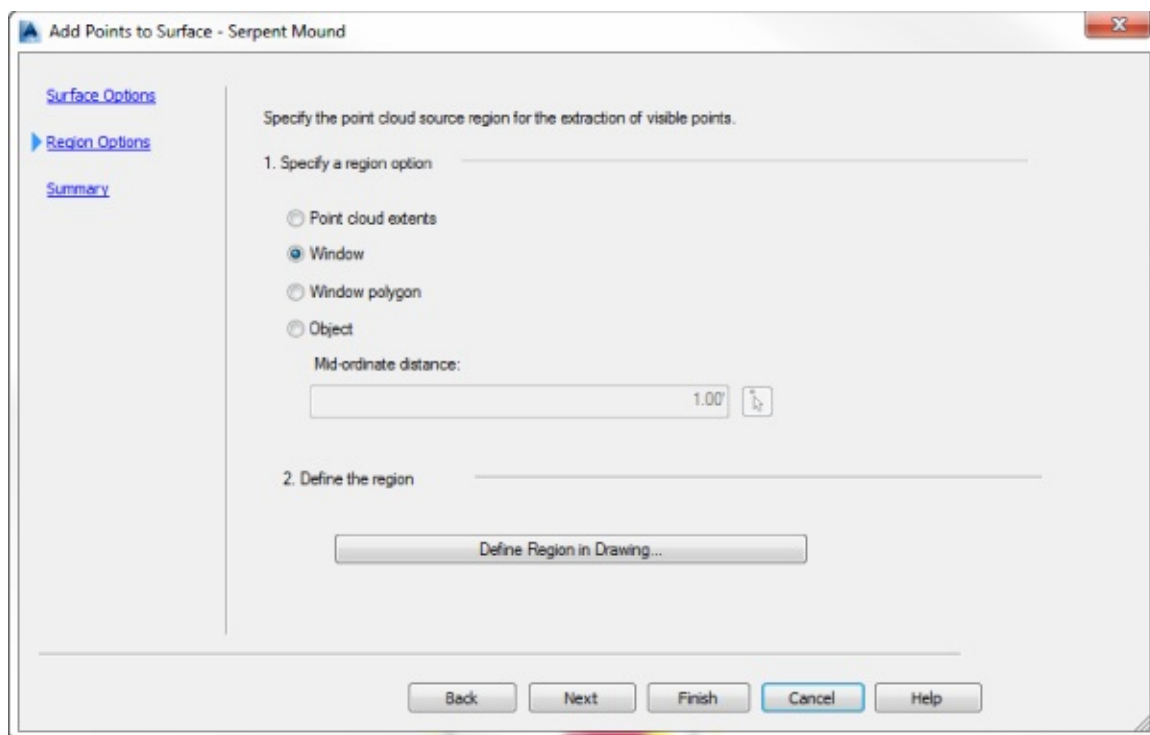


Figure 4.60 The Add Points To Surface – Region Options page

6. Choose the Window radio button, and click Define Region In Drawing.
7. Define the region by creating a window around the southern half of the point cloud.
8. Click Next to see the Summary page, shown in [Figure 4.61](#), and click the Finish button. (Note that your number of points to be added will differ depending on the size of the window you created in the previous step.)

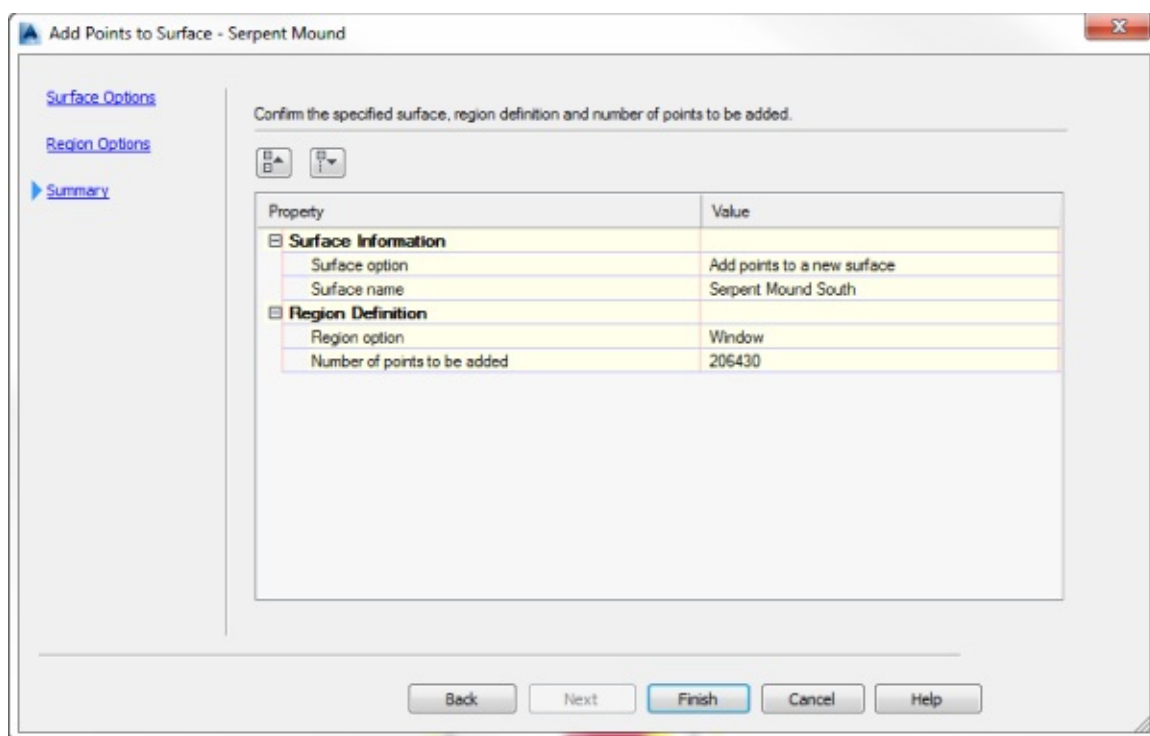


Figure 4.61 The Add Points To Surface – Summary page

When this exercise is complete, you may close the drawing. Due to the large file size, a finished state of this drawing is not available for download.

Surfaces created from point clouds behave in the same way as any other Civil 3D surface. You will see

the point cloud source information in the Definition tab of Surface Properties. By default, the surface's existence depends on the point cloud. Because point clouds are so large, you may wish to delete the point cloud from the drawing after the Civil 3D surface is created. If you choose to do this, be sure to set the Copy Deleted Dependent Objects option to Yes in the surface Definition tab. That way, once the point cloud has been removed, the surface will retain the point information.

The Bottom Line

Create an existing ground surface using points. The most common way to create a surface model is by adding point data to the definition of a surface.

Master It Open the MasterIt0401.dwg or the MasterIt0401_METRIC.dwg file. Create a new surface called **Existing**. Add the point group Topo to its definition. Leave the default styles.

Modify and update a TIN surface. TIN surface creation is mathematically precise, but sometimes the assumptions behind the equations leave something to be desired. By using the editing tools built into Civil 3D, you can create a more realistic surface model.

Master It Continue working in the file from the previous exercise or open the MasterIt0402.dwg or the MasterIt0402_METRIC.dwg file. Use the irregular-shaped polyline and apply it to the surface as an outer boundary of the surface. Make the boundary a destructive breakline.

Prepare a slope analysis. Surface analysis tools allow users to view more than contours and triangles in Civil 3D. Engineers working with nontechnical team members can create strong, meaningful, analysis displays to convey important site information using the built-in analysis methods in Civil 3D.

Master It Open the MasterIt0403.dwg or the MasterIt0403_METRIC.dwg file. Create a slope banding analysis showing slopes under and over 10 percent, and insert a dynamic slope legend to help clarify the result of the analysis.

Label surface contours and spot elevations. Showing a stack of contours is useless without context. Using the automated labeling tools in Civil 3D, you can create dynamic labels that update and reflect changes to your surface as your design evolves.

Master It Open the MasterIt0404.dwg or the MasterIt0404_METRIC.dwg file. Label the major contours on the surface at 2' and 10' (Background) or 1 m and 5 m (Background).

Import a point cloud into a drawing and create a surface model. As laser scan data collection becomes more common and replaces other large-scale data-collection methods, the ability to use point clouds in Civil 3D is critical. Intensity helps postprocessing software determine the ground cover type. While Civil 3D can't do postprocessing, you can see the intensity as part of the point cloud style.

Master It Import an LAS format point cloud file (MasterIt0405_Denver.las) into the Civil 3D template (with a coordinate system) of your choice. As you create the point cloud file, set the style to Elevation Ranges. Use a portion of the file to create a Civil 3D surface model. No coordinate system needs to be set for this example.

Chapter 5

Parcels

Land development projects often involve the subdivision of large pieces of land into smaller lots. Even if your projects don't directly involve subdivisions, you're often required to show the legal boundaries of your site and the adjoining sites.

Autodesk® AutoCAD® Civil 3D® parcels give you a dynamic way to create, edit, manage, and annotate these legal land divisions. If you edit a parcel object geometry to increase or decrease its size, all of the labels related to the object will reflect the update—including areas, bearings, distances, curve information, and table information.

In this chapter, you will learn to

- Create parcels from objects
- Create a right-of-way parcel using the right-of-way tool
- Create subdivision lots automatically by layout
- Add multiple-parcel segment labels

Introduction to Sites

Before we dig into parcel objects, we have to talk first about the place these are stored, the sites. In Civil 3D, a *site* represents a collection of parcels, alignments, grading objects, and feature lines that share a common topology. In other words, Civil 3D objects that are in the same site are related to, as well as interact with, one another. The objects that react to one another are called *site geometry* objects.

Among the objects just listed, the following objects can be placed only in a site:

- Feature lines
- Grading groups
- Parcels

Feature lines and grading groups are discussed in depth in Chapter 14, “Grading.” Alignments, discussed in Chapter 6, can be placed in a site or outside of site.

Think outside of the Lot

The reason for sites is to separate objects of the same type from interacting with each other. For example, you may have a set of parcels that represent impervious areas for drainage calculations. In the same location, you may have an overlay of parcels representing property boundaries. By keeping these items on separate sites, you will be able to keep area information separate.

Dynamic area labels are useful for delineating and analyzing soil boundaries; paving, open space, and wetlands areas; and any other region enclosed with a boundary.

Like all Civil 3D objects, parcels utilize styles. With parcel styles, you can assign different layers, colors, hatch patterns, and other graphical properties to the parcel objects to differentiate between parcel types.

It's important to understand how site geometry objects react to one another. [Figure 5.1](#) shows a typical parcel that might represent a property boundary.

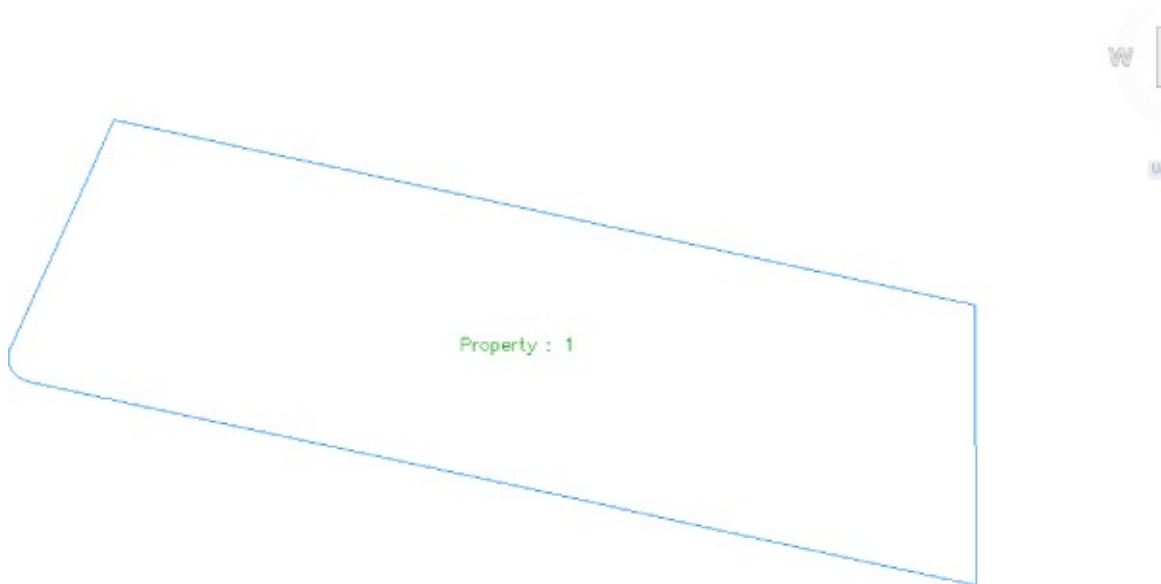


Figure 5.1 A typical property boundary

When an alignment is drawn and placed in the same site as the property boundary, the parcel splits into two parcels, as shown in [Figure 5.2](#).

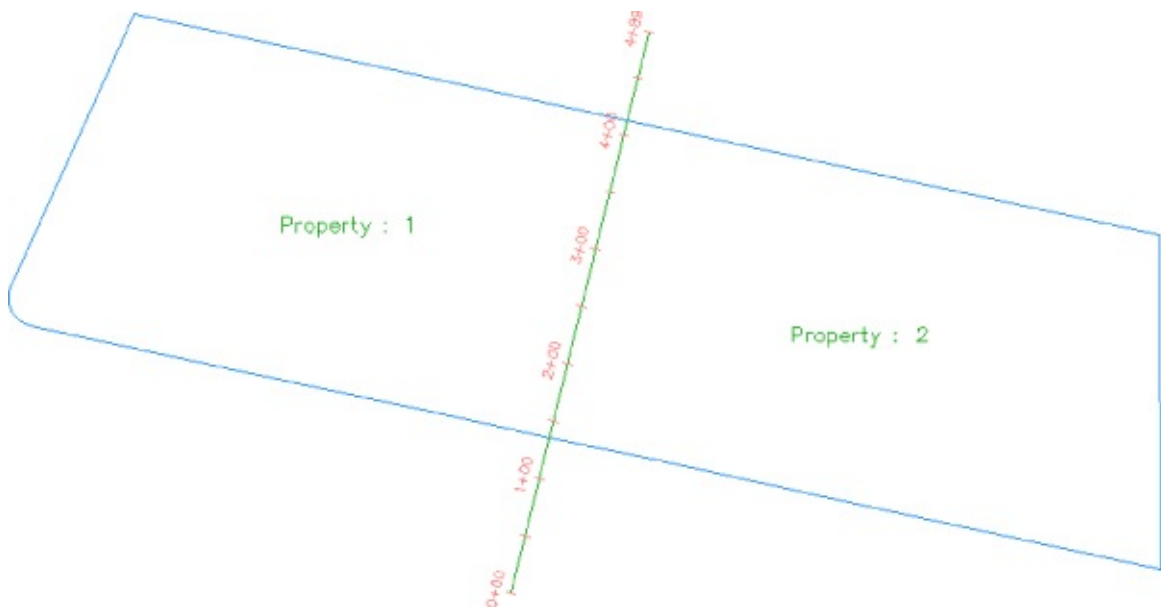


Figure 5.2 An alignment that crosses a parcel divides the parcel in two if the alignment and parcel exist in the same site

You must plan ahead to create meaningful sites based on interactions between the desired objects. For example, if you want a road centerline, a road right-of-way (ROW) parcel, and the lots in a subdivision to react to one another, they need to be in the same site (see [Figure 5.3](#)).

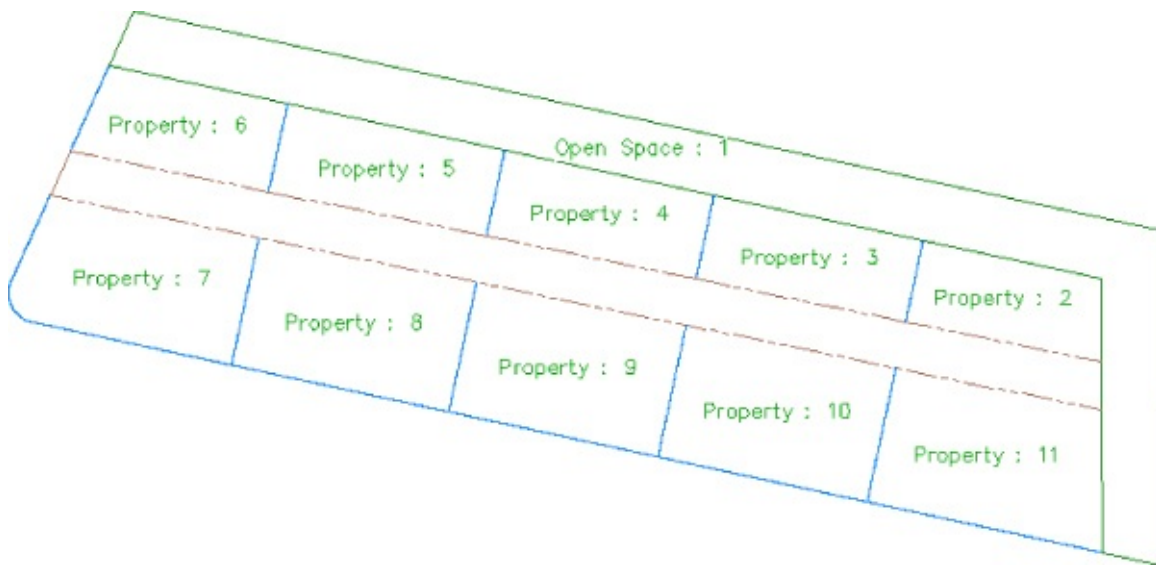


Figure 5.3 ROW parcels, open-space parcels, and subdivision lots react to one another when drawn on the same site.

The alignment (or road centerline), ROW parcel, and lots all relate to one another. A change in the centerline of the road should prompt a change in the ROW parcel and the subdivision lots.

If you'd like to avoid the interaction between site geometry objects, place them in different sites. [Figure 5.4](#) shows an alignment that has been placed in a different site from the boundary parcel. Notice that the alignment doesn't split the boundary parcel.

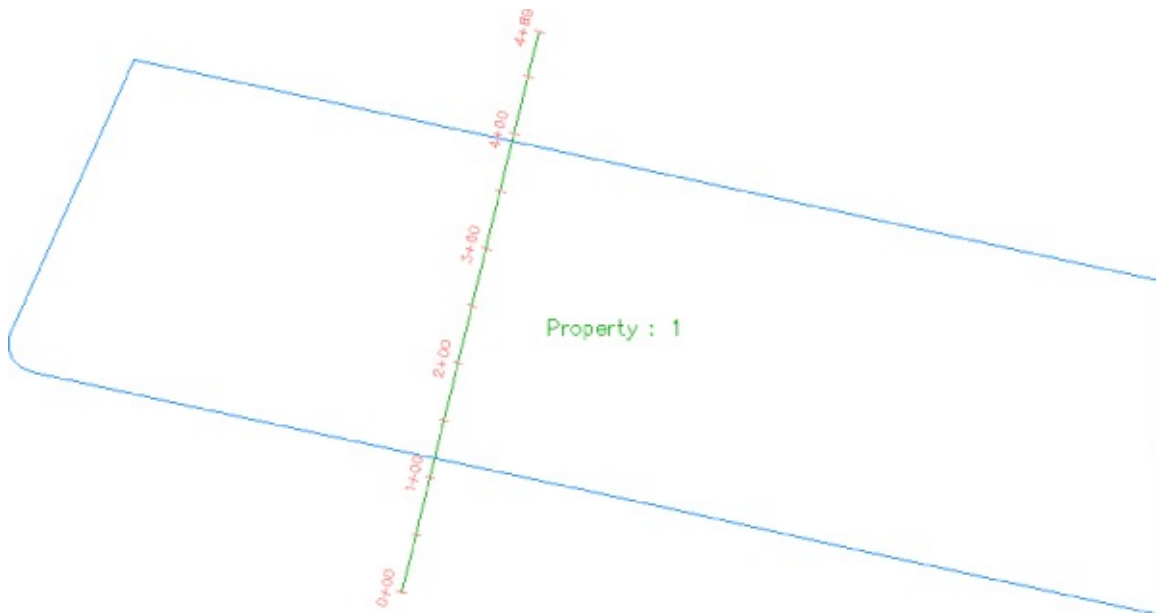


Figure 5.4 An alignment that crosses a parcel won't interact with the parcel if they exist in different sites

It's important that only objects that are intended to react to each other be placed in the same site. For example, in [Figure 5.5](#) you can see parcels representing both subdivision lots and soil boundaries. Because it wouldn't be meaningful for a soil boundary parcel segment to interrupt the area or react to a subdivision lot parcel, the subdivision lot parcels have been placed in a Subdivision Lots site, and the soil boundaries have been placed in a Soil Boundaries site.

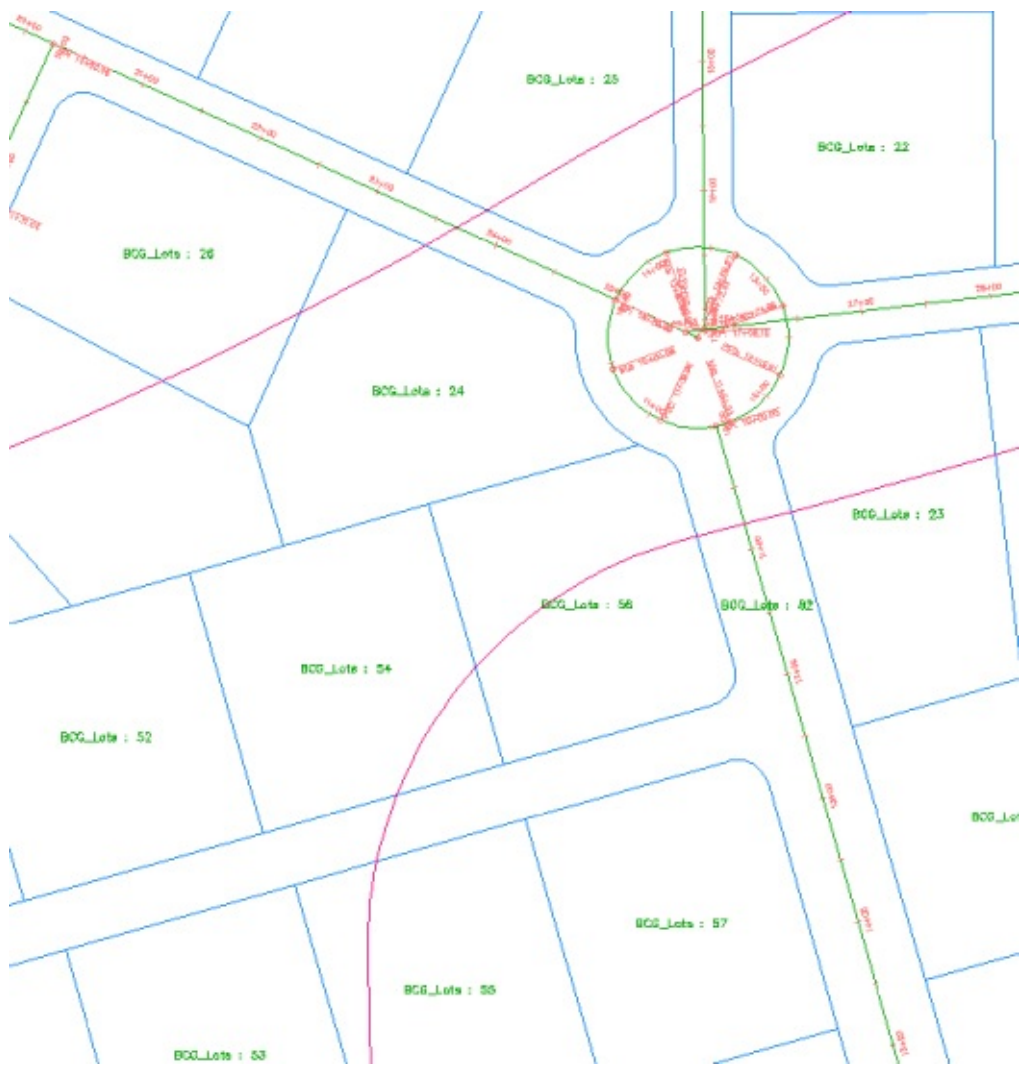


Figure 5.5 Parcels can be used for subdivision lots and soil boundaries as long as they're kept in separate sites.

If you didn't realize the importance of site topology, you might create both your subdivision lot parcels and your soil boundary parcels in the same site and find that your drawing looks similar to [Figure 5.6](#). This figure shows the soil boundary segments dividing and interacting with subdivision lot parcel segments, which doesn't make any sense.

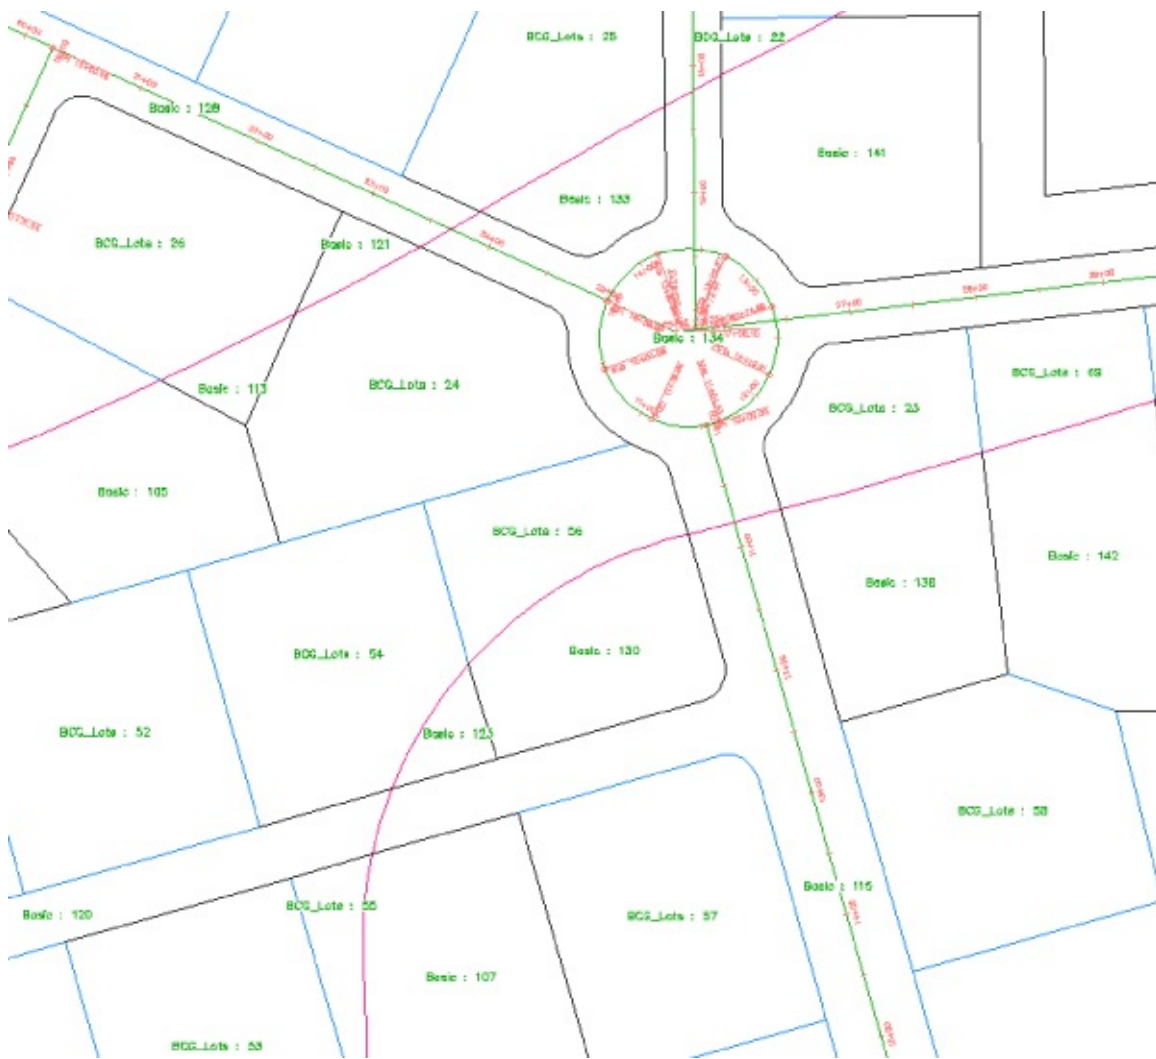


Figure 5.6 Subdivision lots and soil boundaries react inappropriately when placed in the same site.

Another way to avoid site geometry problems is to do site-specific tasks in different drawings and use a combination of external references and data references to share information. For example, you could place soil boundaries in one drawing file and subdivision lots in another drawing file and then use external references to show both drawings together.

You should always consider keeping your legal site plan in its own drawing. Because of the interactive and dynamic nature of Civil 3D parcel objects, it can be quite easy to accidentally modify a parcel segment when you meant to modify a manhole and unintentionally edit a portion of your plat.

You'll see additional examples and drawing divisions later in this chapter, as well as in Chapter 16, “Advanced Workflows.”

If you decide to have sites in the same drawing, here are some sites you may want to create. These suggestions are meant to be used as a starting point. Use them to help find a combination of sites that works for your projects:

- Roads and Lots** This site could contain road centerlines, ROWs, platted subdivision lots, open space, adjoining parcels, utility lots, and other aspects of the final legal site plan.
- Grading** Feature lines and grading objects are considered part of site geometry. If you're using these tools, you must make at least one site for them. You may even find it useful to have several grading sites.
- Easements** If you'd like to use parcels to manage, analyze, and annotate your easements, you may

consider creating a separate site for easements.

Impervious Areas If you'd like to use parcels to manage, analyze, and annotate paved areas, a separate site will be useful. Drainage areas can be tracked using a separate object called a catchment, so there is no need to create a site for drainage areas. You can read more about catchments in the bonus chapter, “Storm and Sewer Analysis,” found on this book's web page, www.sybex.com/go/masteringcivil3d2015.

Soils Many projects require knowledge of the different soil types present on the site. You will want soils in a separate site so that their boundaries don't interact with other objects in the drawing.

As you learn new ways to take advantage of alignments, parcels, and grading objects, you may find additional sites that you'd like to create at the beginning of a new project.

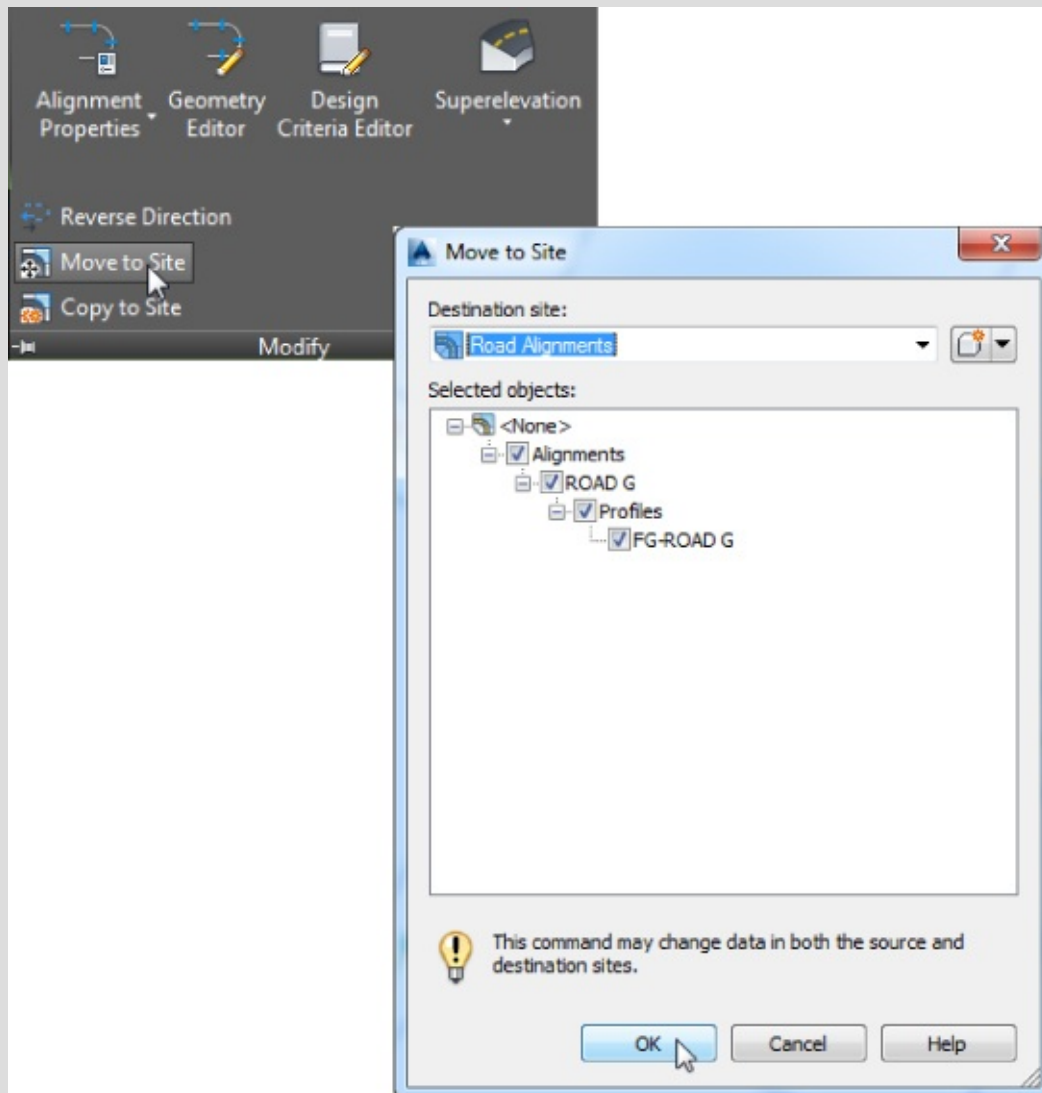
What about the “Siteless” Alignment?

As mentioned earlier in this chapter, you have a choice whether or not to place your alignments in a site. There are many situations where having the alignment independent from other objects is desirable, and therefore the <none> site can be used.

However, you can still create alignments in traditional sites, if you desire, and they will react to other site geometry objects. For example, if you wish to use the Create Right Of Way tool, the alignment you are working with must be on the same site as the main parcel.

You'll likely find that best practices for most alignments are to place them in the <none> site. For example, if road centerlines, road transition alignments, swale centerlines, and pipe network alignments are placed in the <none> site, you'll save yourself quite a bit of site geometry management.

If you decide you'd like to move the alignment to a site or to <none>, you can do so at any time. Click the alignment you wish to reassign. On the Alignment contextual tab > Modify panel flyout, click Move To Site. See Chapter 6 for more information about alignments.




Creating a New Site

You can create a new site in Prospector. You'll find the process easier if you define the needed sites at the beginning of your project and create those sites right away—or, better yet, have them defined as part of your Civil 3D template. You can always add or delete sites later in the project, if needed.

You can access the Sites collection in Prospector, along with the other Civil 3D objects in your drawing. The following exercise will lead you through creating a new site that you can use for creating subdivision lots:

1. Open the 0501_CreateSite.dwg (0501_CreateSite_METRIC.dwg) file, which you can download from this book's web page at www.sybex.com/go/masteringcivil3d2015.

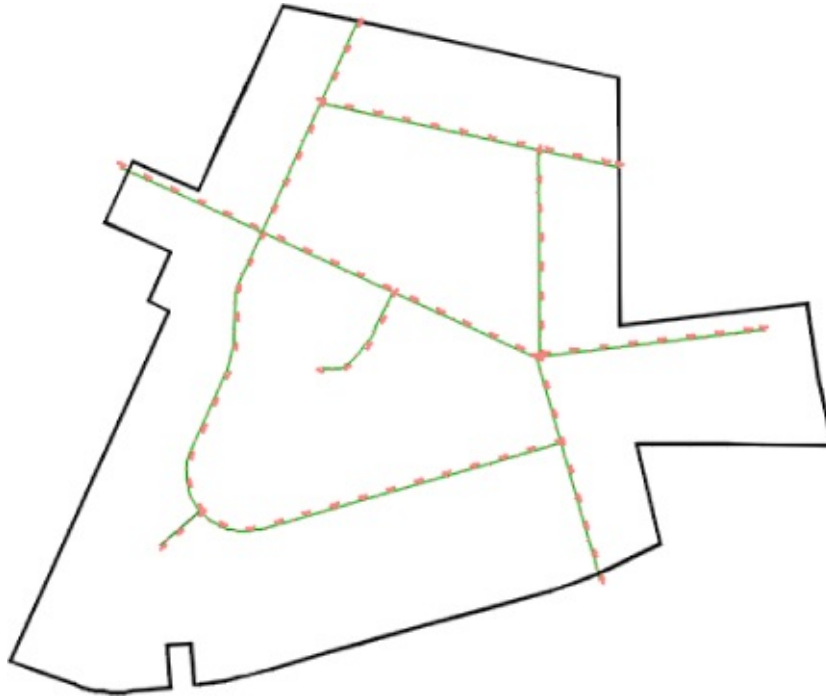Note that the drawing contains alignments and the boundary for a future parcel, as shown in [Figure 5.7](#).



[Figure 5.7](#) The Create Site drawing contains alignments and a boundary parcel.

2. On the Prospector tab of Toolspace, go to Sites.
3. Right-click the Sites collection, and select New to open the Site Properties dialog.
4. On the Information tab of the Site Properties dialog, enter **Subdivision Lots** for the name of your site.
5. Confirm that the settings on the 3D Geometry tab match what is shown in [Figure 5.8](#).

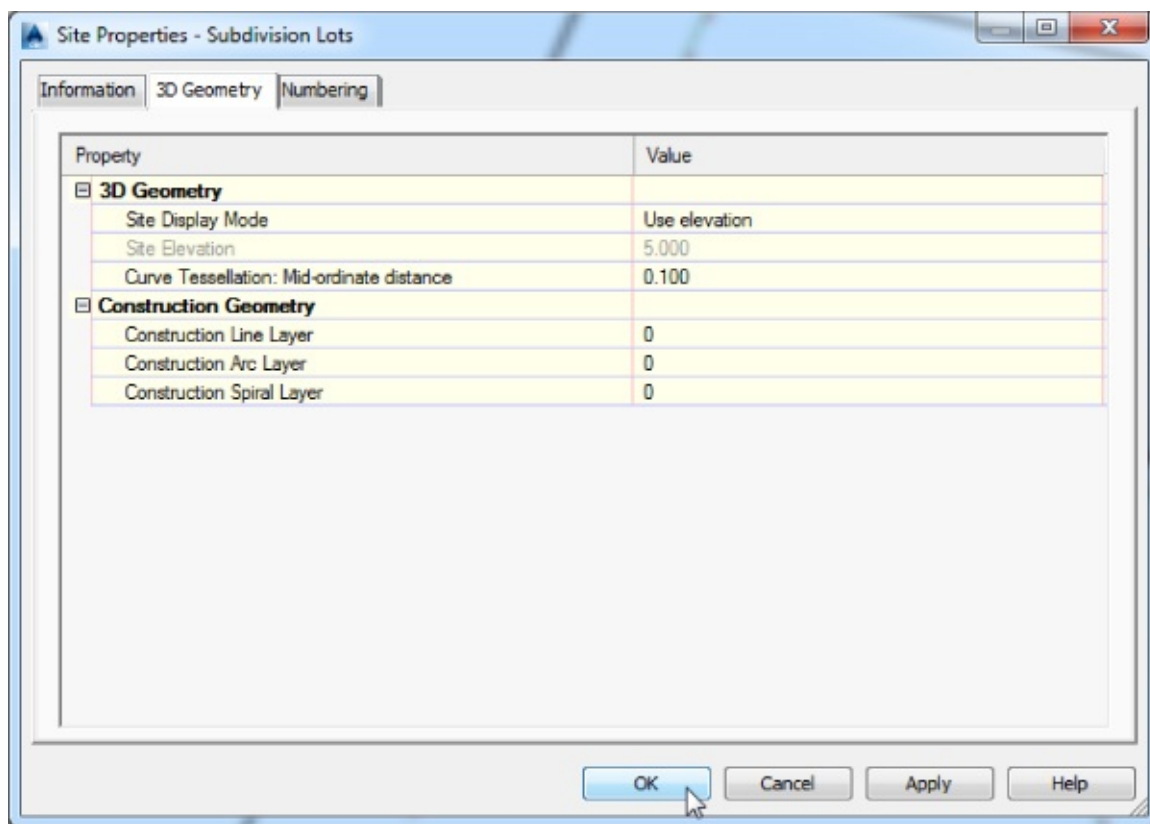


Figure 5.8 Confirm the settings on the 3D Geometry tab.

As you create parcels, Civil 3D will automatically number them for you. The values in the Numbering tab are the starting point.

6. Confirm that both values on the Numbering tab are set to **1**. Click OK.
7. Expand the Sites collection on the Prospector tab of Toolspace, and note that your Subdivision Lots site appears on the list, as shown in [Figure 5.9](#). You can repeat the process for all the sites you anticipate needing over the course of the project.

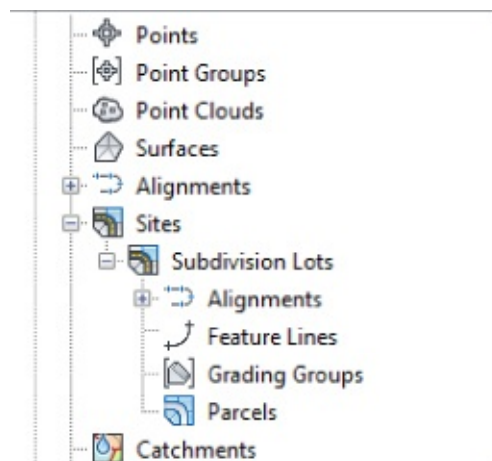


Figure 5.9 Your new site is listed in Prospector.

Please note that you also have the option of creating a new site when a parcel-creation command is issued within the Parcel Layout Tools or when parcels are created from objects.

8. Save and close the drawing. If you would like to see what the drawing should look like at this point, you can open 0501_CreateSite_FINISHED.dwg (0501_CreateSite_METRIC_FINISHED.dwg), available from the book's website.

Creating a Boundary Parcel

The Create Parcel From Objects tool allows you to create parcels by choosing AutoCAD entities in your drawing or in an XRef'd drawing. In a typical workflow, it's common to encounter a boundary created by AutoCAD entities, such as polylines, lines, and arcs.

When you're using AutoCAD geometry to create parcels, it's important that the geometry be created carefully and meet certain requirements. The AutoCAD geometry must be lines, arcs, polylines, 3D polylines, or polygons. It can't include blocks, ellipses, circles, or other entities. Civil 3D may allow you to pick objects with an elevation other than zero, but you'll find you get better results if you flatten the objects so all objects have an elevation of zero. Sometimes the geometry appears sound when elevation is applied, but you may notice this isn't the case once the objects are flattened. Flattening all objects before creating parcels can help you prevent frustration when creating parcels.

This exercise will teach you how to create a parcel from Civil 3D objects:

1. Open the `0502_CreateBoundary.dwg` (`0502_CreateBoundary_METRIC.dwg`) file, which you can download from this book's web page.

This drawing has several alignments, which were created to use no site, and one closed polyline representing a boundary. Your boundary could also be composed of multiple lines and arcs, but for this example we have already defined the boundary as polyline.

2. On the Home tab ► Create Design panel, select Parcel ► Create Parcel From Objects.
3. At the `Select lines, arcs, or polylines to convert into parcels or [Xref]:` prompt, pick the polyline that represents the site boundary, and press `↵`.

The Create Parcels – From Objects dialog appears.

4. From the drop-down menus, select Subdivision Lots, Property, and Name Square Foot & Acres (or Name Square Meter & Hectares if you are working in metric units) in the Site, Parcel Style, and Area Label Style selection boxes, respectively.

Leave everything else set to the defaults, as shown in [Figure 5.10](#). Check to make sure that Erase Existing Entities box is checked. This means that the polyline that you selected as a boundary will be deleted upon parcel creation.

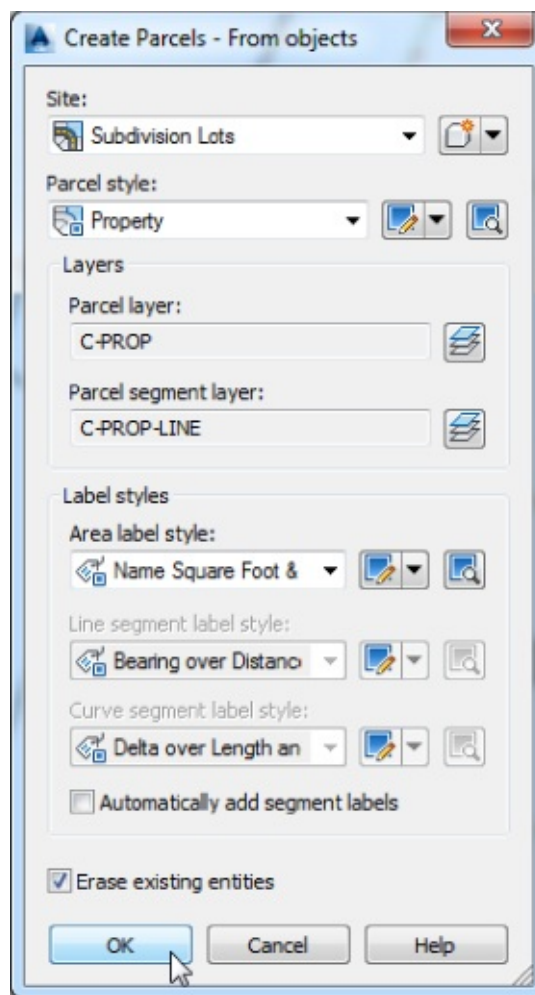


Figure 5.10 Site and style settings for your new boundary parcel

5. Click OK to dismiss the dialog. You will notice that a parcel for the boundary has been created.
6. Go back to Prospector and expand the Alignments collection. You will notice that all the alignments in the drawing are grouped under the Centerline Alignments category. Right-click that category and select the Move To Site option. Since you have only one site in the drawing, you will be presented with only one option. Leave the selection of alignments as displayed and click OK.

On a side note, you can also select them in Prospector individually or on the screen and then from the context menu select the Move To Site option.

7. You will notice that on transferring the alignment objects to the site that has the parcels, these objects interact with the parcel objects, further dividing the initial parcel into a total of six parcels.
8. Save and close the drawing. If you would like to see what the drawing should look like at this point, you can open 0502_CreateBoundary_FINISHED.dwg (0502_CreateBoundary_METRIC_FINISHED.dwg), available from the book's website.

The boundary polyline forms parcel segments that react with the alignments. Area labels are placed within the newly created parcels, as shown in [Figure 5.11](#).

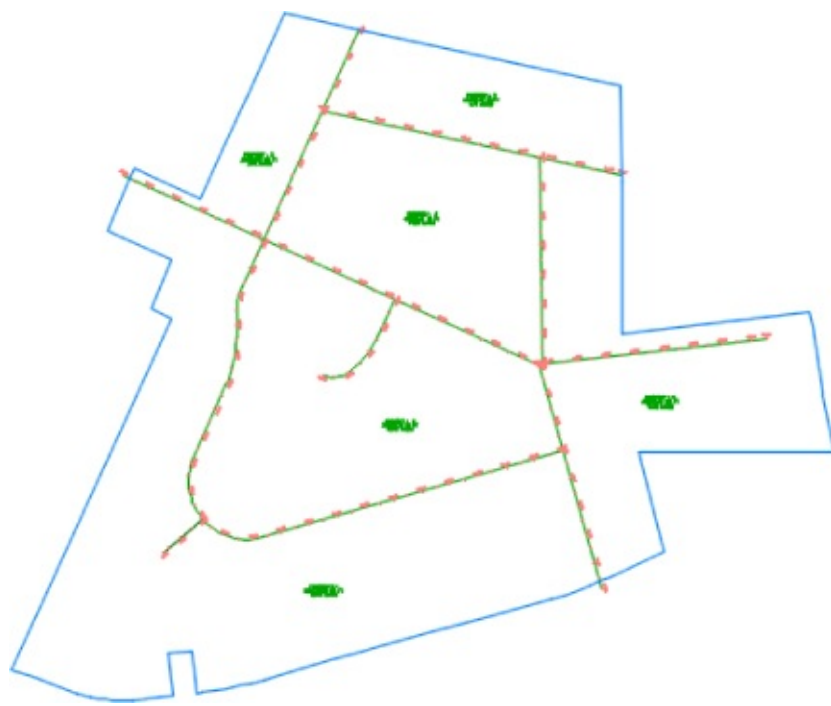


Figure 5.11 The boundary parcel segments, alignments, and area labels

Using Parcel Creation Tools

When you don't have existing lines to work with, the best option is to draw parcel segments using the Parcel Layout tools. [Figure 5.12](#) shows the many commands available to you.

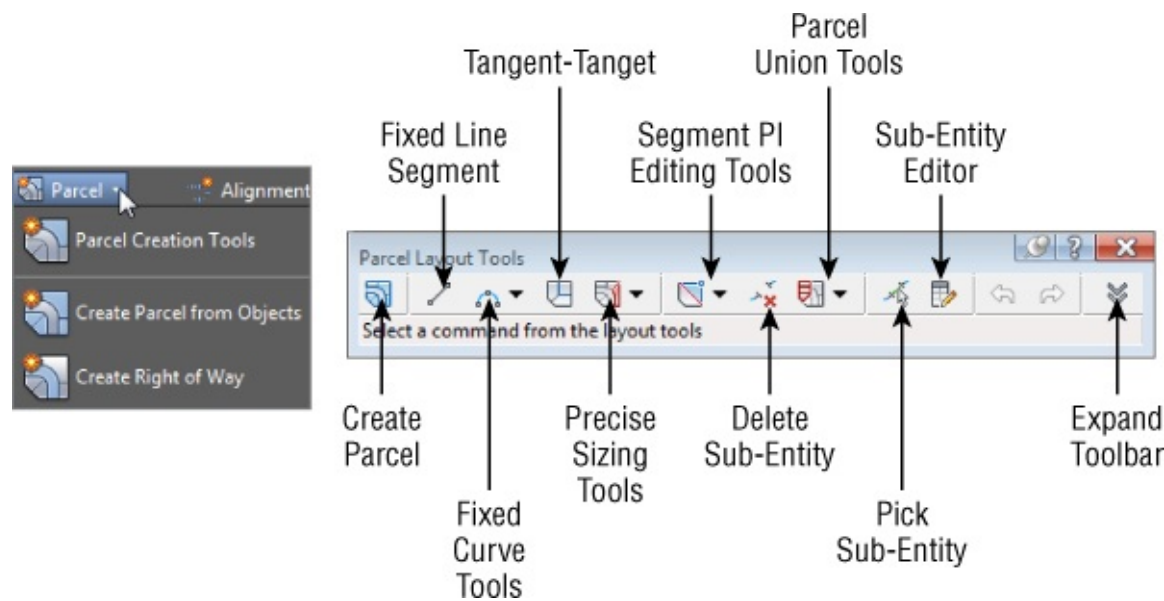


Figure 5.12 Selecting parcel creation tools

Although you may never have thought of things like wetland areas or easements as parcels in the past, you can take advantage of the parcel tools to assist in labeling, stylizing, and analyzing these features for your plans.

This exercise will teach you how to create a parcel representing wetlands using the transparent commands that you got used to in previous chapters and the Draw Tangent-Tangent With No Curves tool from the Parcel Layout Tools toolbox:

1. Open the 0503_WetlandsParcel.dwg (0503_WetlandsParcel_METRIC.dwg) file, which you can download from this book's web page.

Note that this drawing has several alignments and parcels. For the wetland point data, you will import them from a LandXML file using the tools you learned in Chapter 2, “Survey.”

2. Go to the Insert tab and from the Import panel select the LandXML import option. Browse and select to import the file 0503_WetlandParcelData.xml. Click Open, accept the defaults, and click OK. The point data should be imported and ready to be used for parcel definition.
3. Right-click the Sites node of Prospector and create a new site, Wetlands. Click OK to go to the next step.



4. On the Home tab of the ribbon, Create Design Panel, choose Parcel > Parcel Creation Tools on the Create Design panel.

The Parcel Layout Tools toolbar appears.



5. Click the Draw Tangent-Tangent With No Curves tool on the Parcel Layout Tools toolbar.

The Create Parcels – Layout dialog appears.

6. From the drop-down menus, select Wetlands, Wetland, and Name Square Foot & Acres (or Name Square Meter Hectares) in the Site, Parcel Style, and Area Label Style selection boxes, respectively. Keep the default settings for all other options.
7. Click OK.



8. At the Specify start point: prompt, click the Point Number Transparent command available in the Transparent Commands Toolbar (or type ‘PN ↵ at the command prompt).
9. At the Enter Point Number: prompt, enter **1-11,1 ↵**.

You will see a line form through the wetland boundary points in the northwest corner of the project and immediately form the parcel.

10. Press Esc once to exit the Transparent command, and press Esc a second time to complete the parcel.
11. Press Enter to start a new lot line. Then repeat steps 8 through 10 for the other wetland points using points 12 through 22, entering **12-22,12** for the transparent point input.
12. Press Esc three times to exit the command.

Your drawing should look similar to [Figure 5.13](#).

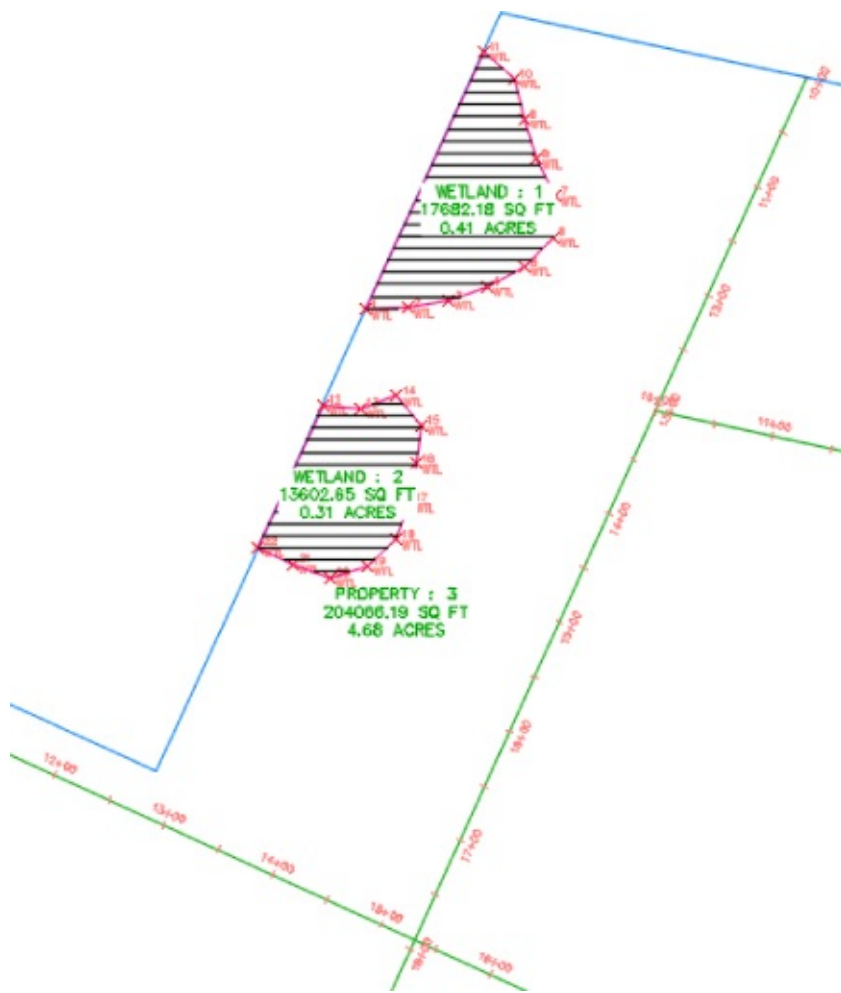


Figure 5.13 The wetlands defined on the site

To illustrate how to change the styles that are in use on a parcel, you will next change the parcel style and the area selection label style.

13. Select the northern wetland parcel's area label. From the Parcel contextual tab ► Modify panel, click the Parcel Properties icon.

The Parcel Properties dialog appears.

14. On the Information tab, select Mitigated Wetland from the drop-down menu in the Object Style selection box, and then click Apply to observe the change.

Remain in the Parcel Properties dialog. The parcel hatch pattern will change from a full hatch to one that follows the inside of the parcel perimeter.

15. To change the parcel area label style, switch to the Composition tab in the Parcel Properties dialog.
16. From the Area Selection Label Style pull-down, select Name Area & Perimeter, and click OK. Press Esc to deselect the parcel.
17. Select the south wetland parcel by clicking its area label. From the Parcel contextual tab ► Modify panel, click Parcel Properties, as you did in step 13.
18. In the Composition tab, change the Area Selection Label Style setting to **Parcel Name** and click OK.
19. Save and close the drawing. If you would like to see what the drawing should look like at this point, you can open 0503_WetlandsParcel_FINISHED.dwg (0503_WetlandsParcel_METRIC_FINISHED.dwg), available from the book's website.

Your parcels will look like [Figure 5.14](#).

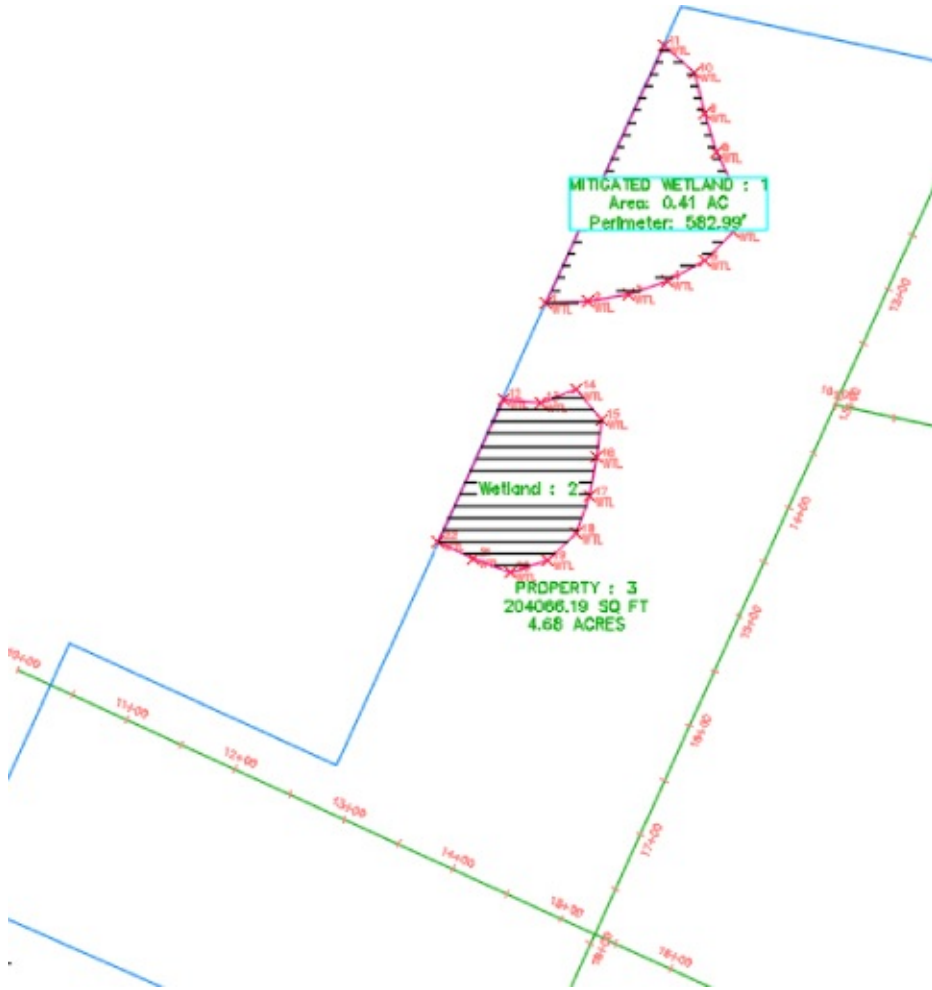


Figure 5.14 The wetlands parcels with the appropriate parcel styles and label styles applied

Creating a Right-of-Way Parcel

The Create ROW tool creates ROW parcels on either side of an alignment based on your specifications. The Create ROW tool can be used only when alignments are placed on the same site as the boundary parcel. The resulting ROW parcel will look similar to [Figure 5.15](#).

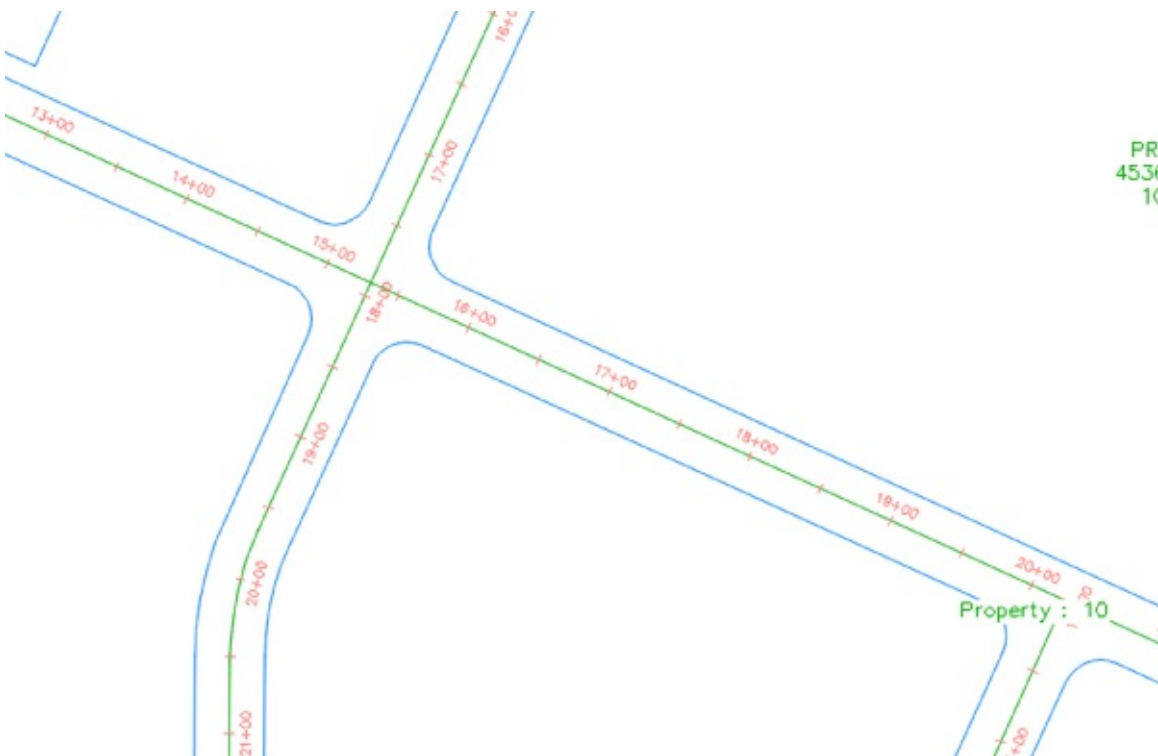


Figure 5.15 The resulting parcels after application of the Create ROW tool

The Create ROW tool includes the following options:

- Offset distance from alignment
- Fillet or chamfer cleanup at parcel boundaries
- Alignment intersections

Figure 5.16 shows an example of chamfered cleanup at alignment intersections.

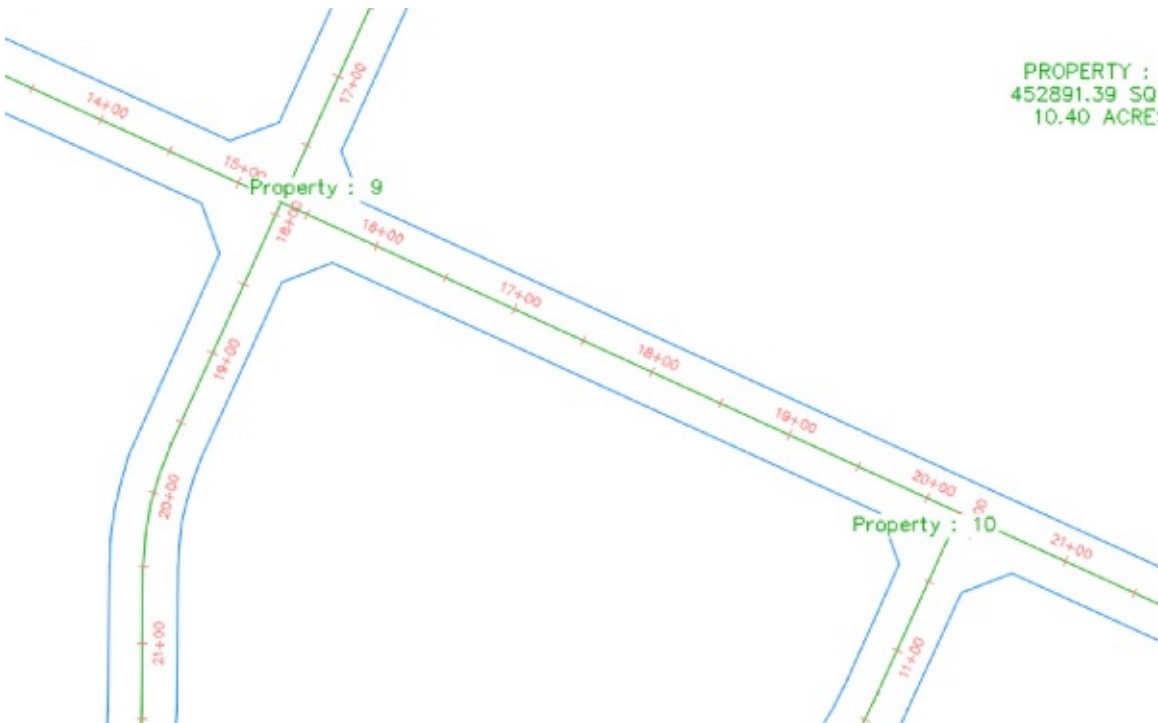


Figure 5.16 A ROW with chamfer cleanup at alignment intersections

Once the ROW parcel is created, it's no different from any other parcel. It should be noted that the ROW parcel doesn't maintain a dynamic relationship with the alignment that created it. A change to the

alignment will require the ROW parcel to be edited or, more likely, re-created.

This exercise teaches you how to use the Create ROW tool to automatically place a ROW parcel for each alignment on your site:

1. Open the 0504_CreateROWParcel.dwg (0504_CreateROWParcel_METRIC.dwg) file, which you can download from this book's web page.

Note that this drawing has some alignments on the same site as the boundary parcel, resulting in several smaller parcels between the alignments and boundary.

2. On the Home tab > Create Design panel, choose Parcel > Create Right Of Way.
3. At the **Select parcels:** prompt, pick all existing parcels by selecting each of their area labels. On selection feedback is provided through a change in the way the selected parcels display.
4. Press **↵** to stop picking parcels.

The Create Right Of Way dialog appears.

5. Expand the Create Parcel Right Of Way branch, and enter **22.5' (7 m)** as the value for Offset From Alignment.
6. Expand the Cleanup At Parcel Boundaries branch.
7. Change the Cleanup Method setting to None.
8. Expand the Cleanup At Alignment Intersections branch.
9. Enter **25' (8 m)** as the value for Fillet Radius At Alignment Intersections.
10. Select Fillet from the drop-down menu in the Cleanup Method selection box. Verify that the Create Right Of Way dialog matches [Figure 5.17](#).

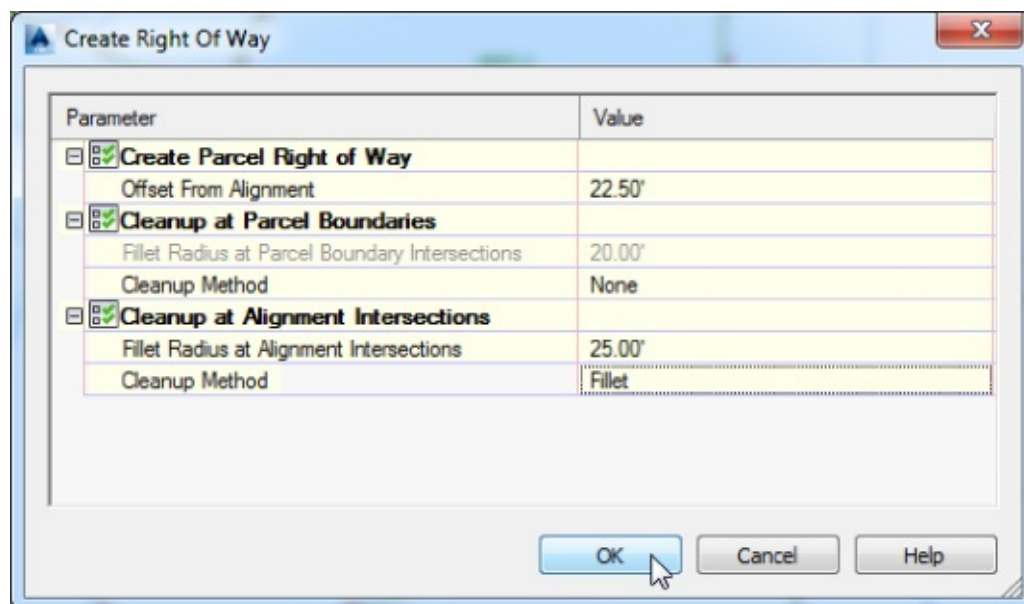


Figure 5.17 The Create Right Of Way dialog

1. Click OK to dismiss the dialog and create the ROW parcels. Exit the command by pressing Esc.
2. Save the drawing but keep it open for the next exercise. If you would like to see what the drawing should look like at this point, you can open 0504_CreateROWParcel_FINISHED.dwg (0504_CreateROWParcel_METRIC_FINISHED.dwg), available from the book's website.

Your drawing should look similar to [Figure 5.18](#).

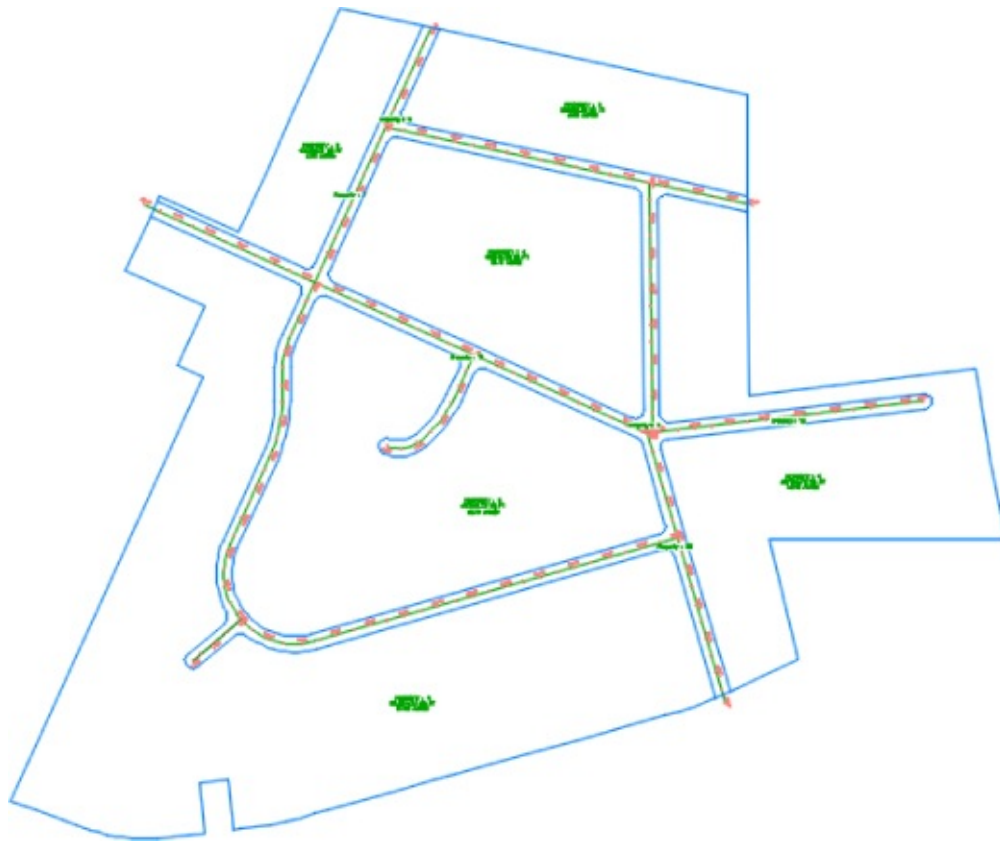


Figure 5.18 The completed ROW parcels

Adding a Cul-de-Sac Parcel

In this section you will add a cul-de-sac at the end of ROAD G and one at the end of the ROAD H alignment layout. Although drawing the cul-de-sac requires only basic drafting techniques, there are numerous steps. To save time, a block will be provided so that you don't have to draw it yourself. After inserting this block, you will convert its components into a parcel. This exercise also introduces some editing tools.

You will need to have completed the previous exercise before continuing or open the FINISHED version of the drawing.

1. Continue working in the drawing from the previous exercise or open 0504_CreateROWParcel_FINISHED.dwg (0504_CreateROWParcel_METRIC_FINISHED.dwg), available on the book's website.
2. Locate 0504_CulDeSac.dwg (0504_CulDeSac_METRIC.dwg) in the chapter's directory and insert the file using the settings shown in [Figure 5.19](#).

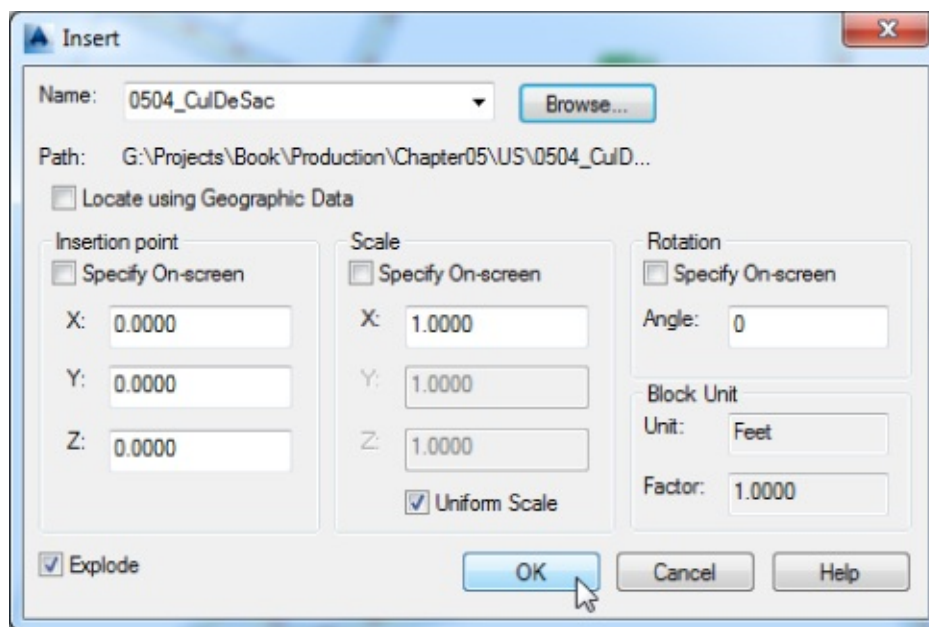


Figure 5.19 Inserting the cul-de-sac block




3. From the Home tab > Create Design panel, expand Parcel > Create Parcel From Objects.
4. At the Select lines, arcs, or polylines to convert into parcels or [Xref]: prompt, select the two polylines that represent the outside of the cul-de-sac and press \leftarrow .
5. In the Create Parcels – From Objects dialog, verify the following settings:
 - Site is set to Subdivision Lots.
 - Parcel Style is set to Property.
 - Area Label Style is set to Name Square Foot & Acres (Name Square Meter & Hectares).
 - Erase Existing Entities is checked.
6. Click OK.

Your drawing should look similar to [Figure 5.20](#).



Figure 5.20 The cul-de-sac turned into a parcel

Both cul-de-sacs are now defined as parcels, but there are some extra lines that need to be taken care of. Let's see how to clean this up a bit.

7. Change the drawing scale to 1" = 20' (1:250). This will cause the parcel area labels to scale down, making the next few steps easier.
8. From the Home tab > Create Design panel, expand Parcel > Parcel Creation Tools.
 The Parcel Layout Tools toolbar opens.
9. Select the Delete Sub-Entity tool.
10. At the Select subentity to remove: prompt, select the right of way that interferes with the cul-de-sac, as shown in [Figure 5.21](#). Apply the selected edits to both cul-de-sacs.

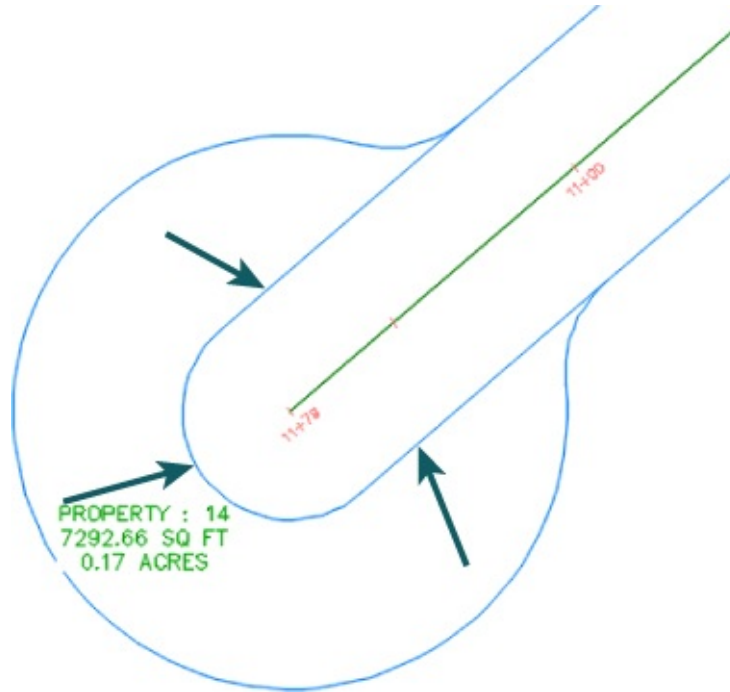


Figure 5.21 Delete these parcel segments.

11. Press Esc twice to exit the command.
12. Save and close the drawing. If you would like to see what the drawing should look like at this point, you can open 0504_CreateROWParcelsCDS_FINISHED.dwg (0504_CreateROWParcelsCDS_METRIC_FINISHED.dwg), available from the book's website.

Your cul-de-sacs are complete, as shown in [Figure 5.22](#).

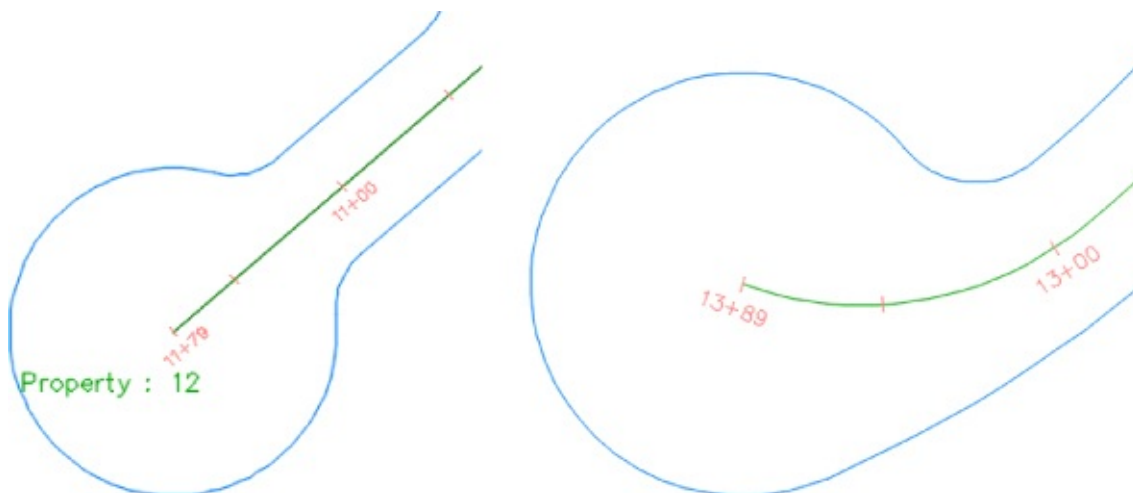


Figure 5.22 The finished cul-de-sacs

Creating Subdivision Lot Parcels Using Precise Sizing Tools

The precise sizing tools allow you to create parcels to your exact specifications. You'll find these tools most useful when you have your roadways established and understand your lot-depth requirements. These tools provide automatic, semiautomatic, and freeform ways to control the parcel sizing using frontage, parcel area, and segment direction.

Attached Parcel Segments

Before learning about the parcel sizing tools themselves, let's discuss attached parcel segments. Parcel segments created with the precise sizing tools are called *attached segments*. Attached parcel segments have a start point that is attached to a frontage segment and an endpoint that is defined by the next parcel segment they encounter. Attached segments can be identified by their distinctive diamond-shaped grip at their start point and no grip at their endpoint (see [Figure 5.23](#)).



Figure 5.23 A series of attached parcel segments, with their endpoints at the front lot line

In other words, you establish their start point and their direction, but they seek another parcel segment to establish their endpoint. [Figure 5.23](#) shows a series of attached parcel segments. You can tell the difference between their start points and endpoints because the start points have the diamond-shaped grips.

You can drag the diamond-shaped grip along the frontage to a new location and the parcel segment will maintain its angle from the frontage. If the rear lot line is moved or erased, the attached parcel segments find a new endpoint (see [Figure 5.24](#)) at the next available parcel segment.

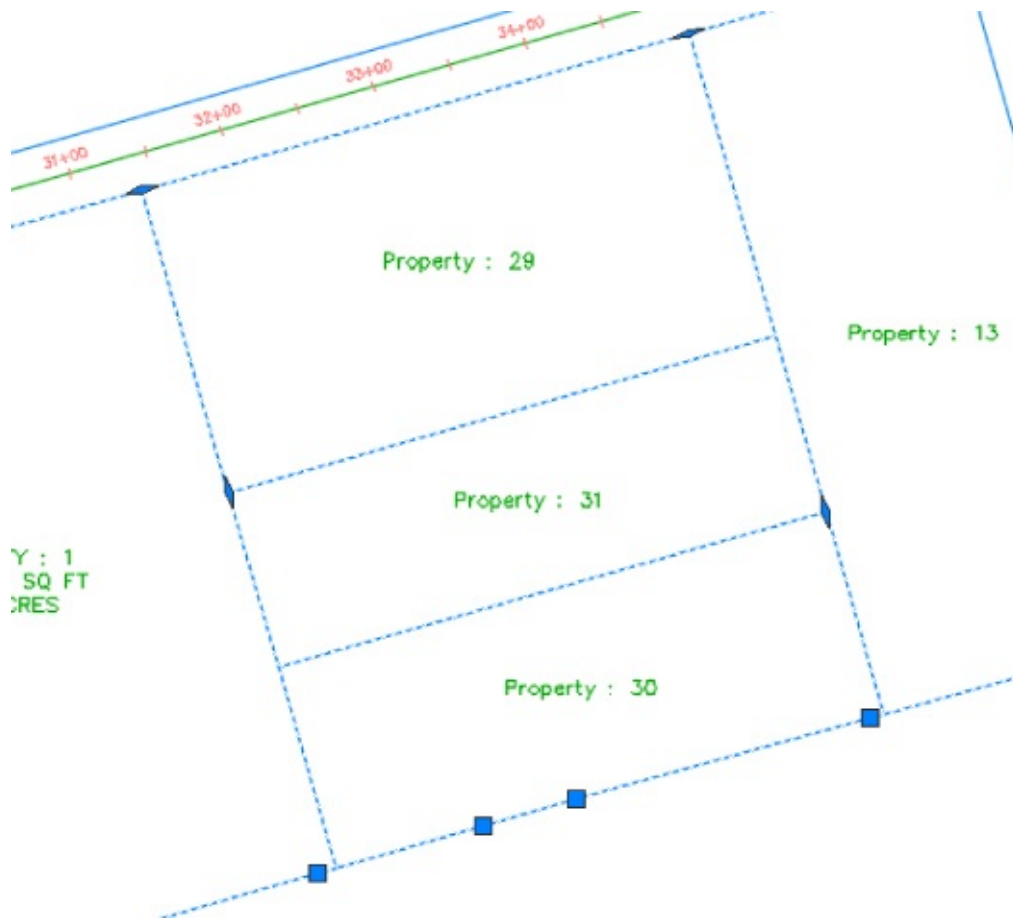


Figure 5.24 The endpoints of attached parcel segments extend to the next available parcel segment if the initial parcel segment is erased.

Parcel Sizing Settings

Before using the precise parcel sizing tools, you should understand that a number of settings affect the behavior of these tools. These settings are found by expanding the Parcel Layout Tools toolbar, as shown in [Figure 5.25](#). Each of these settings is discussed in detail in the following sections.

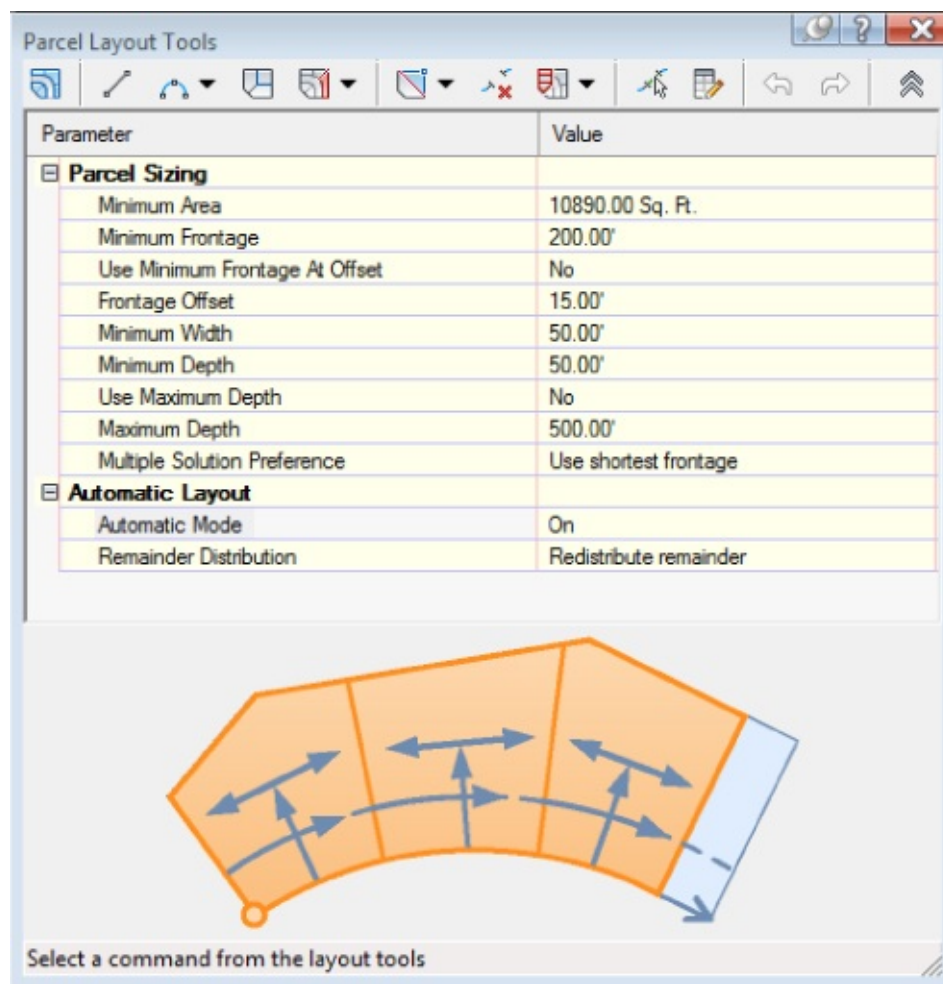


Figure 5.25 Automated sizing options on the expanded Parcel Layout Tools toolbar

Parcel Sizing

Certification Objective

When you create new parcels, the tools respect your default area and minimum frontage (measured from either a ROW or a building setback line). The program always uses these numbers as a minimum; it bases the actual lot size on a combination of the geometry constraints (lot depth, frontage curves, and so on) and the additional settings that follow. Keep in mind that the numbers you establish under the Parcel Sizing option must make geometric sense. For example, if you'd like a series of 7,500-square-foot (700-square-meter) lots that have 100" (30 m) of frontage, you must make sure that your rear parcel segment allows for at least 75" (23 m) of depth; otherwise, you may wind up with much larger frontage values than you desire or a situation where the software can't return a meaningful result.

Automatic Layout

Automatic Layout has two parameters when the list is expanded: Automatic Mode and Remainder Distribution. The Automatic Mode parameter can have the following values:

On Automatically follows your settings and puts in all the parcels, without prompting you to confirm each one.

Off Allows you to confirm each parcel as it's created. In other words, this option provides you with a way to semi-automatically create parcels.

The Remainder Distribution parameter tells Civil 3D how you'd like "extra" land handled. This parameter has the following options:

Create Parcel From Remainder Makes a last parcel with “the leftovers” once the tool has made as many parcels as it can based on the settings in this dialog. This parcel is usually smaller than the other parcels.

Place Remainder In Last Parcel Adds the leftover area to the last parcel once the tool has made as many parcels as it can based on the settings in this dialog.

Redistribute Remainder Takes the leftover area and distributes it across all the default-sized parcels once the tool has made as many parcels as it can based on the settings in this dialog. The resulting lots aren't always evenly sized because of differences in geometry around curves and other variables, but the leftover area is absorbed.

There aren't any rules per se in a typical subdivision workflow. Usually the goal is to create as many parcels as possible within the limits of available land. To that end, you'll use a combination of AutoCAD tools and Civil 3D tools to divide and conquer the particular tract of land with which you are working.

Parcel Sizing Tools

The precise sizing tools consist of the Slide Line, Swing Line, and Free Form Create tools (see [Figure 5.26](#)).

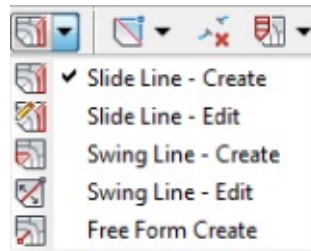


Figure 5.26 The precise parcel sizing tools

Slide Line – Create Tool

The Slide Line – Create tool creates an attached parcel segment based on an angle from frontage. You may find this tool most useful when your jurisdiction requires a uniform lot-line angle from the right of way.

This exercise will lead you through using the Slide Line – Create tool to create a series of subdivision lots:

1. Open the 0505_CreateSlide.dwg (0505_CreateSlide_METRIC.dwg) file, which you can download from this book's web page.

Note that this drawing has several alignments on the same site as the boundary parcel, resulting in several smaller parcels between the alignments and boundary.

2. From the Home tab > Create Design panel, expand Parcel > Parcel Creation Tools.



The Parcel Layout Tools toolbar appears.

3. Expand the toolbar by clicking the expansion chevron located at the end of the toolbar .
4. In the Parcel Sizing section, change the value of the following parameters by clicking in the Value column and typing in the new values if they aren't already set. Notice how the preview window changes to accommodate your preferences:

- Minimum Area: **10890.00** sq. ft. (1,012 m²)

- Minimum Frontage: **180.000'** (54.75 m)
- Use Minimum Frontage At Offset: **No**
- Frontage Offset: **25.000'** (10 m)
- Minimum Width: **75.000'** (25 m)
- Minimum Depth: **50.000'** (15 m)
- Use Maximum Depth: **No**
- Maximum Depth: (leave default value since this will not be used)
- Multiple Solution Preference: **Use Shortest Frontage**

5. In the Automatic Layout section, change the following parameters by clicking in the Value column and selecting the appropriate option from the drop-down menu, if it isn't already set:

- Automatic Mode: On
- Remainder Distribution: Redistribute Remainder



6. Click the Slide Line – Create tool. The Create Parcels – Layout dialog appears.

7. From the drop-down menus, select Subdivision Lots, Property, and Name Square Foot & Acres (Name Square Meter & Hectares) in the Site, Parcel Style, and Area Label Style selection boxes, respectively.

Leave the rest of the options set to their defaults.

8. Click OK to dismiss the dialog.

9. At the Select parcel to be subdivided or [Pick]: prompt, click the PROPERTY : 1 area label.

10. At the Select start point on frontage: prompt, use your Endpoint Osnap to pick the point of curvature along the ROW parcel segment for Property : 1 (see [Figure 5.27](#)). The point will show with the Osnap marker over it.

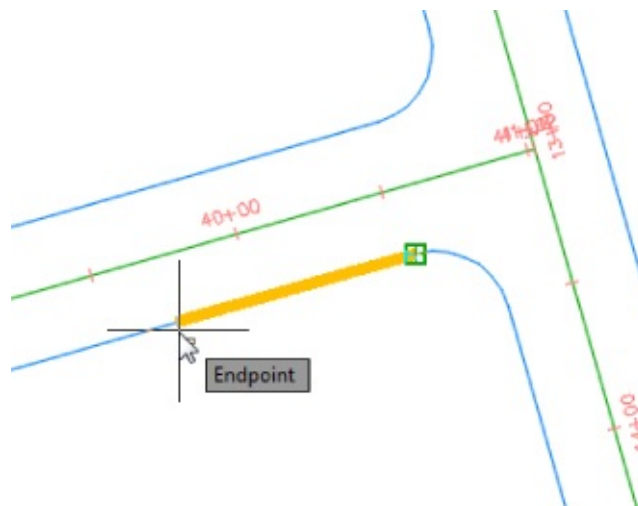


Figure 5.27 Pick the point of curvature along the ROW parcel segment highlighted by the Osnap marker.

The parcel jig appears.

1. Move your mouse slowly along the ROW parcel segment, and notice that the parcel jig follows the parcel segment.
2. At the `Select end point on frontage:` prompt, use your Endpoint Osnap to pick the point of curvature along the ROW parcel segment for Property : 1 (see [Figure 5.28](#)).

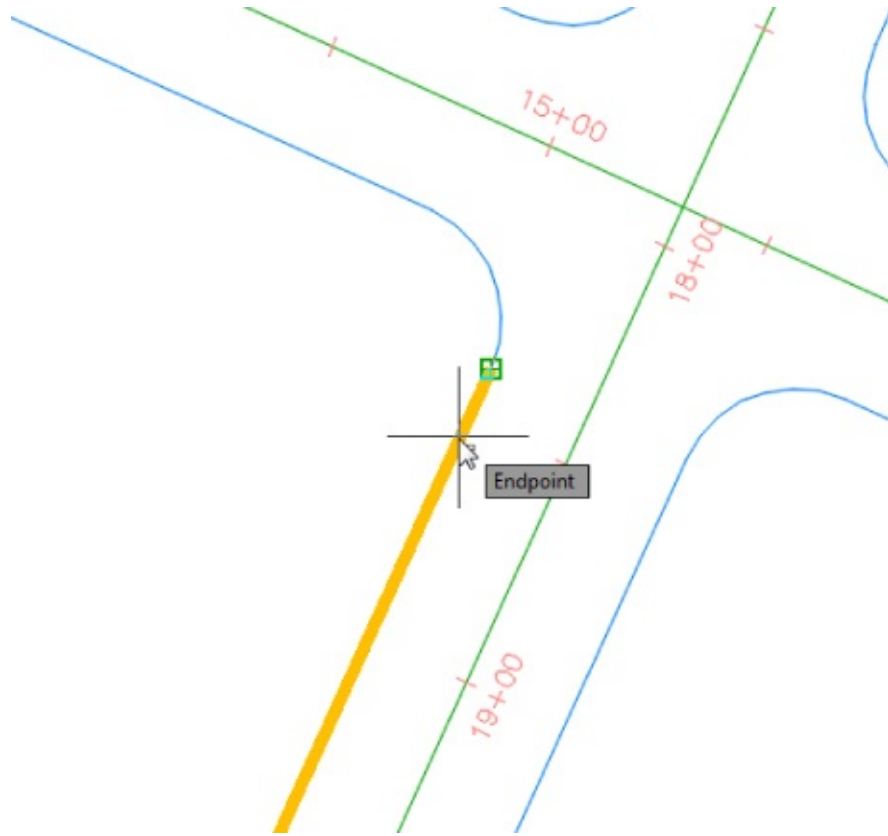


Figure 5.28 Allow the parcel-creation jig to follow the parcel segment, and then pick the point of curvature along the ROW parcel segment highlighted by the Osnap marker.

3. At the `Specify angle or [Bearing/azimuth]:` prompt, enter **90 ↵**.
Notice the preview (see [Figure 5.29](#)).



Figure 5.29 A preview of the results of the automatic parcel layout

- [4. At the Accept result? [Yes/No] <Yes>: prompt, press ↵ to accept the default, Yes.
- [5. At the Select parcel to be subdivided or [Pick]: prompt, press ↵.
- [6. Click the X to close the Parcel Layout Tools toolbar.

Your drawing should look similar to [Figure 5.30](#).

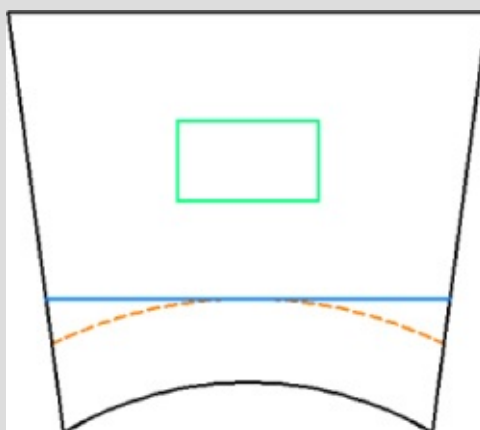


Figure 5.30 The automatically created lots

17. Save and close the drawing. If you would like to see what the drawing should look like at this point, you can open 0505_CreateSlide_FINISHED.dwg (0505_CreateSlide_METRIC_FINISHED.dwg), available from the book's website.

Curves and the Frontage Offset

In most cases, the frontage along a building setback is graphically represented as a straight line behind the setback. When you specify a minimum width along a frontage offset (the building setback line) in the Parcel Layout Tools dialog, and when the lot frontage is curved, the distance you enter is measured along the curve, as shown by the dashed line here.




In most cases, this result may be insignificant, but in a large development, the error could be the defining factor in your decision to add or subtract a parcel from the development.

Swing Line – Create Tool

The Swing Line – Create tool creates a “backward” attached parcel segment where the diamond-shaped grip appears not at the frontage but at a different location that you specify. The tool respects your minimum frontage, and it adjusts the frontage so it is larger, if necessary, in order to respect your default area. The Swing Line – Create tool is semiautomatic because it requires your input for the swing point location.

You may find this tool most useful around a cul-de-sac or in odd-shaped corners where you must hold frontage but have a lot of flexibility in the rear of the lot.

This exercise will lead you through using the Swing Line – Create tool to create lots:

1. Open the 0506_CreateSwing.dwg (0506_CreateSwing_METRIC.dwg) file, which you can download from this book's web page.
2. From the Home tab > Create Design panel, expand Parcel > Parcel Creation Tools.
The Parcel Layout Tools toolbar appears.
3. Expand the toolbar by clicking the expansion chevron located at the end of the toolbar.
4. In the Parcel Sizing section, change the value of the following parameters by clicking in the Value column and typing in the new values if they aren't already set. Notice how the preview window changes to accommodate your preferences:
 - Minimum Area: **10890.00** sq. ft. (**1,012** m²)
 - Minimum Frontage: **180.000'** (**54.75** m)
 - Use Minimum Frontage At Offset: **No**
 - Frontage Offset: **25.000'** (**10** m)
 - Minimum Width: **75.000'** (**25** m)
 - Minimum Depth: **50.000'** (**15** m)
 - Use Maximum Depth: **No**
 - Maximum Depth: (leave default value since this will not be used)
 - Multiple Solution Preference: **Use Shortest Frontage**
5. In the Automatic Layout section, change the following parameters by clicking in the Value column and selecting the appropriate option from the drop-down menu, if it isn't already set:
 - Automatic Mode: On
 - Remainder Distribution: Redistribute Remainder
6.  Click the Swing Line – Create tool. The Create Parcels – Layout dialog appears.
7. From the drop-down menus, select Subdivision Lots, Property, and Name Square Foot & Acres (Name Square Meter & Hectares) in the Site, Parcel Style, and Area Label Style selection boxes, respectively.
Leave the rest of the options set to their defaults.
8. Click OK to dismiss the dialog.

9. At the Select parcel to be subdivided or [Pick]: prompt, click the Property : 22 area label.
10. At the Select start point on frontage: prompt, use your Endpoint Osnap to pick the point on the curve along the ROW parcel segment for Property : 22 on its southeast corner (see [Figure 5.31](#)). The point will show with the Osnap marker over it.

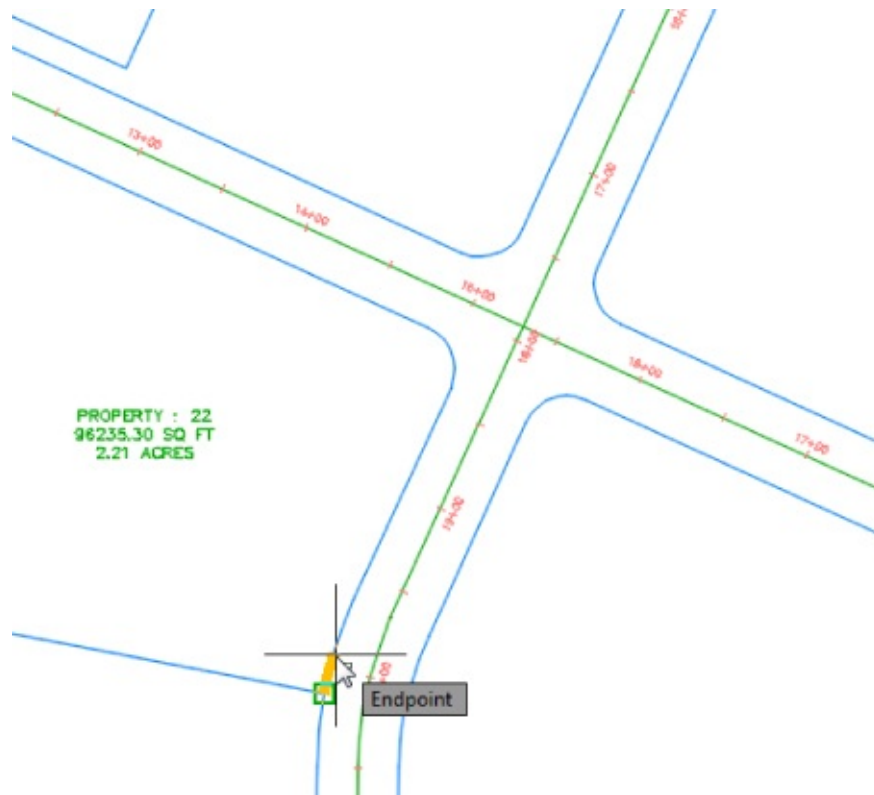


Figure 5.31 Pick the point on the curve on the parcel's southeast corner, as highlighted by the Osnap marker along the ROW parcel segment.

The parcel jig appears.

11. Move your mouse slowly along the ROW parcel segment, and notice that the parcel jig follows the parcel segment.
12. At the Select end point on frontage: prompt, use your Endpoint Osnap to pick the end point along the ROW parcel segment for Property : 22 on its northwest corner (see [Figure 5.32](#))

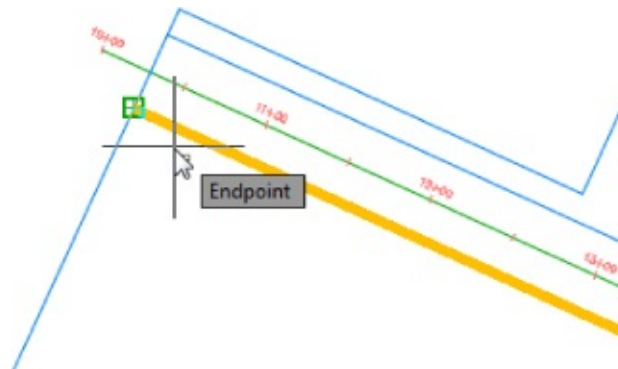


Figure 5.32 Allow the parcel-creation jig to follow the parcel segment, and then pick the end point as highlighted by the Osnap marker on the ROW parcel segment.

13. At the Specify swing point prompt, select the interior corner of the parcel, as shown in [Figure 5.33](#), and highlighted by the Osnap marker.

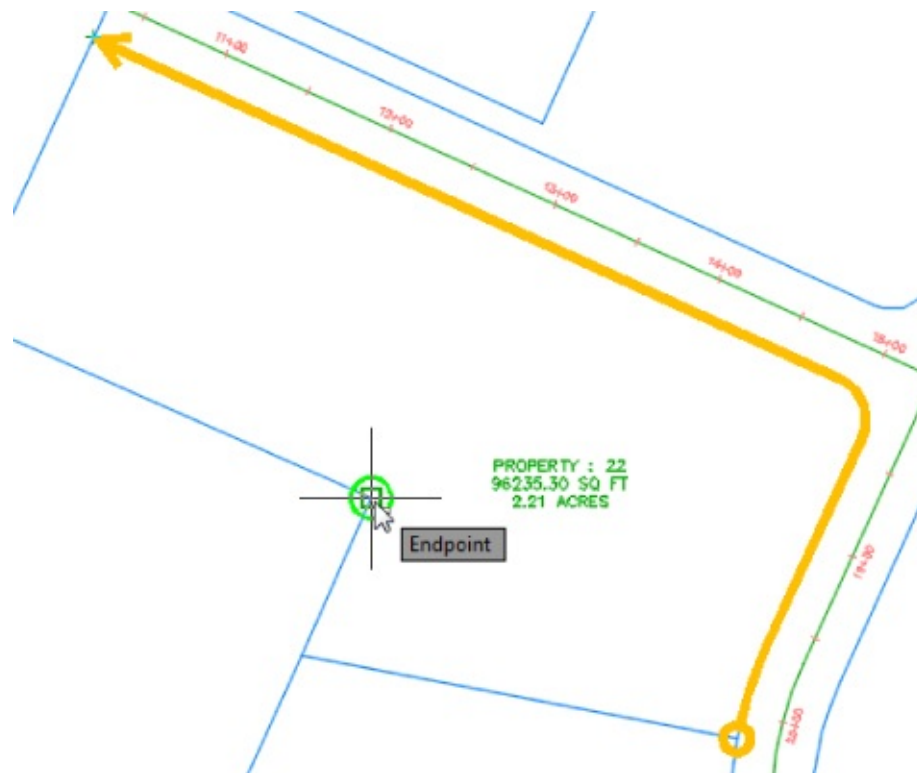


Figure 5.33 Swing point selection

14. At the Accept result? [Yes/No] <Yes>: prompt, press \downarrow to accept the default, Yes.
15. At the Select parcel to be subdivided or [Pick]: prompt, press \downarrow .
16. Click the X to close the Parcel Layout Tools toolbar.

Your drawing should look similar to [Figure 5.34](#).

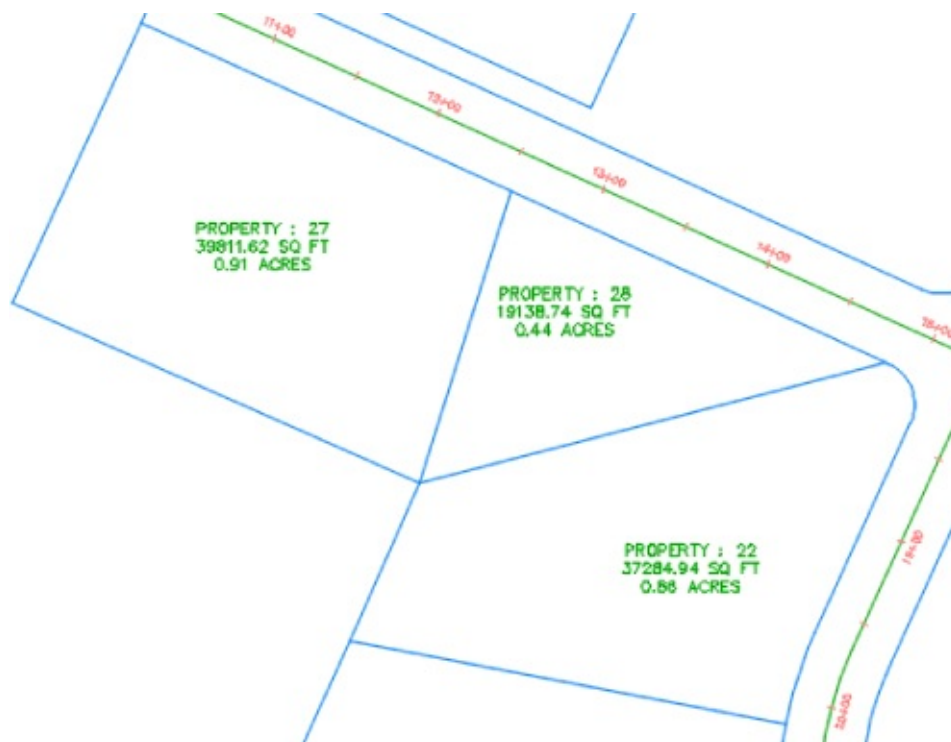


Figure 5.34 The automatically created lots

17. Save and close the drawing. If you would like to see what the drawing should look like at this point, you can open 0506_CreateSwing_FINISHED.dwg (0506_CreateSwing_METRIC_FINISHED.dwg), available from the book's website.

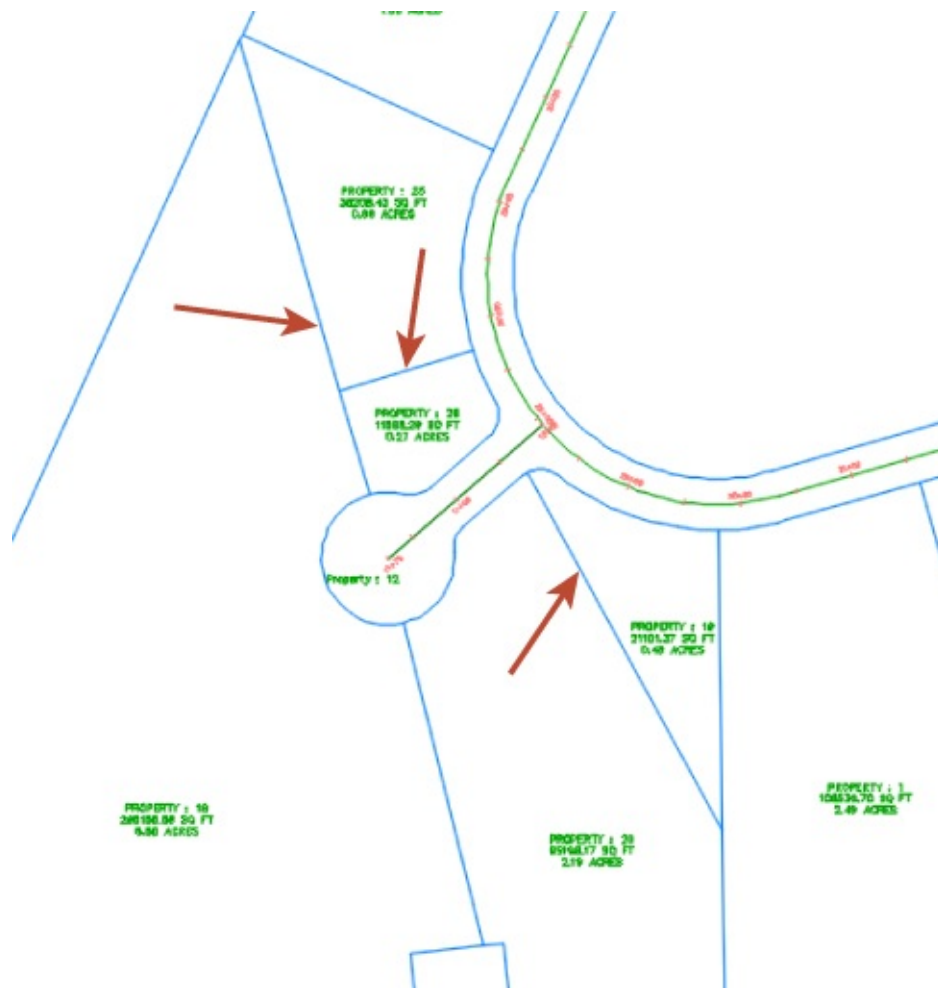
Free Form Create Tool

A site plan is more than just single-family lots. Areas are usually dedicated for open space, stormwater-management facilities, parks, and public utility lots. The Free Form Create tool can be useful when you're creating these types of parcels. This tool, like the precise sizing tools, creates an attached parcel segment with the special diamond-shaped grips.

NOTE: The lot numbers were designed by the authors for the exercises. Your lot numbers may vary from those shown in the exercises.

In the following exercise, you'll use the Free Form Create tool to create a new parcel:

1. Open the 0507_CreateFreeForm.dwg (0507_CreateFreeForm_METRIC.dwg) file.
Note that this drawing contains a series of subdivision lots.
2. Zoom to Property : 18.
3. Use the AutoCAD Erase command to delete the parcel lines highlighted in [Figure 5.35](#).



[Figure 5.35](#) Delete the highlighted parcel lines.

Because the order in which the parcel segments are erased will determine the parcel numbers, your parcel numbers may vary from those created by the authors.

The parcels readjust but the resulting lot is now much larger than needed. Let's add a line using the Free Form Create tool. You will explore deleting parcel lines in more depth later in this chapter.



4. From the Home tab > Create Design panel, select Parcel > Parcel Creation Tools.

5. On the Parcel Layout Tools toolbar, select the Free Form Create tool.

The Create Parcels – Layout dialog appears.

6. Select Subdivision Lots, Property and Name Square Foot & Acres (Name Square Meter & Hectares) from the drop-down menus in the Site, Parcel Style, and Area Label Style selection boxes, respectively.

Keep the default values for the remaining options.

7. Click OK to dismiss the dialog.

8. Slide the Free Form Create attachment point along the frontage of the Property : 18 area.

9. At the Select attachment point: prompt, pick near the point shown in [Figure 5.36](#).

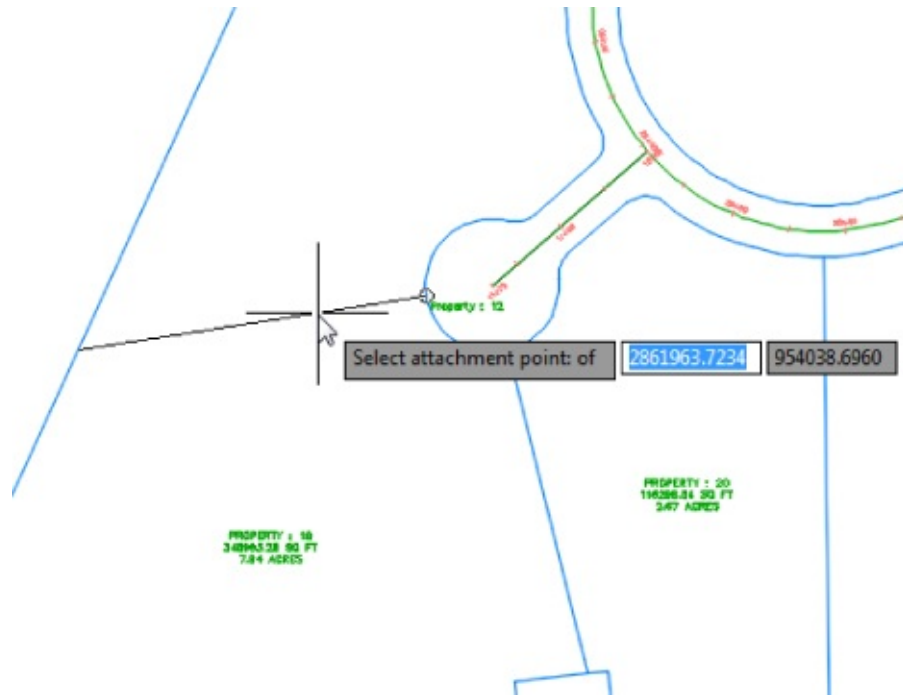


Figure 5.36 Use the Free Form Create tool to select an attachment point.

10. At the Specify lot line direction:(ENTER for perpendicular) or [Bearing/aZimuth]: prompt, press ↵ to specify a perpendicular lot line direction.

A new parcel segment is created perpendicular to the ROW parcel segment, as shown in [Figure 5.37](#) (your resulting lot numbers may differ). Note that a new lot parcel has formed.

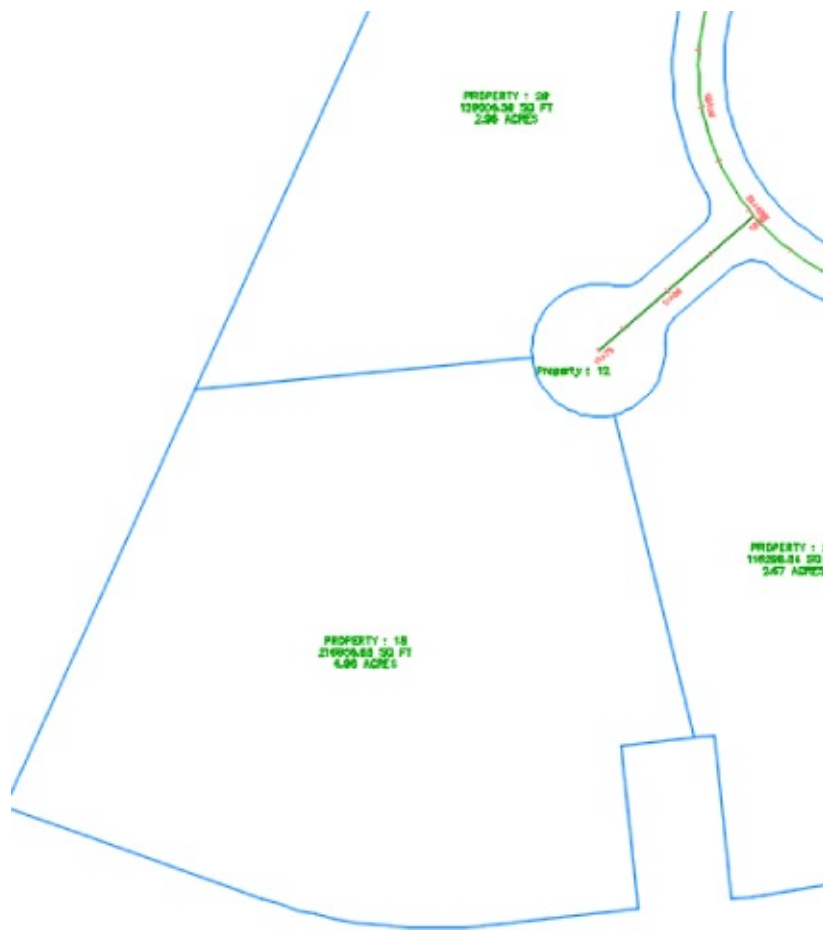


Figure 5.37 A new parcel created using the Free Form Create tool

Although most parcel lines are created perpendicular to the right-of-way line, please note that you can use the Free Form Create tool to attach a new parcel segment to any parcel segment in the drawing.

1. Press **↵** to exit the Free Form Create command.
2. Click the X or press Esc to exit the Parcel Layout Tools toolbar.
3. Pick the new parcel segment so that you see its diamond-shaped grip.
4. Grab the grip, and slide the segment along the ROW parcel segment (see [Figure 5.38](#)).

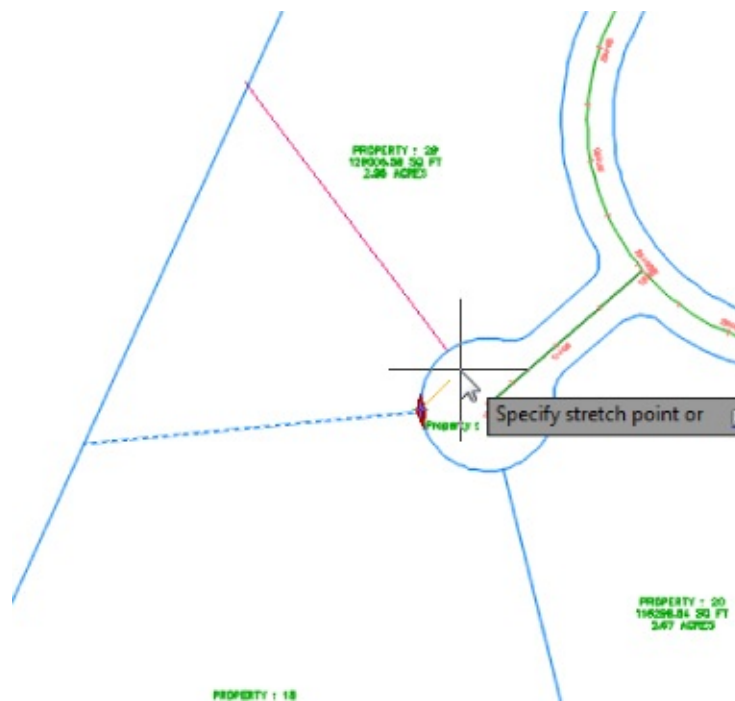


Figure 5.38 Sliding an attached parcel segment

Notice that when you place the parcel segment at a new location, the segment endpoint snaps back to the rear parcel segment. This is typical behavior for an attached parcel segment.

15. Save and close the drawing. If you would like to see what the drawing should look like at this point, you can open 0507_CreateFreeForm_FINISHED.dwg (0507_CreateFreeForm_METRIC_FINISHED.dwg), available from the book's website.

Editing Parcels by Deleting Parcel Segments

One of the most powerful aspects of Civil 3D parcels is the ability to perform many iterations of a site plan design. Typically, this design process involves creating a series of parcels and then deleting them to make room for iterations with different parameters or deleting certain segments to make room for easements, public utility lots, and more.

You can delete parcel segments using the AutoCAD Erase tool as shown in the previous exercise, or you can use the Delete Sub-Entity tool on the Parcel Layout Tools toolbar, a tool you used in the cleanup of the cul-de-sac exercise.

It's important to understand the difference between these two methods. The AutoCAD Erase tool behaves as follows:

- If a series of parcel segments was originally created from a polyline (or similar parcel layout tools, such as the Tangent-Tangent With No Curves tool), the AutoCAD Erase tool erases the entire series of segments (see [Figure 5.39](#)).

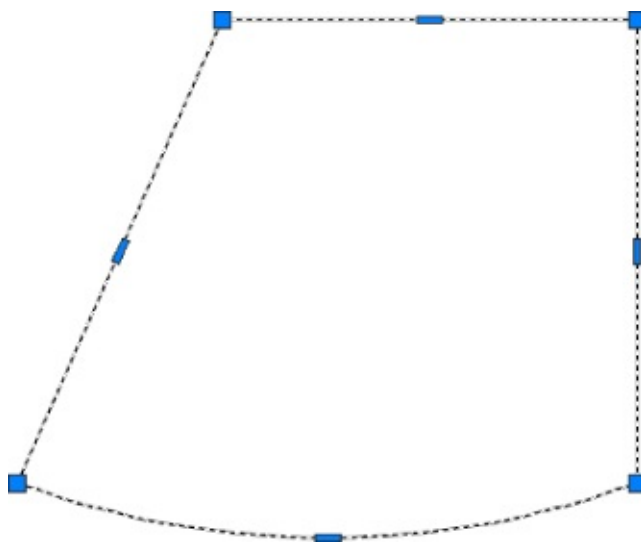


Figure 5.39 The highlighted segments will be erased after using the AutoCAD Erase tool.

- If a series of parcel segments was originally created using lines or arcs (or similar parcel layout tools, such as the precise sizing tools), then AutoCAD Erase erases each segment individually (see [Figure 5.40](#)).

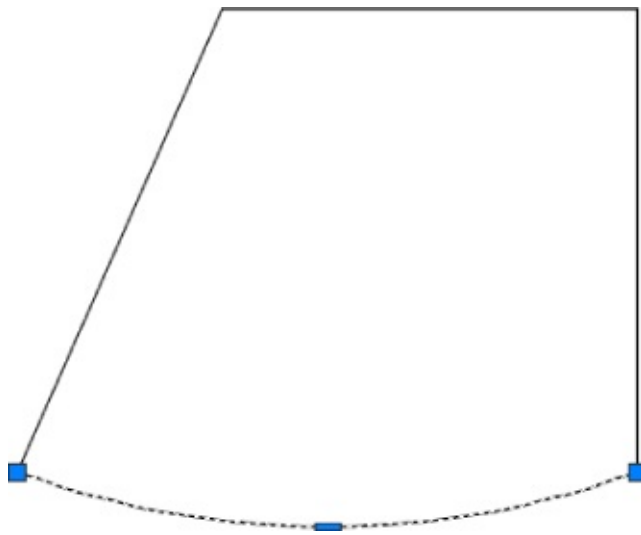


Figure 5.40 The highlighted segment will be erased.

The Delete Sub-Entity tool acts more like the AutoCAD Trim tool. The Delete Sub-Entity tool erases only the parcel segments between parcel vertices. For example, if Parcel # 69, as shown in [Figure 5.41](#), must be absorbed into Parcel # 23 based on the fact that the parcel changes ownership, you'd want to erase only the segment on the east of Parcel # 23 and not the entire segment shown previously in [Figure 5.40](#). If you look at the Parcel #23, you will notice that it is made up of a series of segments. If we had tried to use the AutoCAD Erase command, then the whole series would have been deleted, but since we want only the east segment, then the Delete Sub-Entity tool will accomplish that.

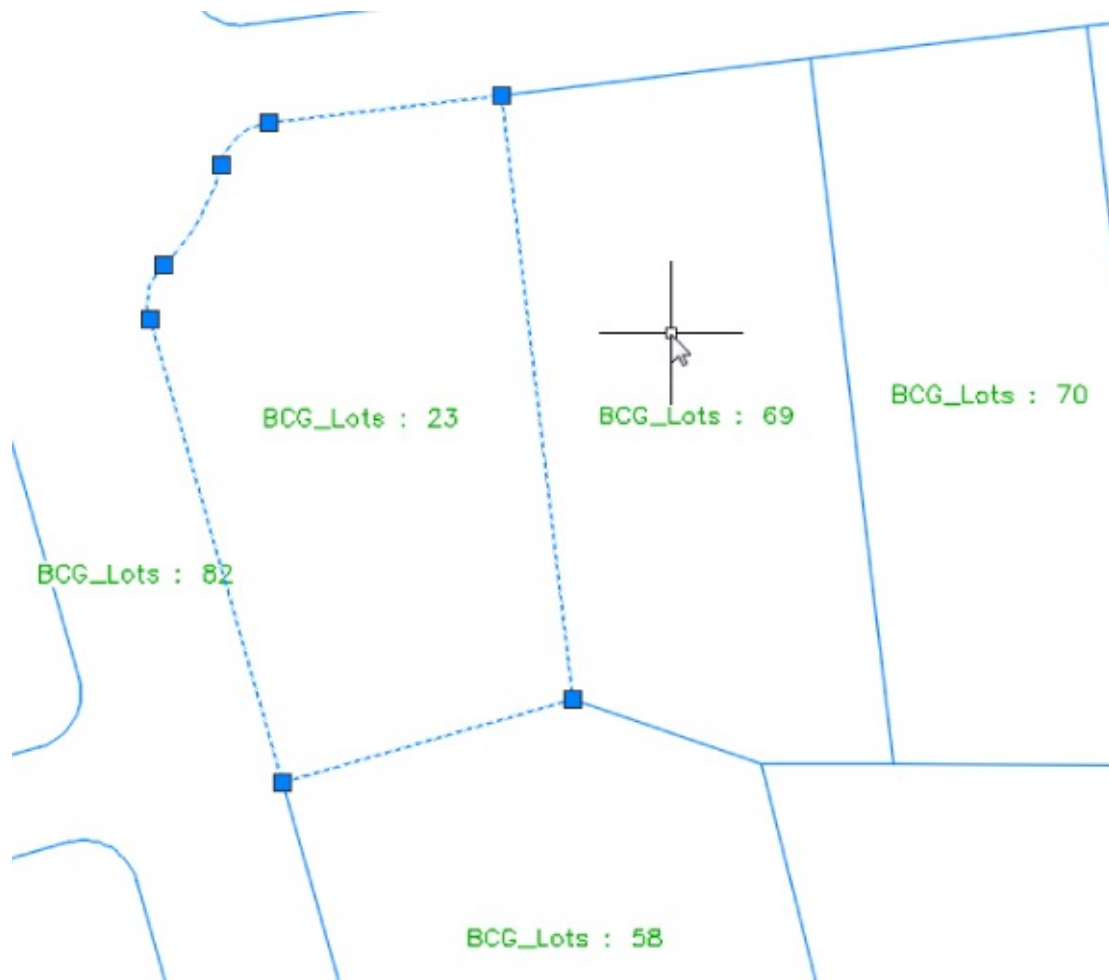


Figure 5.41 Using the Delete Sub-Entity tool to erase the east parcel segment for Parcel # 23

As an alternative to launching the Parcel Creation tools by choosing the Home tab > Create Ground Data panel > Parcel > Parcel Creation Tools, you can access them by selecting the area label of a parcel and then, from the Parcel contextual tab > Modify panel, selecting Parcel Layout Tools. [Figure 5.42](#) shows the result of this deletion.

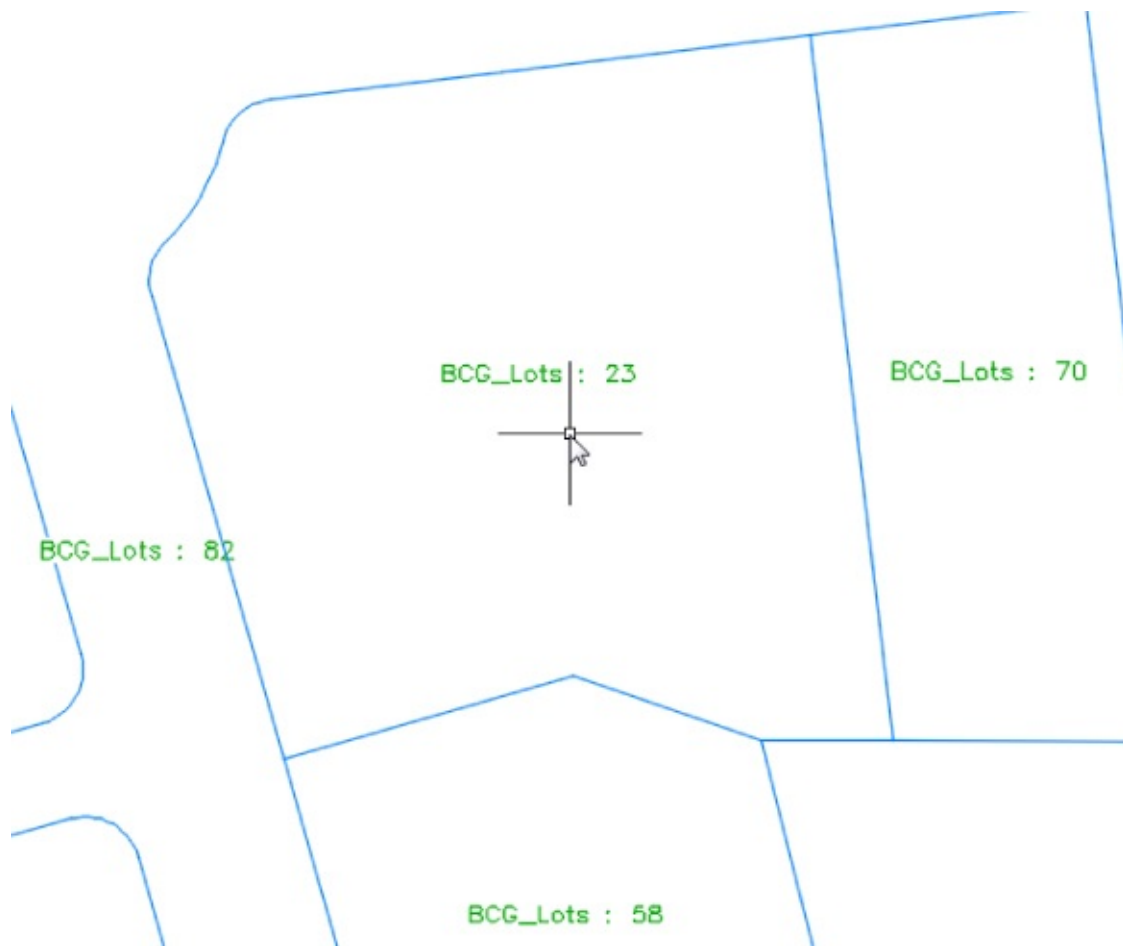


Figure 5.42 The east lot line for Parcel # 23 was erased using the Delete Sub-Entity tool, thus enlarging this parcel with the new addition.

Best Practices for Parcel Creation

Now that you have an understanding of how objects in a site interact and you've had some practice creating and editing parcels in a variety of ways, we'll take a deeper look at how parcels must be constructed to achieve topology stability, predictable labeling, and desired parcel interaction.

Forming Parcels from Segments

Earlier in this chapter, you saw that parcels are created only when parcel segments form a closed area (see [Figure 5.43](#)).



Figure 5.43 A parcel is created when parcel segments form a closed area.

Parcels must always close. Whether you draw AutoCAD lines and use the Create Parcel From Objects

menu command or use the parcel segment creation tools, a parcel won't form until there is an enclosed polygon. [Figure 5.44](#) shows four parcel segments that don't close; therefore, no parcel has been formed.

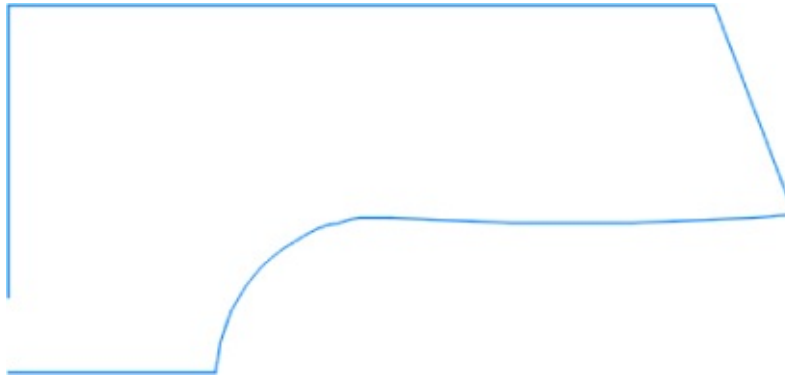


Figure 5.44 No parcel will be formed if parcel segments don't completely enclose an area.

There are times in surveying and engineering when parcels of land don't necessarily close when created from legal descriptions. In this case, you must work with your surveyor to perform an adjustment or find some other solution to create a closed polygon.

You also saw that even though parcels can't be erased, if you erase the appropriate parcel segments, the area contained within a parcel is assimilated into neighboring parcels. Remember that you can delete parcels if you move them to a new site and delete that site. This is an easy way to delete those parcels that are not needed in the drawing.

Parcels Reacting to Site Objects

Parcels require only one parcel segment to divide them from their neighbor (see [Figure 5.45](#)). This behavior eliminates the need for duplicate segments between parcels, and duplicate segments must be avoided.



Figure 5.45 Two parcels, with one parcel segment between them

As you saw in the section on site interaction, parcels understand their relationships to one another. When you create a single parcel segment between two subdivision lots, you have the ability to move one line and affect two parcels. [Figure 5.46](#) shows the moved parcel segment from [Figure 5.45](#) once the parcel segment between them has been shifted to the right. Note that both areas change in response.

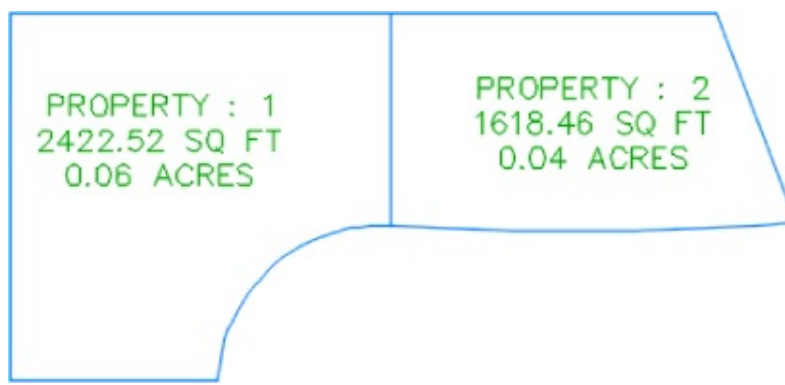


Figure 5.46 Moving one parcel segment affects the area of two parcels.

A mistake that many people new to Civil 3D make is to create parcels from closed polylines, which results in a duplicate segment between parcels. [Figure 5.47](#) shows two parcels created from two closed polylines. These two parcels may appear identical to the two seen in the previous example, because they were both created from a closed polyline rectangle; however, the segment between them is actually two segments. You can notice that in the figure when the Selection Cycling toggle (Ctrl+W) is enabled.

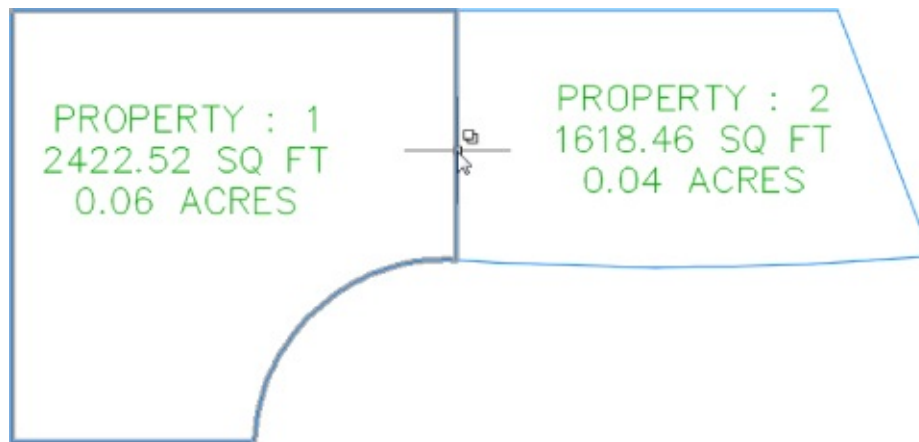


Figure 5.47 Adjacent parcels created from closed polylines create overlapping or duplicate segments.

The duplicate segment becomes apparent when you attempt to grip-edit the parcel segments. Moving one vertex from the common lot line, as shown in [Figure 5.48](#), reveals the second segment. Also note that a sliver parcel is formed. Duplicate site geometry objects and sliver parcels make it difficult for Civil 3D to solve the site topology and can cause unexpected parcel behavior.

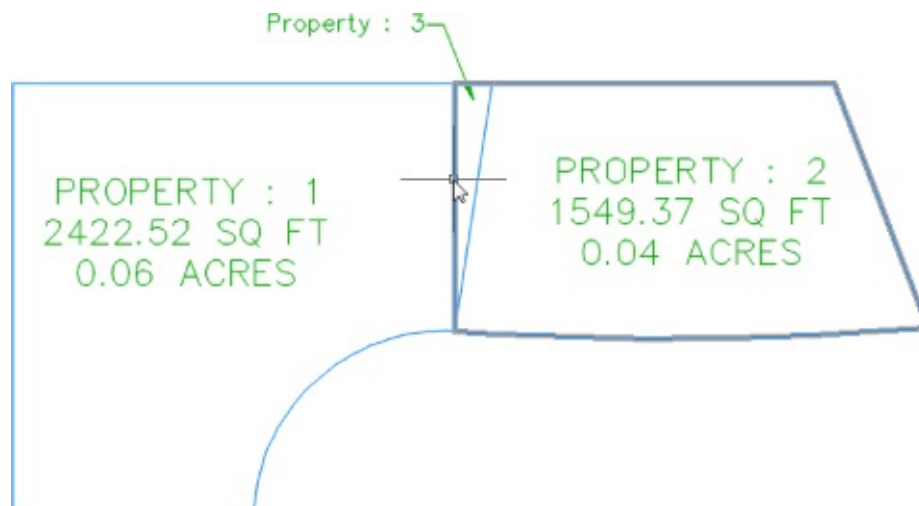


Figure 5.48 Duplicate segments become apparent when they're grip-edited and a sliver parcel is formed.

Creating a subdivision plat of parcels this way almost guarantees that your labeling won't perform

properly and could lead to inaccurate data.

Parcels and LandXML

The best method for importing lot data from other programs such as Land Desktop is LandXML. Parcels imported from LandXML will automatically clean up duplicate lines to prevent some of the pitfalls mentioned in this section.

Parcels form to fill the space contained by the original outer boundary. You should always begin a parcel-division project with an outer boundary of some sort (see [Figure 5.49](#)).

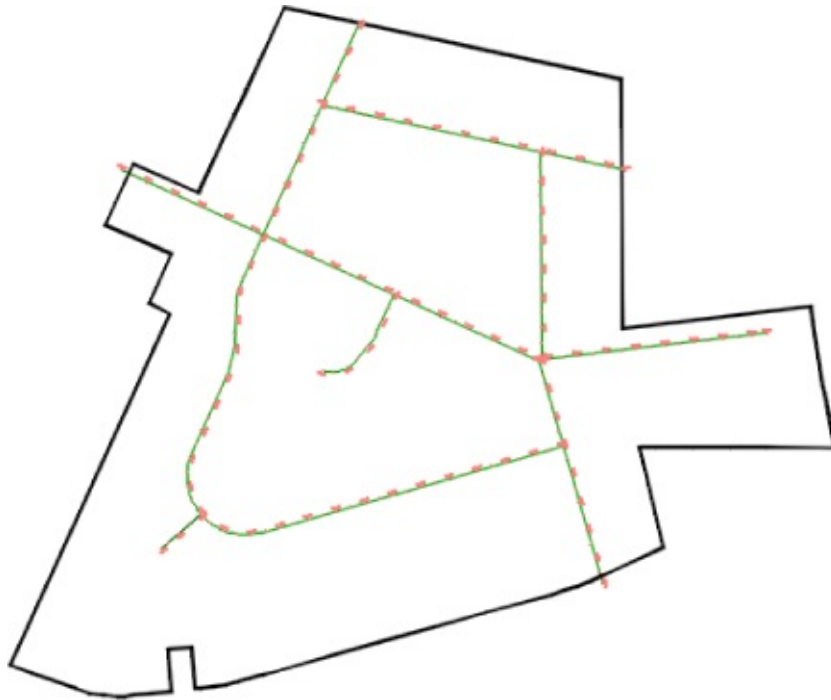


Figure 5.49 An outer boundary parcel with alignments that are not part of any site.

You can then move road centerline alignments to the site, which divides the outer boundary parcel, as shown in [Figure 5.50](#).

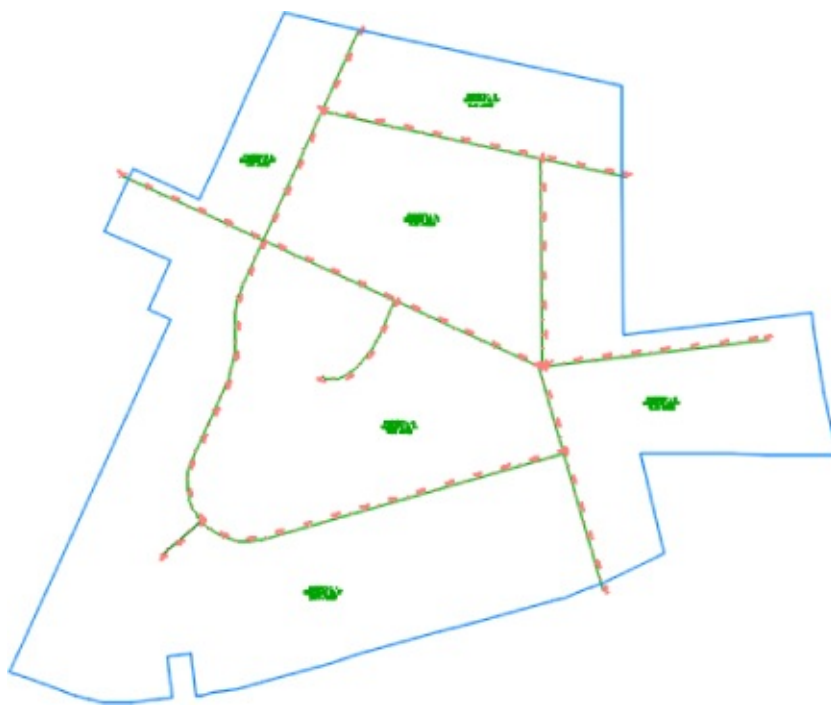


Figure 5.50 Alignments moved to the same site as the boundary parcel divide the boundary parcel.

It's important to note that the boundary parcel no longer exists intact. As you subdivide this site, Parcel 1 is continually reallocated with every division. As road ROW and subdivision lots are formed from parcel segments, more parcels are created. Every bit of space that was contained in the original outer boundary is accounted for in the mesh of newly formed parcels (see [Figure 5.51](#)).



Figure 5.51 The total area of parcels contained within the original boundary is equal to the original boundary area.

From now on, you'll consider ROW, wetlands, parkland, and open space areas as parcels, even if you didn't before. You can make custom label styles to annotate these parcels however you like, including a “no show” or none area label.



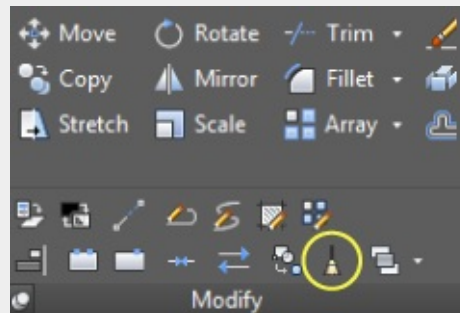
Real World Scenario

Overkill Is Just Right for Parcels


Frequently, parcel data comes from GIS sources or from existing plats. The quality of this data can vary, making a direct conversion to Civil 3D parcels difficult.

An excellent tool for ensuring that the conversion of these lines, arcs, and polylines goes smoothly is the Overkill command. Overkill is an AutoCAD command that will clean up drawings based on the options and tolerance that you choose.

You can find the Overkill command on the Home tab > Modify panel flyout.



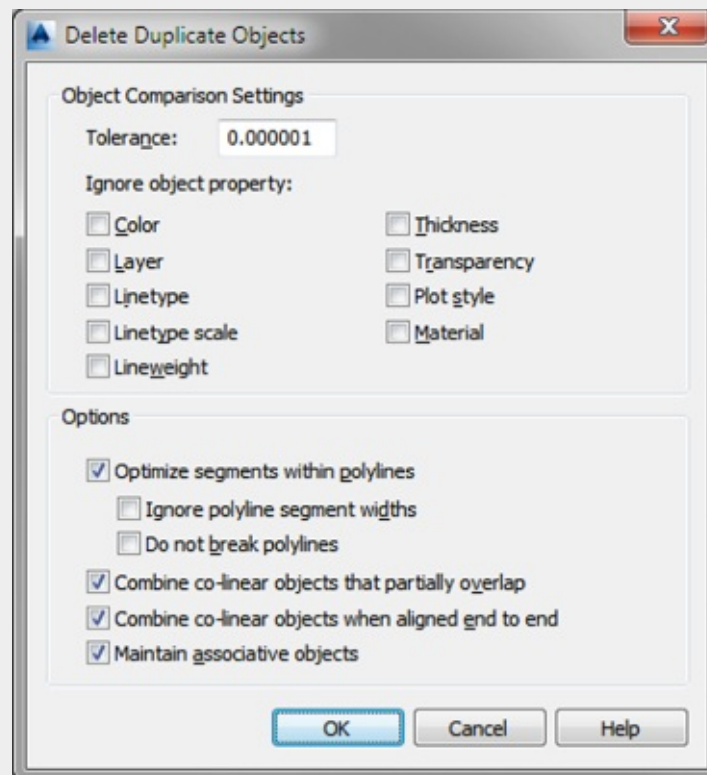Once you have selected the objects you want the Overkill command to analyze, you are prompted to choose options that determine how extensive the cleanup will be. The default settings, shown here, are rather conservative.




The Tolerance setting determines how close two lines can be before they are considered to be duplicates. The higher this value, the more overlap and duplicates the command will find.


The check boxes indicate properties Overkill will disregard when performing its edits. With all of the check boxes clear, the objects are not considered duplicates unless all of the listed properties

match.

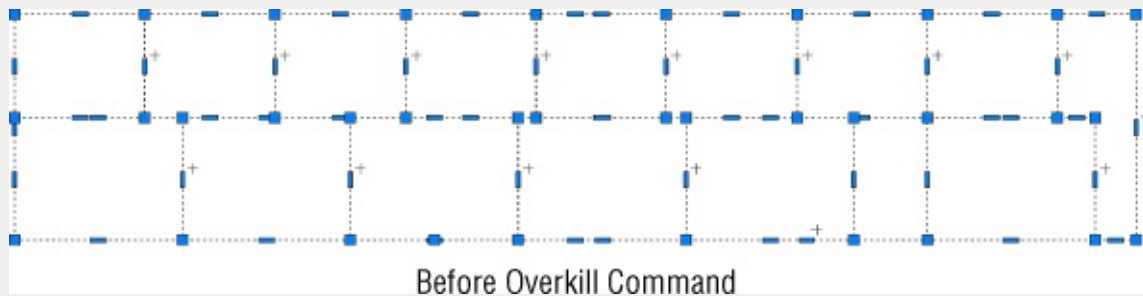Before you run the Overkill command, a selected batch of lines slated to become parcels show many extraneous vertices. The plus signs next to the grips indicate where multiple grips overlap.



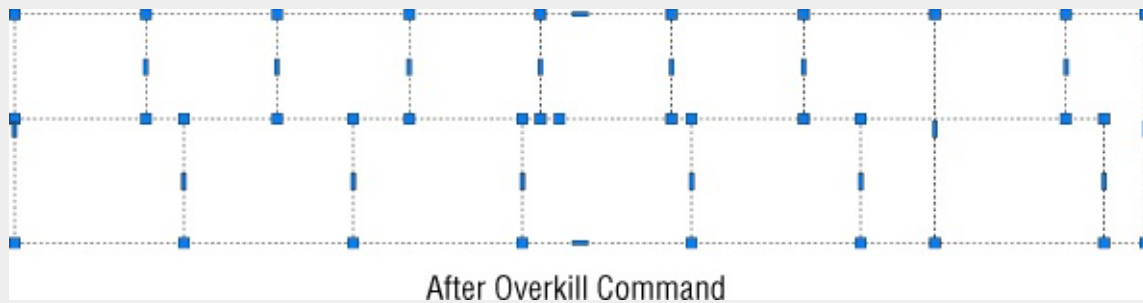After you run the Overkill command, the selection shows fewer visible grips and no indication that there are overlapping objects.



As you can see, the Overkill command can save you valuable time cleaning up drawings.

Constructing Parcel Segments with the Appropriate Vertices

Parcel segments should have natural vertices only where necessary and split-created vertices at all other intersections. A natural vertex, or point of intersection (PI), can be identified by picking a line, polyline, or parcel segment and noting the location of the grips (see [Figure 5.52](#)).

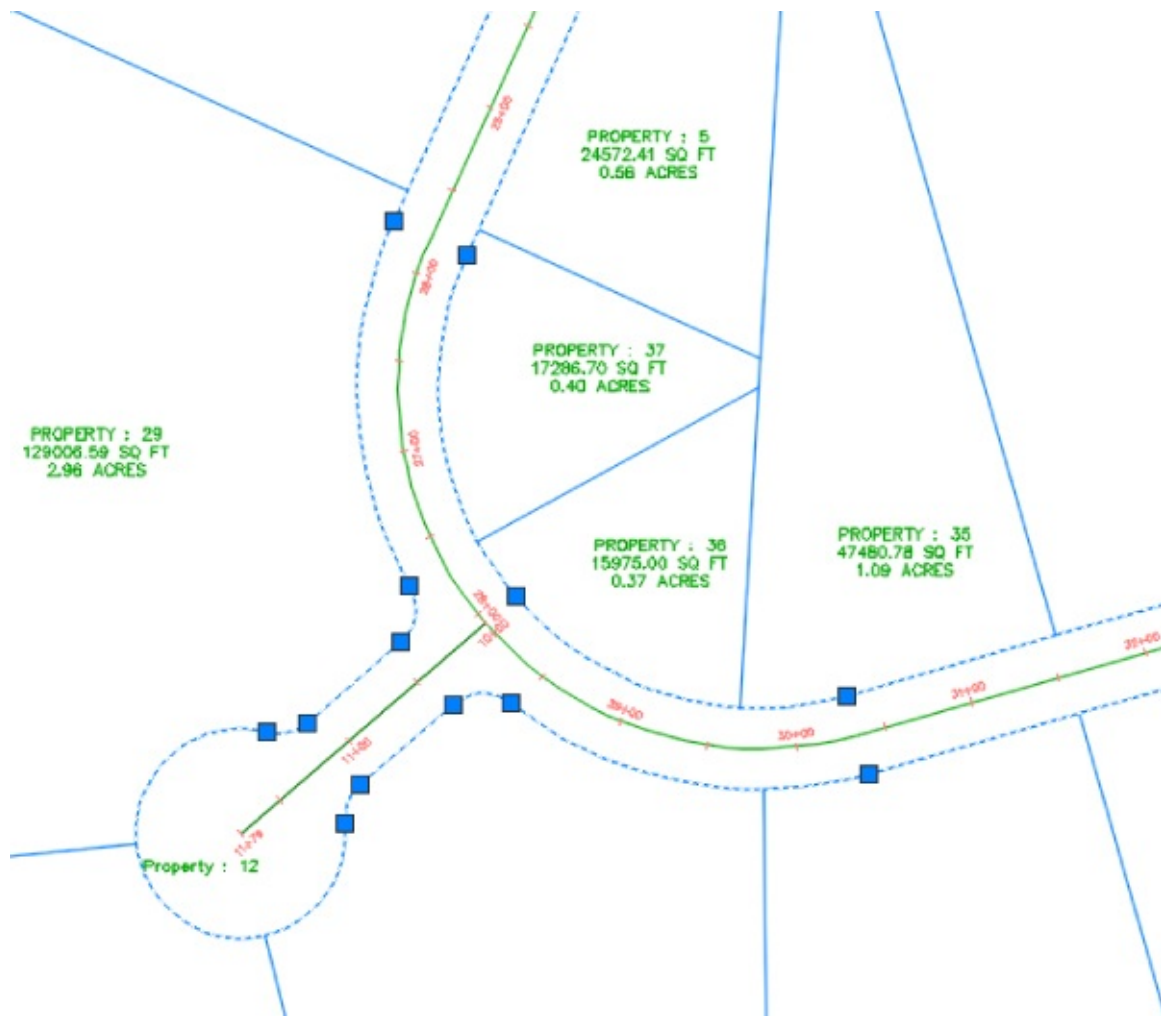


Figure 5.52 Natural vertices on a parcel segment

A split-created vertex occurs when two parcel segments touch or cross each other. Note that in [Figure 5.53](#), the parcel segment doesn't show a grip even where each individual lot line touches the ROW parcel.

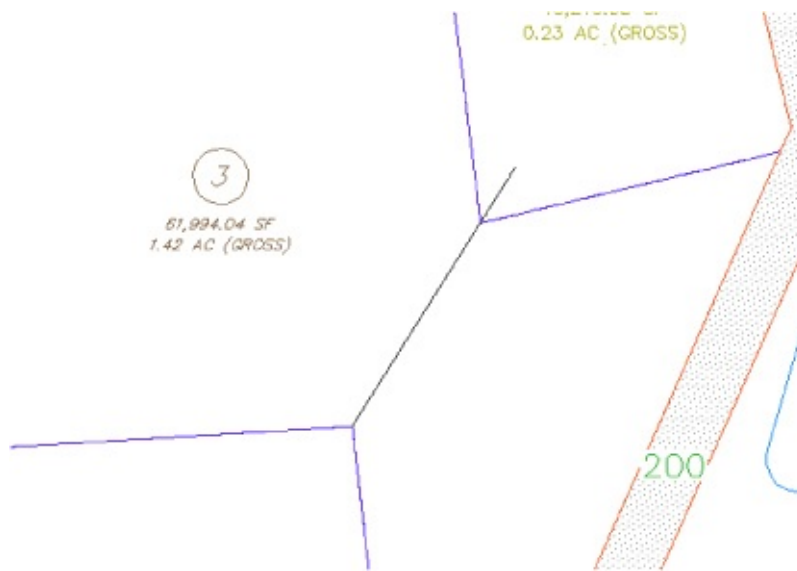


Figure 5.54 Overhanging segment

Labeling Parcel Areas

A parcel area label is placed at the parcel centroid by default, and it refers to the parcel in its entirety. It doesn't necessarily have to include the actual area of the parcel. When asked to pick a parcel, you pick the area label; however, this behavior is valid only for Civil 3D commands. For example, if you pick a parcel area label and invoke the AutoCAD Erase command, the parcel will not be erased.


Area labels can be customized to suit your needs. [Figure 5.55](#) shows a variety of customized area labels.



Figure 5.55 Sample area labels

Area labels often include the parcel name or number, and often the names and/or numbers need to be changed after the parcels are placed in the drawing. To accomplish this, you can select a parcel and then on the Parcel contextual tab > Modify panel choose Renumber/Rename.

The following exercise will teach you how to renumber a series of parcels:


1. Open 0508_RenumberParcels.dwg (0508_RenumberParcels_METRIC.dwg). Note that this drawing already contains some subdivision lot parcels.
2.  Near the southeast corner of the project, select Property : 13. On the Parcel contextual tab > Modify panel, select Renumber/Rename. The Renumber/Rename Parcels dialog appears.

3. In the Renumber/Rename Parcels dialog, make sure Subdivision Lots is selected from the drop-down menu in the Site selection box and that the Renumber radio button is selected. Change the value of the Starting Number selection box to **100**. Click OK.
4. At the Specify start point or [Polylines/Site]: prompt, pick a point on the screen anywhere inside the Property : 13 parcel, which will become your new Property: 100 parcel at the end of the command.
5. At the End point or [Undo]: prompt, pick a point on the screen anywhere inside the Property : 18 parcel, almost as if you were drawing a line; then pick a point inside Property : 22 and end by picking a point inside the Property : 27. Press ↵ to complete choosing parcels. Press ↵ again to end the command.

Note that your parcels have been renumbered from 100 through 114.

6. Save the drawing but keep it open for the next exercise. If you would like to see what the drawing should look like at this point, you can open 0508_RenumberParcels_FINISHED.dwg (0508_RenumberParcels_METRIC_FINISHED.dwg), available from the book's website.

The next exercise will lead you through one method of changing an area label using the Edit Parcel Properties dialog:

1. Continue working in the 0508_RenumberParcels.dwg (0508_RenumberParcels_METRIC.dwg) file, or you can open 0508_RenumberParcels_FINISHED.dwg (0508_RenumberParcels_METRIC_FINISHED.dwg), available from the book's website.
2.  Select Property : 100 and then on the Parcel contextual tab ➤ Modify panel, select Multiple Parcel Properties.
3. At the Specify start point or [Polylines/All/Site]: prompt, pick a point on the screen inside of Property : 100 close to the middle of the parcel.
4. At the End point or [Undo]: prompt, pick a point on the screen inside Property : 107 close to the middle of this parcel; then end by clicking inside Property: 108 close to the middle of this parcel using the same technique that you used in steps 4 and 5 of the previous exercise. This line should cross sequentially only parcels 100–108.
5. Press ↵ to complete parcel selection, and press ↵ again to open the Edit Parcel Properties dialog.
6. In the Area Selection Label Style portion of the Edit Parcel Properties dialog, use the drop-down menu to select the Parcel Number area label style, as shown in [Figure 5.56](#).

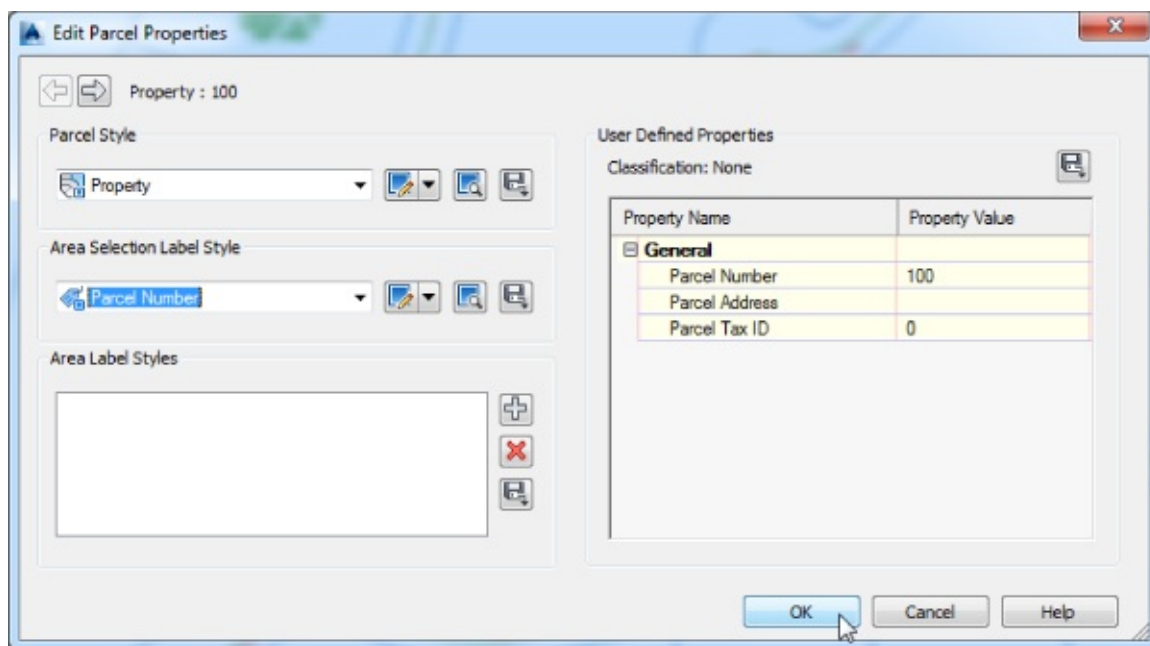


Figure 5.56 The Edit Parcel Properties dialog



7. Click the Apply To All Parcels button to the right of the Parcel Number listing.
8. Click Yes in the dialog displaying the question “Apply the area selection label style to the 9 selected parcels?”
9. Click OK to exit the Edit Parcel Properties dialog.

The nine parcels now have parcel area labels that call out numbers only. Note that you could also use this interface to add a second area label to certain parcels by clicking the plus sign in the Area Label Styles section of the Edit Parcel Properties dialog.

10. Save the drawing but keep it open for the next exercise. If you would like to see what the drawing should look like at this point, you can open 0508_ChangeMultipleLabels_FINISHED.dwg (0508_ChangeMultipleLabels_METRIC_FINISHED.dwg), available from the book's website.

This section's final exercise will show you how to use Prospector to change a group of parcel area labels at the same time:

1. Continue working in the previous file or open the 0508_ChangeMultipleLabels_FINISHED.dwg (0508_ChangeMultipleLabels_METRIC_FINISHED.dwg) file, available on the book's website.
2. In Prospector, expand Sites ► Subdivision Lots and select the Parcels collection.
3. In the expanded listing hold down the Ctrl key, and select all of the lots from Property : 109 to Property : 114.
4. Release the Ctrl key, and your parcels should remain selected.
5. Slide over to the Area Label Style column, right-click the column header, and select Edit (see [Figure 5.57](#)).

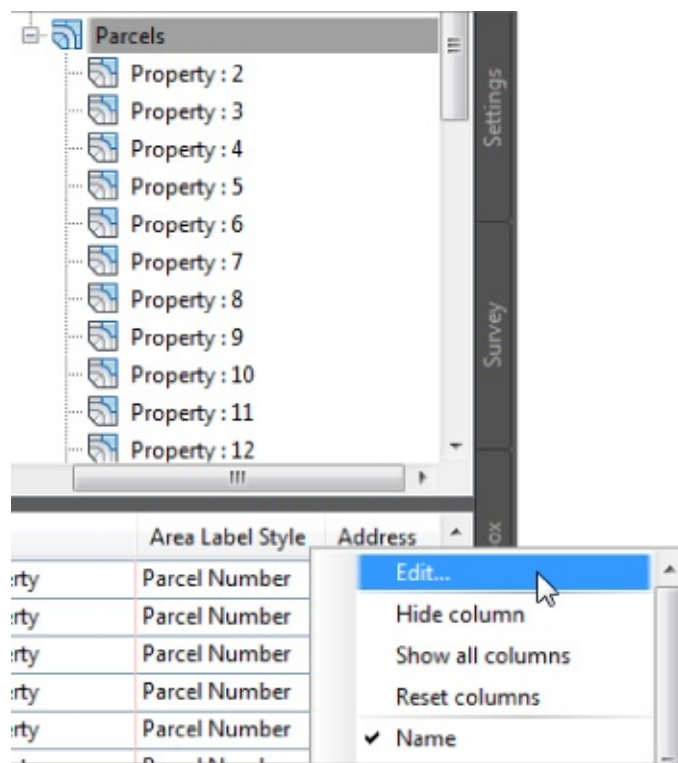


Figure 5.57 Right-click the Area Label Style column header and select Edit.

6. In the Select Label Style dialog, select Parcel Name from the drop-down menu in the Label Style selection box.
7. Click OK to dismiss the dialog.

The drawing will process for a moment.

8. Once the processing is finished, minimize Prospector and inspect your parcels.

All the selected parcels should now have the Parcel Name area label style.

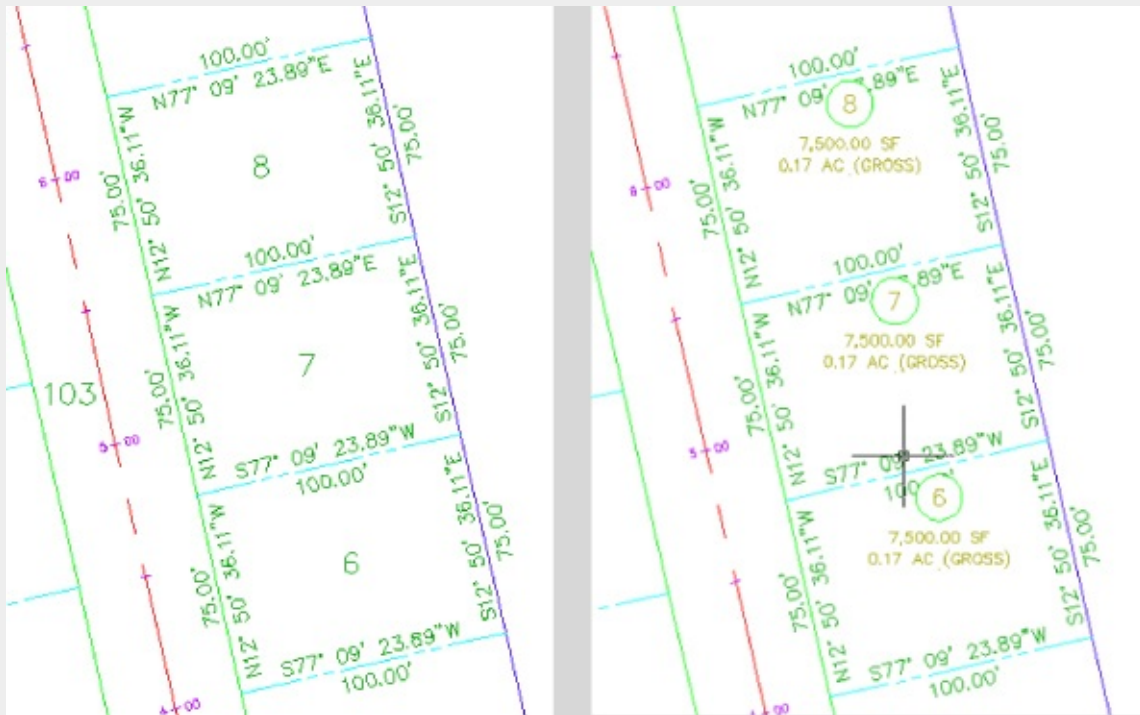
9. Save and close the drawing. If you would like to see what the drawing should look like at this point, you can open 0508_ChangeAreaLabel_FINISHED.dwg (0508_ChangeAreaLabel_METRIC_FINISHED.dwg), available from the book's website.



Real World Scenario

What If the Area Label Needs to Be Split onto Two Layers?

You may have a few different types of plans that show parcels. Because it would be awkward to have to change the parcel area label style before you plot each sheet, it would be best to find a way to make a second label on a second layer so that you can freeze the area component in sheets or viewports when it isn't needed. Here's an example where the square footage has been placed on a different layer so it can be frozen in certain viewports.



You can accomplish this by creating a second parcel area label that calls out the area only:

1. In any drawing containing parcels, change to the Annotate tab.
2. From the Labels & Tables panel, select Add Labels > Parcel > Add Parcel Labels.
3. Select Area from the drop-down menu in the Label Type selection box, and then select an area style label that will be the second area label.
4. Click Add, and then pick your parcel onscreen.

You'll find a second parcel area label to be a little more automatic when you place it (it already knows what parcel to reference).

You can also use the Edit Parcel Properties dialog, shown earlier in [Figure 5.56](#) in the section "Labeling Parcel Areas," to add a second label.

Labeling Parcel Segments

Although parcels are used for much more than just subdivision lots, most parcels you create will probably be used for concept plans, record plats, and other legal subdivision plans. These plans, such as the one

shown in [Figure 5.58](#), almost always require segment labels for bearing, distance, direction, crow's feet, and more.



Figure 5.58 A fully labeled site plan

Labeling Multiple-Parcel Segments

The following exercise will teach you how to add labels to multiple-parcel segments:

1. Open the 0509_SegmentLabels.dwg (0509_SegmentLabels_METRIC.dwg) file, which you can download from this book's web page.

Note that this drawing contains many subdivision lot parcels.

2. On the Annotate tab > Labels & Tables panel, click the Add Labels icon.
3. From the drop-down menus in the Add Labels dialog, select Parcel, Multiple Segment, Bearing Over Distance (from the Parcel Line Label Style section), and Delta Over Length And Radius in the Feature, Label Type, Line Label Style, and Curve Label Style selection boxes, respectively, as shown in [Figure 5.59](#).

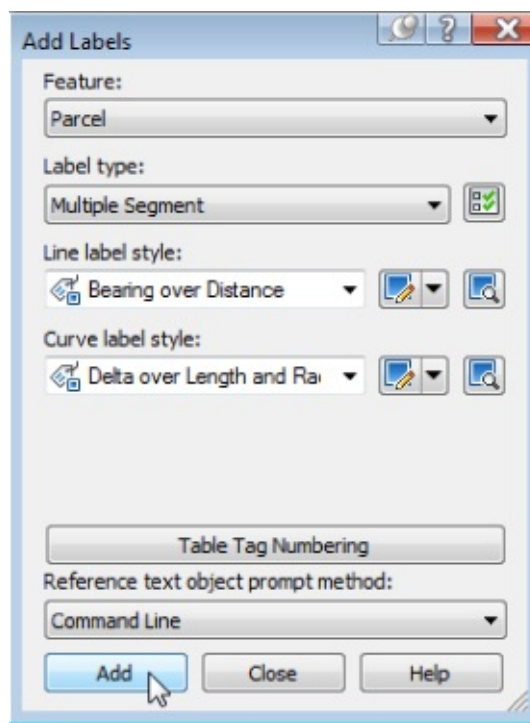


Figure 5.59 The Add Labels dialog

4. Click Add.
5. At the Select parcel to be labeled by clicking on area label: prompt, pick the area label for Property : 100.
6. At the Label direction [Clockwise/Counterclockwise]<Clockwise>: prompt, press \leftarrow to accept the default and again to exit the command.

Each parcel segment for Property : 100 should now be labeled.

7. Continue picking Property : 101 through 105 in the same manner.
- Note that segments are never given a duplicate label, even along shared lot lines.
8. Press \leftarrow to exit the command. Close the Add Labels dialog.
 9. Save the drawing but keep it open for the next exercise. If you would like to see what the drawing should look like at this point, you can open 0509_SegmentLabels_FINISHED.dwg (0509_SegmentLabels_METRIC_FINISHED.dwg), available from the book's website.

The following exercise will show you how to edit and delete parcel segment labels:

1. Continue working in the 0509_SegmentLabels.dwg (0509_SegmentLabels_METRIC.dwg) file, or you can open 0509_SegmentLabels_FINISHED.dwg (0509_SegmentLabels_METRIC_FINISHED.dwg), available from the book's website.
2. Zoom in on the label along the frontage of Property : 102.
3. Select the segment label.

You'll know your label has been picked when you see a diamond-shaped grip at the label midpoint (see [Figure 5.60](#)).

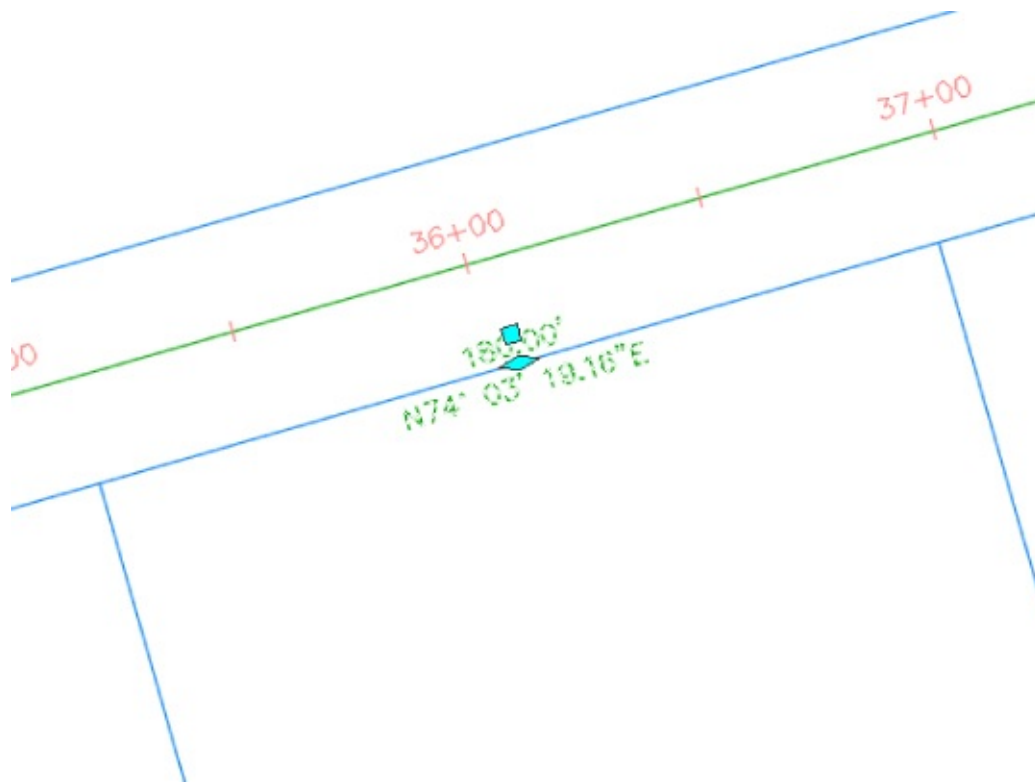


Figure 5.60 A diamond-shaped grip appears when the label has been picked.

4. On the Labels – Parcel Segment Label contextual tab ► Modify panel, click Flip Label, as shown in [Figure 5.61](#).

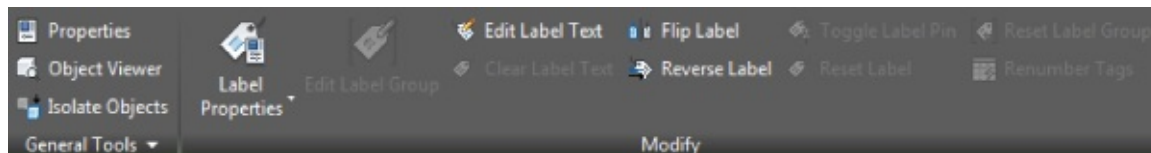


Figure 5.61 The Parcel Segment Label contextual tab

The label flips so that the bearing component is outside the parcel and the distance component is inside.

5. On the Labels – Parcel Segment Label contextual tab ► Modify panel, click Reverse Label. Press Esc to clear your selection.

The label reverses so that the bearing now reads SW instead of NE.

6. Repeat steps 3 through 5 for several other segment labels, and note their reactions.
7. Select one of the labels along the back lot lines of parcels 100–105. Once the label is picked, execute the AutoCAD Erase tool or press the Delete key. You will notice that the label disappears, since even though it is dynamically linked to the segment object, it acts independently as an annotation object that can be managed in the same way as other Civil 3D objects.
8. Save and close the drawing. If you would like to see what the drawing should look like at this point, you can open 0509_EditSegmentLabels_FINISHED.dwg (0509_EditSegmentLabels_METRIC_FINISHED.dwg), available from the book's website.

Labeling Spanning Segments

Spanning labels are used where you need a label that spans the overall length of an outside segment, such as the example in [Figure 5.62](#).

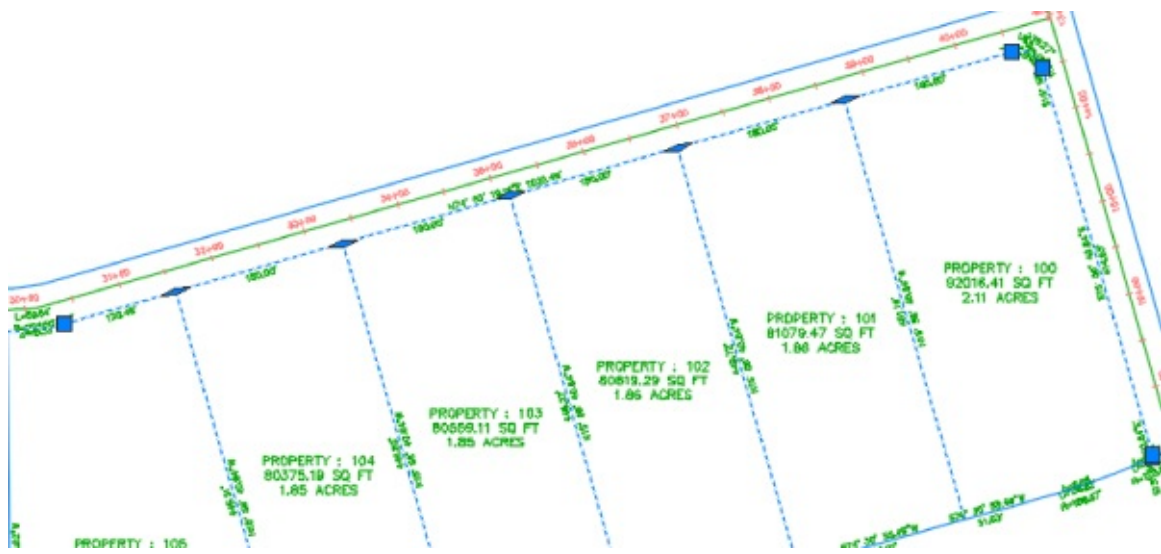


Figure 5.62 A spanning label

Spanning labels require that you use the appropriate vertices, as discussed in detail in the earlier section “Constructing Parcel Segments with the Appropriate Vertices.” Spanning labels have the following requirements:

- Spanning labels can only span split-created vertices. Natural vertices will interrupt a spanning length.
- Spanning label styles must be composed to span the outside segment.
- Spanning label styles must be composed to attach the desired spanning components (such as length and direction arrow) on the outside segment (as shown previously in [Figure 5.62](#)), with perhaps a small offset.

Once you've confirmed that your geometry is sound and your label is properly composed, you're set to span. The following exercise will teach you how to add spanning labels to single-parcel segments:

1. Open 0510_SpanningLabels.dwg (0510_SpanningLabels_METRIC.dwg), available from the book's website.
2. Zoom in on the inner parcel segment that runs from Parcel 100 through Parcel 105.
3. Change to the Annotate tab and select Add Labels > Parcel > Add Parcel Labels from the Labels & Tables panel.
4. From the drop-down menus in the Add Labels dialog, select Single Segment, (Span) Bearing And Distance With Crows Feet, and Delta Over Length And Radius in the Label Type, Line Label Style, and Curve Label Style selection boxes, respectively.
5. Click Add.
6. At the Select point on entity: prompt, pick somewhere near the middle of the outer parcel segment that runs from Parcel 100 through Parcel 105.

A label that spans the full length between natural vertices appears (see [Figure 5.62](#)).

7. As time permits, create other span labels along the other inner lot lines in the project.
8. Save and close the drawing. If you would like to see what the drawing should look like at this point, you can open 0510_SpanningLabels_FINISHED.dwg (0510_SpanningLabels_METRIC_FINISHED.dwg), available from the book's website.

Flip It, Reverse It

If your spanning label doesn't seem to work on your first try and you've followed all the spanning label guidelines, try flipping your label to the other side of the parcel segment, reversing the label, or using a combination of both flipping and reversing.

Adding Curve Tags to Prepare for Table Creation

To keep plans tidy, it is common to show labels that reference a table for curves and lines. Civil 3D parcels provide tools for creating dynamic line and curve tables. You can keep lines and curves together or create separate tables for each.

Parcel segments must be labeled before they can be used to create a table. They can be labeled with any type of label, but you'll likely find it to be best practice to create a tag-only style for segments that will be placed in a table.

The following exercise will show you how to replace curve and line labels with tag-only labels:

1. Open `0511_TagLabels.dwg` (`0511_TagLabels_METRIC.dwg`), available from the book's website.
Note that usually the labels along tight curves, such as the cul-de-sac, would be better represented as curve tags.
2. Change to the Annotate tab and select **Add Labels > Parcel > Add Parcel Labels** from the Labels & Tables panel.
3. From the drop-down menus in the Add Labels dialog, select **Replace Multiple Segment** and for **Line Label Style** use **Line Tag Only**, while for the **Curve Label Style** use **Curve Tag Only**.
4. Click **Add**. At the **Select parcel to be labeled** by clicking on area label: prompt, pick the area label for Parcel 5.
Note that the line and curve labels for Parcel 5 are replaced by tag labels.
5. Repeat step 4 for Parcels 107 through 114.
6. Press `↵` to exit the command.
7. Save the drawing but keep it open for the next exercise. If you would like to see what the drawing should look like at this point, you can open `0511_TagLabels_FINISHED.dwg` (`0511_TagLabels_METRIC_FINISHED.dwg`), available from the book's website.

Now that each curve and line label has been replaced with a tag, it's desirable to have the tag numbers be sequential. The following exercise will show you how to renumber tags:

1. Continue working in the previous drawing or you can open `0511_TagLabels_FINISHED.dwg` (`0511_TagLabels_METRIC_FINISHED.dwg`), available from the book's website.
2. Zoom to the curve on the northwest corner of Parcel 5 (see [Figure 5.63](#)).

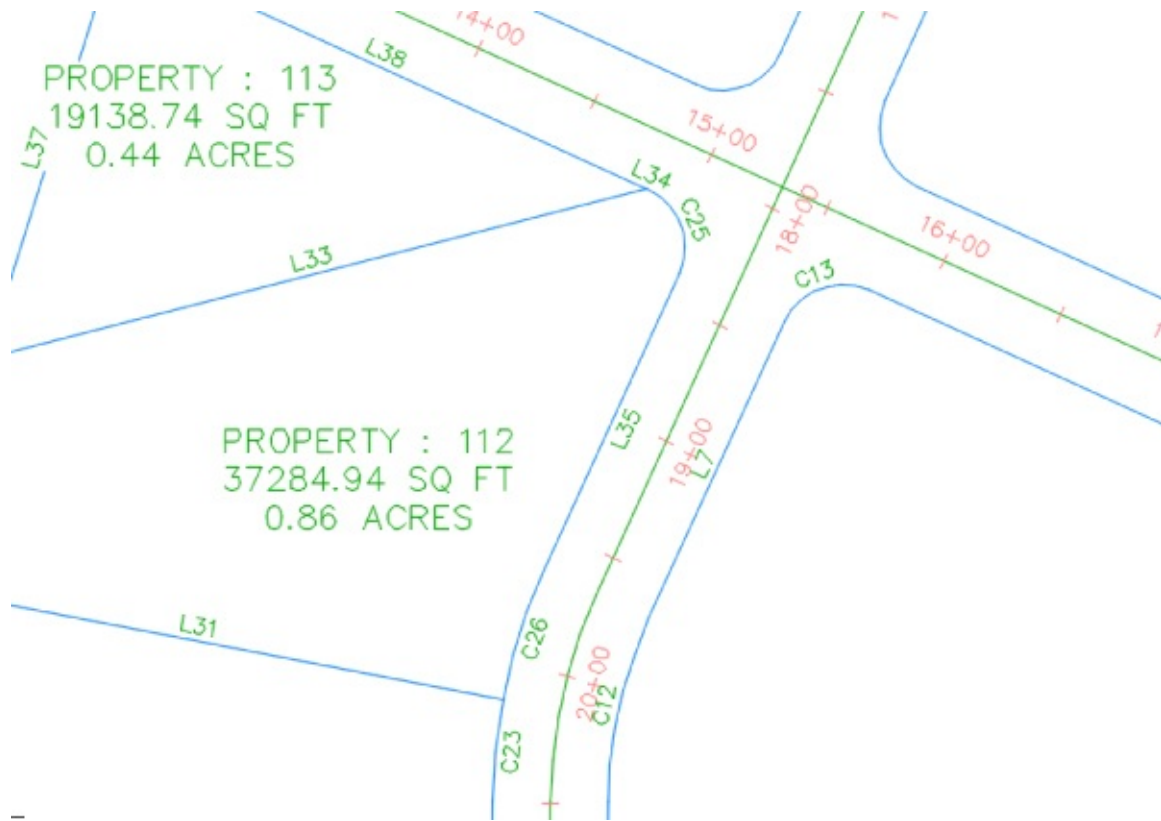


Figure 5.63 Curve tags on Parcel 5 and the northwest corner curve

Your curve may have a different number than the one in the figure.



3. Click one of the parcel area labels. Then from the Parcel contextual tab ➤ Labels & Tables panel, select Renumber Tags.
4. At the Select label to renumber tag or [Settings]: prompt, type **S**, and then press ↵. The Table Tag Numbering dialog appears (see [Figure 5.64](#)).

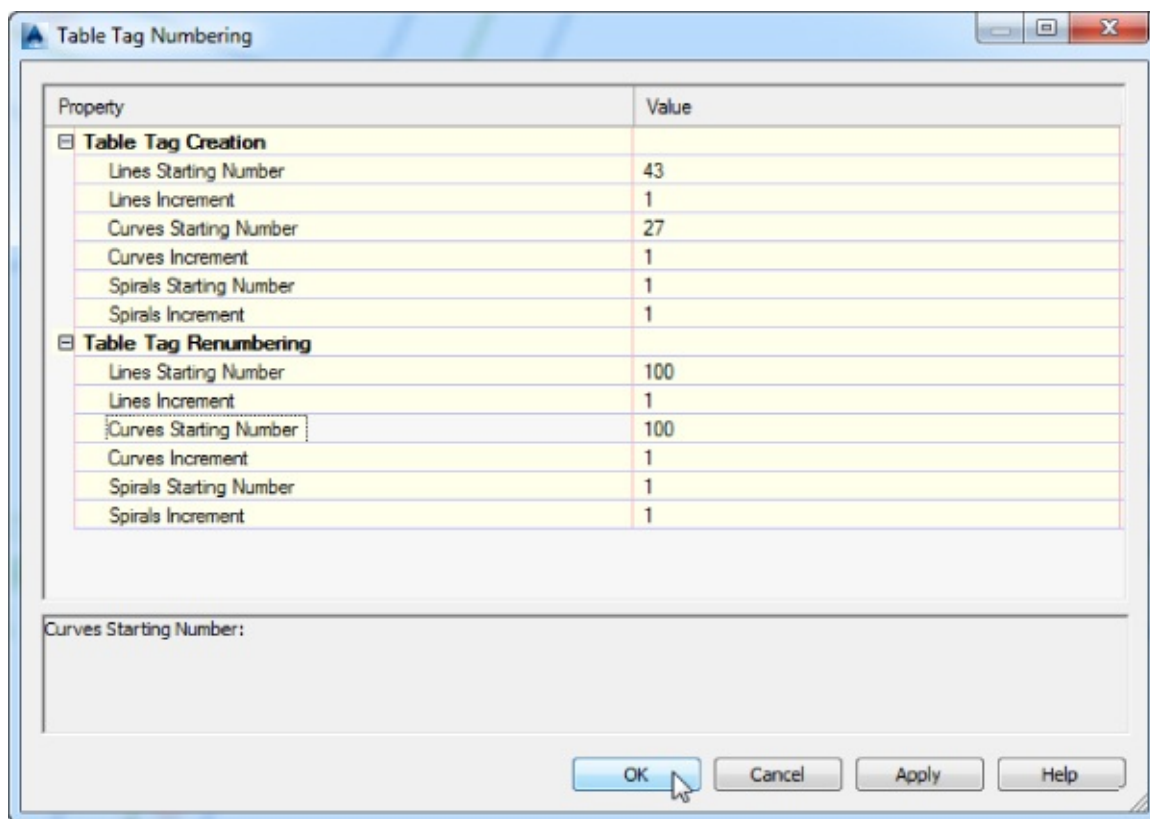


Figure 5.64 The Table Tag Numbering dialog

5. Within the Table Tag Renumbering branch, change the value in the Line Starting Number and Curves Starting Number selection boxes to **100**, and click OK.

6. At the Select label to renumber tag or [Settings]: prompt, click the curve tag label at the northwest corner of Parcel 5.

The command line may say `Current tag number is being used`, press return to skip to next available or `[Create duplicate]`, in which case you should type `c ↵` to create a duplicate.

7. Continue clicking curve tag labels working east and then south. As you do so you'll eventually resolve all of the duplicates and end up with a sequential set of curve tag numbers increasing as you move east and then south along the lot frontages. When you're finished, press `↵` to exit the command.

8. Save and close the drawing. If you would like to see what the drawing should look like at this point, you can open `0511_TagLabelsRenumbered_FINISHED.dwg` (`0511_TagLabelsRenumbered_METRIC_FINISHED.dwg`), available from the book's website.

Creating a Table for Parcel Segments

The following exercise demonstrates how to create a table from line and curve tags:

1. Open `0512_SegmentTable.dwg` (`0512_SegmentTable_METRIC.dwg`), available from the book's website.



2. Select a parcel area label. From the Parcel contextual tab > Labels & Tables panel, select Add Tables > Add Segments.

3. In the Table Creation dialog, use the one and only option from the drop-down menu in the Table Style

selection box.

4. In the Select By Label Or Style area of the dialog, click the Apply check box for the Parcel Curve: Curve Tag Only and Line Tag Only entry under Label Style Name. You might have to make the style name column wider to make it easier to pick up the name for the above mentioned styles.
5. For both label styles change the Selection Rule to Add Existing And New.
6. The Add Existing And New option will ensure that the table updates as more labels fitting this criteria are added to the drawing. Keep the default values for the remaining options. The dialog should look like [Figure 5.65](#).

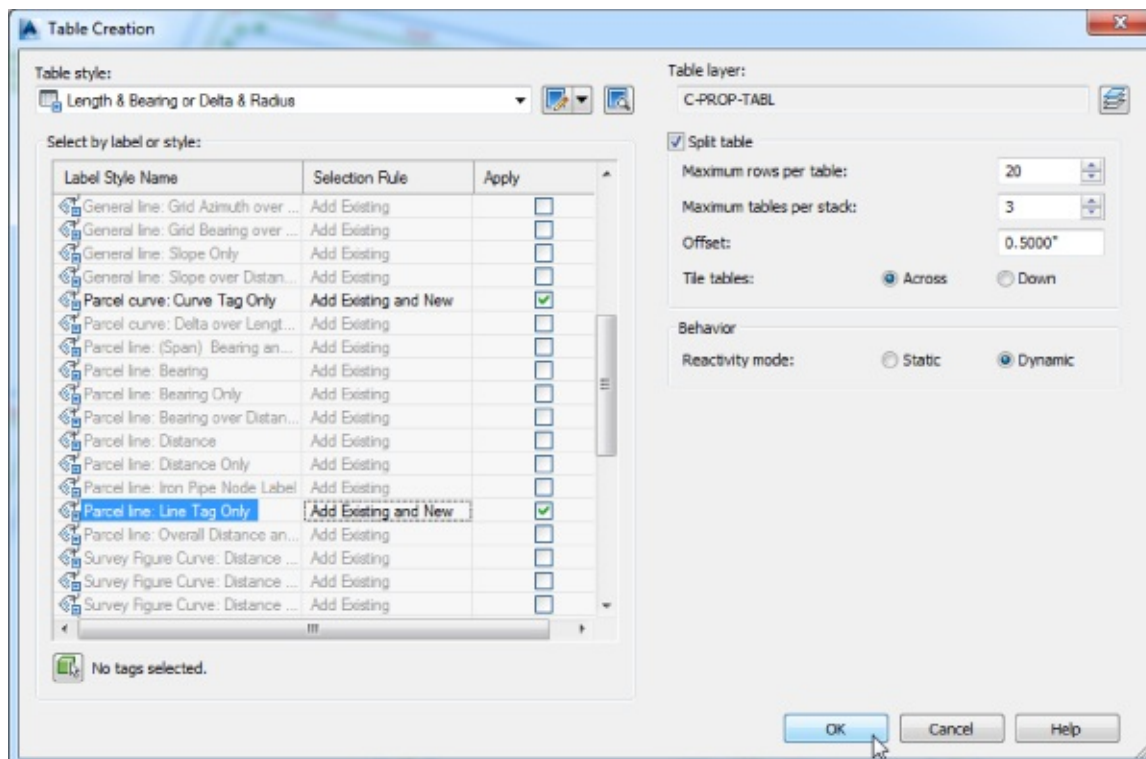


Figure 5.65 The Table Creation dialog

7. Click OK.
8. At the Select upper left corner: prompt, pick a location in your drawing for the table.
9. A segment table appears, shown in [Figure 5.66](#). You will notice that the elements are not sorted in the table. You can enable sorting within the Data Properties tab of the Table Style dialog, which you can access by selecting the table, right-clicking, and choosing the Edit Table Style option from the context menu.

Parcel Line and Curve Table			
Line #/Curve #	Length	Bearing/Delta	Radius
C102	16.09	115.21	8.00
L102	146.64	N45° 27' 37.29"W	
L103	136.30	N45° 27' 37.29"W	
C103	12.57	90.00	8.00
L104	120.71	N24° 32' 22.71"E	
C100	10.83	77.58	8.00
L100	207.82	S77° 53' 01.86"E	
C101	10.78	77.21	8.00
L101	182.84	S0° 40' 17.03"E	

Figure 5.66 A segment table

10. Save and close the drawing. If you would like to see what the drawing should look like at this point, you can open 0512_SegmentTable_FINISHED.dwg (0512_SegmentTable_METRIC_FINISHED.dwg), available from the book's website.

The Bottom Line

Create parcels from objects. The first step in any parceling project is to create an outer boundary for the site together with all the known linework.

Master It Open the Masterit_0501.dwg (Masterit_0501_METRIC.dwg) file, which you can download from www.sybex.com/go/masteringcivil3d2015. Convert the polyline segments to parcels and place them in the Subdivision Lots site.

Create a right-of-way parcel using the right-of-way tool. For many projects, the ROW parcel serves as frontage for subdivision parcels. For straightforward sites, the automatic Create ROW tool provides a quick way to create this parcel.

Master It Continue working in the Masterit_0501.dwg (Masterit_0501_METRIC.dwg) file or you can open Masterit_0501_FINISHED.dwg (Masterit_0501_METRIC_FINISHED.dwg), available from the book's website. Create a ROW parcel that is offset by 30' (10 m) on either side of the road centerline with no fillets at boundary ends. Then clean up the ROW parcel area on each side of the alignment at the ends. Note: The south side parcel represents the existing main road ROW.

Create subdivision lots automatically by layout. The biggest challenge when creating a subdivision plan is optimizing the number of lots. The precise sizing parcel tools provide a means to automate this process.

Master It Continue working in the previous drawing or open Masterit_0502_FINISHED.dwg (Masterit_0502_METRIC_FINISHED.dwg), available from the book's website. Create a series of lots with a minimum of 10,890 sq. ft. (1,012 m²) and 90' (30 m) frontage on each side of the ROW beginning at existing ROW and ending at the ROW intersection with the southeast segments of the two north parcels. Set the Use Minimum Frontage At Offset option to No, and redistribute the remainder and set the Minimum Depth and Width values to 50' (15 m). Leave all other options at their defaults.

Add multiple-parcel segment labels. Every subdivision plat must be appropriately labeled. You can quickly label parcels with their bearings, distances, direction, and more using the segment labeling

tools.

Master It Continue working in the previous drawing, or you can open `Masterit_0503_FINISHED.dwg` (`Masterit_0503_METRIC_FINISHED.dwg`), available from the book's website. Place Bearing Over Distance labels on every parcel line segment and Delta Over Length And Radius labels on every parcel curve segment using the Multiple Segment Labeling tool.

Chapter 6

Alignments

Some roads were laid out hundreds of years ago by herds of cows; others were micro-designed by planners with careful consideration for each bend and twist. Either way, when working on a linear project, whether it be the renovation of an old New England cow path or a network of new subdivision roads, horizontal layout information will need to be conveyed to the contractor. This horizontal layout is called the *alignment* and drives much of the design. This chapter shows you how alignments can be created, how they interact with the rest of the design, how to edit and analyze them, and finally, how they work with the overall project.

In this chapter, you will learn to

- Create an alignment from an object
- Create a reverse curve that never loses tangency
- Replace a component of an alignment with another component type
- Create alignment tables

Alignment Concepts

Before you can efficiently work with alignments, you must understand two major concepts: the interaction of alignments and sites and the idea of geometry that is fixed, floating, or free.

Alignments and Sites

Prior to the Autodesk® AutoCAD® Civil 3D® 2008 release, alignments were always a part of a site and interacted with the topology contained in that site. This interaction led to the pickle analogy: alignments are like pickles in a Mason jar. You don't put pickles and peppers in the same jar unless you want hot pickles, and you don't put parcels and alignments in the same site unless you want subdivided parcels.

Civil 3D now has two ways of handling alignments in terms of sites: they can be contained in a site as before, or they can be independent of a site, or siteless.

There is no difference between the alignments contained in a site and those independent of a site, since both can be used to cut profiles or control corridors, but only the alignments contained in a site will react with and create parcels as members of a site topology.

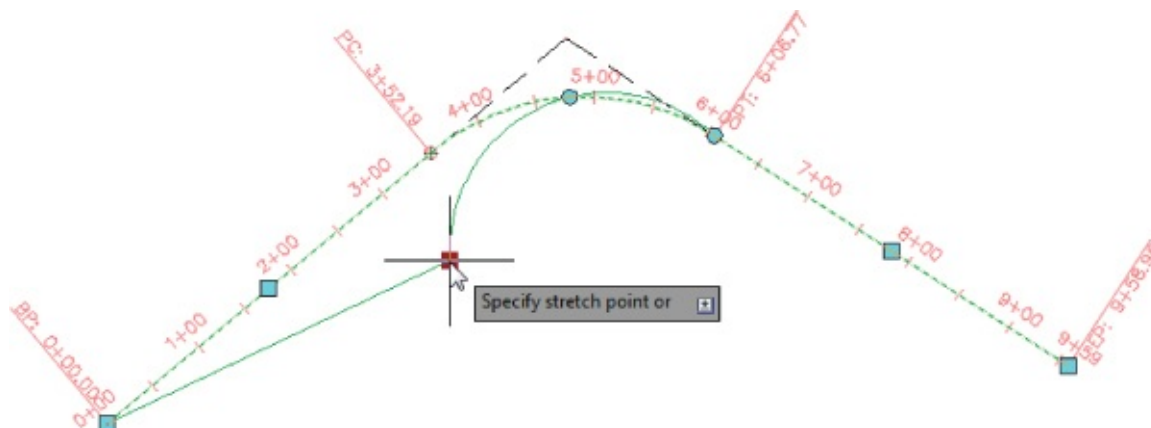
Unless you have good reason for them to interact (as in the case of an intersection), it makes sense to create alignments outside of any Site object. They can be moved later to a site if necessary. For the purpose of the exercises in this chapter, you won't place any alignments in a site. For more information about sites, check out the section “Introduction to Sites” in Chapter 5, “Parcels.”

Alignment Entities

Civil 3D recognizes five types of alignments: centerline alignments, offset alignments, curb return alignments, rail alignments, and miscellaneous alignments. Each alignment type can consist of three types of entities, or segments: lines, arcs, and spirals. These segments control the horizontal alignment of your


design. Their relationship to one another is described by the following terminology:

Fixed Segments Fixed segments are fixed in space (see [Figure 6.1](#)). They're defined by connecting points in the coordinate plane and are independent of the segments that occur either before or after them in the alignment. Fixed segments may be created as tangent to other components, but their independence from those objects lets you move them out of tangency during editing operations. An alignment that is defined from lines and arcs will have its segments fixed. If the lines on both sides of the arcs are tangents, they will be defined as free segments.



[Figure 6.1](#) Alignment fixed segments

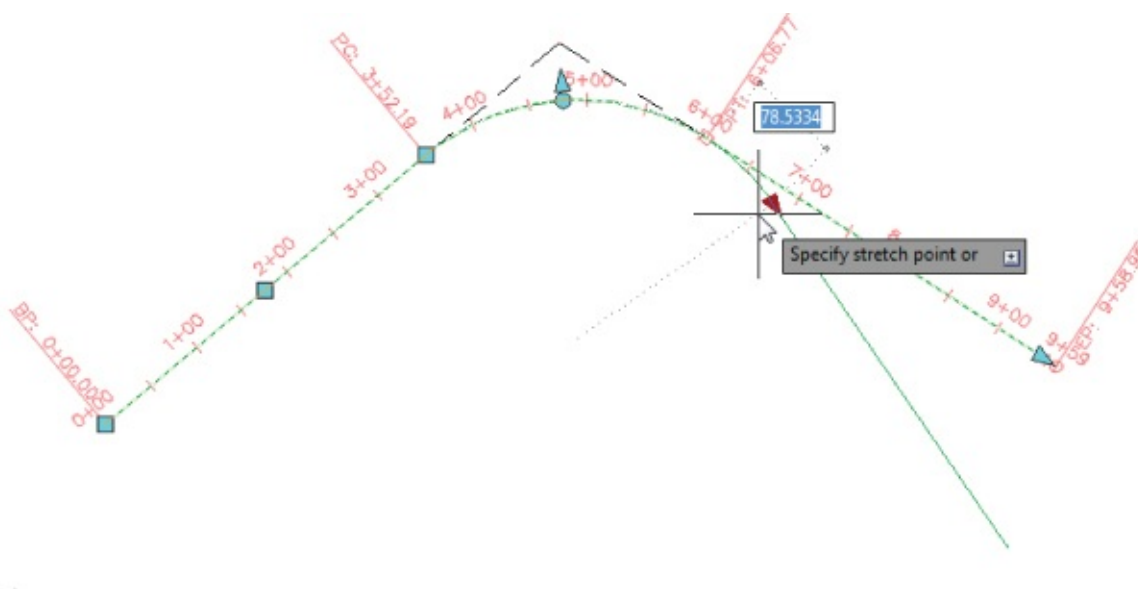Floating Segments Floating segments float in space but are attached to a point in the drawing and to a single segment to which they maintain tangency (see [Figure 6.2](#)). Floating segments work well in situations where you have a critical point but the other points of the horizontal alignment are flexible.



[Figure 6.2](#) Alignment floating segments

Free Segments Free segments are dependent upon the entities that come both before and after them in the alignment structure (see [Figure 6.3](#)). Unlike fixed or floating segments, a free segment must have segments that come before and after it. Free segments maintain tangency to the segments that come before and after them and move as required to make that happen. Although some geometry constraints can be put in place, these constraints can be edited and are user dependent. As a note, the alignment that is created from a polyline will be defined by free segments only if the segments before and after an Arc object are tangents; otherwise the segments will be fixed, as mentioned previously.

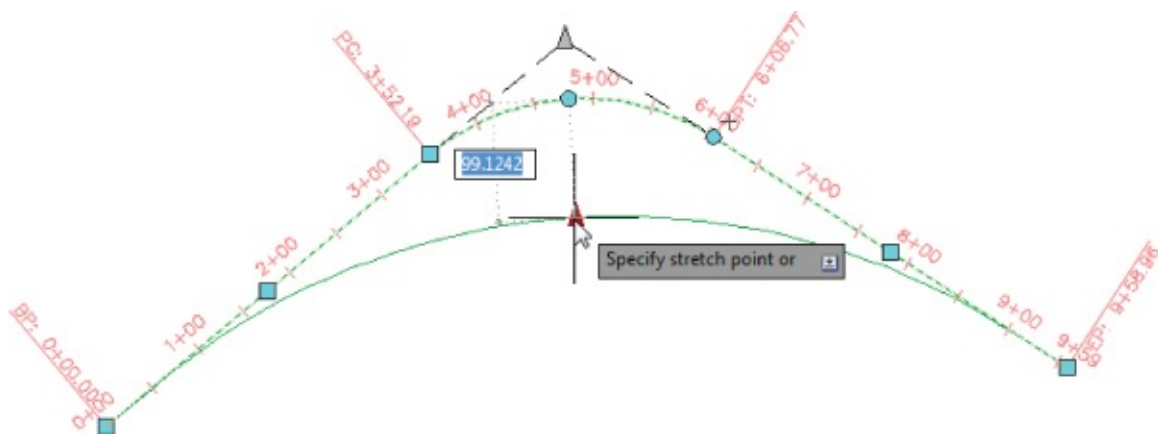


Figure 6.3 Alignment-free segments

During the exercises in this chapter, you'll use a mix of these entity types to understand them better.

Creating an Alignment

Certification
Objective

Alignments can be created using the following methods:

- From Objects** You will likely use this method to convert an existing centerline made out of arcs and lines or polylines to an Alignment object.
- By Layout** This is the most used method of defining alignments. The tools available under this method allow you to both define an alignment using dynamic line and curve elements and edit alignments created using all the other methods.
- Best Fit** This method is used to define an alignment using as input data a selection of AutoCAD blocks, entities, points, COGO points, or feature lines. Based on specific constraints, a best-fitted Alignment object is created.
- Offsets** These alignments define offset alignments that use a common centerline alignment as the source to which they are dynamically linked.
- Widening** Widening alignments are based on either centerline or offset alignments and are dynamic linked to them. They are used in the definition of a road widening in a road corridor model.
- From Corridor** This method allows a user to create an alignment using a corridor feature line.
- From Network Parts** Allows the creation of an alignment using the selection of a series of pipes and structures that belong to a Civil 3D pipe network.
- From Pressure Network** Allows the creation of an alignment using a selection of pipes, fittings, and appurtenances that belong to a Civil 3D pressure pipe network.
- Using Existing Alignment** Allows the creation of an alignment using a previously defined alignment object as source.

This section looks at the first four methods to create an alignment, outlining some of the advantages and disadvantages of each. The remaining methods are straightforward, and once you master the methods used in this section, you should not have any issues in mastering them as well. The exercise will use the street layout shown in [Figure 6.4](#) as well as the different methods to achieve your designs.



Figure 6.4 Proposed street layout

Creating from a Line, Arc, or Polyline

Most designers have used either polylines or lines and arcs to generate the horizontal control of their projects. It's common for surveyors to generate polylines to describe the center of a right-of-way or for an environmental engineer to draw a polyline to show where a new channel should be constructed. These team members may or may not have Civil 3D software, so they use their familiar friends—the line, arc, and polyline—to describe their design intent.

Although these objects are good at showing where something should go, they don't have much data behind them. To make full use of these objects, you should convert them to Civil 3D alignments that can then be shared and used for myriad purposes. Once an alignment has been created from a polyline, offsets can be created to represent rights-of-way, building lines, and so on. In the following exercise, you'll convert a polyline to an alignment and create offset alignments:

1. Open the 0601_AlignmentFromObjects.dwg (0601_AlignmentFromObjects_METRIC.dwg) file.

You can download this file from the book's web page at www.sybex.com/go/masteringcivil3d2015. You will see a polyline that represents the centerline of a proposed road together with the parcels that you got familiar with in the parcels chapter.



2. From the Home tab > Create Design panel, choose Alignment > Create Alignment From Objects.
3. When prompted to select the first line, pick the polyline that defines the centerline near its north end, and press **↵**.
4. At the **Press enter to accept alignment direction or [Reverse]:** prompt, press **↵**, once

you confirm that the displayed arrow outlining the direction points from north to south.

The Create Alignment From Objects dialog appears.

5. Change the Name field to **ROAD D**, and set the Type field to Centerline from the drop-down list.
6. Verify that Alignment Style is set to Proposed and Alignment Label Set is set to Major And Minor Only, and within the Conversion Options make sure that the Add Curves Between Tangents option is unchecked while the Erase Existing Entities box is checked. The Create Alignment From Objects dialog should match [Figure 6.5](#).

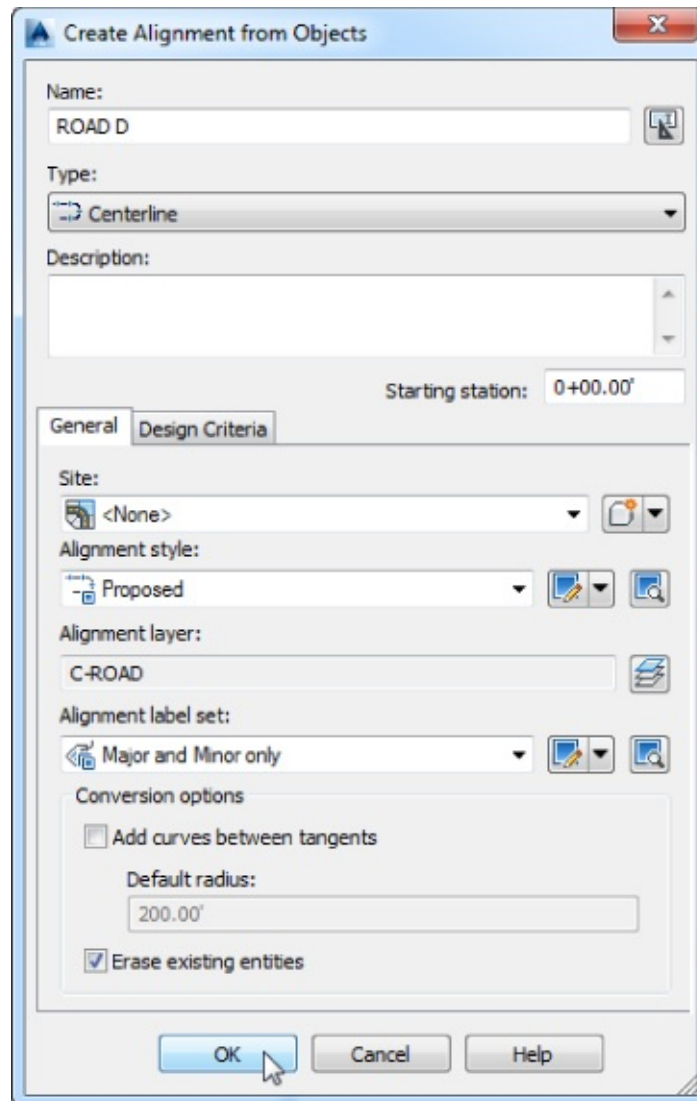


Figure 6.5 The settings used to create the ROAD D alignment

7. Accept the other settings, and click OK.

When this exercise is complete, you may save the drawing, but keep it open for the following exercise. A finished copy of this drawing at this stage is available from the book's web page with the filename 0601_AlignmentFromObjects_A.dwg (0601_AlignmentFromObjects_A_METRIC.dwg).

A Word about Constraints

Prior to the 2014 release, creating from objects held no constraints (everything was fixed). In current versions, Civil 3D tries to find tangency where a curve is between two lines and establish that tangency as a constraint. Lines will always be set to Not Constrained (Fixed), but if the curve is tangent, it will be set to Constrained On Both Sides (Free). You will learn about changing those constraints later in this chapter.

The Create Alignment From Objects Dialog

In the Create Alignment From Objects dialog (shown in [Figure 6.5](#)), there are many settings that you can adjust when creating an alignment:

Name This is the alignment name. No alignment name can be duplicated in a drawing. When an alignment name is found to be a duplicate, a modifier is added to its name to show that difference.

Type The alignment types can be thought of as places for objects that are alike. The objects can react differently depending on which type is selected.

Centerline Used mainly for centers of roads, streams, or swales. Civil 3D places this type of alignment in the Alignments > Centerline Alignments collection.

Offset Used for offset alignments. The difference between this and the centerline alignment is that you have the option in the Alignment Properties dialog to set Offset parameters, such as naming a parent alignment and offset values. Offset alignments are dynamically linked to their parent alignments and will update automatically when the parent alignment changes. Civil 3D places this type of alignment in the Alignments > Offset Alignments collection.

Curb Return Used for curb returns, which are the radii at intersections. The difference between this and the offset alignment is that instead of Offset parameters, you have the option in the Alignment Properties dialog to set Curb Return parameters, such as setting two parent alignments and offsets. Curb return alignments are also dynamically linked to their parent alignments. Civil 3D places this type of alignment in the Alignments > Curb Return Alignments collection.

Rail Used for rail design. The difference between this and the other alignments is that this alignment is set using typical rail geometry such as degree of curvature and cant. In addition, a unique tab is added to the Alignment Properties dialog called Rail Parameters, where you can specify the track width. Civil 3D places this alignment type in the Alignments > Rail Alignments collection.

Miscellaneous This is a stripped-down alignment type that contains only Information, Stationing, Masking, Point Of Intersection, and Constraint Editing tabs. Civil 3D places this alignment type in the Alignments > Miscellaneous Alignments collection.

Description An optional field where you can place the description of what your alignment represents.

Starting Station This value, either positive or negative, will be the starting stationing for the alignment. This is handy if you need to start your alignment to coincide with existing stationing or if you wish to have your 0+00 stationing at an intersection of a road. If you forget to set this value here, you can change it later in the Alignment Properties dialog.

The General tab contains the following options:

Site This is a place to keep Civil 3D objects that you want to interact with each other. As previously mentioned, all of your alignments in these exercises will be put on the <None> site.

Alignment Style You can set different styles to visually show your alignment. For more on styles, refer to Chapter 19, “Object Styles.”

Alignment Layer This setting overrides the layer that is specified in the drawing settings for the alignment that you create.

Alignment Label Set As with the Alignment Style, you can choose how your alignment will be labeled. For more on label styles, refer to Chapter 18, “Label Styles.”

Conversion Options Depending on your selections, these will add curves or erase the original entities.

The Design Criteria tab contains these options:

Starting Design Speed Use this option to specify the design speed of the alignment for the starting station. If no additional design speeds are applied to a different section of the alignment, this speed will be used for the entire alignment. Design speed is used to calculate superelevation and to establish design criteria.

Use Criteria-Based Design When this check box is selected, the Use Design Criteria File and Use Design Check Set options are available. These options enable the software to keep track of certain design standards that you would like your alignment to meet and notify you when those standards are not met.

Use Design Criteria File Here you can define the design criteria, as it is defined in the design manual *A Policy on Geometric Design of Highways and Streets, 2011* from the American Association of State Highway and Transportation Officials (AASHTO).

Use Design Check Set Here you can set rules or expressions for lines, curves, spirals, and tangent intersections.

Many of these settings will be discussed further throughout this chapter.

You've created your first alignment and attached stationing and major and minor labels. It is common to create offset alignments from a centerline alignment to begin to model rights-of-way. In the following exercise, you'll create offset alignments and mask them where you don't want them to be seen:



1. Continue working on the previous file, or if you want to begin from the previous step, you can open the 0601_AlignmentFromObjects_A.dwg (0601_AlignmentFromObjects_A_METRIC.dwg) file.
2. From the Home tab > Create Design panel, choose Alignment > Create Offset Alignment option.
3. When prompted to select an alignment, pick the ROAD D alignment to open the Create Offset

Alignments dialog shown in [Figure 6.6](#).

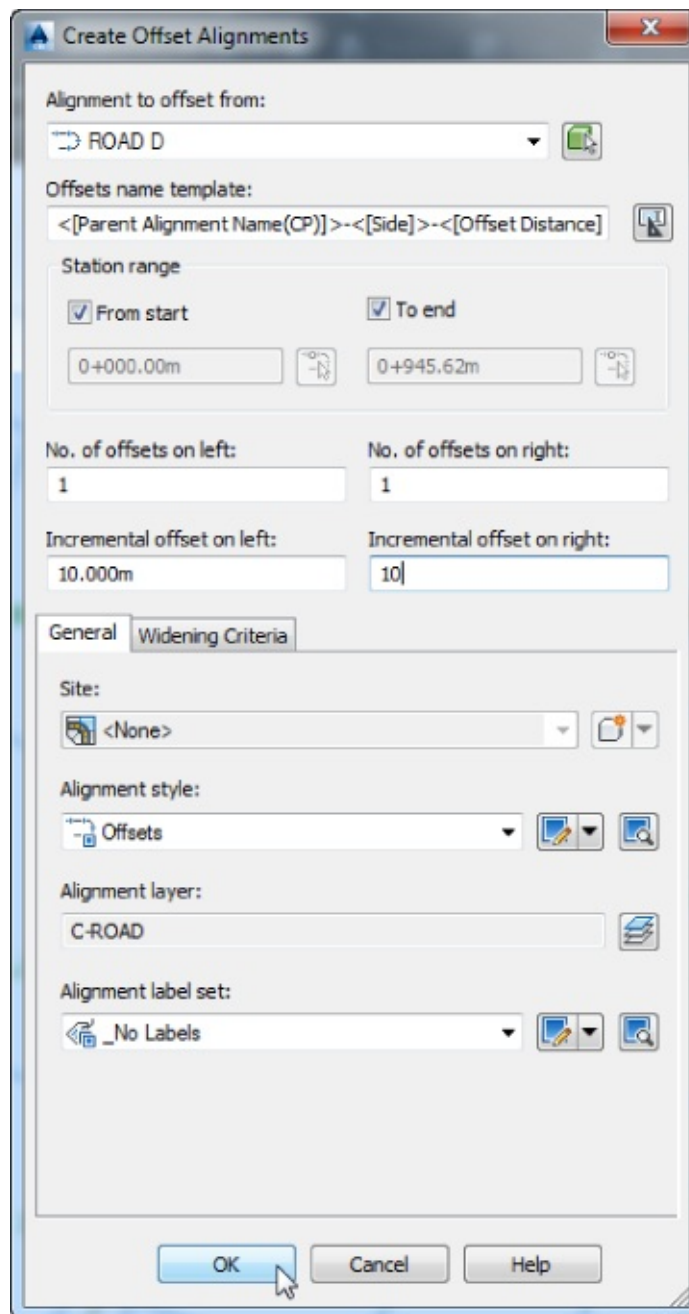



Figure 6.6 The Create Offset Alignments dialog

4. With No. Of Offsets On Left set to **1**, change Incremental Offset On Left to **30** (metric users, **10**).
5. With No. Of Offsets On Right set to **1**, change Incremental Offset On Right to **30** (metric users, **10**).
6. Verify that Alignment Label Set is set to **_No Labels**, and click OK to accept the rest of the defaults shown in [Figure 6.6](#).
7. Select the left offset alignment just created along the easterly and northerly right-of-way of ROAD D to activate the Offset Alignment contextual tab.
8. From the Offset Alignment contextual tab > Modify panel, click the Alignment Properties icon to open the Alignment Properties dialog.
9.  Change to the Masking tab and click the Add Masking Region button.
10. Enter **264.90** for the first station and **326.47** for the second station when prompted (metric users, enter

81.46 and 98.78), and click OK. Alternatively you could have used the station picker that becomes available once the station cell is active and in editing mode.

Notice that the alignment is now masked at the intersection of the alignment with the right-of-way at the north end.

- 11. Repeat the process for the rest of the intersections for both of the offset alignments by using the station picker and snapping to the intersection of the offset alignments and the right-of-way lines so that the areas in between the right-of-way lines are masked.

Once complete, the Masking tab of the Alignment Properties dialog should look like [Figure 6.7](#) for the case of the left offset.

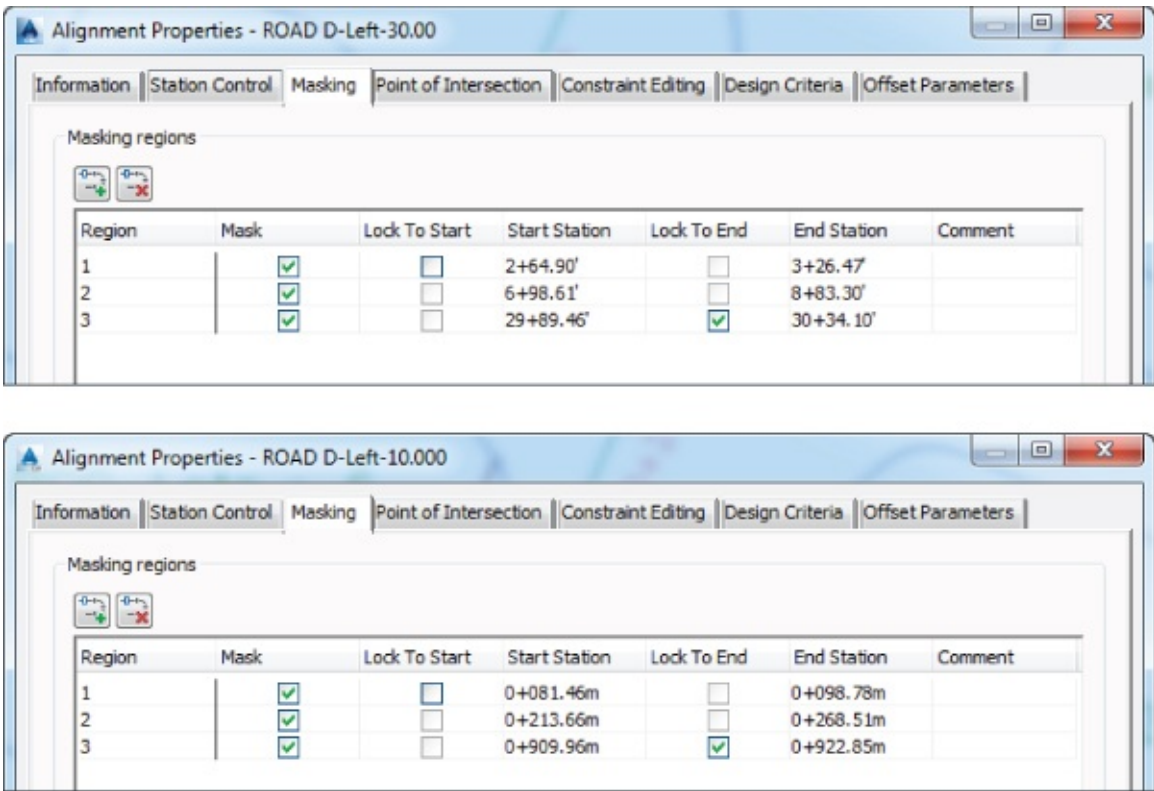


Figure 6.7 Creating an alignment mask for the left offset with both US (top) and metric (bottom) values.

Offset alignments are simple to create, and they are dynamically linked to a centerline alignment. To test this, grip the centerline alignment, select the endpoint grip, and stretch the alignment to the west. Notice the change, and then undo this change to return to the original state.

Offset Grips and More

Offset alignments have two main special grips: the arrow and the plus sign. The arrow is used to change the offset value, and the plus sign is used to create a transition, called a *widening*, such as a turning lane. When a widening is present there will be a third grip present in the form of a filled gray circle that enables the transition grips. To access the Create Widening command, from the Home tab > Create Design panel, select the Alignment drop-down. Widening criteria can also be found in the Create Offset Alignments dialog and the Offset Alignment contextual tab. The widening in the Offset Alignments contextual tab can be added as a new alignment or as an element within the existing offset alignment.

Also, offset alignments with widening remain dynamic to their host alignment. Offset alignment objects can be found in Prospector in the Alignments collection.

When this exercise is complete, you may close the drawing. A finished copy of this drawing is available from the book's web page with the filename 0601_AlignmentFromObjects_FINISHED.dwg (0601_AlignmentFromObjects_METRIC_FINISHED.dwg).

Creating by Layout

Now that you've made an alignment from polylines, let's look at another creation option: Create By Layout. You'll use the same street layout ([Figure 6.4](#)) that was provided by a planner, but instead of converting from polylines, you'll trace the alignments. Although this seems like duplicate work, it will pay dividends in the relationships created between segments:

1. Open the 0602_AlignmentByLayout.dwg (0602_AlignmentByLayout_METRIC.dwg) file.



From the Home tab > Create Design panel, choose the Alignment > Alignment Creation Tools option.

2. The Create Alignment – Layout dialog appears.
3. Change the Name field to **ROAD D** if it is not already set.
4. Verify that Alignment Style is set to Proposed and Alignment Label Set is set to Major And Minor Only.
5. Click OK to accept the other settings shown in [Figure 6.8](#).

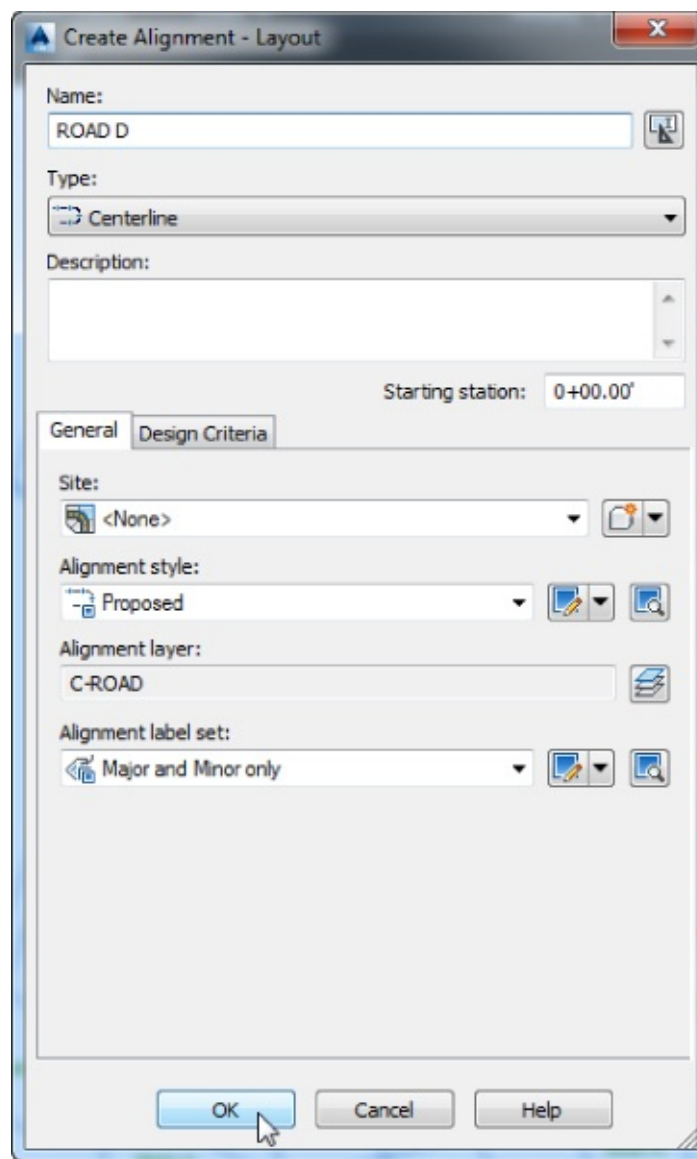


Figure 6.8 Create Alignment - Layout dialog

The Alignment Layout Tools toolbar for ROAD D appears ([Figure 6.9](#)).

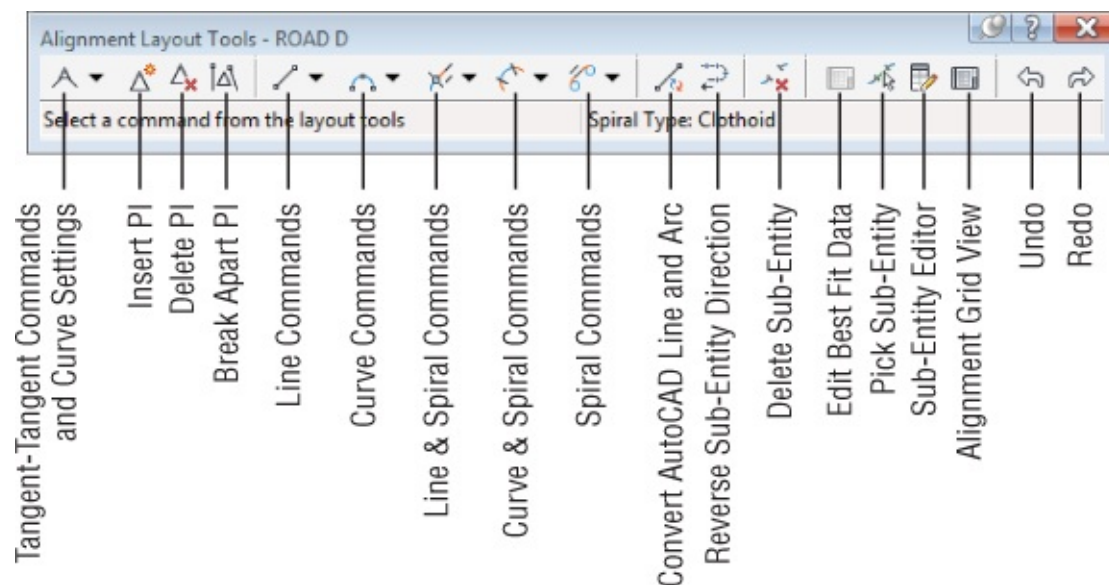


Figure 6.9 The Alignment Layout Tools toolbar for the ROAD D alignment

- Click the down arrow next to the Tangent-Tangent (No Curves) tool at the far left, and select the Tangent-Tangent (With Curves) option (see [Figure 6.10](#)).

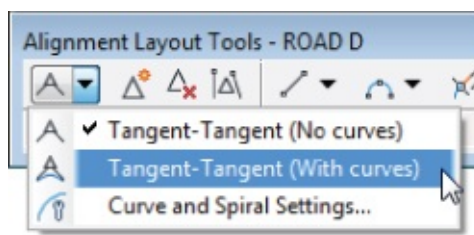


Figure 6.10 The Tangent-Tangent (With Curves) tool

This tool places a curve automatically based on a default setting that is defined under the Curve And Spiral Settings option from the same menu. Later, you'll adjust the curve based on your design's preferred layout.

7. Turn on the Endpoint Osnap and snap to the north end point of the ROAD D centerline.
8. Continue to pick the vertices endpoints of the red polyline along the ROAD D centerline, from north to south and then east to finish creating this alignment.
9. After selecting the last endpoint along the red polyline, press \leftarrow to end the command.
10. Click the X button at the upper-right on the Alignment Layout Tools toolbar for ROAD D to close it.

Keep this drawing open for the next portion of the exercise.

Zoom in around the areas with arcs. Notice that some of them follow very closely the desired layout, while others are off by a huge margin from what the planner envisioned as design parameters for those arcs. That's okay—you will fix them in a later exercise.

The alignment you just made is one of the most basic. Let's move on to some of the others and use a few of the other tools to complete your initial layout. In this exercise, you build the alignment at the center of the site as an access to the cul-de-sac area, but this time you use a floating curve to make sure the two segments you create maintain their relationship.

Design and Then Refine

It bears repeating that in dealing with Civil 3D objects, it is good practice to get something in place and *then* refine. With Land Desktop or other packages, you didn't want to define the object until it was fully designed. In Civil 3D, you design and then refine.

11. From the Home tab > Create Design panel, choose Alignment > Alignment Creation Tools.
The Create Alignment - Layout dialog appears.
12. In the Create Alignment - Layout dialog, do the following:
 - a. Change the Name field to **ROAD G**.
 - b. Set the Alignment Style field to Proposed.
 - c. Set the Alignment Label Set field to Major And Minor Only.
13. Click OK to display the Alignment Layout Tools toolbar for ROAD G.
14. Select the Fixed Line (Two Points) tool, as shown in [Figure 6.11](#).

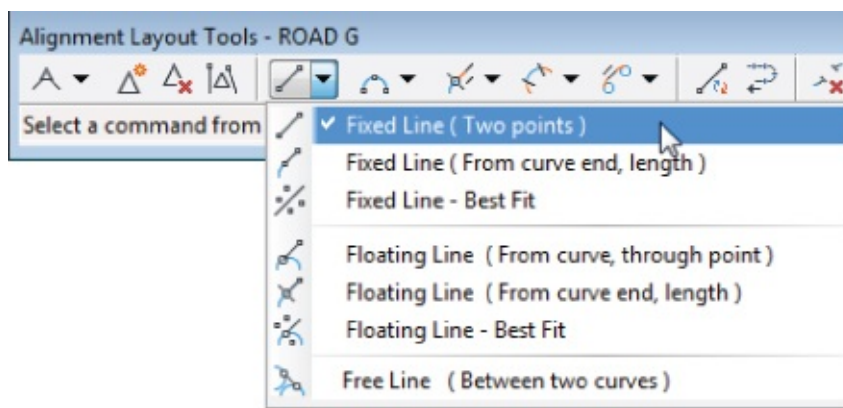


Figure 6.11 The Fixed Line (Two Points) tool

15. At the `Specify start point:` prompt, using Endpoint Osnap, select the north end point of the polyline, and working north to south, draw the first fixed-line segment to the south end of the segment.

When you've finished, the command line will read `Specify start point:` in case you want to draw another line. You can either press `↵` to end the command or draw the next entity without ending the command.

16. Click the down arrow next to the Add Fixed Curve (Three Point) tool on the toolbar, and select `More Floating Curves > Floating Curve (From Entity End, Through Point)`, as shown in [Figure 6.12](#).

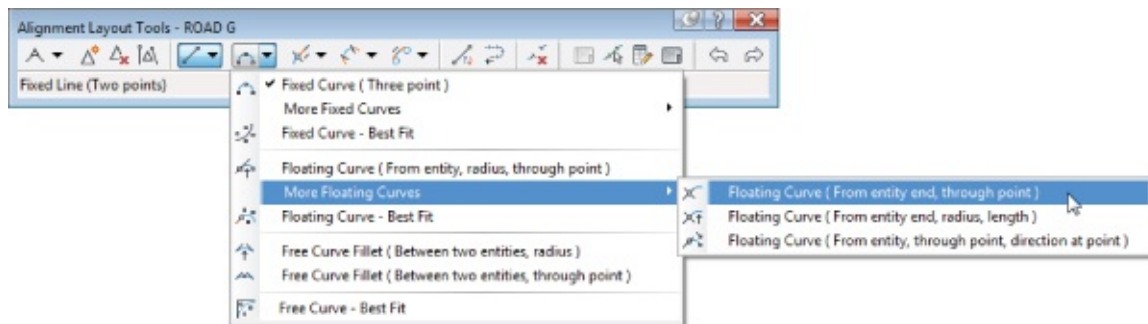


Figure 6.12 Selecting the Floating Curve tool

17. At the `Select entity to attach:` prompt, select the fixed-line segment you drew in steps 14 and 15.

Make sure you select the line segment somewhere south of the segment's midpoint in order to connect to the southern endpoint instead of the northern endpoint. If you cannot select the alignment segment, enable Selection Cycling (`Ctrl+W`)

18. Pick the endpoint between the two arcs (the point of compound curvature).

Notice that you are generating the segments from low station to high station. If you perform these steps backward, you can reverse a segment using the Reverse Sub-Entity Direction button on the Alignment Layout Tools toolbar.

19. Use the same command to draw the last arc segment, using the previous alignment arc segment as your entity to attach and the end of the polyline as the through point.

20. Press `↵` to end the command.

21. Close the Alignment Layout Tools toolbar.

22. Pick the ROAD G alignment and then pick the grip on the lower end of the line and pull it away from its location.

Notice that the line and the arcs are in sync and tangency is maintained (see [Figure 6.13](#)).



Figure 6.13 Floating curves maintain their tangency.

23. Press Esc to cancel the grip edit.

When this exercise is complete, you may close the drawing. A finished copy of this drawing is available from the book's web page with the filename 0602_AlignmentByLayout_FINISHED.dwg (0602_AlignmentByLayout_METRIC_FINISHED.dwg).

All Aboard! Rail Alignments

Rail alignments were introduced in Civil 3D 2013 to allow for the differences between rail design and other types of design. For example, railways are characterized by long sweeping curves, and the curve geometry is expressed differently on railway construction plans. Rail design also has its own type of superelevation called cant, which is handled differently than road superelevation. These differences are accounted for when you use rail alignments in Civil 3D. Let's look at a quick, simple example:

1. Start a new blank drawing from the `_AutoCAD Civil 3D (Imperial) NCS` template that ships with Civil 3D. Metric users should use the `_AutoCAD Civil 3D (Metric) NCS` template.
2. From the Home tab > Create Design panel, choose the Alignment section > Alignment Creation Tools option.

The Create Alignment - Layout dialog appears.

3. Change the name to **Mastering Railway** and set Type to Rail.
4. On the General tab, make these changes:
 - Set Alignment Style to Proposed.
 - Set Alignment Label Set to All Labels.

5. Switch to the Design Criteria tab.
6. Change the starting design speed to **30** mi/hr (or **50** km/hr for metric users).
7. Select the Use Criteria-Based Design check box.

If the design criteria file doesn't default to the one that references railway design standards, you may need to click the ellipsis next to the design criteria file, which by default shows `_Autodesk Civil 3D Imperial Rail Cant Design Standards.xml` or `_Autodesk Civil 3D Metric Rail Cant Design Standards.xml` available to select and use.

8. Verify that Use Design Criteria File, Use Design Check Set, and Check For Tangency Between Elements are also checked.
9. Click OK.

The Alignment Layout Tools toolbar appears.

10. Select the Fixed Line (Two Points) tool.
11. Click anywhere on the screen to define the start point, and define the second point by entering **@330,0** on the command line (or **@100,0** for metric users).
12. Press **↵** to end the command.
13. Select Floating Curve (From Entity End, Radius, Length).
14. At the Select entity to attach to: prompt, select the right side of the line segment that you just drew.
15. At the Specify curve direction [Clockwise counterclockwise] <Clockwise>: prompt, press **↵** to accept the default, Clockwise.
16. At the Specify radius or [Degree of curvature]: prompt, enter **D** **↵** to switch to entering the radius by degree of curvature.
17. At the Specify degree of curvature or [Radius]: prompt, enter **3** **↵**.
18. At the Specify curve length or [deltaAngle Tanlen Chordlen midOrd External]: prompt, enter **C** **↵** to define by chord length.
19. At the Specify chord length or [curveLen deltaAngle Tanlen midOrd External]: prompt, enter **100** **↵**.
20. Press **↵** to end the command. Click the X on the corner to close the Alignment Layout Tools toolbar.

Note that this will result in a different curve for Imperial and metric users.

When this exercise is complete, you may close the drawing. A saved finished copy of this drawing is available from the book's web page with the filename `0603_RailAlignment_FINISHED.dwg` (`0603_RailAlignment_METRIC_FINISHED.dwg`).

Best Fit Alignments

Often designers have to re-create an alignment for an existing road that does not have true horizontal geometry. Civil 3D has multiple tools to re-create the alignment using a best fit algorithm. You can either

re-create a full best fit alignment or use best fit lines or best fit curves in an alignment. We will look at both methods to achieve this within the following section.

The Create Best Fit Alignment command can use AutoCAD blocks, AutoCAD entities, AutoCAD points, Civil 3D COGO points, or Civil 3D feature lines. You can also pick points by simply clicking on the screen. The Line and Curve drop-down menus on the Alignment Layout toolbar include options for Floating and Fixed Lines By Best Fit as well as Best Fit curves in all three flavors: Fixed, Float, and Free. It is similar to what we covered in Chapter 1, “The Basics,” in the section “Best Fit Entities.” Let's see how it works with alignments:

1. Open the 0604_AlignmentBestFit.dwg (0604_AlignmentBestFit_METRIC.dwg) file, which you can download from this book's web page.
2. From the Home tab ➤ Create Design panel, choose the Alignment section ➤ Alignment Creation Tools option.

The Create Alignment - Layout dialog appears.

3. Enter **Best Fit Lines** in the Name field.
4. Leave the rest at their defaults and click OK.

The Alignment Layout Tools toolbar opens.

5. Click the down arrow next to the Fixed Line (Two Points) tool on the toolbar, and select the Fixed Line – Best Fit option.

The Tangent By Best Fit dialog opens ([Figure 6.14](#)).

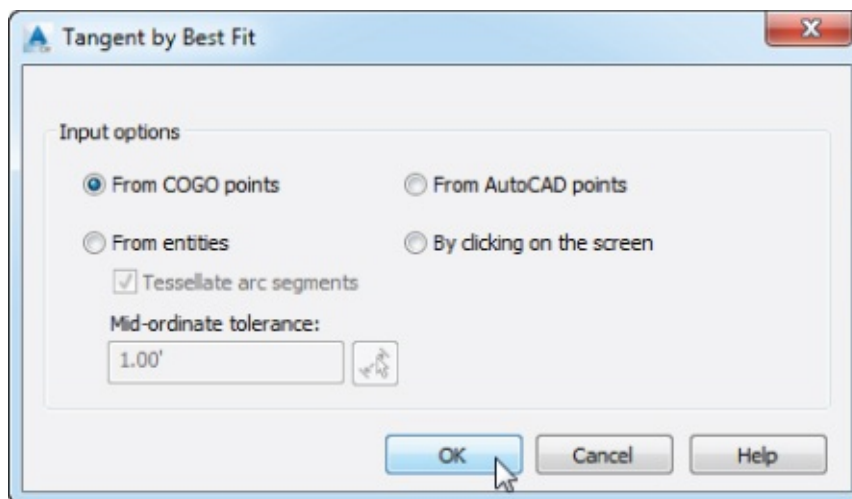


Figure 6.14 The Tangent By Best Fit dialog

Here, you can choose various methods to create a best fit line alignment:

6.
 - From COGO Points
 - From Entities
 - From AutoCAD Points
 - By Clicking On The Screen
7. Pick the From COGO Points radio button and click OK.

At the Select Point objects or [Numbers Groups]: prompt, select points 1–11 using a combination of selection on the screen and transparent commands.

8. On point selection, select manually points 1 to 6.
9. When it comes to select the point 7, at the command line type in the transparent command for point number: 'pn ↵. In the point number selection type in 7-11 ↵. Press the Esc key once to exit transparent mode.

As you continue defining the tangent, you will see a red dashed line being formed. In your selections, this line looks at all the endpoints selected in order to create the best fit line alignment segment ([Figure 6.15](#)).

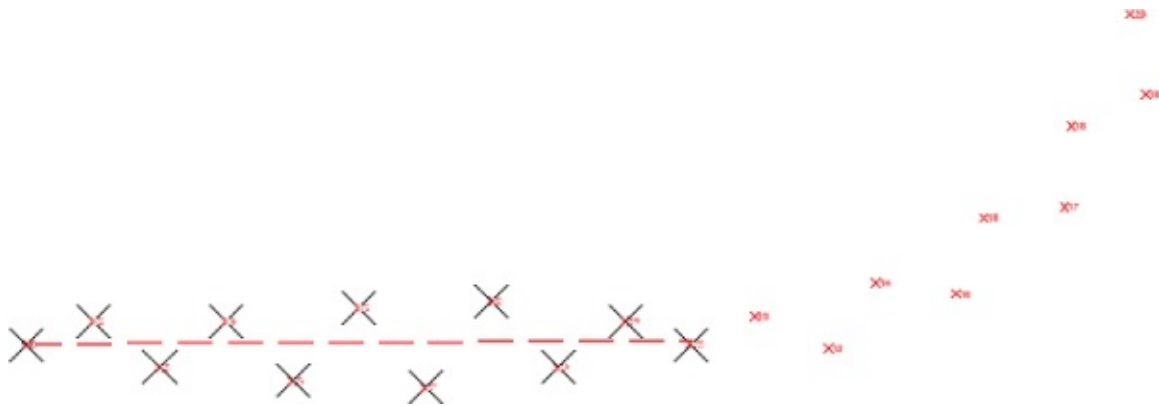


Figure 6.15 The best fit line being formed

10. Press ↵ to open the Regression Data tab of the Panorama window shown in [Figure 6.16](#).

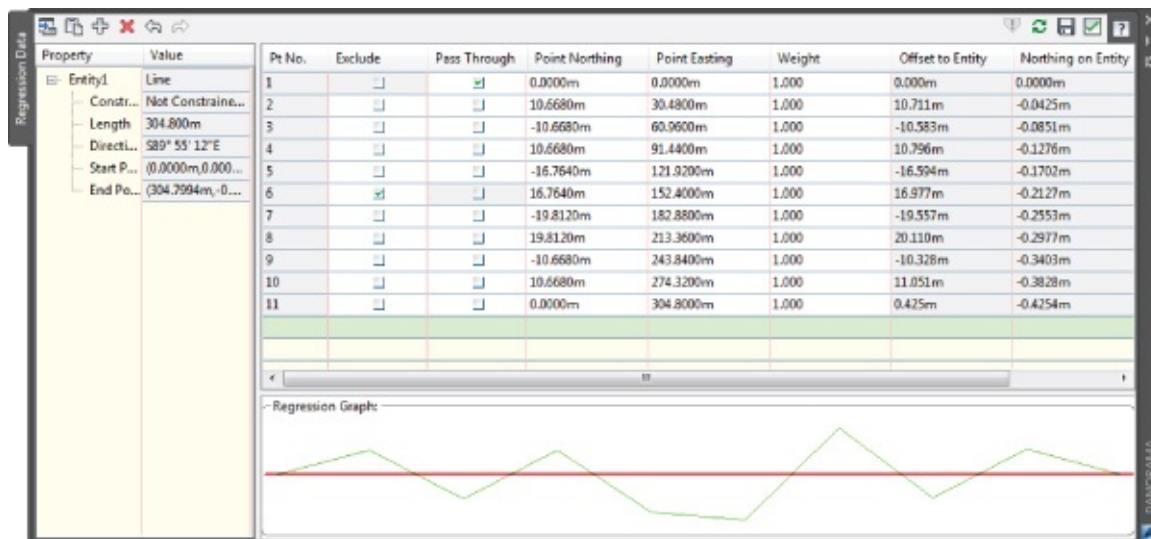


Figure 6.16 Regression Data tab on Panorama

On the Regression Data tab of the Panorama window, you can choose to exclude endpoints or force them to be pass-through endpoints by checking the appropriate boxes.

As you check and uncheck boxes in the Regression Data chart, notice the changes that occur on your best fit line alignment.

11. For this exercise you will try to make sure that the line will pass through point 1 and exclude point 6. Therefore, put a check mark in the Pass Through check box for point 1 and one in the Exclude check box for point 6, as shown in [Figure 6.16](#).
12. Click the green check mark on the upper-right side of Panorama to accept the selection and dismiss the

Panorama window

You will notice that the line is drawn temporarily until you click the green check mark and exit the Panorama window or if you are still in the Panorama window, when you click the Save button.

- Without exiting the Alignment Layout Tools toolbar, you will build a best fit floating curve using the remainder of COGO points. Expand the curve creation tools and select the Floating Curve - Best Fit option, as shown in [Figure 6.17](#).

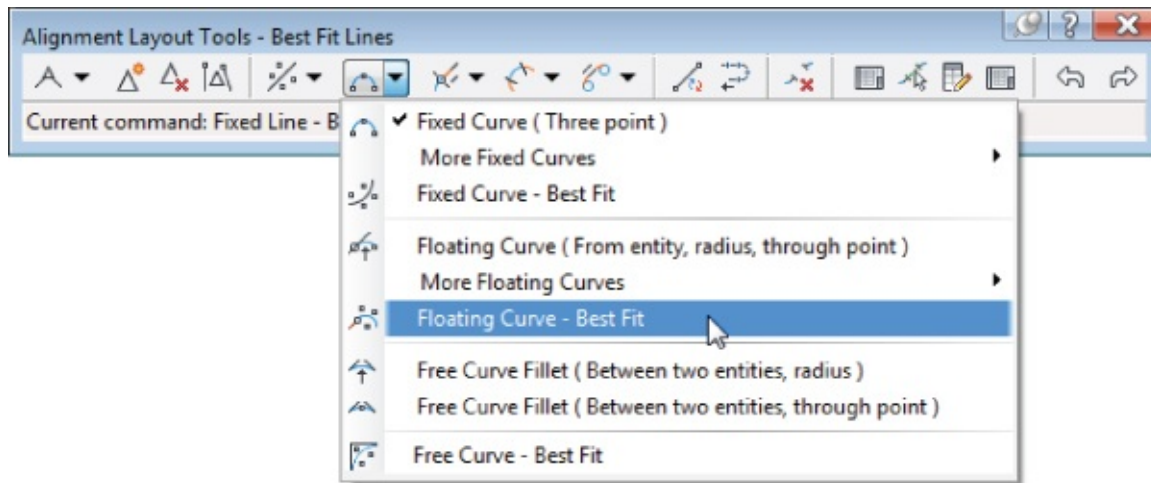


Figure 6.17 The Floating Curve - Best Fit option

- At the Select entity to attach to: prompt, select the previously defined segment close to the right end.

The Curve By Best Fit dialog appears.

- Select the From COGO Points option and click OK.
- At the Select point objects or [Number Groups]: prompt, enter G and press \leftarrow to select a point group.

The Point Group Selection dialog will appear.

- Select the Curve Point Group and click OK. You will notice the curve being created and the Regression Data tab appearing again, this time for the curve. (See [Figure 6.18](#).)

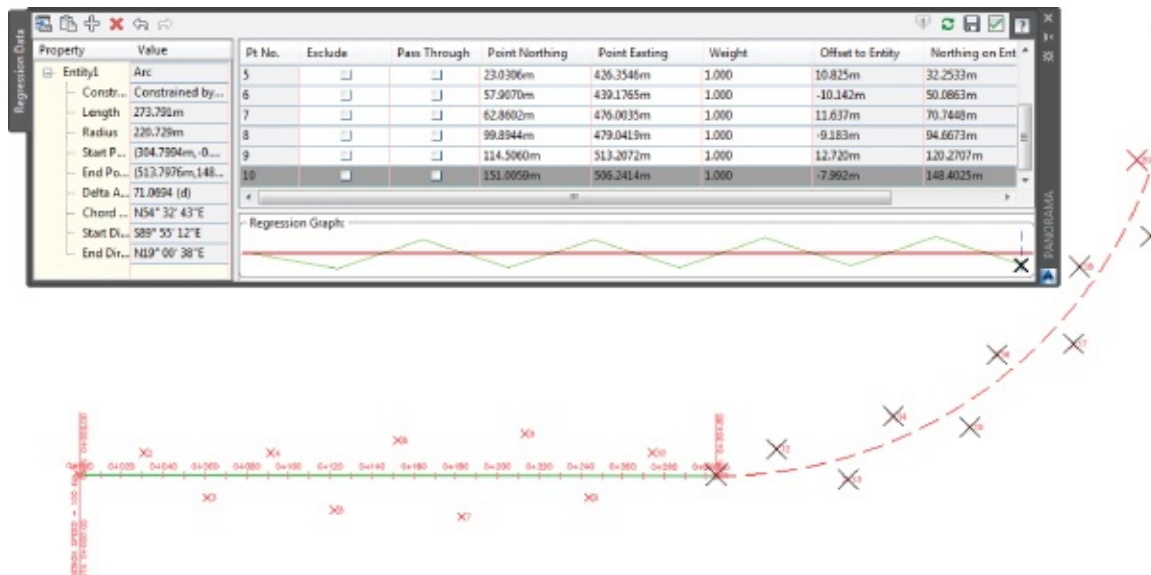


Figure 6.18 The floating curve temporary layout and Regression Data tab of Panorama

18. Click the green check mark to finish the creation of the curve and click the X on the toolbar to exit the creation of the alignment workflow.

The best fit line alignment is complete.

Keep this drawing open for the next portion of the exercise.

One of the benefits of doing individual best fit segments (lines or curves) is that it is easy to exclude points. However, sometimes you will want a single “rough and dirty” alignment full of curves and lines without having to define them individually. Next, you will create a full best fit alignment.

For the creation of the full best fit alignment you will use the same COGO points that you used for the first part of the exercise. You will do this in order to compare the results of both methods.



19. From the Home tab ➤ Create Design panel, choose the Alignment section ➤ Create Best Fit Alignment.

The Create Best Fit Alignment dialog appears.

20. Set the input type to COGO Points, and on the drop-down list of Path 1 Point Group select the _All Points point group.
21. Deselect the Create Spirals check box.
22. Change Alignment Name to **Best Fit Alignment**.
23. Verify that Alignment Style is set to Layout, Alignment Label Set is set to _No Labels, and the Show Report box is checked, as shown in [Figure 6.19](#). Then click OK to accept all the other defaults.

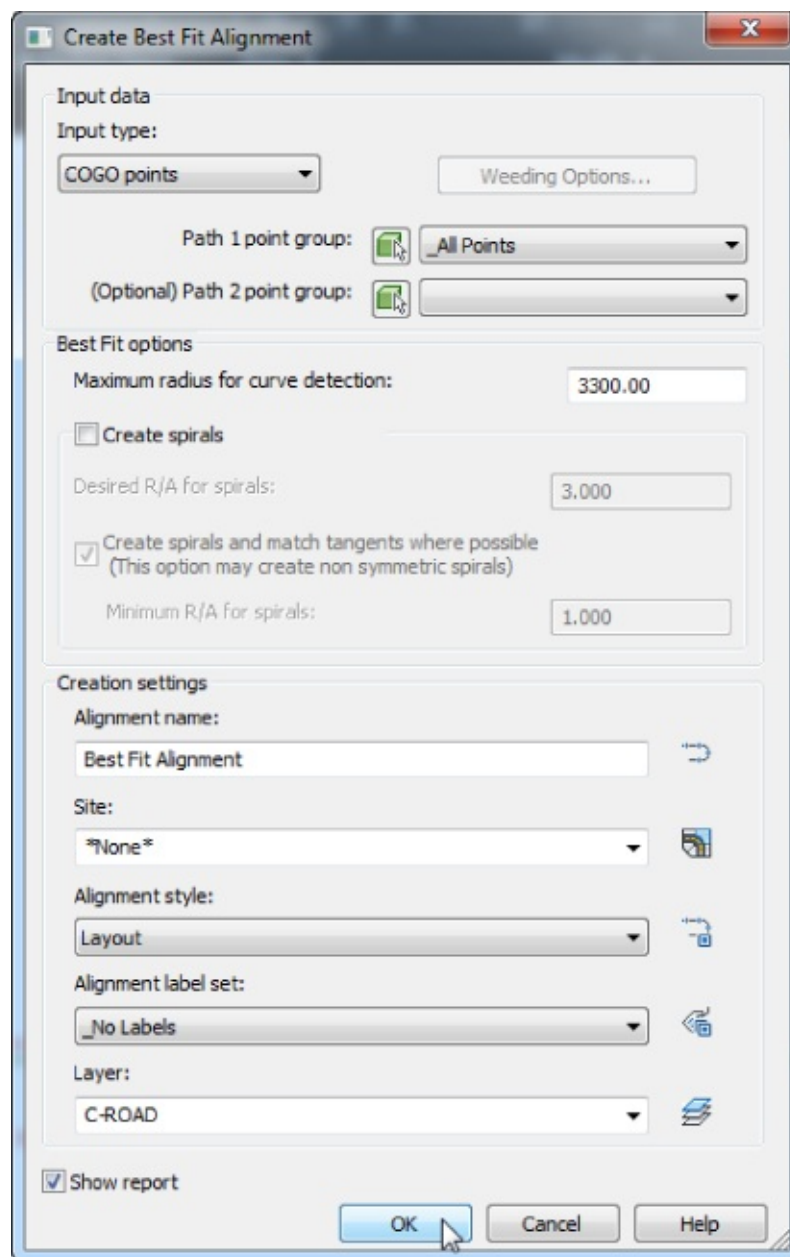


Figure 6.19 The Create Best Fit Alignment dialog

The Best Fit Report dialog opens, as shown in [Figure 6.20](#).

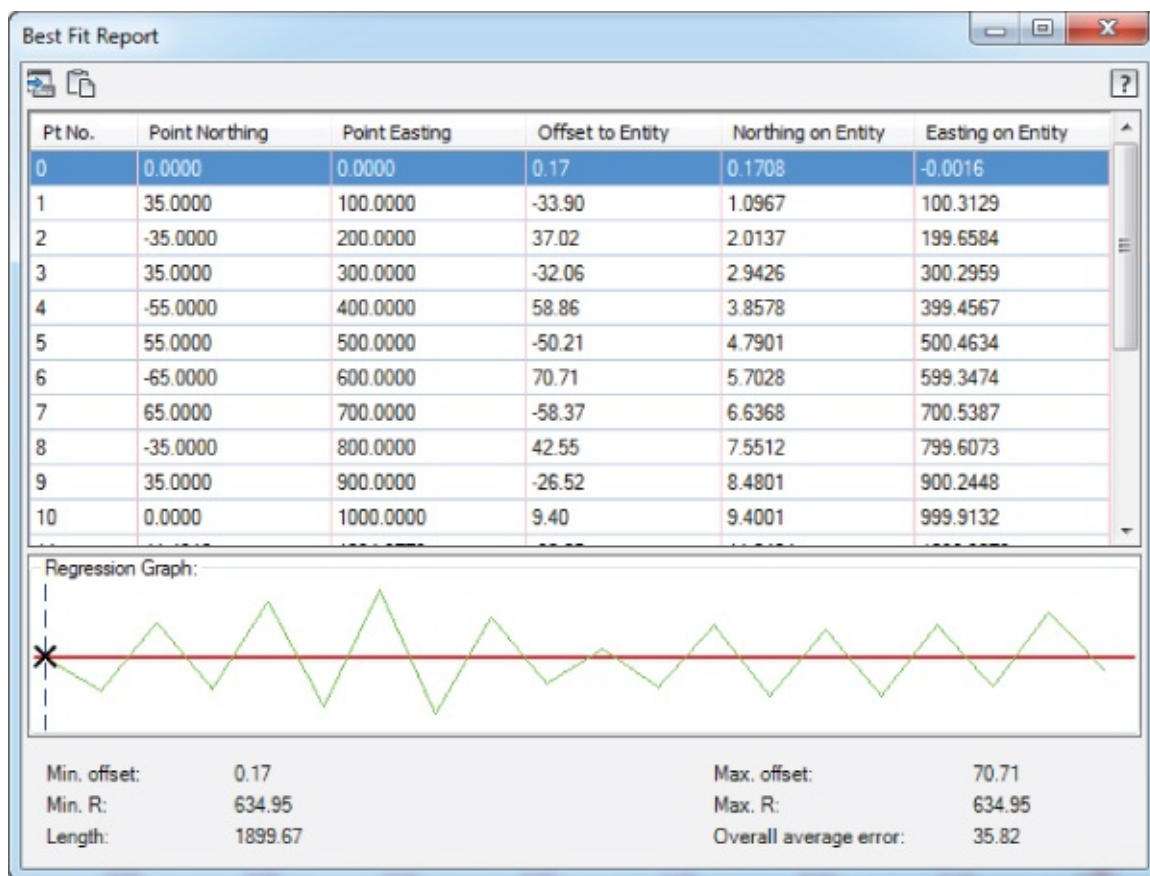


Figure 6.20 The Best Fit Report dialog

Review the results in the Best Fit Report. Notice that if you select a row, it will highlight the location on the regression graph.

24. Click the close (X) button to dismiss the dialog.

Unlike the Regression Data tab in the Panorama window, the Best Fit Report is purely informational and does not allow you to select to exclude or pass through a specific point. While the Create Best Fit Alignment procedure is fast, it may not be precise. Therefore, this command may be useful for providing a draft alignment, and then you can manually create your final alignment using results similar to those shown in the Best Fit Report that meet your specific design criteria.

The completed best fit alignment is shown together with the alignment made with the best fit lines and curves in [Figure 6.21](#). Although a best fit alignment may not give you exactly what you are looking for (especially if you like nice, whole-number radii), it generates a good starting point that you can then edit to fit your design needs.

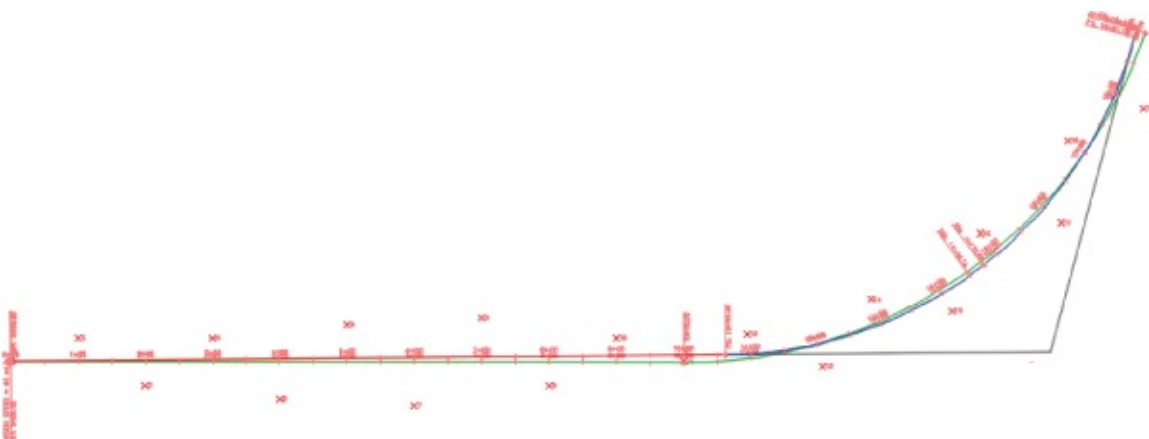




Figure 6.21 The best fit alignment

When this exercise is complete, you may close the drawing. A finished copy of this drawing is available from the book's web page with the filename 0604_AlignmentBestFit_FINISHED.dwg (0604_AlignmentBestFit_METRIC_FINISHED.dwg).

Reverse and Compound Curve Creation

Next, let's look at a more complicated alignment construction—building reverse and compound curves, connecting two curves:

1. Open the 0605_ReverseCompoundAlignment.dwg (0605_ReverseCompoundAlignment_METRIC.dwg) file.
2. For this exercise, confirm that your Endpoint Osnap is active using the Osnap settings—which can be changed when you hit the F3 key on your keyboard—since you will need to snap to endpoints for this exercise.
3. From the Home tab ➤ Create Design panel, choose Alignment ➤ Alignment Creation Tools.
The Create Alignment - Layout dialog appears.
4. In the Create Alignment - Layout dialog, do the following:
 - a. Change the Name field to **Reverse-Compound**.
 - b. Set the Alignment Style field to Layout.
 - c. Set the Alignment Label Set field to Major Minor And Geometry Points.
5. Click OK to display the Alignment Layout Tools toolbar for the reverse alignment.
6.  Start by drawing a fixed line from the west end point heading east along the tangent to the place where this tangent meets the magenta arc, using the same Fixed Line (Two Points) tool as used in an earlier exercise. Do the same thing for the end tangent of the alignment, starting from the end of the cyan arc and finishing at the east endpoint of that tangent. Press Enter to finish drawing the line segments. You will notice that the second segment will not have any labels applied to it since even if it is part of the alignment, it is not yet connected to any segments within the alignment.
7.  Use the Floating Curve (From Entity, Radius, Through Point) tool to connect a curve from the end point of the first drawn tangent.
8. At the Select entity to attach to: prompt, pick the right end of the west tangent. At the Specify radius or [Degree of curvature]: prompt, enter **200** ↵ (for metric, **60.96** ↵).
9. At the Is curve solution angle [Greaterthan180 Lessthan180] <Lessthan180>: prompt, press ↵ to accept the default.
10. At the Specify end point: prompt, click the other end of the arc, where the magenta arc meets the green arc.
11. The command repeats; at the Select entity to attach to: prompt, select the right side of the curve that you just created.
12. At the Specify radius or [Degree of curvature]: prompt, enter **300** ↵ (for metric, **91.44** ↵).
13. At the Is curve solution angle [Greaterthan180 Lessthan180] <Lessthan180>: prompt,

press \leftarrow to accept the default.

14. The program detects that you are attaching a curve to a curve; at the Is curve compound or reverse to curve before? [Compound Reverse] <Compound>: prompt, enter **R** \leftarrow to specify that it is a reverse curve.
15. At the Specify end point: prompt, click the endpoint of the second arc, or the connecting point between the green and blue arcs.
16. The command repeats. Repeat steps 11–14, but enter 250 (for metric, **76.20**) for a radius and choose Compound as the type of curve.
17. Press \leftarrow to end the command. You should be able to see the stationing through all the arcs you created so far.



18. For the final arc you will use a free curve segment. Use the Free Curve Fillet (Between Two Entities, radius) tool to define the last arc segment that connects the previously defined curve to the second tangent segment. For radius, enter **150** (for metric, **45.72**) and choose curve type Reverse. Press \leftarrow to end the creation process and see the stationing updated.

You will notice that upon the connection of the last arc to the segment, the missing labels will be added to the tangent, since now it is connected to the main chain. You can see the final result of the layout in [Figure 6.22](#).

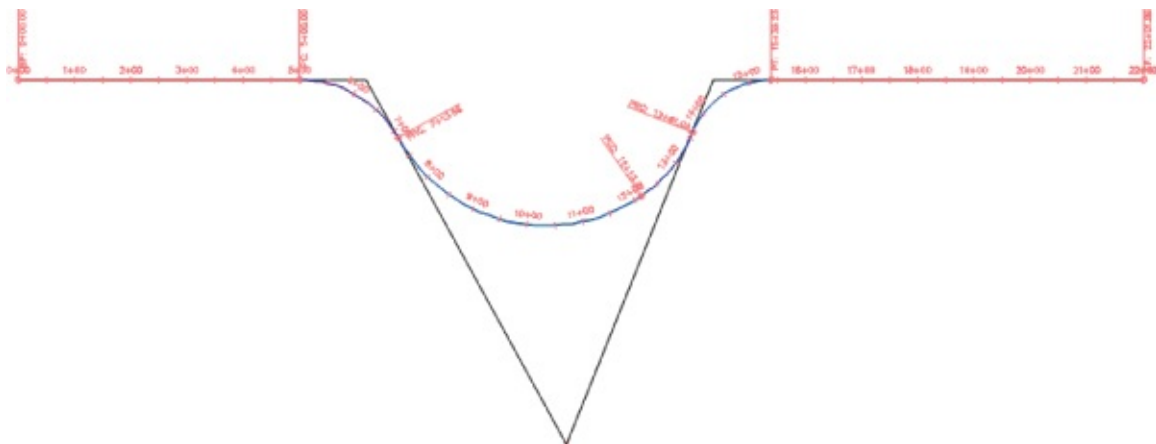


Figure 6.22 Segment layout for the reverse and compound curve alignment

The alignment now contains a perfect series of reverse-compound-reverse curves. Move any of the pieces and you'll see the other segments react to maintain the relationships shown in [Figure 6.23](#). The flexibility of the Civil 3D tools allows you to explore an alternative solution (the reverse curve) as opposed to the basic solution. Flexibility is one of the strengths of Civil 3D.

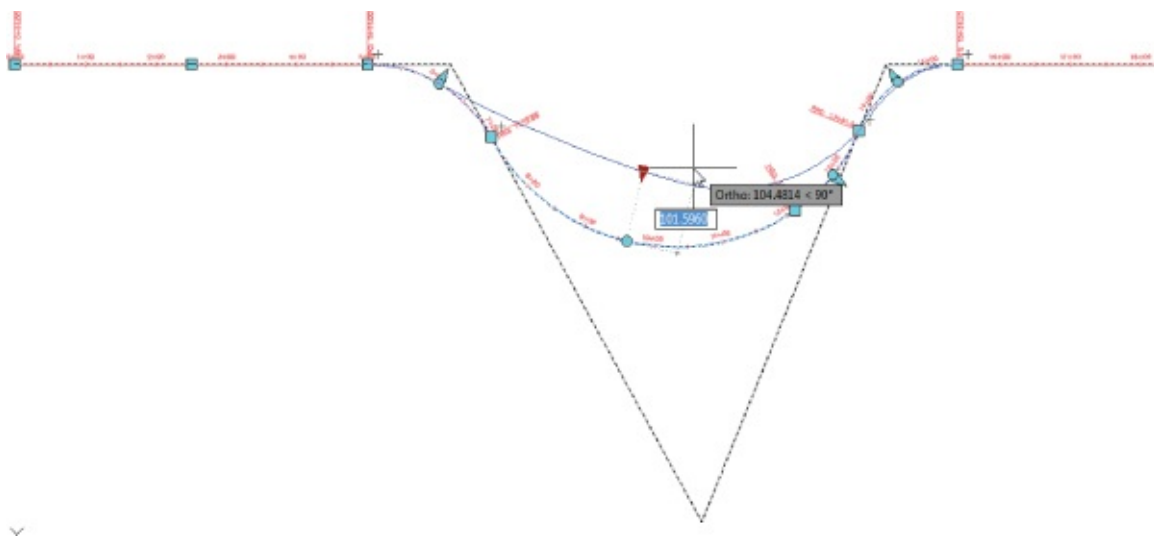



Figure 6.23 Curve relationships during a grip edit

You've completed your initial reverse and compound curve layout. Unfortunately, the curve design may not be acceptable to the designer, but you'll look at those changes later in the section "Component-Level Editing."

When this exercise is complete, you may close the drawing. A finished copy of this drawing is available from the book's web page with the filename 0605_ReverseCompoundAlignment_FINISHED.dwg (0605_ReverseCompoundAlignment_METRIC_FINISHED.dwg).

Creating with Design Constraints and Check Sets

Civil 3D allows you to use design constraints and design check sets during the process of creating alignments and design profiles. Typically, these constraints check for things like curve radius, length of tangents, and so on. Design constraints use information from AASHTO or other design manuals to set curve requirements. Check sets allow users to create their own criteria to match local requirements, such as subdivision or county road design. First, you'll make one quick set of design checks:

1. Open the 0606_AlignmentCheck.dwg (0606_AlignmentCheck_METRIC.dwg) file.
2. On the Settings tab in Toolspace, expand the Alignment > Design Checks branch.
3. Right-click the Line category, and select New to display the New Design Check dialog.
4. Change the name to **Subdivision Tangent**.
5.  Click the Insert Property drop-down menu, and select Length.
6. Click the greater-than/equals symbol (\geq) button, and then enter **100** (for metric, **30.48**) in the Expression field, as shown in [Figure 6.24](#).

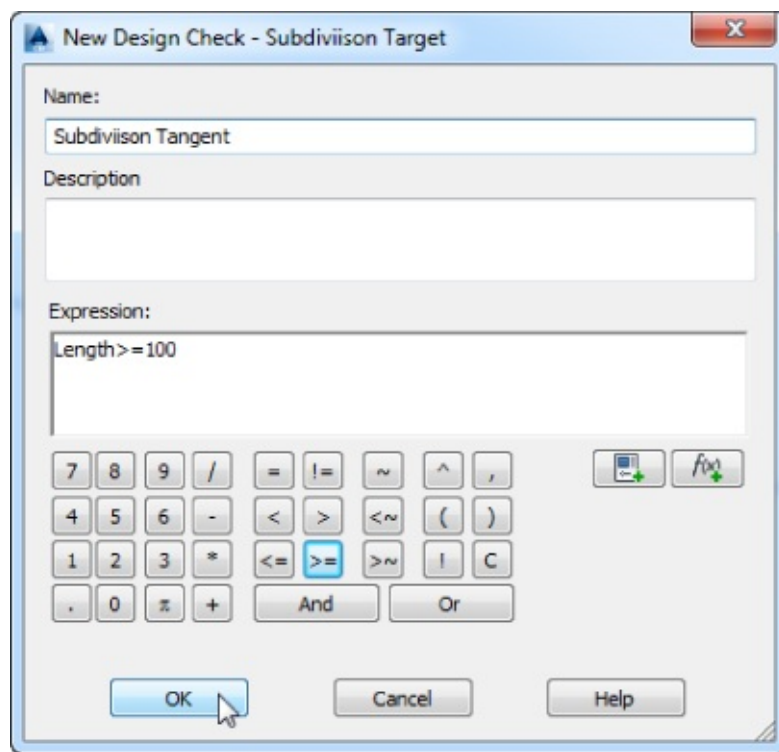


Figure 6.24 The completed Subdivision Target design check

When complete, your dialog should look like [Figure 6.24](#). Click OK to accept the settings in the dialog.

7. Right-click the Curve category, and select New to display the New Design Check dialog.
8. Change the name to **Subdivision Radius**.
9. Click the Insert Property drop-down menu, and select Radius.
10. Click the greater-than/equals symbol (\geq) button, and then enter **200** (for metric, **60.96**) in the Expression field, as shown in [Figure 6.25](#).

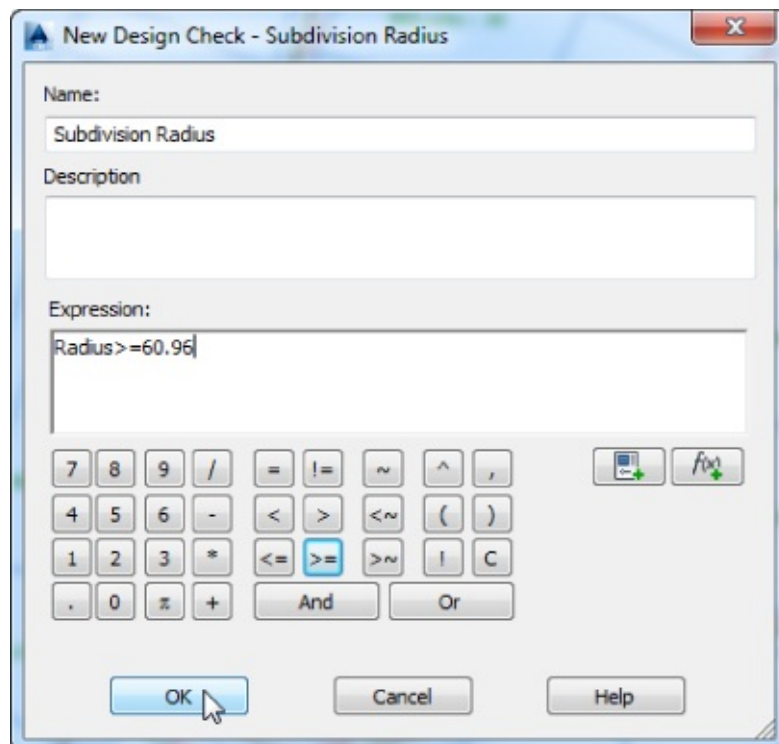


Figure 6.25 The completed Subdivision Radius design check

1. Click OK to accept the settings in the dialog.
2. Right-click the Design Check Sets folder, and select New to display the Alignment Design Check Set dialog.
3. On the Information tab, change the name to **Mastering Subdivision**, and then switch to the Design Checks tab.
4. Choose Line from the Type drop-down list and select the Subdivision Tangent line check that you just created.
5. Click the Add button to add the Subdivision Tangent check to the set.
6. Choose Curve from the Type drop-down list and select the Subdivision Radius curve check that you just created.
7. Click the Add button again to complete the set, as shown in [Figure 6.26](#).

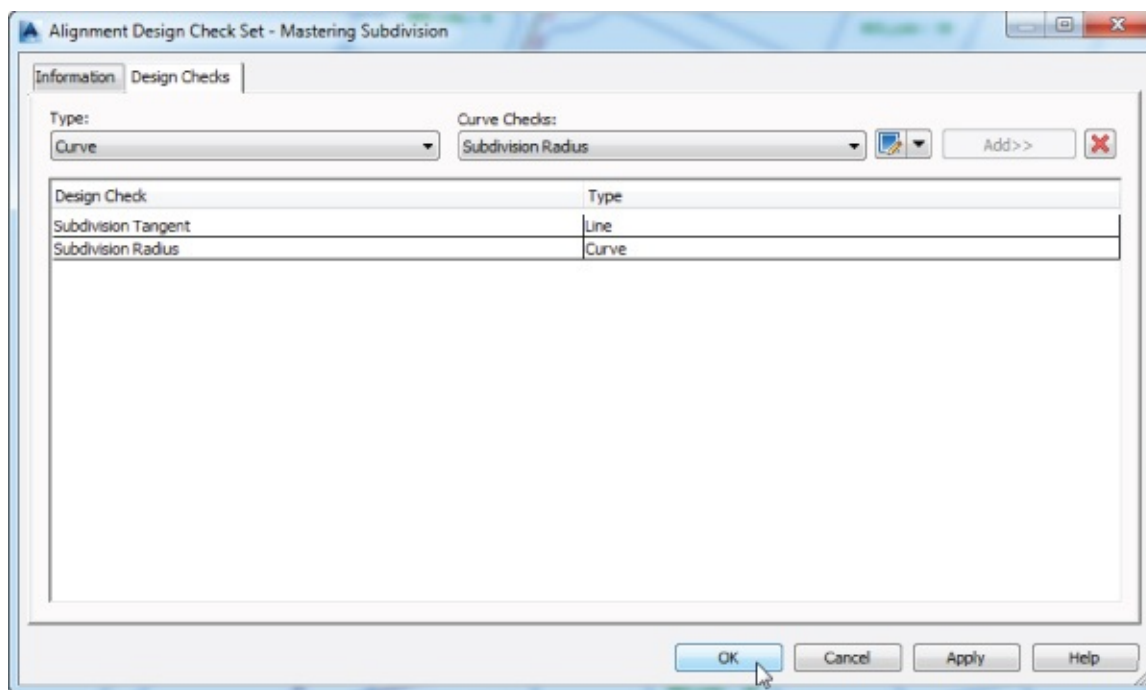


Figure 6.26 The completed Mastering Subdivision design check set

8. Click OK to accept the settings in the dialog.

You may keep this drawing open to continue to the next exercise or use the finished copy of this drawing available from the book's web page 0606_AlignmentCheck_FINISHED.dwg (0606_AlignmentCheck_METRIC_FINISHED.dwg).

Once you've created a number of design checks and design check sets, you can apply them as needed during the design and layout stage of your projects.

Design Checks vs. Design Criteria

What's the difference between design checks and design criteria? A design check uses basic properties such as radius, length, grade, and so on, to check a particular portion of an alignment or profile. These constraints are generally dictated by a governing agency based on the type of road involved. Design criteria use speed and related values from design manuals such as AASHTO to establish these geometry constraints. Think of design criteria as a suite of check sets with different sets for each city, type of street, design speed, and so on.

In the next exercise, you'll see the results of your Mastering Subdivision check set in action:

1. If it's not still open from the previous exercise, open the 0606_AlignmentCheck_FINISHED.dwg (0606_AlignmentCheck_METRIC_FINISHED.dwg) file.
2. Change to the Prospector tab in Toolspace, and expand the Alignments > Centerline Alignments branch.
3. Right-click ROAD D and select Alignment Properties.
4. Change to the Design Criteria tab, and set the start station design speed to **30 mi/h** (or **48 km/h**), as shown in [Figure 6.27](#).

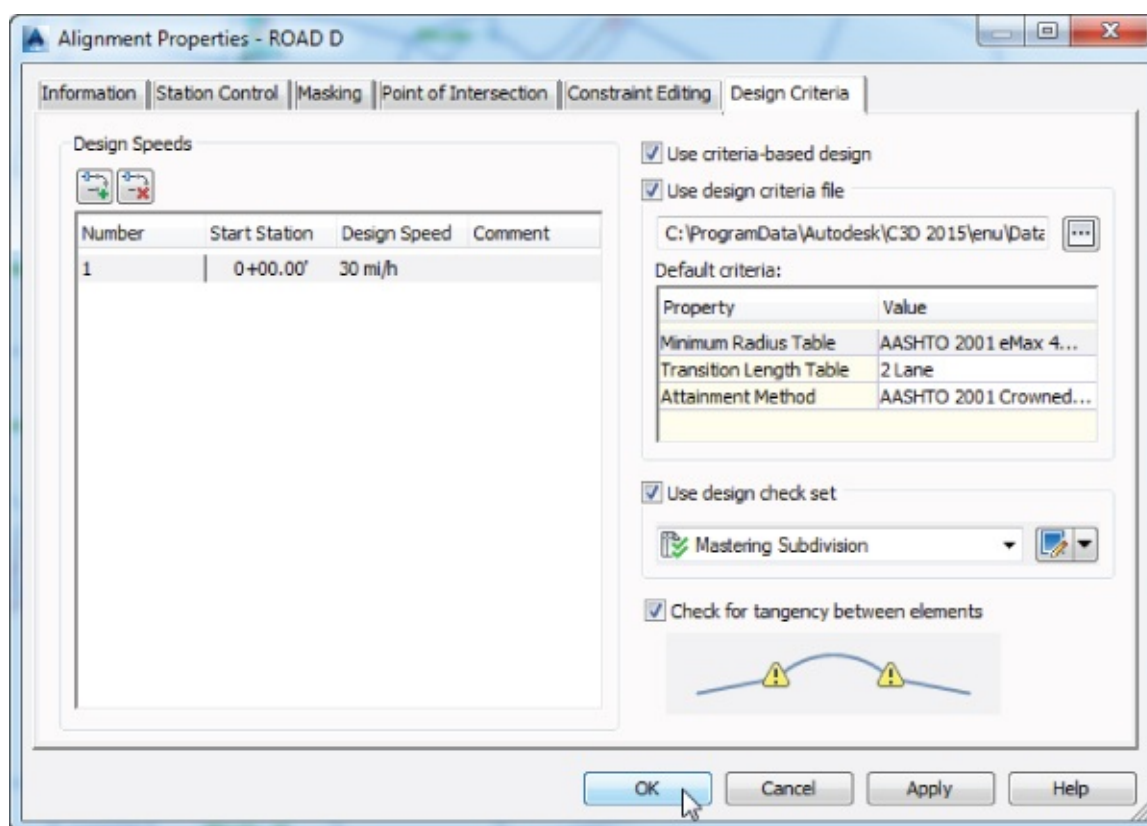


Figure 6.27 Setting up design checks from Alignment Properties

5. Verify that all of the check boxes are selected and that Use Design Check Set is set to Mastering Subdivision, as shown in [Figure 6.27](#).

Note that the Use Criteria-Based Design check box must be selected to activate the other two.

6. Click OK to accept the settings in the dialog.

You could have alternatively set the design criteria when you were originally creating the alignment. Notice that all the curves along the alignment fail to meet the design criteria.

If you hover your cursor over the exclamation-point symbol, as shown in [Figure 6.28](#), it will indicate which design criteria and design checks have been violated.

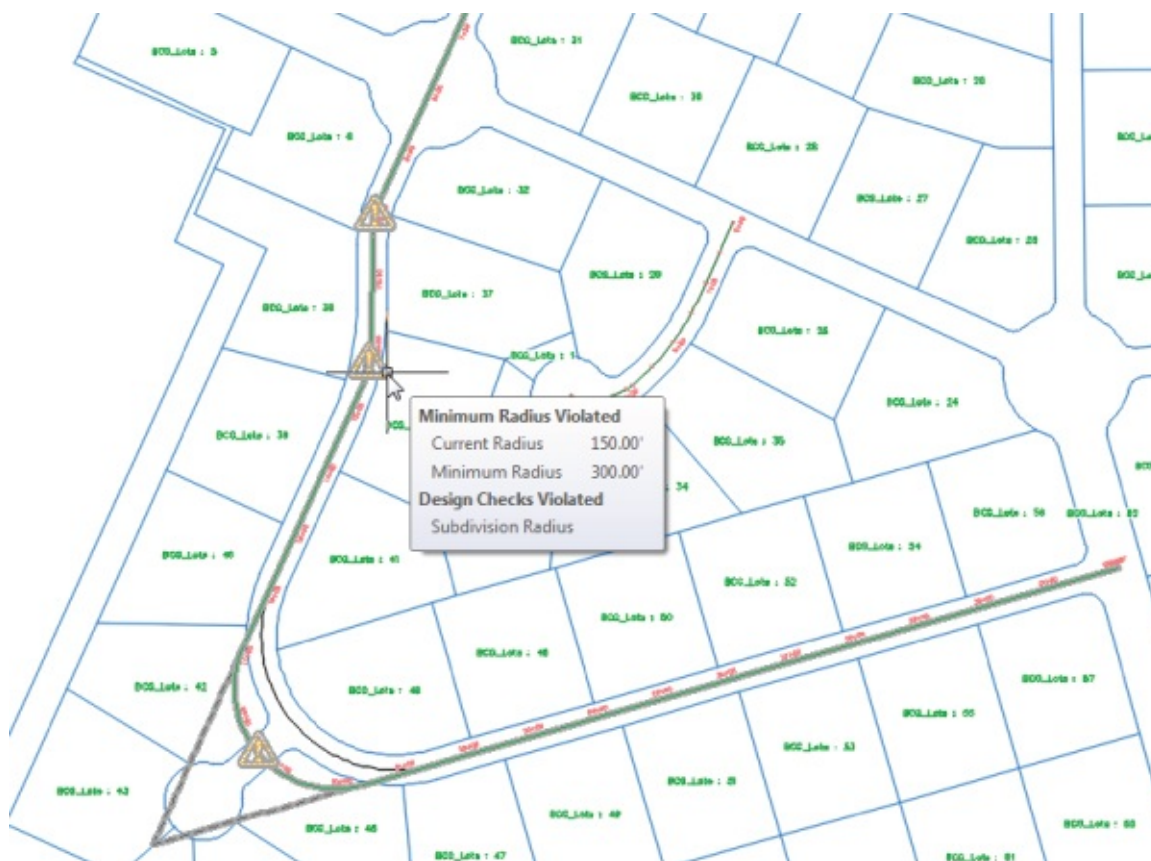


Figure 6.28 Completed alignment layout with design criteria and design checks failure indicator

When this exercise is complete, you may close the drawing. A finished copy of this drawing is available from the book's web page with the filename 0606_AlignmentChecked_FINISHED.dwg (0606_AlignmentChecked_METRIC_FINISHED.dwg).

Now that you know how to create an alignment that doesn't pass the design checks, let's look at different ways of modifying alignment geometry. As you correct and fix alignments that violate the assigned design checks, the warning symbols indicating those violations will disappear.

Editing Alignment Geometry

The general power of Civil 3D lies in its flexibility in design. The documentation process is tied directly to the objects involved, so making edits to those objects doesn't create hours of work in updating the documentation. With alignments, there are three major ways to edit the object's horizontal geometry without modifying the underlying construction:

Graphical Grip Editing Select the object, and use the various grips to move critical points. This method works well for realignment, but precise editing for things like a radius or direction can be difficult without the ability to enter values.

Tabular Design Use Panorama to view all the alignment segments and their properties; type in values to make changes. This approach works well for modifying lengths or radius values, but setting a

tangent perpendicular to a line in the drawing or placing a control point in a specific location is better done graphically.

Component-Level Editing Use the Alignment Layout Parameters dialog to view the properties of an individual piece of the alignment. This method makes it easy to modify one piece of an alignment that is complicated and that consists of numerous segments, whereas picking the correct field in a Panorama view can be difficult.

In addition to these methods, you can use the Alignment Layout Tools toolbar to make edits that involve removing components or adding to the underlying component count. The following exercises look at the three simple edits and then explain how to add and remove components of an alignment without redefining it.

Grip Editing

You already used graphical editing techniques when you created alignments from polylines, but those techniques can also be used with considerably more precision than shown previously. The Alignment object has a number of grips that reveal important information about the elements' creation (see [Figure 6.29](#)).

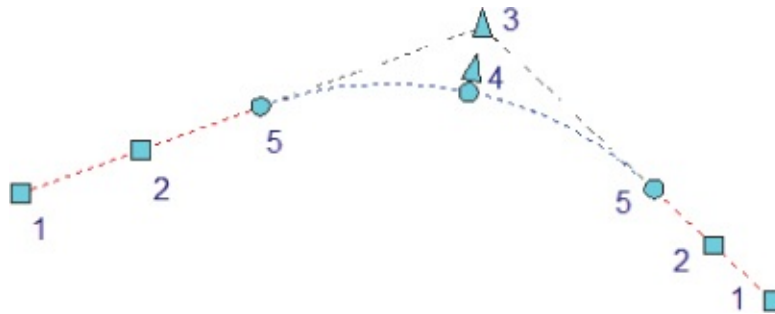


Figure 6.29 Alignment grips

You can use the grips in [Figure 6.29](#) to do the following actions:

Grip 1 The square pass-through grip at the beginning of the alignment indicates a segment point that can be moved at will to change the length and angle of the line. This grip doesn't attach to any other components.

Grip 2 The square pass-through grip in the middle of the tangents allows the element to be moved while maintaining the length and angle. Other components attempt to hold their respective relationships, but moving the grip to a location that would break the alignment will not be allowed by the software. The change will be limited to the point where the break would occur.

Grip 3 The triangular grip at the intersection of tangents indicates a Point of Intersection (PI) relationship. The curve shown is a function of these two tangents and is free to move on the basis of incoming and outgoing tangents while still holding a radius.

Grip 4 The triangular and circular radius grips near the middle of the curve allow the user to modify the radius directly. The tangents must be maintained, so any selection that would break the alignment geometry isn't allowed.

Grip 5 The circular pass-through grip on the end of the curve allows the radius of the curve to be indirectly changed by changing the Point of Curvature (PC) of the alignment. You make this change by changing the curve length, which in effect changes the radius.

In the following exercise, you'll use grip edits to make one of your alignments match the planner's intent more closely:

1. Open the 0607_AlignmentEditing.dwg (0607_AlignmentEditing_METRIC.dwg) file.
2. In Prospector, expand the Alignments > Centerline Alignments branch.
3. Right-click ROAD D and select Zoom To if the alignment is not within view.
4. Zoom in to the first curve of the ROAD D alignment, near station 10+00 (0+300 for metric users).

This curve was inserted in a previous exercise using the default settings and doesn't match the guiding polyline well. If the warning symbol is in the way after zooming in, please use the regen command to update the size of the warning symbol.

5. Select the ROAD D alignment to activate the grips.
6. Select the triangular grip shown in [Figure 6.30](#), and use a Perpendicular Osnap to place it on the original polyline arc outline. When the triangular grip is used, the radius is changed without changing the PI.

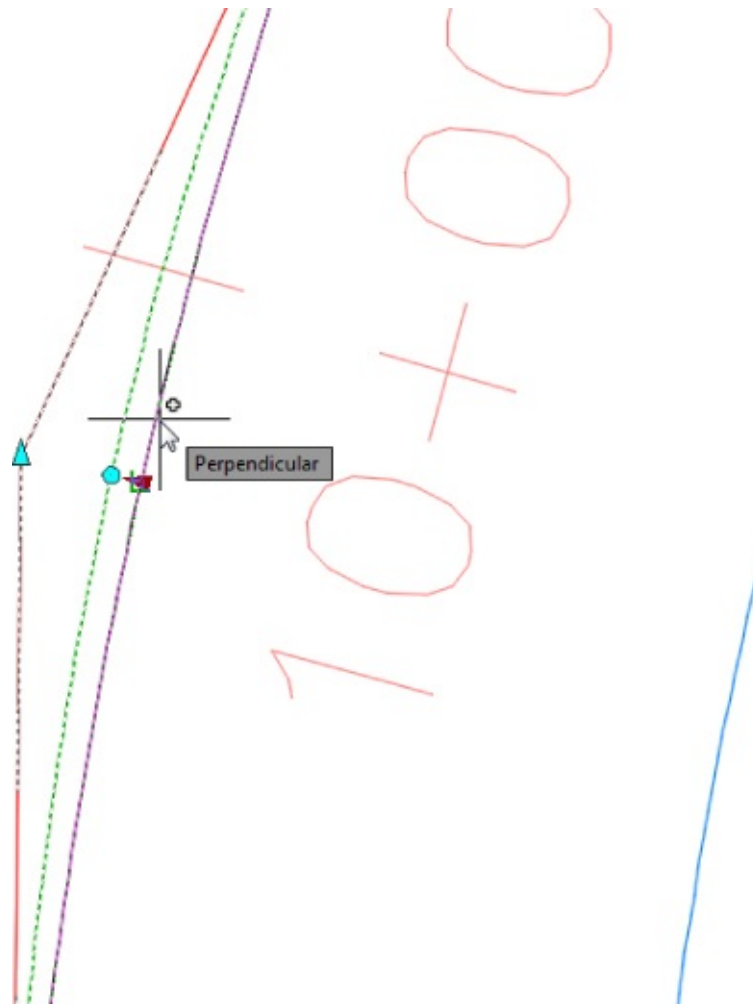


Figure 6.30 Grip-editing the ROAD D curve

Keep this drawing open for the next exercise.

Your alignment of ROAD D now follows the planned layout. With no knowledge of the curve properties or other driving information, you've quickly reproduced the design's intent.

Tabular Design

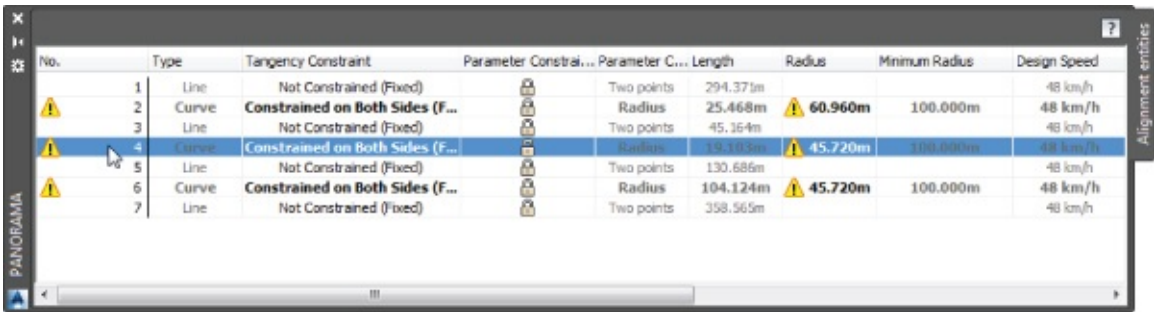
When you're designing on the basis of governing requirements, one of the most important elements is meeting curve radius requirements. It's easy to work along an alignment in a tabular view, verifying that the design meets the criteria. In this exercise, you'll verify that your curves are suitable for the design:

1. Continuing in the drawing from the previous exercise, zoom to the ROAD D alignment, and select it to activate the Alignment contextual tab.
2. From the Alignment contextual tab > Modify panel, choose Geometry Editor. You can also access the same location by selecting the alignment, right-clicking, and from the context menu selecting the Edit Alignment Geometry option.

The Alignment Layout Tools toolbar opens.

3.  Select the Alignment Grid View tool.

Panorama appears as shown in [Figure 6.31](#), with all the elements of the alignment listed along the left. You can use the scroll bar along the bottom to review the properties of the alignment if necessary. Note that the columns can be resized as well as toggled off by right-clicking the column headers. The segment selected in the alignment grid view is also highlighted in the model, which can also make identifying the segment easier. Note that the design check failure indicators that are shown on the plan also appear in the table.



No.	Type	Tangency Constraint	Parameter Constrai...	Parameter C...	Length	Radius	Minimum Radius	Design Speed
1	Line	Not Constrained (Fixed)		Two points	294.37m			48 km/h
2	Curve	Constrained on Both Sides (F...		Radius	25.468m	60.960m	100.000m	48 km/h
3	Line	Not Constrained (Fixed)		Two points	45.364m			48 km/h
4	Curve	Constrained on Both Sides (F...		Radius	18.123m	45.720m	100.000m	48 km/h
5	Line	Not Constrained (Fixed)		Two points	130.686m			48 km/h
6	Curve	Constrained on Both Sides (F...		Radius	104.124m	45.720m	100.000m	48 km/h
7	Line	Not Constrained (Fixed)		Two points	358.565m			48 km/h

Figure 6.31 Alignment Entities vista for ROAD D alignment

Creating and Saving Custom Panorama Views

If you right-click a column heading in Panorama and select the Customize Columns option at the bottom of the menu, you're presented with a Customize Columns dialog. This dialog allows you to set up any number of column views, such as Road Design or Stakeout, to show a set of different columns. These views can be saved, allowing you to switch between views easily.

Notice that you can click many of the fields to edit them.

4. Change the radius value of segment 4 to **400** (or **121.92** for metric users).
5. Click the close X button (notice that in the Panorama window, there is no green check mark to accept the changes) to dismiss Panorama, and then close the Alignment Layout Tools toolbar.



Keep this drawing open for the next exercise.

Panorama allows for quick and easy review of designs and for precise data entry, if required. Grip editing is commonly used to place the line and curve of an alignment in an approximate working location, but then you use the tabular view in Panorama to make the values more reasonable—for example, to

change a radius of 292.56 to 300.00. Also note that for this part of the exercise, when we changed the radius, the violation for the design checks got cleared for the curve, providing feedback that we meet design requirements.

Component-Level Editing

Once an alignment gets more complicated, the tabular view in Panorama can be hard to navigate, and deciphering which element is which can be difficult. In this case, reviewing individual elements by picking them onscreen can be easier:

1. Continuing in the drawing from the previous exercise, zoom to the ROAD D alignment, and select it to activate the contextual Alignment tab if not still active from the previous exercise.
2. If the Alignment Layout Tools toolbar for ROAD D is not still open from the previous exercise, from the Alignment contextual tab ► Modify panel, choose Geometry Editor.
3.  Select the Sub-Entity Editor tool to open the Alignment Layout Parameters dialog for ROAD D.
4.  Select the Pick Sub-Entity tool on the Alignment Layout Tools toolbar.
5. Pick the third and last curve on this alignment to display its properties in the Alignment Layout Parameters dialog (see [Figure 6.32](#)).

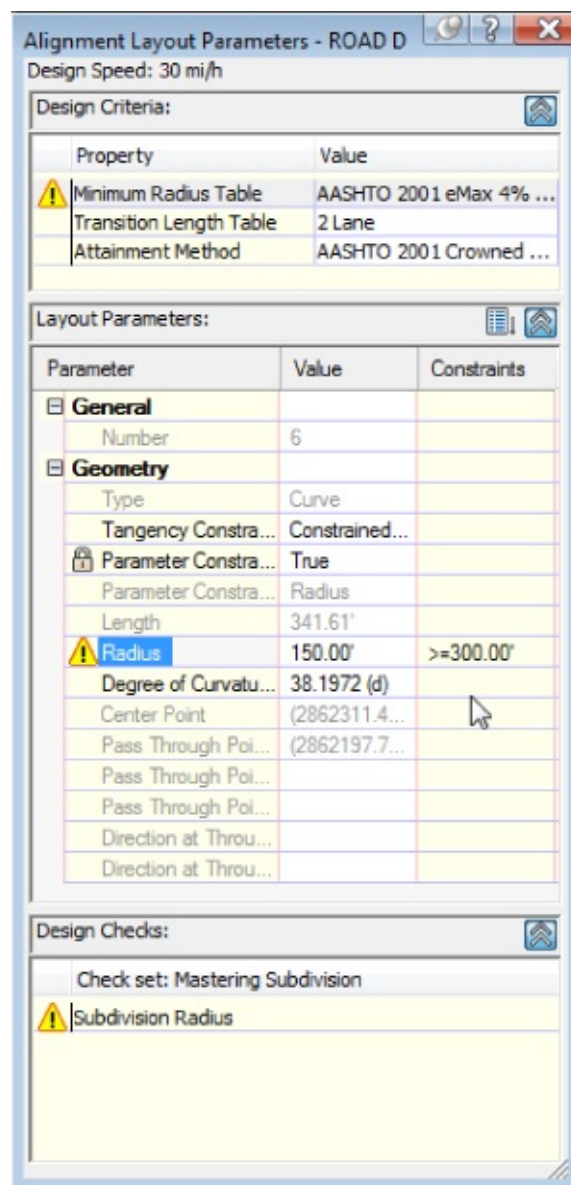


Figure 6.32 The Alignment Layout Parameters dialog for the last curve on the ROAD D alignment. Notice that the Tangency Constraint value currently reports Constrained On Both Sides (Free).

6. Change Parameter Constraint Lock to **False**.

Notice that this will enable the ability to set many of the values that previously were grayed out and could not be set.

7. Change Parameter Constraint Lock back to the original status. Change the value in the Radius field to **175** (for metric, **53.34**), and watch the screen update.

This value is too far from the original design intent to be a valid alternative, and the tangency with the next line was not maintained. We will reinvestigate the tangency constraints in the next exercise.

8. Change the value in the Radius field to **200** (for metric, **60.96**), and again watch the update.

This value is closer to the design and is acceptable despite being less than the minimum radius for the 30 mi/hr design speed.

9. Close the Alignment Layout Parameters dialog and the Alignment Layout Tools toolbar.

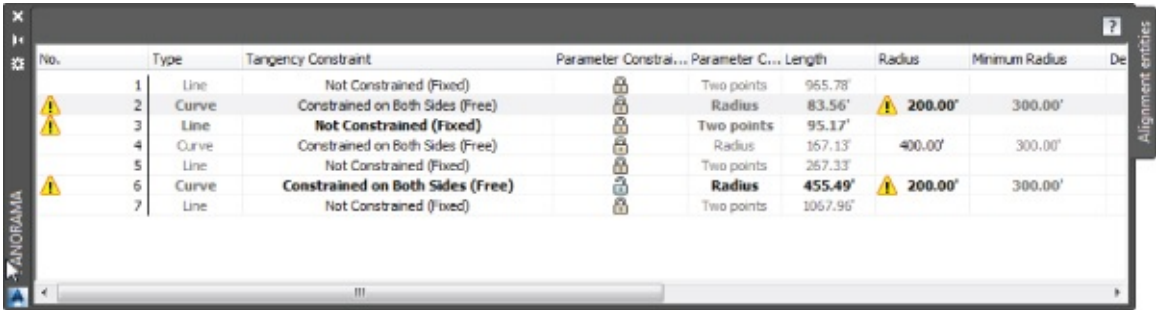
You may keep this drawing open to continue to the next exercise or use the finished copy of this drawing available from the book's web page, 0607_AlignmentEditing_FINISHED.dwg

By using the Alignment Layout Parameters dialog, you can concisely review all the individual parameters of a component. In each of the editing methods discussed so far, you've modified the elements that were already in place. We will look at how to change the makeup of the alignment itself, not just the values driving it. But first, let's look at some of the constraints to understand how they work.

Understanding Alignment Constraints

In the previous exercise you were exposed to constraints. The various constraints will help keep geometry together to maintain tangency or to maintain the radius.

When an alignment is created from objects, the lines are not constrained (Fixed). This is the same if you select the Fixed Lines (Two Points) tool from the Alignment Layout Tools toolbar. The curves are all constrained on both sides (Free). When you grip-edit a line or arc, the lines maintain tangency to the arc, but the arc loses its original radius, as shown in the figures at the beginning of this chapter. You may have noticed in Panorama the Tangency Constraint field that we looked at briefly in the previous exercise. You can click any segment and change constraints ([Figure 6.33](#)). You can also change the constraints in the Sub-Entity Editor.



No.	Type	Tangency Constraint	Parameter Constr...	Parameter C...	Length	Radius	Minimum Radius	De
1	Line	Not Constrained (Fixed)		Two points	955.78			
2	Curve	Constrained on Both Sides (Free)		Radius	83.56'	200.00'	300.00'	
3	Line	Not Constrained (Fixed)		Two points	95.17'			
4	Curve	Constrained on Both Sides (Free)		Radius	167.13'	400.00'	300.00'	
5	Line	Not Constrained (Fixed)		Two points	267.33'			
6	Curve	Constrained on Both Sides (Free)		Radius	455.49'	200.00'	300.00'	
7	Line	Not Constrained (Fixed)		Two points	1067.96'			

[Figure 6.33](#) The tangency constraints in Panorama

In this exercise you will experiment with constraints and their effect on the behavior of an alignment:

1. If your file is not still open from the previous exercise, open the 0607_AlignmentEditing_FINISHED.dwg (0607_AlignmentEditing_METRIC_FINISHED.dwg) file.
2. Select the ROAD D alignment to activate the Alignment contextual tab.
3. From the Alignment contextual tab > Modify panel, choose Geometry Editor.
4. In the Alignment Layout Tools toolbar, select the Alignment Grid View.
5. Click in the Tangency Constraint field for the third curve and change it to Not Constrained (Fixed).

Notice that when you change the third curve from Constrained On Both Sides (Free) to Not Constrained (Fixed), the segment before the curve changes from Not Constrained (Fixed) to Constrained By Next (Floating).

6. Grip-edit the curve using the circular grip on the midpoint of the curve and notice how the curve radius increases to account for the change ([Figure 6.34](#)). Also notice that the tangents are also changing to account for the change

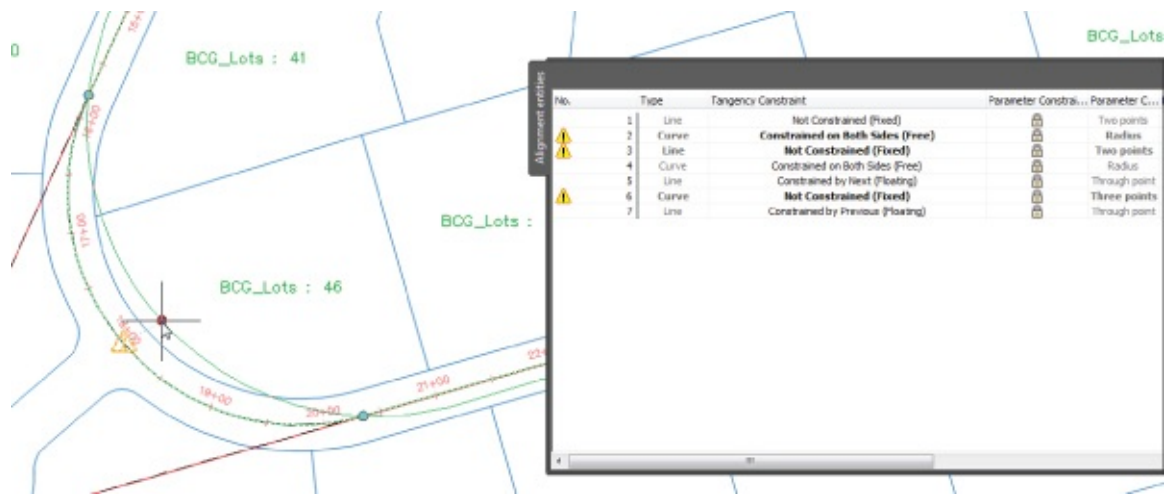


Figure 6.34 Gripping on an alignment with the tangent before the curve set to Constrained By Next (Floating) and the curve set to Not Constrained (Fixed)

You may need to move Panorama out of the way to do this, but don't close it yet.

7. Press Esc on your keyboard to cancel the grip edit. If you inadvertently moved the curve, you can use the Undo command.

8. In Panorama, click in the Tangency Constraint field for the same curve and change it to **Constrained By Previous (Floating)**. The line before the curve segment will change back to Not Constrained (Fixed).

9. Grip-edit the curve again using the same midpoint grip and notice how the curve changes its radius but the first line maintains its bearing, while the following segment since it is floating adjusts to the new radius ([Figure 6.35](#)).

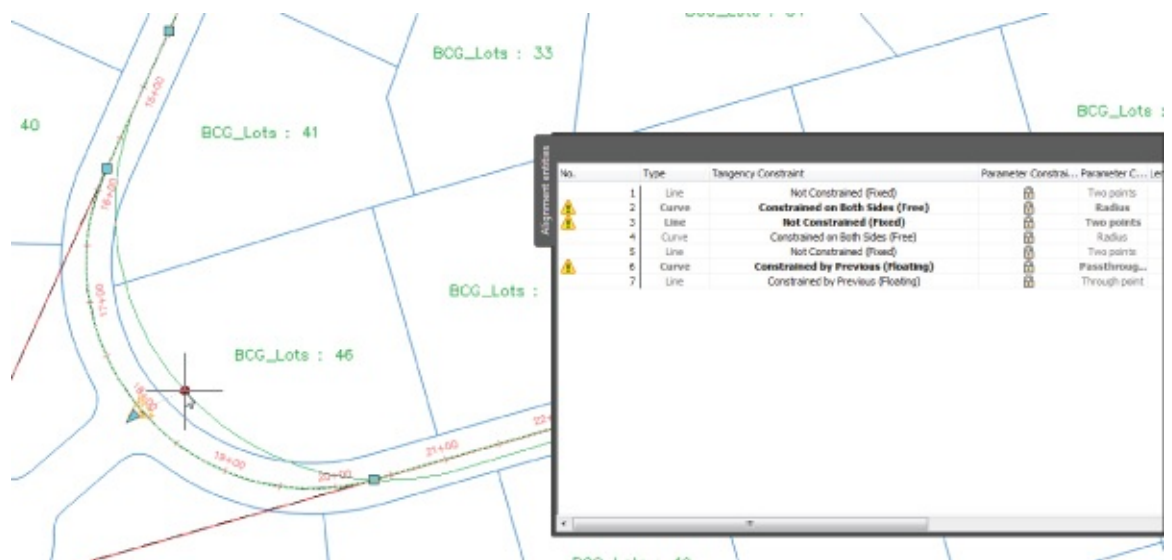


Figure 6.35 Gripping on an alignment with the tangent before the curve set to Not Constrained (Fixed) and the curve using Constrained By Previous (Floating)

10. Press Esc on your keyboard to cancel the grip edit. If you inadvertently moved the curve, you can use the Undo command.

11. Click in the Tangency Constraint field for the same curve and change it to **Constrained By Next (Floating)**.

The lines before it and after it will change to Not Constrained (Fixed).

2. Grip-edit the curve using the midpoint grip and notice that the curve now maintains its tangency with the following line but not the previous line ([Figure 6.36](#)).

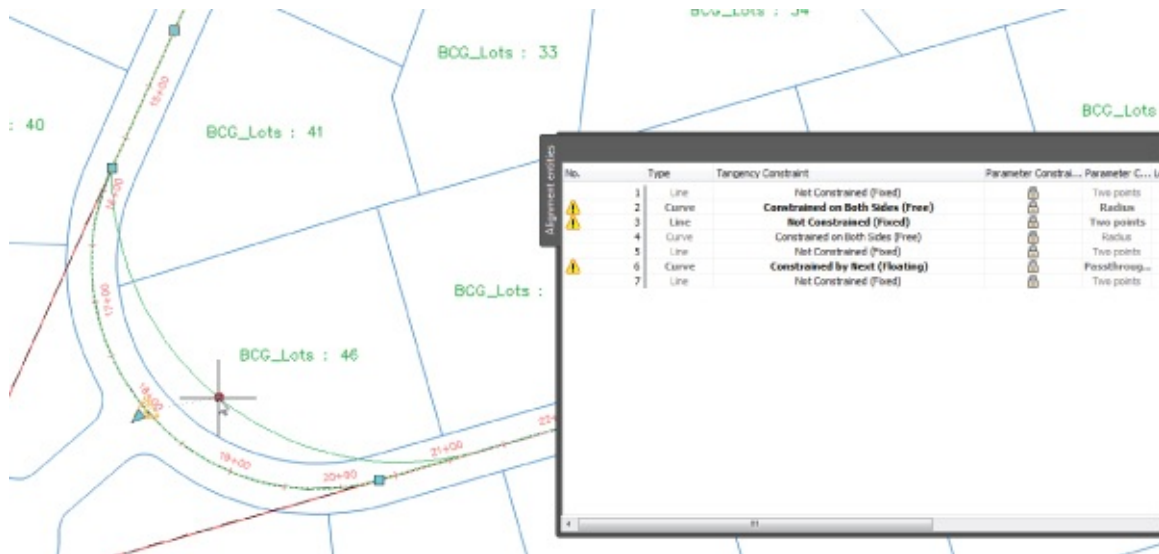


Figure 6.36 Gripping on an alignment with the curve set to Constrained By Next (Floating) and the following line set to Not Constrained (Fixed)

3. Press Esc on your keyboard to cancel the grip edit action. If you inadvertently moved the curve, you can use the Undo command.
4. Click in the Tangency Constraint field for the first curve of the alignment and change it to **Constrained On Both Sides (Free)**.
5. Grip-edit the curve using the same midpoint grip. See that the curve maintains its tangency with both the previous and the following lines ([Figure 6.37](#)).

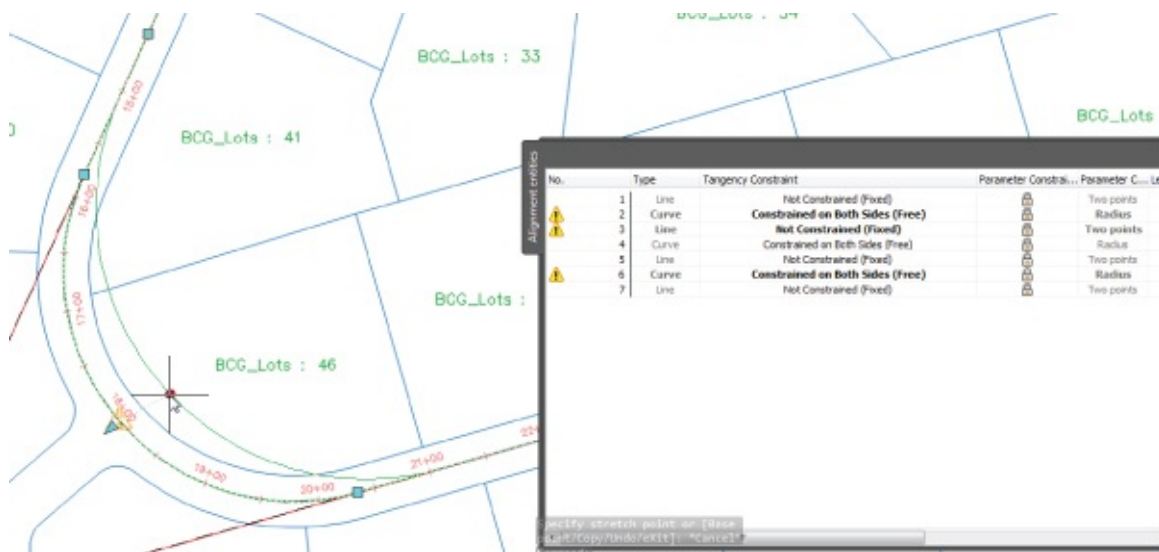


Figure 6.37 Gripping on an alignment with the first curve on the alignment set to Constrained On Both Sides (Free) with both adjoining lines set to Not Constrained (Fixed)

6. Press Esc on your keyboard to cancel the grip edit. If you inadvertently moved the curve, you can use the Undo command.
7. Close the Alignment Layout Tools toolbar.

When you click an alignment that contains curves and access its Alignment Properties dialog, some additional options become available that were not available when the alignment was originally

created. In the Point Of Intersection tab, you can select whether you want to visually show points of intersection by a change in alignment direction or by individual curves and curve groups. You can also choose to not display any implied points of intersection ([Figure 6.38](#)).

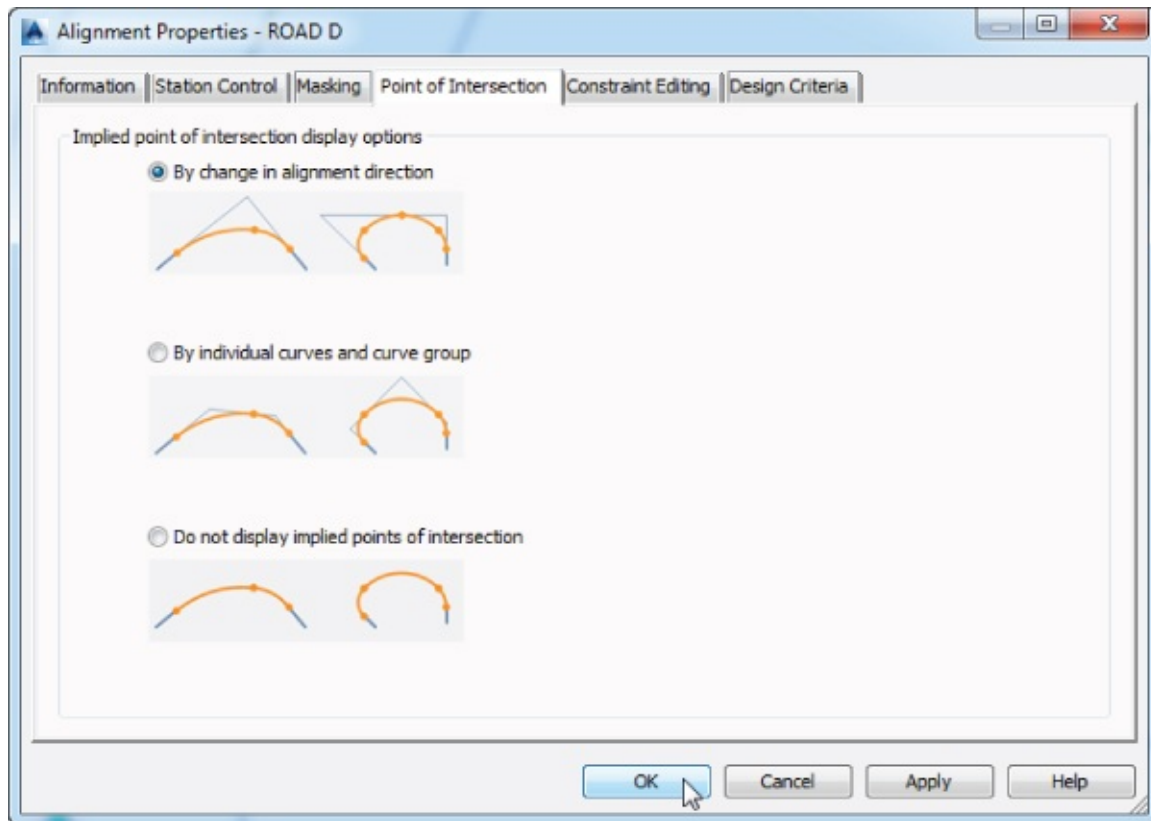


Figure 6.38 The Point Of Intersection tab

In the Constraint Editing tab, you can select if you wish to always perform any implied tangency constraint swapping and whether to lock all parameter constraints ([Figure 6.39](#)).

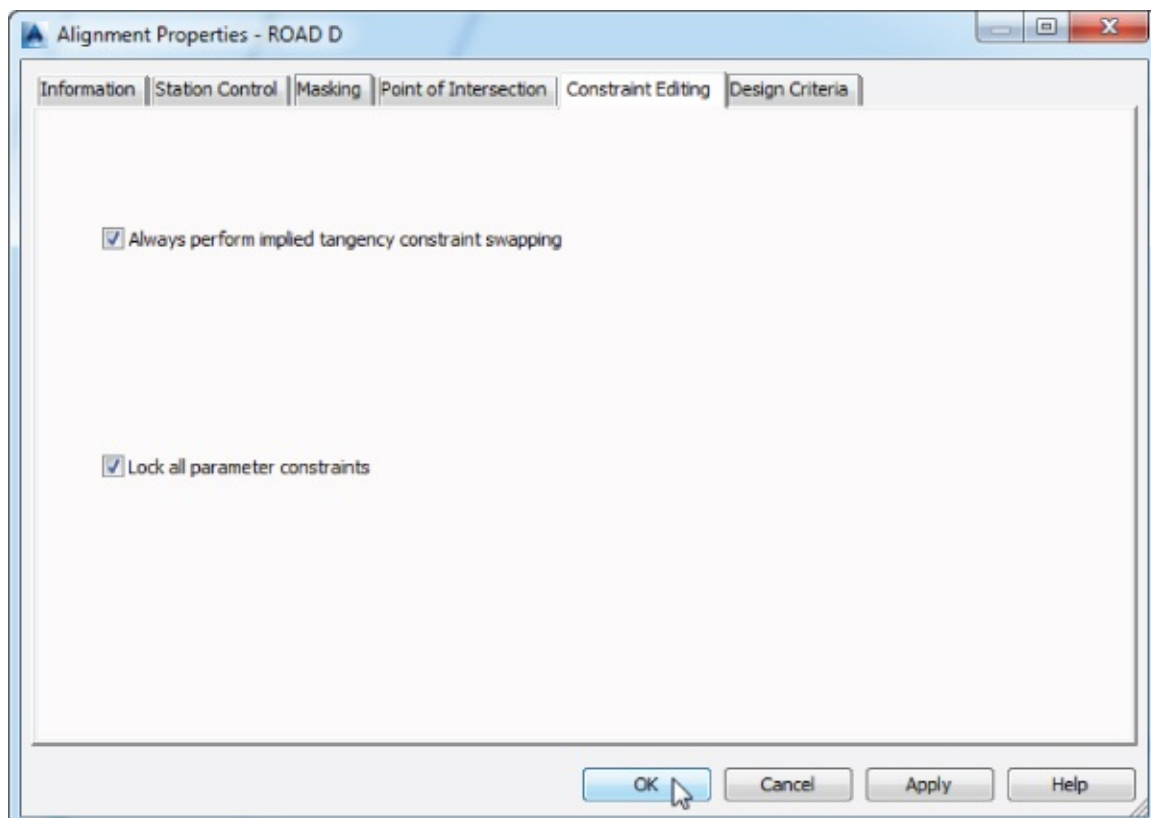


Figure 6.39 The Constraint Editing tab


Changing Alignment Components

One of the most common changes is adding a curve where there was none before or changing the makeup of the curves and tangents already in place in an alignment. Other design changes can include swapping out curves for tangents or adding a second curve to smooth a transition area.

It turns out that your perfect reverse curve isn't allowed by the current ordinances for subdivision design! In this example, you'll go back to the design the planner gave you and place a minimum-length tangent between the curves:

1. Open the 0608_AlignmentComponents.dwg (0608_AlignmentComponents_METRIC.dwg) file.
2. Select the alignment named Reverse-Compound to activate the Alignment contextual tab.
3. From the Alignment contextual tab > Modify panel, choose Geometry Editor.

The Alignment Layout Tools toolbar appears.

4.  Select the Delete Sub-Entity tool.
5. When prompted to select a sub-entity, pick the curve (C2) along alignment to remove it and press \leftarrow to end the command.

Note that even if the last two curves and tangents are still part of the alignment, they lost the connection to the first part of the alignment.

6. Select the Floating Line (From Curve End, Length) option.
7. When prompted to select an entity for the start point, click the south end of curve 3, and then specify a length of **100** \leftarrow (for metric, **30.48** \leftarrow).
8. Select the Free Curve Fillet (Between Two Entities, Through Point) option.
9. Select the first curve (C1) segment to the west and then the line just drawn.
10. For the through point, use an Endpoint Osnap to select the free end of the tangent line just drawn and press \leftarrow to end the command. Notice how the stationing is now shown the full length of the completed alignment.
11. Close the Alignment Layout Tools toolbar.

Your reverse curve with tangent section is complete, as shown in [Figure 6.40](#).

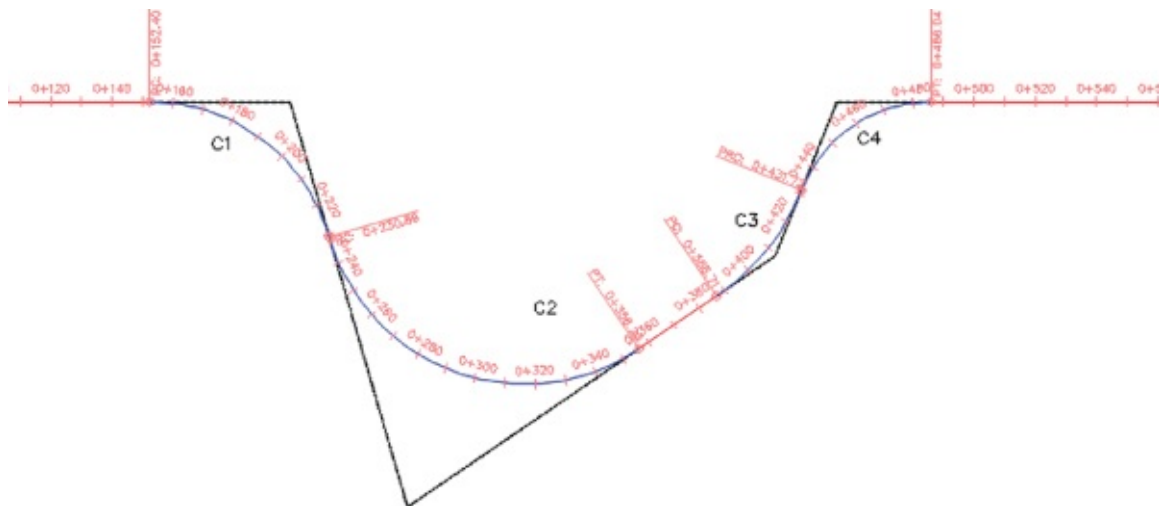


Figure 6.40 Reverse curve with tangent segment

When this exercise is complete, you may close the drawing. A finished copy of this drawing is available from the book's web page with the filename 0608_AlignmentComponents_FINISHED.dwg (0608_AlignmentComponents_METRIC_FINISHED.dwg).

So far in this chapter, you've created and modified the horizontal alignments, adjusted them onscreen to look like what your planner delivered, and tweaked the design using a number of different methods. Now let's look beyond the lines and arcs and get into the design properties of the alignment.

Alignments as Objects

Beyond the simple nature of lines and arcs, alignments represent other things such as highways, streams, sidewalks, or even flight patterns. All these items have properties that help define them, and many of these properties can also be part of your alignments. In addition to obvious properties like names and descriptions, you can include functionality such as superelevation, station equations, reference points, and station control. The following sections will look at other properties that can be associated with an alignment and how to edit them.

Alignment Properties

While the properties of the alignment were originally assigned during creation, later in design there are often changes that are required. In this exercise, you'll learn an easy way to change the object style and how to add a description.

Most of an alignment's basic properties can be modified in Prospector. In this exercise, you'll change the name in a couple of ways:

1. Open the 0609_AlignmentProperties.dwg (0609_AlignmentProperties_METRIC.dwg) file, and make sure Toolspace is open.
2. In Prospector, expand the Alignments ➤ Centerline Alignments branch.

Notice that a series of alignments are listed as members.

3. Click the Centerline Alignments branch, and the individual alignments appear in the Toolspace preview area (see [Figure 6.41](#)).

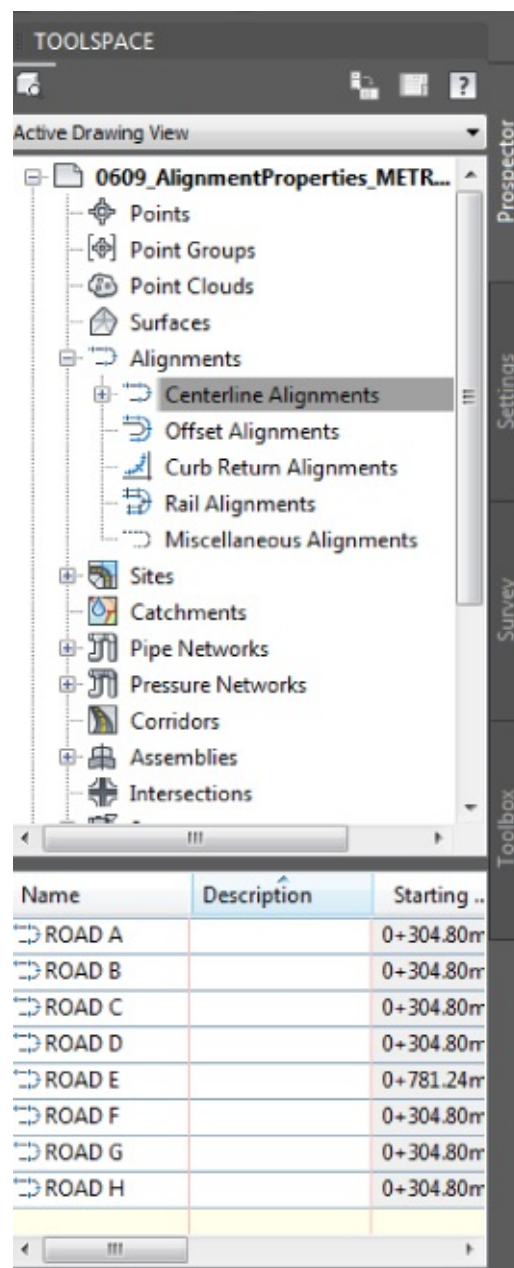


Figure 6.41 The Alignments collection listed in the preview area of Prospector

- Down in the Prospector preview area, click in the Name field for ROAD A, and pause briefly before clicking again.

The text highlights for editing.

- Click in the Description field, and enter a description (such as **West-East**). Press **↵**.
- Click in the Style field (you may have to scroll left/right to find the Style field), pause briefly, and click again; the Select Label Style dialog appears.
- Select Basic from the drop-down menu, and click OK.

The screen updates. Keep this drawing open for the next portion of the exercise.

That's one method to change alignment properties. The next is to use the Properties palette.

- Open the Properties palette by using the **Ctrl+1** keyboard shortcut or some other method.
- Select the ROAD B alignment in the drawing using the Prospector's Select option that is available when you right-click the object's name.

The Properties palette looks like [Figure 6.42](#).

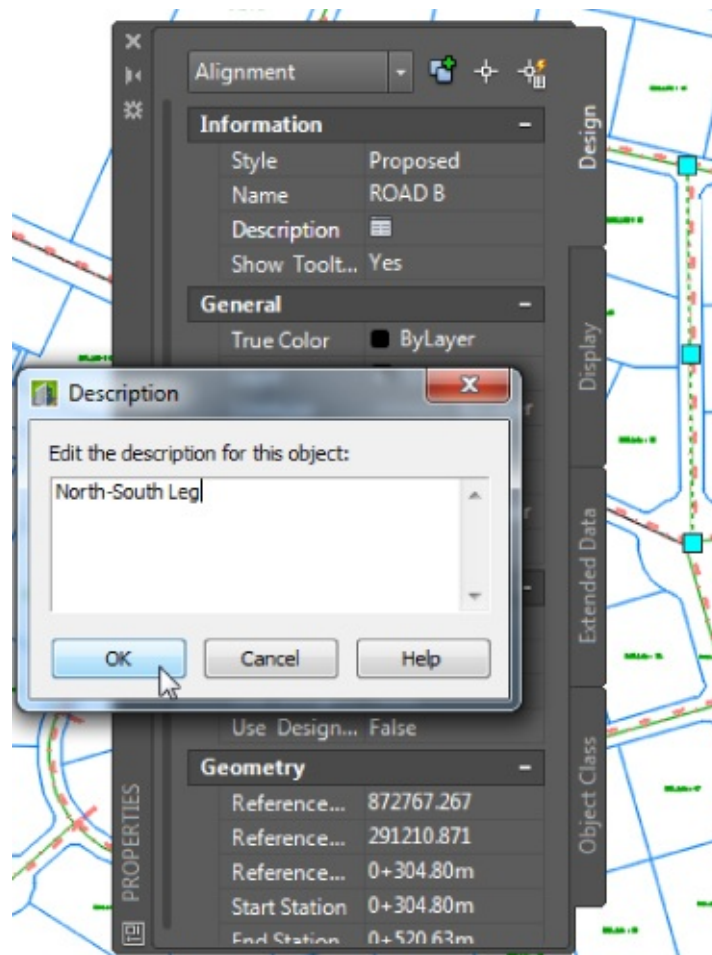


Figure 6.42 ROAD B in the Properties palette

10. Click in the Description field and the Description dialog will open. Enter a description (such as **North-South Leg**), and click OK.
11. Press Esc on your keyboard to deselect all objects, and close the Properties palette if you'd like. Keep this drawing open for the next portion of the exercise.

The final method involves getting into the Alignment Properties dialog, your access point to information beyond the basics.

12. In Prospector, right-click ROAD H and select Properties. This is the alignment for the south cul-de-sac.

The Alignment Properties dialog for ROAD H opens.

13. Change to the Information tab if it isn't selected.
14. Enter a description in the Description field (such as **South Cul-De-Sac**).
15. Set Object Style to Existing.
16. Click the Apply button.

Notice that the display style in the drawing updates immediately.

17. Click OK to accept the settings in the dialog.

Keep this drawing open for the next portion of the exercise.

Now that you've updated your alignments, you can make them all the same style for ease of viewing. The best way to do this is in the Prospector preview area.

18. In Prospector, expand the Alignments > Centerline Alignments branch.
19. Select one of the alignments in the preview area.
20. Press Ctrl+A to select them all, or pick the top and then Shift+click the bottom item.

The idea is to pick *all* of the alignments.

21. Right-click the Style column header and select Edit (see [Figure 6.43](#)).

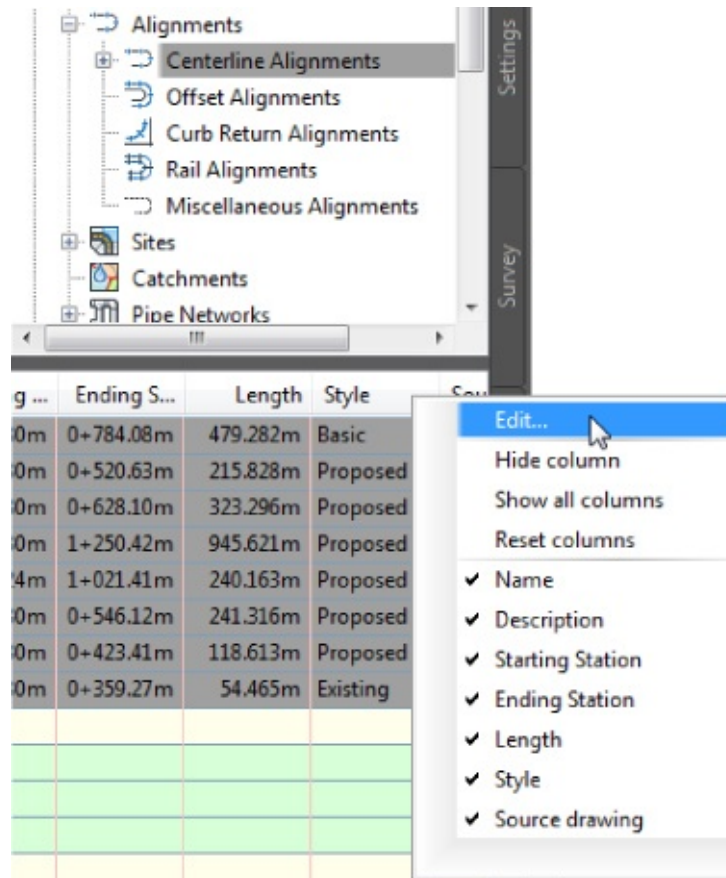


Figure 6.43 Editing alignment styles en masse via Prospector

22. Select Layout from the drop-down list in the Select Label Style dialog that appears, and click OK.
23. Press Esc to deselect all of the alignments.

Notice that all alignments pick up this style. Although the dialog is named Edit Label Style, you are actually assigning styles to the objects.

Don't Forget This Technique

This technique of selecting all, right-clicking the column heading in the preview area, and editing the value works on every object that displays in the Toolspace preview: parcels, pipes, corridors, assemblies, and so on. It can be painfully tedious to change a large number of objects from one style to another using any other method. If you left-click the column header instead of right-click, the alignments will sort alphabetically based on the values in that column.

You can save the drawing and if needed compare your results against the finished file that can be downloaded from the book's web page under the filename 0609_AlignmentProperties_FINISHED.dwg (0609_AlignmentProperties_METRIC_FINISHED.dwg).

The alignments now look the same, and they all have a name and description. Let's look beyond these basics at the other properties you can modify and update.

The Right Station

At the end of the process, every alignment has stationing applied to help locate design information. This stationing often starts at zero, but it can also tie to an existing object and may start at some arbitrary value. Stationing can also be fixed in both directions, requiring station equations that help translate between two disparate points that are the basis for the stationing in the drawing.

One common problem is an alignment that was drawn in the wrong direction. Thankfully, Civil 3D has a quick edit command to fix that:

1. Open the 0610_AlignmentStations.dwg (0610_AlignmentStations_METRIC.dwg) file, and make sure Toolspace is open.
2. Since the ROAD D alignment does not have the alignment labels running from north to south, you will want to reverse its direction, so pick it to activate the Alignment contextual tab. You can as well use the Select option available for the object when selected in the Prospector, through the context menu.



3. From the Alignment contextual tab > Modify drop-down panel, choose Reverse Direction.

A warning dialog appears, reminding you of the consequences of such a change.

4. Click OK to dismiss the warning dialog.

The stationing reverses, with 10+00 (or 0+304.80 for metric users) now at the north end point of the alignment.

The warning message lets you know that when the direction is reversed, things happen to the settings defined for the alignment. Take note of what can change when an alignment is reversed. For example, if you had masking applied to the alignment, you would need to redefine it.

5. Press Esc to deselect the alignment.

Keep this drawing open for the next portion of the exercise.

This technique allows you to reverse an alignment almost instantly. The warning that appears is critical, though! When an alignment is reversed, the information that was derived from its original direction may not translate correctly, if at all. One prime example of this is design profiles: they don't reverse themselves when the alignment is reversed, and this can lead to serious design issues if you aren't paying attention.

Beyond reversing, it's common for alignments to not start with zero. For example, the ROAD E alignment may be a continuation of an existing street, and it makes sense to make the starting station for this alignment the station where this alignment intersects ROAD A, the alignment from the existing street. In this next portion of the exercise, you'll set the beginning station.

6. Select the ROAD E alignment to activate the Alignment contextual tab.
7. From the Alignment contextual tab > Modify panel, choose Alignment Properties icon.

8. Switch to the Station Control tab of the Alignment Properties dialog.
- This tab controls the base stationing and lets you create station equations.
9. In the Reference Point section of the dialog, enter **2563.13** (for metric, **781.24**) in the Station field (see [Figure 6.44](#)).

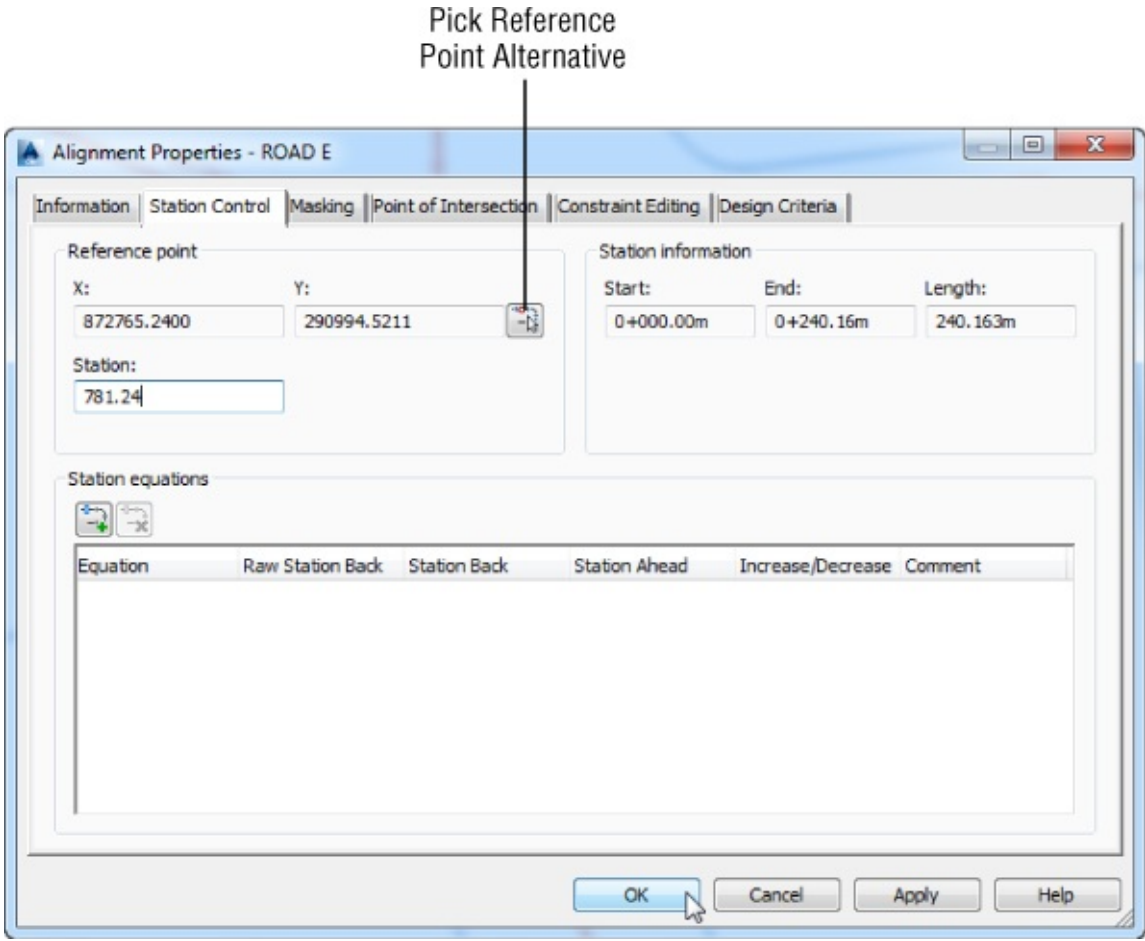



Figure 6.44 Setting a new starting station on the ROAD E alignment

10. Click OK to dismiss the warning message that appears, and click OK to dismiss the dialog.
11. Press Esc to deselect the alignment.
- The Station Information section in the top right will update. These options can't be edited but provide a convenient way for you to review the alignment's Length and Station values.
- Keep this drawing open for the next portion of the exercise.
- In addition to changing the value for the start of the alignment, you could use the Pick Reference Point button, as shown in [Figure 6.44](#), to select another point as the stationing reference point.
- Station equations can occur multiple times along an alignment. They typically come into play when plans must match existing conditions or when the stationing has to match other plans, but the lengths in the new alignment would make that impossible without some translation. In this last portion of the exercise, you'll add a station equation on ROAD C at the intersection with ROAD B.
12. Select the ROAD C alignment to activate the Alignment contextual tab.
13. From the Alignment contextual tab > Modify panel, choose the Alignment Properties icon.
14.  On the Station Control tab of the Alignment Properties dialog, click the Add Station Equation

button. You will get a warning notification. Click OK to go to the next step.

15. Use an Endpoint Osnap to select the intersection of the two alignments.
16. Change the Station Ahead value to **1000** (for metric, **304.8**). You will get a warning notification. Click OK to go to the next step.
17. Click the Apply button, and notice the change in the Station Information section, as shown in [Figure 6.45](#).

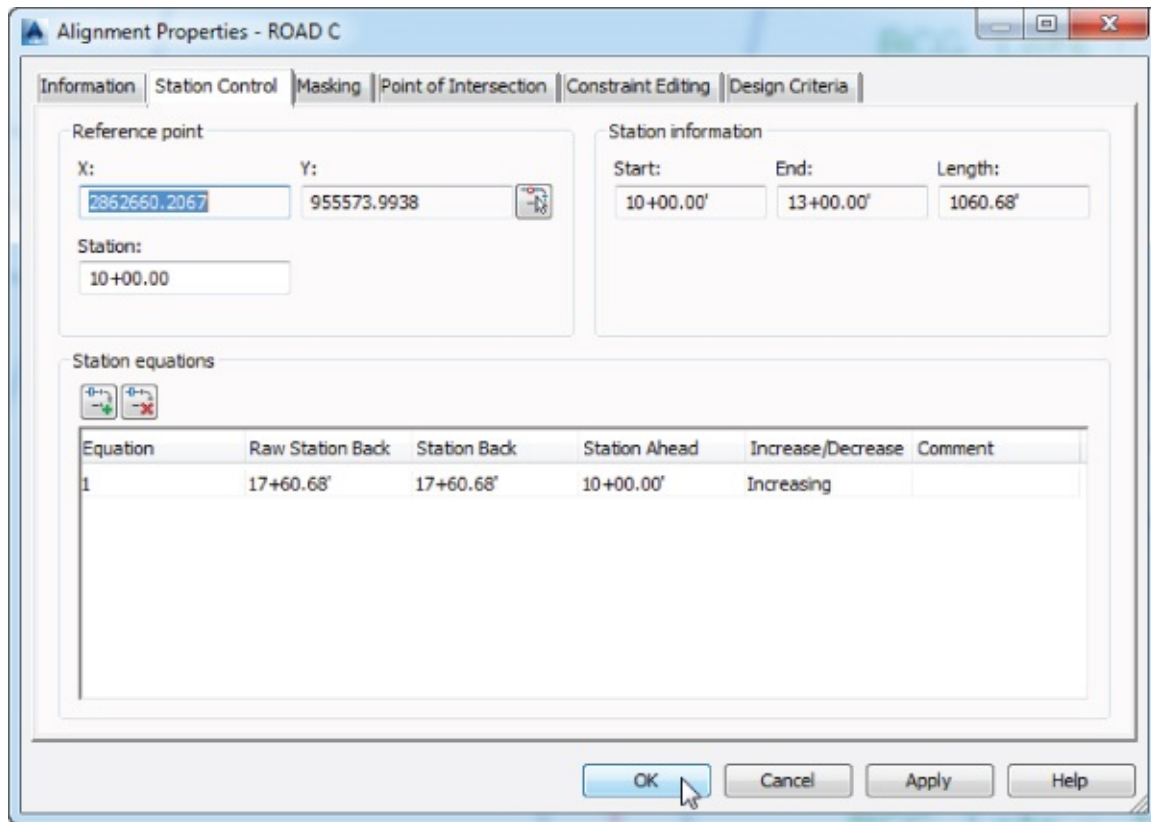


Figure 6.45 ROAD C station equation in place

18. Click OK to accept the settings in the dialog, and review the stationing that has been applied to the alignment.


You can save the drawing and if needed compare your results against the finished file that can be downloaded from the book's web page under the filename 0610_AlignmentStations_FINISHED.dwg (0610_AlignmentStations_METRIC_FINISHED.dwg).

Stationing constantly changes as alignments are modified during the initial stages of a development or as late design changes are pushed back into the plans. With the flexibility shown here, you can reduce the time you spend dealing with minor changes that seem to ripple across an entire plan set.

Assigning Design Speeds

One driving part of transportation design is the design speed. Civil 3D considers the design speed a property of the alignment, and it can be used in labels or calculations as needed. In this exercise, you'll add a series of design speeds to ROAD D. Later in the chapter, you'll label these sections of the road using a label set:

1. Open the 0611_AlignmentDesignSpeed.dwg (0611_AlignmentDesignSpeed_METRIC.dwg) file.
2. Bring up the Alignment Properties dialog for ROAD D.

- 3. Switch to the Design Criteria tab.
- 4. Verify that the Design Speed field for Number 1 is 30 mi/hr (or 48 km/hr for metric users).
This speed is typical for a subdivision street.
- 5.  Click the Add Design Speed button.
- 6. Select the new row; then click in the Start Station field for Number 2.
A small Pick On Screen button appears to the right of the Start Station value, as shown in [Figure 6.46](#).

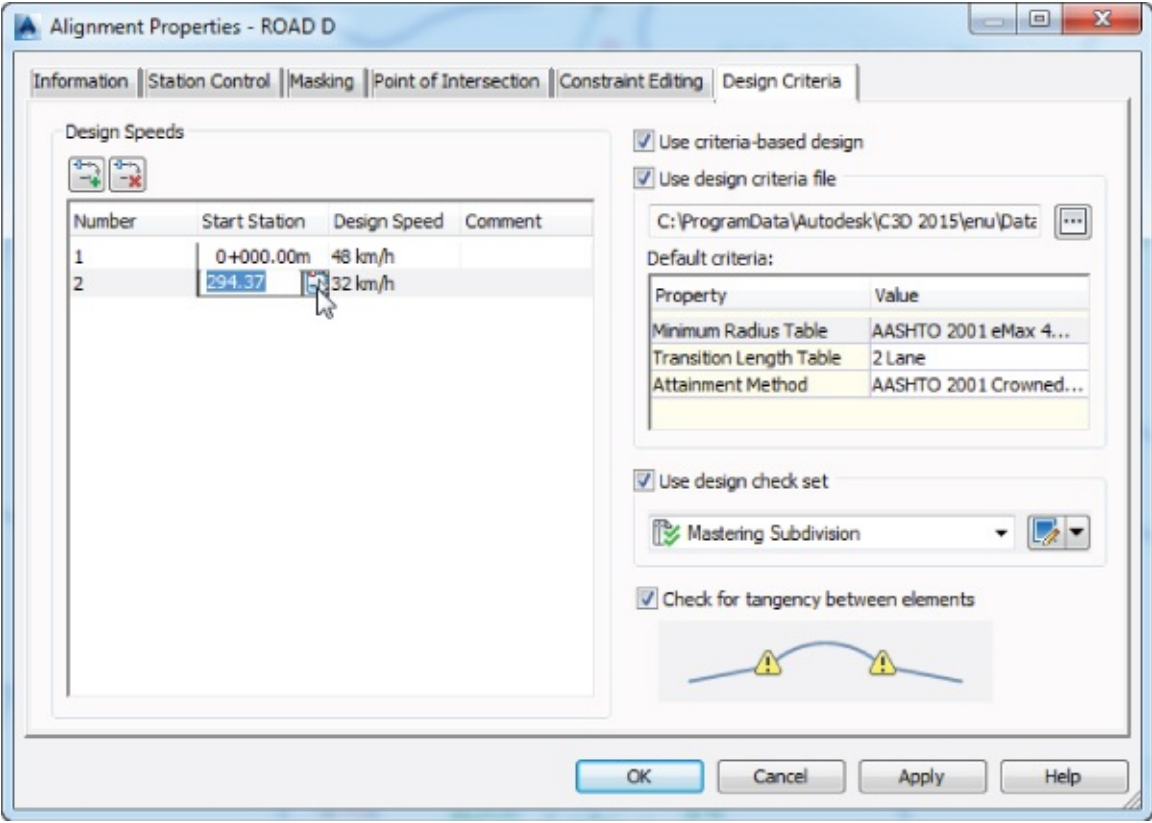


Figure 6.46 Setting the design speed for a Start Station field

- 7. Click the Pick On Screen button, and then use an Osnap to pick the PC on the east portion of the site, near station 9+65.78 (or station 0+294.37 for metric users).
- 8. Enter a value of **20** (for metric, **32**) in the Design Speed field for the line you just added.
- 9. Click the Add Design Speed button again.
Notice that the additional row is added to the top of the list.
- 10. Select the new row. Then click in the Start Station field for the new row and enter **2050** ↵ (for metric, **620.10** ↵).
- 11. Enter a value of **30** (for metric, **48**) for this design speed.
When complete, the tab should look like [Figure 6.47](#).

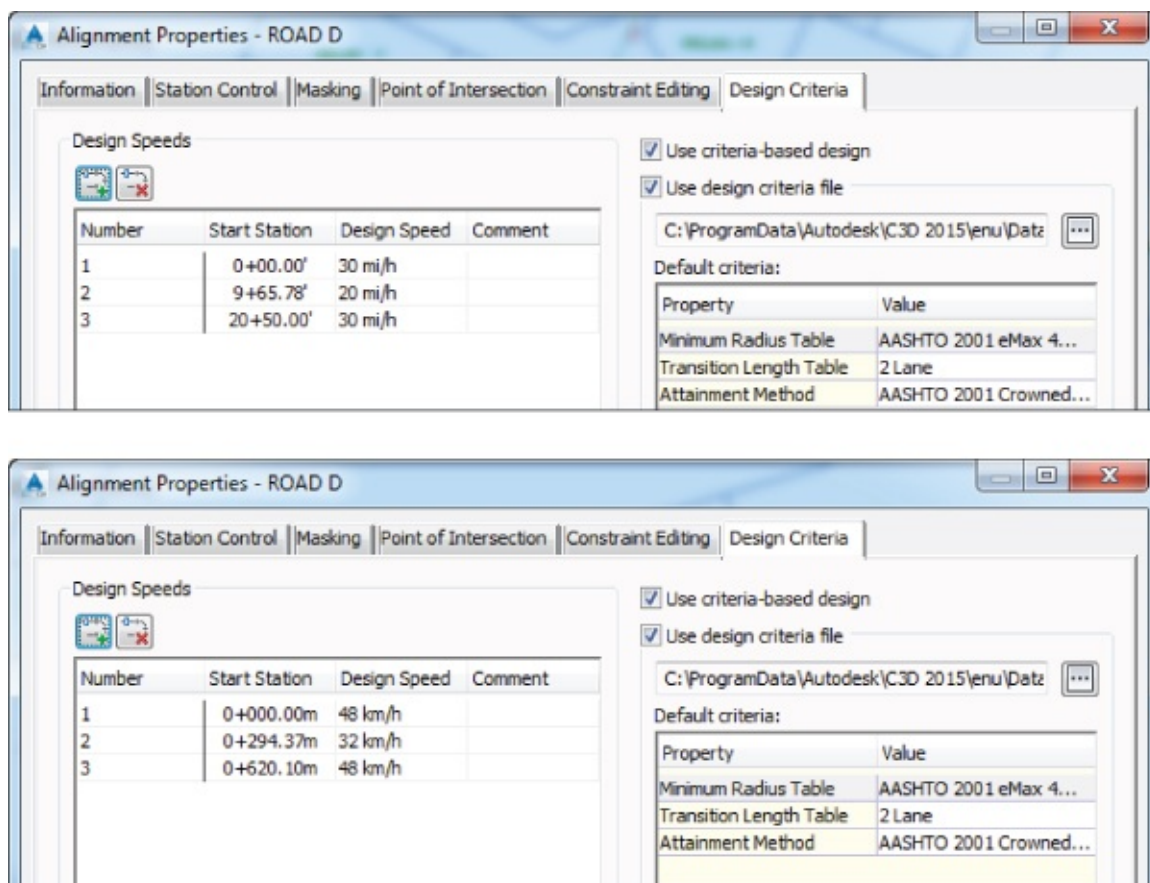


Figure 6.47 The design speeds assigned to ROAD D alignment with both US (top) and metric (bottom) values.

2. Click OK to accept the settings in the Alignment Properties dialog.

You can save the drawing and if needed compare your results against the finished file that can be downloaded from the book's web page under the filename 0611_AlignmentDesignSpeed_FINISHED.dwg (0611_AlignmentDesignSpeed_METRIC_FINISHED.dwg).

In a subdivision, these values can be inserted for labeling purposes. In a highway design, they can be used to drive the superelevation calculations that are critical to a working design. Chapter 11, "Superelevation," looks at this subject.

Labeling Alignments

Labeling in Civil 3D is one of the program's strengths, but it's also an easy place to get lost. There are lots of options for every type of labeling situation under the sun, and keeping them straight can be difficult.

The Power of Label Sets

When you think about it, any number of items can be labeled on an alignment. These include major and minor stations, geometry points, design speeds, and profile information. Each of these objects can have its own style. Keeping track of all these individual labeling styles and options would be burdensome and uniformity would be difficult, so Civil 3D features the concept of *label sets*.

A label set lets you build up the labeling options for an alignment, picking styles for the labels of interest or even multiple labels on a point of interest, and then save them as a set. These sets are available during the creation and labeling process, making the application of individual labels less tedious. Out of the box, a number of sets are available, primarily designed for combinations of major and minor station styles

along with geometry information.

You'll learn how to create individual label styles in Chapter 18. You will use the out-of-the-box styles and label sets over the next couple of exercises.

Major Station Major station labels typically include a tick mark and a station callout, while the minor station labels include a tick mark only.

Geometry Points Geometry points refers to the PC, PT, and other points along the alignment that define the geometric properties.

In this exercise, you'll apply a label set to all of your alignments and then see how an individual label can be changed from the set:

1. Open the 0612_AlignmentLabelSets.dwg (0612_AlignmentLabelSets_METRIC.dwg) file.
2. Select the ROAD D alignment on the screen.
3. Right-click to open the context menu for the object, and select Edit Alignment Labels to display the Alignment Labels dialog shown in [Figure 6.48](#).



Figure 6.48 The Alignment Labels dialog for ROAD D

4. Click the Import Label Set button near the bottom of this dialog to display the Select Label Set dialog.
5. In the Select Label Set drop-down list, select All Labels and click OK.

The Alignment Labels dialog now populates with the additional labels imported from the label set, as shown in [Figure 6.49](#).

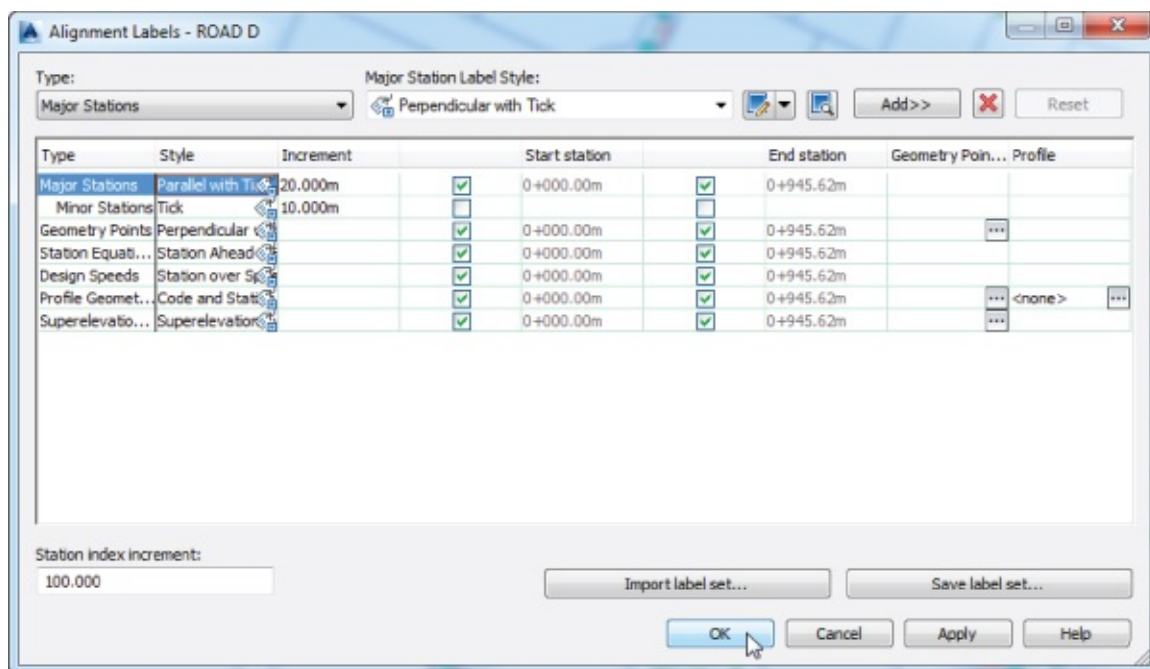


Figure 6.49 The All Labels label set

6. Click OK to accept the settings in the Alignment Labels dialog.
7. Deselect the alignment by pressing the Esc key, and repeat this process to import the All Labels set for the other alignment in the drawing.
8. When you've finished, zoom in on any of the major station labels (for example, on ROAD G, the 1+00 label, or the 0+020 label for metric users). Open the AutoCAD Properties palette using the Ctrl+1 shortcut key.
9. Select the label and notice how all of the label set group labels are selected. Notice also the properties for this group, as displayed in the AutoCAD Properties palette.
10. Press Esc to deselect.
11. Hold down the Ctrl key, and select the label.

Notice that a single label is selected, not the label set group, and the Labels contextual tab is activated.

Ctrl+Click? What's That About?

Prior to AutoCAD Civil 3D 2008, clicking an individual label picked the label and the alignment. Because labels are part of a label set object now, Ctrl+click is the *only* way to access the Flip Label and Reverse Label functions!

12. With the individual major station selected, in the Properties palette you will see the properties for that individual label.
13. Use the Major Station Label Style drop-down list to change from <default> to Perpendicular With Line.
14. Change the Flipped Label value to True to move the label from the left side of the alignment to the right side.

This command can be helpful if your plans become busy and you need to move a label to the other side for better visibility.

15. Close the Properties palette and press Esc to deselect the label item.

Keep this drawing open for the next exercise.

By using alignment label sets, you'll find it easy to standardize the appearance of labeling and stationing across alignments. Building label sets can take some time, but it's one of the easiest, most effective ways to enforce standards. Building label sets will be discussed further in Chapter 18.

Station Offset Labeling

Beyond labeling an alignment's basic stationing and geometry points, you may want to label points of interest in reference to the alignment. Station offset labeling is designed to do just that. In addition to labeling the alignment's properties, you can include references to other object types in your station offset labels. The objects available for referencing are as follows:

- Alignments
- COGO points
- Parcels
- Profiles
- Surfaces

In this last portion of this exercise, you'll use an alignment reference to create a label suitable for labeling the station information for the center point of the cul-de-sac along ROAD D.

1. Using the drawing from the previous exercise, from the Annotate tab > Labels & Tables panel > Add Labels drop-down, choose Alignment > Add Alignment Labels. The Add Labels dialog appears with Feature set to Alignment.
2. In the Label Type drop-down list, select Station Offset.

The Station Offset label type creates a label that floats with the alignment. If the alignment is edited graphically, the label will move with it, and the station and offset information that it displays will remain constant. An example of this would be a label style that acts as a matchline. The counterpart label type is Station Offset – Fixed Point. This type of label will hold its position if the alignment is modified and the station and offset information change. An example of this kind of label would be labeling of a property corner on a subdivision plat.

3. In the Station Offset Label Style drop-down, select Station And Offset.
4. Leave the Marker Style field at the default setting, but remember that you could use any of these styles, including the option to use none to mark the selected point.
5. Click the Add button.
6. At the Select Alignment: prompt, select the ROAD D alignment.
7. At the Specify station along alignment: prompt, use the Center Osnap to snap to the center of the right-of-way arc at the cul-de-sac (See [Figure 6.50](#)).

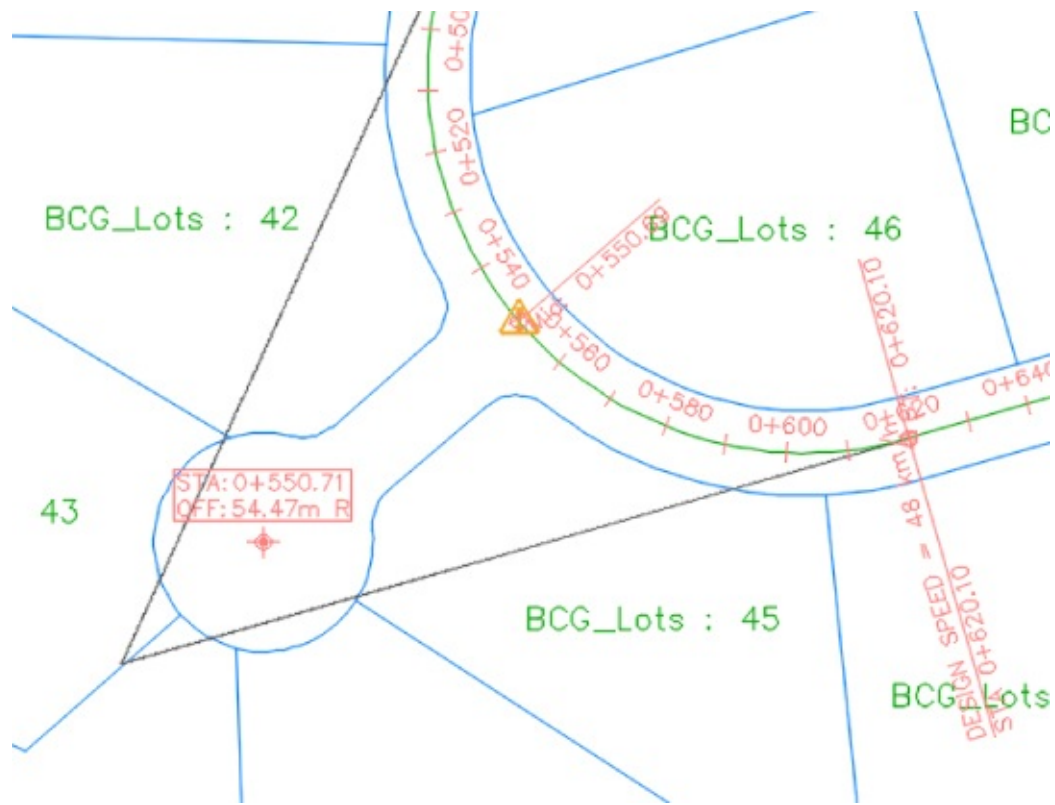


Figure 6.50 The alignment station offset label in use

8. At the Specify station offset: prompt, use the Center Osnap to snap to the center of the right-of-way arc at the cul-de-sac (see [Figure 6.50](#)) again, and press \leftarrow to end the command.
9. Close the Add Labels dialog.
10. Select the label if needed, and use the square grip to drag the label to a convenient location ([Figure 6.50](#)). Label grips will be discussed further in Chapter 18.

You can save the drawing and compare your results against the finished file that can be downloaded from the book's web page (0612_AlignmentLabelSets_FINISHED.dwg or 0612_AlignmentLabelSets_METRIC_FINISHED.dwg).

Using station offset labels and their reference object ability, you can label most site plans quickly with information that dynamically updates. Because of the flexibility of labels in terms of style, you can create “design labels” that are used to aid in modeling yet never plot and aren't seen in the final deliverables. More advanced alignment labels are discussed in Chapter 18.

Alignment Tables

There isn't always room to label alignment objects directly on top of them. Sometimes doing so doesn't make sense, or a reviewing agency wants to see a table showing the radius of every curve in the design. Documentation requirements are endlessly amazing in their disparity and seeming randomness. Beyond labels that can be applied directly to alignment objects, you can also create tables to meet your requirements.

You can create four types of tables:

- Line
- Curve
- Spiral

- Segment

Each of these is self-explanatory except perhaps the segment table. That table generates a mix of all the lines, curves, and spirals that make up an alignment, essentially re-creating the alignment in a tabular format. In this section, you'll generate a new line table and segment table.

All the tables work in a similar fashion. To add a table, follow these steps:

1. From the Annotate tab > Labels & Tables panel, choose the drop-down from the Add Tables button.
2. From the Add Tables drop-down, choose the object type (such as Alignment).
3. Pick a table type (such as Add Segment) that is relevant to your work.

The Alignment Table Creation dialog appears (see [Figure 6.51](#)).

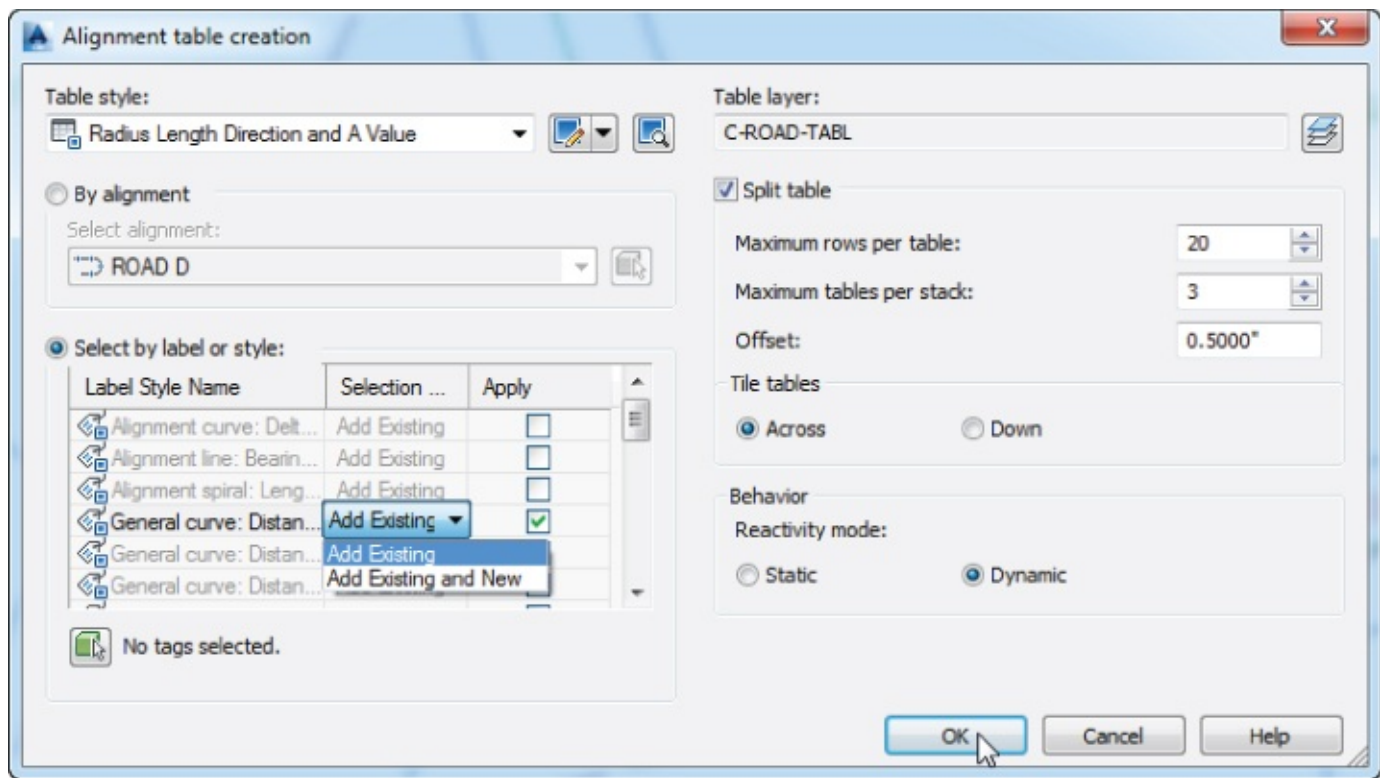


Figure 6.51 The Alignment Table Creation dialog for the Add Segment table type

4. Select a table style from the drop-down list or create a new one.

The Select By Label Or Style area determines how the table is populated. All the label style names for the selected type of component are presented, with a check box to the right of each one. Placing a check mark in the Apply column of one of these styles enables the Selection Rule setting, which has the following two options:

Add Existing Any label using this style that currently exists in the drawing is converted to a tag format, substituting a key number such as L1 or C27, and added to the table. Any labels using this style created in the future will *not* be added to the table. The order in which these labels are converted might not be the order you desire, so you might need to renumber the label tags.

Add Existing And New Any label using this style that currently exists in the drawing is converted to a tag format and added to the table. In addition, any labels using this style created in the future will be added to the table.

To the right of the Select section is the Split Table section, which determines how the table is stacked up

in modelspace once it's populated. You can modify these values after a table is generated, so it's often easier to leave them alone during the creation process.

Finally, the Behavior section provides two options for Reactivity Mode: Static and Dynamic. This section determines how the table reacts to changes in the labeled objects. In some cases in surveying, this disconnect is used as a safeguard to the platted data, but in general, the point of a 3D model is to have live labels that dynamically react to changes in the object. Be sure to cancel out of the Alignment Table Creation dialog before proceeding to the next exercise.

Before you draw any tables, you need to apply labels so the tables will have data to populate. In this exercise, you'll place some labels on your alignments, and then you'll move on to drawing tables:

1. Open the 0613_AlignmentTable.dwg (0613_AlignmentTable_METRIC.dwg) file.
2. From the Annotate tab ➤ Labels & Tables panel, click the Add Labels icon to open the Add Labels dialog.
3. In the Feature field, select Alignment.
4. In the Label Type field, select Multiple Segment from the drop-down list.

With these options, you'll click each alignment one time, and every subcomponent will be labeled with the style selected here.

5. Verify that the Line Label Style field is set to Line Label Style: Bearing Over Distance (not General Line Label Style: Bearing Over Distance).

You won't be left with these labels—you just want them for selecting elements later.

6. Verify that the Curve Label Style field is set to Delta Over Length & Radius.

Since you have no spirals, no Spiral label style needs to be specified, so leave it at the default.

7. Click the Add button, and select each of the two alignments; then press \leftarrow to end the command. Make sure to not select the alignment multiple times during the labeling process, since this will result in duplicate labels for the same segments.
8. Click the Close button to dismiss the Add Labels dialog.

Keep this drawing open for the next exercise.

Now that you have labels to play with, let's build some tables.

Creating a Line Table

Most line tables are simple: a line tag, a bearing, and a distance. You'll also see how Civil 3D can translate units without having to change anything at the drawing level:

1. Using the drawing from the previous exercise, from the Annotate tab ➤ Labels & Tables panel, click the Add Tables drop-down arrow and choose Alignment ➤ Add Line to open the Table Creation dialog.
2. Verify that a check mark appears in the Apply column for the Alignment Line: Bearing Over Distance label, as shown in [Figure 6.52](#), and that the Add Existing And New rule is selected.

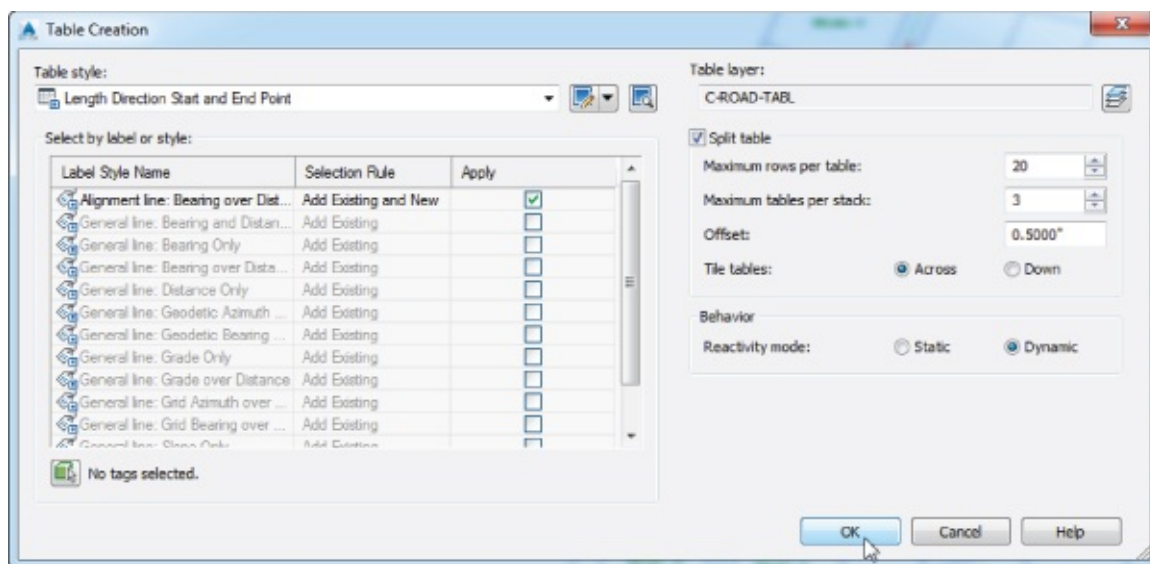


Figure 6.52 Creating an alignment line table

3. Click OK to accept the settings in the Table Creation dialog.
4. At the Select upper left corner: prompt, select an insertion point onscreen and the table will generate.

Keep this drawing open for the next exercise.

You will notice that all the labels that have been selected to be displayed in the tables will have their styles modified to display the label in Tag mode. After you've made one table, the rest are similar. Be patient as you create tables—a lot of values must be tweaked to make them look just right. By drawing one onscreen and then editing the style, you can quickly achieve the results you're after.

Creating an Alignment Segment Table

An individual segment table allows a reviewer to see all the components of an alignment. In this exercise, you'll draw the segment table for ROAD D:

1. Using the drawing from the previous exercise, select the ROAD D alignment, and from the Alignment contextual tab in the Labels And Tables panel, click the Add Tables icon. From the drop-down list, choose Add Segments to open the Alignment Table Creation dialog.

Notice that when a segment table is selected, you have the option to add the table based on the label entities assigned to an alignment, which wasn't an option when creating line and curve tables.

2. In the Select Alignment field, choose the ROAD D alignment from the drop-down list ([Figure 6.53](#)), and click OK.

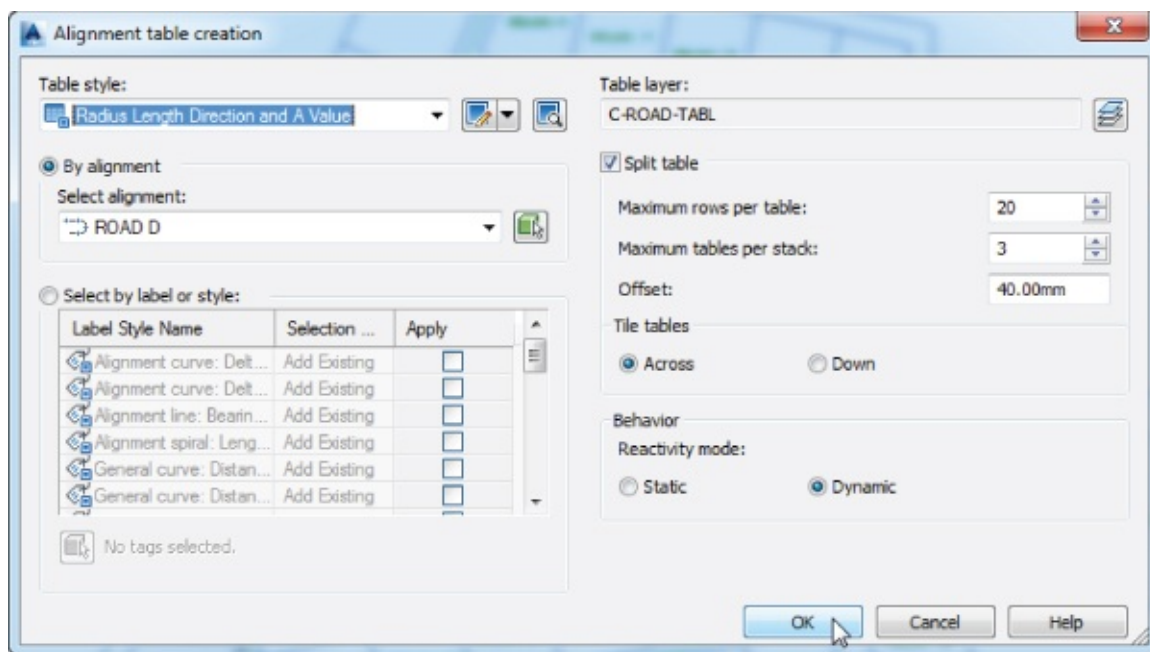


Figure 6.53 Creating an alignment segment table

3. At the Select upper left corner: prompt, select an insertion point on the screen and the table will generate.

When this exercise is complete, you may close the drawing. A finished copy of this drawing is available from the book's web page with the filename 0613_AlignmentTable_FINISHED.dwg (0613_AlignmentTable_METRIC_FINISHED.dwg).

The Bottom Line

Create an alignment from an object. Creating alignments based on polylines is a traditional method of building engineering models. With built-in tools for conversion, correction, and alignment reversal, it's easy to use the linework prepared by others to start your design model. These alignments lack the intelligence of crafted alignments, however, and you should use them sparingly.

Master It Open the Masterit_0601.dwg (Masterit_0601_METRIC.dwg) file, and create alignments from the linework found there, having as alignment style the Layout style, using the All Labels label set, and making sure that the source objects are erased.

Create a reverse curve that never loses tangency. Using the alignment layout tools, you can build intelligence into the objects you design. One of the most common errors introduced into engineering designs is curves and lines that aren't tangent, requiring expensive revisions and resubmittals. The free, floating, and fixed components can make smart alignments in a large number of combinations available to solve almost any design problem.

Master It Open the Masterit_0602.dwg (Masterit_0602_METRIC.dwg) file, and create an alignment using the linework on the right as a guide. Create a reverse curve with both radii equal to 200 (or 60 for metric users) and with a pass-through point at the intersection of the two arcs.

Replace a component of an alignment with another component type. One of the goals in using a dynamic modeling solution is to find better solutions, not just the first solution. In the layout of alignments, this can mean changing components along the design path or changing the way they're defined. The ability of Civil 3D to modify alignments' geometric construction without destroying the object or forcing a new definition lets you experiment without destroying the data already based on an

alignment.

Master It Convert the first curve along the alignment in the Masterit_0603.dwg (Masterit_0603_METRIC.dwg) file to a floating arc that is constrained by the next segment. Then change the radius of the curves to 150 (or 45 for metric users). Make sure that the tangency is maintained all across the alignment.

Create alignment tables. Sometimes there is just too much information displayed on a drawing, and to make it clearer, tables are used to show bearings and distances for lines, curves, and segments. With their dynamic nature, these tables are kept up to date with any changes.

Master It Open the Masterit_0604.dwg (Masterit_0604_METRIC.dwg) file, and generate a line table, a curve table, and a segment table. Use whichever style you want to accomplish this.

Chapter 7

Profiles and Profile Views

Profile information is the backbone of vertical design. The Autodesk® AutoCAD® Civil 3D® software takes advantage of sampled data, design data, and external input files to create profiles for a number of uses. Profiles will be an integral part of corridors, as we'll discuss in Chapter 9, “Basic Corridors.” In this chapter we'll look at using profile-creation tools, editing profiles, and generating and editing profile views, and you'll learn ways to get your labels just so.

In this chapter, you will learn to

- Sample a surface profile with offset samples
- Lay out a design profile on the basis of a table of data
- Add and modify individual entities in a design profile
- Apply a standard band set

The Elevation Element

The whole point of a three-dimensional model is to include the elevation element that's been missing for years on two-dimensional plans. But to get there, designers and engineers still depend on a flat 2D representation of the vertical dimension as shown in a profile view (see [Figure 7.1](#)).

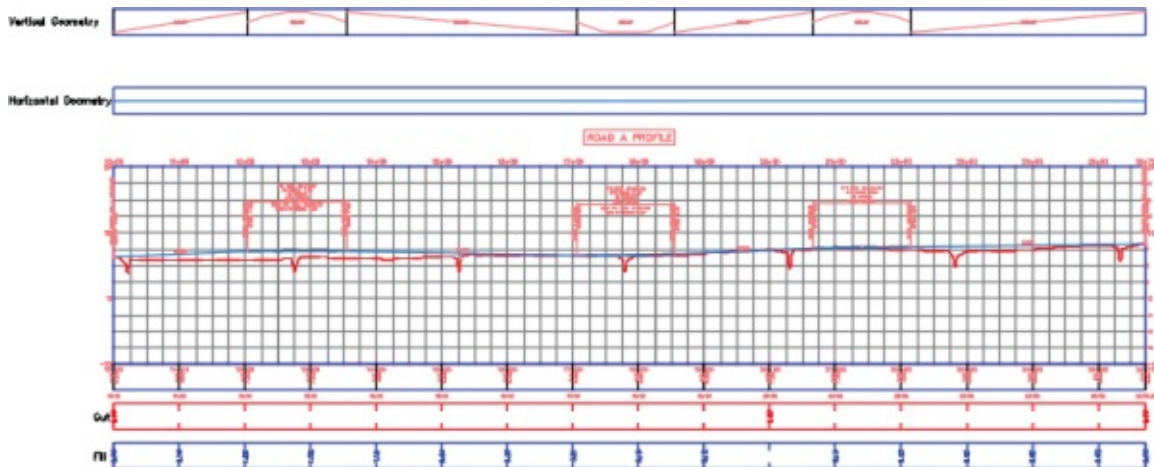


Figure 7.1 A typical profile view of the surface elevation along an alignment

A profile is nothing more than a series of data pairs in a station, elevation format. There are basic curve and tangent components, but these are purely the mathematical basis for the paired data sets. In AutoCAD Civil 3D, you can generate profile information in one of the following five ways:

Sampling from a Surface Sampling from a surface involves taking vertical information from a surface object every time the sampled alignment crosses a TIN line of the surface. This is perfect for generating a profile for the existing ground.

Using a Layout to Create a Profile Using a layout to create a profile allows you to input design information, setting critical station and elevation points, calculating curves to connect linear segments, and typically working within design requirements laid out by a reviewing agency.

Creating a Profile from a File Creating from a file lets you reference a specially formatted text file to pull in the station and elevation pairs. Doing so can be helpful in dealing with other analysis packages or spreadsheet tabular data.

Creating a Best Fit Profile Similar to the ability to generate a best fit alignment that we discussed in Chapter 6, “Alignments,” you can also create a best fit profile. You may find yourself using this method when you are trying to generate defined geometry for an existing road.

Creating a Profile from a Corridor You can define a profile by using a corridor's feature line as the source for its definition. This can be helpful for times when you want to display the profiles of the flow line of the curb in the same profile view with the centerline, for example.

The following sections look at the first four methods of creating profiles.

Surface Sampling

Certification Objective

Working with surface information is the most elemental method of creating a profile. This information can represent any of the surfaces already in your drawing, such as an existing surface or any number of other surface-derived data sets. Surfaces can also be sampled at offsets, as you'll see in the next series of exercises. Follow these steps:

1. Open the 0701_ProfileSampling.dwg file (or the 0701_ProfileSampling_METRIC.dwg file for metric users) shown in [Figure 7.2](#). Remember, all data files can be downloaded from this book's web page at www.sybex.com/go/masteringcivil3d2015.



Figure 7.2 The drawing you'll use for this exercise



2. From the Home tab > Create Design panel, choose Profile > Create Surface Profile to display the Create Profile From Surface dialog ([Figure 7.3](#)).

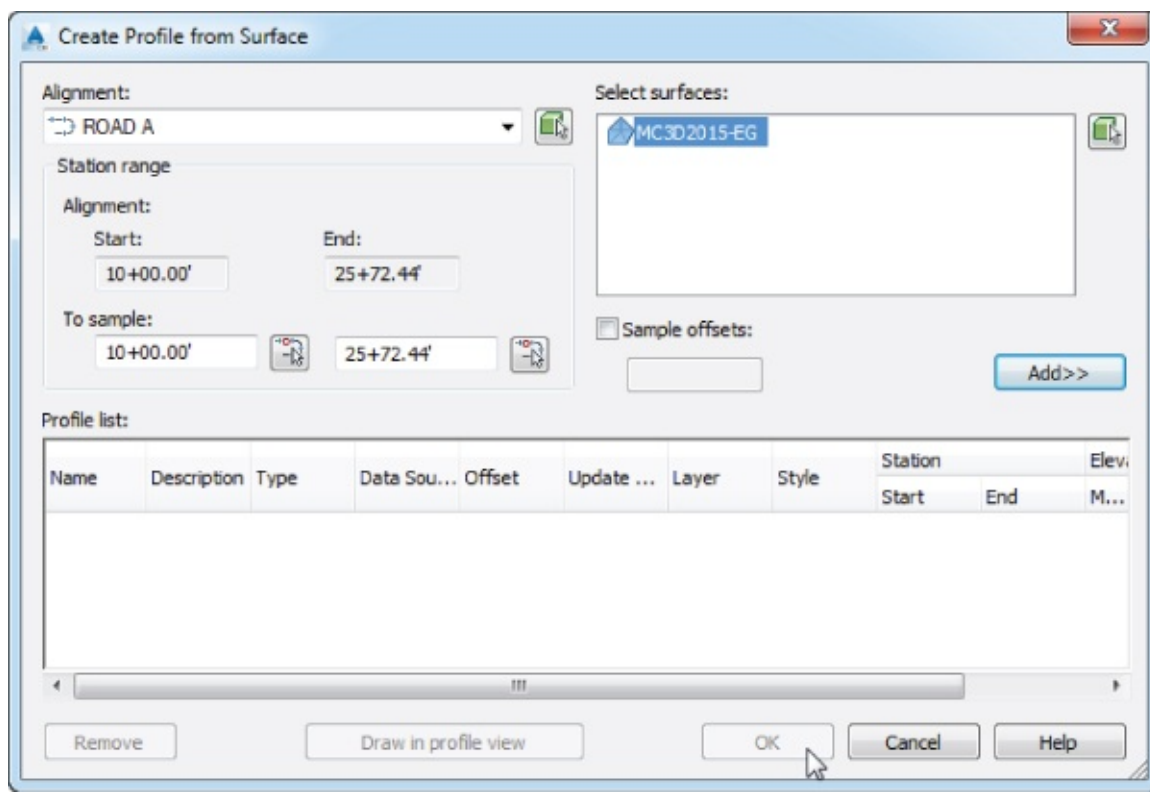


Figure 7.3 The Create Profile From Surface dialog

A Quick Tour around the Create Profile From Surface Dialog

This dialog has a number of important features, so take a moment to see how it breaks down:

- The upper-left quadrant is dedicated to information about the alignment. You can select the alignment from a drop-down list, or you can use the pick button to select it in the drawing. The Station Range area shows the starting and ending stations of the alignment and sets the To Sample range automatically to run from the beginning to the end of the alignment. You can control it manually by entering the station ranges in the To Sample text boxes or graphically in the drawing by using the pick buttons provided.
- The upper-right quadrant controls the selection of the surface that will be sampled and allows you to add sample offsets. You can select a surface from the list, or you can click the Pick On Screen button. Beneath the Select Surfaces box is a Sample Offsets check box. The offsets aren't applied in the left and right direction uniformly. You must enter a negative value to sample to the left of the alignment or a positive value to sample to the right. You can add multiple offsets in a comma-delimited list here, such as -50, -25, -10, -5, 0, 5, 10, 25, 50. In all cases, whether or not you are sampling offsets, the profile isn't generated until you click the Add button.
- In the bottom half, the Profile List box displays all profiles associated with the alignment currently selected in the Alignment drop-down menu. This area is generally static (it won't change), but you can modify the Update Mode, Layer, and Style columns by clicking the appropriate cells in this table. You can stretch and rearrange the columns to customize the view. The columns can only be modified in this location as they are created. Upon returning to the Create Profile From Surface dialog, the profiles previously created will have static values and can be changed in the Profile Properties dialog instead.

3. Select ROAD A from the Alignment drop-down list if it isn't already selected.
4. In the Select Surfaces box, select MC3D2015-EG.
5. Click Add to add the centerline profile to the Profile List section.
6. Check the box next to Sample Offsets.
7. Enter -25, 25 (or -7.62, 7.62 for metric users) to sample at the left and right right-of-way lines and click Add again.
8. In the profile list, select the cell in the Style column that corresponds to the negative (left offset) value (see [Figure 7.4](#)) to activate the Pick Profile Style dialog. If you need to widen the columns, you can do so by double-clicking the line between the column headings.

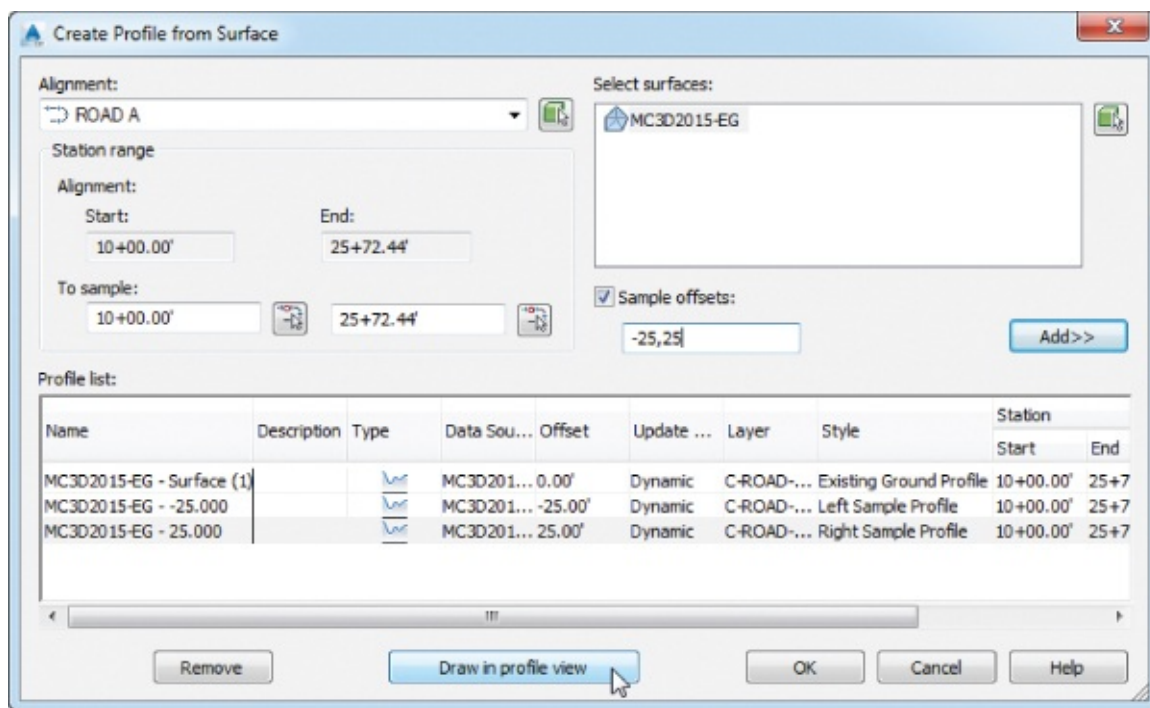


Figure 7.4 The Create Profile From Surface dialog with styles assigned on the basis of the Offset value

9. Select the Left Sample Profile option from the drop-down list, and click OK to dismiss the Pick Profile Style dialog.
- The style changes from Existing Ground Profile to Left Sample Profile in the table.
10. Select the cell in the Style column that corresponds to the positive (right offset) value to activate the Pick Profile Style dialog.
 11. Select the Right Sample Profile option from the drop-down list, and click OK to dismiss the Pick Profile Style dialog.
 12. Click Draw In Profile View to dismiss this dialog and open the Create Profile View Wizard, as shown in [Figure 7.5](#).

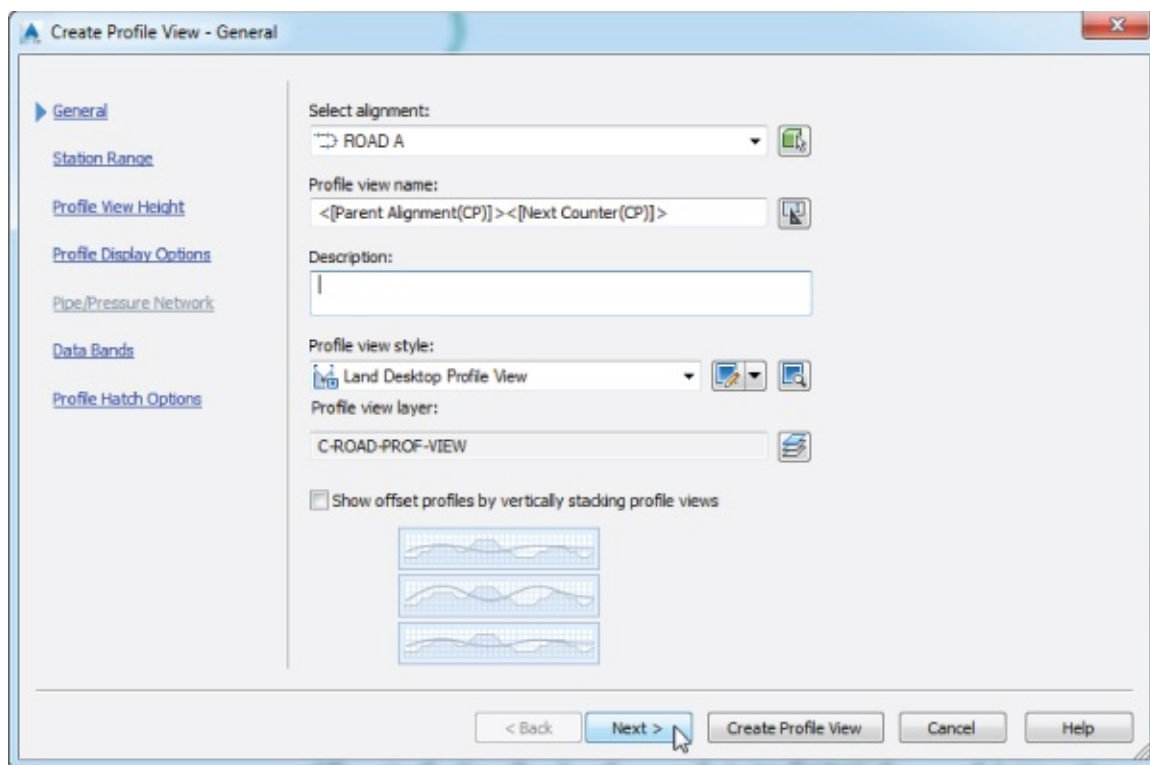


Figure 7.5 The Create Profile View – General : wizard page

13. Verify that the Select Alignment drop-down list shows ROAD A and that Land Desktop Profile View is selected in the Profile View Style drop-down list. Click Next.
14. On the Create Profile View – Station Range wizard page, verify that the Automatic option has been selected (Figure 7.6). Click Next.

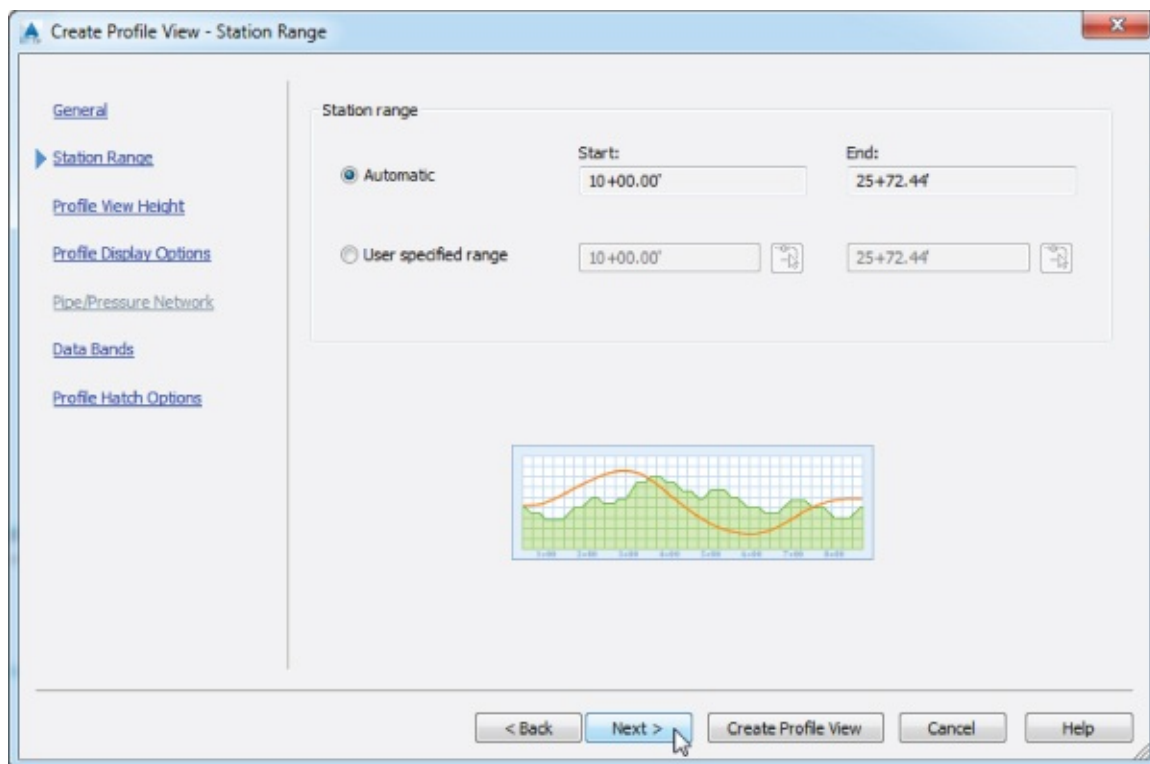


Figure 7.6 The Create Profile View – Station Range wizard page

15. On the Create Profile View – Profile View Height wizard page, verify that the Automatic option has been selected (Figure 7.7). Click Next.

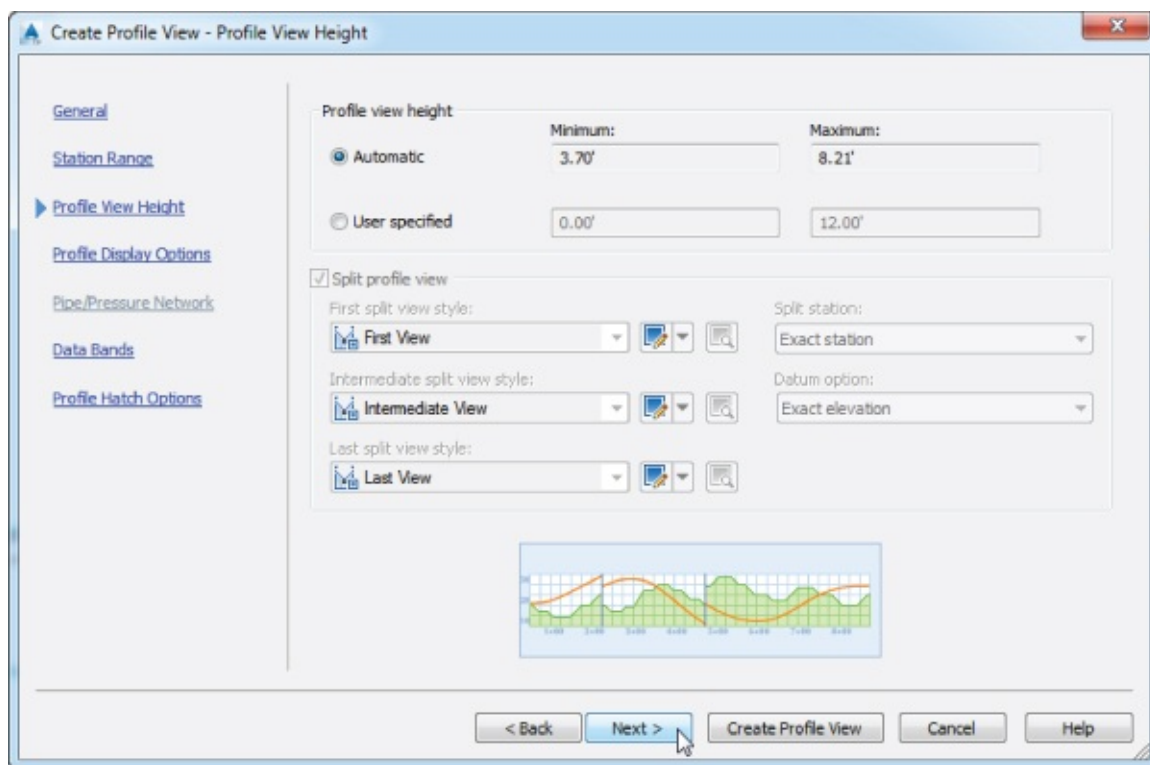


Figure 7.7 The Create Profile View – Profile View Height wizard page

We will examine split profile views in a later exercise.

16. On the Create Profile View – Profile Display Options wizard page, look at the settings but do not make any changes ([Figure 7.8](#)). Click Next.

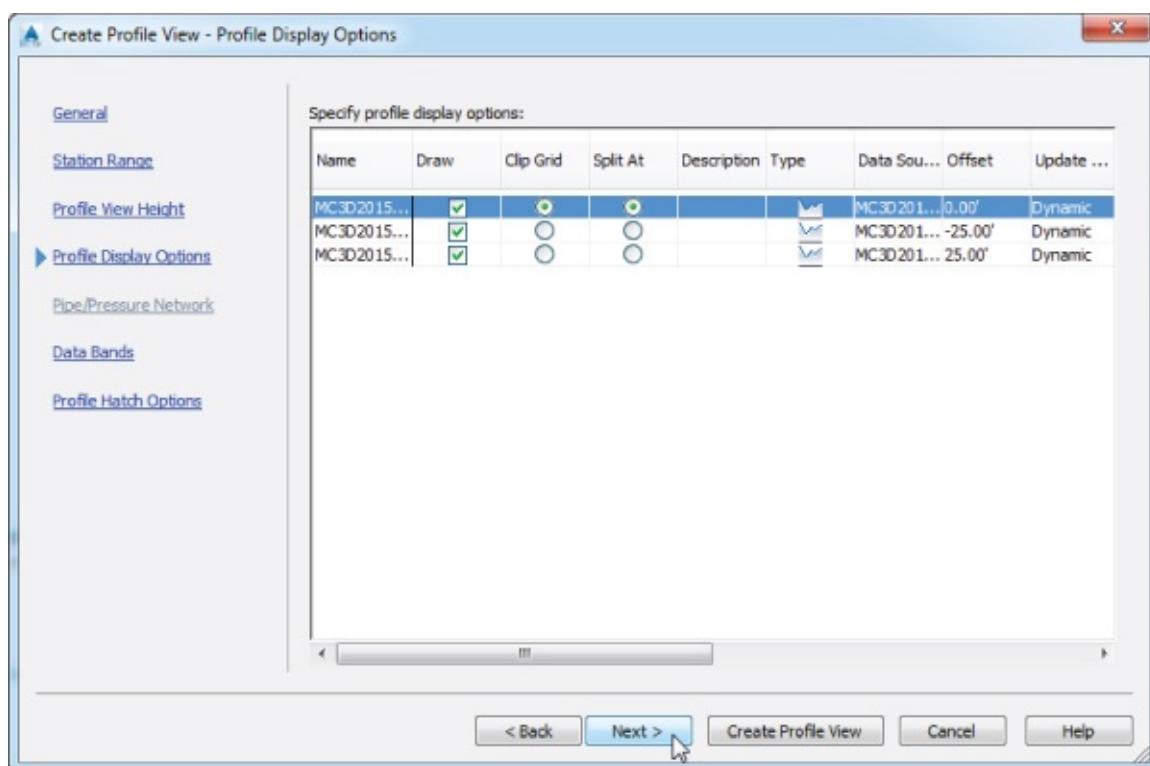


Figure 7.8 The Create Profile View – Profile Display Options wizard page

17. On the Create Profile View – Data Bands wizard page, verify that the band set is set to EG-FG Elevations And Stations ([Figure 7.9](#)). Notice in the Set Band Properties area that the Profile1 and Profile2 columns are both set to MC3D2015-EG-Surface (1). We will look at data bands in greater detail a bit later.

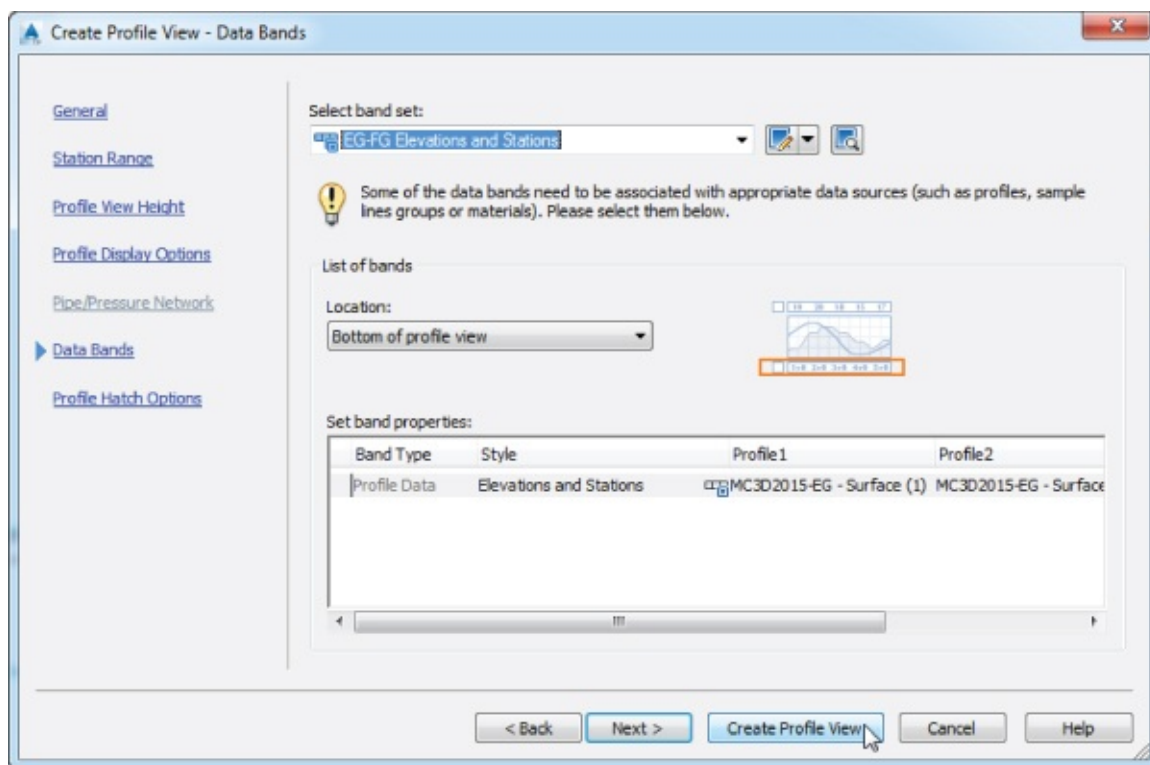


Figure 7.9 The Create Profile View – Data Bands wizard page

Notice that you could continue to click Next to step through the remainder of the wizard; however, you have no need to adjust further options at this time.

18. Click the Create Profile View button to dismiss the wizard.
19. Pick a point on the screen somewhere to the right of the site to draw the profile view, as shown in [Figure 7.10](#).

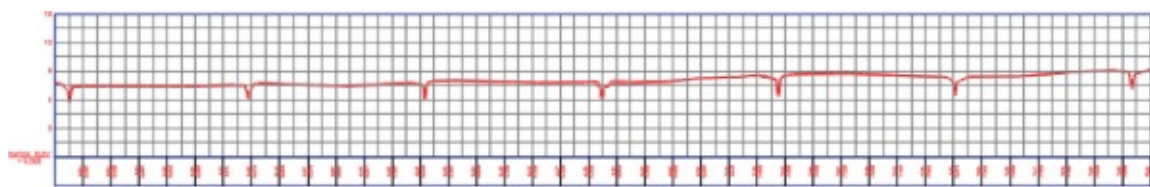


Figure 7.10 The complete profile view for ROAD A

If the Events tab in Panorama appears, telling you that you've sampled data or if an error in the sampling needs to be fixed, then click the green check mark or the X to dismiss Panorama.

Keep the drawing open for the next portion of the exercise.

Profiles are dependent on the alignment they're derived from, so they're stored as profile branches under their parent alignment on the Prospector tab, as shown in [Figure 7.11](#).

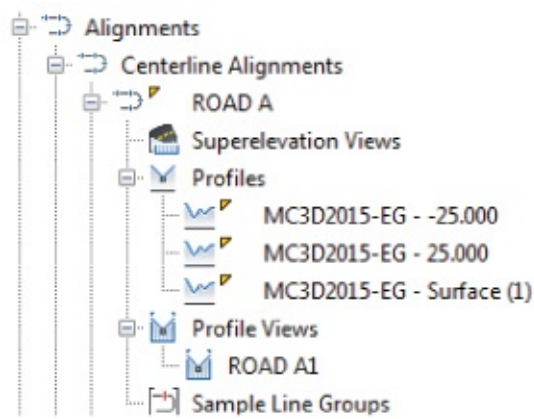


Figure 7.11 Alignment profiles : on the Prospector tab

By maintaining the profiles under the alignments, you make it simpler to review what has been sampled and modified for each alignment. Note that the profiles from surface that you just created are dynamic and continuously update, as you'll see in the next portion of this exercise.

20. From the View tab > Model Viewports panel, choose the drop-down list on the Viewport Configuration button and select Two: Horizontal.
21. Click in the top viewport to activate it.
22. On the Prospector tab, expand the Alignments > Centerline Alignments branch.
23. Right-click ROAD A, and select the Zoom To option.
24. Click in the bottom viewport to activate it.
25. Expand the Alignments > Centerline Alignments > ROAD A > Profile Views branch.
26. Right-click the profile view named ROAD A1, and select Zoom To.

Your screen should now look similar to [Figure 7.12](#).

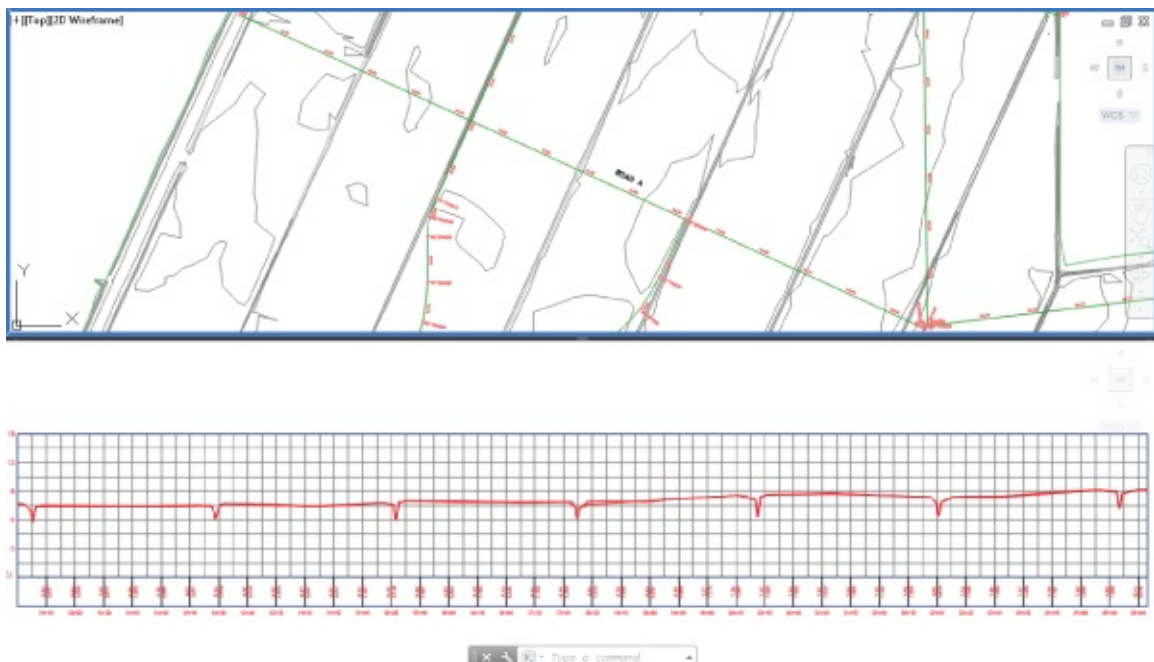


Figure 7.12 Splitting the screen for plan and profile editing

27. Click in the top viewport.
28. Zoom out so you can see more of the plan view.

29. Pick the alignment to activate the grips, and stretch the western end grip to lengthen and/or move the alignment, as shown in [Figure 7.13](#).

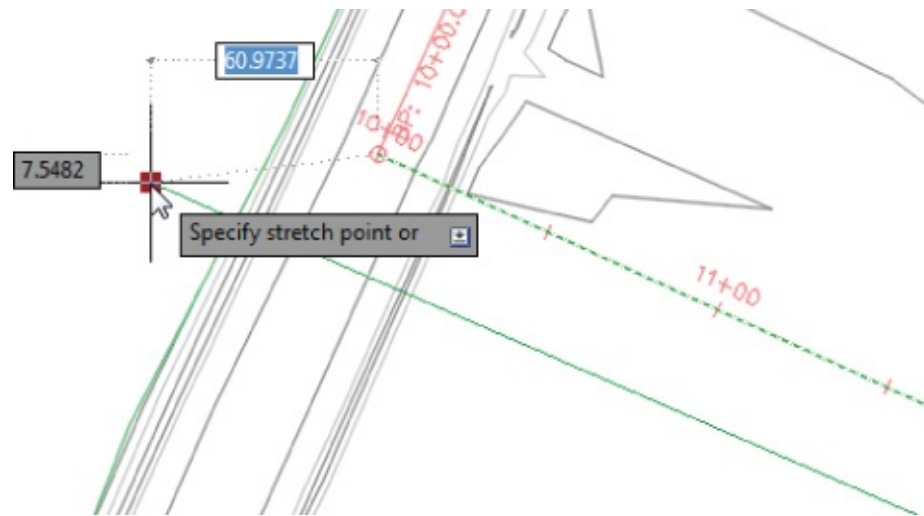


Figure 7.13 Grip-editing the alignment

30. Click to complete the edit.
- The profile view automatically adjusts to reflect the change in the starting point of the alignment. Note that the offset profiles move dynamically as well.
31. Press Ctrl+Z enough times to undo the movement of your alignment and return it to its original location.
32. Select the top viewport and then switch back to a single viewport by clicking the viewport controls in the upper-left corner of one of the modelspace viewports and selecting Viewport Configuration List > Single.

Save and close the drawing. A finished copy of this drawing is available from the book's website with the filename 0701_ProfileSampling_FINISHED.dwg (0701_ProfileSampling_METRIC_FINISHED.dwg).

By maintaining the relationships between the alignment, the surface, the sampled information, and the offsets, the software creates a much more dynamic feedback system for designers. This system can be useful when you're analyzing a situation with a number of possible solutions, where the surface information will be a deciding factor in the final location of the alignment. Once you've selected a location, you can use this profile view to create a vertical design, as you'll see in the next section.

Left to Right and Right to Left?

But what would happen if the alignment direction for ROAD A were reversed and drawn right to left? In that case you would notice that the profile view would show drawn left to right based on its style. It is often desirable to have the plan and profile go in the same direction.

One option is to rotate the plan view 180 degrees. If you have your labeling all set to be plan-readable, it will follow along nicely.

Another option is to generate a profile view object style that is set to read right to left instead of the default left to right.

In the following short exercise you will generate a profile view that displays right to left:

1. Open the 0702_ProfileViewMatch.dwg file (or the 0702_ProfileViewMatch_METRIC.dwg file for metric users), where you will notice that the ROAD A alignment is drawn from right to left while its profile view is shown displayed from left to right.
2. Select the profile view (grid), and from the Profile View contextual tab > Modify View panel, choose Profile View Properties.
3. On the Information tab, click the drop-down edit button to the right of the current object style (Land Desktop Profile View) and select Copy Current Selection.
You will learn more about managing and editing these styles in Chapter 19, “Object Styles.”
4. On the Information tab, change the Name to **Land Desktop Profile View: Right to Left**.
You may revise the description if desired.
5. In the Profile View Style dialog, on the Graph tab, change the profile view direction to Right To Left.
6. Click OK to dismiss the Profile View Style dialog.
7. Click OK to dismiss the Profile View Properties dialog.

You may need to move the profile view since the insert point of the profile view will now be in the lower-right corner instead of the lower-left corner as it was previously.

When this exercise is complete, you may close the drawing. A finished copy of this drawing is available from the book's website with the filename 0702_ProfileViewMatch_FINISHED.dwg (0702_ProfileViewMatch_METRIC_FINISHED.dwg).

Changing a profile view style is straightforward, but because of the large number of settings in play with a profile view style, the changes can be dramatic. A profile view style includes information such as labeling on the axis, vertical scale factors, grid clipping, and component coloring.

Using various styles lets you make changes to the view to meet requirements without changing any of the design information associated with the profile. To learn more about editing and creating profile styles, refer to Chapter 19.

Layout Profiles



Working with sampled surface information is dynamic, and the improvement over previous generations of Autodesk civil design software is profound. Moving into the design stage, you'll see how these improvements continue as you look at the nature of creating design profiles. By working with layout profiles as a collection of components that understand their relationships with each other as opposed to independent finite elements, you will realize the power of the AutoCAD Civil 3D software as a design tool in addition to being a drafting tool.

You can create layout profiles in two basic ways:

PVI-Based Layout PVI-based layouts are the most common, using tangents between points of vertical intersection (PVIs) and then applying curve parameters to connect them. PVI-based editing allows editing in a more conventional tabular format.

Entity-Based Layout Entity-based layouts operate like horizontal alignments in the use of free,

floating, and fixed entities. The PVI points are derived from pass-through points and other parameters that are used to create the entities. Entity-based editing allows for the selection of individual entities and editing in an individual component dialog.

You'll work with both methods in the next series of exercises to illustrate a variety of creation and editing techniques. First, you'll focus on the initial layout, and then you'll edit the various layouts.

Layout by PVI

PVI layout is the most common methodology in transportation design. Using long tangents that connect PVIs by derived parabolic curves is a method most engineers are familiar with, and it's the method you'll use in the first exercise:

1. Open the 0703_ProfileLayoutPVI.dwg (0703_ProfileLayoutPVI_METRIC.dwg) file.



2. From the Home tab > Create Design panel, choose Profile > Profile Creation Tools.
3. At the Select profile view to create profile: prompt, pick the ROAD A profile view by clicking one of the grid lines to display the Create Profile – Draw New dialog.
4. Set Name to ROAD A FG.
5. On the General tab, set Profile Style to Design Profile and Profile Label Set to Complete Label Set, as shown in [Figure 7.14](#).

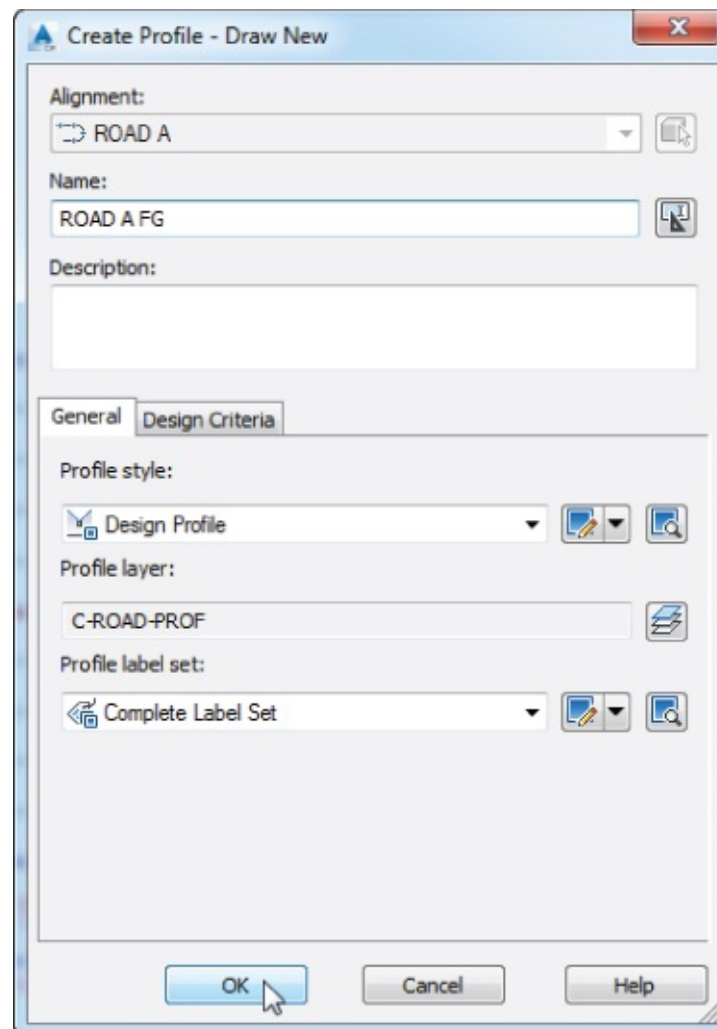


Figure 7.14 The General tab of the Create Profile – Draw New dialog

6. Switch to the Design Criteria tab to examine the options provided.

Criteria-based design for profiles is similar to what you learned in Chapter 6 for alignments in that the software compares the design speed to a selected design table (typically AASHTO 2004 in North America) and sets minimum values for curve K values. This can be helpful when you're laying out long highway design projects, but most site and subdivision designers have other criteria to design against. We won't be using design criteria in this exercise, so you can leave everything unchecked.

7. Click OK to display the Profile Layout Tools toolbar shown in [Figure 7.15](#).

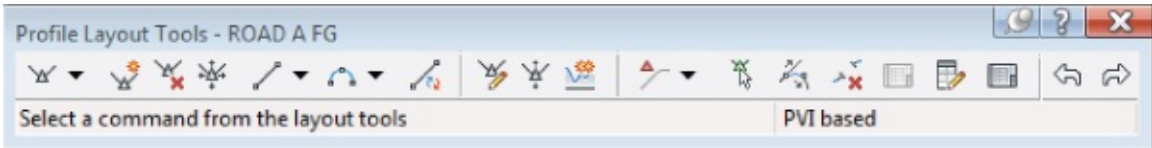



Figure 7.15 Profile Layout Tools toolbar

Notice that the toolbar is *modeless*, meaning it stays open even if you do other AutoCAD operations such as Pan or Zoom.

8.  On the Profile Layout Tools toolbar, click the drop-down arrow next to the Draw Tangents button on the far left.

9.  Select the Curve Settings option.

The Vertical Curve Settings dialog opens ([Figure 7.16](#)).

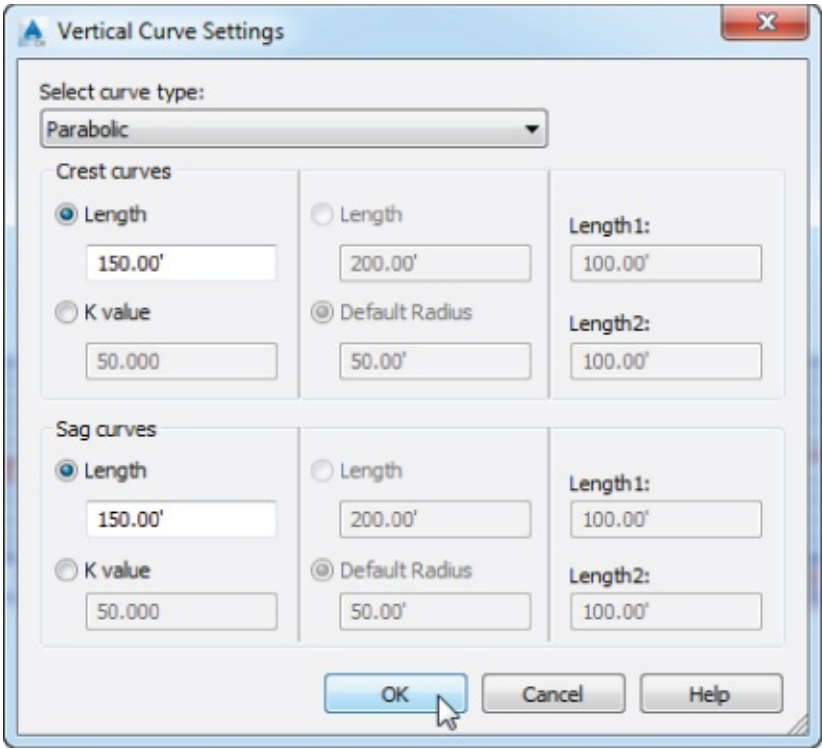



Figure 7.16 The Vertical Curve Settings dialog

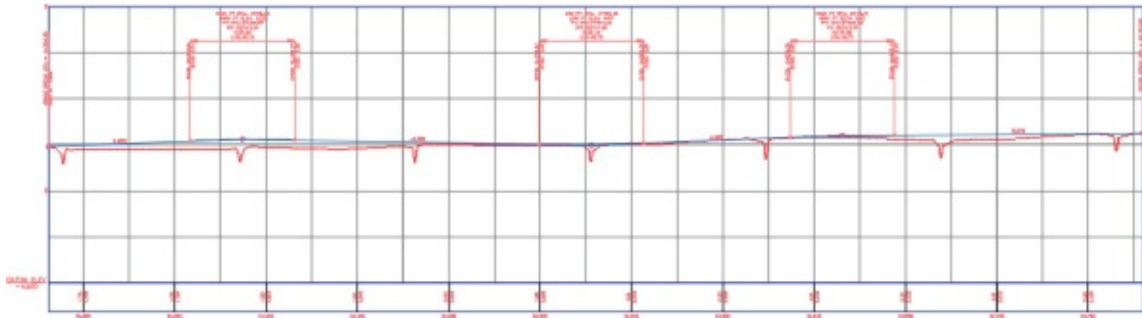
The Select Curve Type drop-down menu should be set to Parabolic, and the Length values in both the Crest Curves and Sag Curves areas should be 150.000' (or 45.720 m for metric users), as shown in [Figure 7.16](#). Selecting a Circular or Asymmetric curve type activates the other options in this dialog.

To K or Not to K

You don't have to choose. Realizing that users need to be able to design using both, the software lets you modify your design based on what's important. You can enter a K value to see the required length and then enter a length with a nice round value that satisfies the K. The choice is up to you.

10. Click OK to dismiss the Vertical Curve Settings dialog.
11.  On the Profile Layout Tools toolbar, click the drop-down arrow next to the Draw Tangents button on the far left again. This time, select the Draw Tangents With Curves option.
12. Use a Center Osnap to pick the center of the circle at the far left in the profile view.
13. Continue working your way across the profile view, picking the center of each circle left to right with a Center Osnap.
14. Right-click or press \leftarrow after you select the center of the last circle.
15. The profile labels will default to a location; however, you can click any of the profile labels and use the grips to move them to a more legible location.

Your drawing should look similar to [Figure 7.17](#).



[Figure 7.17](#) A completed layout profile with labels

16. Close the Profile Layout Tools toolbar. Save the drawing.

When this exercise is complete, you may close the drawing. A finished copy of this drawing is available from the book's website with the filename `0703_ProfileLayoutPVI_FINISHED.dwg` (`0703_ProfileLayoutPVI_METRIC_FINISHED.dwg`).

The layout profile is labeled with the complete label set you selected in the Create Profile dialog. As you'd expect, this labeling and the layout profile are dynamic. If you select the profile and then zoom in on this profile line, not the labels or the profile view, you'll see something like [Figure 7.18](#).

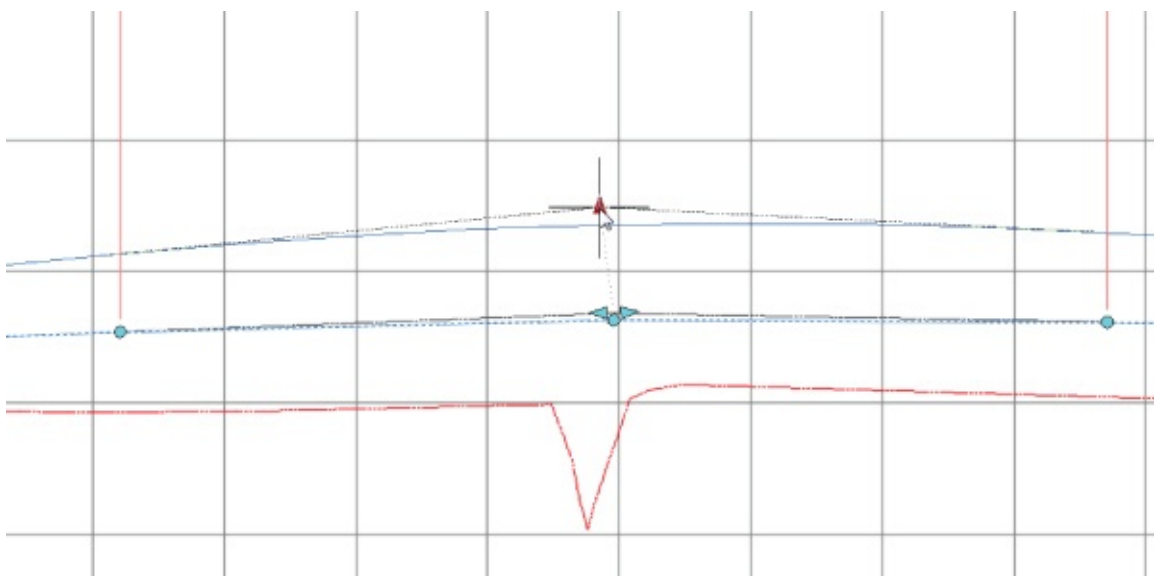


Figure 7.18 The types of grips on a layout profile

The PVI-based layout profiles include the following unique grips:

Vertical Triangular Grip The vertical triangular grip at the PVI point is the PVI grip. Moving this alters the inbound and outbound tangents, but the curve remains in place with the same design parameters of length and type.

Angled Triangular Grips The angled triangular grips on either side of the PVI are sliding PVI grips. Selecting and moving moves the PVI, but movement occurs only along the tangent of the selected grip. The curve length isn't affected by moving these grips, but the PVI station and elevation will be, as well as the grade of the other tangent.

Circular Pass-Through Grips The circular pass-through grips near the PVI and at each end of the curve are curve grips. Moving any of these grips makes the curve longer or shorter without adjusting the inbound or outbound tangents or the PVI point.


Although this simple pick-and-go methodology works for preliminary layout, it lacks a certain amount of control typically required for final design. For that, you'll use another method of creating PVIs:

1. Open the 0704_ProfileLayoutPVITransparent.dwg (0704_ProfileLayoutPVITransparent_METRIC.dwg) file.
2. Verify that the Transparent Commands toolbar ([Figure 7.19](#)) is displayed somewhere on your screen. If it is not shown, from the View tab > Interface panel, choose Toolbars > CIVIL > Transparent Commands.



Figure 7.19 The Transparent Commands toolbar

3. From the Home tab > Create Design panel, choose Profile > Profile Creation Tools.
4. Pick the ROAD C profile view by clicking one of the grid lines to display the Create Profile – Draw New dialog.
5. Set the name to **ROAD C FG**.
6. On the General tab, set Profile Style to Design Profile and Profile Label Set to Complete Label Set. Click OK to display the Profile Layout Tools toolbar.

7. On the Profile Layout Tools toolbar, make sure the Curve Settings are set to 150 (45.72 for metric users) by accessing the dialog for these settings, and then click the drop-down arrow next to the Draw Tangents button on the far left and select the Draw Tangents With Curves option, as in the previous exercise.
8. Use an End Osnap to snap to the end point of the existing surface profile where this intersects the left edge of the profile view.
9.  On the Transparent Commands toolbar, select the Profile Station Elevation transparent command. For those who prefer using the command line, the key-in command for this transparent command is **'PSE**.
10. When prompted to select a profile view, click a grid line on the ROAD C profile view to select it. If you move your cursor within the profile grid area, a vertical red line appears. Notice that the tooltip currently shows the station value of the cursor.
11. When prompted for a station, enter **1250 ↵** (or **381 ↵** for metric users) at the command line. If you move your cursor within the profile grid area, a horizontal line appears (see [Figure 7.20](#)), but it can move only vertically along the station just specified.

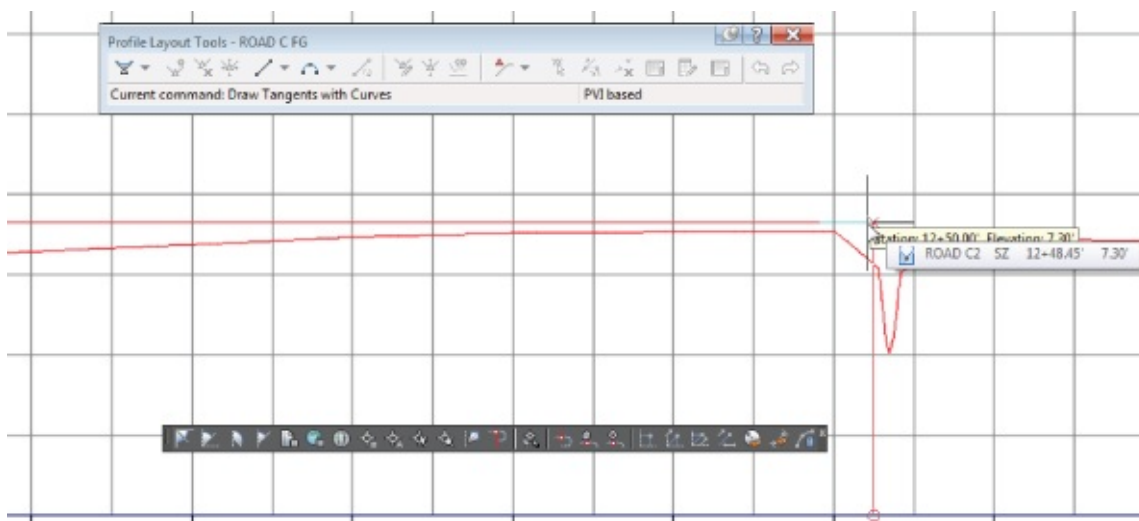




Figure 7.20 Using the Profile Station Elevation transparent command


12. When prompted to specify an elevation, enter **8 ↵** (or **2.438 ↵** for metric users) at the command line to set the elevation for the second PVI.
13. Press Esc only once.
14.  When prompted to specify a point, select the Profile Grade Station transparent command on the Transparent Commands toolbar.

For those who prefer using the command line, the key-in command for this transparent command is **'PGS**.

Notice that you did not need to select a profile view this time; that's because you are still in the same command (Draw Tangents With Curves in this case). The transparent command will default to the same profile view that was previously selected.

15. When prompted to specify the grade, enter **-.13** ↵ at the command line for the profile grade.
16. When prompted for the station, enter **1520** ↵ (or **463.30** ↵ for metric users) at the command line.
17. Press Esc only once to deactivate the Profile Grade Station transparent command.
18.  When prompted to specify the grade, select the Profile Grade Elevation transparent command on the Transparent Commands toolbar.

For those who prefer using the command line, the key-in command for this transparent command is **'PGE**.

19. When prompted to specify the grade, enter **0.31** ↵ at the command line for the profile grade.
20. Enter **8.39** ↵ (or **2.557** ↵ for metric users) for the profile grade elevation.
21. Press Esc only once to deactivate the Profile Grade Elevation transparent command.
22.  When prompted to specify the grade, select the Profile Grade Length transparent command on the Transparent Commands toolbar.

For those who prefer using the command line, the key-in command for this transparent command is **'PGL**.

23. When prompted to specify the grade, enter **-.19** ↵ at the command line for the profile grade.
24. Enter **200** ↵ (or **60.96** ↵ for metric users) for the profile grade length.
25. Press Esc only once to deactivate the Profile Grade Elevation transparent command.
26. Use an End Osnap to select the end of the existing surface profile on the far-right side of the profile view.
27. Press ↵ to complete the profile.

Your profile should look like [Figure 7.21](#).

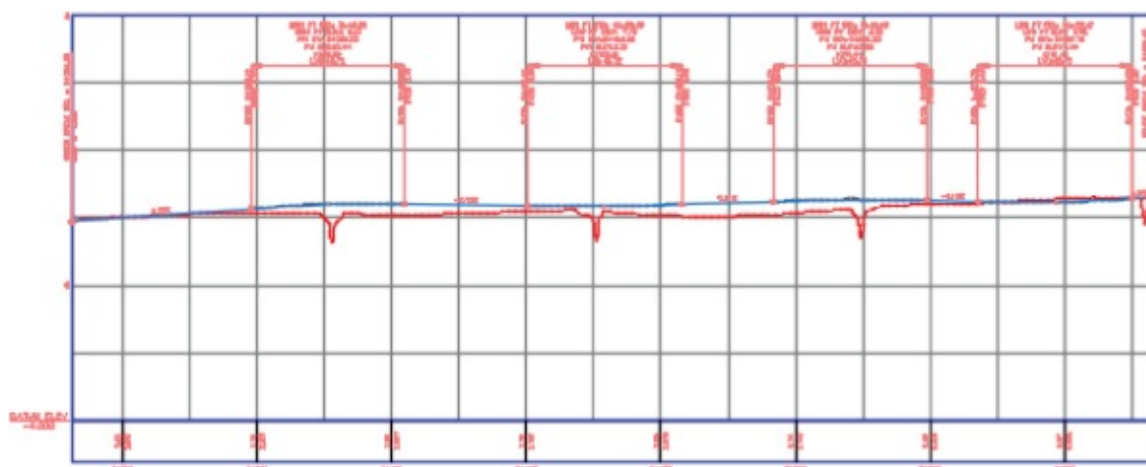


Figure 7.21 A layout profile created using the Transparent Commands toolbar

28. Close the Profile Layout Tools toolbar.

When this exercise is complete, you may close the drawing. A finished copy of this drawing is available from the book's website with the filename **0704_ProfileLayoutPVITransparent_FINISHED.dwg** (**0704_ProfileLayoutPVITransparent_METRIC_FINISHED.dwg**).

Using PVIs to define tangents and fitting curves between them is the most common approach to create a

layout profile, but you'll look at an entity-based design in the next section.



Layout by Entity

In this exercise you will lay out a design profile using the concepts of fixed, floating, and free entities in much the same way that you used them for laying out alignments in Chapter 6:

1. Open the `0705_ProfileEntityLayout.dwg` (`0705_ProfileEntityLayout_METRIC.dwg`) file.
2. From the Home tab ➤ Create Design panel, choose Profile ➤ Profile Creation Tools.
3. Pick the ROAD B profile view by clicking one of the grid lines to display the Create Profile – Draw New dialog.
4. For Name enter **ROAD B FG**.
5. On the General tab, set Profile Style to Design Profile and Profile Label Set to Complete Label Set; then click OK to display the Profile Layout Tools toolbar.

Oops, You Closed the Profile Layout Tools Toolbar!

If at any point you inadvertently close the Profile Layout Tools toolbar, have no fear. You can reopen it by selecting the profile that you were editing and selecting Geometry Editor from the Profile contextual tab. If you created the profile but there aren't any entities to select, you can select it in Prospector by expanding the Alignments ➤ Centerline Alignments ➤ *Alignment Name* ➤ Profiles branch. Right-click the profile and choose Delete to start again from scratch. Unfortunately there isn't a Select option as you have with alignments, so deleting the profile is the only option.

6.  On the Profile Layout Tools toolbar, click the drop-down arrow next to the Tangent Creation button, and select the Fixed Tangent (Two Points) option.
7. Using a Center Osnap, pick the circle at the left edge of the profile view labeled A.
A rubber-band line appears.
8. Using a Center Osnap, pick the circle labeled B.
A tangent is drawn between these two circles.
9. Using a Center Osnap, pick the circle labeled B again as the start point and the circle labeled C as the endpoint.
A tangent is drawn between these two circles. Notice that the tangent does not automatically continue from the previous two-point fixed tangent; therefore, you have to select the B circle again.
10. Using a Center Osnap, pick the circle labeled D as the start point and the circle labeled E as the endpoint.
A tangent is drawn between these two circles.
11.  On the Profile Layout Tools toolbar, click the drop-down arrow next to the Vertical Curve Creation button and select the More Free Vertical Curves ➤ Free Vertical Parabola (PVI Based)

option.

Notice that the image shown to the left of the drop-down arrow for the Tangent Creation button and Vertical Curve Creation button will match the last type of entity you selected from the drop-down menu.

2. At the Pick point near PVI or curve to add curve: prompt, pick the circle labeled B as the PVI.
3. At the Specify curve length or [Passthrough K]: prompt, enter **150** ↵ (or **45.72** ↵ for metric users) as the curve length.
4. Press ↵ to end the command.

Your drawing should now look similar to [Figure 7.22](#). Notice that although you have added the tangent between D and E, it is not yet labeled since it is not connected with the main portion of the profile created up until this point.

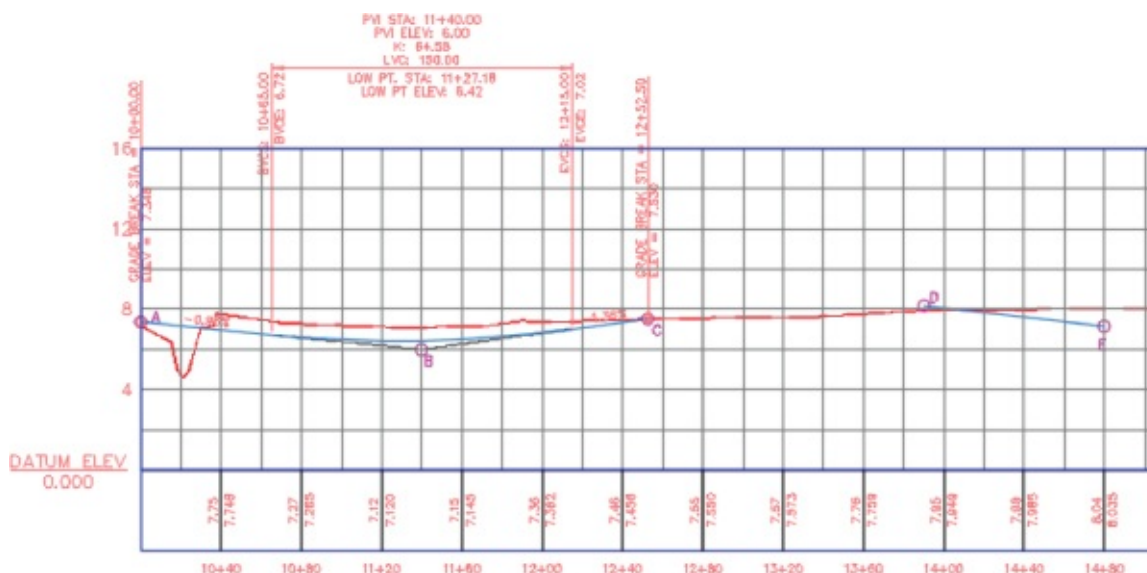


Figure 7.22 Some tangent and vertical curve entities placed on ROAD B



5. On the Profile Layout Tools toolbar, click the drop-down arrow next to the Vertical Curve Creation button and select the Free Vertical Curve (Parabola) option.
6. When prompted to select the first entity, click the tangent between B and C. Then click the tangent between D and E as the next entity.

Remember to pick the tangent line and not an end circle.

7. At the Specify curve length or [Radius K]: prompt, enter **100** ↵ (or **30.48** ↵ for metric users) as the curve length and press ↵ again to end the command.

Notice that with this command the tangents do not have to meet at a PVI, unlike the previous Free Vertical Curve (PVI Based) curve.



8. On the Profile Layout Tools toolbar, click the drop-down arrow next to the Vertical Curve Creation button and select the Floating Vertical Curve (Parameter, Through Point) option.
9. At the Select entity to attach to: prompt, select the tangent between D and E to attach the floating vertical curve.

Remember to pick the tangent line and not the end circle. Also, you have to select the tangent between the midpoint and the endpoint of the tangent at the circle labeled E. Selecting too close to the endpoint at the circle labeled D will give a result of End of selected entity already has an attachment.

20. At the Enter K value or [Radius]: prompt, enter **73.10 (22.30** for metric users) for the K value and \leftarrow , and then at the Specify End Point: prompt using the Center Osnap, select the circle labeled F as the end point for the curve.

You will notice when using this tool that once you select the first entity and define the parameter, a rubber-band curve appears. If you move the cursor on the wrong side of the tangent endpoint, it will become a large red circle with an X across it indicating that you cannot select that point.



21. On the Profile Layout Tools toolbar, click the drop-down arrow next to the Tangent Creation button and select the Float Tangent (Through Point) option.
22. At the Select entity to attach to: prompt, select the curve from E and F making sure to select it between the midpoint of the curve and the circle labeled F to attach the floating tangent. A rubber-band line appears.
23. At the Select through point: prompt, using a Center Osnap, select the circle labeled G.
24. Press \leftarrow or right-click to end the Fixed Tangent (Through Point) command; then close the Profile Layout Tools toolbar.

Your drawing should look like [Figure 7.23](#).

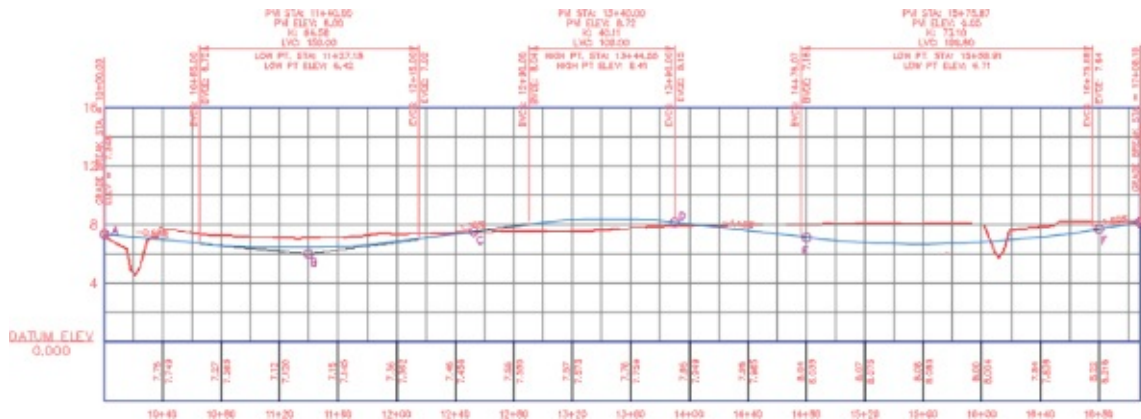


Figure 7.23 Completed profile built using entities

When this exercise is complete, you may close the drawing. A finished copy of this drawing is available from the book's website with the filename 0705_ProfileEntityLayout_FINISHED.dwg (0705_ProfileEntityLayout_METRIC_FINISHED.dwg).

With the entity-creation method, grip editing works in a similar way to other layout methods based on the fixed, floating, and free constraints.

Profile Layout Tools



Although we have touched on many of the available tools in the Profile Layout Tools toolbar, shown in [Figure 7.24](#), there are still many that we have not discussed.

Chained Tangents Creation Tools The Chained Tangents Creation Tools drop-down button contains four options:

- Draw Tangents lays out a profile point to point with no curves.
- Draw Tangent With Curves lays out a profile from point to point with the curve type and length determined from the Curve Settings options.
- Curve Settings sets the type of curve (parabolic, circular, asymmetric) along with specific geometric properties that define each type of curve.
- Convert Free Curve (Through Point) is a new feature introduced with this release that allows free curves that are constrained by using pass-through points to be converted to free curves based on a parameter.

Insert PVI The Insert PVI button adds a new PVI at the specified location, consequently breaking an existing tangent and generating two new tangents connected to the new PVI.

Delete PVI The Delete PVI button removes an existing PVI at the specified location, consequently taking two tangents and replacing them with a single tangent.

Move PVI The Move PVI button allows you to select an existing PVI and relocate it to a specified location while keeping the two existing tangents. You can get the same result by grip-editing the PVI with the vertical triangular grip, as described earlier. In fact, one might argue that the grip-editing approach is better because it shows you a preview of your edit as you make it. The Move PVI command does not.

Individual Tangents Creation Tools The Individual Tangents Creation Tools Drop-down button contains six tools:

- Fixed Tangent (Two Points)
- Fixed Tangent – Best Fit
- Float Tangent (Through Point)
- Float Tangent – Best Fit
- Free Tangent
- Solve Tangent Intersection

The fixed, float, and free tools are consistent with those discussed in Chapter 6 when we were generating alignments, and therefore many of these options should be self-explanatory. The Solve Tangent Intersection option extends two tangents that do not currently connect to form a PVI.

Vertical Curves Creation Tools Drop-Down The Vertical Curves Creation drop-down button contains 15 options:

- Fixed Vertical Curve (Three Points)
- Fixed Vertical Curve (Two Points, Parameter)
- Fixed Vertical Curve (Entity End, Through Point)
- Fixed Vertical Curve (Two Points, Grade At Start Point)
- Fixed Vertical Curve (Two Points, Grade At End Point)

- Fixed Vertical Curve – Best Fit
- Floating Vertical Curve (Parameter, Through Point)
- Floating Vertical Curve (Through Point, Grade)
- Floating Vertical Curve – Best Fit
- Free Vertical Curve (Parabola)
- Free Vertical Curve (Circular)—a feature introduced with this release
- Free Vertical Parabola (PVI Based)
- Free Asymmetrical Parabola (PVI Based)
- Free Circular Curve (PVI Based)
- Free Vertical Curve – Best Fit

Once again the fixed, floating, and free terminology should be familiar from Chapter 6. By trying these various options, you will become comfortable with their capabilities and you will find the ones that best fit your design needs.

Convert AutoCAD Line And Spline The Convert AutoCAD Line And Spline button takes a singular line/spline and converts it into a profile object, either a tangent or a three-point vertical curve, as applicable.

Tabular PVI Insertion The Tabular PVI insertion button allows you to enter PVI station and elevation information in a table-like dialog, which is helpful if you want to create multiple PVIs at once using station and elevation information. This table allows you to insert PVIs and curves anywhere geometrically possible in the profile. You are not required to enter the PVIs in any specific order when using this method of entry.

Raise/Lower PVIs The Raise/Lower PVIs button allows you to raise or lower the entire profile or a subset of PVIs within a specified station range. This button will be discussed in a later exercise in the section “Other Profile Edits.”

Copy Profile The Copy Profile button allows you to copy either the entire profile or a portion of the profile within a specified station range. This button will be discussed later in the section “Other Profile Edits.”

PVI or Entity Based Selection The PVI or Entity Based selection button allows you to choose to select and display profile layout parameters based on either PVI or entity. By switching the selection to Entity and selecting a curve entity in the Profile Layout Parameters discussed shortly, you will be able to change the parameter constraint. This represents a new enhancement introduced in 2015.

Select PVI or Entity The Select PVI or Entity button opens the Profile Layout Parameters dialog for the selected PVI or entity.

Delete Entity The Delete Entity button removes a selected curve or tangent.

Edit Best Fit Data For All Entities The Edit Best Fit Data For All Entities button turns on the display of a table of the regression data for a profile that was created by best fit. A discussion of best fit profiles is provided in the next section.

Profile Layout Parameters The Profile Layout Parameters button opens the Profile Layout Parameters dialog, which shows numeric data for editing the selected entity or PVI.

Profile Grid View The Profile Grid View button opens the Profile Entities tab in Panorama, showing information about all the entities and PVI's in the profile. This is where you have access to make edits on all the entities of the profile.

Undo/Redo The Undo button reverses that last command and the Redo button reverses the last undo operation. This includes commands and operations that are not part of creating or editing a profile.

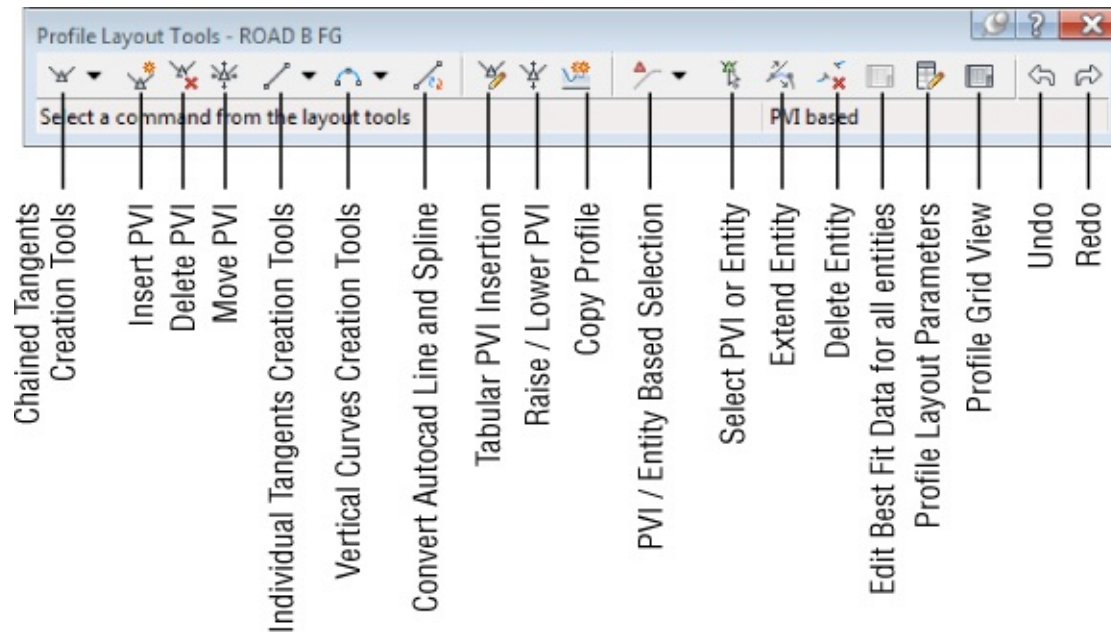


Figure 7.24 Profile Layout Tools toolbar

The Best Fit Profile

You've surveyed along a centerline, and you need to closely approximate the tangents and vertical curves as they were originally designed and constructed.

The Create Best Fit Profile option is found in the Home tab > Create Design panel, on the Profile drop-down. Once you select a profile view, the Create Best Fit Profile dialog appears ([Figure 7.25](#)).

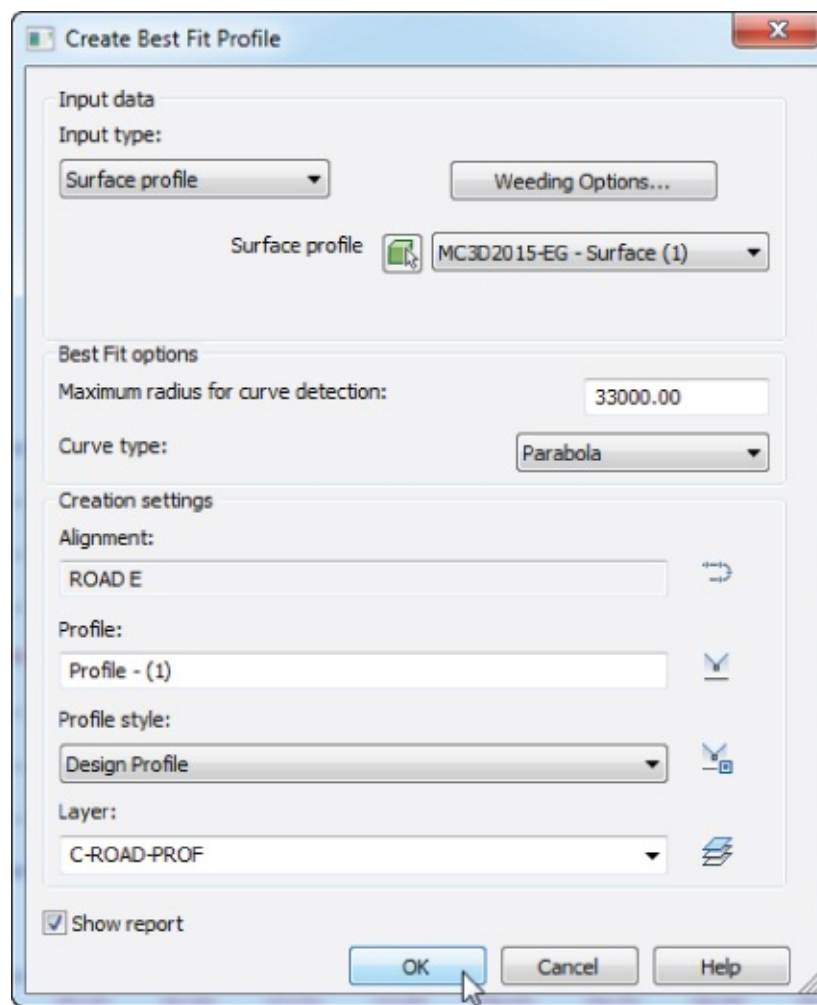


Figure 7.25 Create Best Fit Profile dialog

Similar to the best fit alignment we discussed in Chapter 6, a best fit profile can be based on an Input Type setting of AutoCAD Blocks, AutoCAD 3D Polylines, AutoCAD Points, COGO Points, Surface Profile, or Feature Lines. The most common option is Surface Profile.

The command attempts to run a complex algorithm to determine the best fit profile, including both tangents and vertical curves. However, the only best fit option available for determining vertical curves is the maximum curve radius. The maximum curve radius does not apply in a design that uses parabolic curves, the most common curves found in roadway design. Once the analysis is run, a Best Fit Report is provided; however, unlike the Best Fit command for lines and curves as discussed in Chapter 1, “The Basics,” this command has no options for selecting or deselecting points.

Creating a Profile from a File

Working with profile information in the AutoCAD Civil 3D environment is nice, but it isn't the only place where you can create or manipulate this sort of information. Many programs and analysis packages generate profile information. One common case is the plotting of a hydraulic grade line against a stormwater network profile of the pipes. When information comes from outside the program, it is often output in a variety of formats. If you convert this data to a text file in the format required by AutoCAD Civil 3D, the profile information can be imported directly.

There is a specific format that is required for creating a profile from a text file. Each line is a PVI definition (station and elevation) listed in ascending order. The station should not include the plus character (use 100, not 1+00 or 0+100). Curve information is an optional third bit of data on any line except for the first and last lines in the file. The vertical curve that is created will be a parabolic curve,

which is the most popular type of vertical curve. Note that each line is space delimited. Here's one example of a profile text file:

```
0 550.76
127.5 552.24
200.8 554 100
256.8 557.78 50
310.75 561
```

In this example, the third and fourth lines include the curve length as the optional third piece of information. The only inconvenience of using this input method is that the information in Civil 3D doesn't directly reference the text file. Once the profile data is imported, no dynamic relationship exists with the text file, but other methods can be used to edit the profile once imported.

In this exercise, you'll import a small text file to see how the function works:

1. Open the 0706_ProfileFromFile.dwg (0706_ProfileFromFile_METRIC.dwg) file.



2. From the Home tab > Create Design panel, choose Profile > Create Profile From File. The Import Profile From File – Select File dialog appears.
3. Browse to and select the 0706_ProfileFromFile.txt file (or the 0706_ProfileFromFile_METRIC.txt file for metric users), and click Open to display the Create Profile – Draw New dialog.
4. For Alignment, choose ROAD G, and set Name to **ROAD G FG**.
5. On the General tab, set Profile Style to Design Profile and Profile Label Set to Complete Label Set; then click OK.

Your drawing should look like [Figure 7.26](#). The ROAD G profile view should be updated to reflect the newly imported design profile for the specified alignment.

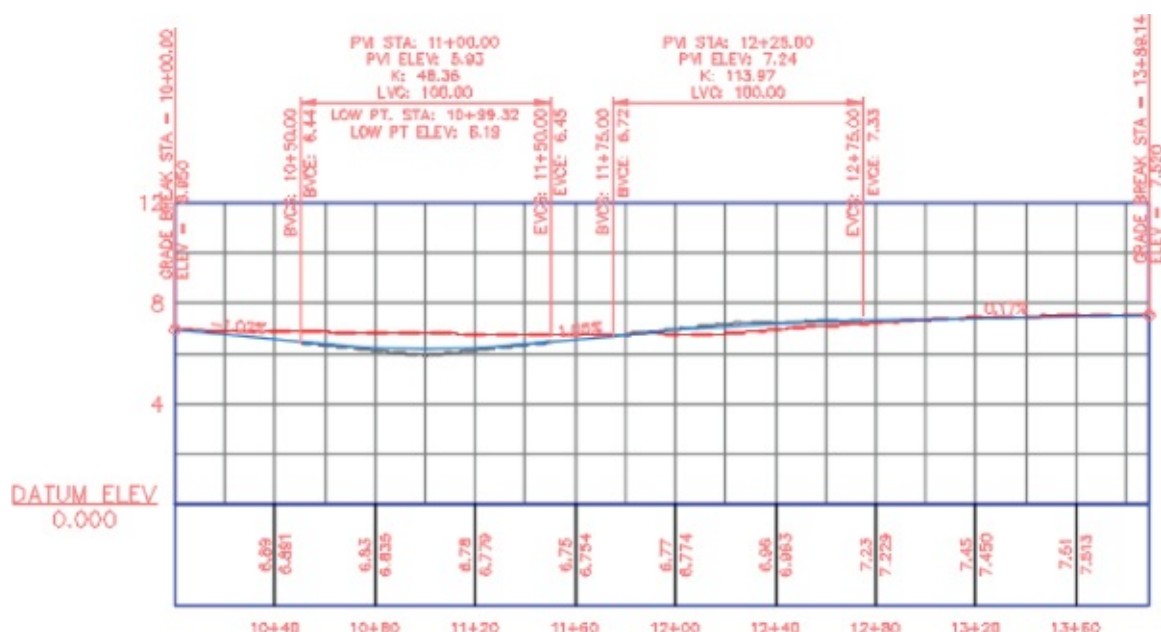


Figure 7.26 Completed profile created from a file

When this exercise is complete, you may close the drawing. A finished copy of this drawing is available from the book's website with the filename 0706_ProfileFromFile_FINISHED.dwg

Now that you've tried the three main ways of creating profiles, you'll edit a profile.

Editing Profiles

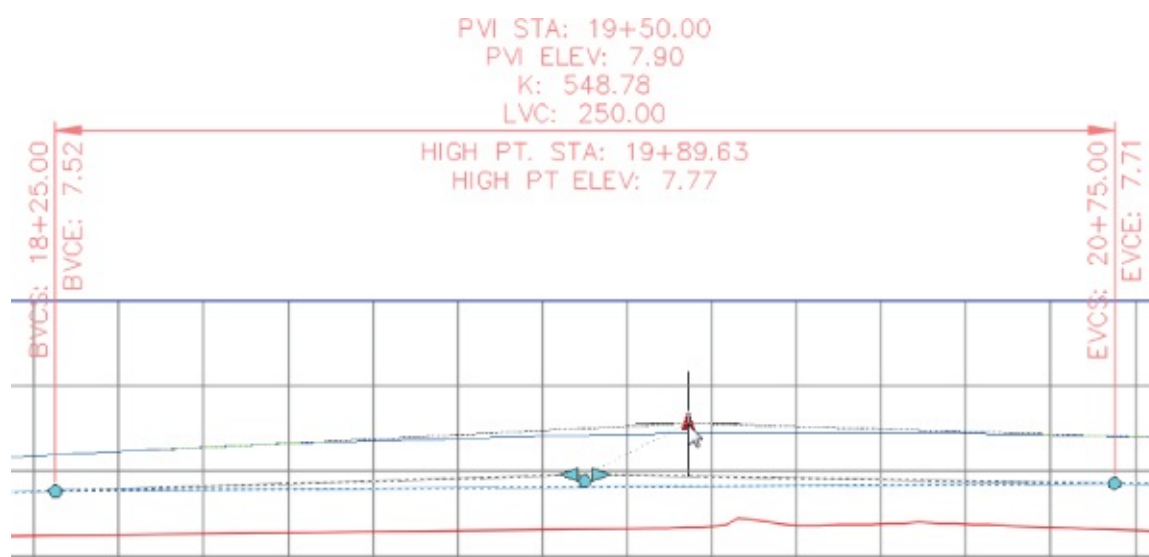
The methods just reviewed let you quickly create profiles. You saw how sampled profiles reflect changes in the surface along the parent alignment and how to lay out a design profile using a few different techniques. You also imported a text file with profile information. In all these cases, you just left the profile as originally designed with no analysis or editing.

In the following sections, you will begin to look at some of the profile-editing methods available. The most basic is a more precise grip-editing methodology, which you'll learn about first. Then you'll see how to modify the PVI-based layout profile, how to change out the components that make up a layout profile, and how to use some other miscellaneous editing functions.

Grip-Editing Profiles

Once a profile layout is in place, sometimes a simple grip edit will suffice. But for precision editing, you can use the grips along with transparent commands or dynamic input, as in this short exercise:

1. Open the 0707_ProfileEditing.dwg (0707_ProfileEditing_METRIC.dwg) file.
2. Zoom to the ROAD D profile view and pick the ROAD D FG profile (the blue line) to activate its grips.
3. Locate the PVI around Sta. 19+50 (or 0+594.36 for metric users) and pick the vertical triangular grip on the vertical crest curve to begin a grip stretch of the PVI, as shown in [Figure 7.27](#).




[Figure 7.27](#) Grip-editing a PVI

The command line states Specify stretch point or [Base point Copy Undo eXit]:.



4. On the Transparent Commands toolbar, select the Profile Station Elevation command. That's 'PSE for the command-line users.
5. At the Select a profile view: prompt, pick a grid line on the ROAD D profile view to select.
6. At the Specify station: prompt, enter **1975** ↵ (or **601.98** ↵ for metric users).

7. At the Specify elevation: prompt, enter **7.50** ↵ (or **2.286** ↵ for metric users).
8. Click the vertical triangular grip for the PVI near station 14+00 (or 0+426.72 for metric users).
9.  If dynamic input is not turned on already, click the Dynamic Input icon at the bottom of your screen if available, or press the F12 key to enable it.



You should see two editable tooltips on your screen, one for station and one for elevation. You may need to zoom out to see them.
10. Enter **1425** ↵ (or **434.34** ↵ for metric users).

When this exercise is complete, you may save the drawing, but keep it open for the following exercise. A copy of this drawing at this stage is available from the book's web page with the filename 0707_ProfileEditingGrips_FINISHED.dwg (0707_ProfileEditingGrips_METRIC_FINISHED.dwg).

The grips can go from quick-and-dirty editing tools to precise editing tools when you use them in conjunction with the transparent commands or dynamic input. They lack the ability to precisely control a curve length, though, so you'll look at editing a curve next.

Editing Profiles Using Profile Layout Parameters

Beyond the simple grip edits, but before changing out the components of a typical profile, you can modify the values that generate an individual component. In this exercise, you'll use the Profile Layout Parameters dialog to modify the curve properties on your design profile:

1. Continue working on the previous file, or open the 0707_ProfileEditingGrips_FINISHED.dwg (0707_ProfileEditingGrips_METRIC_FINISHED.dwg) file.
2. Zoom to the ROAD D profile view and pick the ROAD D FG profile (the blue line) to activate the Profile contextual tab.
3. From the Profile contextual tab > Modify Profile panel, choose Geometry Editor.
4.  On the Profile Layout Tools toolbar, click the Profile Layout Parameters button to open the Profile Layout Parameters dialog, and place the dialog somewhere on your screen so that you can still see the profile view.
5.  On the Profile Layout Tools toolbar, click the Select PVI button.

If the Select Entity button is showing on the toolbar instead, from the PVI /Entity Based selection button select the PVI Based option.
6. Zoom in to click near the PVI at station 34+70 (or 1+057.66 for metric users) to populate the Profile Layout Parameters dialog ([Figure 7.28](#)).

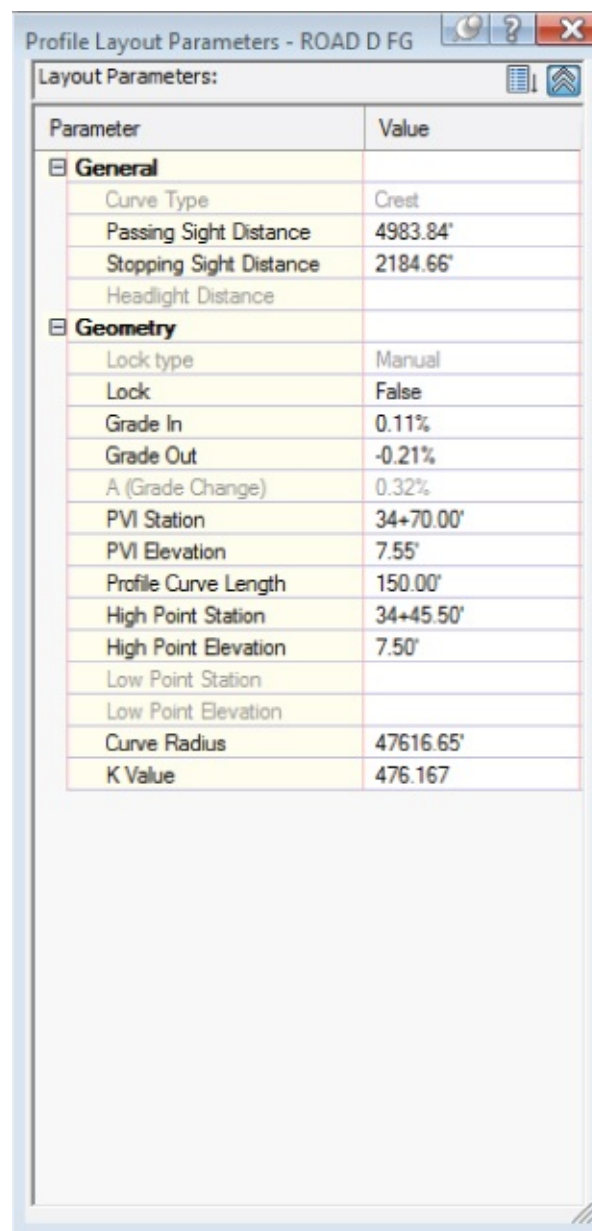


Figure 7.28 The Profile Layout Parameters dialog

Values that can be edited are in black; the rest, shown grayed out, are mathematically derived and can be of some design value but can't be directly modified. The two buttons at the top of the dialog adjust how much information is displayed. The one on the left is the Show More/Show Less button, and the one on the right is the Collapse All Categories/Expand All Categories button.

7. In the Profile Layout Parameters dialog, change the K value to **500** \leftarrow (or **152.4** \leftarrow for metric users). Notice that the curve changes but the label does not update. This is because you are still in the command. Once you end the command, all appropriate labels will update.
8. Change the selection to Entity Based from the PVI/Entity Based Selection drop-down of the toolbar. Click the PVI/Entity Selection button and select the curve at station 38+05 (or 1+159.76 for metric users) to repopulate the Profile Layout Parameters dialog with that curve's data.
9. In the Profile Layout Parameters dialog, change Parameter Constraint Lock to False, thus enabling the choice of constraints. In the Constraint Type Desc field, change the value to Through Point. On making this change you will notice that all the other settings are grayed out, leaving you with the option of defining only the Through Point Station and Elevation parameters. Change the station to 38+10 and the elevation to 7.00 (1+161.28 for station and 2.134 for elevation for metric users).

The ability to change the parameter constraint is a new enhancement introduced with this release.

10. Close the Profile Layout Parameters dialog by clicking the X in the upper-right corner and press Enter to exit selection mode. Close the Profile Layout Tools toolbar as well.



When this exercise is complete, you may save the drawing, but keep it open for the following exercise. A copy of this drawing at this stage is available from the book's web page with the filename 0707_ProfileEditingParameter_FINISHED.dwg (0707_ProfileEditingParameter_METRIC_FINISHED.dwg).

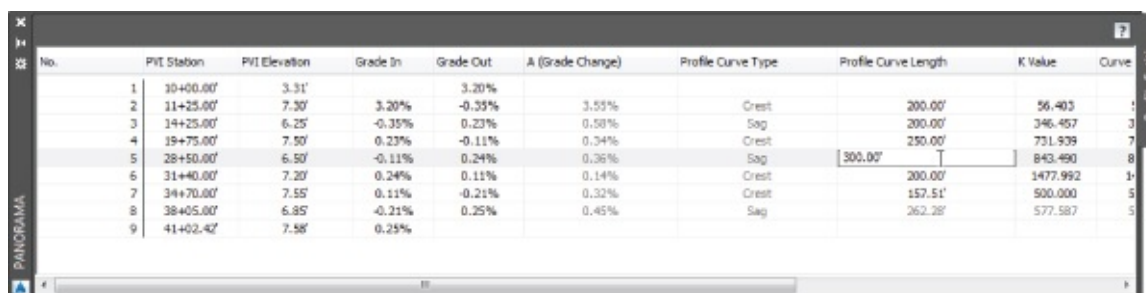
Editing Profiles Using Profile Grid View

In this exercise, you'll use the Profile Grid View command to view and modify the profile within Panorama:

1. Continue using the file from the previous exercise, or if you did not complete the previous exercise, open the 0707_ProfileEditingParameter_FINISHED.dwg (0707_ProfileEditingParameter_METRIC_FINISHED.dwg) file.

If you have closed the Profile Layout Tools toolbar, click the ROAD D FG profile, and then from the Profile: ROAD D FG contextual tab ➤ Modify Profile panel, click Geometry Editor.

2.  On the Profile Layout Tools toolbar, change the selection to PVI Based from the PVI/Entity Based Selection drop-down if it is not already set to that mode.
3.  Click the Profile Grid View tool to activate the Profile Entities tab in Panorama. Panorama allows you to view all the profile components at once, in a compact form.
4. Scroll right in Panorama until you see the Profile Curve Length column. You can show and hide columns by right-clicking the column headings. You can also resize the columns by dragging the breaks between the columns or by double-clicking the break between two columns to autosize to the column contents.
5. Double-click the Profile Curve Length value for Entity No. 5 (see [Figure 7.29](#)) and change the value from 300 to **250** (or from 91.44 to **76.2** for metric users).



No.	PVI Station	PVI Elevation	Grade In	Grade Out	A (Grade Change)	Profile Curve Type	Profile Curve Length	K Value	Curve
1	30+00.00'	3.31'		3.20%					
2	31+25.00'	7.30'	3.20%	-0.35%	3.55%	Crest	200.00'	56.403	
3	34+25.00'	6.25'	-0.35%	0.23%	0.58%	Sag	200.00'	346.457	
4	38+75.00'	7.50'	0.23%	-0.11%	0.34%	Crest	250.00'	731.939	
5	38+50.00'	6.50'	-0.11%	0.24%	0.36%	Sag	300.00'	843.490	
6	31+40.00'	7.20'	0.24%	0.11%	0.14%	Crest	200.00'	1477.992	
7	34+70.00'	7.55'	0.11%	-0.21%	0.32%	Crest	157.51'	500.000	
8	38+05.00'	6.85'	-0.21%	0.25%	0.45%	Sag	262.28'	577.587	
9	41+02.42'	7.58'	0.25%						

[Figure 7.29](#) Direct editing of the curve length in Panorama

6. Close Panorama and the Profile Layout Tools toolbar, and zoom out to review your edits.
Your complete profile should now look like [Figure 7.30](#).

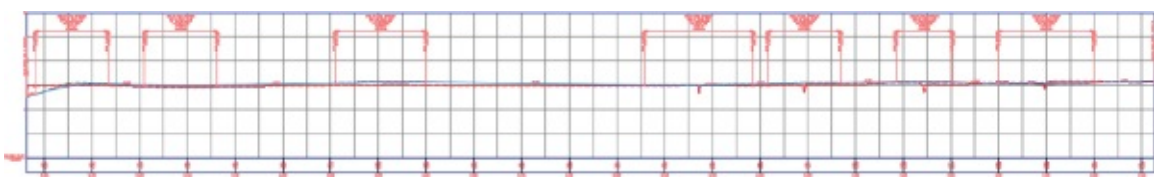


Figure 7.30 The completed editing of the curve length in the layout profile

When this exercise is complete, you may save the drawing, but keep it open for the following exercise. A copy of this drawing at this stage is available from the book's web page with the filename 0707_ProfileEditingGrid_FINISHED.dwg (0707_ProfileEditingGrid_METRIC_FINISHED.dwg).




You can use these tools to modify the PVI points or tangent parameters, but they won't let you add or remove an entire component. You'll do that in the next section.

PVIs in Lockdown

You may have noticed while editing the profile in Panorama that the last column is named Lock. You can also lock a PVI at a specific station and elevation in the Profile Layout Parameters dialog. PVIs that are locked cannot be moved with edits to adjacent entities. However, it's important to note that a PVI can be unlocked by simply clicking the lock icon in the profile view.

Component-Level Editing

In addition to editing basic parameters and locations, sometimes you have to add or remove entire components. In this exercise, you'll delete a curve, remove a PVI, insert a new PVI, and add a new curve into the layout profile:

1. Continue using the file from the previous exercise, or if you did not complete the previous exercise, open the 0707_ProfileEditingGrid_FINISHED.dwg (0707_ProfileEditingGrid_METRIC_FINISHED.dwg) file.
If you have closed the Profile Layout Tools toolbar, click the ROAD D FG profile, and then from the Profile: ROAD D FG contextual tab > Modify Profile panel, click Geometry Editor.
2.  On the Profile Layout Tools toolbar, click the Delete Entity button.
3. Pick the curve near the 31+40 station (or the 0+957.07 station for metric users) and right-click or press **↵** to end the command.
The profile is adjusted accordingly. Since the deleted curve was defined as a free curve, on deletion the tangents will be still connected to each other by means of the PVI.
4.  On the Profile Layout Tools toolbar, click the Delete PVI button. Pick a point near the PVI that resulted from the deletion of the previous curve. Right-click or press **↵** to end the command. The PVI is deleted, and the layout is updated.
5.  On the Profile Layout Tools toolbar, click the Insert PVI button. At the prompt, using the transparent command for Profile Station and Elevation ('**PSE**) select the ROAD D profile view and define the new PVI at station **24+00 (0+731.52** for metric users) and the elevation of **5.25 (1.60** for metric users). Press Esc twice, once to exit the transparent command and again to exit the Insert PVI

command.



- On the Profile Layout Tools toolbar, expand the Vertical Curves Creation Tools, and from the More Free Vertical Curves section, select Free Asymmetrical Parabola (PVI Based). At the prompt for the PVI click the screen in the vicinity of the previously created PVI at station 24+00 (0+731.52 for metric users). At the Specify Length1: prompt, enter **150 (45.72 for metric users)** and click Enter. At the Specify Length2: prompt, enter **100 (30.48 for metric users)** and press Enter. Right-click or press the Enter key again to end the command. Close the toolbar.

Your layout should update to reflect the new changes, and the drawing should look similar to [Figure 7.31](#).

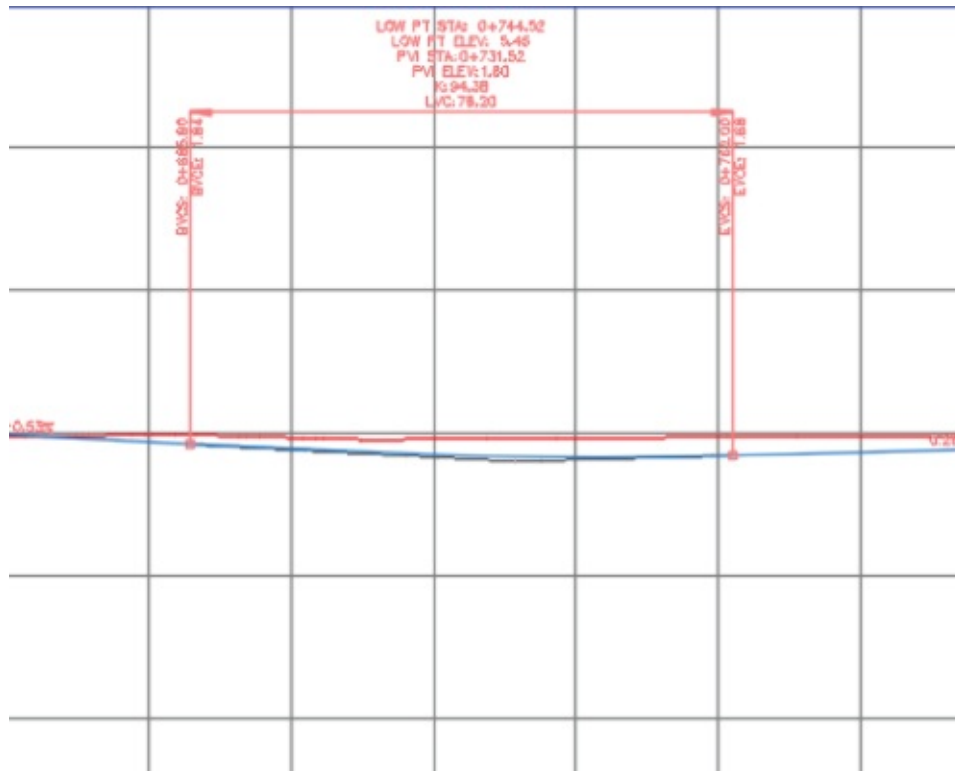


Figure 7.31 The completed editing of the curve using component-level editing

When this exercise is complete, you may save the drawing, but keep it open for the following exercise. A copy of the drawing at this stage is available from the book's web page with the filename 0707_ProfileEditingComponent_FINISHED.dwg (0707_ProfileEditingComponent_METRIC_FINISHED.dwg). Editing profiles using any of these methods gives you precise control over the creation and layout of your vertical design. In addition to these fine-tuning tools, there are other tools worth investigating, and you'll look at them next.


Other Profile Edits

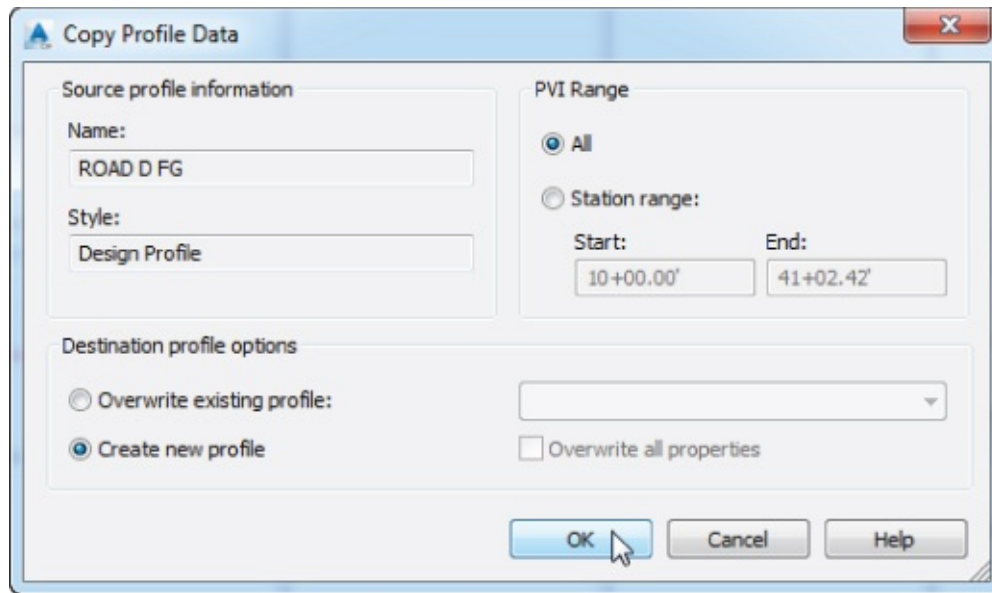
Some handy tools exist on the Profile Layout Tools toolbar for performing specific actions. These tools aren't normally used during the preliminary design stage, but they come into play as you're working to create a final design for grading or corridor design. They include raising or lowering a whole layout in one shot, as well as copying profiles. The 2015 release introduces a new tab within the Profile Properties dialog that allows users to control the locking of the vertical alignment to the horizontal alignment geometry points. You will experiment with all these options in the following exercise:

- Continue using the file from the previous exercise, or if you did not complete the previous exercise, open the 0707_ProfileEditingComponent_FINISHED.dwg


(0707_ProfileEditingComponent_METRIC_FINISHED.dwg) file.


If you have closed the Profile Layout Tools toolbar, click the ROAD D FG profile, and then from the Profile: ROAD D FG contextual tab > Modify Profile panel, click Geometry Editor.

2.  On the Profile Layout Tools toolbar, click the Copy Profile button to display the Copy Profile Data dialog, shown in [Figure 7.32](#).



[Figure 7.32](#) The Copy Profile Data dialog

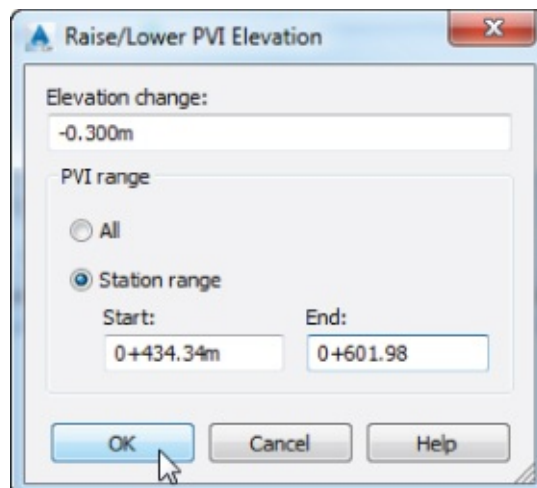3. Click OK to create a new layout profile directly on top of ROAD D FG.
4. In Prospector, expand the Alignments > Centerline Alignments > ROAD D > Profiles branch to see that a profile named ROAD D FG [Copy] has been added.
5. Press Esc to clear the selection of the original profile, and then click the profile again to select it. This time the ROAD D FG [Copy] profile is selected because it is on top. The Profile Layout Tools toolbar now references the new profile.
6.  On the Profile Layout Tools toolbar, click the Raise/Lower PVIs button to display the Raise/Lower PVI Elevation dialog, shown in [Figure 7.33](#).



[Figure 7.33](#) The Raise/Lower PVI Elevation dialog

7. Set Elevation Change to -1 (or -0.3 for metric users).

8. Click the Station Range radio button, and set the Start value to **14+25** (or **0+434.34** for metric users) and the End value to **19+75** (**0+601.98** for metric users) to modify the profile in between the starting and ending PVI's.
9. Click OK to dismiss the Raise/Lower PVI Elevation dialog.

Generating a copy is useful if you want to remember a conceptual profile layout but would like to experiment with a different layout. The copies do not stay dynamically related to one another.

Let's continue to explore, turning now to the new enhancement to Profile Properties.
10. Switch the modelspace to a two-viewport layout from the View tab > Model Viewports panel > Viewport Configuration drop-down by selecting Two: Horizontal Setup. Make sure that on the top viewport you zoom to the ROAD D alignment, while on the bottom viewport you have the ROAD D profile view.
11. Select ROAD D FG either from the profile view or through Prospector and access the Profile Properties dialog. The new Profile Locking tab is shown in [Figure 7.34](#).

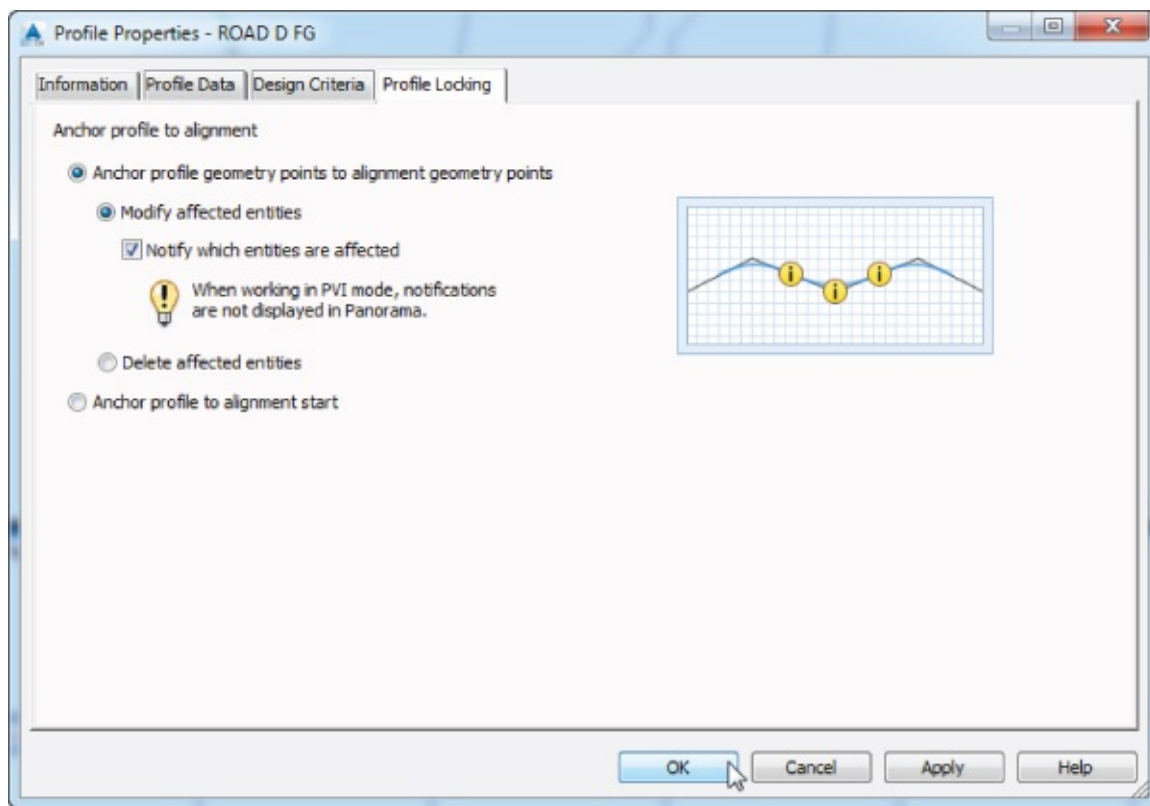


Figure 7.34 The Profile Locking tab of the Profile Properties dialog allows you to lock your vertical alignment to the horizontal geometry points.

Here you have the option of locking the vertical alignment (profile) to the horizontal alignment's geometry points. When locked, upon any changes to the horizontal alignment, the affected profile's entities will be modified either through deletion or a change in their parameters to keep the profile vertical geometry in sync with the horizontal alignment.

12. Close the Profile Properties dialog; then in plan view zoom to the curve around station 28+00 (0+853 for metric users). Grip-edit the alignment's curve by selecting the triangular grip, sliding it toward the inside of the curve as shown in [Figure 7.35](#), and clicking a new location not too far from the original location.

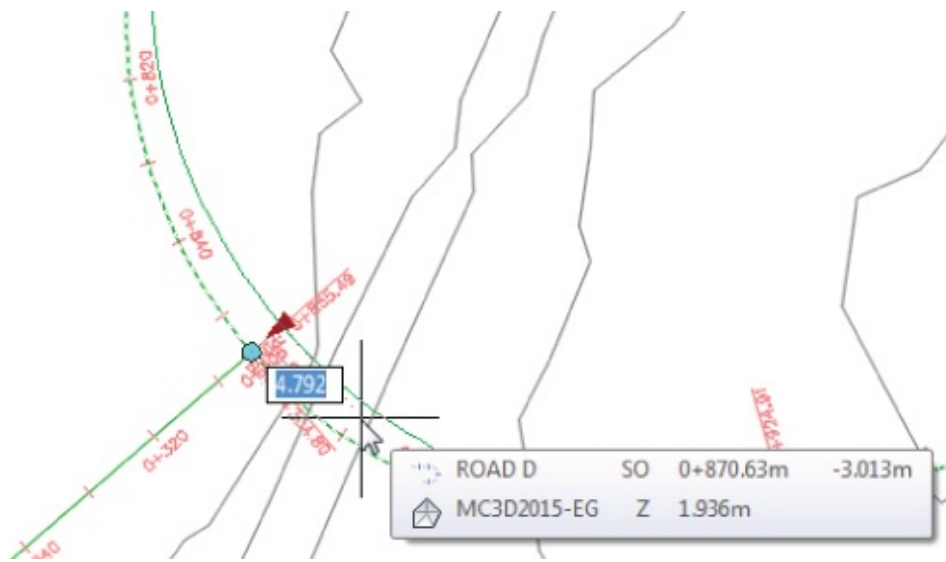


Figure 7.35 Grip-editing the alignment curve by sliding the triangular grip toward the inside of the curve

- Upon editing the alignment, you will notice that in the profile view, for the entities affected by this change, warning signs are displayed, as shown in [Figure 7.36](#). These warning signs let you know that changes have been applied to the entities of the profile in order to maintain the sync of start and end stations with the alignment.

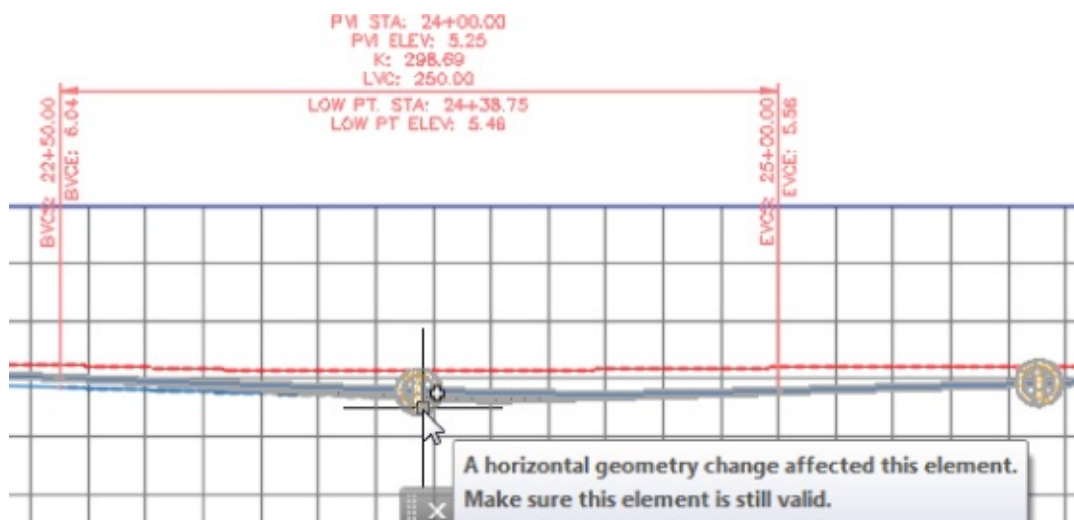


Figure 7.36 On alignment change, warning signs are displayed for the items affected by the change.

If you are used to the profile not being locked with the horizontal alignment, you'll notice changes. Namely, with Profile Locking on, you will notice that even if the alignment changed its length as reflected in the plan and profile views, the design profile ends are tied to the new beginning and end stations for the alignment, and the properties for the entities in between are modified to accommodate this change.

When this exercise is complete, you may save and close the drawing. A finished copy of this drawing at this stage is available from the book's web page with the filename 0707_ProfileEditingOther_FINISHED.dwg (0707_ProfileEditingOther_METRIC_FINISHED.dwg).

Using the layout and editing tools discussed in these sections, you should be able to create profiles for many different types of designs.

Up to now, you have learned how to use some of the available tools for modifying profiles, but you might

be wondering about intersecting roads and how their profiles will interact with one another. Have no fear; we are going to discuss those later in Chapter 10, “Advanced Corridors, Intersections, and Roundabouts,” when we discuss corridor intersections.

Profile Views



Working with vertical data is an integral part of building the model. Once profile information has been created in any number of ways, displaying it to make sense is another task. It can't be stated enough that profiles and profile views are not the same thing. The profile view displays the profile data. A single profile can be shown in an infinite number of views, with different grids, exaggeration factors, labels, or linetypes. In the following sections, you'll look at the various methods available for creating profile views.

 
Creating Profile Views during Sampling

The easiest way to create a profile view is to draw it as an extended part of the surface-sampling procedure, as shown in the first exercise in this chapter. By combining the profile-sampling step with the creation of the profile view, you avoid one more trip to the menus. This is the most common method of creating a profile view, but we'll look at manual creation in the next section.

Creating Profile Views Manually

Once an alignment has profile information associated with it, any number of profile views might be needed to display the proper information in the right format. To create a second, third, or even tenth profile view once the sampling is done, you must use a manual creation method. In this exercise, you'll create a profile view manually for an alignment that already has a surface-sampled profile associated with it:

1. Open the 0708_ManualProfileView.dwg (0708_ManualProfileView_METRIC.dwg) file.



2. From the Home tab > Profile & Section Views panel, choose Profile View > Create Profile View to display the Create Profile View Wizard.

This is the same wizard that was discussed in the surface-sampling example.

3. In the Select Alignment text box, select ROAD G from the drop-down list.
4. Set the Profile View name as **ROAD G Full Grid**.
5. In the Profile View Style drop-down list, select the Full Grid style.
6. Click the Create Profile View button and pick a point onscreen to draw the profile view, as shown in [Figure 7.37](#).

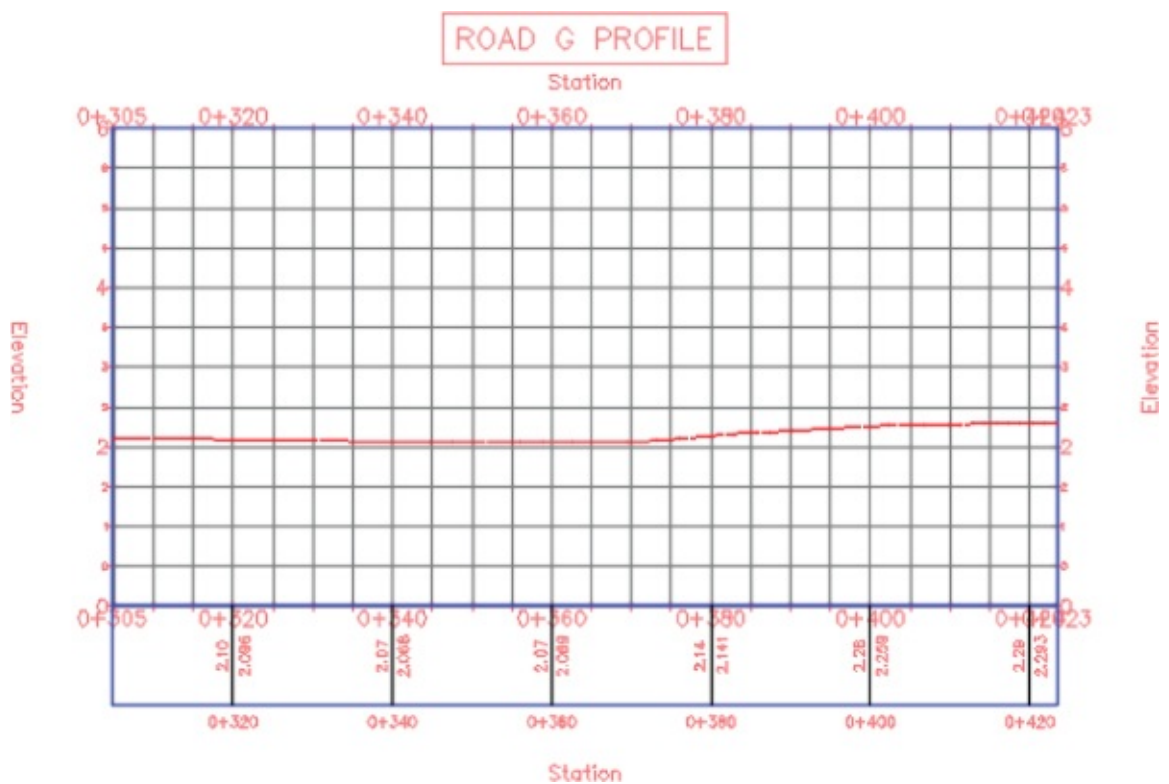


Figure 7.37 The completed profile view of ROAD G using the Full Grid profile view style

When this exercise is complete, you may save the drawing. A copy of this drawing at this stage is available from the book's web page with the filename 0708_ManualProfileView_FINISHED.dwg (0708_ManualProfileView_METRIC_FINISHED.dwg).

Using this creation method, you've made a short, simple profile view, but in the next exercise you will look at a longer alignment as well as some more of the options available in the Create Profile View Wizard.

So You Want to Delete a Profile View?

Getting rid of a profile view is easy, but be careful not to inadvertently delete your profiles at the same time. If you use a crossing window when selecting the objects to delete, then you will also be deleting your profiles that hold the data shown in your profile view.

The easiest way to get rid of a profile view is to click one of the grid lines to activate the profile view object and press the Delete key on your keyboard.

Alternatively, you can delete the profile view by expanding the branches in Prospector until you see the profile view you want to get rid of and then right-clicking it and selecting the Delete option.

Splitting Views

Dividing up the data shown in a profile view can be time consuming. The Profile View Wizard is used for simple profile view creation, but the wizard can also be used to create manually limited profile views, staggered (or stepped) profile views, multiple profile views with gaps between the views, and stacked profiles (aka three-line profiles). You'll now look at these variations on profile view creation.

Creating Manually Limited Profile Views

Continuous profile views like the ones you made in the exercises prior to this point work well for design purposes, but they are often unusable for plotting or documentation purposes. In this exercise, you'll use the Profile View Wizard to create a manually limited profile view. This variation will allow you to control how long and how high each profile view will be, thereby making the views easier to plot:

1. Open the ProfileViewsSplit.dwg file (or the ProfileViewsSplit_METRIC.dwg file).
2. From the Home tab > Profile & Section Views panel, choose Profile View > Create Profile View to display the Create Profile View Wizard.
3. Verify that the Select Alignment drop-down list shows Frontenac Drive, Profile Name is set to Frontenac Drive Limited Full Grid, and Full Grid is selected in the Profile View Style drop-down list; then click Next.
4. On the Station Range wizard page, select the User Specified Range radio button.
5. Enter **0** for the start station and **800** for the end station (or **0** and **245** for metric users), as shown in [Figure 7.38](#). It isn't necessary to include the + when entering station data.

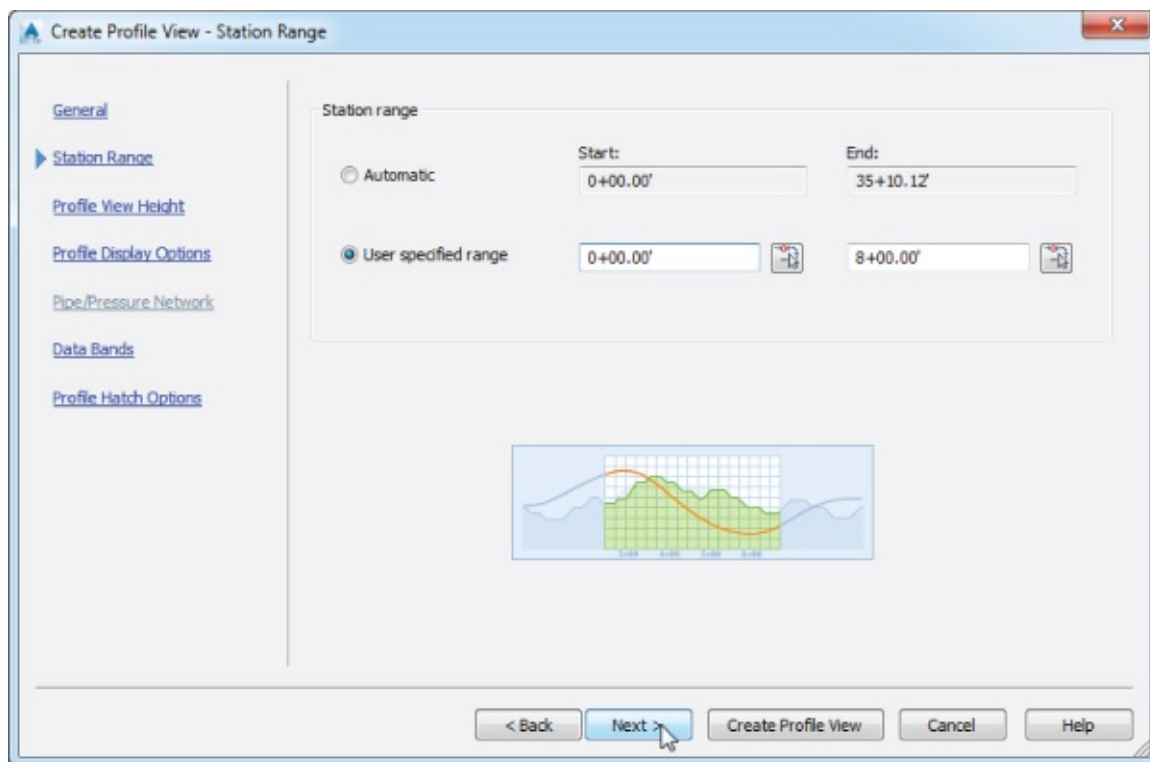


Figure 7.38 The start and end stations for the user-specified : profile view

Notice that the preview picture now shows a clipped portion of the total profile.

6. Click Next.
7. On the Profile View Height wizard page, select the User Specified radio button.
8. Set the minimum height to **1030** and the maximum height to **1060** (or **314** and **322** for metric users). It isn't necessary to include the foot mark (') or m for meters when entering elevations.
9. Click the Create Profile View button and pick a point onscreen to draw the profile view.

Your screen should look similar to [Figure 7.39](#).

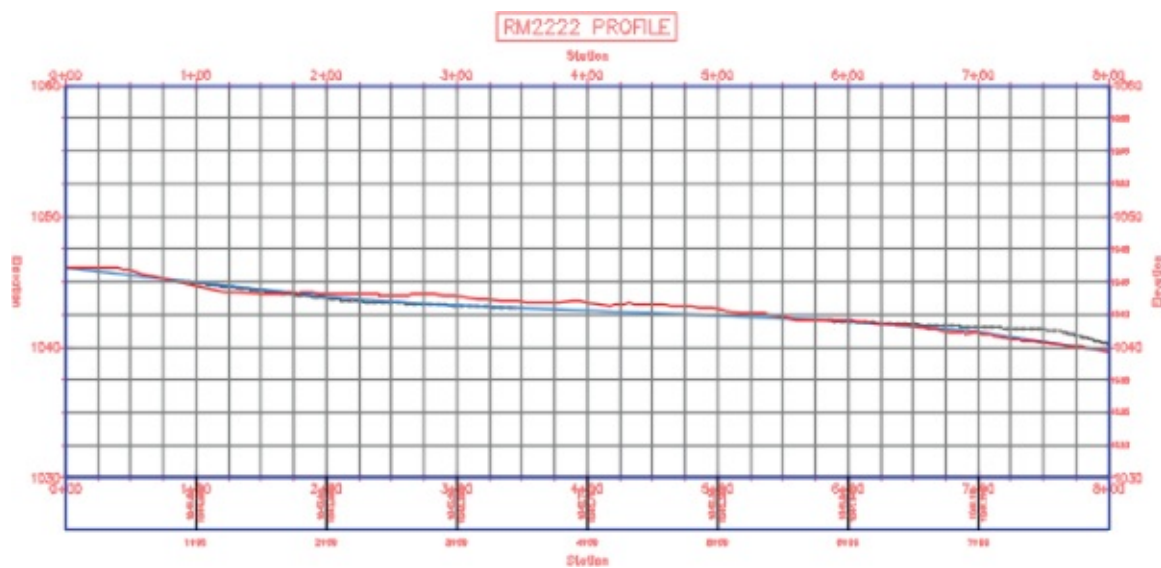


Figure 7.39 Applying user-specified station and height values to a profile view

When this exercise is complete, you may save the drawing, but keep it open for the following exercise. A copy of the drawing at this stage is available from the book's web page with the filename 0709_ManualLimitedProfileView_FINISHED.dwg (0709_ManualLimitedProfileView_METRIC_FINISHED.dwg).

Creating Staggered Profile Views

When large variations occur in profile height, the profile view must often be split just to keep from wasting much of the page with empty grid lines. In this exercise, you use the Profile View Wizard to create a staggered, or stepped, view:

1. Continue using the file from the previous exercise, or if you did not complete the previous exercise, open the 0709_ManualLimitedProfileView_FINISHED.dwg (0709_ManualLimitedProfileView_METRIC_FINISHED.dwg) file.
2. From the Home tab > Profile & Section Views panel, choose Profile View > Create Profile View to display the Create Profile View Wizard.
3. Verify that the Select Alignment drop-down list shows RM2222, Profile Name is set to RM2222 Staggered Full Grid, and Full Grid is selected in the Profile View Style drop-down list; then click Next.
4. Verify that Station Range is set to Automatic to allow the view to show the full length, and click Next.
5. In the Profile View Height field, select the User Specified option and set the values to **880** and **970** (or **268** and **294** for metric users), as shown in [Figure 7.40](#).

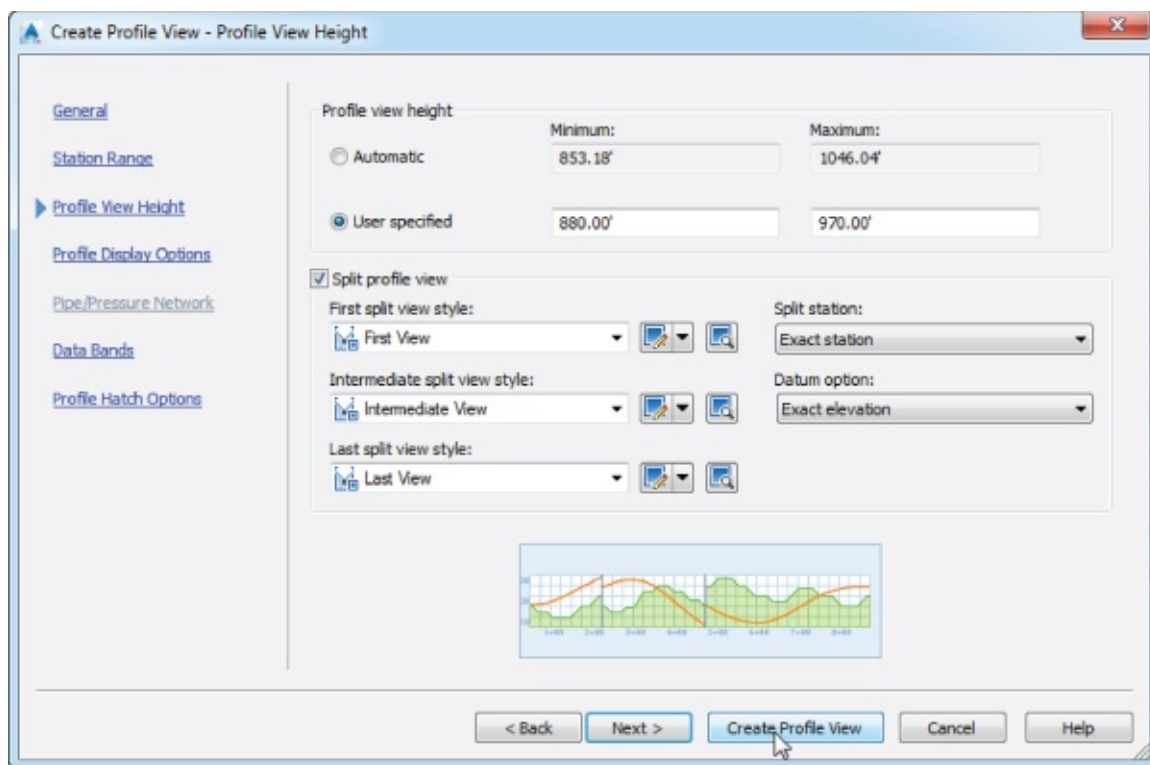


Figure 7.40 Split Profile View settings

6. Check the Split Profile View option and set the view styles to First View, Intermediate View, and Last View, as shown in [Figure 7.40](#).
7. Click the Create Profile View button and pick a point onscreen to draw the staggered display, as shown in [Figure 7.41](#).

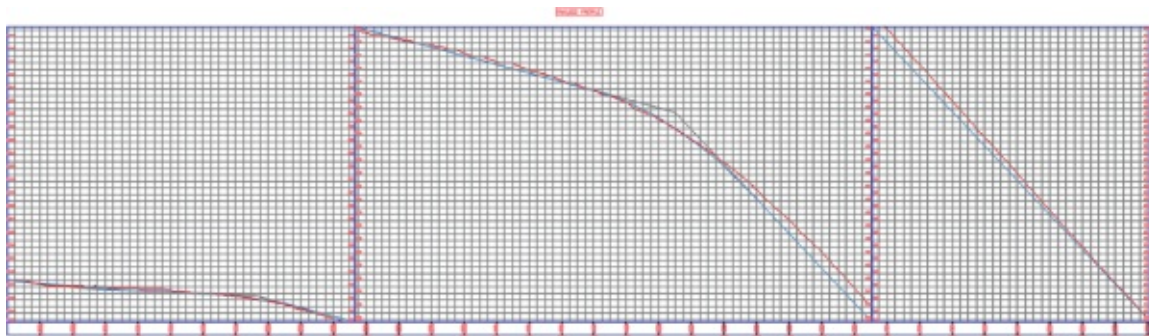


Figure 7.41 A staggered (stepped) split : profile view created via the wizard

The profile view is split into views according to the settings that were selected in the Create Profile View Wizard in step 6. The first portion of the profile view shows the profile from 0 to the station where the elevation change of the profile exceeds the limit for height. If more splits were required, the command would have created them accordingly. Each of these portions is part of the same profile view and can be adjusted via the Profile View Properties dialog. The profile view splits can be controlled manually on the Elevations tab of the Profile View Properties dialog box. Here you can add and remove splits, control the station at which a given split occurs, and control the datum elevation at each split station by changing the Split Profile View option to Manual (see [Figure 7.42](#)).

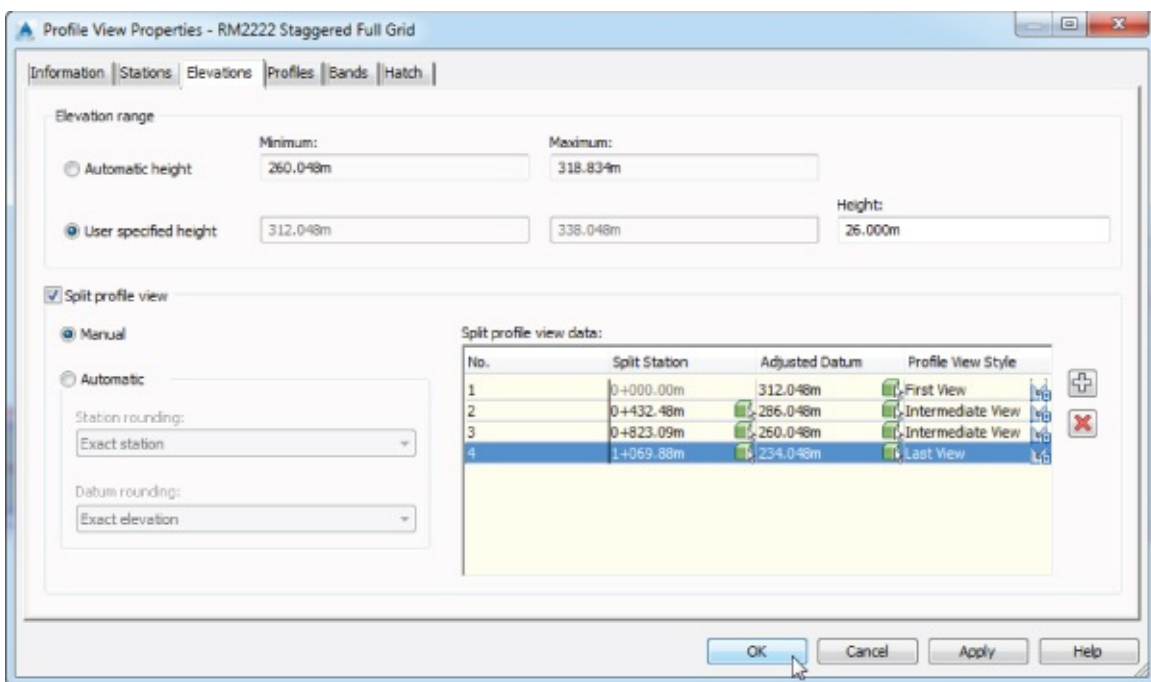


Figure 7.42 The Elevations tab of the Profile View Properties dialog showing manual control of a split profile view

When this exercise is complete, you may save the drawing, but keep it open for the following exercise. A copy of the drawing at this stage is available from the book's web page with the filename 0709_StaggeredProfileView_FINISHED.dwg (0709_StaggeredProfileView_METRIC_FINISHED.dwg).

Creating Gapped Profile Views

Profile views must often be limited in length and height to fit a given sheet size. Gapped views are a way to show the entire length and height of the profile, by breaking the profile into different sections with gaps, or spaces, between each view.

When you are using the Plan Production tools (covered in Chapter 15, “Plan Production”), the gapped profile views are automatically created.

In this exercise, you will use a variation of the Create Profile View Wizard called the Create Multiple Profile Views Wizard to create gapped views automatically:

1. Continue using the file from the previous exercise, or if you did not complete the previous exercise, open the 0709_StaggeredProfileView_FINISHED.dwg (0709_StaggeredProfileView_METRIC_FINISHED.dwg) file.



2. From the Home tab > Profile & Section Views panel, choose Profile View > Create Multiple Profile Views to display the Create Multiple Profile Views Wizard.
3. Verify that the Select Alignment drop-down list shows RM2222, Profile View Name is set to RM2222 Gapped Full Grid, and Full Grid is selected in the Profile View Style drop-down list, as shown in [Figure 7.43](#); then click Next.

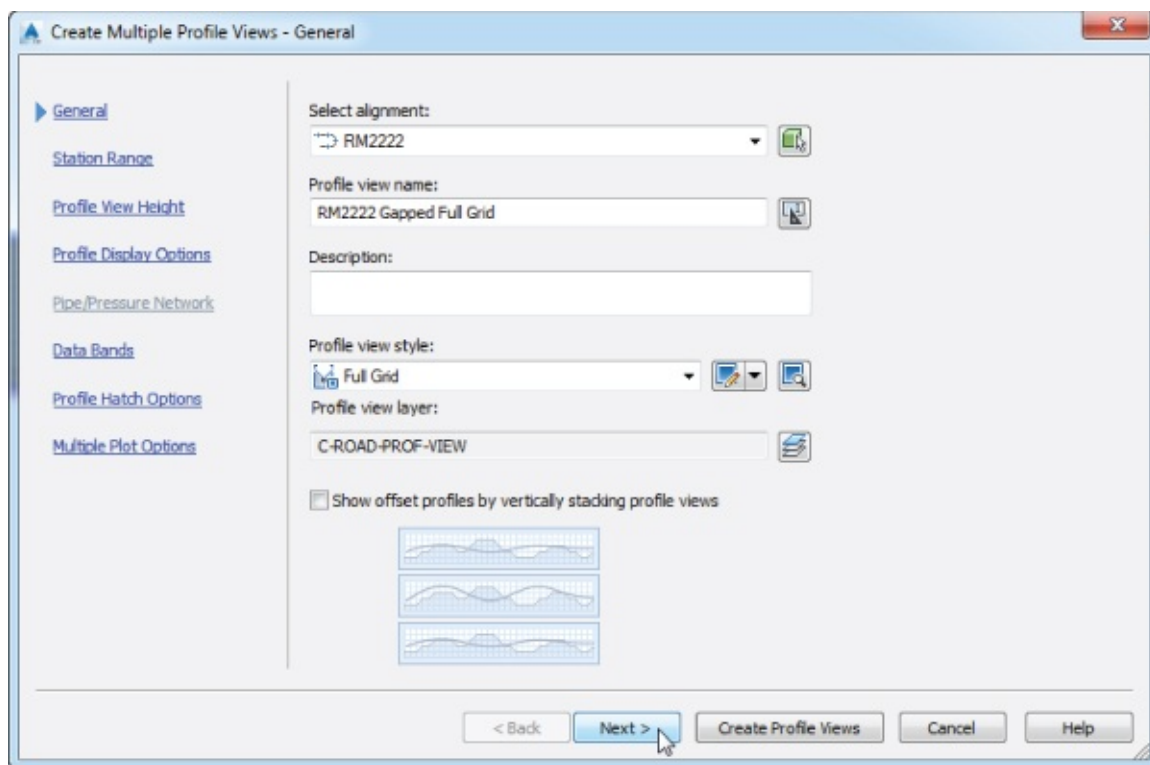


Figure 7.43 The Create Multiple Profile Views – General wizard page

4. On the Station Range wizard page, verify that the Automatic option is selected.
5. Set the length of each view to **900** (or **275** for metric users), and click Next.
6. On the Profile View Height wizard page, verify that the Automatic option is selected.

Note that you could use the Split Profile View options from the previous exercise here as well if you use the User Specified profile view height.

7. Click Next.
8. On the Profile Display Options wizard page, scroll across until you get to the Labels column and verify that Style is set to No Labels on both profiles; then click Next.
9. On the Data Bands wizard page, verify that the band set is EG-FG Elevations And Stations, and click the Multiple Plot Options link in the left sidebar of the wizard to jump ahead to that wizard page. We will look at the data bands in further depth a little later in this chapter.

The Multiple Plot Options wizard page shown in [Figure 7.44](#) is unique to the Create Multiple Profile Views Wizard. This wizard page controls whether the gapped profile views will be arranged in a column, a row, or a grid. The RM2222 alignment is fairly short, so the gapped views will be aligned in a row. However, it could be prudent with longer alignments to stack the profile views in a column or a compact grid, thereby saving screen space.

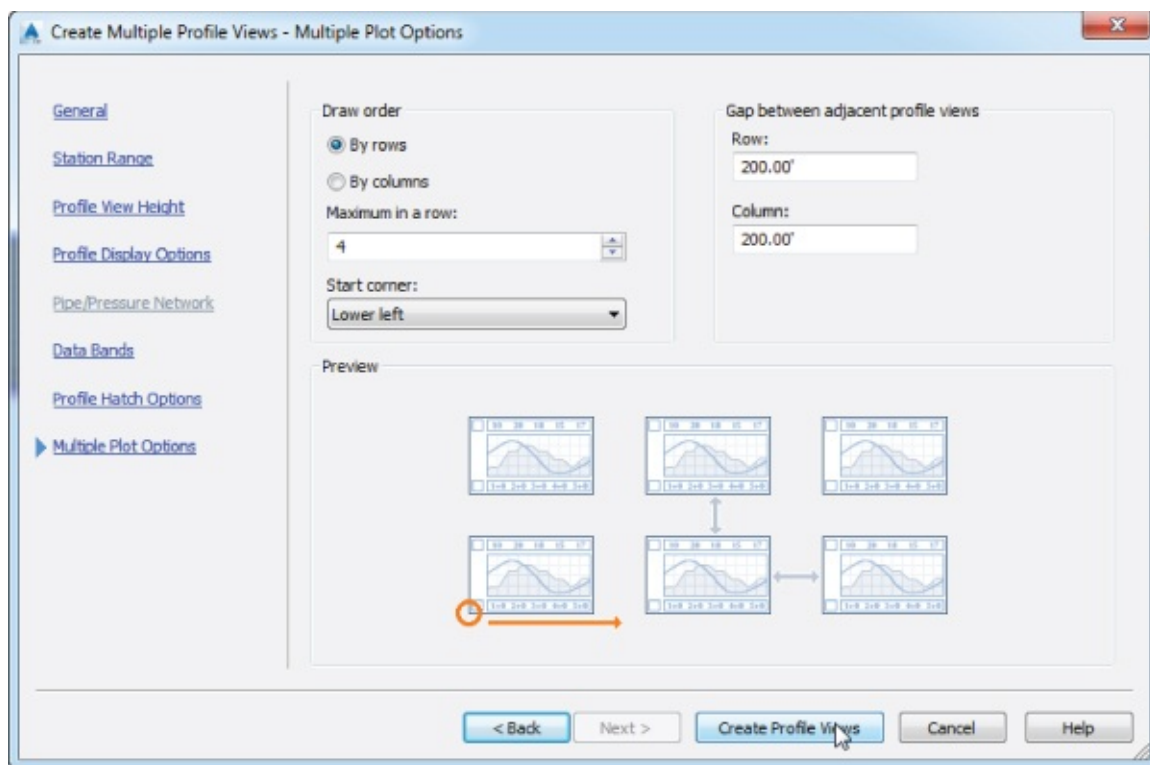


Figure 7.44 The Create Multiple Profile Views – Multiple Plot Options wizard page

10. Click the Create Profile Views button and pick a point onscreen to create a view similar to [Figure 7.45](#).

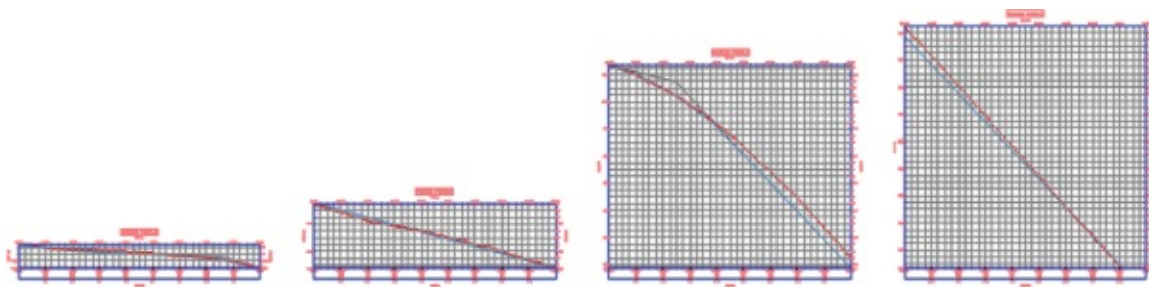


Figure 7.45 The staggered and gapped profile views of the RM2222 alignment

The gapped profile views are the four profile views on the bottom of the screen, and just like the staggered profile view, they show the entire alignment from start to finish. Unlike the staggered view, however, the gapped view is separated by a gap, creating four individual profile views. In addition, the gapped profile views are independent of each other, so they can be modified to have their own styles, properties, and labeling. This is also the primary way to create divided profile views for sheet production.

When this exercise is complete, you may save and close the drawing. A copy of the drawing at this stage is available from the book's web page with the filename 0709_GappedProfileView_FINISHED.dwg (0709_GappedProfileView_METRIC_FINISHED.dwg).

Creating Stacked Profile Views

In some parts of the United States, a three-line profile view is a common requirement. In this situation, the centerline is displayed in a central profile view, with left and right offsets shown in profile views above and below the centerline profile view. These are then typically used to show top-of-curb design profiles in addition to the centerline design. In this exercise, you look at how the Create Profile View Wizard makes generating these stacked views a simple process:

1. Open the 0709_StackedProfileView.dwg (0709_StackedProfileView_METRIC.dwg) file. This drawing has sampled profiles for the RM2222 alignment at center as well as left and right offsets.
2. From the Home tab > Profile & Section Views panel, choose Profile View > Create Profile View to display the Create Profile View Wizard.
3. Verify that the Select Alignment drop-down list shows RM2222, Profile Name is set to RM2222 Stacked Full Grid, and Full Grid is selected in the Profile View Style drop-down list.
4. Check the Show Offset Profiles By Vertically Stacking Profile Views option on the General wizard page.
Notice that when you check this box, an additional link named Stacked Profile is added to the left sidebar of the wizard.
5. Click Next.
6. On the Create Profile View – Station Range wizard page, verify that Station Range is set to Automatic, and click Next.
7. On the Create Profile View – Profile View Height wizard page, verify that Profile View Height is set to Automatic, and click Next.
8. On the Create Profile View – Stacked Profile wizard page, set the gap between views to **15** (or **4** for metric users).
9. Set the view styles to Top Stacked View, Middle Stacked View, and Bottom Stacked View, as shown in [Figure 7.46](#). Click Next.

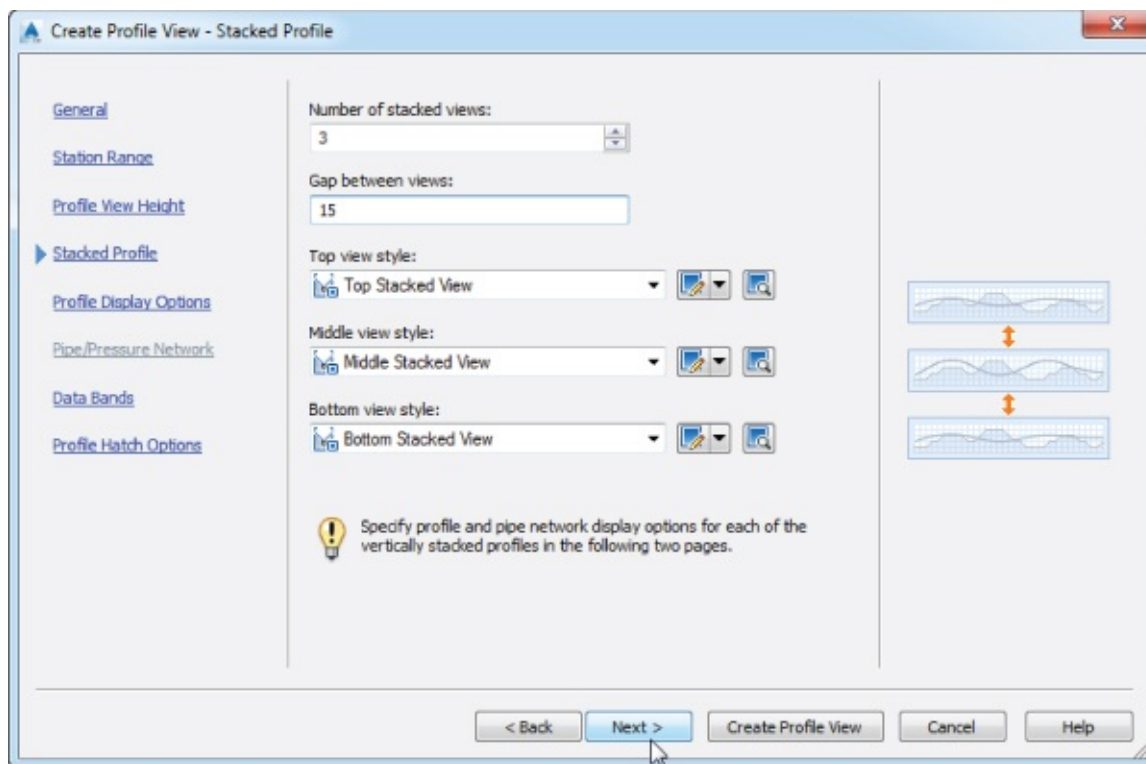


Figure 7.46 The Create Profile View – Stacked Profile wizard page

10. On the Create Profile View – Profile Display Options wizard page, select Top View in the Select Stacked View To Specify Options For list box.
11. Toggle the Draw option for the left offset profile (RM2222-EG - -30.000 (RM2222-EG - -10.000 for metric users)), as shown in [Figure 7.47](#). If you need to widen the columns, you can do so by double-

clicking the line between the column headings.

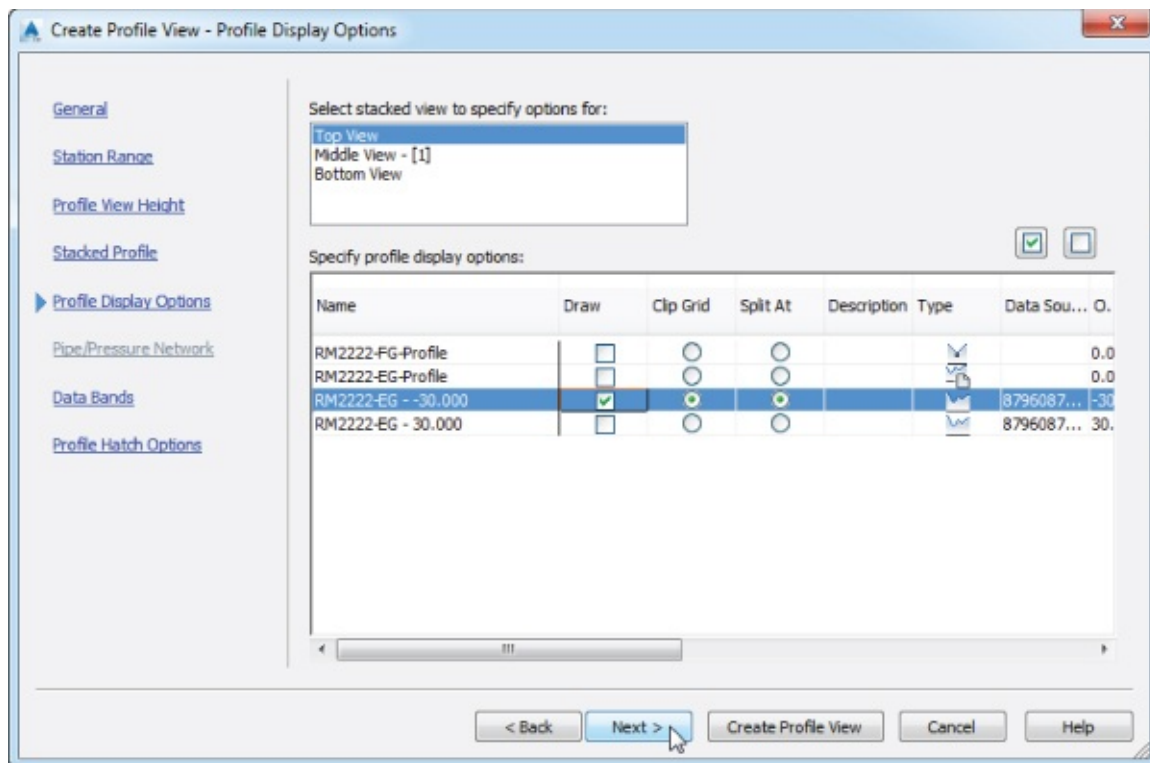


Figure 7.47 Setting the stacked view options for each view, in this case for the top view

Remember that the negative offset denotes a left profile whereas a positive offset denotes a right profile. You can also check the Offset column to verify the offset.

2. Select Middle View - [1] in the Select Stacked View To Specify Options For list box.
3. Toggle the Draw option for the sampled centerline profile (RM2222-EG-Profile) as well as the layout centerline profile (RM2222-FG-Profile).
4. Select Bottom View in the Select Stacked View To Specify Options For list box.
5. Toggle the Draw option for the right offset profile (RM2222-EG - 30.000 or RM2222-EG - 10.000 for metric users), and click Next.
6. On the Data Bands wizard page, verify that the band set is set to EG-FG Elevations And Stations.
7. Click the Create Profile View button and pick a point on the screen to draw the stacked profiles, as shown in [Figure 7.48](#).

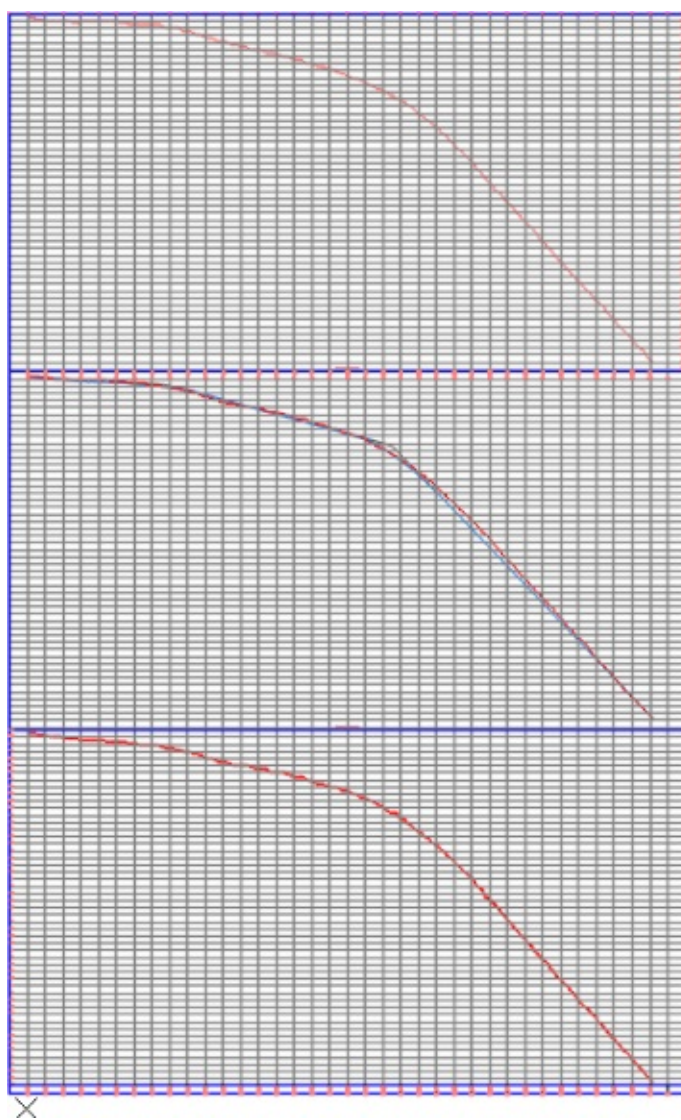


Figure 7.48 Completed stacked profiles

When this exercise is complete, you may save and close the drawing. A copy of the drawing at this stage is available from the book's web page with the filename `0709_StackedProfileView_FINISHED.dwg` (`0709_StackedProfileView_METRIC_FINISHED.dwg`).

Like the gapped profile views that you generated in a previous exercise, the profile views are independent of one another, so they can be modified to have their own styles, properties, and labeling associated with them. The stacking here simply automates a process that many users previously found tedious. At this point you do not have finished grade information at the offsets, but you can add it to these views later by editing the Profile View Properties for those profile views.

When you create a profile, that profile will appear in any profile views that reference the same alignment. In the Profile View Properties dialog, you can always turn the Draw option off for any profile that should not appear in a given profile view.

Styles: Where to Look

The exercises in this chapter have many different styles created to show variety. You'll learn more about styles in Chapter 18, "Label Styles," and Chapter 19. It's okay to take a peek ahead once in a while.

Editing Profile Views

The profile view is one of the most sophisticated and flexible objects in the AutoCAD Civil 3D package. After a profile view is created, many modifications can be made to it without modifying the style or assigning a different style. In this series of exercises, you'll look at a number of changes that can be applied to any profile view in a given drawing.

Superelevation Views

Although not the focus of this chapter, superelevation views behave much like profile views. Once design speeds have been assigned to an alignment and superelevation has been calculated, you'll find the Create Superelevation View command on the Alignment contextual tab > Modify panel. You can access the view's properties via a contextual tab after selecting a view.

Profile View Properties

Picking a profile view and then selecting Profile View Properties from the Profile View contextual tab > Modify View panel yields the dialog shown in [Figure 7.49](#). The properties of a profile include the style applied, station and elevation limits, the number of profiles displayed, the bands associated with the profile view, and any hatching that has been included. If a pipe network is displayed, a tab labeled Pipe Networks will appear. Also, if objects are projected in the profile view, then a Projections tab will be enabled and displayed as well. These tabs should look very similar to the links in the sidebar of the Create Profile View Wizard.

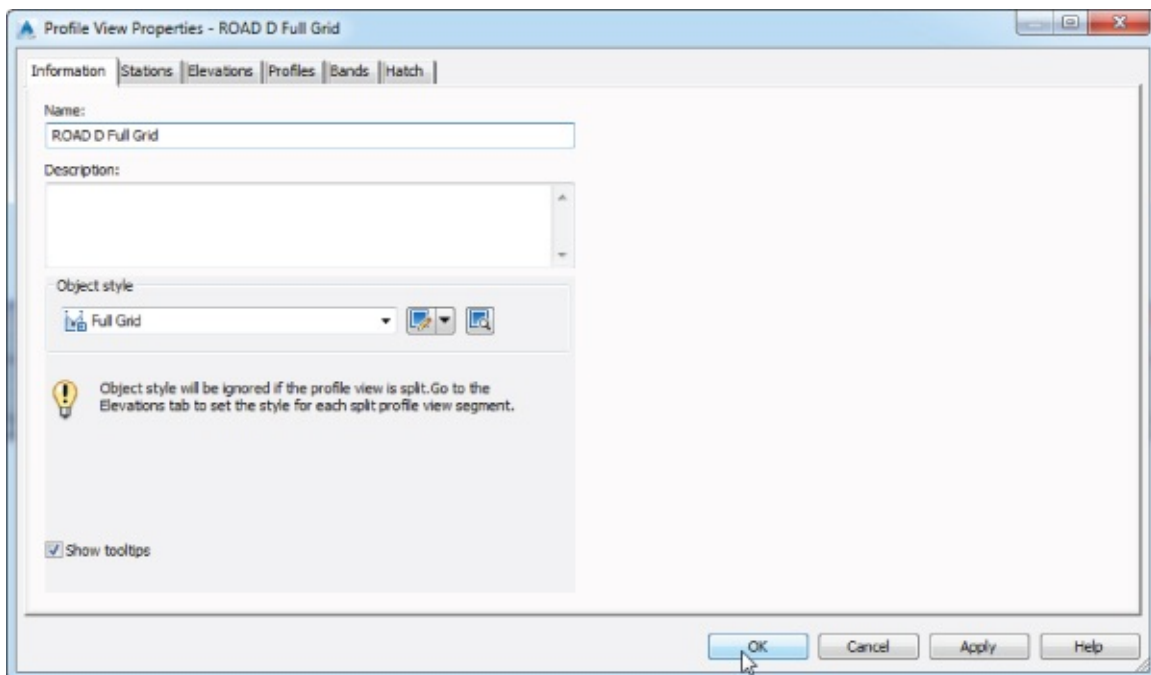


Figure 7.49 Typical Profile View Properties dialog

Adjusting the Profile View Station Limits

There are often times when a profile view needs to be manually adjusted. For example, the most common change is to limit the length of the profile view that is being shown so it fits on a specific size of paper or viewport. You can make some of these changes during the initial creation of a profile view (as shown in a

previous exercise), but you can also make changes after the profile view has been created.

One way to do this is to use the Profile View Properties dialog to make changes to the profile view. The profile view is an AutoCAD Civil 3D object, so it has properties and styles that can be adjusted in this dialog to make the profile view look like you need it to.

1. Open the 0710_ProfileViewProperties.dwg (0710_ProfileViewProperties_METRIC.dwg) file.
2. Zoom to the ROAD D Full Grid profile view.
3. Pick a grid line, and from the Profile View contextual tab ➤ Modify View panel, choose the Profile View Properties icon button to display the Profile View Properties dialog.
4. On the Stations tab, click the User Specified Range radio button, and set the value of the end station to **2200** (or **670** for metric users), as shown in [Figure 7.50](#). Note that you do not need to type the + symbol.

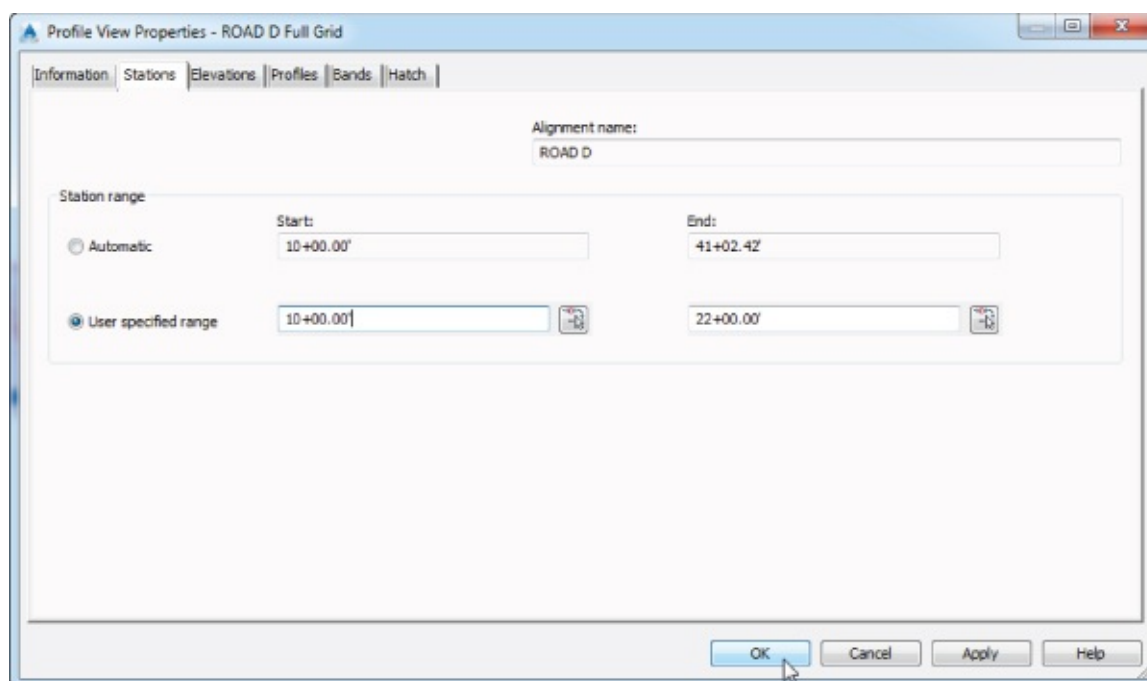


Figure 7.50 Adjusting the end station values for ROAD D

5. Click OK to dismiss the dialog and press Esc to clear the selection.

The profile view will now reflect the updated end station value.

One of the nice things about Civil 3D is that copies of a profile view retain the properties of that view, making a gapped view easy to create manually if it was not created with the wizard.

6. Press F8 on your keyboard to enable Ortho mode.
7. Enter **copy** ↵ on the command line. Pick the ROAD D Full Grid profile view you just modified. Make sure you are selecting the grid representing the profile view and not the linework that represents the profile. Press Enter to complete the selection.
8. Pick a base point and move the crosshairs to the right.
9. When the crosshairs reach a point where the two profile views do not overlap, pick that as your second point, and press ↵ to end the Copy command.
10. Pick a grid line on the copy just created, and from the Profile View contextual tab ➤ Modify View panel, choose Profile View Properties to display the Profile View Properties dialog.

1. On the Stations tab, set the Start field to **2200** (or **670** for metric users) and the End field to **4102.42** (or **1250.42** for metric users).
2. Click OK to dismiss the dialog.

The total length of the alignment will now be displayed on the two profile views, with a gap between the two views at station 22+00 (or 0+760 for metric users).

You may want to move the copied profile view since it holds the station location, thus shifting it to the right. You could also copy the profile view in place and then change the settings, with no need to move the profile view.

Once this exercise is complete, your drawing will look like [Figure 7.51](#).

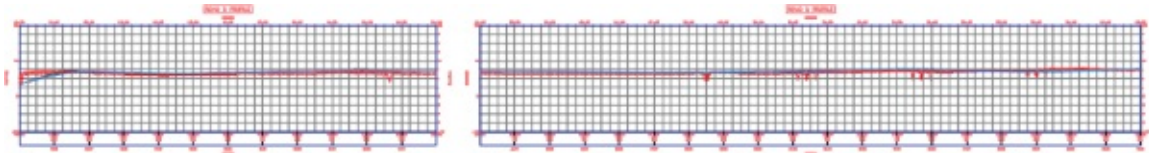


Figure 7.51 A manually created gap between profile views

You may save and close the drawing. A copy of the drawing at this stage is available from the book's web page with the filename 0710_ProfileViewProperties_FINISHED.dwg (0710_ProfileViewProperties_METRIC_FINISHED.dwg).

In addition to creating gapped profile views by changing the profile view properties, you could show phase limits by applying a different style to the profile in the second view.

Adjusting the Profile View Elevations

Another common issue is the need to control the height of the profile view. Civil 3D automatically sets the datum and the top elevation of profile views on the basis of the data to be displayed. In most cases this is adequate, but in others this simply creates a view too large for the space allocated on the sheet or does not provide the adequate room for layout PVI's to be placed.

1. Open the 0710_ProfileViewElevations.dwg (0710_ProfileViewElevations_METRIC.dwg) file.
2. Zoom to the RM2222 Full Grid profile view, which is the first on the left.
3. Pick a grid line, and from the Profile View contextual tab ► Modify View panel, choose Profile View Properties to display the Profile View Properties dialog.
4. On the Elevations tab, in the Elevation Range section, check the User Specified Height radio button and set the maximum height to **1090** (or **332** for metric users), as shown in [Figure 7.52](#).

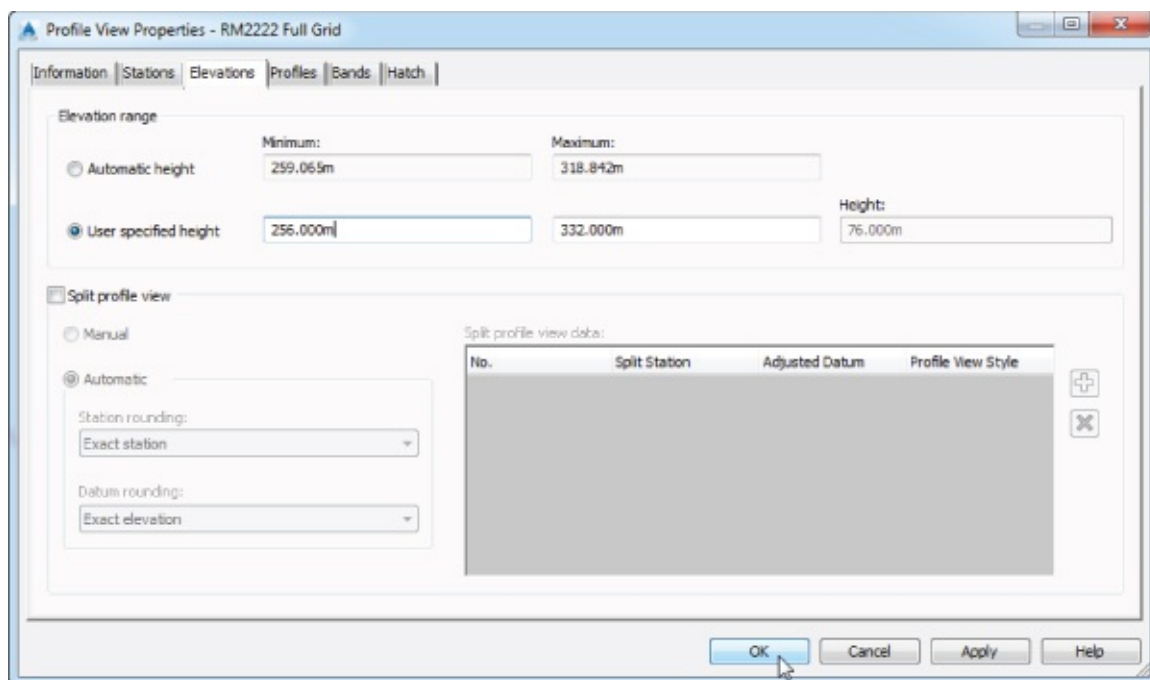


Figure 7.52 Modifying the height of the profile view

5. Click OK to dismiss the dialog and press Esc to clear the selection.

The profile view of RM2222 should reflect the updated elevations, as shown in [Figure 7.53](#).


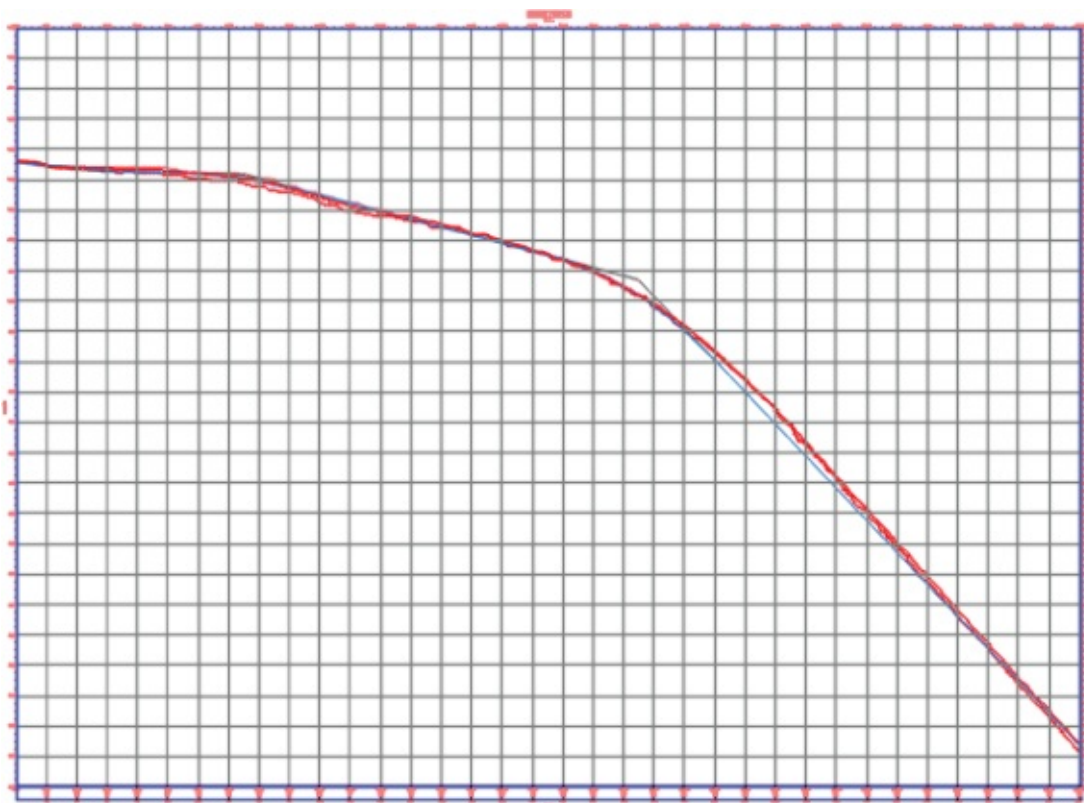


Figure 7.53 The updated profile view with the heights manually adjusted

The Elevations tab can also be used to split the profile view and create the staggered view that you previously created with the wizard.

6. Pick the RM2222 Full Grid (1) profile view (the middle profile view).
7. Pick a grid line, and from the Profile View contextual tab ➤ Modify View panel, choose Profile View Properties to display the Profile View Properties dialog.

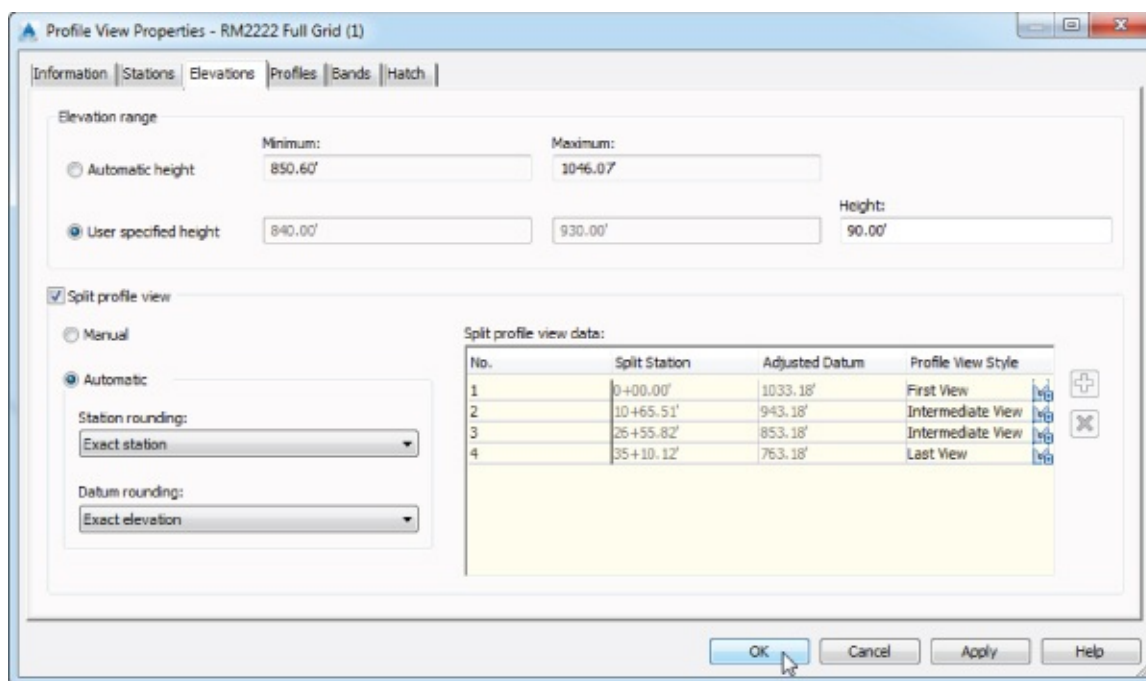
8. On the Profile View Properties dialog, switch to the Elevations tab.
9. In the Elevations Range area, click the User Specified Height radio button.
10. Check the Split Profile View option, and verify that the Automatic radio button is selected.
Notice that the Height field is now active.
11. Set Height to **90** (or **26** for metric users), as shown in [Figure 7.54](#).



[Figure 7.54](#) Defining a split profile view on the Elevations tab

12. Click within the Split Profile View Data area to populate the splitting area, and click OK to exit the dialog.
13. Enter **REGEN** ↵ on the command line.

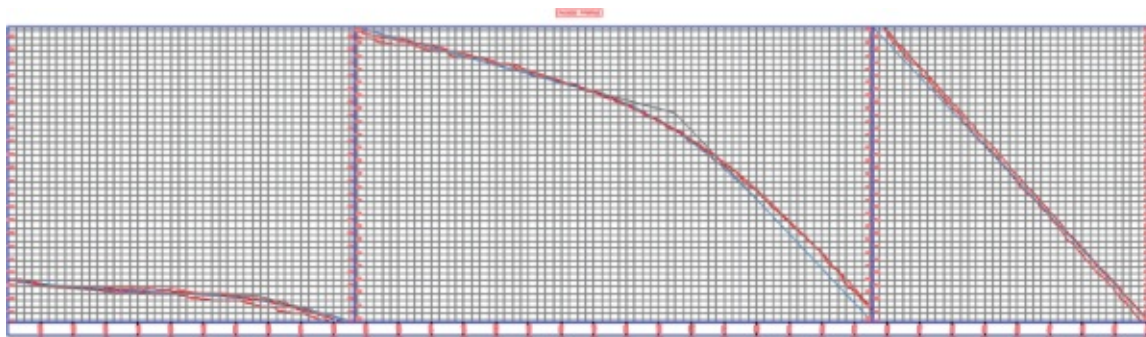The profile view should look similar to [Figure 7.55](#). If it doesn't, save and reopen the file and the desired layout will be displayed for the profile view.



[Figure 7.55](#) A split profile view for the RR2222 alignment

When this exercise is complete, save the drawing, but keep it open for the following exercise. A copy of the drawing at this stage is available from the book's web page with the filename 0710_ProfileViewElevations_FINISHED.dwg (0710_ProfileViewElevations_METRIC_FINISHED.dwg). Automatically creating split views is a good starting point, but you'll often have to tweak them as you've done here. The selection of the proper profile view styles is an important part of the Split Profile View process. We'll look at object styles in Chapter

Using Profile Display Options

AutoCAD Civil 3D allows the creation of literally hundreds of profiles for any given alignment, which makes it easy to evaluate multiple design solutions, but it can also mean that profile views get very crowded. In this exercise, you'll look at some profile display options that allow the toggling of various profiles within a profile view:

- 1. Continue using the file from the previous exercise, or open the 0710_ProfileViewElevations_FINISHED.dwg (0710_ProfileViewElevations_METRIC_FINISHED.dwg) file.
- 2. Click on the grid for the last profile view RM2222 Full Grid (1) (1).
- 3. From the Profile View contextual tab > Modify View panel, choose Profile View Properties to display the Profile View Properties dialog.
- 4. Switch to the Profiles tab.
- 5. Uncheck the Draw option for RM2222-FG-Profile and click OK. You might need to make the columns wider to be able to distinguish between the options.

Your profile view dialog settings should look similar to [Figure 7.56](#).

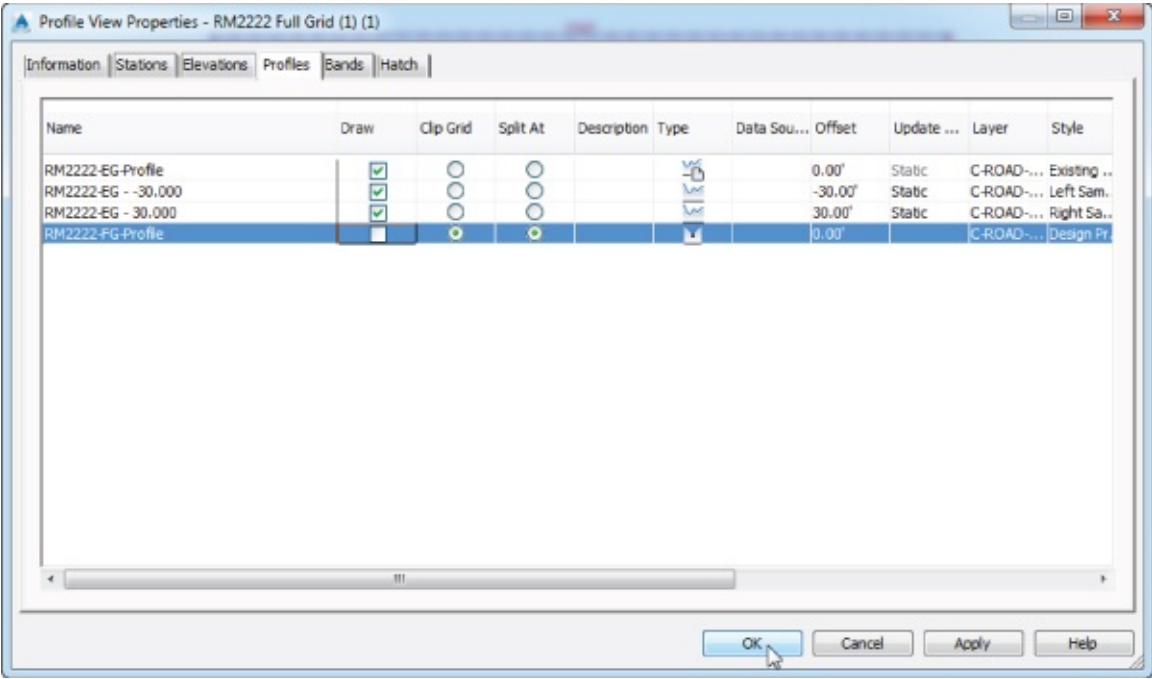


Figure 7.56 The RM2222 profile view settings with the Draw option toggled off for RM2222-FG-Profile

Toggling off the Draw option for the FG layout has created a profile view in which a profile of the desired design will not be drawn.

The FG profile still exists under the RM2222 alignment; it simply isn't shown in the current profile view.

When this exercise is complete, you may save and close the drawing. A copy of the drawing at this stage is available from the book's web page with the filename 0710_ProfileViewToggle_FINISHED.dwg (0710_ProfileViewToggle_METRIC_FINISHED.dwg).

Now that you've modified profile views using a number of methods, let's look at another option that is

available on the Profile View Properties dialog: Profile View Bands.

Adding Profile View Bands

Data bands are horizontal elements that display additional graphical and numerical information about the profile or alignment that is referenced in a profile view. Bands can be applied to both the top and bottom of a profile view, and there are six different band types:

Profile Data Bands Display information about the selected profile. This information can include simple elements such as elevation or more complicated information such as the cut-fill between two profiles at a given station.

Vertical Geometry Bands Create a schematic view of the elements making up a profile. Typically used in reference to a design profile, vertical data bands make it easy for a designer to see the locations of tangents and vertical curves along an alignment as well as information about the tangents and vertical curves.

Horizontal Geometry Bands Create a schematic view of the horizontal alignment elements, giving the designer or reviewer information about line, curve, and spiral segments and their relative location to the profile data being displayed.

Superelevation Data Bands Display the various options for superelevation values at the critical points along the alignment.

Sectional Data Bands Can display information about the sample line locations and the distance between them as well as other section-related information.

Pipe Network Bands Can display specific information such as part, offset, elevation, or direction about each pipe or structure being shown in the profile view.

In this exercise, you'll add bands to give feedback on the EG and layout profiles as well as horizontal and vertical geometry:

1. Open the 0711_ProfileViewBands.dwg (0711_ProfileViewBands_METRIC.dwg) file.
2. Zoom to the ROAD D Full Grid profile view.
3. Pick a grid line, and from the Profile View contextual tab ► Modify View panel, choose Profile View Properties to display the Profile View Properties dialog.
4. On the Bands tab ([Figure 7.57](#)), in the List Of Bands area, verify that the Location drop-down is set to Bottom Of Profile View and notice that an Elevations And Stations band has already been set during the creation of this profile view.

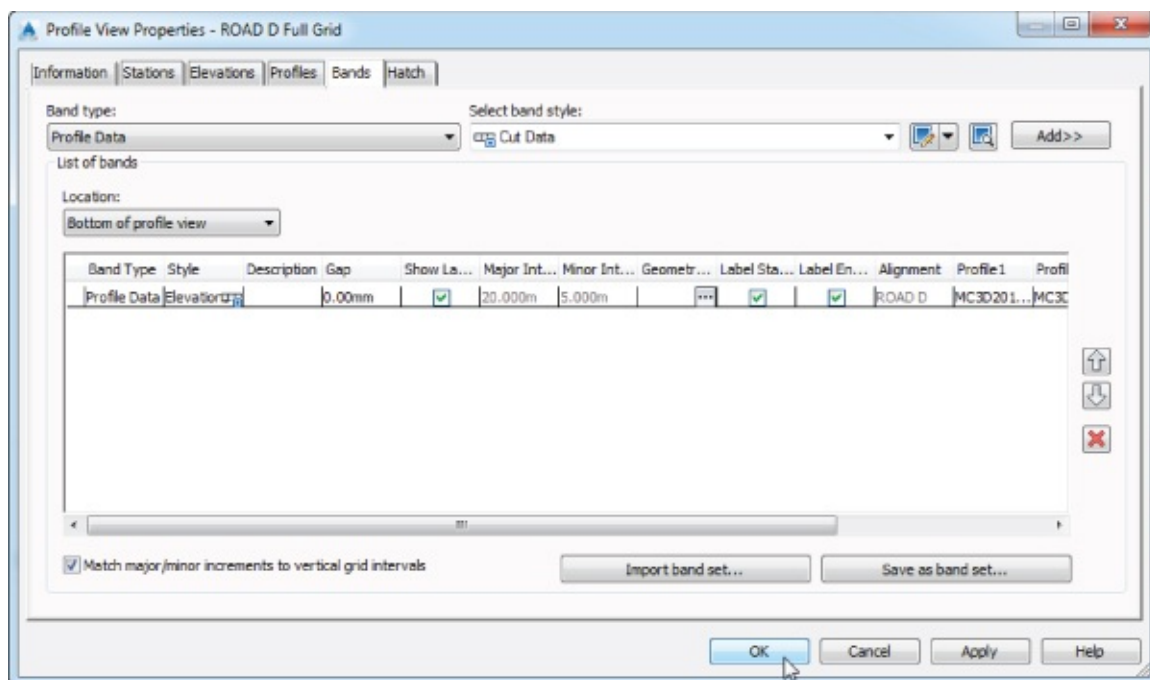


Figure 7.57 The Bands tab of the Profile View Properties dialog

Selecting the type of band from the Band Type drop-down menu changes the Select Band Style drop-down menu so that it includes only styles that are available for the band type you select. Next to the Select Band Style drop-down menu are the usual Style Edit/Copy button and a preview button. Once you've selected a style from the Select Band Style drop-down, clicking the Add button places it on the profile. The Location drop-down list in the List Of Bands section of this dialog allows you to switch between the bands shown at the bottom of the profile view or the top of the profile view; you'll look at that in a moment.

5. Change the Band Type drop-down to the Profile Data option and choose the Cut Data option from the Select Band Style drop-down.
6. Click the Add button. The Geometry Points To Label In Band dialog will open ([Figure 7.58](#)).

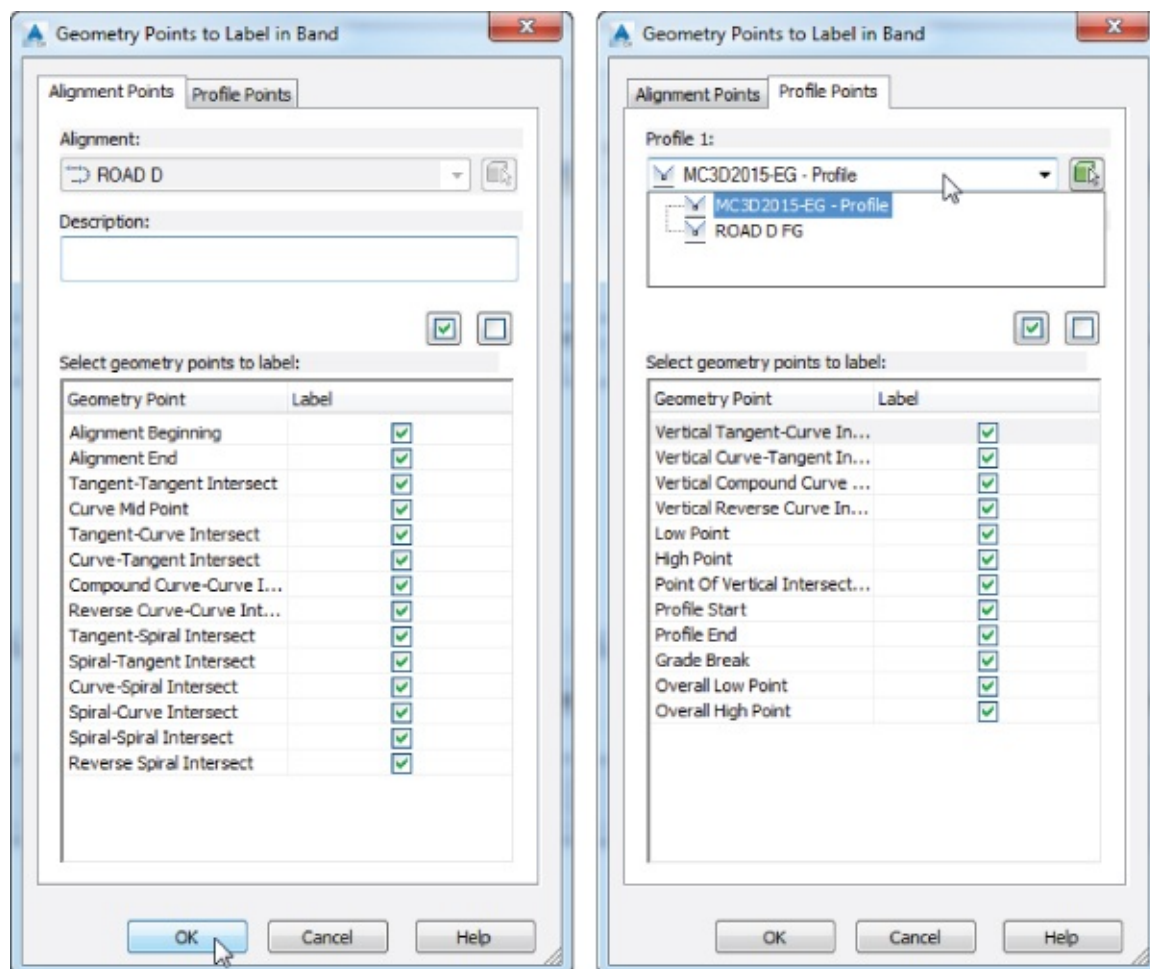


Figure 7.58 The Geometry Points To Label In Band dialog showing the Alignment Points tab (left) and the Profile Points tab (right)

7. Click OK to accept the defaults in the Geometry Points To Label In Band dialog.
 8. Leave Band Type set to Profile Data, and choose the Fill Data option from the Select Band Style drop-down.
 9. Click the Add button, which will open the Geometry Points To Label In Band dialog once again. Click OK to accept the defaults and dismiss that dialog.
 10. Change the Location drop-down to Top Of Profile View.
 11. Change the Band Type drop-down to the Horizontal Geometry option and choose the Geometry option from the Select Band Style drop-down.
 12. Click the Add button to add the Horizontal Geometry band to the table in the List Of Bands area.
 13. Change the Band Type drop-down to the Vertical Geometry option.
- Do not change the Select Band Style field from its current selection (Geometry).
14. Click the Add button to also add the Vertical Geometry band to the table in the List Of Bands area.
 15. Click OK to exit the dialog and press Esc to deselect.

Your profile view should look like [Figure 7.59](#).

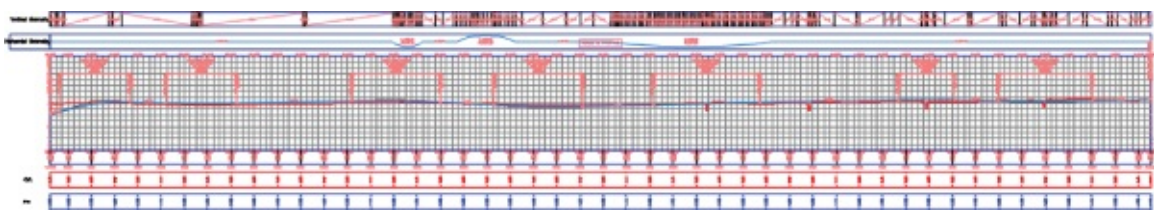


Figure 7.59 Applying bands to a profile view

There are obviously problems with the bands. The Vertical Geometry band is a mess and is located above the title of the profile view, whereas the Horizontal Geometry band overwrites the title. In addition, the elevation information has only the existing ground profile being referenced. Next, you'll fix those issues.

16. Pick a grid line on ROAD D Full Grid profile view.
17. From the Profile View contextual tab > Modify View panel, choose Profile View Properties to display the Profile View Properties dialog.
18. On the Bands tab, verify that the Location drop-down in the List Of Bands area is set to Bottom Of Profile View.
19. Verify that the Match Major/Minor Increments To Vertical Grid Intervals option at the bottom of the page is selected.

Checking this option ensures that the major/minor intervals of the profile data band match the major/minor profile view style's major/minor grid spacing.

Three Profile Data bands are listed in the table in the List Of Bands area (Elevations And Stations, Cut Data, and Fill Data). If you need to widen the columns, you can do so by double-clicking the line between the column headings.

20. Scroll right and notice the two columns labeled Profile1 and Profile2.
21. For all three rows change the value of Profile2 to **ROAD D FG**, as shown in [Figure 7.60](#).

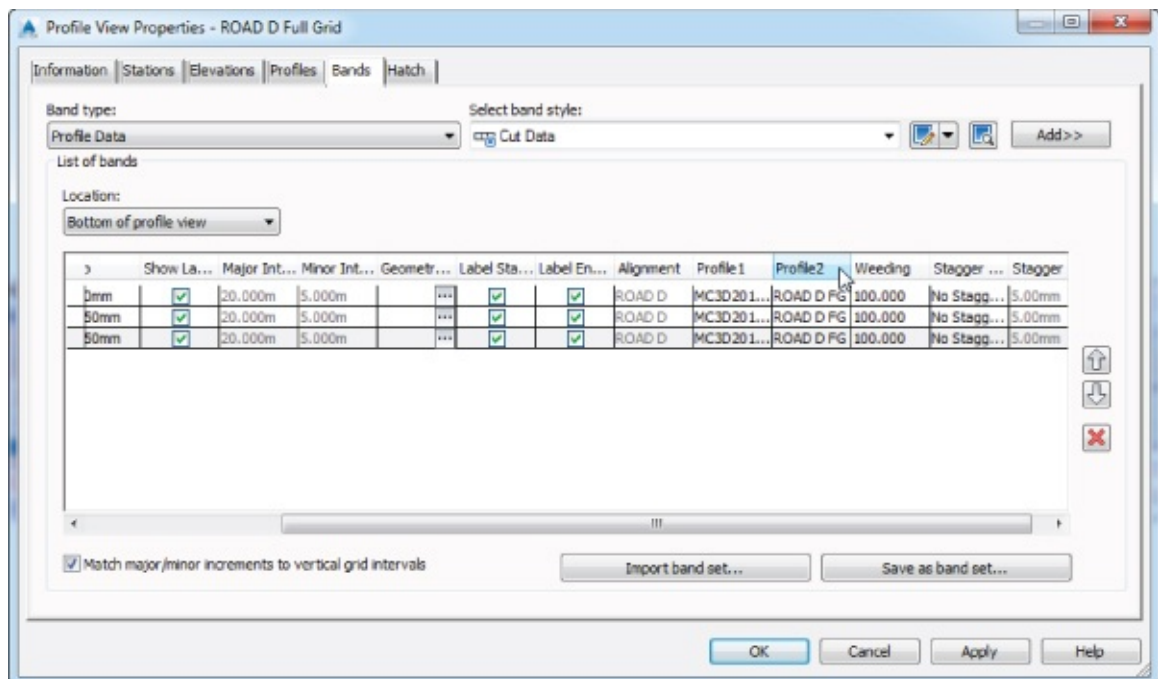


Figure 7.60 Setting the profile view bands to reference the ROAD D FG profile

22. Change the Location drop-down to Top Of Profile View.

The Horizontal Geometry and Vertical Geometry bands are now listed in the table.

23. Scroll to the right again, and set the value of Profile1 in the Vertical Geometry band to **ROAD D FG**.

Notice that some of the Profile1 and Profile2 boxes are not available for editing, such as those in the horizontal geometry band in the Top Of Profile View; this is because profile information isn't needed for this band.

24. Scroll back to the left and set the Gap value for the Horizontal Geometry band and the one for the Vertical Geometry band to **2"** (or **35 mm** for metric users).

This value controls the distance from one band to the next for all bands for both top and bottom locations, except the first in the list of bands, for which this value defines the offset of the band from the bottom or top of the profile view, respectively.

25. Click OK to dismiss the dialog.

Your profile view should now look like [Figure 7.61](#).

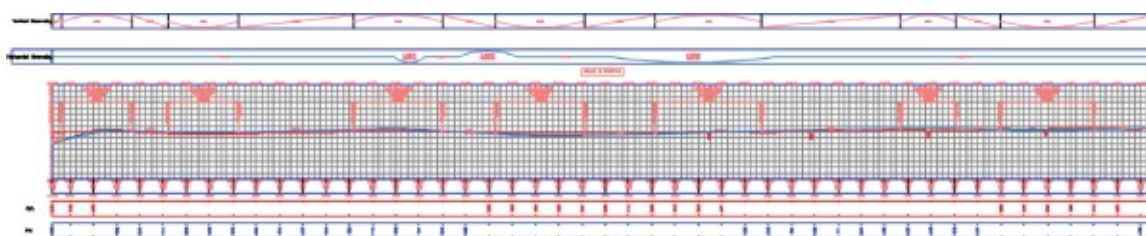


Figure 7.61 Completed profile view with the bands appropriately spaced

You may save and close the drawing. A finished copy of this is available from the book's web page with the filename 0711_ProfileViewBands_FINISHED.dwg (0711_ProfileViewBands_METRIC_FINISHED.dwg).

Bands use the Profile1 and Profile2 designation as part of their style construction. By changing the profile referenced as Profile1 or Profile2, you change the values that are calculated and displayed (e.g., existing versus proposed elevations). These bands are just additional items that are driven by object styles, which you will learn more about in Chapter 19.

In the next section we'll look at using band sets to make working with bands more efficient.

Band Sets

Band sets are simply collections of bands, much like the profile label sets or alignment label sets. In this exercise, you'll save a band set and then apply it to a second profile view:

1. Open the 0711_ProfileViewBandsSet.dwg (0711_ProfileViewBandsSet_METRIC.dwg) file.
2. Pick a grid line in the ROAD D Full Grid profile view (the top profile view), and from the Profile View contextual tab ► Modify View panel, choose Profile View Properties to display the Profile View Properties dialog.
3. On the Bands tab, click the Save As Band Set button to display the Band Set – New Profile View Band Set dialog.
4. On the Information tab, in the Name field, enter **Cut Fill Elev Station and Horiz Vert Geometry**, as shown in [Figure 7.62](#).

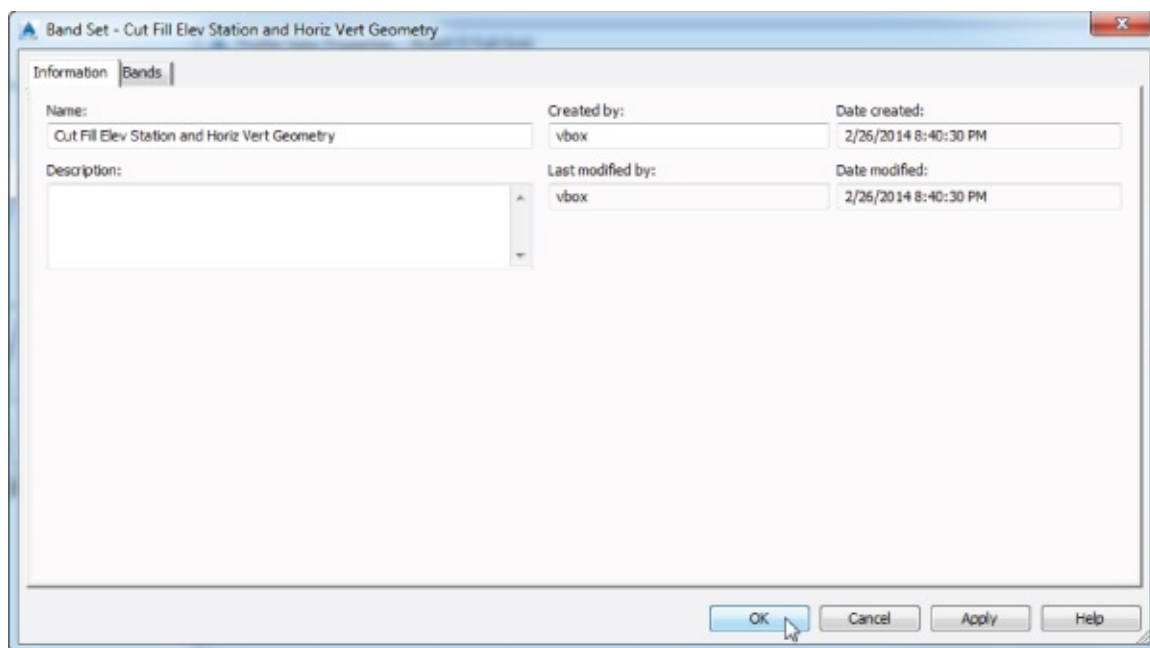


Figure 7.62 The Information tab for the Band Set – New Profile View Band Set dialog

5. Click OK to dismiss the Band Set – New Profile View Band Set dialog.
6. Click OK to dismiss the Profile View Properties dialog.
7. Press Esc to clear your selection, then pick a grid line in the ROAD A Full Grid profile view (profile view on the bottom), and from the Profile View contextual tab > Modify View panel, choose Profile View Properties to display the Profile View Properties dialog.
8. On the Bands tab, click the Import Band Set button, and the Band Set dialog opens.
9. Select the Cut Fill Elev Station And Horiz Vert Geometry option from the drop-down list and click OK.
10. Select Top Of Profile View from the Location drop-down list.
11. Scroll over on the Vertical Geometry row and set Profile1 to **ROAD A FG**.
12. Select Bottom Of Profile View from the Location drop-down list.
13. Scroll over and change Profile2 to **ROAD A FG** for all three rows. Also make sure that Profile1 is set to MC3D2015-EG for all three as well.
14. Click OK to exit the Profile View Properties dialog.

Your ROAD A Full Grid profile view ([Figure 7.63](#)) now looks like the ROAD D Full Grid profile view with the exception of the finished grade labels.

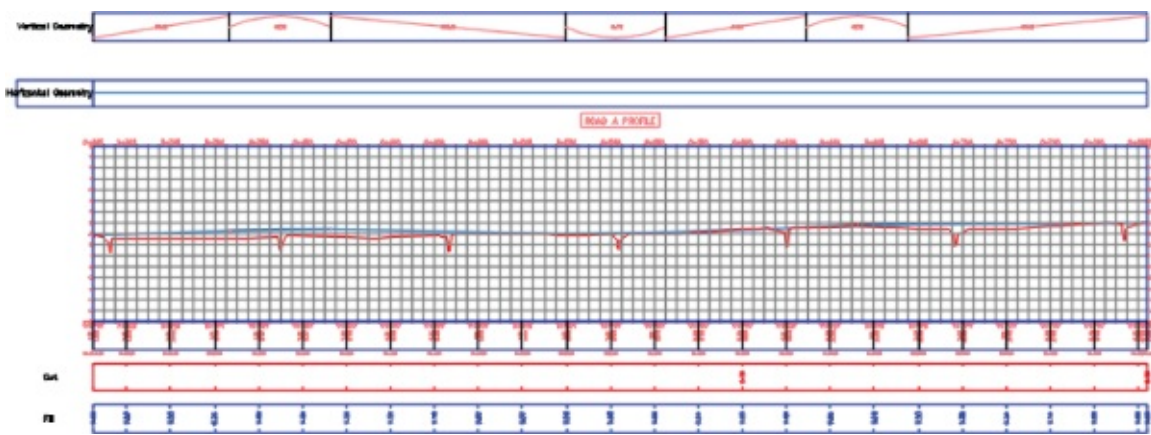


Figure 7.63 Completed profile view after importing the band set and assigning profiles

Band sets allow you to create uniform labeling and callout information across a variety of profile views. By using a band set, you can take a collection of settings and styles that you've assigned to a single profile view and apply them to a number of profile views. The simplicity of enforcing standard profile view labels and styles makes using profiles and profile views simpler than ever.

You may save and close the drawing. A finished copy of this drawing is available from the book's web page with the filename 0711_ProfileViewBandsSet_FINISHED.dwg (0711_ProfileViewBandsSet_METRIC_FINISHED.dwg).

Understanding Profile View Hatch

Sometimes it is necessary to hatch cut/fill areas in a profile view. The settings on the Hatch tab of the Profile View Properties dialog are used to specify upper and lower cut/fill boundary limits for associated profiles (see [Figure 7.64](#)).

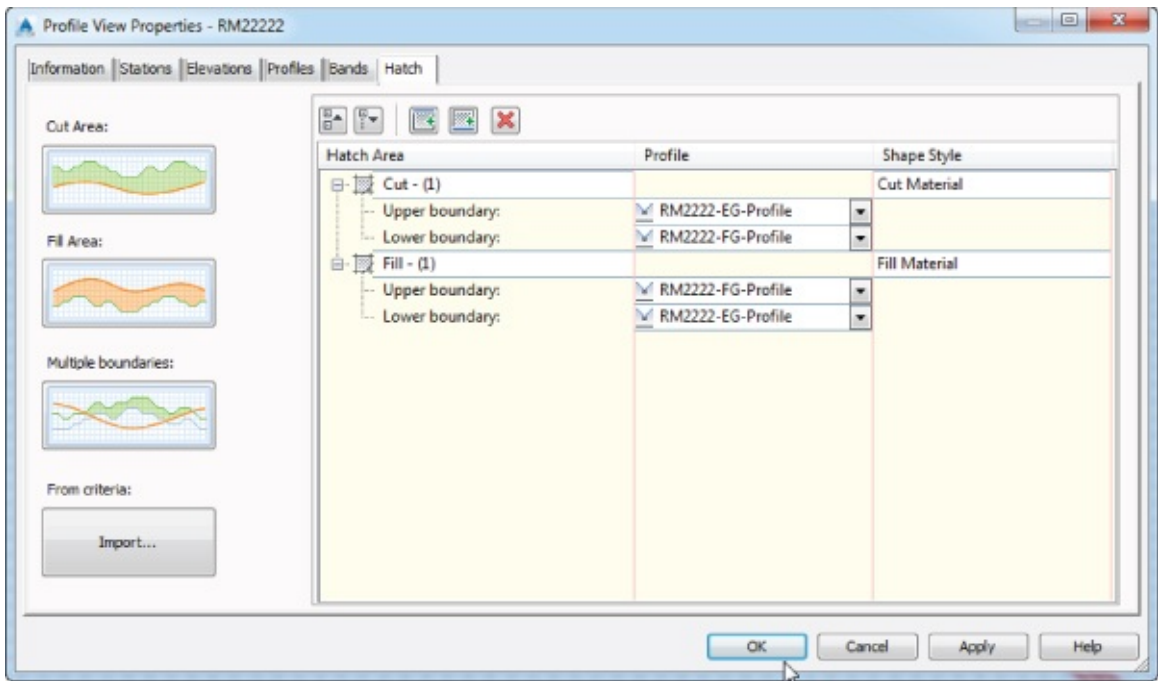


Figure 7.64 Shape style selection on the Hatch tab of the Profile View Properties dialog

Shape styles from the General Multipurpose Styles collection found on the Settings tab of Toolspace can also be selected here. These settings include the following:


Cut Area Click this button to add hatching to a profile view in areas of cut (the layout profile is at a lower elevation than the sampled surface profile).

Fill Area Click this button to add hatching to a profile view in areas of fill (the layout profile is at a higher elevation than the sampled surface profile).

Multiple Boundaries Click this button to add hatching to a profile view in areas of a cut/fill where the area must be averaged between two existing profiles (for example, finished ground at the centerline vs. the left and right top of a curb).

From Criteria Click this button to add hatch in areas where quantity takeoff criteria are used to define a hatch region.

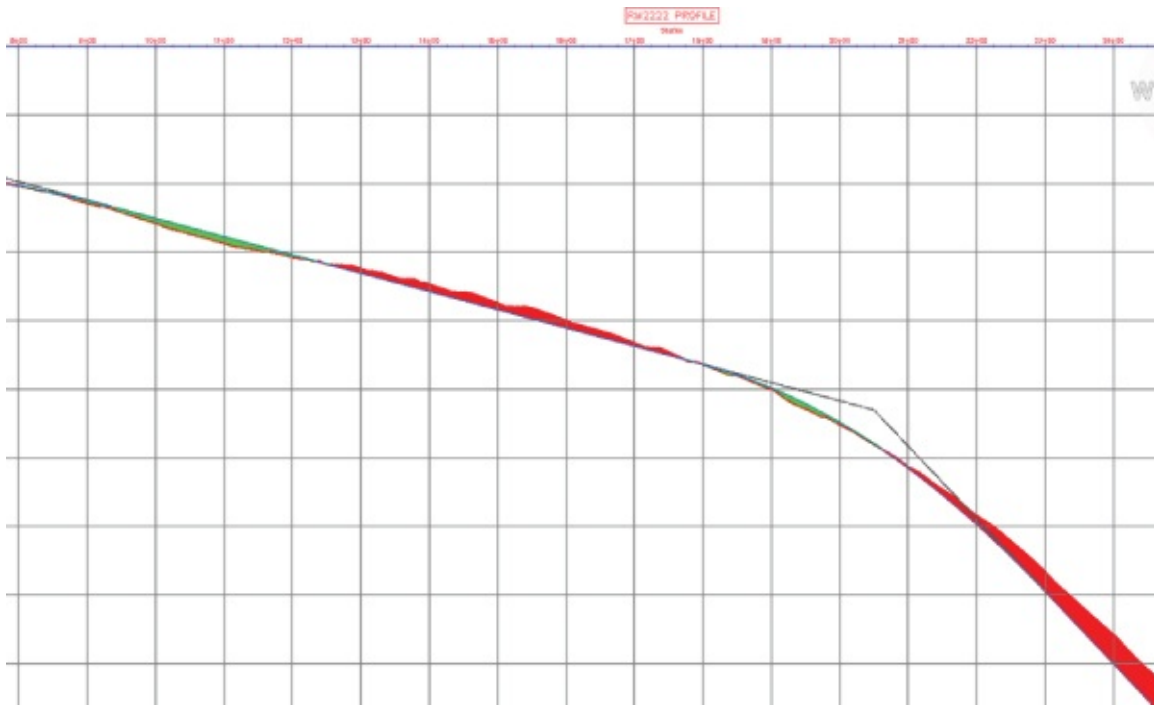[Figure 7.65](#) shows a cut and fill hatched profile based on the criteria shown previously in [Figure 7.64](#).



[Figure 7.65](#) A portion of the RM2222 profile shown with cut and fill shading

Mastering Profiles and Profile Views

One of the most difficult concepts to master in AutoCAD Civil 3D is the notion of which settings control which display property. Although the following two rules may sound overly simplistic, they are important to remember and will help you work through your understanding of the software:

- Every object has a label and an object style.
- Every label has a label style.

Furthermore, if you can remember that there is a distinct difference between a profile object and the profile view object you place it in, you'll be well on your way to mastering profiles and profile views. When in doubt, select an object and observe the options that become available on the contextual ribbon tab. Label styles and object styles will be discussed further in Chapters 18 and 19, respectively.

Profile View Labeling Styles

Now that the profile view is created, the profile view grid spacing is set, and the titles all look good, it's time to add some specific callouts and detail information. Civil 3D uses profile view labels and bands for annotating. The specific label styles will be discussed further in Chapter 18, but for now we will just discuss how to apply the labels.

View Annotation

Profile view annotations label individual points in a profile view, but they are not tied to a specific profile object. Profile view labels can be station elevation labels, depth labels, or projection labels. Station elevation labels can be used to label a single point or the depth between two points in a profile while recognizing the vertical exaggeration of the profile view and applying the scaling factor to label the correct depth. In this exercise, you'll use both the station elevation label and the depth label:

1. Open the 0712_ProfileViewLabels.dwg (0712_ProfileViewLabels_METRIC.dwg) file.
2. Zoom to the ROAD D Full Grid profile view.
3. From the Annotate tab > Labels & Tables panel, choose Add Labels (not the drop-down list) to open the Add Labels dialog.
4. In the Feature drop-down, select Profile View.
5. In the Label Type drop-down, verify that Station Elevation is selected.
6. In the Station Elevation Label Style drop-down, verify that Station And Elevation is selected.
7. Verify that the marker style is set to Basic Circle With Cross.
8. Click the Add button.
9. When prompted to select a profile view, click a grid line in the ROAD D Full Grid profile view, and a vertical red line will appear.
10. Zoom in around station 11+40 (or 0+347 for metric users) so that you can see the point where the EG and layout profiles cross.
11. Turn off your running Osnaps and pick this profile crossover point visually; then pick the same point to set the elevation and press \leftarrow .

Your label should look like [Figure 7.66](#), although the actual values will vary slightly.

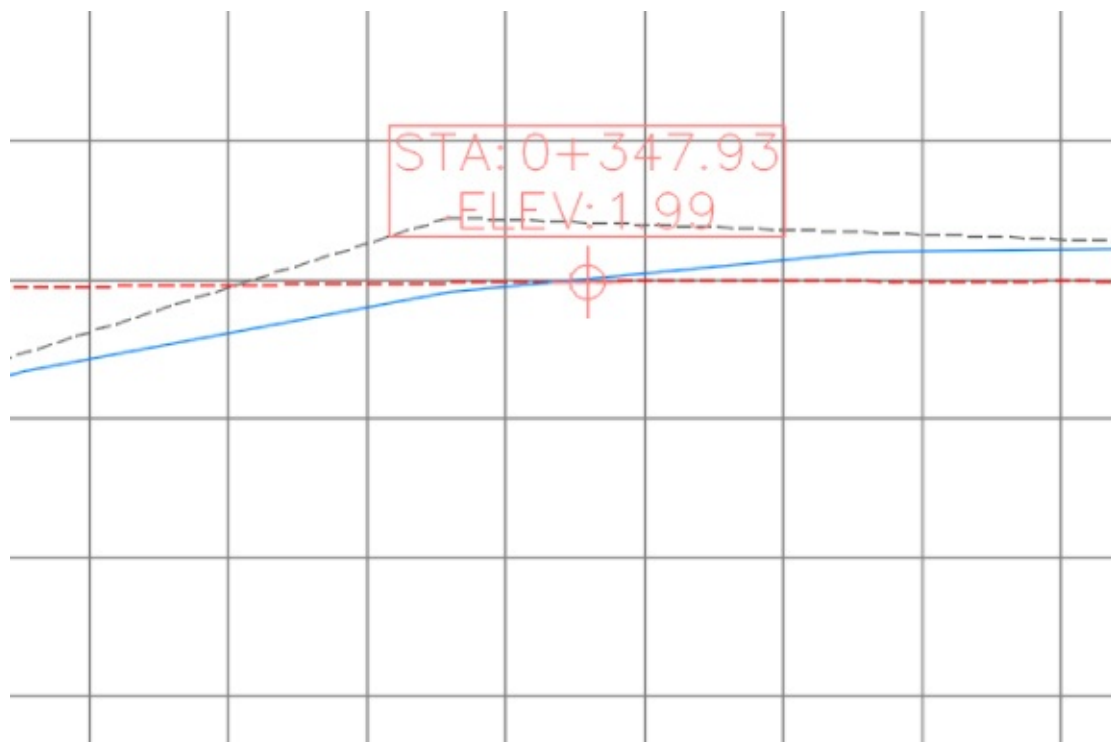


Figure 7.66 A profile view station and elevation label

Snapping to Profiles and Profile Views

For a number of releases now, users have been asking for the ability to simply snap to the intersection of two profiles. We mention this because you'll try to snap and wonder if you've lost your mind. You haven't—it just doesn't work. If you are after a solution (it isn't elegant), you can draw lines on top of the profiles.

2. In the Add Labels dialog, change both Label Type and Depth Label Style to the Depth option.
3. Click the Add button.
4. Pick the ROAD D Full Grid profile view by clicking one of the grid lines.
5. Pick a point along the layout profile; then pick a point along the EG profile and press \leftarrow .

The depth between the two profiles will be measured, as shown in [Figure 7.67](#). Your value may vary slightly from what is shown.

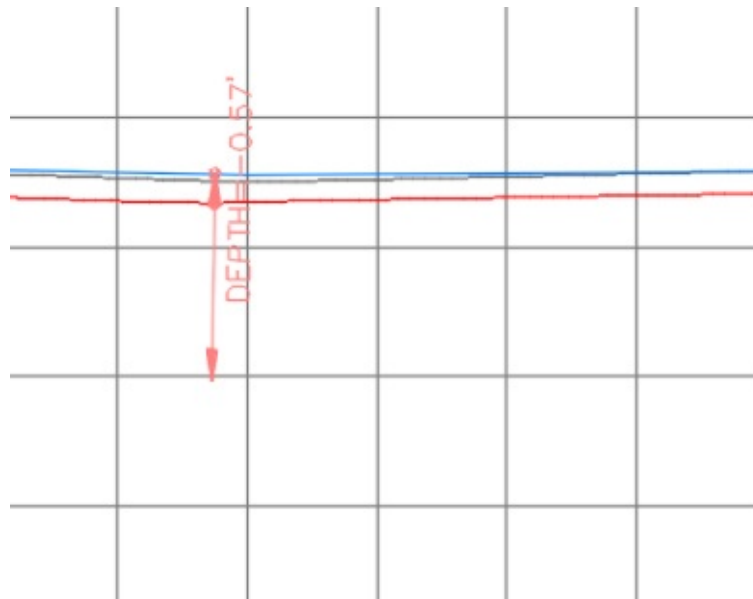


Figure 7.67 A depth label applied to the ROAD D Full Grid profile view

6. Close the Add Labels dialog.

You may save and close the drawing. A finished copy of this drawing is available from the book's web page with the filename `0712_ProfileViewLabels_FINISHED.dwg` (`0712_ProfileViewLabels_METRIC_FINISHED.dwg`).

Depth labels can be handy in earthworks situations where cut and fill become critical, and individual spot labels are important to understanding points of interest, but most design documentation is accomplished with labels placed along the profile view axes in the form of data bands and band sets discussed earlier in this chapter.

Profile Labels

It's important to remember that the profile and the profile view aren't the same thing. The labels discussed in the following sections are those that relate directly to the profile but are visible for a specific profile

view. This usually means station-based labels, individual tangent and curve labels, or grade breaks.

Applying Labels

As with alignments, you can apply labels as a group of objects separate from the profile. In this portion of the exercise, you'll learn how to add labels along a profile object:

1. Open the 0712_ProfileLabels.dwg (0712_ProfileLabels_METRIC.dwg) file.
2. Zoom to the ROAD D Full Grid profile view and pick the ROAD D FG profile (the blue line) to activate the Profile contextual tab.



3. From the Profile contextual tab > Labels panel, choose Edit Profile Labels to display the Profile Labels dialog (see [Figure 7.68](#)).

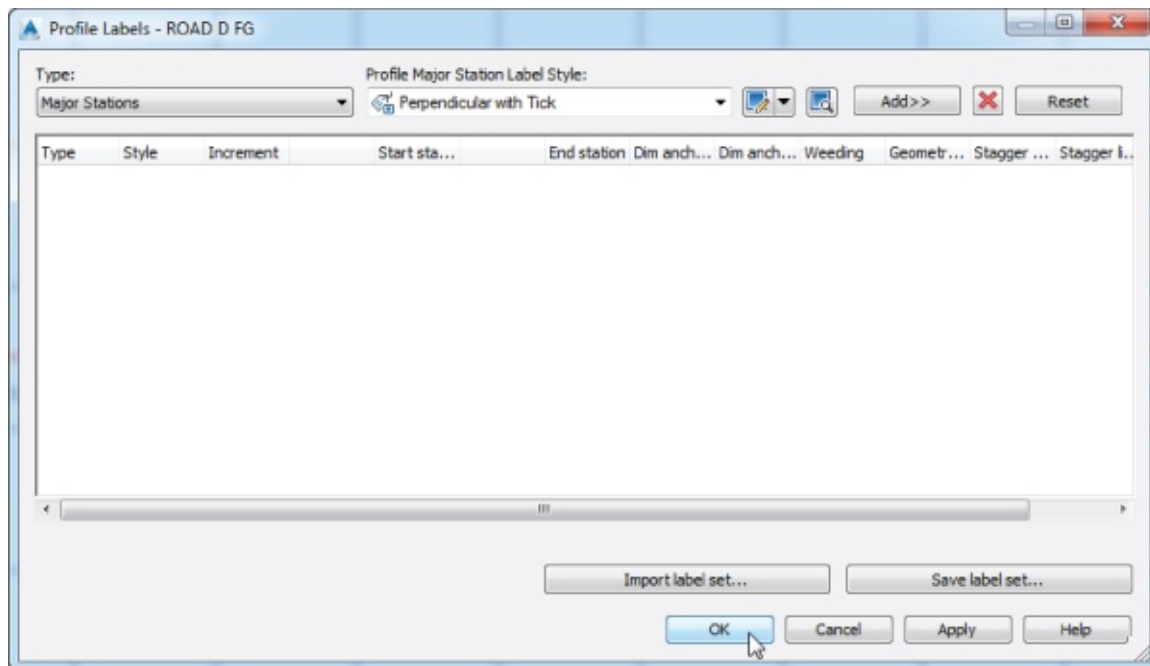


Figure 7.68 An empty Profile Labels dialog

Selecting the type of label from the Type drop-down menu changes the Style drop-down menu to include styles that are available for that label type. Next to the Style drop-down menu are the usual Style Edit/Copy button and Preview button. Once you've selected a style from the Style drop-down menu, clicking the Add button places it on the profile. The middle portion of this dialog displays information about the labels that are being applied to the profile selected; you'll look at that in a moment.

4. Choose the Major Stations option from the Type drop-down menu.

The name of the second drop-down menu changes to Profile Major Station Label Style to reflect this option.

5. Verify that Perpendicular With Tick is selected in this menu.
6. Click the Add button to apply this label to the profile.
7. Choose Horizontal Geometry Points from the Type drop-down menu.

The name of the Style drop-down menu changes to Profile Horizontal Geometry Point.

8. Select the Horizontal Geometry Station option, and click the Add button again to display the Geometry Points dialog.
- This dialog lets you apply different label styles to different geometry points if necessary.
9. Deselect the Alignment Beginning and Alignment End rows, as shown in [Figure 7.69](#), and click OK to dismiss the dialog.

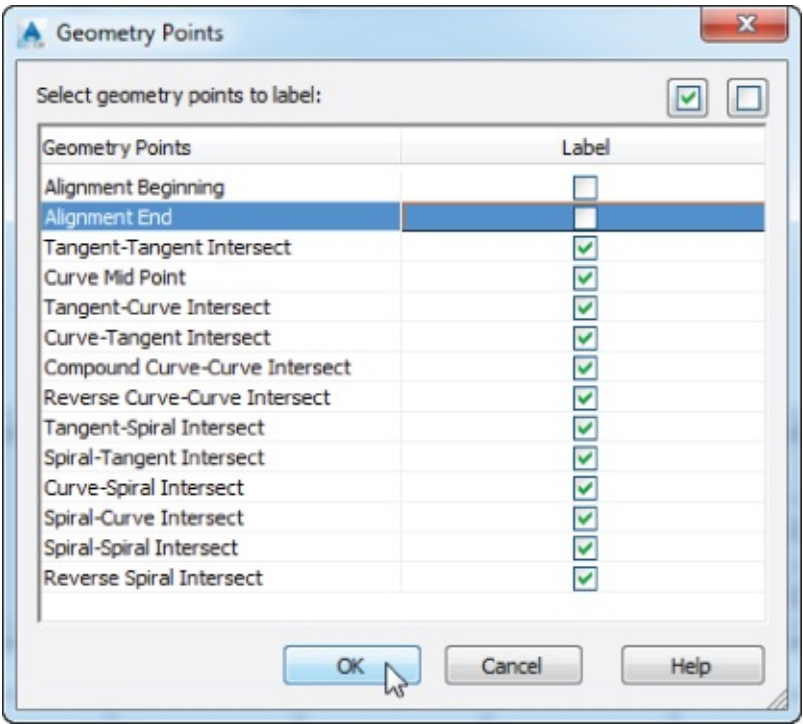


Figure 7.69 The Geometry Points dialog appears when you apply labels to horizontal geometry points.

10. On the Profile Labels dialog, click the Apply button.
11. Drag the dialog out of the way to view the changes to the profile, as shown in [Figure 7.70](#).

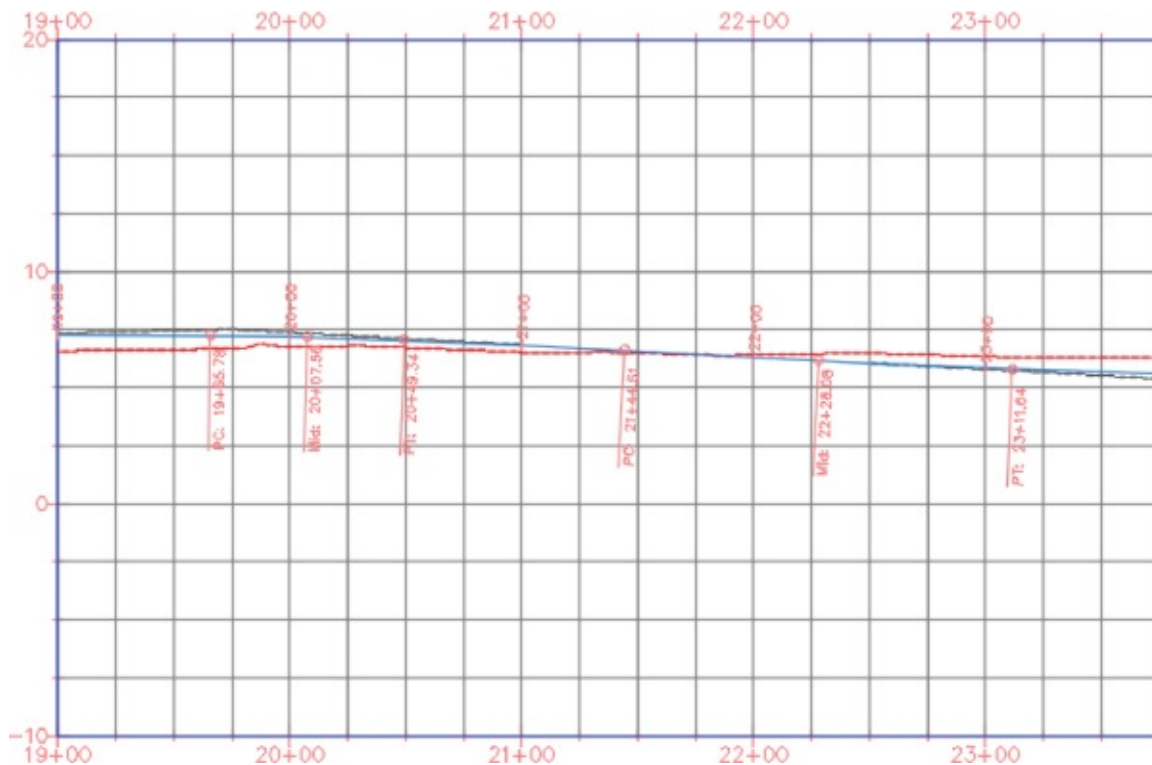


Figure 7.70 Labels applied to major stations and alignment geometry points

2. In the middle of the Profile Labels dialog, change the Increment value in the Major Stations row to **50** (or **10** for metric users), as shown in [Figure 7.71](#).

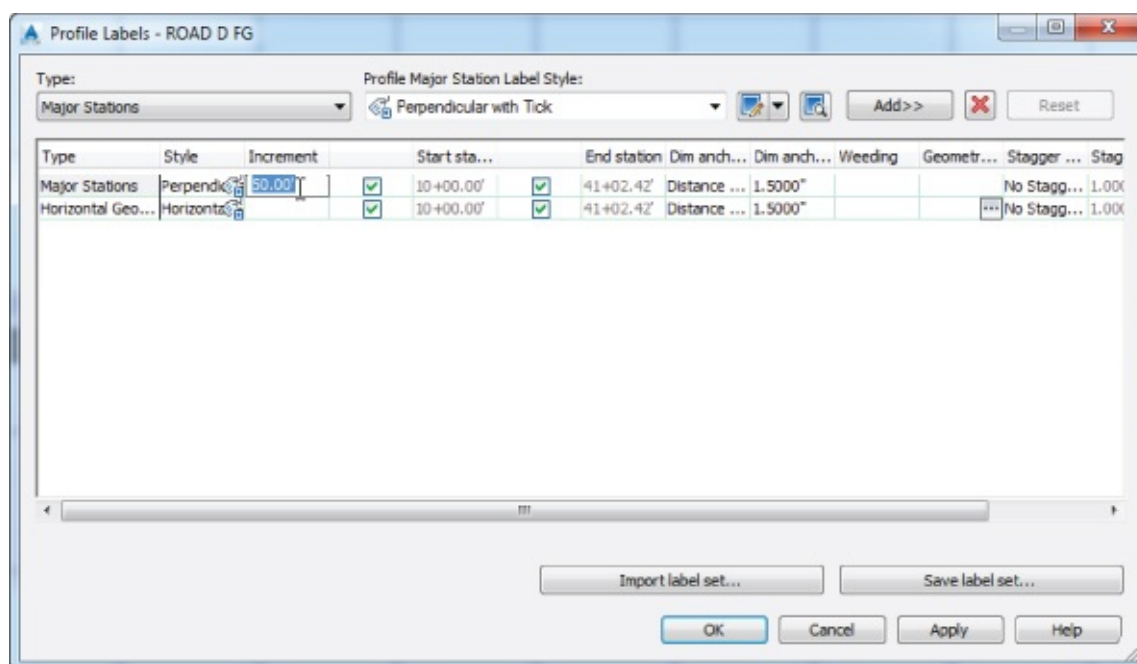


Figure 7.71 Modifying the major station labeling increment

This modifies the labeling increment only, not the grid or other values.

3. Click OK to dismiss the Profile Labels dialog.

You may save and close the drawing. A finished copy of this drawing is available from the book's web page with the filename 0712_ProfileLabels_FINISHED.dwg (0712_ProfileLabels_METRIC_FINISHED.dwg).

Using Profile Label Sets

Applying labels to both crest and sag curves and to tangents, grade breaks, and geometry with the label style selection and various options can be monotonous. Thankfully, Civil 3D gives you the ability to use label sets, as in alignments, to make the process quick and easy. Just as you saved and imported band sets in a previous example, you can save and import label sets as well.

In all of the previous examples, you used either the complete label set or the _No Labels label set, which you specified on the Profile Display Options wizard page.

Sometimes You Don't Want to Set Everything

Resist the urge to modify the beginning or ending station values in a label set. If you save a specific value, that value will be applied when the label set is imported. For example, if you set a station label to end at 15+00 because the alignment is 15+15 long, that label will always stop at 15+00, even if the target profile is 5,000' long!


Label sets are the best way to apply profile labeling uniformly. When you're working with a well-developed set of styles and label sets, it's quick and easy to go from sketched profile layout to plan-ready output. We will discuss profile label sets in further detail and go over an example in Chapter 18.

Profile Utilities

One common requirement is to compare profile data for objects that are aligned similarly but not parallel. Another is the ability to project objects from a plan view into a profile view. The abilities to superimpose profiles and project objects are both discussed in this section.

Superimposing Profiles

In a profile view, a profile is sometimes superimposed to show one profile adjacent to another (e.g., a ditch adjacent to a road centerline). In this brief exercise, you'll superimpose one of your street designs onto the other to see how they compare over a certain portion of their length:

1. Open the 0713_SuperImposeProfile.dwg (0713_SuperImposeProfile_METRIC.dwg) file.
2.  From the Home tab > Create Design panel, choose Profile > Create Superimposed Profile.
3. At the Select source profile: prompt, zoom to the ROAD C TRAIL Full Grid profile view and pick the ROAD C TRAIL FG profile (the blue line).
4. At the Select destination profile view: prompt, click one of the grid lines in the ROAD C Full Grid profile view to display the Superimpose Profile Options dialog shown in [Figure 7.72](#).

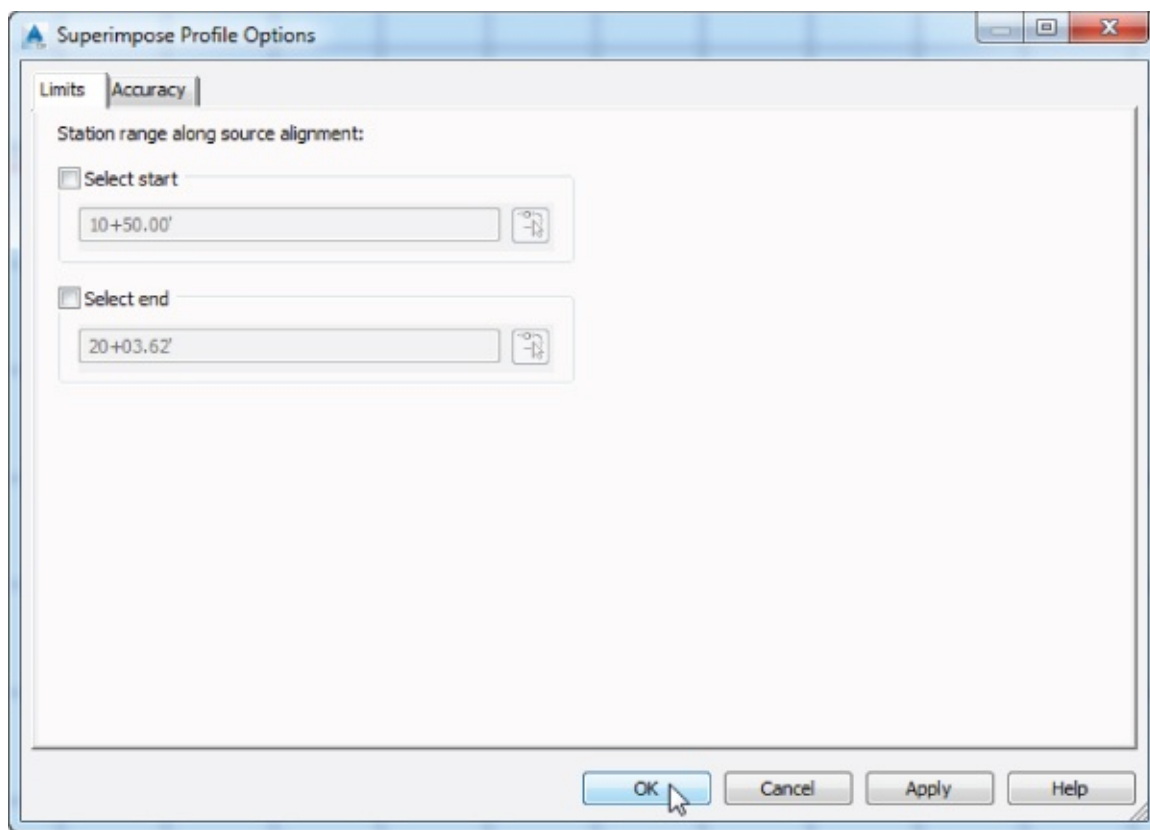


Figure 7.72 The Superimpose Profile Options dialog

On the Limits tab you can control the start and end stations of the superimposed profile, in the event that you do not want the entire profile to be superimposed. On the Accuracy tab, you can control the handling of curves through the mid-ordinate settings. Superimposed curves aren't curves at all; they are lots of small segments that approximate a curve. The smaller the mid-ordinate distance values, the smaller and more numerous the segments will be.

5. Click OK to dismiss the dialog, accepting the default settings.
6. Zoom in on the ROAD C Full Grid profile view to see the superimposed data, as shown in [Figure 7.73](#).

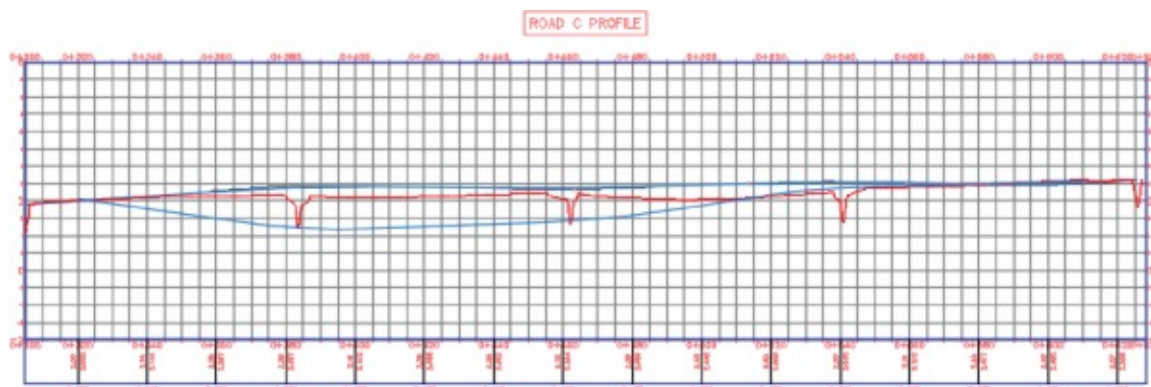


Figure 7.73 The ROAD C TRAIL FG layout profile superimposed on the ROAD C Full Grid profile view


Note that the vertical curves in the ROAD C TRAIL FG layout profile have been approximated on the ROAD C Full Grid profile view, using a series of PVIs. Superimposing works by projecting a line from the target alignment (ROAD C) to a perpendicular intersection with the other source alignment (ROAD C TRAIL).

The target alignment is queried for an elevation at the intersecting station, and a PVI is added to the superimposed profile. Note that this superimposed profile is still dynamic! A change in the ROAD C TRAIL FG layout profile will be reflected on the ROAD C Full Grid profile view.

When this exercise is complete, you may save and close the drawing. A finished copy of this drawing is available from the book's web page with the filename 0713_SuperImposeProfile_FINISHED.dwg (0713_SuperImposeProfile_METRIC_FINISHED.dwg).

Projecting Objects in Profile View

Some AutoCAD and some AutoCAD Civil 3D objects can be projected from a plan view into a profile view. The list of available AutoCAD objects includes points, blocks, 3D solids, and 3D polylines. The list of available AutoCAD Civil 3D objects includes COGO points, feature lines, and survey figures. These objects can be projected to the object's elevation, a manually selected elevation, a surface, or a profile. In the following exercise, you'll project a 3D object into a profile view:

1. Open the 0714_ProjectToProfile.dwg (0714_ProjectToProfile_METRIC.dwg) file.
2.  From the Home tab > Profile & Section Views panel, choose Profile View > Project Objects To Profile View.
3. At the Select objects to add to profile view: prompt, select the three power poles and the fire hydrant object located along the left and right of the ROAD C alignment and press ↵.
4. At the Select a profile view: prompt, select the ROAD C Full Grid profile view by clicking one of the grid lines to display the Project Objects To Profile View dialog.
5. Verify that Style is set to Power Pole for the power poles object and to Hydrant (existing) for the hydrant object, Elevation Options is set to Surface > MC3D2015-EG, and Label Style is set to Projection Dimension Below, as shown in [Figure 7.74](#).

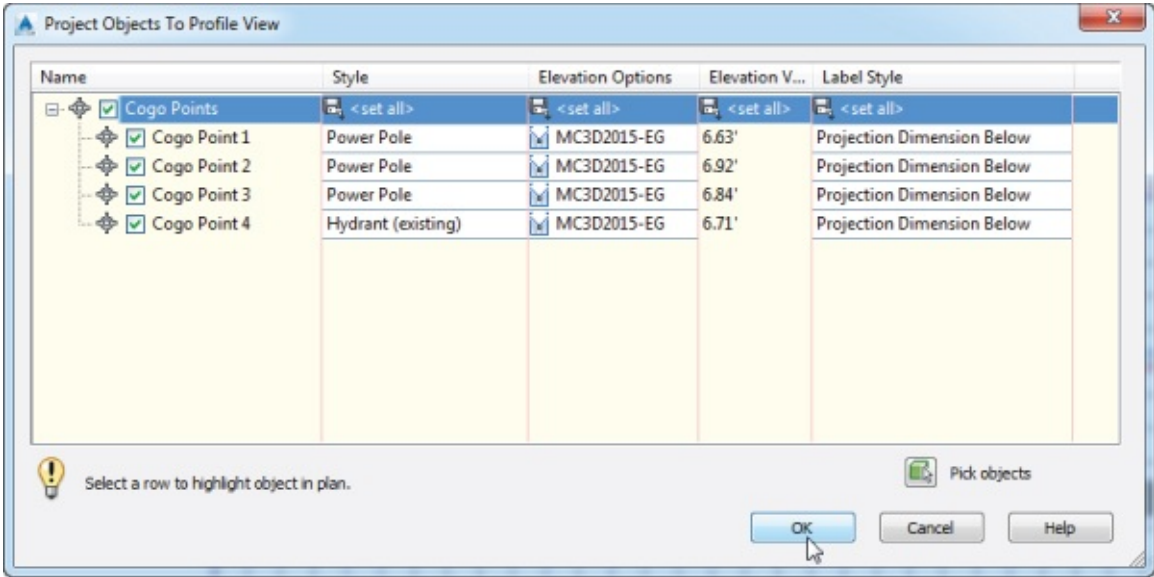


Figure 7.74 A completed Project Objects To Profile View dialog

6. Click OK to dismiss the dialog, and review your results, as shown in [Figure 7.75](#).

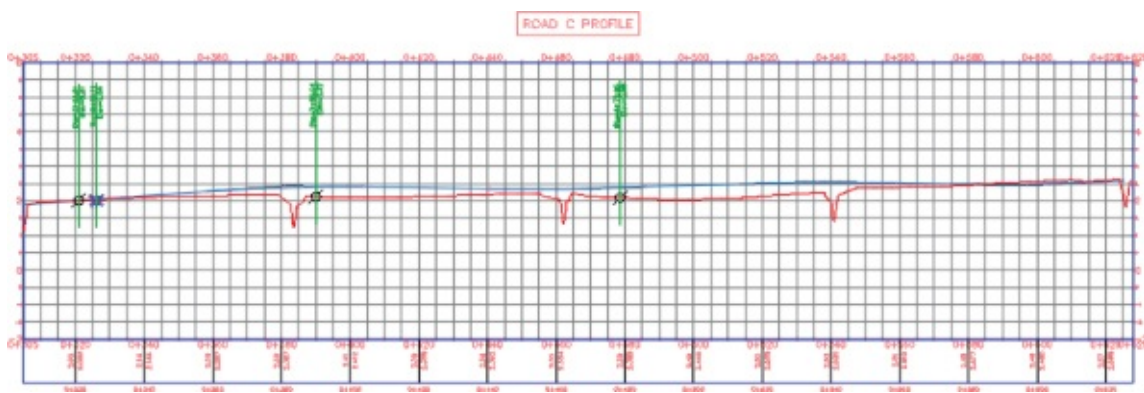


Figure 7.75 The COGO point objects projected into a profile view

We actually wanted the second power pole along the alignment to show on the proposed surface. No problem. Follow the next steps.

- Click the power pole in profile view to activate the Cogo Point contextual tab. Together with this tab another tab is activated, the Projected Object tab. Switch to this contextual tab.



- From the Projected Object contextual tab > Modify Projected Object panel, choose Projection Properties to display the Profile View Properties dialog.
- In the Profile View Properties dialog, click the cell in the Elevation Options column for the Cogo Point 2 object, and from the drop-down select Profile > ROAD C FG, as shown in [Figure 7.76](#). Click OK.

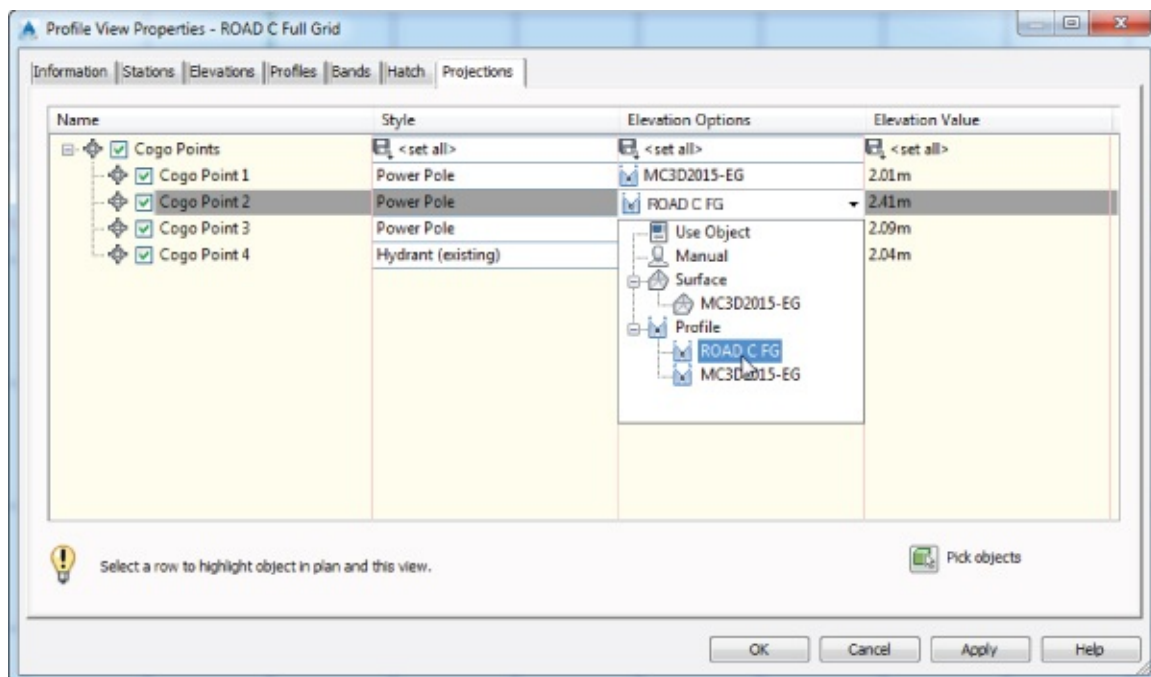


Figure 7.76 Selecting the ROAD C FG profile elevation

The projected power pole is now adjusted to match the elevation of the ROAD C FG profile, as shown in [Figure 7.77](#).

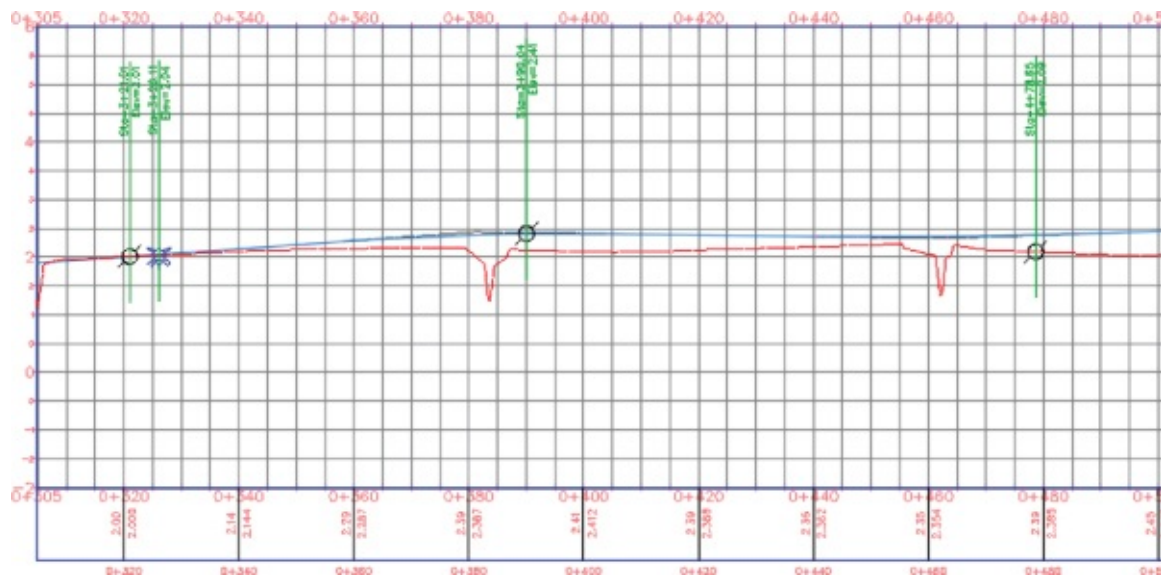


Figure 7.77 The COGO point object projected onto the ROAD C FG profile

You may save and close the drawing. A finished copy of this drawing is available from the book's web page with the filename 0714_ProjectToProfile_FINISHED.dwg (0714_ProjectToProfile_METRIC_FINISHED.dwg).

Once an object has been projected into a profile view, the Profile View Properties dialog will display a new Projections tab. Projected objects will remain dynamically linked with respect to their plan placement. If you move them manually after placing them dynamically, a warning will appear to confirm that you want to break the dynamic setting. Because profile views and section views are similar in nature, objects can be projected into section views in the same fashion. However, projecting a feature line onto a profile view will give you a different result than projecting it onto a section view. On a profile view, it looks more like a superimposed profile. On a section view, it's more like a pipe crossing since it appears only where it intersects the section line.

Creating a Quick Profile

There are going to be times when all you want is to quickly look at a profile and not keep it for later use. When this is the case, instead of creating an alignment, a profile, and a profile view, you can create a quick profile. A quick profile is a temporary object that will not be saved with the drawing. You can create a quick profile for 2D or 3D lines or polylines, lot lines, feature lines, survey figures, and even a series of points.

From the Home tab > Create Design panel, choose Profile > Quick Profile. The command line will state Select object or [by Points]:. Once you select your object (or points), the Create Quick Profiles dialog is displayed ([Figure 7.78](#)).

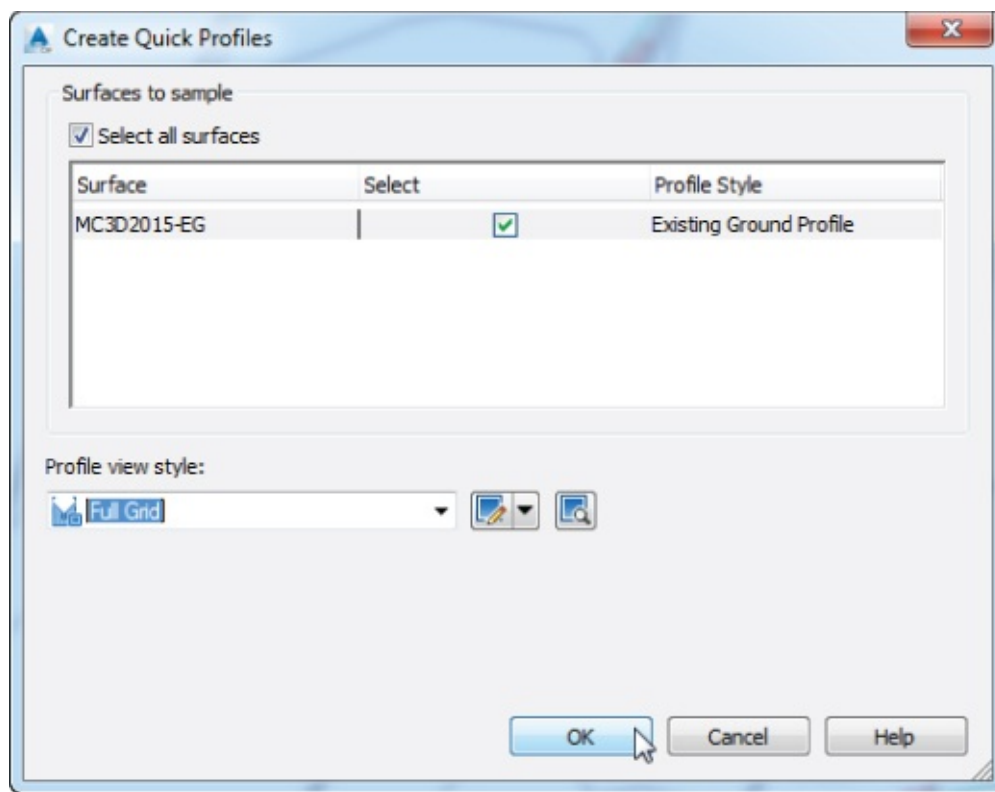


Figure 7.78 The Create Quick Profiles dialog

You can select which surface you want to sample as well as what profile view style and 3D entity profile style to use. Upon clicking OK, you will be prompted for a location to place the profile. A quick profile is a temporary profile that will be erased once a user save operation is performed on the drawing. You cannot select a different style to use for this profile view and cannot sample other sources once the profile view is created. Also, you will not be able to use the profile layout tools to define a design profile on this type of profile view.

The Bottom Line

Sample a surface profile with offset samples. Using surface data to create dynamic sampled profiles is an important advantage of working with a three-dimensional model. Quick viewing of various surface centerlines and grip-editing alignments makes for an effective preliminary planning tool. Combined with offset data to meet review agency requirements, profiles are robust design tools in Civil 3D.

Master It Open the `MasterIt_0701.dwg` (`MasterIt_0701_METRIC.dwg`) file and sample the ground surface along Alignment A, along with offset values at 15' left and 15' right (or 4.5 m left and 4.5 m right) of the alignment. Generate a profile view showing this information using the Major Grids profile view style with no data band sets.

Lay out a design profile on the basis of a table of data. Many programs and designers work by creating pairs of station and elevation data. The tools built into Civil 3D let you input this data precisely and quickly.

Master It Continue in the previous file or open `MasterIt_0701_FINISHED.dwg` (`MasterIt_0701_METRIC_FINISHED.dwg`). Create a layout profile on Alignment A using the Layout profile style and a complete label set with the following information for Imperial users.

Station	PVI Elevation	Curve Length
0+00	822.00	
1+80	825.60	300'
6+50	800.80	

Or use the following information for metric users:

Station	PVI Elevation	Curve Length
0+000	250.400	
0+062	251.640	100 m
0+250	244.840	

Add and modify individual entities in a design profile. The ability to delete, modify, and edit the individual components of a design profile while maintaining the relationships is an important concept in the 3D modeling world. Tweaking the design allows you to pursue a better solution, not just a working solution.

Master It Continue in the previous file or open `MasterIt_0702_FINISHED.dwg` (`MasterIt_0702_METRIC_FINISHED.dwg`). For the layout profile created in the previous exercise, modify the curve so that it is 200' (or 60 m for metric users). Then insert a PVI at Station 4+90, Elevation 794.60 (or at Station 0+150, Elevation 242.840 for metric users) and add a 300' (or 96 m for metric users) parabolic vertical curve at the newly created PVI.

Apply a standard band set. Standardization of appearance is one of the major benefits of using styles in labeling. By applying band sets, you can quickly create plot-ready profile views that have the required information for review.

Master It Continue in the previous file or open `MasterIt_0703_FINISHED.dwg` (`MasterIt_0703_METRIC_FINISHED.dwg`). Apply the Cut And Fill band set to the layout profile created in the previous exercise with the appropriate profiles referenced in each of the bands.

Chapter 8

Assemblies and Subassemblies

Roads, ditches, trenches, and berms usually follow a predictable pattern known as a *typical section*. Assemblies are how you tell the Autodesk® AutoCAD® Civil 3D® software what these typical sections look like. Assemblies are made up of smaller components called *subassemblies*. For example, a typical road section assembly contains subassemblies such as lanes, sidewalks, and curbs.

In this chapter, the focus will be on understanding where these assemblies come from and how to build and manage them.

In this chapter, you will learn to

- Create a typical road assembly with lanes, curbs, gutters, and sidewalks
- Edit an assembly
- Add daylighting to a typical road assembly

Subassemblies

A *subassembly* is a building block of a typical section, known as an *assembly*. Examples of subassemblies include lanes, curbs, sidewalks, channels, trenches, daylighting, and any other component required to complete a typical corridor section.

An extensive selection of subassemblies has been created for use in Civil 3D. More than a hundred subassemblies are available in the tool palettes, and each subassembly has a list of adjustable *parameters*. There are also about a dozen generic links you can use to further refine your most complex assembly needs. From ponds and berms to swales and roads, the design possibilities are almost infinite.

To expand the possibilities even more, you can use the Subassembly Composer to create custom subassemblies from scratch. Subassembly Composer is a separate program whose sole purpose is to build custom subassemblies. You can learn more about Subassembly Composer in the bonus chapter named “Custom Subassemblies” that is available on the book's website, www.sybex.com/go/masteringcivil3d2015.

The Tool Palettes

You will add subassemblies to a design by clicking them from the subassembly tool palette, as you'll see later in this chapter. By default, Civil 3D has several tool palettes created for corridor modeling.

 You can access these tool palettes from the Home tab by clicking the Tool Palettes button on the Palettes panel or by pressing Ctrl+3.

When Civil 3D is installed, you have an initial set of the most commonly used assemblies and subassemblies ready to go. The Tool Palettes window consists of multiple customizable tabs that categorize the assemblies and subassemblies so that they are easy to find.

The top, default tab in the Tool Palettes window is the Assemblies tab. On this tab you will find a selection of predefined, completed assemblies ([Figure 8.1](#)). These are a great starting point for beginners

who are looking for examples of how subassemblies are put together into an assembly. There are examples of simple roadway sections as well as more advanced items, such as intersections and roundabouts. To use one, click the desired assembly tool on the Tool Palettes window, and then click within the drawing area and press \leftarrow to end the command.

Getting to the Tool Palettes

The exercises in this chapter depend heavily on the use of the Tool Palettes window of AutoCAD. To avoid redundancy, we will assume that you have the Tool Palettes window open for each exercise and not include instructions to open it. In case you need a reminder, the easiest way to open the Tool Palettes window is either from the Home tab \triangleright Palettes panel or by pressing Ctrl+3 on your keyboard.




Figure 8.1 Tool Palettes predefined assemblies

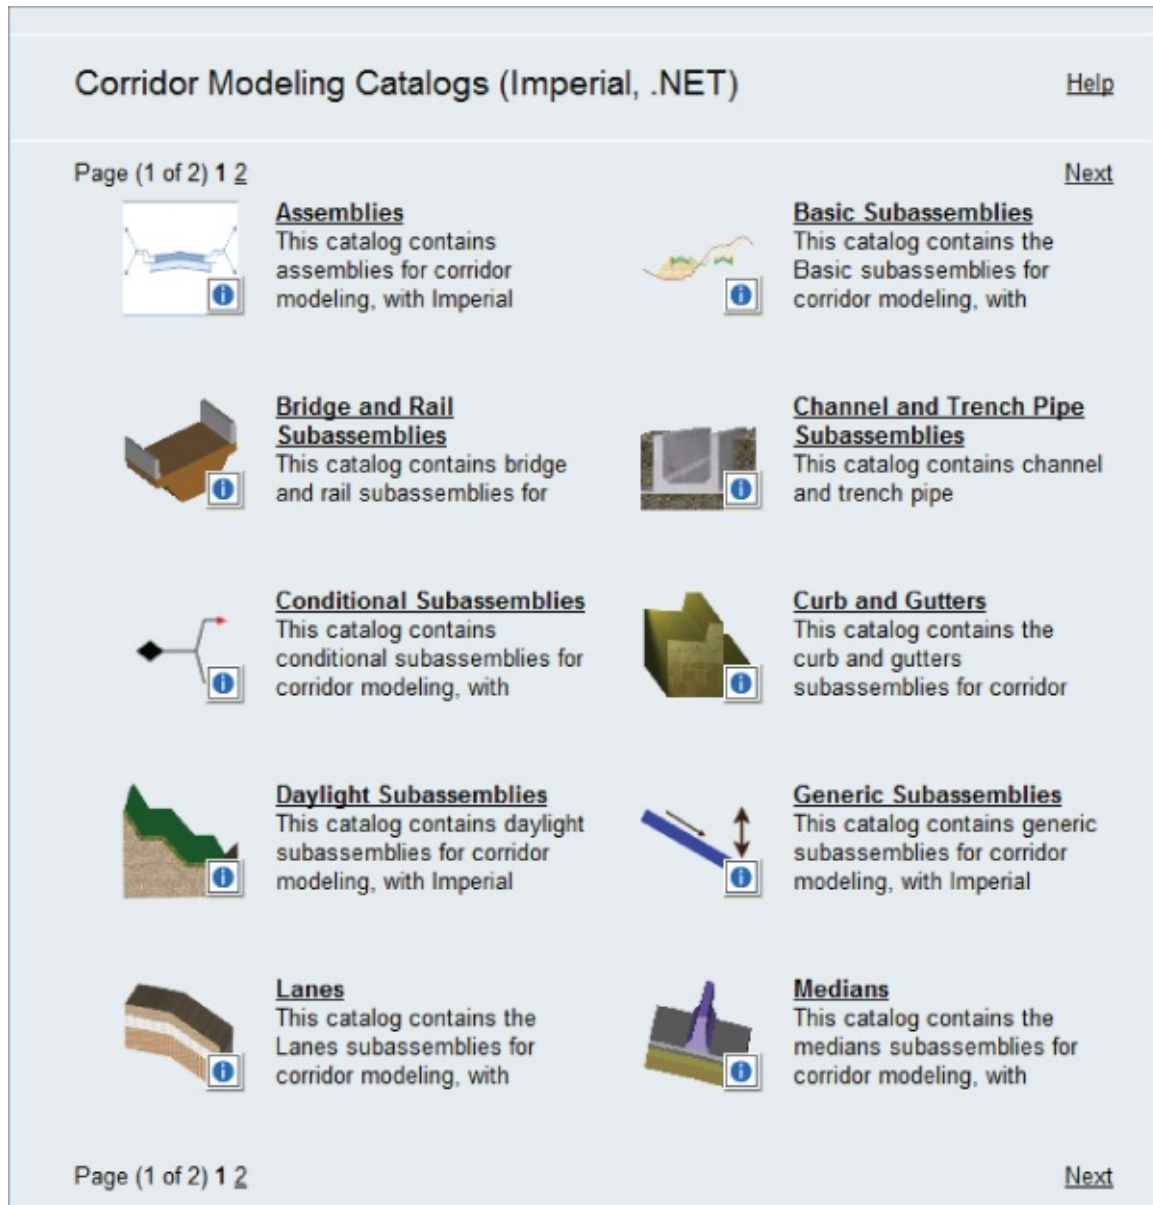
The Corridor Modeling Catalogs

All of the assemblies and subassemblies that ship with Civil 3D are included in the Tool Palettes

window. However, if any mysteriously disappear, they can be reloaded from the Content Browser.


 The Corridor Modeling Catalogs are installed by default on your local hard drive in C:\ProgramData\Autodesk\C3D 2015\enu\Tool Catalogs\Road Catalog\AutoCAD Civil 3D Imperial Corridor Catalog.atc or AutoCAD Civil 3D Metric Corridor Catalog.atc for metric users. You access it on the Home tab by expanding the Palettes panel and clicking the Content Browser button to open the Content Browser interface.

Choose either the metric or Imperial corridor catalogs to explore the entire collection of subassemblies available in each category (see [Figure 8.2](#)).



[Figure 8.2](#) The front page of the Corridor Modeling Catalog

Adding Subassemblies to a Tool Palette

 To add subassemblies to your Tool Palettes window, you can use the i-drop to grab subassemblies from the catalog and drop them onto the Tool Palettes window. To use the i-drop, follow these steps:

1. Click the small blue i next to any subassembly, and continue to hold down your left mouse button until you're over the desired tool palette.
2. Release the button, and your subassembly should appear on the tool palette (see [Figure 8.3](#)).

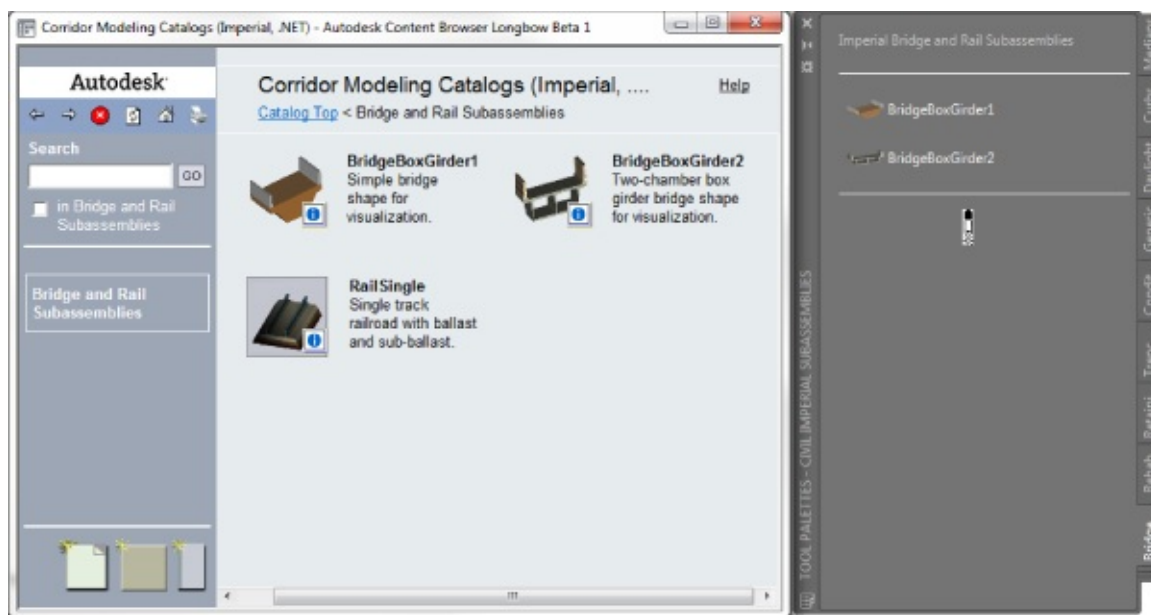


Figure 8.3 Using the i-drop to add the RailSingle subassembly to a tool palette

Accessing Subassembly Help

Later, this chapter will point out other shortcuts to access the extensive subassembly documentation. You can get quick access to information by right-clicking any subassembly entry on the Tool Palettes window or the Corridor Modeling Catalog page and selecting the Help option.

The Subassembly Reference page in the help file provides a detailed breakdown of each subassembly, examples for its use, its parameters, a coding diagram, and more. While you're searching the catalog for the right subassemblies to use, you'll find the Subassembly Reference page quite useful.

Building Assemblies

You build an assembly from the Home tab ➤ Create Design panel by choosing Assembly ➤ Create Assembly and selecting an insertion point in the graphic. The result is the main assembly baseline marker. This is the point on the assembly that gets attached to your design alignment and profile. A typical assembly baseline is shown in [Figure 8.4](#).

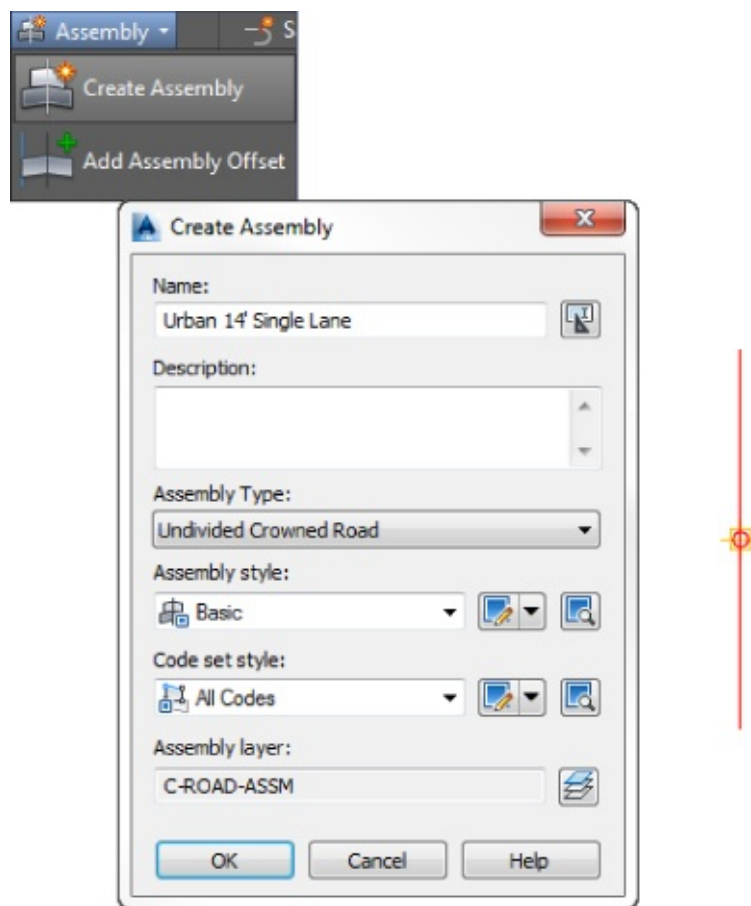


Figure 8.4 Creating an assembly (left); an assembly baseline marker (right)

When an assembly is created, you have the option of telling Civil 3D what type of assembly this will be:

- Undivided Crowned Road
- Undivided Planar Road
- Divided Crowned Road
- Divided Planar Road
- Railway
- Other

These categories will help the software determine the axis of rotation options in superelevation, if needed.

Once an assembly is created and assigned a type, you start piecing it together using various subassemblies to meet your design intent. In the next section we will look at how you can create a simple and very common assembly type, an undivided crowned road.

Creating a Typical Road Assembly

The process for building an assembly requires the use of the Tool Palettes window (accessible using Ctrl+3) and the AutoCAD Properties palette (accessible using Ctrl+1), both of which can be docked. You'll quickly learn how to best orient these palettes with your limited screen real estate. If you run dual monitors, you may find it useful to place both of these palettes on your second monitor.

The exercise that follows builds a typical assembly, as shown in [Figure 8.5](#), using LaneSuperelevationAOR, UrbanCurbGutterGeneral, UrbanSidewalk, and DaylightMaxOffset

subassemblies.

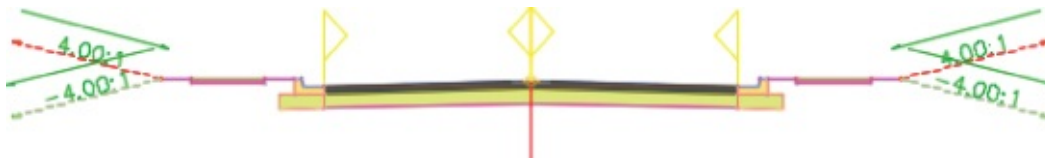


Figure 8.5 A typical road assembly

Let's have a more detailed look at each component you'll use in the following exercise. A quick peek into the subassembly help file will give you a breakdown of attachment options; input parameters; target parameters; output parameters; behavior; layout mode operation; and the point, link, and shape codes.

The LaneSuperelevationAOR Subassembly The LaneSuperelevationAOR subassembly is an all-purpose subassembly for lanes. It can superelevate for an inside or outside lane if needed and allows for up to four layers of materials. The input parameters available are Side, Width, Default Slope, Pave1 Depth, Pave2 Depth, Base Depth, Subbase Depth, Use Superelevation, Slope Direction, Potential Pivot, Inside Point Code, and Outside Point Code. The default width of 12' (3.6 m) can be adjusted in the Parameters section of the Properties palette or can be overridden with an offset alignment, feature line, or polyline to control its width. [Figure 8.6](#) shows the image provided in the subassembly help file for this subassembly.

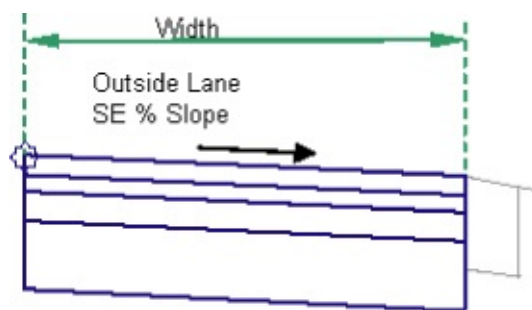


Figure 8.6 LaneSuperelevationAOR subassembly help diagram

The UrbanCurbGutterGeneral Subassembly The UrbanCurbGutterGeneral subassembly is another standard component that creates an attached curb and gutter. Looking into the subassembly help file, you'll see a diagram of UrbanCurbGutterGeneral with input parameters for Side, Insertion Point, Gutter Slope Method, Gutter Slope, Gutter Slope Direction, Subbase Depth, Subbase Extension, Subbase Slope Method, Subbase Slope, and the subassembly's seven dimensions. You can adjust these parameters to match many standard curb-and-gutter configurations. [Figure 8.7](#) shows the image provided in the subassembly help file for this subassembly.

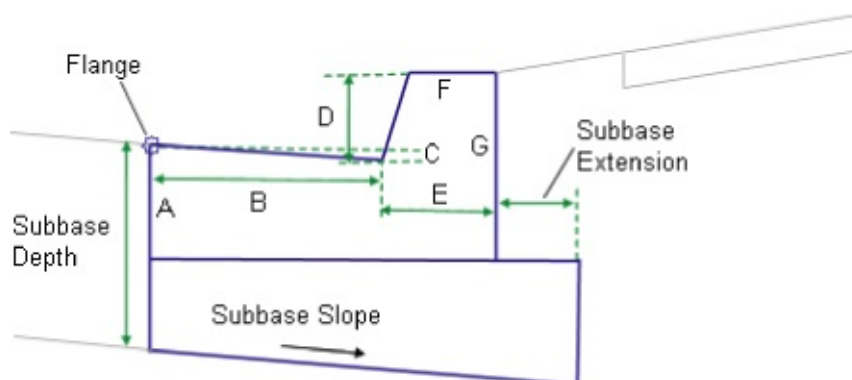


Figure 8.7 UrbanCurbGutterGeneral subassembly help diagram

The UrbanSidewalk Subassembly The UrbanSidewalk subassembly creates a sidewalk and terrace

buffer strips. The help file lists the following six input parameters for the UrbanSidewalk subassembly: Side, Inside Boulevard Width, Sidewalk Width, Outside Boulevard Width, Slope, and Depth. These input parameters let you adjust the sidewalk width, material depth, and buffer widths to match your design specification. [Figure 8.8](#) shows the image provided in the subassembly help file for this subassembly.

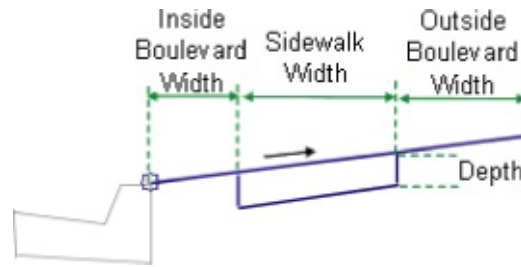


Figure 8.8 UrbanSidewalk : subassembly help diagram

The UrbanSidewalk subassembly can return quantities of concrete (or other sidewalk construction material) but not gravel bedding or other advanced material layers. If you needed to track these materials, you could use generic subassemblies (covered later in this chapter) or build a custom subassembly using Subassembly Composer (covered in the bonus chapter, “Custom Subassemblies”).

The DaylightMaxOffset Subassembly The DaylightMaxOffset subassembly is a nice “starter” for creating simple, single-slope daylight instructions for your corridor. In Civil 3D, an offset dimension is measured from the baseline, and a width is measured from the attachment point. Therefore, the maximum offset in our example is measured from the centerline of the road, which is the baseline. The slope will attempt a default of 4:1, but it will adjust if it needs to in order to keep inside your specified maximum offset (such as a right-of-way line). Options are also available for rounding. [Figure 8.9](#) shows the image provided in the subassembly help file for this subassembly.

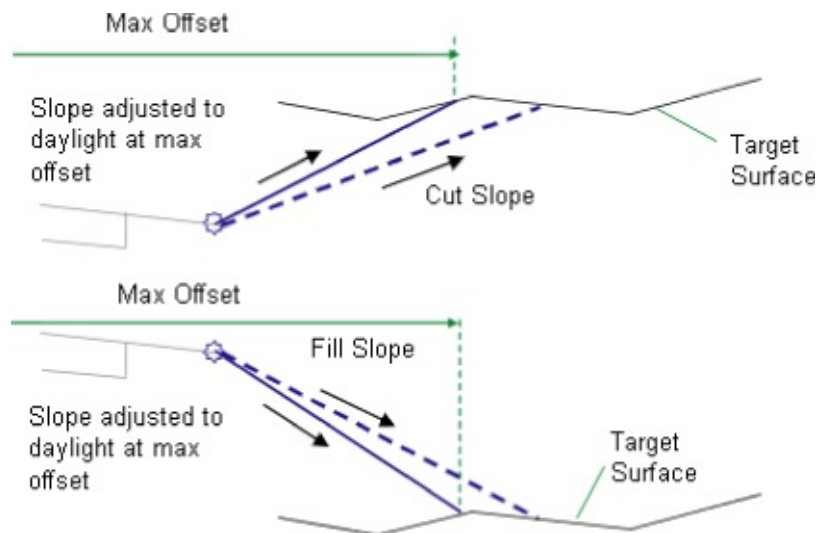


Figure 8.9 DaylightMaxOffset : subassembly help : diagram for the cut scenario

What's With the Funny Names?

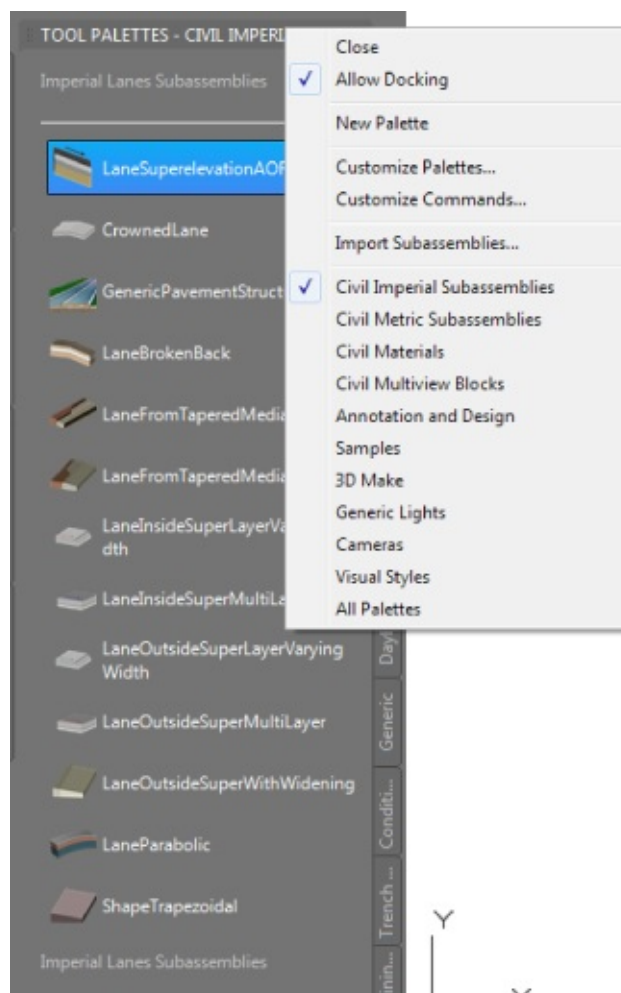
You'll notice that all subassemblies have names with no spaces. This is because of the underlying .NET coding that makes up a subassembly. When you place one of these in your project, it will retain the name from the tool palette.

Prior to Civil 3D 2013, each subassembly was required to have a unique name; therefore, it was suffixed with a number. This is no longer the case. Nonetheless, later in this chapter you'll see how to rename them to something more user friendly if you so desire.


In the following exercise, you'll build a typical road assembly using the subassemblies discussed previously. Follow these steps:

1. Start a new blank drawing from the `_AutoCAD Civil 3D (Imperial) NCS` template that ships with Civil 3D. Metric users can use the `_AutoCAD Civil 3D (Metric) NCS` template.
2. Confirm that your Tool Palettes window is showing the subassembly set appropriate for your drawing units (imperial or metric).

If you need to change your active Tool Palettes window from metric to Imperial or vice versa, right-click the Tool Palettes control bar located at the top of the window if docked ([Figure 8.10a](#)) or on the opposite edge of the palette from the tabs if undocked ([Figure 8.10b](#)).



(a)

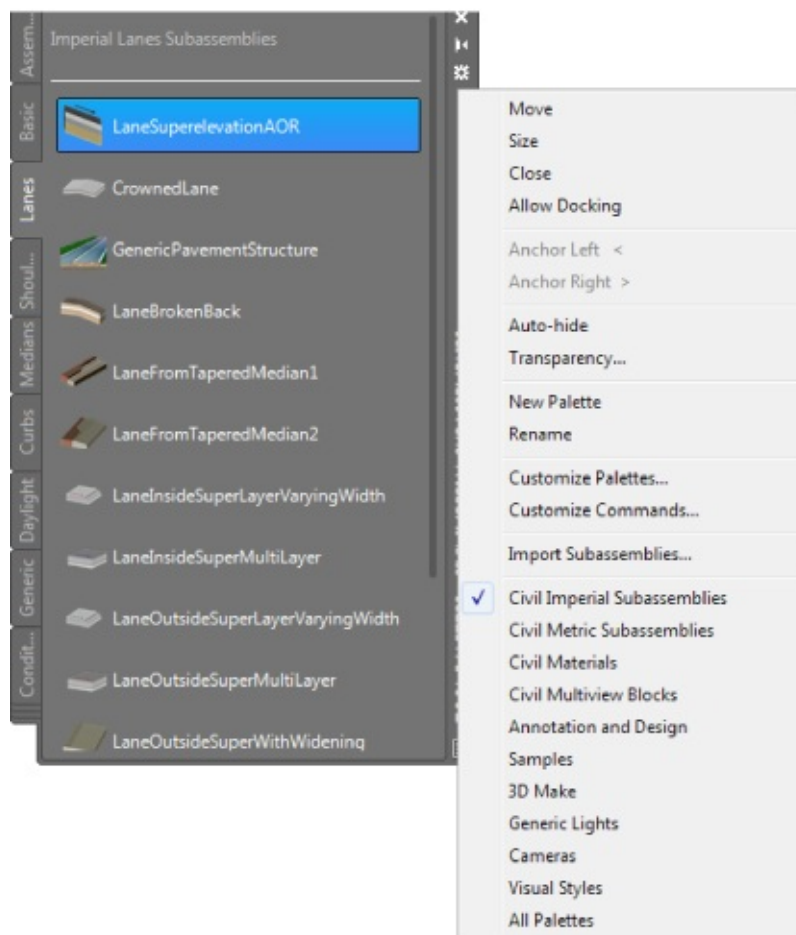

(b)

Figure 8.10 Right-click the Tool Palettes control bar to change assembly sets if needed.

3. Verify that your drawing scale is set to 1=10' (1:50 for metric users).
4. From the Home tab ➤ Create Design panel, choose Assembly ➤ Create Assembly.
The Create Assembly dialog opens.
5. In the Create Assembly dialog, follow these steps:
 - a. Enter **Urban 14' Single-Lane** (or **Urban 4.5 m Single-Lane**) in the Name text box.
 - b. Set Assembly Type to Undivided Crowned Road.
 - c. Confirm that Assembly Style is set to Basic and Code Set Style is set to All Codes, and click OK.
6. Pick a location in your drawing to place your red assembly baseline marker. The program will automatically zoom you into the assembly.
7. Locate and select the Lanes tab on the Tool Palettes window.
Position the palette on your screen so that you can clearly see the assembly baseline.
8. Click the LaneSuperelevationAOR button on the Tool Palettes window.
The AutoCAD Properties palette appears (if it is not already open).
9. Locate the Advanced Parameters section on the Design tab of the AutoCAD Properties palette ([Figure 8.11](#)).

ADVANCED		-
Parameters		-
Lane Slope	-2.00%	
Lane Width	14.000	
Version	R2013	
Superelevation Axis of Rotation	Supported	
Side	Right	
Width	14.00'	
Default Slope	-2.00%	
Pave1 Depth	0.08'	
Pave2 Depth	0.08'	
Base Depth	0.33'	
Sub-base Depth	1.00'	
Use Superelevation	None	
Slope Direction	Away from Crown	
Potential Pivot	Yes	
Inside Point Code	Crown	
Outside Point Code	Edge of Pavement(ETW)	

Figure 8.11 Advanced Parameters on the Properties palette

This section lists the LaneSuperelevationAOR parameters.

10. Change the Width parameter to **14' (4.5 m)**.
Your Properties palette should resemble [Figure 8.11](#).
11. At the Select marker point within assembly or [Insert Replace Detached]: prompt, select anywhere on the red assembly baseline marker to place the first lane.
Note that it is placed on the right side as specified in the Advanced Parameters section.

2. Before ending the command, click the red assembly baseline marker again to place the left lane.
For most subassemblies, Civil 3D has the intelligence to automatically detect the side and place a subassembly on the appropriate side regardless of what is specified in the Advanced Parameters.
3. Press **↵** to end the command.
4. Switch to the Curbs tab in the Tool Palettes window.
5. Click the UrbanCurbGutterGeneral button on the Tool Palettes window.
6. You will accept the parameter defaults, so no changes are needed. Remember that the Side parameter will automatically be detected, so there is no need to change it.
7. At the Select marker point within assembly or **[Insert Replace Detached]:** prompt, select the circular marker located at the top right of the LaneSuperelevationAOR subassembly located on the right side of the assembly.

This marker represents the top-right edge of pavement (see [Figure 8.12](#)).

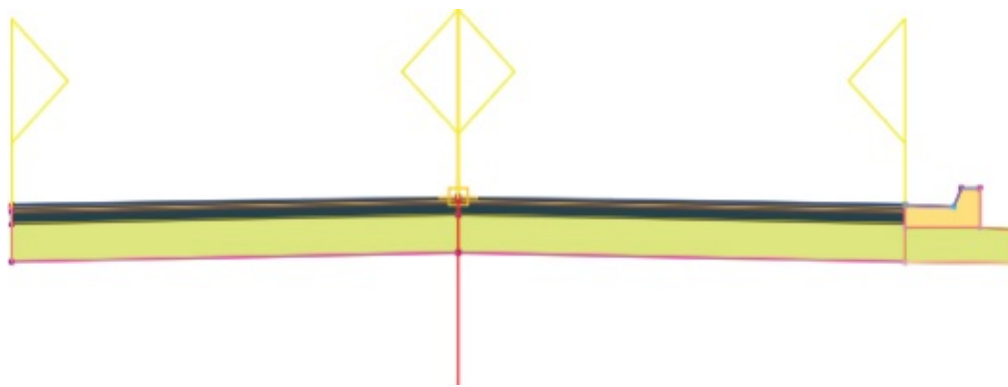


Figure 8.12 UrbanCurbGutterGeneral subassembly placed on the LaneSuperelevationAOR subassembly

8. Press **↵** to end the command.

You will add the left curb later. Keep this drawing open for the next portion of the exercise.

If You Goof...

Often, the first instinct when a subassembly is misplaced is to undo or erase the wayward piece. However, if you have spent a lot of time diligently tweaking parameters, there is a way to fix things without redoing the subassembly.

Moving a Subassembly

Select the errant subassembly component and use the Move option from the Subassembly contextual tab > Modify Subassembly panel. Use this instead of the base AutoCAD Move tool to get the best results. Using regular AutoCAD Move may cause unexpected results in the corridor. The subassembly move command does not require a base point. It will prompt you to select the marker point where the assembly should have been placed.

Inserting a Subassembly

Sometimes you forget to place a subassembly component, or your design changes and you want to include a subassembly that wasn't there before. Prior to Civil 3D 2013, you had to delete the subassembly components from the outside in until you got to where you wanted to insert your missing subassembly and then had to re-create the deleted subassembly pieces.

In this version of Civil 3D, you may have noticed that every time you place an assembly the command line states `Select marker point within assembly or [Insert Replace Detached]:`. If you enter **I**, the command line will state `Select the subassembly to insert after or [Before]:`. The ability to insert a subassembly will come in handy when the planner decides to add a sidewalk at the shoulder of your road.

Replacing a Subassembly

Similar to the insert operation, you can also replace a subassembly component with another component. Again, you will find this very helpful when the planner decides to make changes to your design.

Deleting a Subassembly

To delete a subassembly component, you can simply select the subassembly component and press the Delete key. The assembly will connect the subassemblies on either side at the connection points previously used with the deleted component.

Changing Subassembly Parameters

If you placed everything correctly but forgot to change a parameter or two, there's an easy fix for that, too. Cancel out of any active subassembly placement and select the subassembly you wish to change. Most subassembly parameters can be changed from the AutoCAD Properties palette. For more heavy-duty modifications (such as specifying the side), you will want to get into the Subassembly Properties discussed later in this chapter.

19. In the Curbs tab, click the UrbanSidewalk button on the Tool Palettes window.
20. In the Advanced Parameters area of the AutoCAD Properties palette, change the following parameters, leaving all other parameters at their default values:
 - Sidewalk Width: **5' (1.5 m)**
 - Inside Boulevard Width: **2' (0.7 m)**
 - Outside Boulevard Width: **2' (0.7 m)**

It may be hard to ignore the Side parameter, but setting it is not required with Civil 3D side autodetection.
21. At the `Select marker point within assembly or [Insert Replace Detached]:` prompt, select the circular marker on the UrbanCurbGutterGeneral subassembly that represents the top rear of the curb to attach the UrbanSidewalk subassembly (see [Figure 8.13](#)).

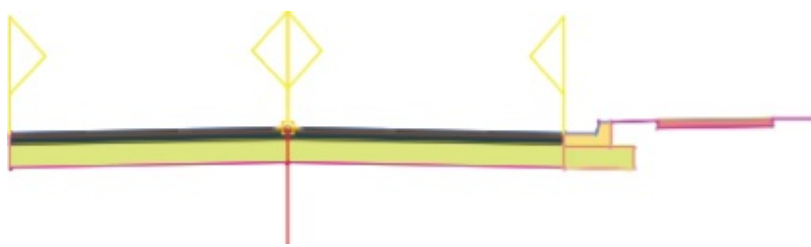


Figure 8.13 BasicSidewalk : subassembly placed on the UrbanCurbGutterGeneral subassembly

22. Switch to the Daylight tab on the subassemblies Tool Palettes window, and select the DaylightMaxOffset subassembly.
23. In the Advanced Parameters area of the AutoCAD Properties palette, change Max Offset From Baseline to **50' (17 m)**, leaving all other parameters at their default values.
24. At the Select marker point within assembly or [**I**nset **R**eplace **D**etached]: prompt, select the circular marker on the outermost point of the sidewalk subassembly. Press Enter or Esc to complete the command.

Your drawing should now resemble [Figure 8.14](#).

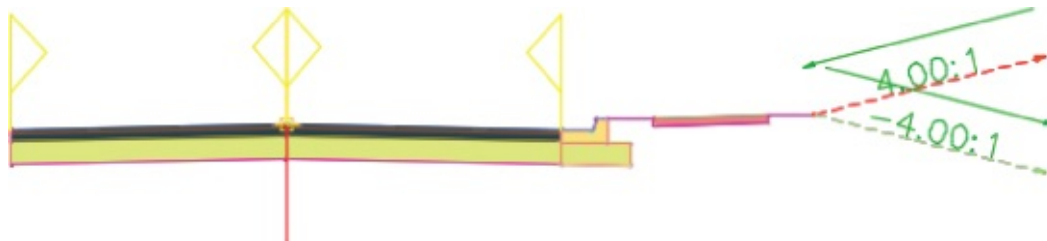


Figure 8.14 The completed right side of the assembly with DaylightMaxOffset

To complete the left side, you will use the Mirror Subassemblies command.

25. Select the curb, sidewalk, and daylight subassemblies on the right side of the baseline. The Subassembly contextual tab will show a variety of tools, including Mirror ([Figure 8.15](#)).

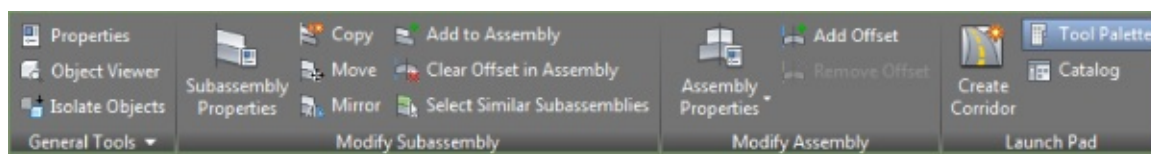


Figure 8.15 The Subassembly contextual tab with subassembly modification tools

Assembly Labels

You may notice the 4.00:1 label shown in [Figure 8.14](#). These labels are governed by the code set style, which in this exercise is set to All Codes. If you would like to add this label or other labels, follow these simple steps:

1. Switch to the Settings tab in Toolspace.
2. Expand the General > Multipurpose Styles > Code Set Styles branch.
3. Right-click All Codes and select Edit to display the Code Set Style – All Codes dialog.
4. On the Codes tab, locate the Link branch.
5. In the Label Style column of the Daylight link row, click the Style button to display the Pick Style dialog.

You may need to widen the column headings in order to view the full names.

6. Use the drop-down list to select Steep Grades.
7. Click OK to dismiss the Pick Style dialog.
8. Click OK to dismiss the Code Set Style – All Codes dialog.

Now all Daylight links in any assembly that uses the All Codes code-set style will display a grade label. You may find it helpful to provide other labels on your subassemblies to be able to easily differentiate visually between the assemblies that are similar. For example, now you can tell the difference between the assembly that uses the 4:1 daylight and the one that uses the 5:1 daylight.

26. From the Subassembly contextual tab > Modify Subassembly panel, choose Mirror, and then click the circular point marker located at the top left of the left LaneSuperelevationAOR subassembly.
27. Your assembly should now resemble [Figure 8.5](#) from earlier in the chapter.

You have now completed a typical road assembly.

A finished copy of this drawing is available from the book's web page (0801_TypicalRoadAssembly_FINISHED.dwg or 0801_TypicalRoadAssembly_METRIC_FINISHED.dwg).

Subassembly Components

A subassembly is made up of three basic parts: *links*, *marker points*, and *shapes*, as shown in [Figure 8.16](#). Each piece plays a role in your design and is used for different purposes at each stage of the design process.

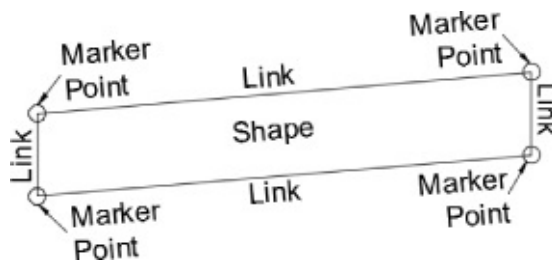


Figure 8.16 Schematic showing parts of a subassembly

Links

Links are the linear components to your assembly. A link usually represents the outer edges of a subassembly but can also be used as a spacer between subassemblies.

Links can have codes assigned to them that help Civil 3D identify stratum, materials, and shapes. One link may have several codes assigned to it. For example, the sidewalk subassembly contains a four-sided trapezoid. Each side of the trapezoid is a link. All four links have a sidewalk code assigned so that cross-sectional area of the concrete can be calculated. The bottom, left, and right links of the trapezoid each have an additional datum code assigned, while the top link has an additional top code assigned. Top and datum codes are used to build surfaces. Coded links will be your primary source of data when creating proposed surfaces from your corridors.

As shown in [Figure 8.17](#), the inner and outer boulevard width links are coded top, sod, and datum.

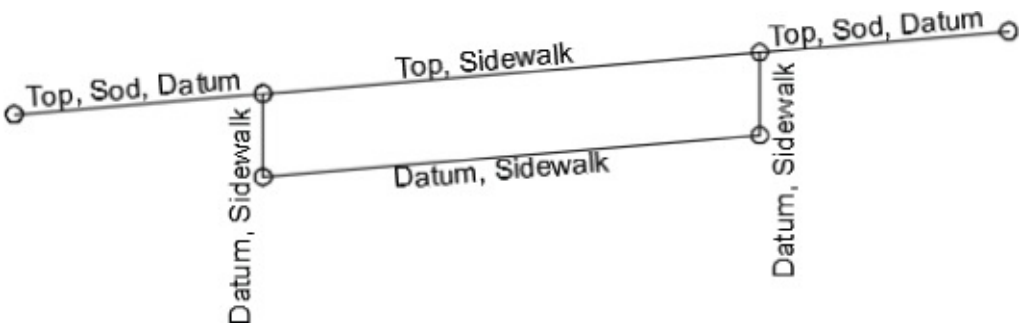


Figure 8.17 Link codes on the UrbanSidewalk subassembly

Marker Points

Marker points are located at the endpoints of every link and usually are depicted by the circles you see on the subassemblies. As you experienced in the previous exercise, the markers are used in assembly creation to “click” subassemblies together and will also “hook” to attach to alignments and/or profiles, known as *targets*.

Marker points are also coded and responsible for generating linework in your corridor. In [Figure 8.18](#), notice the two coded markers representing each side of the sidewalk. When assemblies are inserted into a corridor, Civil 3D will play connect the dots with each code in between each occurrence of the assembly. In the case of the UrbanSidewalk, linework will be created by connecting the Sidewalk_In point codes and the Sidewalk_Out point codes. We will revisit how a corridor is built in Chapter 9, “Basic Corridors.”



Figure 8.18 Point codes on the UrbanSidewalk

Shapes

Shapes are the areas inside a closed formation of links. For example, [Figure 8.19](#) shows the UrbanSidewalk, which contains one shape. Shapes are used in end-area material quantity calculations. At the time an assembly is created, you do not need to consider what materials these shapes represent. After your corridor is complete, you can specify what materials the codes represent upon computing materials.



Figure 8.19 Shape codes on the UrbanSidewalk subassembly

Jumping into Help

Each subassembly is capable of accomplishing different tasks in your design. There is no way to tell just by looking at the icon all the acrobatics that an assembly can do. For a detailed rundown of each parameter and what can be done with a subassembly, you will need to pop into the help files.

Subassembly Help is extremely...well, helpful! There are many doors into the help files, including from the Corridor Modeling Catalog as you saw earlier. Another way to access the help files is to right-click any subassembly in the tool palette and select Help, as shown in [Figure 8.20](#).

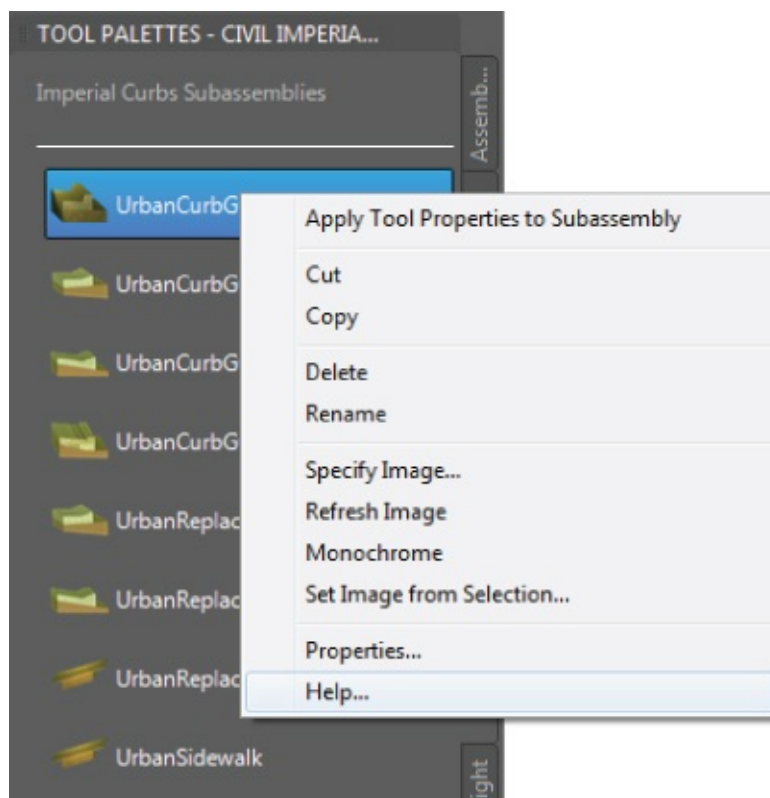


Figure 8.20 Getting to the subassembly help file for UrbanCurbGutterGeneral

Attachment and Input Parameters

When you access Subassembly Help using one of the methods described in the sidebar “Accessing Subassembly Help,” it will take you to the help file specific to the subassembly you are working with. At the top, you will see a diagram showing the location of the numeric parameters that can be edited in the Properties palette, as shown in [Figure 8.21](#).

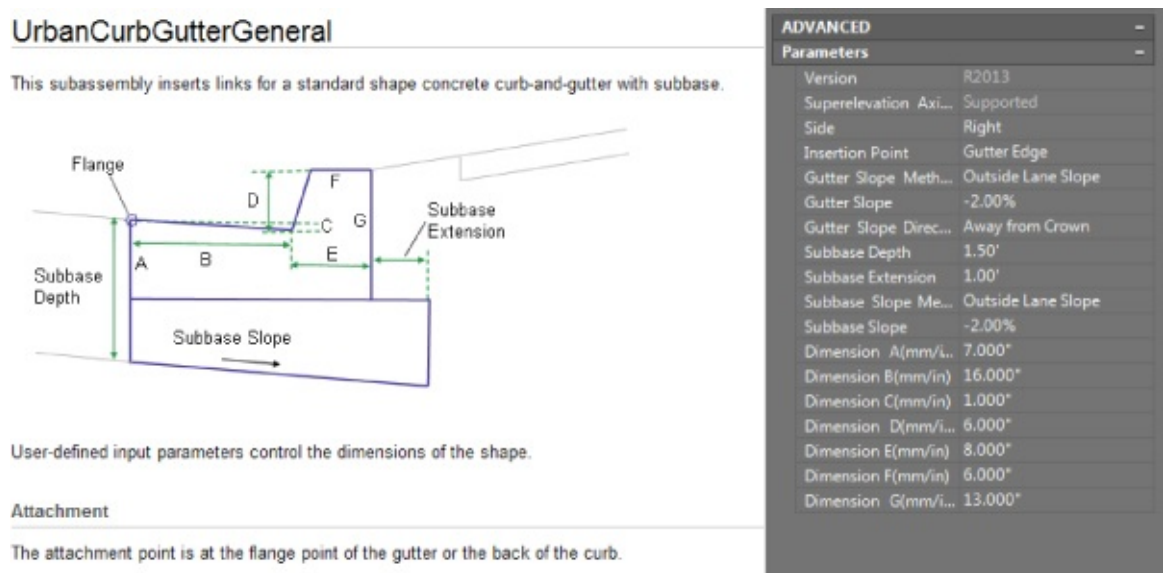


Figure 8.21 The top portion of Subassembly Help shown with subassembly parameters

For most subassemblies, the default attachment point will be the topmost-inside marker point. The help file will tell you if this differs for the subassembly you are looking at. Scroll farther down to see detailed explanations of each input parameter.

Target Parameters

The Target Parameters section is a list of what attachments can be set for a subassembly. There are three types of targets: a target surface, a target elevation, and a target offset. The help file will also tell you whether the target is optional or required. We will look at target parameters and setting targets in Chapter 9.

Output Parameters

Output parameters are values calculated when the corridor is built, such as the cross-slope of a lane. In several subassemblies, there is an advanced option called Parameter Reference that can use an output parameter from a previous subassembly in the assembly instead of using the value entered in the subassembly properties. We discuss this concept further in the bonus chapter, “Custom Subassemblies,” available on this book's web page.

Reading a Coding Diagram

The coding diagram gives you a list of all the codes used on the subassembly you are working with. Every coded point, link, and shape are listed here. Not all subassembly components have explicit names, such as L9 shown in [Figure 8.22](#). If the point, shape, or link is not included in the table, it is considered uncoded.

Point / Link	Code	Description
P1	Flange	Flange point of the gutter
P2	Flowline_Gutter	Gutter flowline point
P3	TopCurb	Top-of-curb
P4	BackCurb	Back-of-curb
L1 – L3	Top, Curb	Finish grade on the curb and gutter
L7	Subbase Datum	
S1	Curb	Curb-and-gutter concrete area
S2	Subbase	

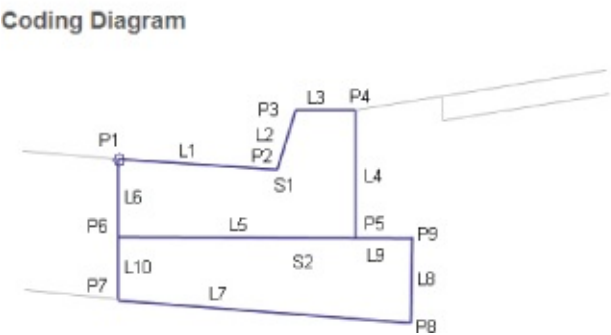


Figure 8.22 Coding diagram and name table for UrbanCurbGutterGeneral

Commonly Used Subassemblies

Once you gain some skills in building assemblies, you can explore the subassembly tool palettes to find subassemblies that have more advanced parameters so that you can get more out of your corridor model. For example, if you must produce detailed schedules of road materials such as asphalt, coarse gravel, fine gravel, subgrade material, and so on, the catalog includes lane subassemblies that allow you to specify those thicknesses for automatic volume reports.

The following sections include some examples of different components you can use in a typical road assembly. Many more alternatives are available within the subassembly tool palettes provided in the software. The help file provides a complete breakdown of each subassembly provided; you'll find this

useful as you search for your perfect subassembly.

Each of these subassemblies can be added to an assembly using the same process specified in the first exercise in this chapter. Choose your alternative subassembly instead of the basic parts specified in the exercise, and adjust the parameters accordingly.

Common Lane Subassemblies

The LaneSuperelevationAOR subassembly is suitable for many roads, including undivided roads, as shown in the previous example, and divided roads as shown in [Figure 8.23](#). However, you may need different road lane configurations for your locality or design situation.


LaneParabolic The LaneParabolic subassembly ([Figure 8.24](#)) is used for road sections that require a parabolic lane in contrast to the linear grade of LaneSuperelevationAOR. The LaneParabolic subassembly also adds options for four material depths. This is useful in jurisdictions that require two lifts of asphalt, base material, and sub-base material; taking advantage of these additional parameters gives you an opportunity to build corridor models that can return more detailed quantity takeoffs and volume calculations.

Note that the LaneParabolic subassembly doesn't have a Side parameter. The parabolic nature of the component results in a single attachment point that would typically be the assembly centerline marker.


LaneBrokenBack For designs that call for two lanes, and those lanes must each have a unique slope, the LaneBrokenBack subassembly ([Figure 8.25](#)) can be used. This subassembly provides parameters to change the road-crown location and specify the width and slope for each lane. Like LaneParabolic, the LaneBrokenBack subassembly provides parameters for additional material thicknesses.



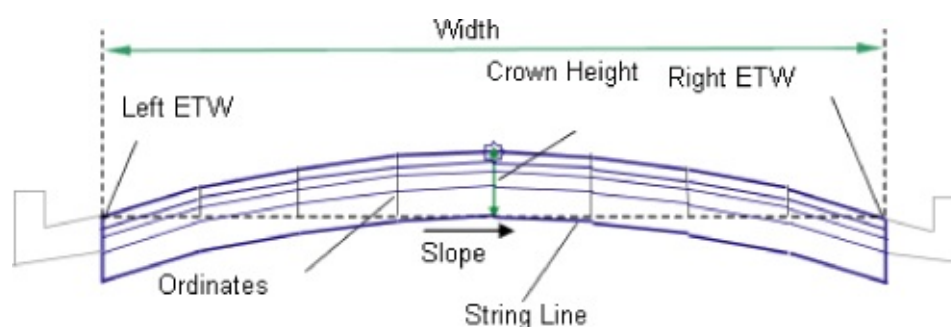[Figure 8.23](#) LaneSuperelevationAOR in a divided highway



[Figure 8.24](#) The LaneParabolic subassembly help diagram

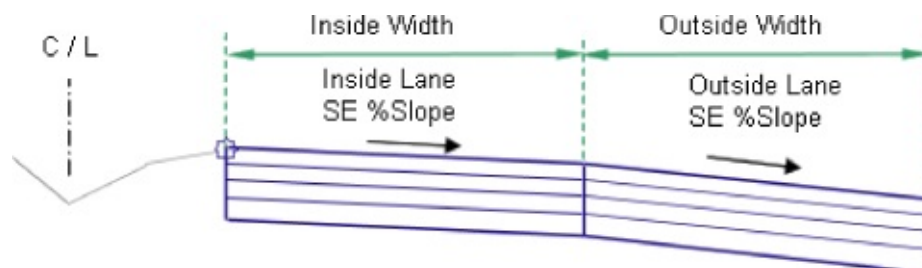


[Figure 8.25](#) The LaneBrokenBack subassembly and parameters

The LaneBrokenBack subassembly, like LaneSuperelevationAOR, allows for the use of target alignments and profiles to guide the subassembly horizontally and/or vertically for both of the lanes.


Common Shoulder and Curb Subassemblies

There are many types of curbs, and the UrbanCurbGutterGeneral subassembly can't model them all. Sometimes you may need a mountable curb, or perhaps you need a shoulder instead. In those cases, the Curbs tool palette provides many alternatives:

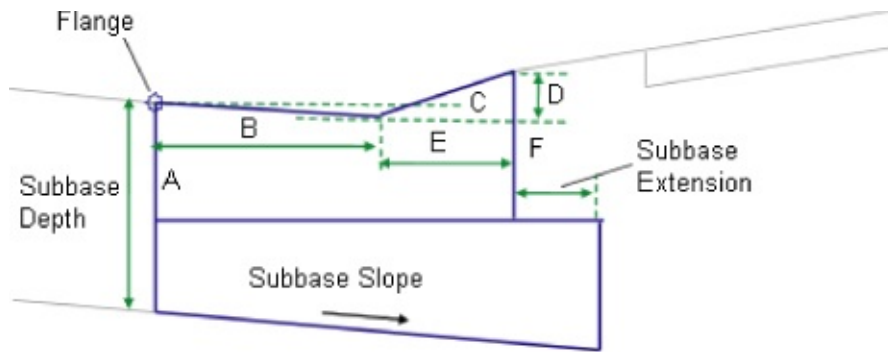
UrbanCurbGutterValley (1, 2, or 3) The UrbanCurbGutterValley subassemblies are great if you need mountable curbs. UrbanCurbGutterValley 1, 2, and 3, shown in [Figure 8.26](#), [Figure 8.27](#), and [Figure 8.28](#), respectively, vary slightly in how they handle the sub-base slope. UrbanCurbGutterValley 1 also differs because it comes to a point instead of offering a width at the top of curb.



[Figure 8.26](#) UrbanCurbGutterValley1 subassembly help diagram

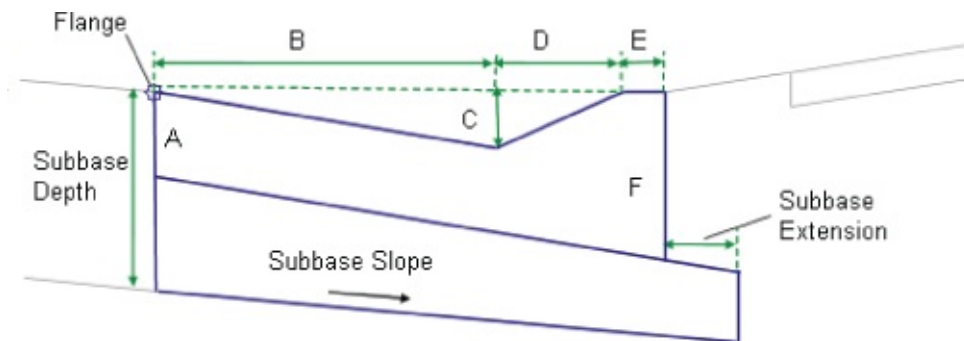

[Figure 8.27](#) UrbanCurbGutterValley2 subassembly help diagram

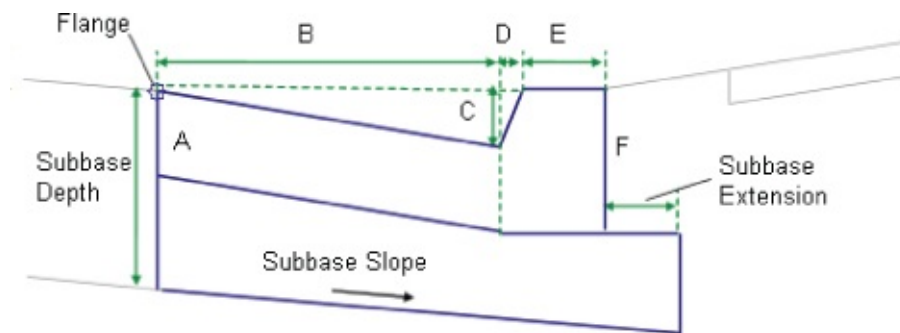

[Figure 8.28](#) UrbanCurbGutterValley3 subassembly help diagram

BasicShoulder BasicShoulder (see [Figure 8.29](#)) is another simple yet effective subassembly for use with road sections that require a shoulder. The predefined shape for this subassembly is called Pave1, which is useful if you are planning to treat this as a paved shoulder and include it in your material quantity calculations.

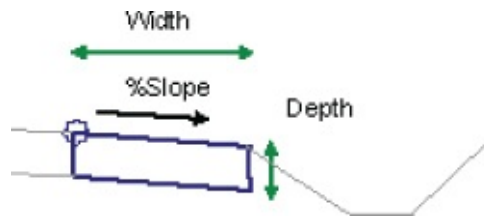


Figure 8.29 BasicShoulder subassembly help diagram

ShoulderExtendSubbase and ShoulderExtendAll Shoulders that can work with your lanes in a superelevation situation, as these two do, are extremely helpful. These two subassemblies, shown in [Figure 8.30](#), will “play nice” with your breakover-removal settings, as you will see in Chapter 11, “Superelevation.”

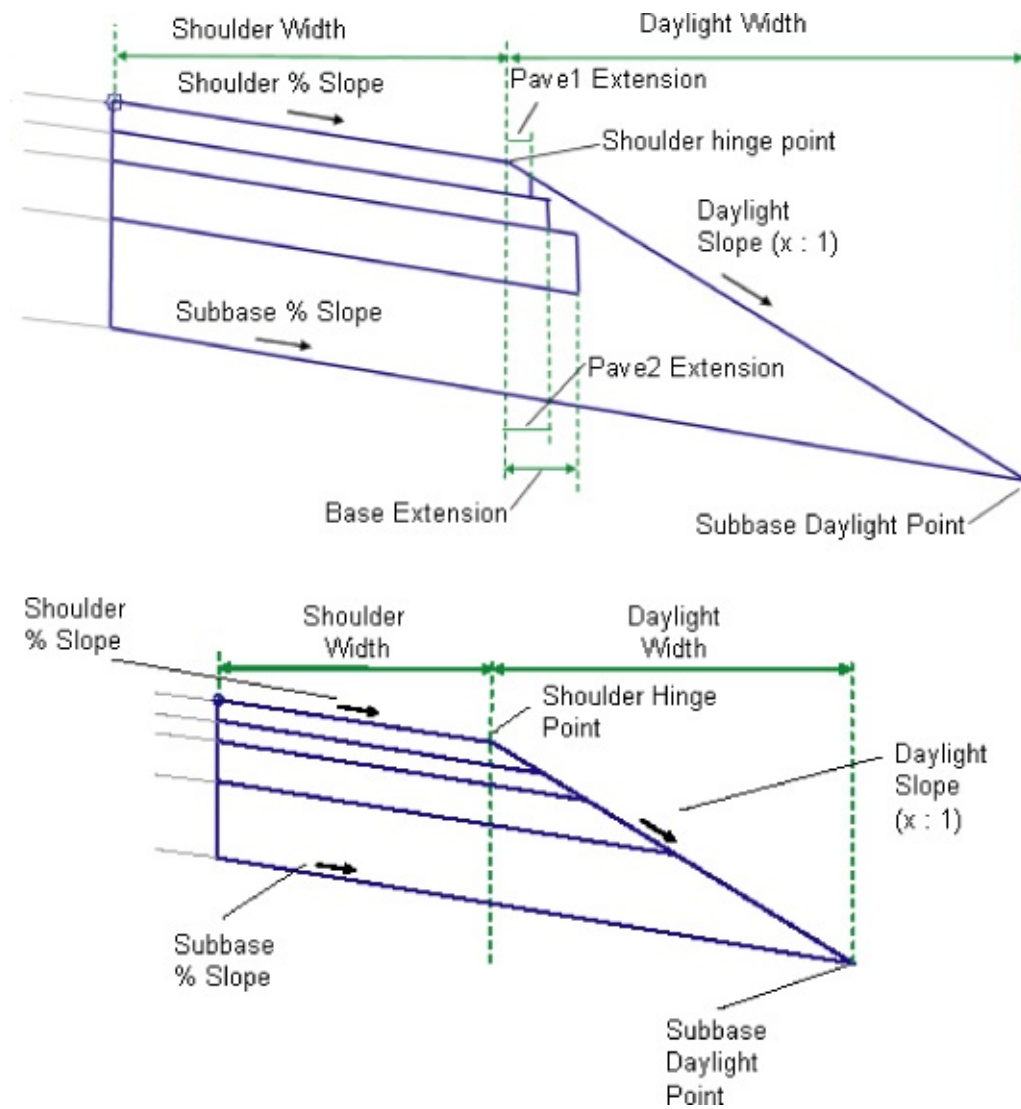


Figure 8.30 ShoulderExtendSubbase subassembly help diagram (top) and ShoulderExtendAll subassembly help diagram (bottom)

Editing an Assembly

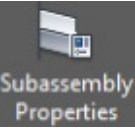
As you saw earlier in this chapter, the AutoCAD Properties palette is an option for changing subassembly parameters for one or more subassemblies of the same type. However, there are a handful of settings that can be controlled only in the Civil 3D Subassembly Properties dialog. For example, the side (left or right) is a parameter that must be changed in the Subassembly Properties dialog or on the Construction tab of the Assembly Properties dialog.

Editing a Single Subassembly's Parameters

Once your assembly is created, you can edit individual subassembly components as follows:

1. Pick the subassembly component you'd like to edit.

This will bring up the Subassembly contextual tab.



2. From the Subassembly contextual tab > Modify Subassembly panel, choose the Subassembly Properties option.

The Subassembly Properties dialog appears.

3. Switch to the Parameters tab, shown in [Figure 8.31](#), to access the same parameters you saw in the AutoCAD Properties palette when you first placed the subassembly.

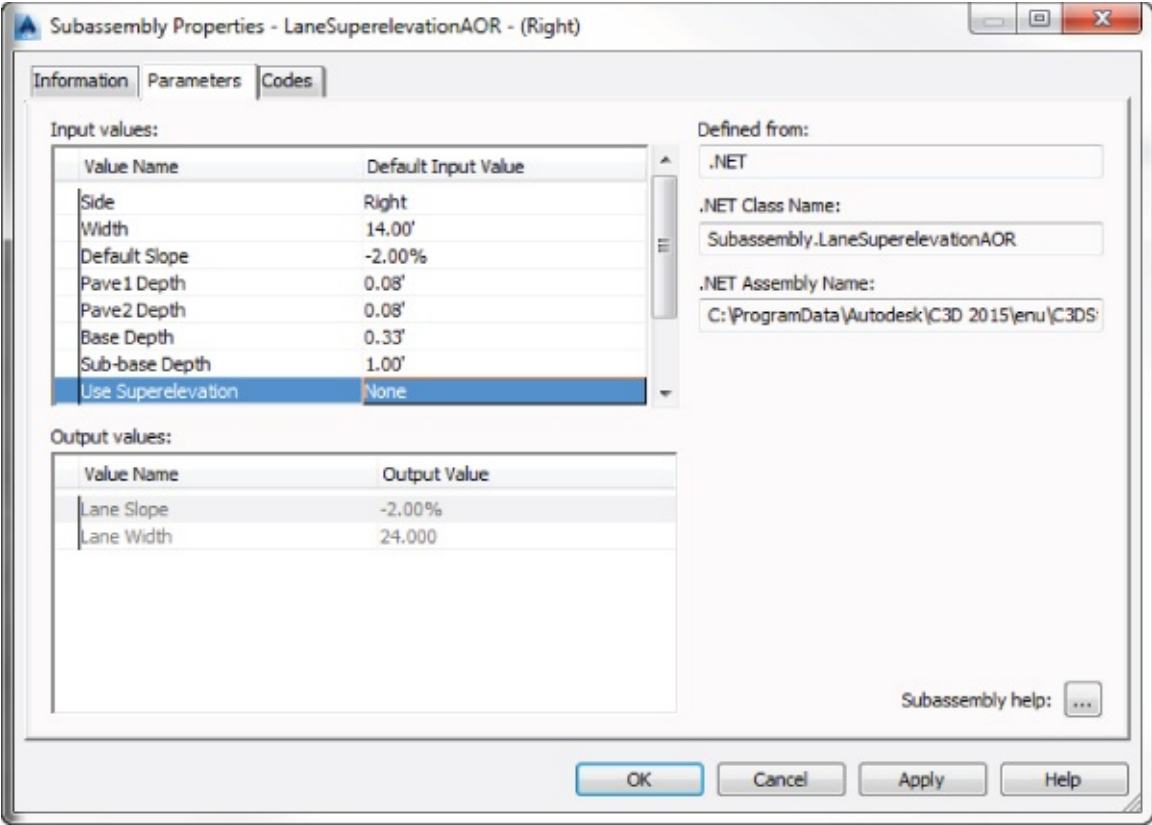


Figure 8.31 Subassembly Properties – Parameters tab

4. Click the Subassembly Help ellipsis button at the bottom right of the dialog if you want to access the help page that gives detailed information about the use of this particular subassembly.

Do not confuse the Subassembly Help ellipsis button with the plain Help button, which will just give you help on the Subassembly Properties dialog.

5. Close the help file when you've finished viewing it.
6. On the Parameters tab of the Subassembly Properties dialog, click inside any field in the Default Input Value column to make changes.

Editing the Entire Assembly



Sometimes it's more efficient to edit all the subassemblies in an assembly at once. To do so, pick the assembly baseline marker or any subassembly that is connected to the assembly you'd like to edit. This time, select the Assembly Properties option from the Modify Assembly panel of either the Subassembly or Assembly contextual tab to display the Assembly Properties dialog, shown in [Figure 8.32](#).

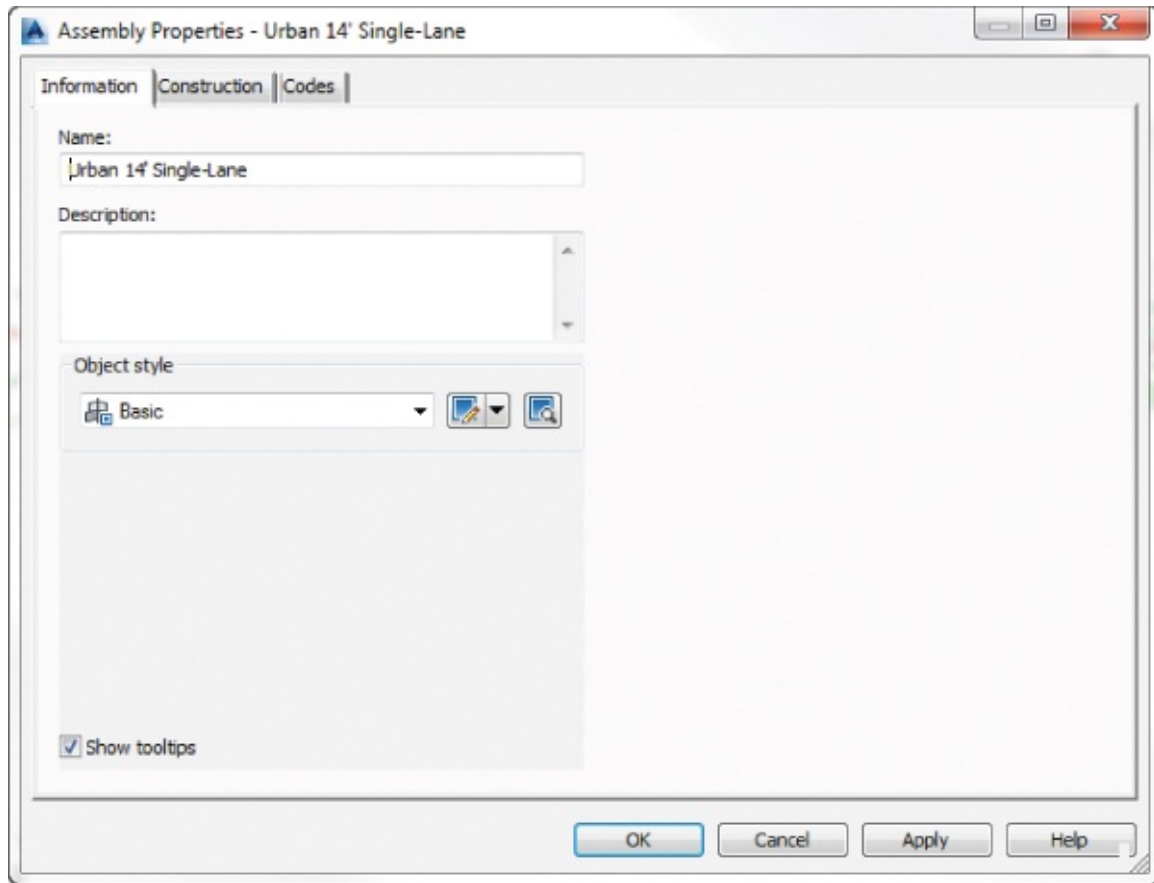


Figure 8.32 Assembly Properties – Information tab

Renaming the Assembly

The Information tab on the Assembly Properties dialog shown in [Figure 8.32](#) gives you an opportunity to rename your assembly and provide an optional description. It is good practice to be consistent and detailed in your assembly names (for example, **Divided 4-Lane 12' w Paved Shoulder**). With informative assembly names, you will eliminate much of the guesswork when it comes to building corridors later.

Changing Parameters

The Construction tab in the Assembly Properties dialog, as shown in [Figure 8.33](#), houses each subassembly and its parameters. At the top of the dialog you can change the Assembly Type setting using the drop-down list. In addition, you can change the parameters for individual subassemblies by selecting the subassembly in the Item pane on the left side of the Construction tab and changing the desired parameter in the Input Values pane on the right side.

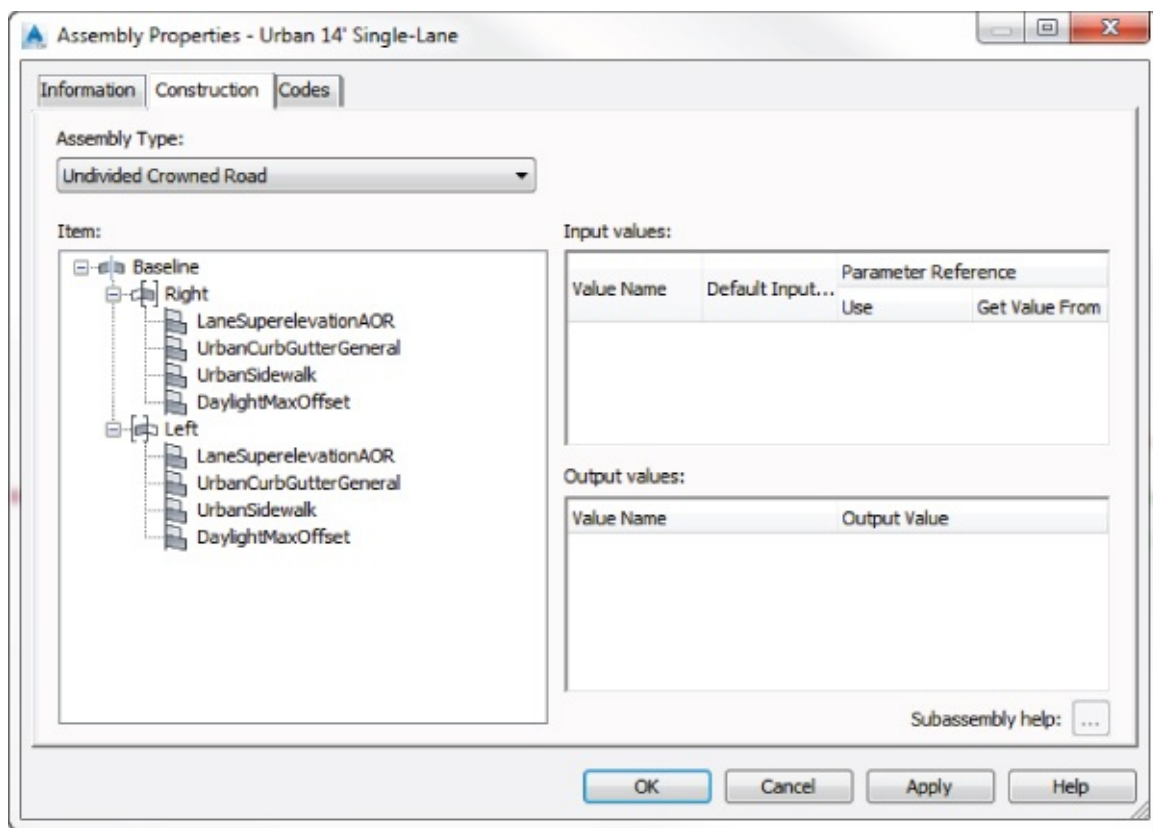


Figure 8.33 Assembly Properties – Construction tab

Renaming Groups and Subassemblies

Note that the left side of the Construction tab displays a list of groups. Under each group is a list of the subassemblies in use in your assembly. A new group is formed every time a subassembly is connected directly to the assembly baseline marker or an offset assembly is added.

With side autodetection, you will notice that the groups have already been named Right and Left with the appropriate symbol next to the group name, as shown in [Figure 8.33](#). The subassemblies in each group appear in the same order in which they were originally placed, usually from the inside out. The first subassembly under the Right group is LaneSuperelevationAOR. If you dig into its parameters on the right side of the dialog, you'll learn that this lane is attached to the right side of the assembly marker, the UrbanCurbGutterGeneral is attached to right side of the LaneSuperelevationAOR, and the UrbanSidewalk is attached to the right side of the UrbanCurbGutterGeneral. In this example, the next group, Left, is identical but attached to the left side of the assembly baseline marker.

Renaming to Include Left or Right?

The automatic naming conventions are somewhat simple but usually provide enough information. In previous editions of Civil 3D, many users would change the subassembly names to reference what side they were on; this approach was convenient so users did not have to dig into the subassembly parameters to determine which side of the assembly a certain group was on when it came time to attach targets to a corridor. However, since AutoCAD Civil 3D 2013, both the subassembly and the assembly group are listed in the Target Mapping dialog, as you will see in Chapter 9, so there is no longer any need to add the left or right information to the subassembly name.

If you want, you can rename any of the groups or subassemblies on the Construction tab of the Assembly

Properties dialog by right-clicking the group or subassembly you wish to rename and choosing Rename. From this same context menu you can also delete the group or subassembly.

There is no official best practice for renaming your groups and subassemblies, but you may find it useful to keep the designation of what type of subassembly it is or other distinguishing features. For example, if a lane is to be designated as a transition lane or a generic link used as a ditch foreslope, it would be useful to name them descriptively.

Creating Assemblies for Non-road Uses

There are many uses for assemblies and their resulting corridor models aside from road sections. The Corridor Modeling Catalog also includes components for retaining walls, rail sections, bridges, channels, pipe trenches, and much more. In Chapter 9, you'll use a channel assembly and a pipe trench assembly to build corridor models. Let's investigate how those assemblies are put together by building a channel assembly for a stream section:

1. Start a new blank drawing from the `_AutoCAD Civil 3D (Imperial) NCS` template that ships with Civil 3D. Metric users can use the `_AutoCAD Civil 3D (Metric) NCS` template. You can also continue working in your drawing from the first exercise in this chapter.
2. Confirm that your Tool Palettes window is showing the subassembly set (Imperial or metric) appropriate for your drawing units.
3. From the Home tab ➤ Create Design panel, choose Assembly ➤ Create Assembly.

The Create Assembly dialog opens.

4. In the Create Assembly dialog, configure these options:
 - a. Enter **Channel** in the Name text box.
 - b. Set Assembly Type to Other.
 - c. Confirm that Assembly Style is set to Basic and that Code Set Style is set to All Codes, and click OK.
5. Pick a location in your drawing to place your red assembly baseline marker.
6. Locate the Trench Pipes tab on the Tool Palettes window.
7. Click the Channel subassembly on the Tool Palettes window.

The AutoCAD Properties palette appears.

8. Locate the Advanced Parameters area on the AutoCAD Properties palette.

You'll place the channel with its default parameters and make adjustments through the Assembly Properties dialog, so don't change anything for now. Note that there is no Side parameter. This subassembly will be centered on the assembly baseline marker.

9. At the Select marker point within assembly or `[Insert Replace Detached]:` prompt, select the red assembly baseline marker, and a channel is placed on the assembly (see [Figure 8.34](#)).

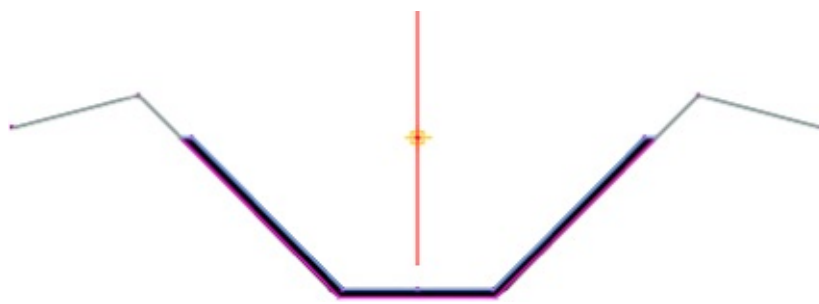


Figure 8.34 The Channel subassembly with default parameters

10. Press Esc to leave the assembly insertion command and dismiss the Properties palette.
11. Click the assembly baseline marker, and then on the Assemblies contextual tab > Modify Assembly palette, click Assembly Properties.

The Assembly Properties dialog appears.

12. Switch to the Construction tab.

Notice that while the typical road assembly in the previous exercise generated a Left group and a Right group, the Channel subassembly generated a Centered group.

13. Select the Channel entry on the left side of the dialog (under the Centered group).
14. Click the Subassembly Help ellipsis button located at the bottom right on the dialog's Construction tab.

The Subassembly Reference page of the AutoCAD Civil 3D 2015 help file appears.

15. Familiarize yourself with the diagram, shown in [Figure 8.35](#), and the input parameters for the Channel subassembly.

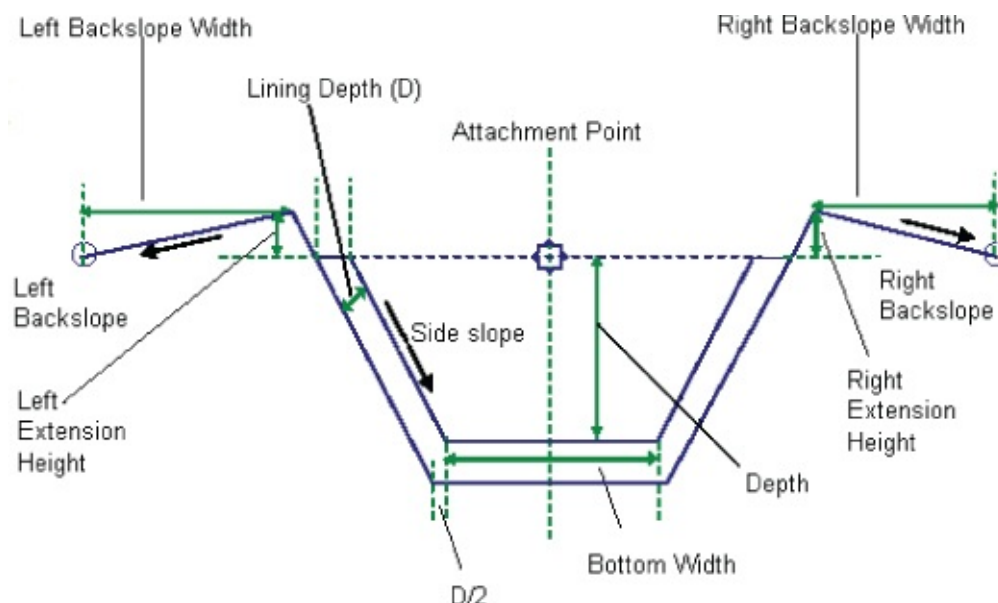


Figure 8.35 The Channel subassembly help diagram

Especially note the Attachment Point, Bottom Width, Depth, and Side slope parameters. The attachment point indicates where your baseline alignment and profile will be applied.

16. Minimize or close the help file.

To match the engineer's specified design, you need a stream section 6' (2 m) deep with a bottom that's 3' (1 m) wide, 1:1 sideslopes, and no backslopes.

17. Change the following parameters in the Assembly Properties dialog, leaving all other parameters at their default values:

Depth: **6'** (2 m)

Bottom Width: **3'** (1 m)

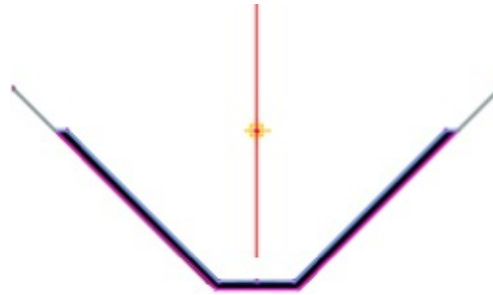
Sideslope: **1** (value will automatically change to be displayed as 1.00:1)

Left and Right Backslope Width: **0'** (0 m)

Zero Subassembly Values

Some subassemblies do not like zero values, so you may be taught to enter 0.001 or some other value that is so small that it is as if you enter 0. However, there are also some subassemblies that like zero values. If you look in the help file for the Channel subassembly, you will notice that in the Behavior section it explains that if a zero value is specified for left or right extensions and backslope widths, those links are omitted or are not drawn. So in this case a zero is what you want, but be sure to check the help files before using a zero in your subassemblies!

18. Click OK, and confirm that your completed assembly looks like [Figure 8.36](#).



[Figure 8.36](#) The channel assembly with customized parameters

A finished copy of this drawing is available from the book's web page (0802_ChannelAssembly_FINISHED.dwg or 0802_ChannelAssembly_METRIC_FINISHED.dwg).



Real World Scenario

Pipe Trench Assembly

Projects that include piping, such as sanitary sewers, storm drainage, gas pipelines, or similar structures, almost always include trenching. The trench must be carefully prepared to ensure the safety of the workers placing the pipe as well as to provide structural stability for the pipe in the form of bedding and compacted fill.

The corridor is an ideal tool for modeling pipe trenching. With the appropriate assembly combined with a pipe-run alignment and profile, you can not only design a pipe trench but also use cross-section tools to generate section views, materials tables, and quantity takeoffs. The resulting corridor model can also be used to create a surface for additional analysis.

The following exercise will lead you through building a pipe trench corridor based on an alignment and profile that follow a pipe run and a typical trench assembly:

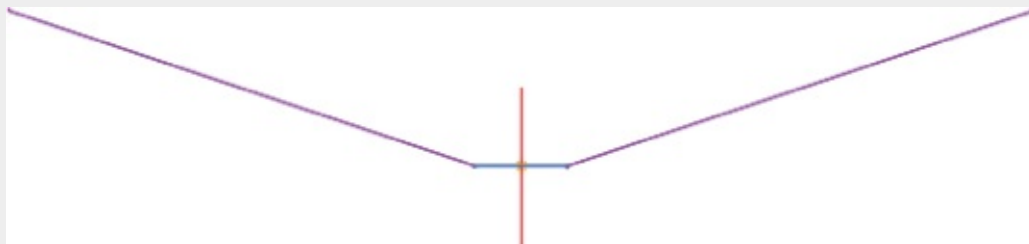
1. Start a new blank drawing from the `_AutoCAD Civil 3D (Imperial) NCS` template that ships with Civil 3D. Metric users can use the `_AutoCAD Civil 3D (Metric) NCS` template. You can also continue working in your drawing from the previous exercise.
2. Confirm that your Tool Palettes window is showing the subassembly set (Imperial or metric) appropriate for your drawing units.
3. From the Home tab > Create Design panel, choose Assembly > Create Assembly.
4. In the Create Assembly dialog, set these properties:
 - a. Enter **Pipe Trench** in the Name text box to change the assembly's name.
 - b. Set Assembly Type to Other.
 - c. Confirm that Assembly Style is set to Basic and Code Set Style is set to All Codes, and click OK.
5. Pick a location in your drawing for the assembly; somewhere in the center of your screen where you have room to work is fine.
6. Locate the Trench Pipes tab on the Tool Palettes window.
7. Click the TrenchPipe1 button on the Tool Palettes window.

The AutoCAD Properties palette appears.

8. Locate the Advanced Parameters area of the AutoCAD Properties palette.

This section lists the TrenchPipe1 parameters. You'll place TrenchPipe1 with its default parameters and make adjustments through the Assembly Properties dialog, so don't change anything for now. Note that similar to the Channel subassembly, there is no Side parameter. This subassembly will be placed centered on the assembly baseline marker.

9. At the Select marker point within assembly or `[Insert Replace Detached]`: prompt, select the assembly baseline marker. A TrenchPipe1 subassembly is placed on the assembly, as shown here.




10. Press Esc to leave the assembly-creation command and dismiss the AutoCAD Properties palette.
11. Select the assembly baseline marker to activate the Assembly contextual tab.
12. From the Assembly contextual tab > Modify Assembly panel, choose Assembly Properties.

The Assembly Properties dialog appears.
13. On the Construction tab, select the TrenchPipe1 assembly entry on the left side of the dialog.
14. Click the Subassembly Help ellipsis button located at the bottom right.

The Subassembly Reference page of the AutoCAD Civil 3D 2015 help file appears.

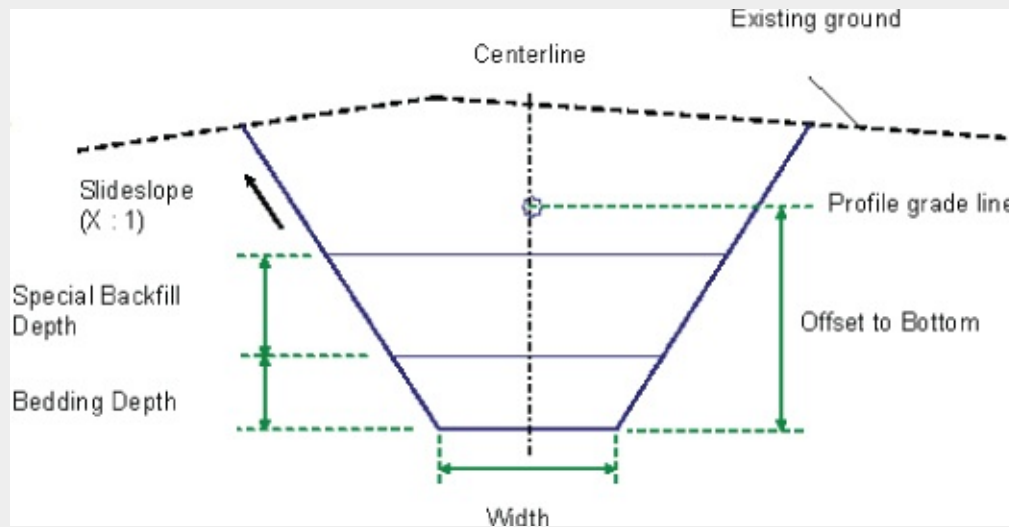15. Familiarize yourself with the diagram, shown in the following image, and with the input parameters for the TrenchPipe1 subassembly.



In this case, the profile grade line will attach to a profile drawn to represent the pipe invert. Because the trench will be excavated deeper than the pipe invert to accommodate gravel bedding, you'll want to provide information for the bedding depth parameter. Also note under the Target Parameters section in Help that this subassembly requires a surface target to determine where the sideslopes terminate.

16. Minimize or close the help file.

To match the engineer's specified design, the pipe trench should be 3' (1 m) deep and 4' (1.3 m) wide with 2:1 sideslopes and 1' (0.3 m) of gravel bedding.

17. In the Assembly Properties dialog – Construction tab, change the following parameters, leaving all other parameters at their default values:

Width: **4'** (1.3 m)

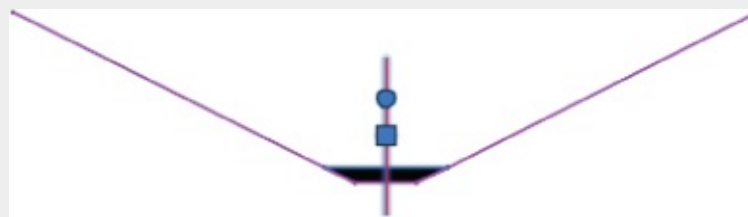
Sideslope: **2** (This value will automatically change to be displayed as 2:1.)

Bedding Depth: **1'** (0.3 m)

Offset To Bottom: **3'** (1 m)

18. Click OK.

19. Confirm that your completed assembly looks like the image shown here.



A finished copy of this drawing is available from the book's web page
(0803_PipeTrenchAssembly_FINISHED.dwg or
0803_PipeTrenchAssembly_METRIC_FINISHED.dwg).

This assembly will be used to build a pipe trench corridor in Chapter 9.

Specialized Subassemblies

Despite the more than 100 subassemblies available in the Corridor Modeling Catalog, sometimes you may not find the perfect component. Perhaps none of the channel assemblies exactly meet your design specifications and you'd like to make a more customized assembly, or neither of the sidewalk subassemblies allows for the proper boulevard slopes. Maybe you'd like to try to do some preliminary lot grading using your corridor or mark a certain point on your subassembly so that you can extract important features easily.

You can handle most of these situations by using subassemblies from the Generic Subassembly Catalog (see [Figure 8.37](#)). These simple yet flexible components can be used to build almost anything, although they lack the coded intelligence of some of the more intricate subassemblies (such as knowing if they're paved or grass and understanding things like sub-base depth and so on).

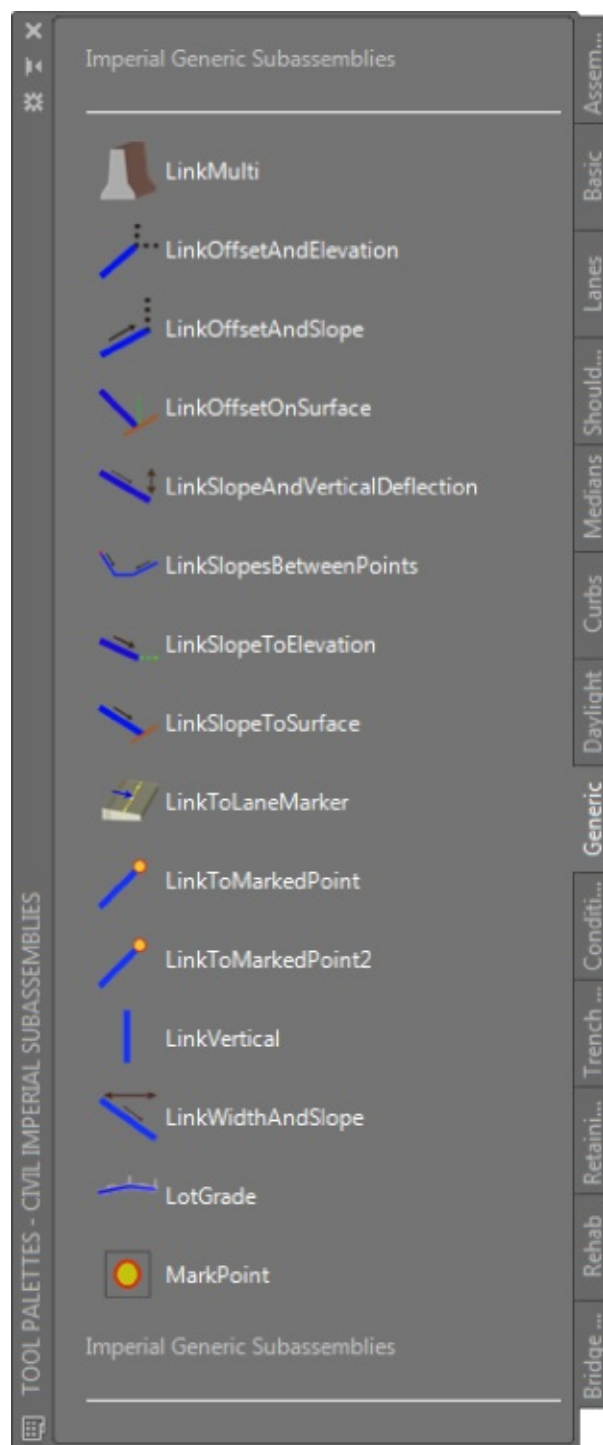


Figure 8.37 The Generic Subassembly tool palette

Using Generic Links

Let's look at two examples where you might take advantage of generic links.

The first example involves the typical road section you built in the first exercise in this chapter. You saw that UrbanSidewalk applies one continuous cross-slope across the inside boulevard (terrace), sidewalk, and outside boulevard (buffer strip). If you need a terrace that's 3' (1 m) wide with a 3 percent slope, and then a 5' (1.5 m) sidewalk with a 2 percent slope, followed by another buffer strip that is 6' (2 m) wide with a slope of 5 percent, you can use generic links to assist in the construction of the proper assembly.

In this exercise you will be creating a new assembly based on the typical road assembly made in the first exercise.

1. Open 801_TypicalRoadAssembly_FINISHED.dwg or

2. In Prospector, locate and expand the Assemblies group.
3. Right-click Urban 14' Single-Lane or Urban 4.5 m Single-Lane and select Zoom To.
4. Select the lane and curb subassemblies as well as the assembly baseline marker and Mtext below; then on the Home tab ➤ Clipboard panel, click Copy Clip.
5. On the Home tab ➤ Clipboard panel, click Paste. Pick a location directly under the Urban Single-Lane assembly to paste the copied assembly. Notice that the Mtext updated to the name of the copy of the assembly. This is because it's a field.

You could have use the copy command. However, when the assembly baseline marker is part of the copy command selection set, the entire assembly is copied even if some of the subassemblies are not included in the selection set. If this were your method in this exercise, all you would need to do next would be to delete the unwanted subassemblies.

While you could place the subassembly anywhere, you will find that as you gather more and more assemblies in a drawing, having them organized in a logical manner with similar assemblies in a common area makes them easier to manage.

Labeling Assemblies

When you start getting multiple similar assemblies in your drawing, you may find it helpful to add Mtext next to the assembly with the assembly's name so that you know which assembly is which. By using a field within Mtext, these labels will remain dynamic to their associated object (i.e., if you change the name of the assembly, the Mtext will change as well). You can do this using the following simple steps:

1. Enter **MTEXT** on the command line.
2. Specify the location of your Mtext box.
3. From the Text Editor contextual tab ➤ Insert panel, click Field to display the Field dialog.
4. Verify that Field Category is set to Objects and Field Names is set to Object.
5. Click the Select Object button next to Object Type.
6. At the **Select object :** prompt, select an assembly baseline marker.
7. Set Property to Name, select your format preference, and click OK to dismiss the Field dialog.
8. On the Text Editor tab ➤ Close panel, click Close Text Editor.

You now have a dynamic field that will maintain the name of the associated assembly; however, you may need to run a **REGEN** in order for the field to update. It's also helpful to know that if you copy an assembly and its label at the same time, the new label will reference the new assembly.

6. Select the assembly baseline marker; then on the Assembly contextual tab ➤ Modify Assembly Panel, click Assembly Properties.

The Assembly Properties dialog appears.

7. On the Information tab, change Name to **Urban 14' Single-Lane with Terraced Sidewalk** (or **Urban 4.5 m Single-Lane With Terraced Sidewalk**) and click OK.

If you copied the Mtext label containing a field, you may want to run a REGEN to update the label or play with the grips to stack the text legibly.
8. Locate the Generic tab on the Tool Palettes window.
9. Click the LinkWidthAndSlope subassembly (you may need to scroll down to find it), and the AutoCAD Properties palette appears.
10. Scroll down to the Advanced Parameters section of the Properties palette and change the parameters as follows to create the first buffer strip, leaving all other parameters at their default values:

Width: **3' (1 m)**

Slope: **3%**
11. At the Select marker point within assembly or [Insert Replace Detached]: prompt, select the circular marker on the right UrbanCurbGutterGeneral subassembly as well as the circular marker on the left UrbanCurbGutterGeneral subassembly, both of which represent the top back of the curb.
12. Switch to the Curbs tab of the Tool Palettes window, and click the UrbanSidewalk button.
13. In the Advanced Parameters area of the Properties palette, change the parameters as follows to create the sidewalk, leaving all other parameters at their default values:

Inside Boulevard Width: **0' (0 m)**

Sidewalk Width: **5' (1.5 m)**

Outside Boulevard Width: **0' (0 m)**

Slope: **2%**
14. At the Select marker point within assembly or [Insert Replace Detached]: prompt, select the upper-right circular marker on the right LinkWidthAndSlope subassembly and the upper-left circular marker on the left LinkWidthAndSlope subassembly.
15. Switch to the Generic tab of the Tool Palettes window, and click the LinkWidthAndSlope button.

The AutoCAD Properties palette appears.
16. In the Advanced Parameters area, change the parameters as follows to create the second buffer strip, leaving all other parameters at their default values:

Width: **6' (2 m)**

Slope: **5%**
17. At the Select marker point within assembly or [Insert Replace Detached]: prompt, select the upper-right circular marker on the right UrbanSidewalk subassembly, as well as the upper-left circular marker on the left UrbanSidewalk subassembly, both of which represent the outside edge of the sidewalk. When complete, press Esc to end the command.
18. Select the right daylight subassembly from the Urban Single-Lane assembly. On the Subassembly contextual tab ➤ Modify Subassembly panel, click Copy.

9. Select the outermost marker on the right side of the new assembly that you are working on. Do the same for the left daylight.

The completed assembly should look like [Figure 8.38](#) (shown with the typical road assembly from the first exercise for comparison).

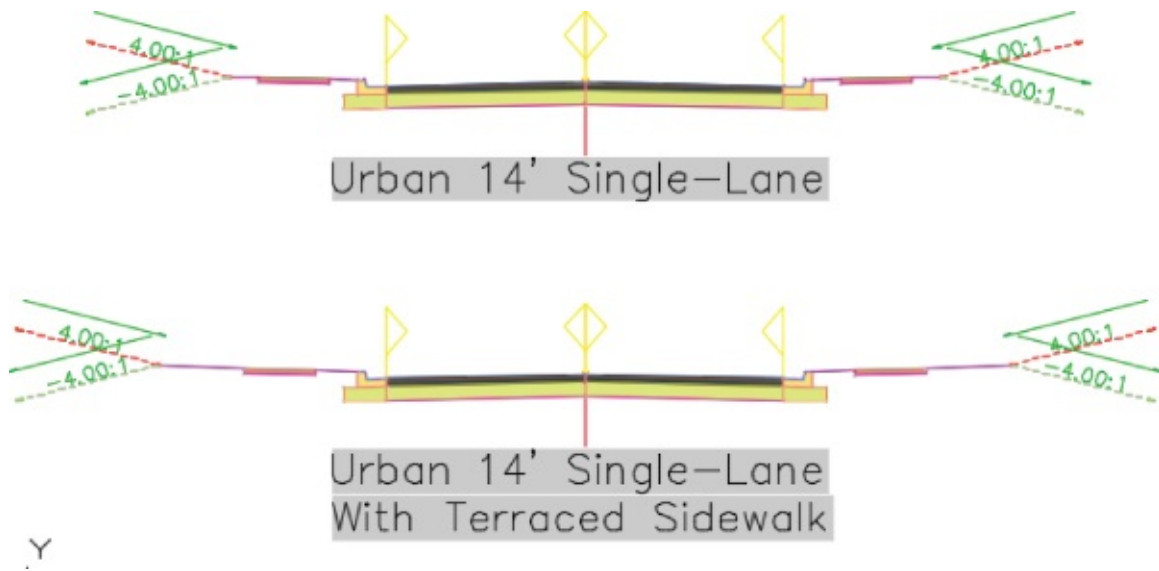


Figure 8.38 The completed Urban Single-Lane assembly from the first exercise (top) and the Urban Single-Lane with Terraced Sidewalks assembly (bottom)

You may keep this drawing open to continue on to the next exercise, or use the finished copy of this drawing available from the book's web page (0804_GenericLinksAssembly_FINISHED.dwg or 0804_GenericLinksAssembly_METRIC_FINISHED.dwg).

You've now created a custom sidewalk terrace for a typical road.

Daylighting with Generic Links

The next example involves the channel section you built earlier in this chapter. This exercise will lead you through using the LinkSlopeToSurface generic subassembly, which will provide a surface target to the channel assembly that will seek the target assembly at a 25 percent slope. For more information about surface targets, see Chapter 9.

In this exercise, you will be creating another new assembly based on the channel assembly exercise.

1. Open 0802_ChannelAssembly_FINISHED.dwg or 0802_ChannelAssembly_METRIC_FINISHED.dwg, available on the book's website.
2. In Prospector, locate and expand the Assemblies group.
3. Right-click Channel and select Zoom To.
4. Locate the Generic tab on the Tool Palettes window.
5. Click the LinkSlopeToSurface button.
6. In the Advanced Parameters area of the Properties palette, change the Slope parameter to 25%, leaving all other parameters at their default values.
7. At the Select marker point within assembly or [Insert Replace Detached]: prompt, select the circular marker at the upper right on the channel subassembly as well as the circular marker on the upper left on the channel subassembly. Press Esc to end the command.

The left surface target link appears, but it is sloping to the right instead of the left. This is one subassembly that doesn't automatically “flip” to the appropriate side.

8. Select the LinkSlopeToSurface subassembly to activate the Subassembly contextual tab.
9. From the Subassembly contextual tab > Modify Subassembly panel, choose Subassembly Properties.
10. On the Parameters tab, locate the Side input value, and click the default input value field.
11. In the Pick Default Value dialog, select Left as the new input value and click OK.
12. Click OK to dismiss the Subassembly Properties dialog.

The completed assembly should look like [Figure 8.39](#).

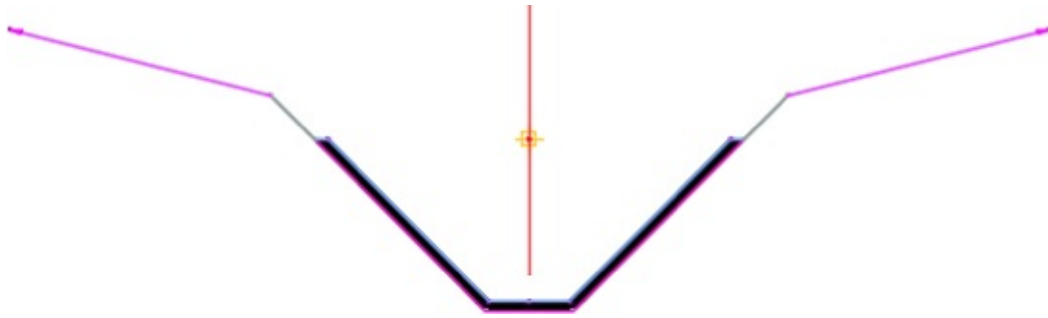


Figure 8.39 The completed channel assembly

You may keep this drawing open to continue on to the next exercise or use the finished copy of this drawing available from the book's web page (0805_ChannelLinkDaylight_FINISHED.dwg or 0805_ChannelLinkDaylight_METRIC_FINISHED.dwg).

Adding a surface link to the channel assembly provides a surface target for the assembly. Now that you've added the LinkSlopeToSurface, you will be able to specify your existing ground as the surface target for a corridor, and the subassembly will grade between the top of the bank and the surface for you. You can achieve additional flexibility for connecting to existing ground with the more complex daylight subassemblies, as discussed in the next section.

Working with Daylight Subassemblies

In previous examples, we worked with a generic daylight subassembly, but now let's take a closer look at what they can do for you.

A daylight subassembly tells Civil 3D how to extend a link to a target surface. The instructions might specify that a ditch or berm be inserted before looking for existing ground. Others provide a straight shot but with contingencies for certain design conditions. [Figure 8.40](#) shows the many options you have for adding a daylight subassembly to an assembly.

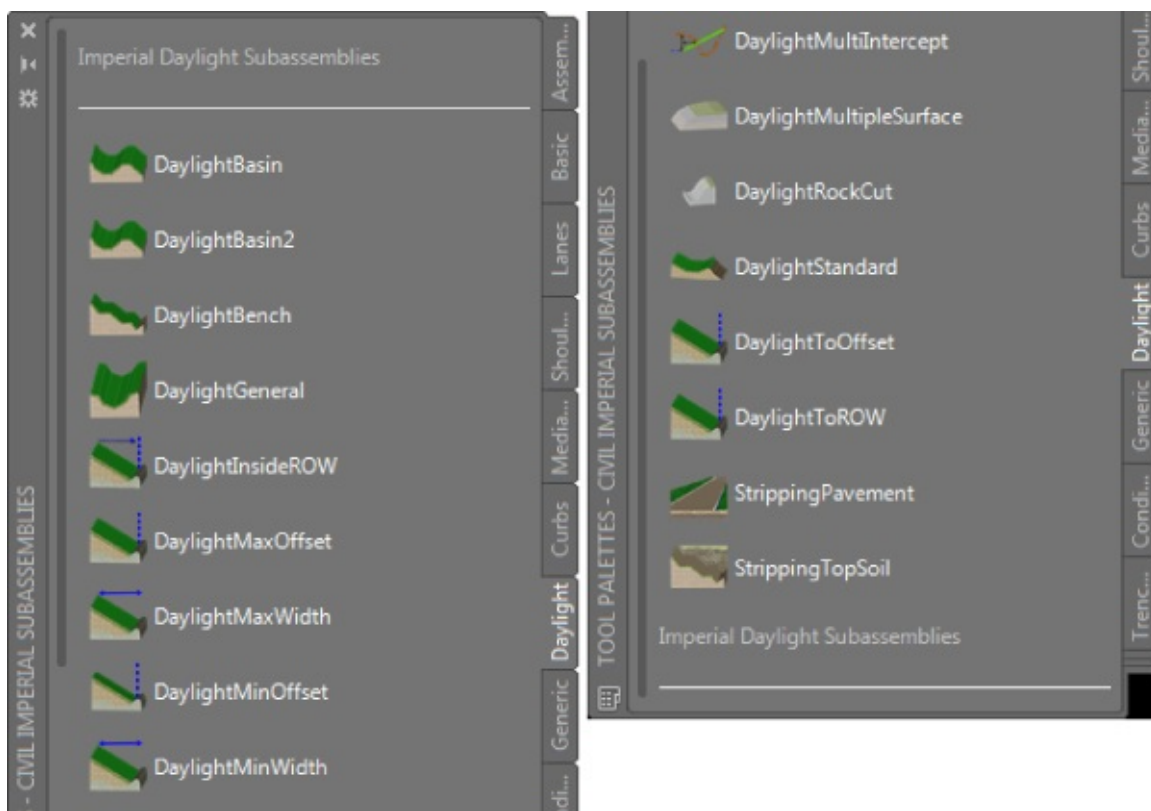


Figure 8.40 Daylight subassemblies in the Tool Palettes window

In the following exercise, you'll use the DaylightInsideROW subassembly. This subassembly contains parameters for specifying the maximum distance from the centerline or offset alignments. If the 4:1 slope hits the surface inside the right-of-way (ROW), no adjustment is made to the slope. If 4:1 causes the daylight to hit outside of the ROW, the slope adjusts to stay inside the specified location.

In this exercise you will be creating a new assembly based on the typical road assembly you made in the first exercise.

1. Open 0804_GenericLinksAssembly_FINISHED.dwg or 0804_GenericLinksAssembly_METRIC_FINISHED.dwg, available from the book's website.
2. Locate the Urban 14' Single-Lane or Urban 4.5 m Single-Lane assembly.
3. Select the lane, curb, and sidewalk subassemblies as well as the assembly baseline marker and the Mtext displaying the assembly name. On the Home tab > Clipboard panel, click Copy Clip.
4. On the Home tab > Clipboard panel, click Paste and pick a location directly over the Urban Single-Lane assemblies to paste the copied assembly.
5. Click the assembly baseline marker, and then on the Assemblies contextual tab > Modify Assembly palette, click Assembly Properties.

The Assembly Properties dialog appears.

6. On the Information tab, change the name to **Urban 14' Single-Lane Daylight ROW** (or **Urban 4.5 m Single-Lane Daylight ROW**), and click OK. Run a REGEN to update Mtext.
7. Locate the Daylight tab on the Tool Palettes window.
8. Right-click the DaylightInsideROW button on the Tool Palettes panel and select Help.

The Subassembly Reference page opens in a new window.

9. Familiarize yourself with the options for the DaylightInsideROW subassembly, especially noting the optional parameters for a lined material, a mandatory daylight surface target, and an optional ROW offset target that can be used to override the ROW offset specified in the parameters.
 10. Close the Help dialog. Click the DaylightInsideROW button on the Tool Palettes window.
 11. In the Advanced Parameters area of the Properties palette, change the parameter ROW Offset From Baseline to **33' (10 m)**, leaving all other parameters at their default values.
 12. At the Select marker point within assembly or [Insert Replace Detached]: prompt, select the circular marker on the farthest-right link on the new assembly. The Select marker point within assembly or [Insert Replace Detached]: prompt is still active.
 13. On the Properties palette, in the Advanced Parameters area, change the parameter ROW Offset From Baseline to **-33' (-10 m)** and then place the subassembly on the left side of the new assembly. Press Esc to end the command.
- Notice that there is no Left or Right parameter. The negative value in the ROW Offset From Baseline parameter is what tells Civil 3D the daylight is to the left. Some subassemblies will contain an offset parameter instead of a side parameter to direct to which side it should flip. In the case of an offset parameter, left will be indicated by a negative value and right will be indicated by a positive value.
14. You can now dismiss the Properties palette.

The completed assembly should look like [Figure 8.41](#).

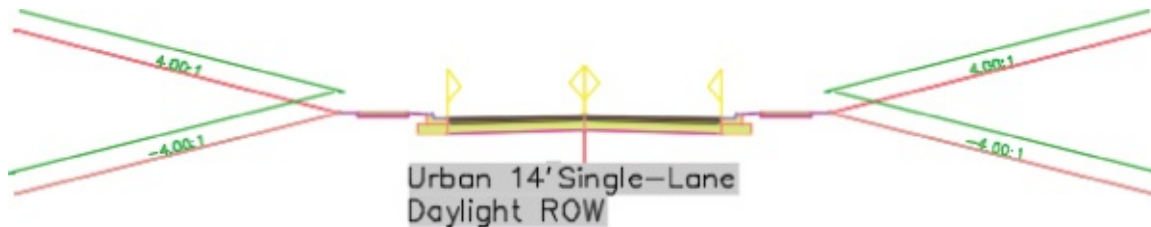


Figure 8.41 An assembly with the DaylightInsideROW subassembly attached to each side

You may keep this drawing open to continue on to the next exercise or use the finished copy of this drawing available from the book's web page (DaylightROWAssembly_FINISHED.dwg or DaylightROWAssembly_METRIC_FINISHED.dwg).

When to Ignore Daylight Input Parameters

The first time you attempt to use many daylight subassemblies, you may become overwhelmed by the sheer number of parameters.

The good news is that many of these parameters are unnecessary for most uses. For example, many daylight subassemblies, such as DaylightGeneral (shown here), include multiple cut-and-fill widths for complicated cases where the design may call for test scenarios. If your design doesn't require this level of detail, leave those parameters set to zero.

ADVANCED	-	Fill 3 Width	0.00'
Parameters	-	Fill 3 Slope	Horizontal
Version	R2013	Flat Fill Slope	6.00:1
Side	Left	Flat Fill Max Height	5.00'
Daylight Link	Include Daylight link	Medium Fill Slope	4.00:1
Cut Test Point Link	3	Medium Fill Max Hei...	10.00'
Cut 1 Width	0.00'	Steep Fill Slope	2.00:1
Cut 1 Slope	Horizontal	Guardrail Width	2.00'
Cut 2 Width	0.00'	Guardrail Slope	-2.00%
Cut 2 Slope	Horizontal	Include Guardrail	Omit Guardrail
Cut 3 Width	0.00'	Width to Post	1.000
Cut 3 Slope	Horizontal	Rounding Option	None
Cut 4 Width	0.00'	Rounding By	Length
Cut 4 Slope	Horizontal	Rounding Parameter	1.50'
Cut 5 Width	0.00'	Rounding Tessellation	6
Cut 5 Slope	Horizontal	Place Lined Material	None
Cut 6 Width	0.00'	Slope Limit 1	1.00:1
Cut 6 Slope	Horizontal	Material 1 Thickness	1.00'
Cut 7 Width	0.00'	Material 1 Name	Rip Rap
Cut 7 Slope	Horizontal	Slope Limit 2	2.00:1
Cut 8 Width	0.00'	Material 2 Thickness	0.50'
Cut 8 Slope	Horizontal	Material 2 Name	Rip Rap
Flat Cut Slope	6.00:1	Slope Limit 3	4.00:1
Flat Cut Max Height	5.00'	Material 3 Thickness	0.33'
Medium Cut Slope	4.00:1	Material 3 Name	Seeded Grass
Medium Cut Max He...	10.00'		
Steep Cut Slope	2.00:1		
Fill 1 Width	0.00'		
Fill 1 Slope	Horizontal		
Fill 2 Width	0.00'		
Fill 2 Slope	Horizontal		

Some daylight subassemblies include guardrail options. If your situation doesn't require a guardrail, leave the default parameter set to Omit Guardrail and ignore it from then on. Another common, confusing parameter is Place Lined Material, which can be used for riprap or erosion-control matting. If your design doesn't require this much detail, ensure that this parameter is set to None, and ignore the thickness, name, and slope parameters that follow.

If you're ever in doubt about which parameters can be omitted, investigate the help file for that subassembly.

Alternative Daylight Subassemblies

Over a dozen daylight subassemblies are available, varying from a simple cut-fill parameter to a more

complicated benching or basin design. Your engineering requirements may dictate something more challenging than the exercise in the previous section. Here are some alternative daylight subassemblies and the situations where you might use them. For more information on any of these subassemblies and the many other daylighting choices, see the AutoCAD Civil 3D 2015 Subassembly Reference page in the help file.

DaylightToROW and DaylightInsideROW The DaylightToROW subassembly differs slightly from the DaylightInsideROW, as shown in [Figure 8.42](#). DaylightToROW constantly adjusts the slope to stay a certain distance away from your ROW, as specified by the Offset Adjustment input parameter. For example, you can have a ROW alignment specified but use this subassembly to tell Civil 3D to always stay 3' inside the ROW line. The DaylightInsideROW uses the typical slope but adjusts up to a maximum slope in order to stay inside of the ROW. In both subassemblies, you must specify an offset value or an offset target to use as the ROW.

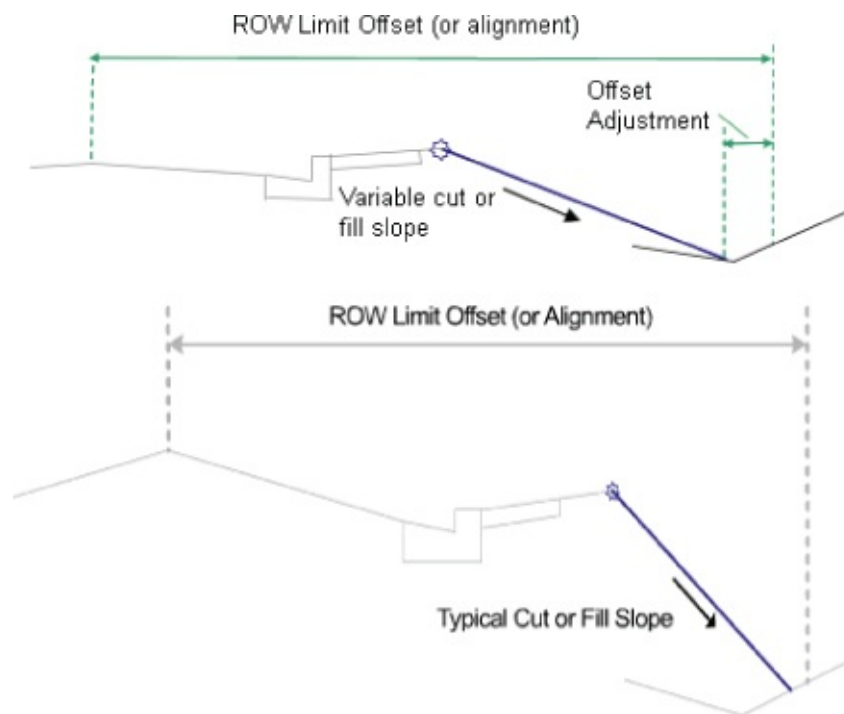


Figure 8.42 DaylightToROW subassembly help diagram (top) and DaylightInsideROW subassembly help diagram (bottom)

BasicSideSlopeCutDitch In addition to including cut-and-fill parameters, the BasicSideSlopeCutDitch subassembly (see [Figure 8.43](#)) creates a ditch in a cut condition. This is most useful for road designs that require a roadside ditch through cut sections but omit it when passing through areas of fill. If your corridor model is revised in a way that changes the location of cut-and-fill boundaries, the ditch will automatically adjust. Note that this subassembly is located on the Basic tab whereas the other subassemblies in this section are located on the Daylight tab.

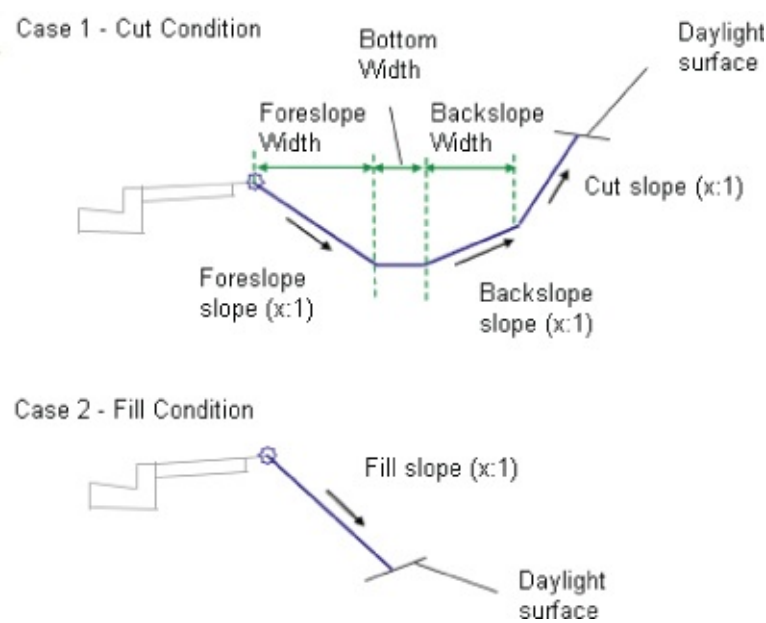


Figure 8.43 BasicSideSlopeCutDitch subassembly help diagram

When you insert this subassembly, you will notice that it does not look anything like the help diagram and instead will display the “Layout Mode” text on the design assembly, as shown in [Figure 8.44](#). This will not display on the completed corridor. There are several subassemblies where this will occur—which is another good reason to always check the help file for an accurate representation of what the final product will look like.

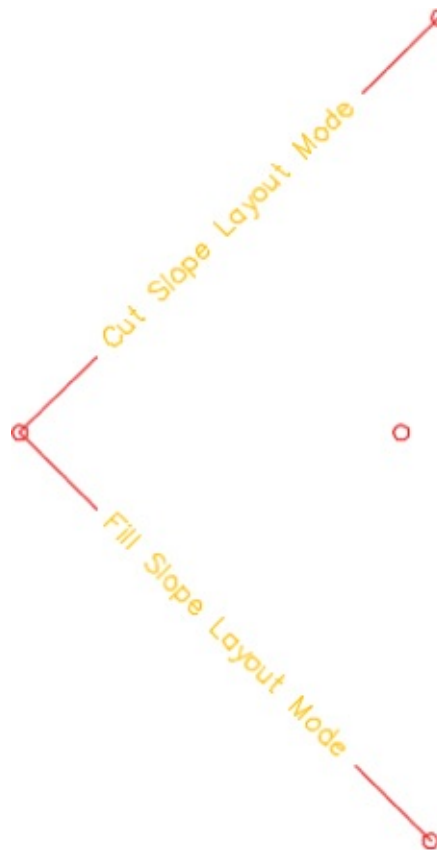


Figure 8.44 BasicSideSlopeCutDitch in layout mode

DaylightBasin Many engineers must design berms to contain roadside swales when the road design is in the fill condition. The process for determining where these berms are required is often tedious. The DaylightBasin subassembly (see [Figure 8.45](#)) provides a tool for automatically creating these “false berms.” The subassembly contains parameters for the specification of a basin (which can be easily

adapted to most roadside ditch cross sections as well) and parameters for containment berms that appear only when the subassembly runs into areas of roadside cut.

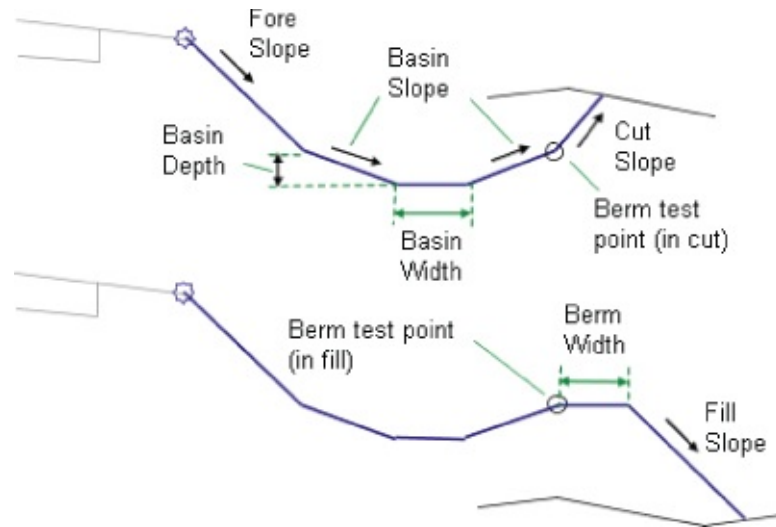


Figure 8.45 The DaylightBasin subassembly help diagram

Advanced Assemblies

As you get to know Civil 3D better, you will want it to do more for you. With the tools you are given and your own creativity and problem-solving skills, you can use Civil 3D to create some complex designs. Offset assemblies and marked point assemblies are powerful tools you have at your fingertips.

Offset Assemblies

Offset assemblies are an advanced option when you want to model a coordinating component of the design whose cross section is related to the main assembly. An example of where an offset assembly would be helpful is a main road adjacent to a meandering bike path. The bike path generally follows the main road, but its alignment is not always parallel and the profile might be altogether different. [Figure 8.46](#) shows what the assembly for a bike path to the left of a road would look like.

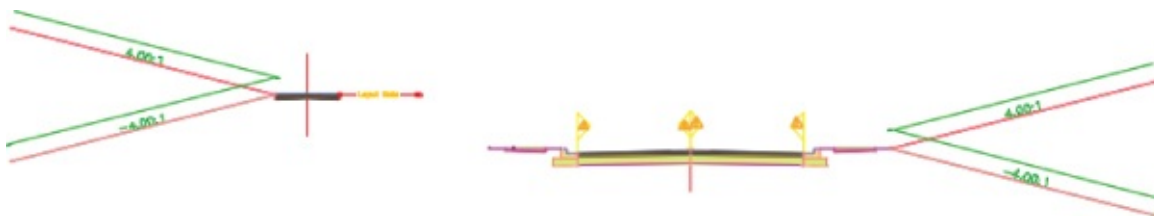


Figure 8.46 An example of an assembly with an offset to the left representing a bike path

To use an offset assembly, from the Home tab > Create Design panel, choose Assembly > Add Assembly Offset. You will be prompted to select the main assembly and place the offset in the graphic. The location of the offset assembly in relation to the main assembly will have no effect on the final design.

Once the offset assembly is placed, the construction of the offset assembly is identical to any other assembly. We will use an example of an assembly with an offset in Chapter 10, “Advanced Corridors, Intersections, and Roundabouts.”

Marked Points Used with Partner Subassemblies

The marked point assembly is a small but powerful subassembly found in the Generic palette. It consists

of a single marker, and you can place it on an assembly to flag a location. You can use the marked point by itself to generate a feature line where no coded marker currently exists, say in the midpoint of a lane link. Marked points really perform when used with one of the subassemblies designed to tie into a marked point.

When using a marked point, name it right away, and make note of that name for using it with a partner subassembly ([Figure 8.47](#)).

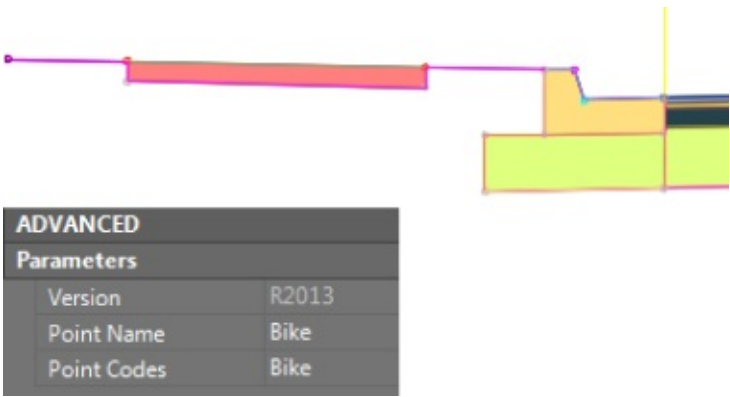


Figure 8.47 Name the marked point in the Advanced Parameters area of the Properties palette

Linking to a Marked Point

In the example shown in [Figure 8.48](#), a LinkToMarkedPoint2 subassembly is placed on the right side of the bike path pavement. The LinkToMarkedPoint2 subassembly has been created to look for the marked point on the left side of the sidewalk buffer.

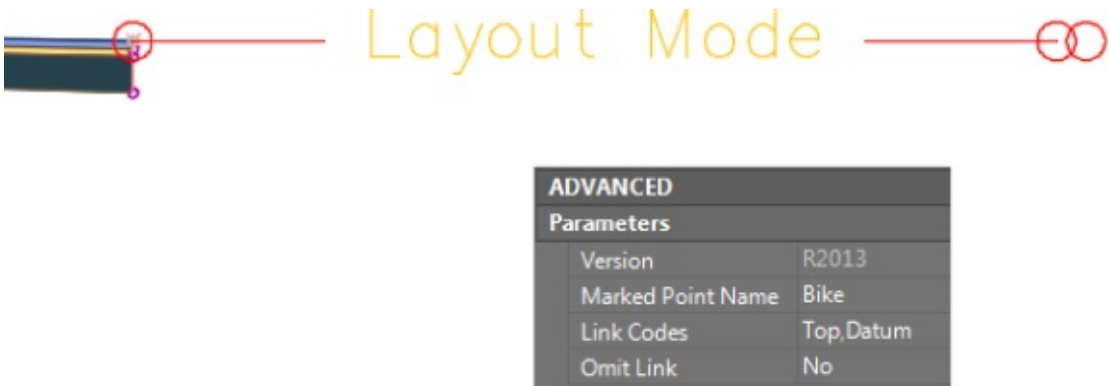


Figure 8.48 Add the name of the marked point before you place it on the assembly.

When placing a marked point, enter a descriptive and unique Point Name value under Advanced Parameters. Remember to enter that same descriptive and unique name into the partner subassembly's corresponding field called Marked Point Name. Upon doing this, you will not see the geometry tie together on the assembly, but it will in the resulting corridor, as you will see in Chapter 10.

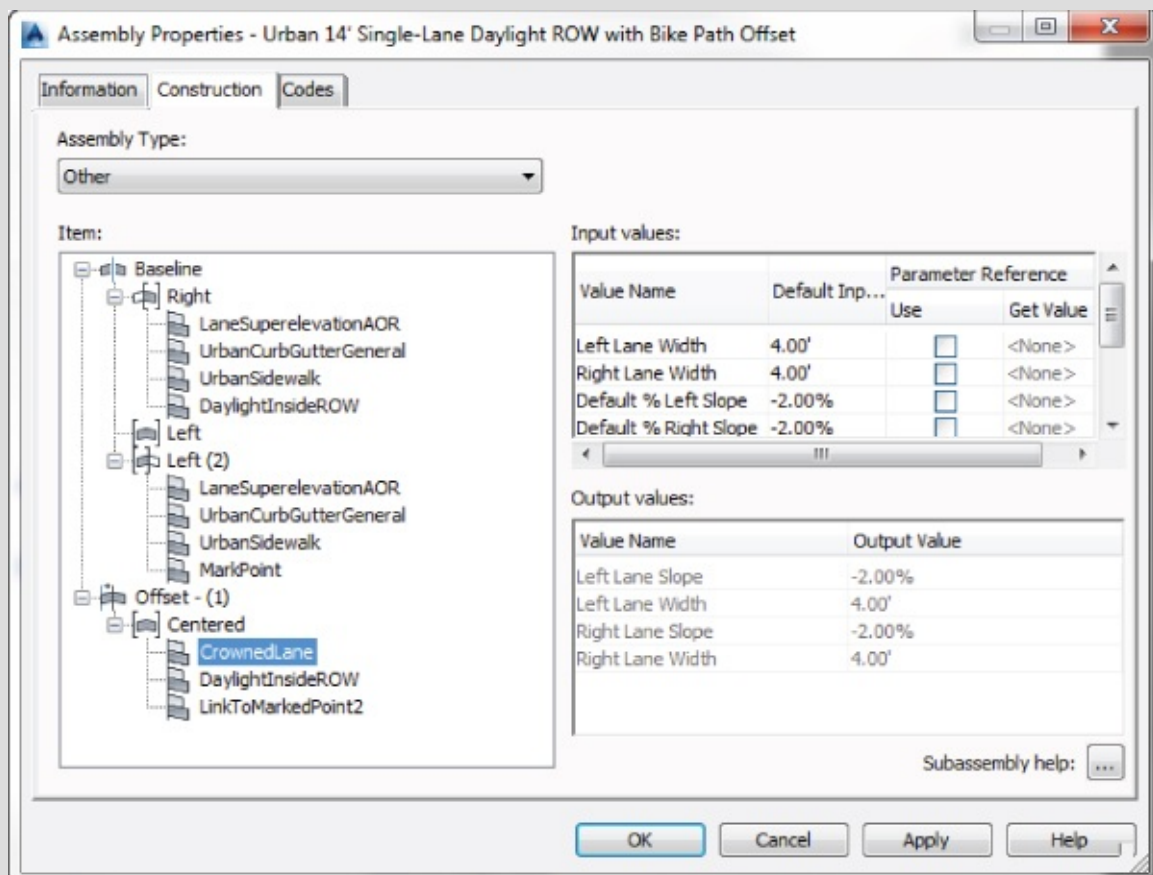
All subassemblies that use the marked point will appear with the “Layout Mode” placeholder. The following subassemblies are designed to look for a marked point:

- Channel
- ChannelParabolicBottom
- LinkToMarkedPoint
- LinkToMarkedPoint2

- LinkSlopesBetweenPoints
- MedianDepressed
- MedianRaisedConstantSlope
- MedianRaisedWithCrown
- OverlayBrokenBackBetweenEdges
- OverlayBrokenBackOverGutters
- OverlayCrown
- OverlayParabolic
- UrbanReplaceCurbGutter1
- UrbanReplaceCurbGutter2
- UrbanReplaceSidewalk

Making Sure Your Marked Point Processes

Always place the marked point before placing the links that use it to avoid having to reorder subassemblies in the Construction tab of Assembly Properties. If the marked point is listed below its partner subassembly in the Construction tab, the connection between the two subassemblies will not occur.



To reorder subassemblies in this dialog, right-click the subassembly and select Move Up or Move Down as needed.

Organizing Your Assemblies

The more geometry changes that occur throughout your corridor, the more assemblies you will have. Civil 3D offers several tools to keep your assemblies organized and available for future use.

Storing a Customized Subassembly on a Tool Palette

Customizing subassemblies and creating assemblies are both simple tasks. However, you'll save time in future projects if you store these items for later use.

A typical jurisdiction usually has a finite number of allowable lane widths, curb types, and other components. It would be extremely beneficial to have the right subassemblies with the parameters already available on your Tool Palettes window.

The following exercise will lead you through storing a customized subassembly on a tool palette.

In this exercise you will be storing some of the subassemblies you made in earlier exercises; therefore, any of the previously saved files (which you can download from this book's web page) can be used, if you do not have one open from a previous exercise.

You can add a tool only from a saved drawing, so make sure you save the drawing you are working in before following these steps:

1. Be sure your Tool Palettes window is displayed.
2. Right-click the Tool Palettes control bar located at the top of the window or side opposite of tabs if undocked, and select New Palette to create a new tool palette.
3. Enter **My Road Parts** in the Name text box.
4. Select one of the sidewalk subassemblies from the Urban 14' Single-Lane assembly.
5. You'll know it's selected when you see it highlighted and the grip appears.

Click any link in the assembly (not the grip), and while holding down the left mouse button drag the assembly into the Tool Palettes window. Release the mouse button.



It may take you several tries to get the click-and-drag timing correct, but it will work. You'll know it is working when the cursor appears with a plus sign in the tool palette.

When you release the mouse button, an entry appears on your tool palette with the name of the subassembly component that you are adding as well as a graphic of the subassembly.

6. Select and right-click this entry, and select the Properties option.

The Tool Properties dialog appears (see [Figure 8.49](#)).

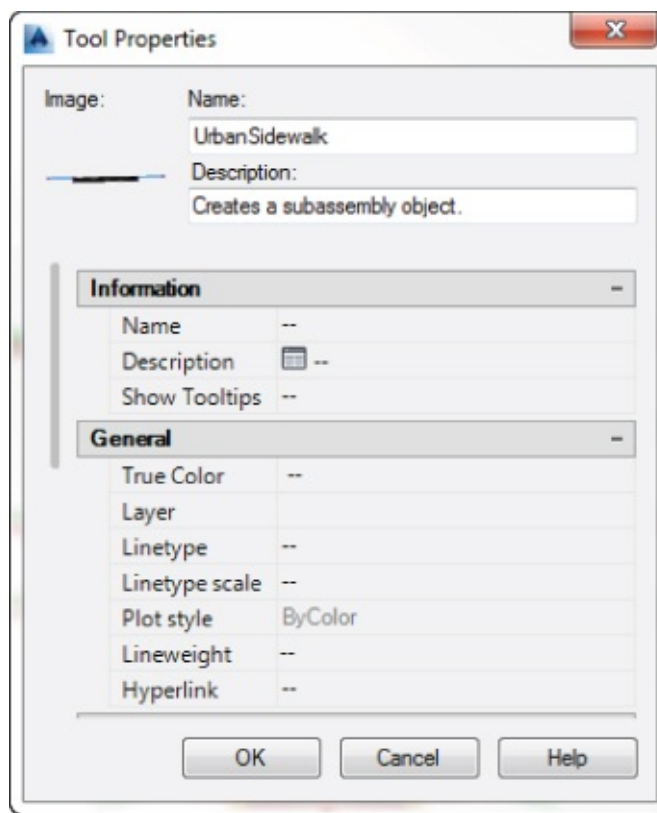


Figure 8.49 The Tool Properties dialog

7. If desired, change the image, description, and other parameters in the Tool Properties dialog, and click OK.
8. Try this process for other subassemblies in the drawing.

The resulting tool palette could look similar to [Figure 8.50](#).



Figure 8.50 A tool palette with five customized subassemblies

Note that the tool palette entries for each subassembly pull from `C3DStockSubassemblies.dll` file installed locally. The subassembly will not pull from this drawing as do blocks. If you share this tool palette, there is no need to share the drawing.

Storing a Completed Assembly on a Tool Palette

In addition to storing individual subassemblies on a tool palette, it's often useful to store entire completed assemblies. Many jurisdictions have several standard roadway sections; once each standard assembly has been built, you can save time on future projects by pulling in a stored version of this assembly.

The process for storing an assembly on a tool palette is nearly identical to the process of storing a subassembly. Simply select the assembly baseline, hover your cursor over the assembly baseline, left-click, and drag to a palette of your choosing.

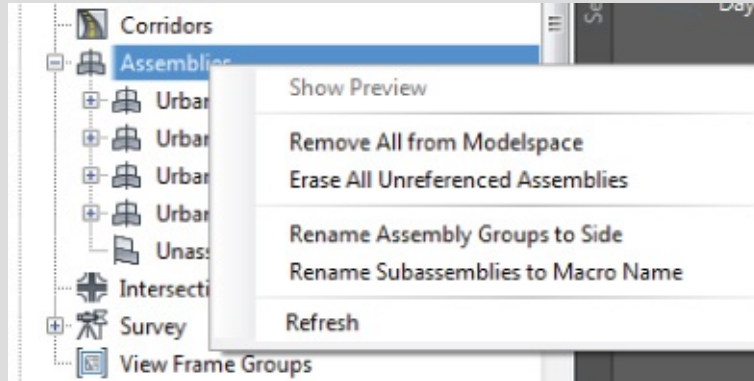
It's usually a good idea to create a library drawing in a shared network location for common completed assemblies and to create all assemblies in that drawing before dragging them onto the tool palette. By using this approach, you'll be able to test your assemblies for validity before they are rolled into production. Alternatively, you can right-click the new palette name and choose Import Subassemblies to display the Import Subassemblies dialog. Here you can choose a source file and then specify whether you want the subassemblies from that source file to import into the palette (optional) and/or the Catalog Library/My Imported Tools.

Organizing Assemblies within Prospector

There are multiple features that help you keep a drawing with many assemblies organized. In Prospector, you will see your listing of assemblies and an Unassigned Subassemblies entry.

Unassigned subassemblies are orphaned parts that are not attached to any main assembly. They may be left over from some assembly customization or they may just be a mistake. In either case, you will want to clean them out. On Prospector, under Assemblies > Unassigned Subassemblies, you can right-click each unassigned subassembly and select Remove From Modelspace.

To remove any unused assemblies from the drawing, right-click the Assemblies collection and select Erase All Unreferenced Assemblies.



In this same context menu, you can also choose to remove the display of the assemblies from modelspace. This hides the display of the assembly but retains its definition in the drawing.

You can still use a hidden assembly in a corridor. If you need it visible again for editing purposes, right-click the assembly and select Insert To Modelspace.

The niftiest part of this method of organizing assemblies is that they can now be part of your Civil 3D template without being visible.

The Bottom Line

Create a typical road assembly with lanes, curbs, gutters, and sidewalks. Most corridors are built to model roads. The most common assembly used in these road corridors is some variation of a typical road section consisting of lanes, curbs, gutters, and sidewalks.

Master It Create a new drawing from either the Civil 3D metric or Imperial template. Build a symmetric assembly using LaneSuperelevationAOR, UrbanCurbGutterValley2, and LinkWidthAndSlope for terrace and buffer strips adjacent to the UrbanSidewalk. Use widths and slopes of your choosing.

Edit an assembly. Once an assembly has been created, it can be easily edited to reflect a design change. Often, at the beginning of a project you won't know the final lane width. You can build your assembly and corridor model with one lane width and then change the width and rebuild the model immediately.

Master It Working in the drawing from the preceding exercise, edit the width of each LaneSuperelevationAOR to **14' (4.3 m)**, and change the cross slope of each LaneSuperelevationAOR to **-3.00%**.

Add daylighting to a typical road assembly. Often, the most difficult part of a designer's job is figuring out how to grade the area between the last engineered structure point in the cross section (such as the back of a sidewalk) and the existing ground. An extensive catalog of daylighting subassemblies can assist you with this task.

Master It Working in the drawing from the preceding exercise, add the DaylightMinWidth subassembly to both sides of your typical road assembly. Establish a minimum width between the outermost subassembly and the daylight offset of **10' (3 m)**.

Chapter 9

Basic Corridors

The corridor object is a three-dimensional model that combines the horizontal geometry of an alignment, the vertical geometry of a profile, and the cross-sectional geometry of an assembly.

Corridors range from extremely simple roads to complicated highways and interchanges, but they aren't limited to just road travel ways. Corridors can be used to model many linear designs. This chapter focuses on building several simple corridors that can be used to model and design roads, channels, and trenches.

In this chapter, you will learn to

- Build a single baseline corridor from an alignment, profile, and assembly
- Use targets to add lane widening
- Create a corridor surface
- Add an automatic boundary to a corridor surface

Understanding Corridors

In its simplest form, a corridor combines an alignment, a profile, and an assembly (see [Figure 9.1](#)).

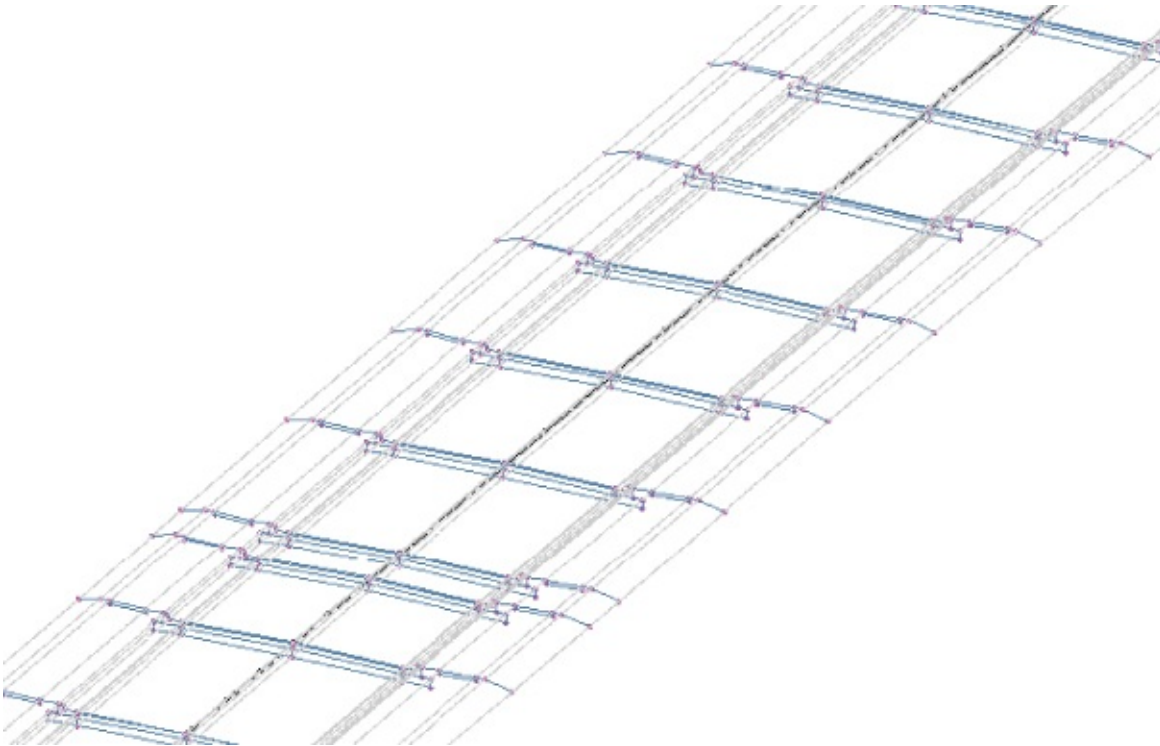


Figure 9.1 A corridor shown in 3D view

You can also build corridors with complex combinations of alignments, profiles, and assemblies to make complicated intersections, interchanges, or branching streams (see [Figure 9.2](#)).

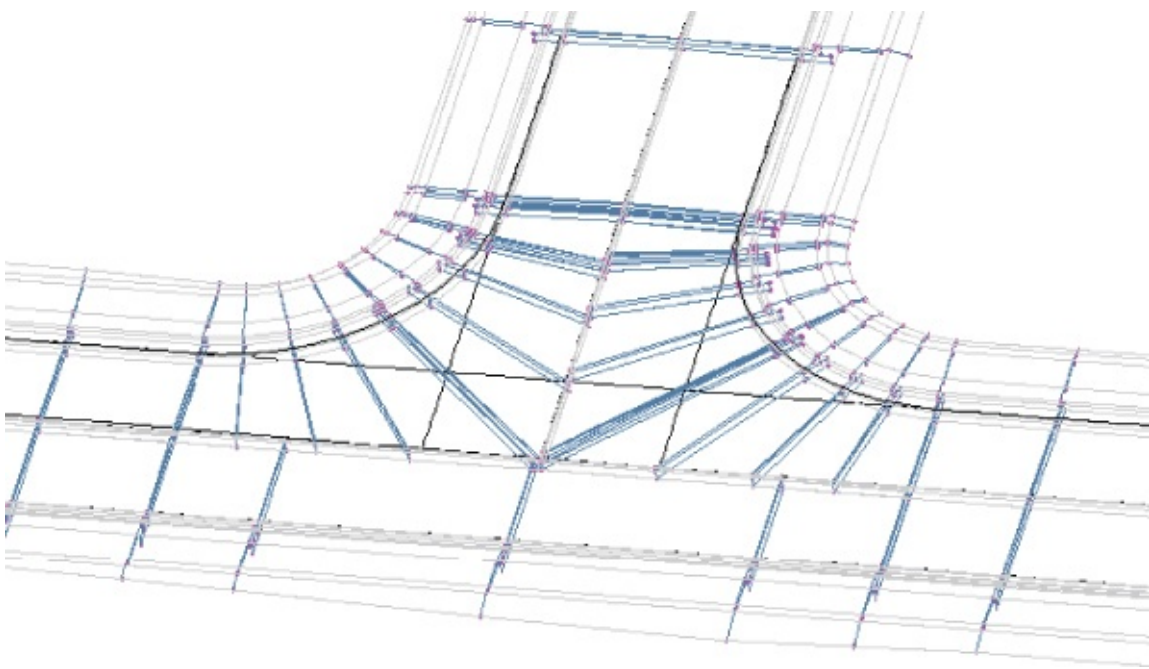


Figure 9.2 An intersection modeled with a corridor

The horizontal properties of the alignment, the vertical properties of the profile, and the cross-sectional properties of the assembly are merged to form a dynamic model that can be used to build surfaces, sample cross sections, generate quantities, and much more.

Most commonly, corridors are used to model roads, but they can also be adapted to model berms, streams (see [Figure 9.3](#)), trails, and even parking lots.

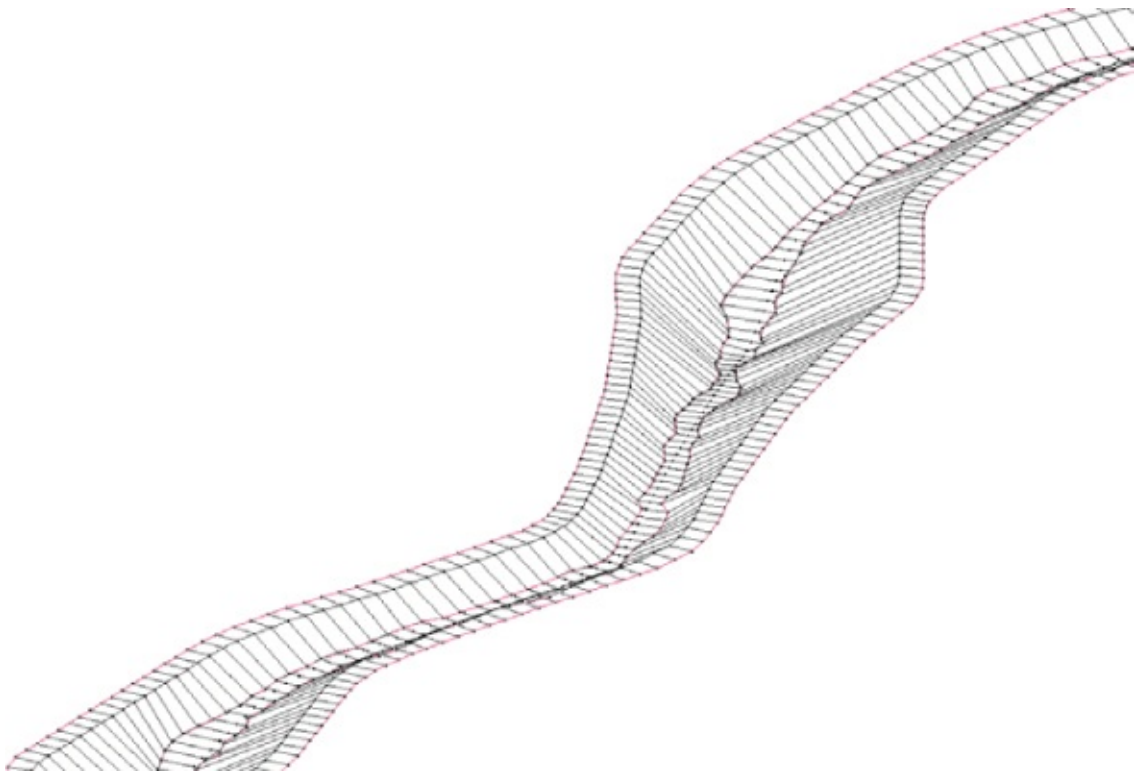


Figure 9.3 A stream modeled with a corridor

Recognizing Corridor Components

Certification Objective First, let's look at some important corridor components you will want to become familiar with

before proceeding. *Baseline*, *region*, *assembly*, *frequency*, and *target* are all parts of a corridor that you will encounter even on your first design.

Baseline

The first component for any corridor is a *baseline*. The baseline is composed of two Autodesk® AutoCAD® Civil 3D® objects, an alignment providing the horizontal layout, and a profile providing the vertical layout. The baseline generates the backbone skeleton on which the assembly can hang. Corridors can contain more than one baseline. Therefore, a network of roads can be modeled using one corridor.

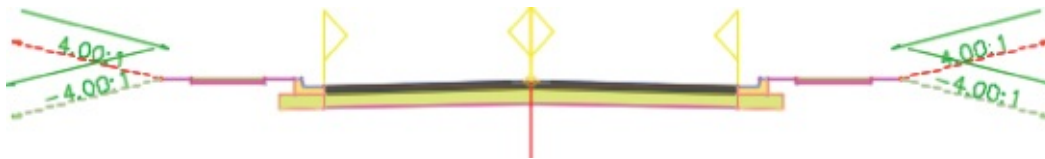
In most of the examples in this chapter, the baseline will correspond to the centerline alignment with a profile representing the elevation at the crown of a proposed road. However, this is not always the case, as we will explore in more depth in Chapter 10, “Advanced Corridors, Intersections, and Roundabouts.” As your designs become more detailed, you may have corridors with multiple baselines.

Region

When the geometry along a baseline changes enough to warrant a new assembly, a new *region* is needed. Regions specify the station range where a specific assembly is applied to the design. There may be many regions along a baseline to accommodate design geometry, but the regions may not overlap. Therefore, each region has a start station and an end station, with the end station of one region often matching the start station of the next region.

Assembly

Marker points, *links*, and *shapes* are coded into the subassemblies that the assembly contains, as you saw in Chapter 8, “Assemblies and Subassemblies.” Assemblies are the third Civil 3D object that is required to generate the corridor by providing cross-sectional information to be applied along some or all of the length of the baseline. [Figure 9.4](#) shows a symmetric roadway assembly that consists of lanes, curbs, sidewalks, and daylight links.



[Figure 9.4](#) Typical roadway assembly

Frequency

Frequency refers to how often the assembly is applied to the corridor design. You can set the frequency for the corridor as a whole or for each region.

The frequency value will vary depending on the situation. The default frequencies of the stock Civil 3D templates are 25' in Imperial units and 20 m for metric units. But like many of the settings in Civil 3D, these defaults can be changed in your drawing or template settings by using the following simple steps:

1. On the Settings tab of Toolspace, expand the Corridor > Commands branch.
2. Right-click the Create Corridor command and choose Edit Command Settings to display the Edit Command Settings – Create Corridor dialog.
3. Expand Assembly Insertion Defaults.

4. Change Frequency Along Tangents, Frequency Along Curves, Frequency Along Spirals, Frequency Along Profile Curves, or any other of the multitude of default settings associated with creating a corridor.

A new feature in Civil 3D 2015 is an alternative to configuring frequency along curvatures. Instead of using a constant distance value for frequency, frequency can be triggered by the mid-ordinate distant value. This frequency setting can be applied to curves in the alignment or curves in offset targets (targets will be discussed in the next section), resulting in more frequent insertions of assemblies along smaller curves and less frequent insertions of assemblies along larger curves. This produces a more precise and accurate 3D model without a lot of manual overrides on the region level.

In addition to the frequencies based on the alignment or profile entity, Civil 3D can place frequency lines at special stations such as horizontal geometry stations, superelevation critical stations, profile geometry stations, profile high/low stations, and offset target geometry stations. You can also manually create additional frequency stations for things like driveways or culvert crossings.

Target

As you learned in Chapter 8, three types of targets can be configured in a corridor: a target surface, a target elevation, and a target offset. Targets can be used in lieu of additional assemblies to change corridor geometric characteristics such as cross slope (elevation targets) and lane width (offset target). Surface targets can be used in daylighting or roadway rehabilitation scenarios. Some targets are optional, whereas others are required. For a detailed explanation on targeting for each stock assembly, refer to the help files.

Corridor Feature Lines

When a corridor is created, corridor feature lines are generated. These feature lines can represent back of curb, top of curb, flow lines, edges of pavement, crowns, and any other breakline that would be produced based on your proposed typical roadway section. Corridor feature lines are drawn along the corridor, connecting marker points of identical codes in between assembly frequencies, as shown in [Figure 9.5](#). This takes traditional roadway design to another level: a collection of cross sections occurring at specified frequencies becomes a dynamic three-dimensional object model.

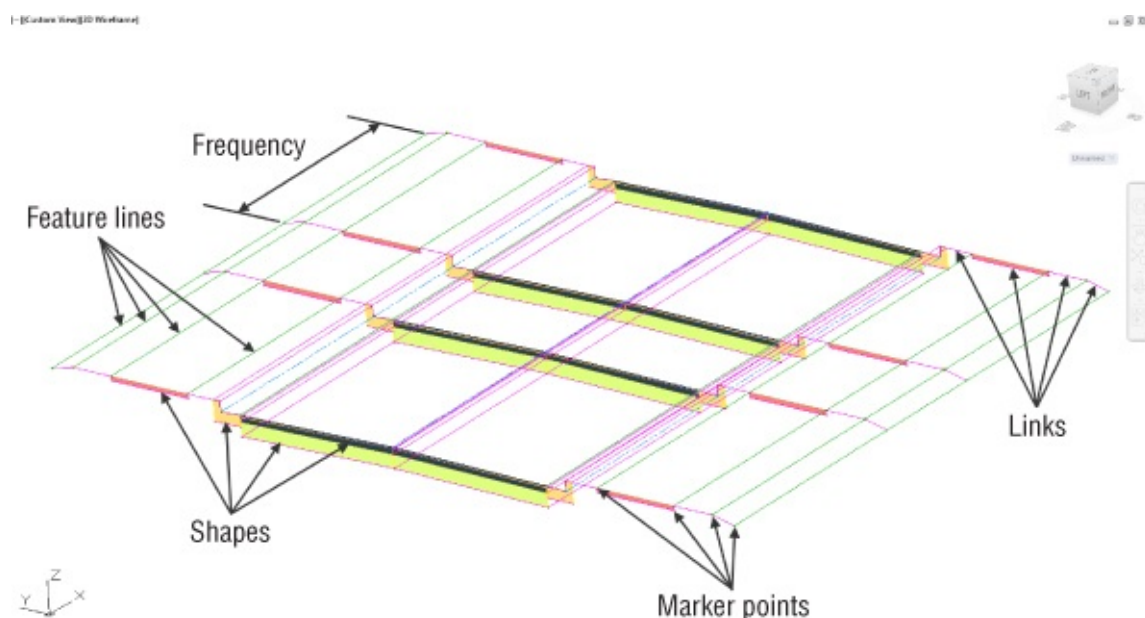


Figure 9.5 The anatomy of a corridor

Later in this chapter, we will take a closer look at corridor feature lines.

This exercise gives you hands-on experience in building a corridor model from an alignment, a profile, and an assembly:

1. Open the 0901_RoadCorridor.dwg file or 0901_RoadCorridor_METRIC.dwg file. You can download these files from www.sybex.com/go/masteringcivil3d2015.
Note that the drawing has several alignments, profile views containing the existing and design profiles for each, an assembly, and an existing ground surface.
2. From the Home tab ➤ Create Design panel, choose Corridor to display the Create Corridor dialog.
3. In the Name text box, name the corridor **North River Crossing**.
Keep the default values for Corridor Style and Corridor Layer.
4. Set Alignment to ROAD C and set Profile to FG-ROAD C (take extra care not to select EG-ROAD C by mistake).
Notice that you can use the small green selection button to select the object on the screen instead of using the drop-down list if you prefer.
5. Verify that Assembly is set to Urban 14' Single-Lane (or Urban 4.5 m Single-Lane for metric users).
6. Verify that Target Surface is set to Existing Surface.
7. Verify that the Set Baseline And Region Parameters check box is selected.

The Create Corridor dialog should now look similar to [Figure 9.6](#).

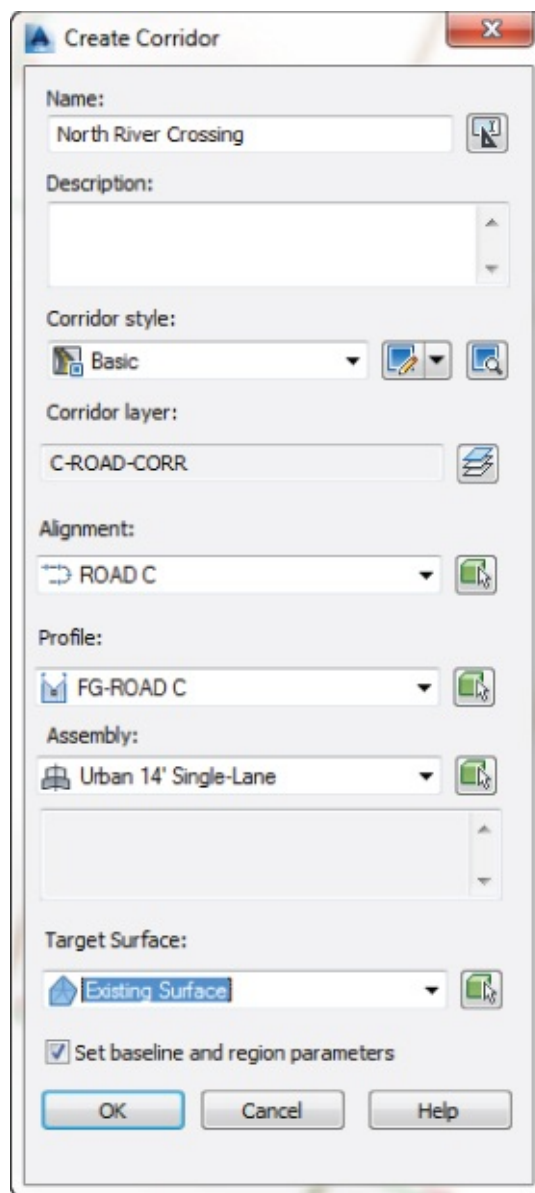


Figure 9.6 The Create Corridor dialog

8. Click OK to accept the settings and to display the Baseline And Region Parameters dialog, as shown in [Figure 9.7](#).

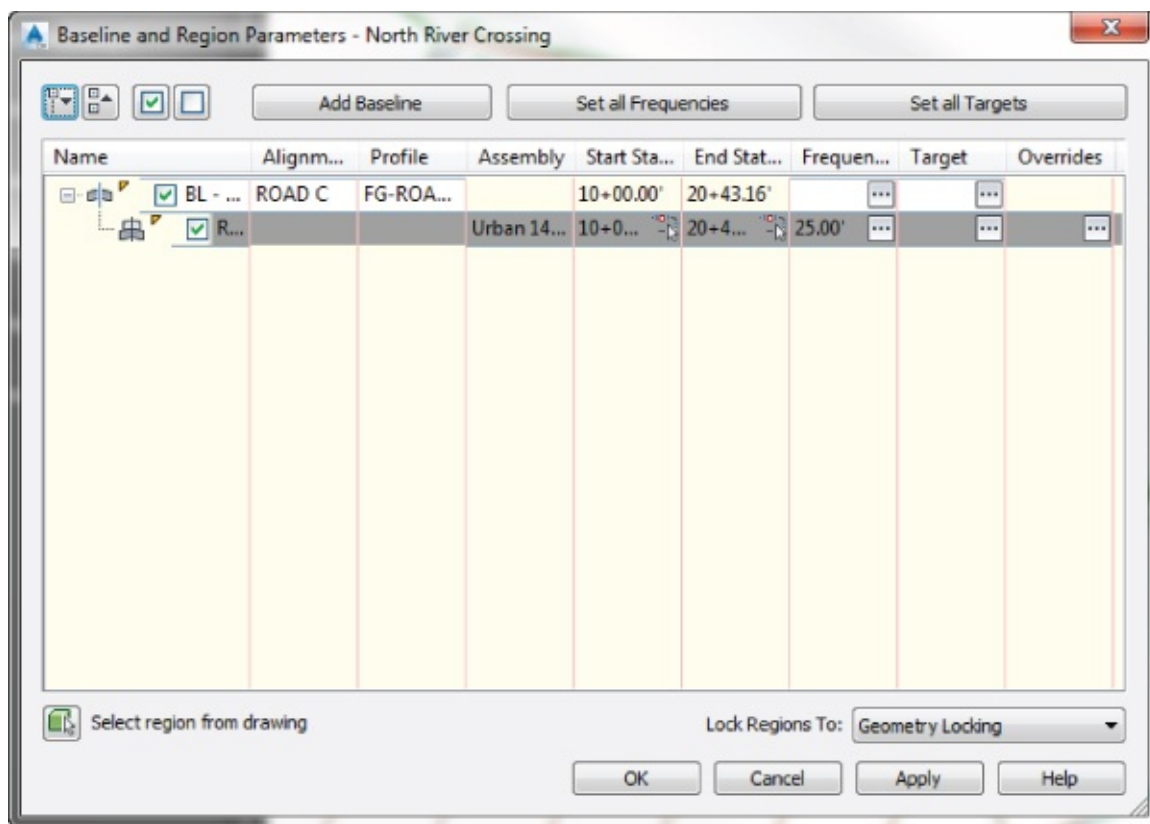


Figure 9.7 The Baseline And Region Parameters dialog

Notice that there is currently one baseline containing one region. The Start Station and End Station values of the region match those of the baseline.

Understanding the Locking Regions

At the bottom of the Baseline And Region Parameters dialog is a drop-down list for locking regions. In versions prior to Civil 3D 2013, all regions were locked to the station. However, now there are two options for locking regions: Geometry Locking and Station Locking.

By default on new drawing files, this drop-down will be set to Geometry Locking. If you open a drawing created in a previous version, the drop-down will be set to Station Locking, but you can change it to Geometry Locking if you desire. You can update this default in your existing templates as needed by using the following steps:

1. On the Settings tab of Toolspace, expand the Corridor > Commands branch.
2. Right-click the Create Corridor command and choose Edit Command Settings to display the Edit Command Settings – Create Corridor dialog.
3. Expand Assembly Insertion Defaults.
4. Change the Lock Region To value to the desired setting.

You can experiment with either option to see how it will affect your corridor as you make changes to the corridor's baseline.

Most of the other settings have already been set from the information you provided in the Create Corridor dialog, but let's take a few minutes to look at some of the settings in the Baseline And Region

Parameters dialog.

- Click the ellipsis button in the Frequency column in the first row associated with the baseline (BL) to display the Frequency To Apply Assemblies dialog.

By clicking the ellipsis in the first row that is associated with the baseline, you will be setting the frequency for all of the regions within that baseline. In this instance you have only one region, but setting them all at once is a good habit to get into when applicable. You could also click the Set All Frequencies button, which would set the frequency for all of the baselines and all of the baseline regions.

- Examine the settings in the Frequency To Apply Assemblies dialog, as shown in [Figure 9.8](#).

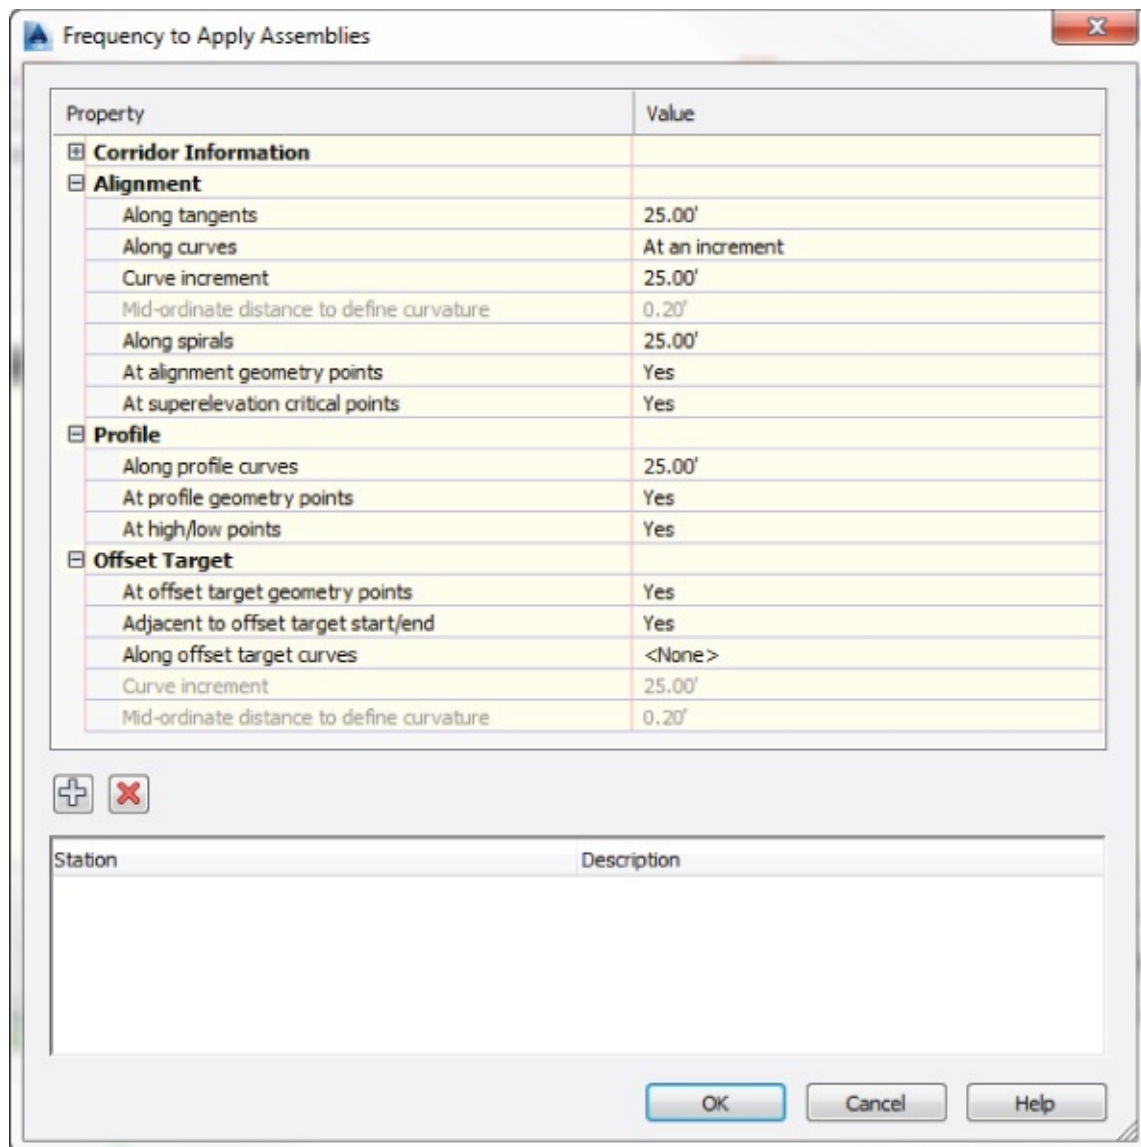


Figure 9.8 The Frequency To Apply Assemblies dialog

You can vary the default frequency distance for the portions of the region along tangents, curves, spirals, and profile curves. You can also base frequency along alignment and offset curves by curvature (mid-ordinate distance) instead of by increment. In addition, you can add frequency lines at various geometry points. At the bottom of the dialog you can add a user-defined station.

- Click OK to accept the settings in the Frequency To Apply Assemblies dialog.
- Click the ellipsis button in the Targets column in the baseline row to display the Target Mapping dialog.

The ellipsis buttons in this column behave the same way as the ellipsis buttons in the Frequency column. Notice that there is also a Set All Targets button, which can be used to set the targets for all of the baselines and all of the baseline regions.

13. Examine the settings in the Target Mapping dialog, as shown in [Figure 9.9](#).

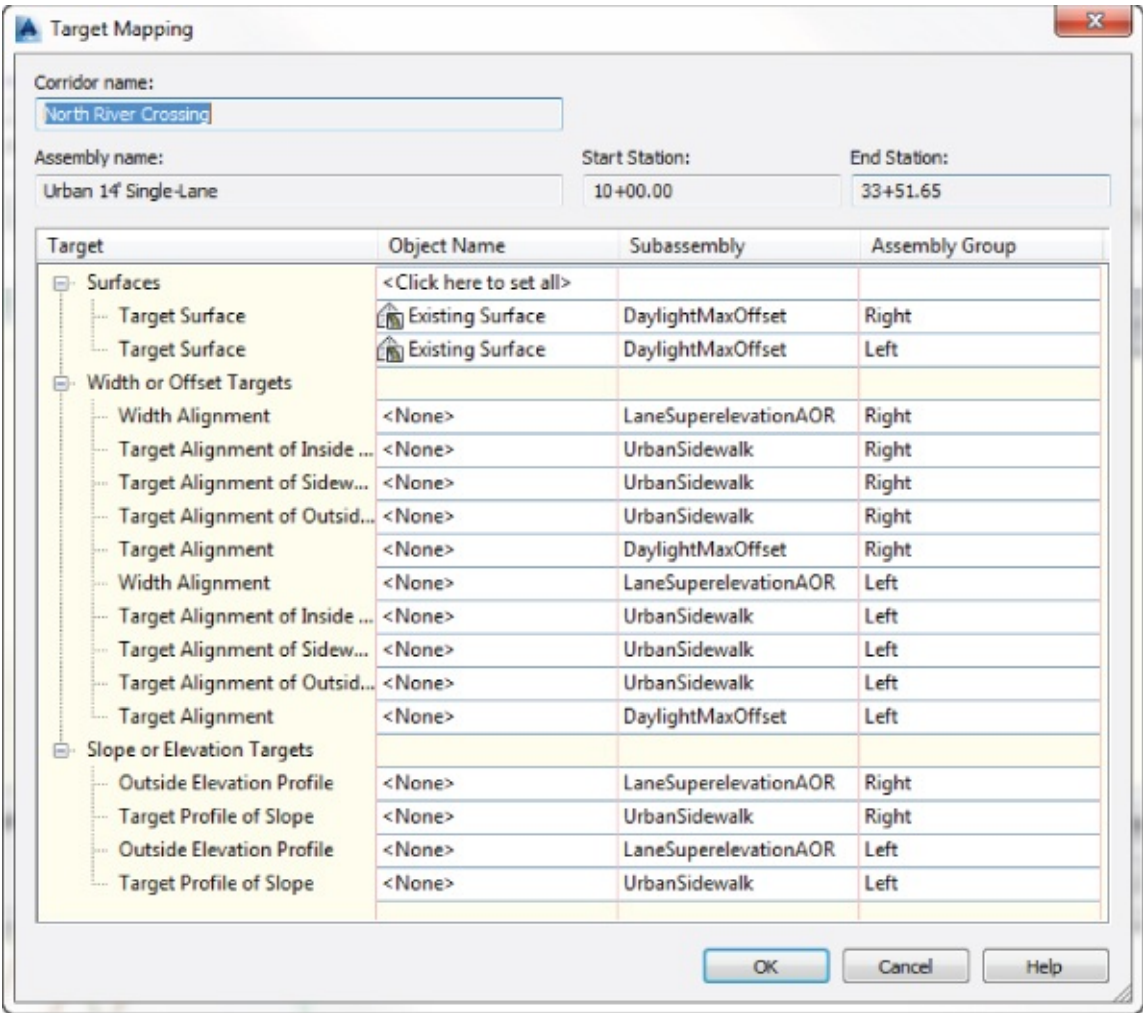


Figure 9.9 The Target Mapping dialog

The information in this dialog will vary depending on the subassemblies assigned to the assembly used for this corridor baseline but will always be broken into three categories: Surfaces, Width Or Offset Targets, and Slope Or Elevation Targets. Notice that because you selected Existing Surface as the target surface when creating the corridor, Existing Surface is already set as the target surface for the left and right subassemblies targeting a surface.

14. Click OK to accept the settings in the Target Mapping dialog.
15. Click OK to accept the settings in the Baseline And Region Parameters dialog.

If at any point you want to return to the information shown on this dialog, you can do so on the Parameters tab of the Corridor Properties dialog, which we will look at a little later in this chapter.

16. You will see a dialog warning you that the corridor definition has been modified and giving you two options: Rebuild The Corridor or Mark The Corridor As Out-Of-Date. Select the Rebuild The Corridor option.

If you click the check box at the bottom of this warning dialog that says “Always perform my current choice,” you will not see this warning dialog again.

Understanding the Locking Regions

If you select the check box (or any others) to hide a message and later want to receive the warning dialog again, you can reactivate it in the future by entering **options** on the command line. On the System tab, click the Hidden Message Settings button.

You will receive an error message in Panorama, as shown in [Figure 9.10](#), that read “Intersection with target could not be computed,” “Intersection Point doesn't exist,” or something similar. You will rectify this issue in the following steps.

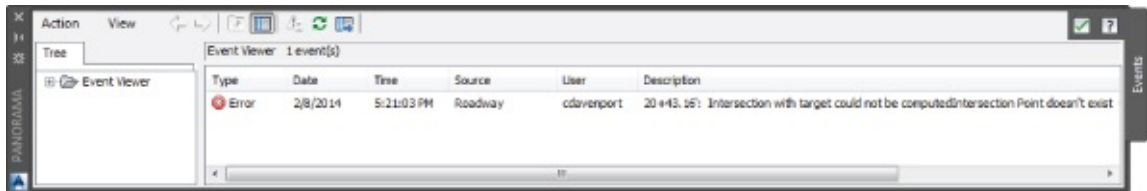



Figure 9.10 Corridor error in Panorama

 If Panorama did not automatically display, from the Home tab > Palettes expanded panel, choose Event Viewer.

7. Dismiss Panorama.

Your corridor should look similar to [Figure 9.11](#).

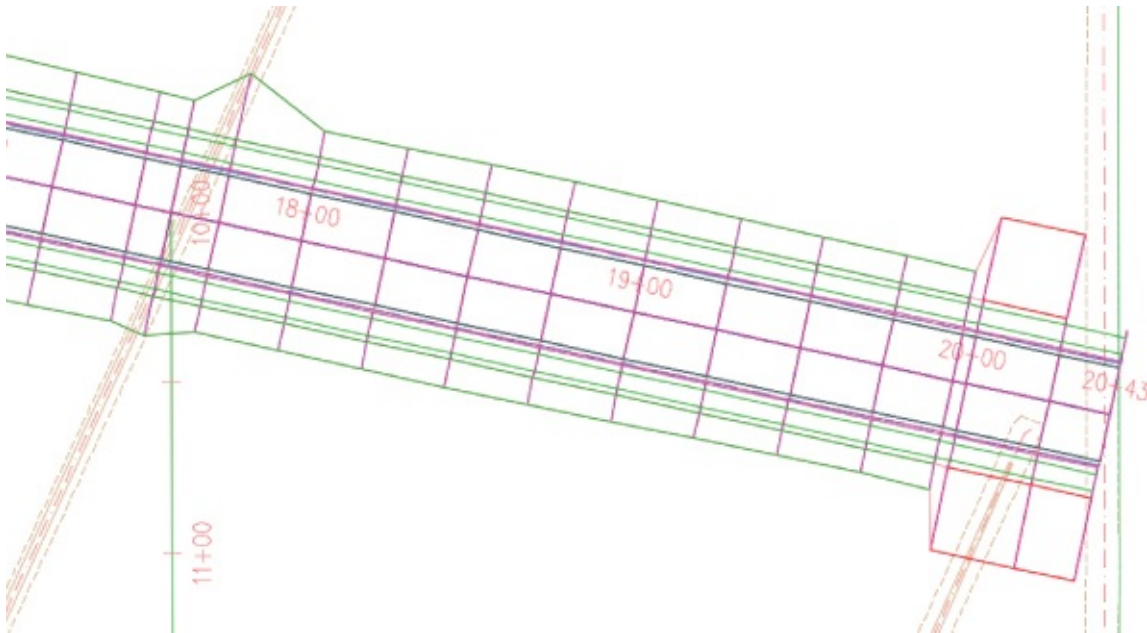


Figure 9.11 A portion of the nearly completed corridor

Now, let's try to figure out why those messages appeared in Panorama. In plan view, at the last station on the east end of the alignment, notice that on the left side some of the feature lines are not connecting (shown in [Figure 9.11](#)). Daylighting could not occur at the final station because the alignment is extending outside the outer edge of the surface. Furthermore, a look at the corridor in the Object Viewer shows a “waterfall” (see [Figure 9.12](#)).


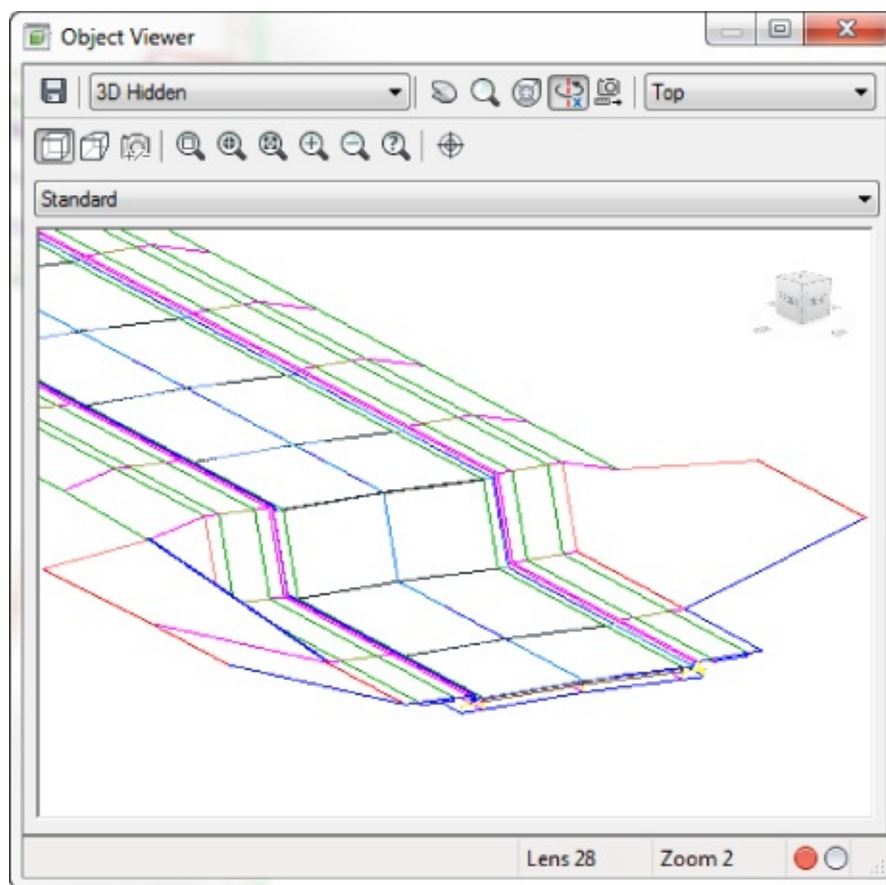


Figure 9.12 A “waterfall” at the end of the alignment viewed in the Object Viewer

Viewing the Corridor in the Object Viewer

If you'd like to view the corridor in the Object Viewer, do the following:

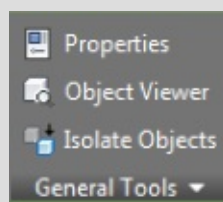1. Select one of the corridor lines to activate the Corridor contextual tab.
2. From the Corridor contextual tab > General Tools panel, choose Object Viewer.



3. Use the View Control drop-down from the top of the Object Viewer to view the corridor from various isometric views, or press and hold the left button on your mouse and move the object around to view it from various custom angles.
4. After you have examined the corridor, click the X in the upper-right corner to dismiss the Object Viewer.

The fact that the alignment is extending outside the outer edge of the surface isn't the only cause of the error in Panorama. If you take a look at the profile view for ROAD C, the FG-ROAD C profile does not extend to the end of the alignment, which explains the waterfall. A waterfall occurs when the profile used in the corridor is not providing elevation data along a station range of the alignment. Therefore, the corridor dives down to elevation zero in that station range. In this case, you need to shorten the corridor so that it builds along the station range matching FG-ROAD C.

8. Select the corridor to activate the Corridor contextual tab.



9. From the Corridor contextual tab > Modify Corridor panel, choose Corridor Properties icon to display the Corridor Properties dialog.
10. In the Corridor Properties dialog, switch to the Parameters tab.

Notice in [Figure 9.13](#) that the end station for the region is 20+43.16' (or 0+622.76m for metric users), which is based on the full length of the alignment. However, the design profile ends at 19+95' (or 0+608m for metric users). Even though there is no elevation assigned at 20+43.16' (or 0+622.76m for metric users), the corridor assumes an elevation of zero at this station, which creates this waterfall effect. To fix this, you need to tell the corridor to end the region at the final station of the design profile. Note that even though the display value shows only two (or three) decimal places, the corridor examines up to eight decimal places of precision, which means that the value being displayed as the final station of the design profile may be a rounded-up value. If this is the case, this too will create a waterfall effect.

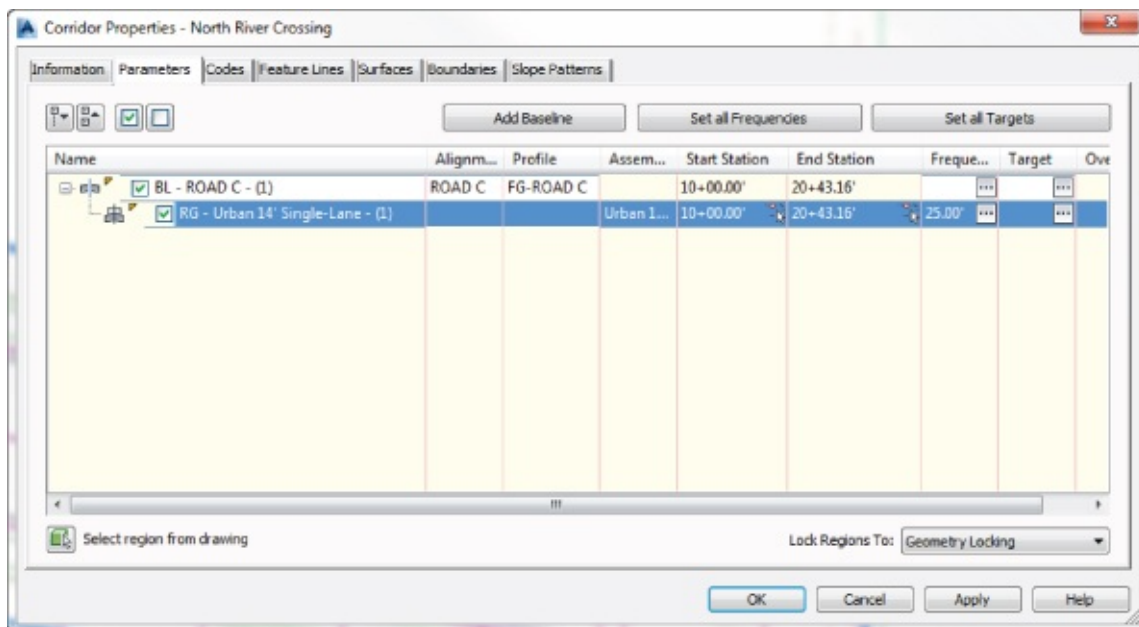


Figure 9.13 Corridor Properties dialog, Parameters tab

11. Click into the End Station field for the region and enter **1995** (or **608** for metric users).
Entering the value with station notation (the plus sign) is not needed.
Notice that you could alternatively click the station picker button in this cell to select the station on the plan.
12. Click OK to accept the settings in the Corridor Properties dialog.
13. If you didn't click the check box at the last warning dialog, you will receive the same warning again. If so, select the Rebuild The Corridor option to allow the corridor to rebuild.

No new errors will appear in Panorama.

A quick look in the Object Viewer should reveal that the waterfall is gone. When this exercise is complete, you may close the drawing. A finished copy of this drawing is available from the book's website with the filename 0901_RoadCorridor_FINISHED.dwg or

Rebuilding Your Corridor

A corridor is a *dynamic* model—which means that if you modify any of the objects used to create the corridor, the corridor must be rebuilt to reflect those changes. For example, if you make a change to the design profile, you must rebuild the corridor to bring it up to date. The same principle applies to changes to alignments, assemblies, target surfaces, and any other corridor building blocks or parameters.

You can access the Rebuild command by right-clicking the corridor name in Prospector, as shown in [Figure 9.15](#).

You can also rebuild the corridor or rebuild all corridors by selecting the corridor object and choosing Rebuild Corridor or Rebuild All Corridors from the Corridor contextual tab ➤ Modify Corridor panel, as shown in [Figure 9.14](#).

Avoiding Lengthy Rebuilds

For large, complex corridors, you may want to consider leaving the Rebuild Automatic option unchecked. Every time a change is made that affects a region in your corridor, those regions that have been modified will go through the rebuilding process. This is an improvement from previous versions of Civil 3D, which rebuilt the full corridor even if a modification affected only one region. Nonetheless, the larger or more complex the corridor is and the more regions you are modifying, the longer the rebuild process will take.

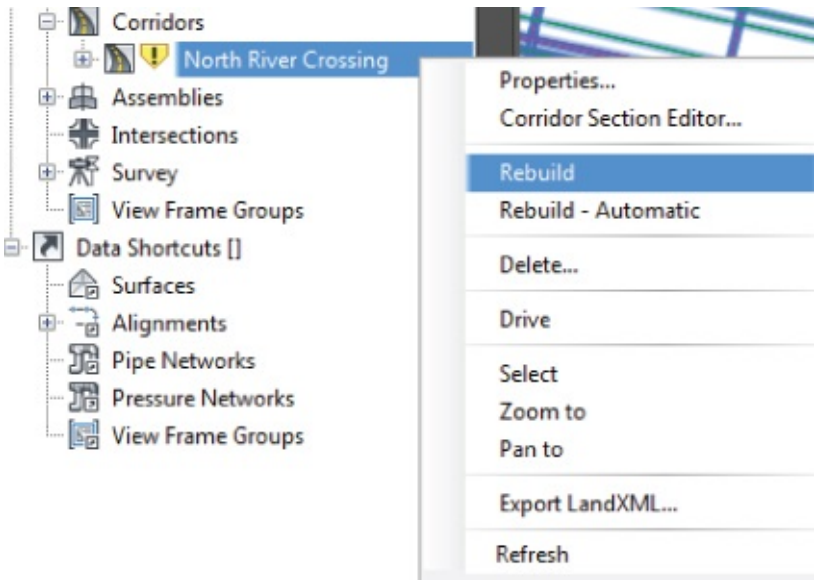


Figure 9.14 Rebuilding the corridor from the Corridor contextual tab

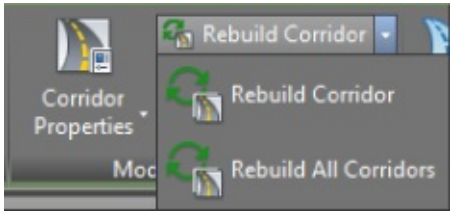


Figure 9.15 In Prospector, expand the Corridors branch and right-click the corridor name to rebuild it.

Tweaking Corridors

Your corridor may not be perfect on your first iteration of the design. Become comfortable getting into and working with the Parameters tab of the Corridor Properties dialog. You will spend the majority of your time modifying your corridor on this tab.

Whether you are building your first corridor or your five hundredth, odds are good that you will run into one of the following common issues:

Problem The waterfall effect: Your corridor seems to fall off a cliff, meaning the beginning or ending station of your corridor drops down to elevation zero.

Typical Cause The range of your corridor is longer than the design profile.

Fix This is exactly what you ran into in the first exercise. The corridor takes the initial station range from your alignment. However, sometimes you don't tie into existing ground at the exact alignment start and end stations, so you need to adjust the corridor stations accordingly.

If you need to check the exact start and end stations of the design profile, the best place to do so is the Profile Data tab in the Profile Properties dialog (as shown in [Figure 9.16](#)). Edit your corridor region to begin and end at the design profile station.

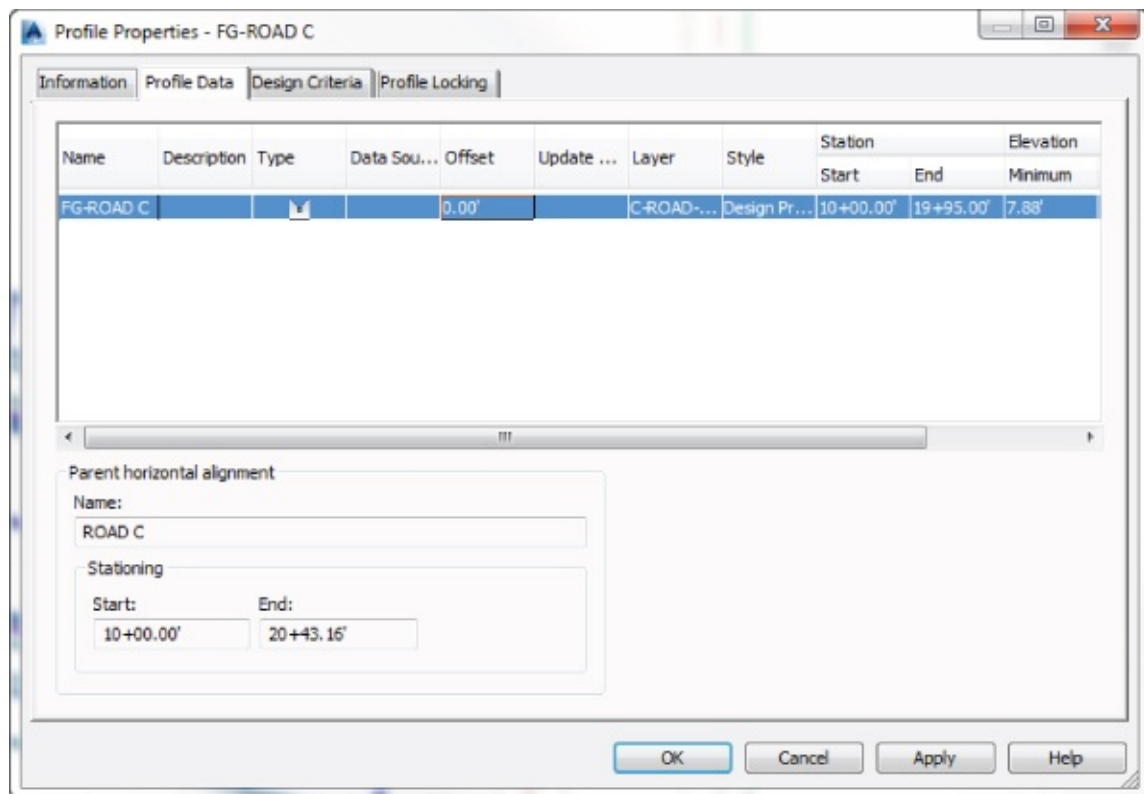


Figure 9.16 Check your Profile Properties dialog to verify the station range of the design profile.

Alternatively, you can use the station picker button to select the first and last corridor region stations by snapping to the first and last frequency lines that correspond to your profile geometry.

Problem Your corridor seems to take longer to build and has irregular frequency stations. Also, your daylighting may not extend out to where you expect it (see [Figure 9.17](#)).

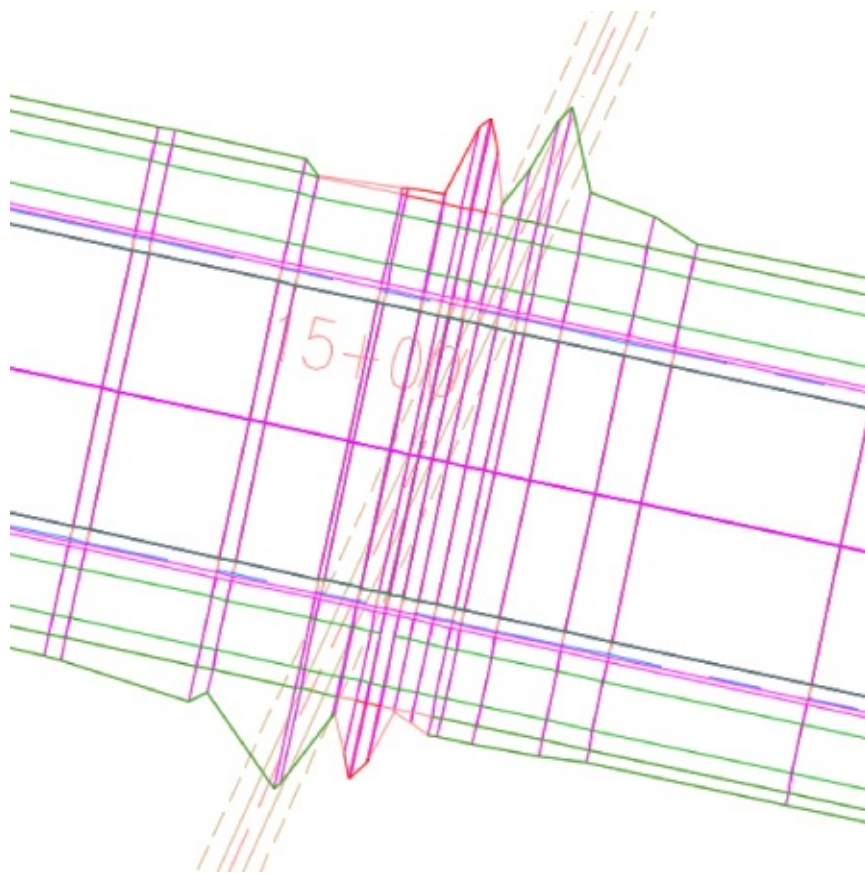


Figure 9.17 An example of unexpected corridor frequency

Typical Cause You accidentally chose the existing profile instead of the design profile for your baseline profile. Most corridors are set up to place a frequency line at every vertical geometry point, and a profile, such as the existing profile, has many more vertical geometry points than a layout profile (in this case, the design profile). These additional points on the existing profile are the cause of the unexpected frequency lines.

Fix Always use care to choose the correct profile. Either physically select the profile onscreen or make sure your naming conventions clearly define your finished grade as finished grade. If your corridor is already built, select the corridor, right-click, and choose Corridor Properties, as shown in [Figure 9.18](#). On the Parameters tab of the Corridor Properties dialog, change the profile from the existing profile to the design profile.

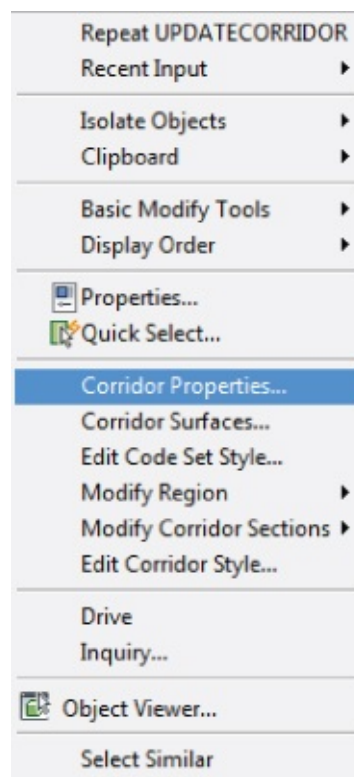


Figure 9.18 The context menu available on the Corridor object

Adding a surface target throws another variable into the mix. Here is a list of some of the most typical problems new users face and how to solve them:

Problem Your corridor doesn't show daylighting even though you have a daylight subassembly on your assembly. You may also get an error message in Event Viewer, as shown in [Figure 9.19](#).

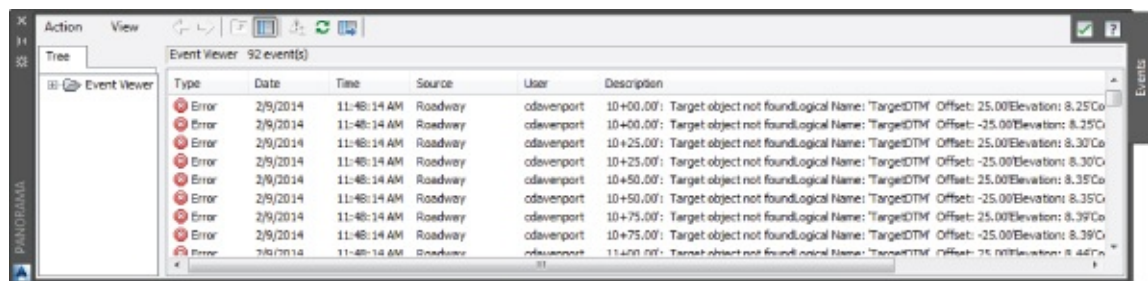


Figure 9.19 Error messages associated with absence of daylighting

Typical Cause You forgot to set the surface target when you created your corridor.

Fix Select the corridor, right-click, and choose Corridor Properties. On the Parameters tab of the Corridor Properties dialog, click the Set All Targets button. The Target Mapping dialog opens, and its first category is Surfaces. Click the <Click Here To Set All> text in the Object Name column field to display the Pick A Surface dialog. In this dialog, you can choose a surface for the daylight subassembly to target.

Problem Your corridor seems to be missing areas of daylighting. You may also get an error message in Event Viewer, as shown in [Figure 9.20](#).

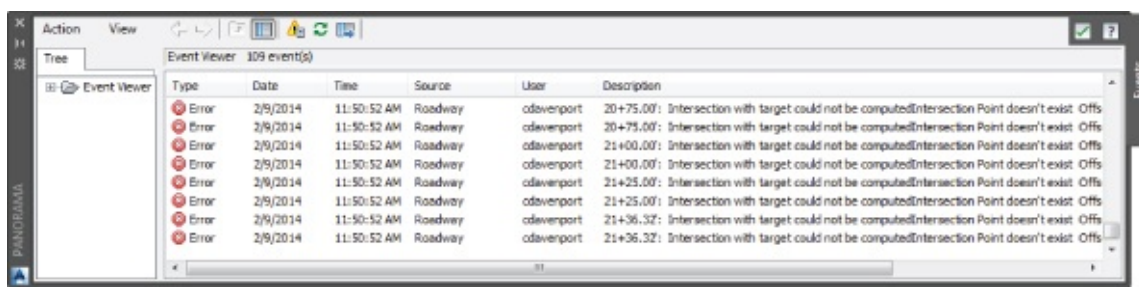


Figure 9.20 Error messages associated with missing areas of daylighting

Typical Cause The Daylight link cannot find the target surface within the parameters you've set in the subassembly properties. This could also mean that the target surface doesn't fully extend the full length of your corridor or your target surface is too narrow at certain locations.

Fix Add more data to your target surface. The daylighting subassemblies in your corridor need a surface to tie into at the slope, grade, or distance specified in subassembly properties.

You can also revisit your daylight subassembly settings to give the program a narrower offset or steeper slope or grade. Alternatively, you can adjust your alignment and/or profile to require less cut or fill, which would cause daylighting to occur over a shorter distance. Lastly, you can adjust your station range on the Parameters tab in Corridor Properties, as you did in the previous exercise.

If this is not possible, omit daylighting through those specific stations, and once your corridor is built, do hand-grading using feature lines or grading objects. You can also investigate other subassemblies such as LinkOffsetAndElevation that will meet your design intention without requiring a surface target.

Working with Corridor Feature Lines

Corridor feature lines are first drawn connecting marker points of the same code in between assembly frequencies. For example, a feature line will work its way down the corridor and connect all the Daylight points occurring from assembly to assembly. If there are Daylight points on the entire length of your corridor, then the feature line is drawn for the entire length of your corridor. If a region is defined along that same corridor without Daylight points, then the daylight feature line will end at that region.

The Feature Lines tab of the Corridor Properties dialog has a drop-down menu called Branching (see [Figure 9.21](#)) with two options: Inward and Outward.

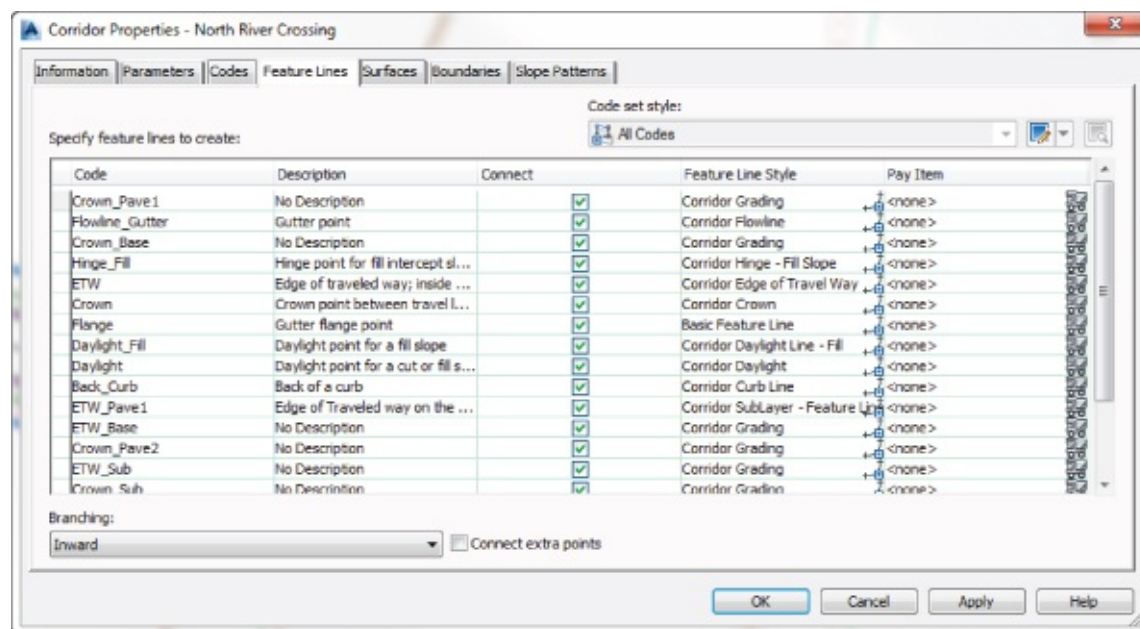


Figure 9.21 The Feature Lines tab of the Corridor Properties dialog

In the case of a two-lane road transitioning to a four-lane road, you would have two lane edges transitioning to four lane edges in the corridor. When branching inward, the feature lines representing those two lane edges will be drawn to the innermost lane edges of the four-lane road on their respective sides. When branching outward, the feature lines representing the two lane edges will be drawn to the outermost lane edges on their respective sides. This setting is particularly important for surface building purposes. Also on this tab is a check box labeled Connect Extra Points. If checked, this will cause the feature lines representing those two lane edges to branch out and connect to both the inner and outer lane edges on their respective sides (see [Figure 9.22](#)).

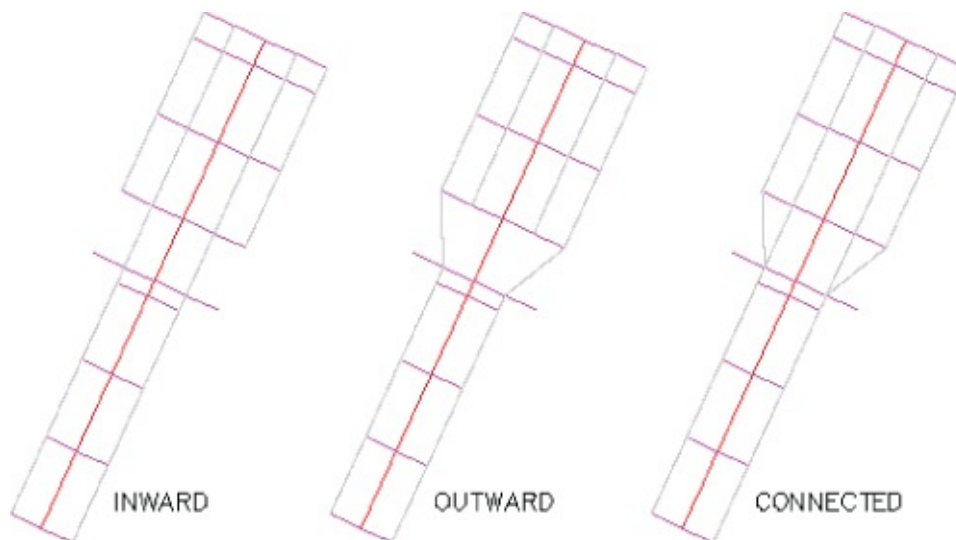


Figure 9.22 Feature line branching and connectivity options

As mentioned earlier, a feature line will connect the same point codes in between assembly frequencies by default. However, the Feature Lines tab of the Corridor Properties dialog allows you to eliminate certain feature lines on the basis of the point code. For example, if for some reason you did not want your Daylight points connected with a feature line, you could toggle that feature line off using the check box in the Connect column.

Corridor feature lines represent the linear features of your corridor like crown, pavement edge, flow line, back and top of curb, and sidewalk edges. Feature lines can also be generated for the edges of all

pavement layers, base layers, and sub-base layers. You will be using feature lines in Chapter 14, “Grading,” for grading purposes. The difference between the two types of feature line is that corridor feature lines live in the Corridor object.

There are several types of objects you can extract from the Corridor object. If you select the corridor to activate the Corridor contextual tab, you will notice that the Launch Pad panel, shown in [Figure 9.23](#), offers tools for extracting points, alignments, profiles, polylines, and feature lines. The latter four objects are created from the corridor feature lines.

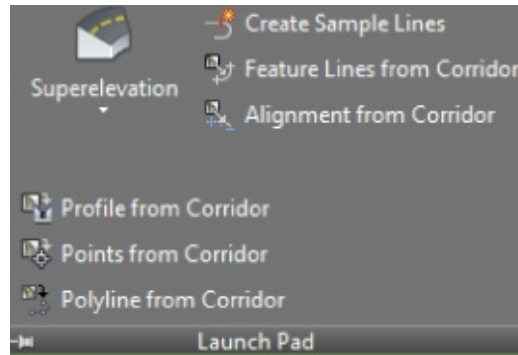


Figure 9.23 Launch Pad panel of the Corridor contextual tab

A step-by-step explanation of how to extract a corridor feature line is given in the next exercise.

In the case of extracting a feature line, you have the choice of keeping the line dynamically linked to the corridor geometry or making it an entirely separate entity. When the feature line is linked, it automatically updates when the corridor updates. It cannot be modified. It can be used for grading, but it cannot be used for targeting in that corridor. If the feature line is not linked, it will not update with the corridor. It will be a duplicate of the corridor feature line, but it can be modified. It can also be used for targeting in that corridor. Both types of feature lines can be used as breaklines in surface models.

Once an alignment, profile, or 3D polyline has been extracted, its geometry can be adjusted independently. In this case, the profile, alignment, or polyline no longer retains a link to the corridor from which it originated. Once a profile, alignment, or 3D polyline has been extracted, you can use it as a target back in the corridor that formed it. In the following exercise, a corridor feature line is extracted to produce an alignment and profile:

1. Open the 0902_CorridorFeatureLine.dwg or 0902_CorridorFeatureLine_METRIC.dwg file.



2. From the Home tab > Create Design panel, choose Alignment > Create Alignment From Corridor.

Alternatively you can select the corridor by selecting the corridor feature line that you want to create an alignment from to activate the Corridor contextual tab. From the Launch Pad panel, choose Alignment From Corridor. *If you do this, then skip the next step.*

3. At the Select a corridor feature line: prompt, select the feature line labeled in the drawing as TOP OF CURB FEATURE LINE.
4. In the Name text box of the Create Alignment From Objects dialog, name the alignment **Road D East Top Curb**.
5. Verify that Type is set to Offset.

6. On the General tab of the Create Alignment From Objects dialog, verify the following settings:
- Alignment Style is set to Basic.
 - Alignment Label Set is set to _No Labels.
 - The Create Profile check box is selected.
 - The dialog should match [Figure 9.24](#).

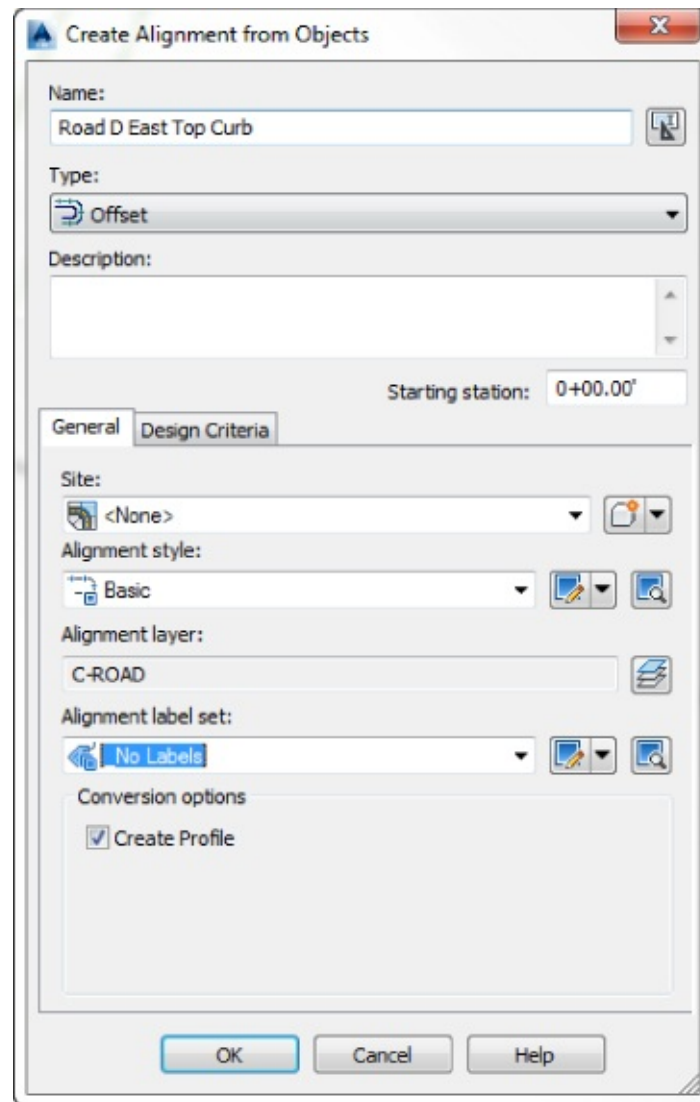


Figure 9.24 The completed Create Alignment From Objects dialog

7. Click OK to accept the settings in the Create Alignment From Objects dialog and display the Create Profile – Draw New dialog.
8. In the Name text box of the Create Profile – Draw New dialog, name the profile **FG-Road D East Top Curb**.
9. On the General tab of the Create Profile – Draw New dialog, verify that the profile style is set to Design Profile and that the profile label set is set to _No Labels.

The dialog should match [Figure 9.25](#).

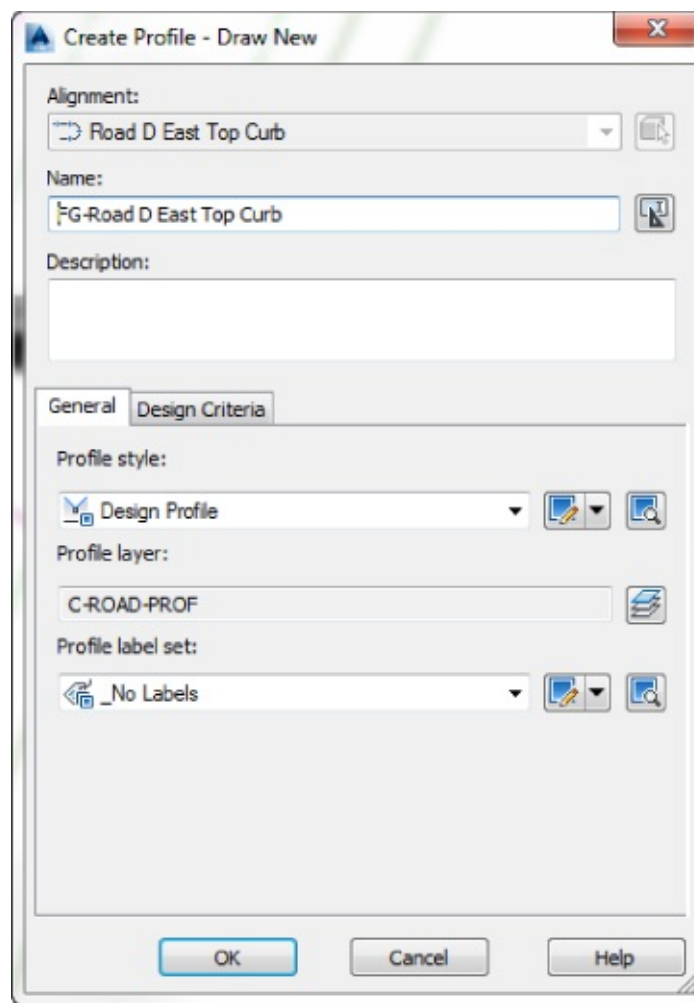


Figure 9.25 The Create Profile – Draw New dialog

10. Click OK to accept the settings in the dialog and then press \leftarrow to exit the command.
11. In Prospector, expand Alignments > Offset Alignments > Road D East Top Curb > Profiles to review the completed alignment and profile (see [Figure 9.26](#)).

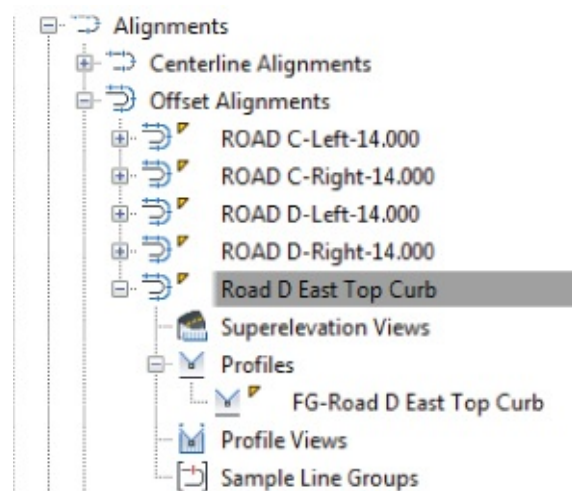


Figure 9.26 A completed alignment and profile shown on the Prospector tab of Toolspace

There are additional offset alignments listed on Prospector that were created to construct the intersection of Road C and Road D. You will be learning about intersections in the next chapter.

Next, you will extract a corridor feature line and keep it dynamically linked to the corridor.



2. From the Home tab > Create Design panel, choose Feature Line > Create Feature Line From Corridor.
3. Alternatively, you can select the corridor by selecting the corridor feature line that you want to create a feature line from to activate the Corridor contextual tab and then selecting Feature Lines From Corridor from the Launch Pad panel. *If you do this, then skip the next step.*
4. At the Select a corridor feature line: prompt, select the feature line labeled in the drawing as DAYLIGHT FEATURE LINE.

This opens the Select A Feature Line dialog, similar to the one shown in [Figure 9.27](#).

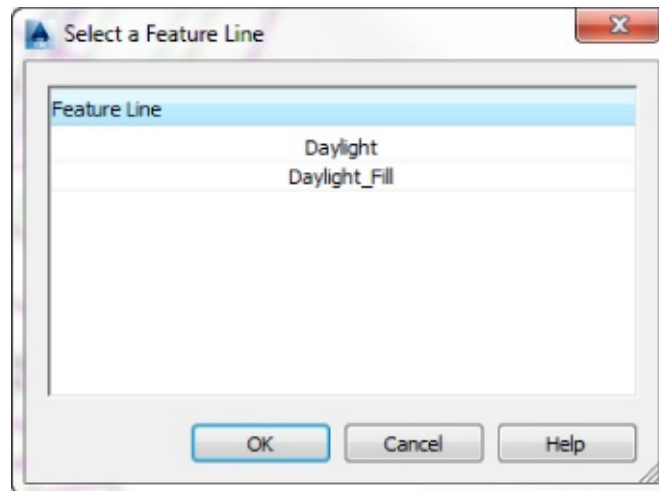


Figure 9.27 Selecting the Daylight feature line with the Select A Feature Line dialog

The Select A Feature Line dialog will open when there are overlapping feature lines available at the location selected.

5. Select the Daylight feature line from the Select A Feature Line dialog.
6. Click OK to close the Select A Feature Line dialog and display the Create Feature Line From Corridor dialog.
7. Select the Name check box and name the feature line **Road D Daylight East**.
8. Verify that Style is set to Corridor Grading.
9. Verify that the Create Dynamic Link To The Corridor check box is selected.

All other settings can be left at their defaults. The dialog should match [Figure 9.28](#).

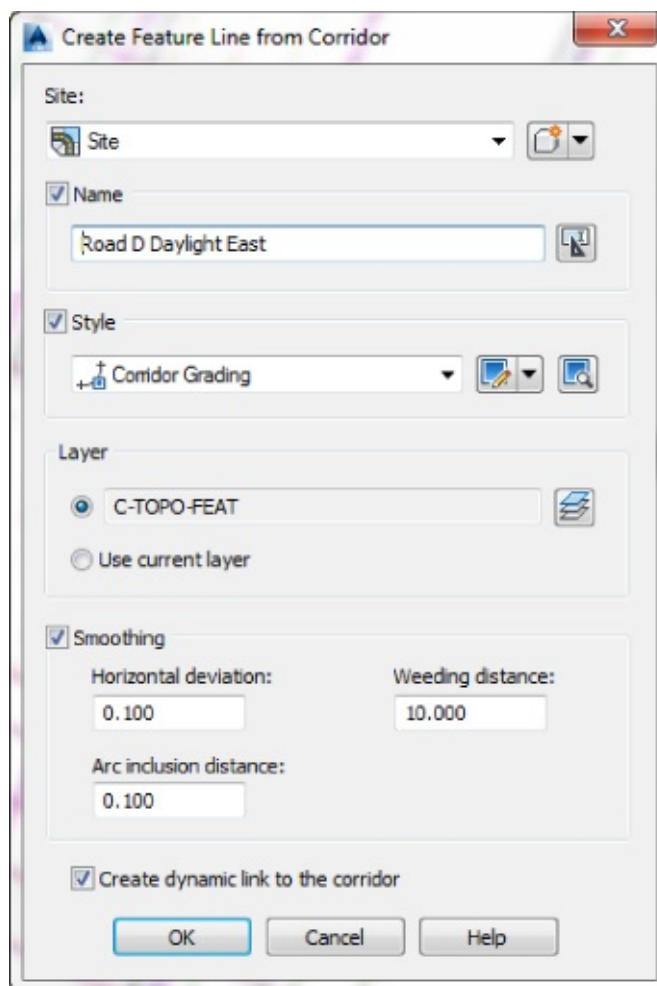


Figure 9.28 The Create Feature Line From Corridor dialog with the option to create a dynamic link turned on

20. Click OK to accept the settings in the dialog and then press \leftarrow to exit the command.
21. Select the newly created auto corridor feature line.
Note that it can be selected but does not have grips.
22. From the Feature Line contextual tab \triangleright Modify panel, click the Edit Geometry and Edit Elevations buttons to reveal these hidden panels if they are not displaying. Note which options on the contextual tab are grayed out and which are not, as shown in [Figure 9.29](#).



Figure 9.29 Auto Corridor Feature Line contextual tab

These alignments and feature lines can now be used for further design. Remember that feature lines created from the corridor but not dynamically linked to the corridor are no longer connected to the corridor and will not update as you make modifications to the corridor.

When this exercise is complete, you may close the drawing. A finished copy of this drawing is available from the book's web page with the filename 0902_CorridorFeatureLine_FINISHED.dwg or 0902_CorridorFeatureLine_METRIC_FINISHED.dwg.

Understanding Targets

Every subassembly is programmed with parameters. Some of these parameters are fixed values like pavement thickness. A lot of subassemblies are programmed with targeting parameters. Examples of targeting parameters would be lane width and cross slope. Lane width and cross slope can be variable. Therefore, if this is the case, you could use alignment and profile targets to define the variable lane width and cross slope.

Alignments, profiles, feature lines, survey figures, and polylines can be configured as targets for subassemblies with width or cross slope. Surface targets are used with daylighting and roadway rehabilitation subassemblies. Ever since the release of Civil 3D 2014, you can select these targets through external references. Not all subassemblies contain targeting parameters. You can refer to the help file for target information regarding any subassembly you plan to use.

When you built the corridor in the first exercise, the opening dialog prompted you for a surface target. Next we will take a look at linear targets.

Using Target Alignments and Profiles

So far, the corridor examples you looked at have a constant cross section. In this section, we'll take a look at what happens when a portion of your corridor needs to transition to a wider section and then transition back to normal.

Many subassemblies have been programmed to allow for not only a baseline attachment point but also additional outer attachment points that can target alignments, feature lines, and profiles. Be sure to check the subassembly help file to make sure the subassembly you are using will accept targets if you need them. In Chapter 8, you learned that you can right-click any subassembly in the Tool Palettes window to enter the help file. For instance, the BasicLane subassembly will show None in the Target Parameters area of the help file, but LaneSuperElevationAOR lists Lane Width and Outside Elevation.

Think of a subassembly as a rubber band that is attached both to the baseline of the corridor (such as the road centerline) and the target alignment. As the target alignment, such as a lane widening, gets further from the baseline, the rubber band is stretched wider. As that target alignment transitions back toward the baseline, the rubber band changes to reflect a narrower cross section.

[Figure 9.30](#) shows what happens to a cross section when various targets are set for the left edge of a traveled way for a lane subassembly. [Figure 9.30a](#) shows the assembly as it was originally placed in the drawing. The width from the original assembly is 14' with a cross slope of 2 percent to the edge of pavement. [Figure 9.30b](#) shows how the geometry changes if an alignment target is set for the edge of pavement. Notice that because there is no profile specified to change the elevation, the 2 percent cross slope is held and the lane width is the only geometry that changes. [Figure 9.30c](#) shows that if both an alignment and profile are specified for an edge of pavement alignment, the design cross slope and width both change. Last, you see the assembly with just a profile target assigned to the edge of pavement in [Figure 9.30d](#). In this case, the width stays at 14' but the elevation of the edge of pavement is dictated by the profile.

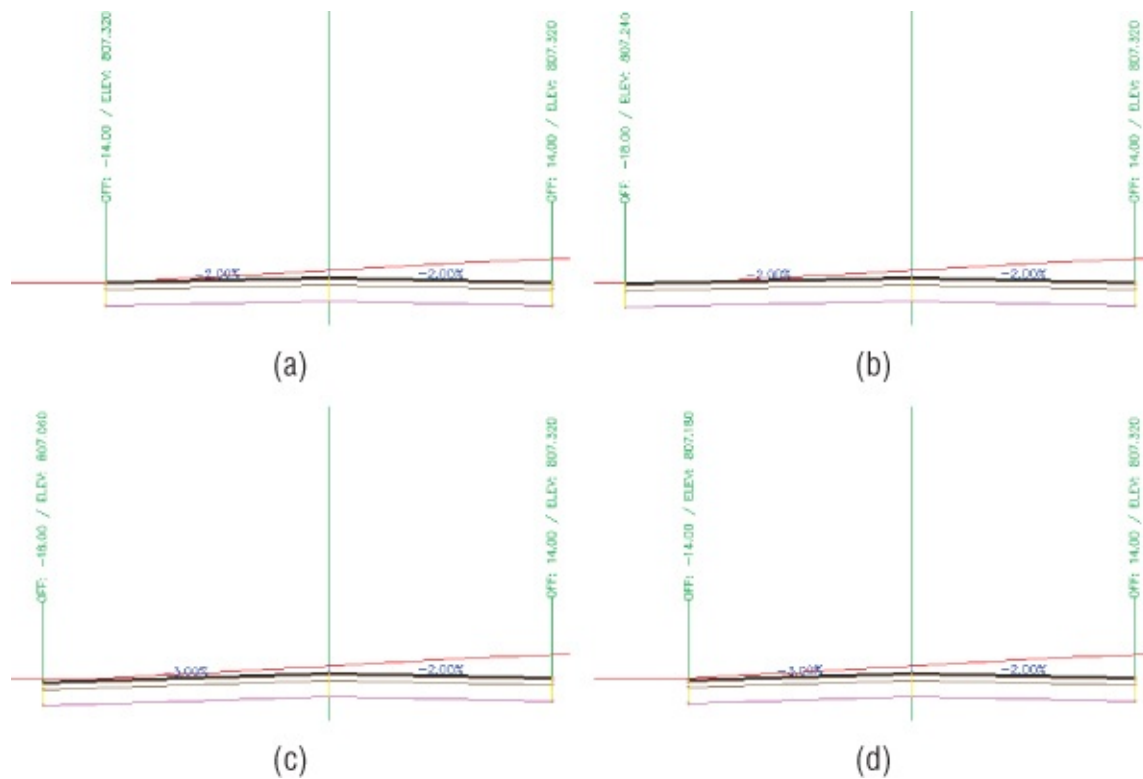


Figure 9.30 How geometry changes with a target on the left: original assembly geometry (a), assembly with width alignment target only (b), assembly with both alignment and profile target (c), and assembly with only profile target set (d).

The following exercise shows you how to set targets using an offset alignment with a widening configured to build a right turn lane in the corridor:

1. Open the 0903_TargetPractice.dwg or 0903_TargetPractice_METRIC.dwg file. Note that this drawing has an incomplete corridor.

You will be creating an offset alignment and modifying the alignment with a widening. Then you will use the Target Mapping dialog to configure the outer lane edge to follow the alignment.



2. From the Home tab > Create Design panel, choose Alignment > Create Offset Alignment.
3. At the Select an alignment: prompt, select the ROAD D alignment. You may need to pan toward where it intersects ROAD A to avoid a selection conflict with the corridor.
4. In the Create Offset Alignments dialog, configure the following:
 - No. Of Offsets On Left: **0**
 - No. Of Offsets On Right: **1**
 - Incremental Offset On Right: **14' (4.5 m)**
 - Alignment Style: Offsets
 - Alignment Label Set: _No Labels
5. Click OK to dismiss.

The offset alignment has been created. Notice how it lines up with the right edge of pavement in [Figure 9.31](#).

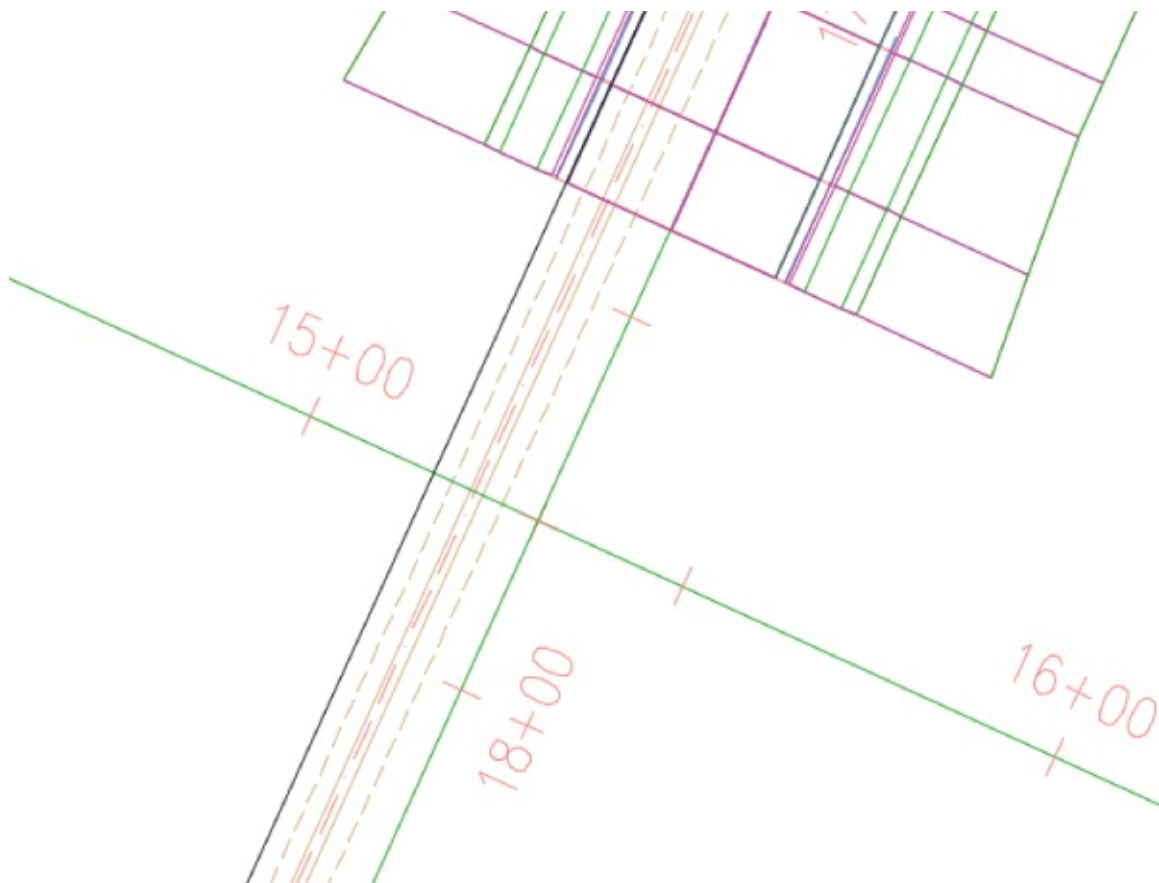


Figure 9.31 Offset Alignment representing the edge of pavement before adding a widening

In the previous exercise you created an alignment from a feature line in the corridor. The difference between an alignment from a corridor and an offset alignment is that the offset alignment remains dynamic to the centerline alignment. If the centerline alignment geometry changes, the offset alignment geometry will change with it, maintaining its offset value.



6. From the Home tab > Create Design panel, choose Alignment > Create Widening.
7. At the Select an alignment: prompt, select the new offset alignment.
8. At the Create widening portion as a new alignment: prompt, enter **No**.
9. At the Select start station: prompt, type **1638** ↵ (or **502** ↵ for metric users).
10. At the Select end station: prompt, type **1738** ↵ (or **527** ↵ for metric users).
11. At the Enter widening offset: prompt, type **28** ↵ (or **9** ↵ for metric users), the offset distance from the centerline alignment to the widening alignment.

The Offset Alignment Parameters palette appears as shown in [Figure 9.32](#). Though you won't be making any changes to the defaults at this time, observe that you can change or extend the transition parameters at the entry and exit if desired.

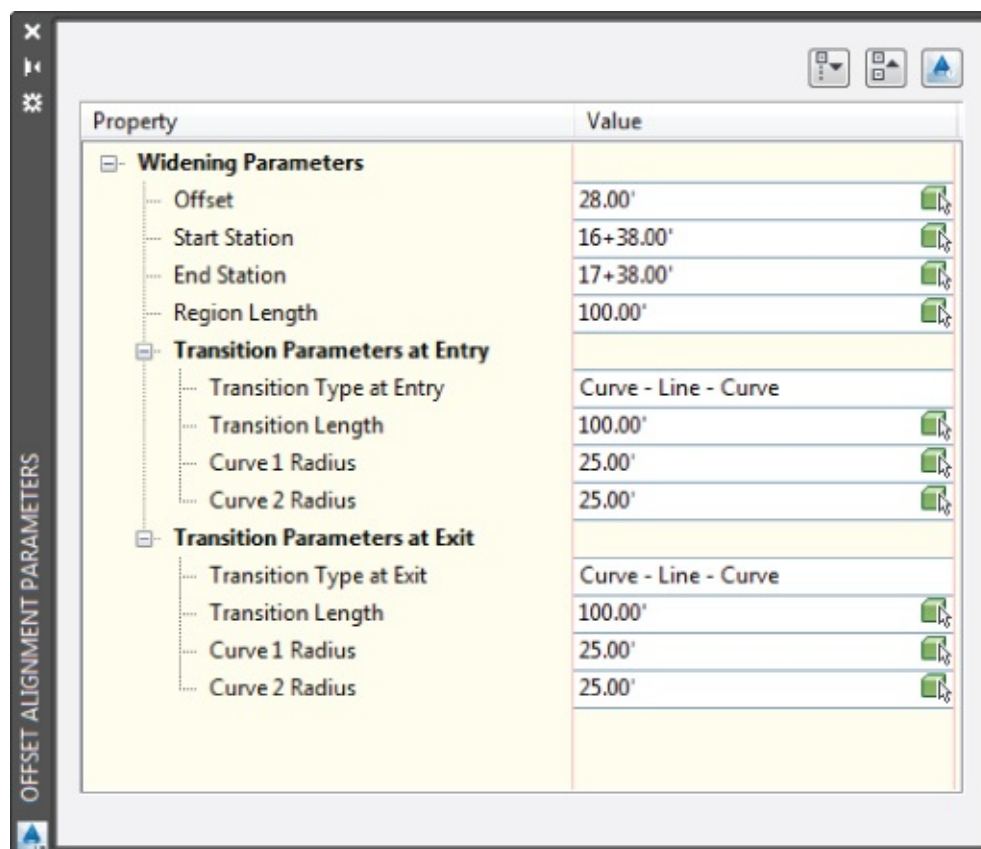


Figure 9.32 Offset Alignment Parameters palette

12. Dismiss the Offset Alignment Parameters palette by clicking the X in the upper corner.
13. Select the corridor to activate the Corridor contextual tab.
14. From the Corridor contextual tab > Modify Corridor panel, choose the Corridor Properties icon.
15. On the Parameters tab, locate the baseline named BL - ROAD D - (13) for Imperial and metric units.

There are multiple baselines in this corridor. As mentioned earlier in the chapter, a corridor can contain multiple baselines and baselines can contain multiple regions.

16. In the Target column for region RG - Urban 14' Single-Lane - (6). for Imperial units row or RG - Urban 4.5m Single-Lane - (2). for metric units row, click the ellipsis button to display the Target Mapping dialog. You may need to make the Name column wider to see the row name.
17. In the Width Or Offset Targets > Width Alignment branch for Lane SuperelevationAOR for the Right Assembly Group, click <None> to display the Set Width Or Offset Target dialog.



18. With the Select Object Type To Target drop-down set to Alignments, use the Select From The Drawing button to select the offset alignment that you just created. Press Enter when finished selecting to return to the Set Width Or Offset Target dialog.
19. Click the Add button.

The alignment should appear in the listing of selected entities to target at the bottom of the dialog, as shown in [Figure 9.33](#).

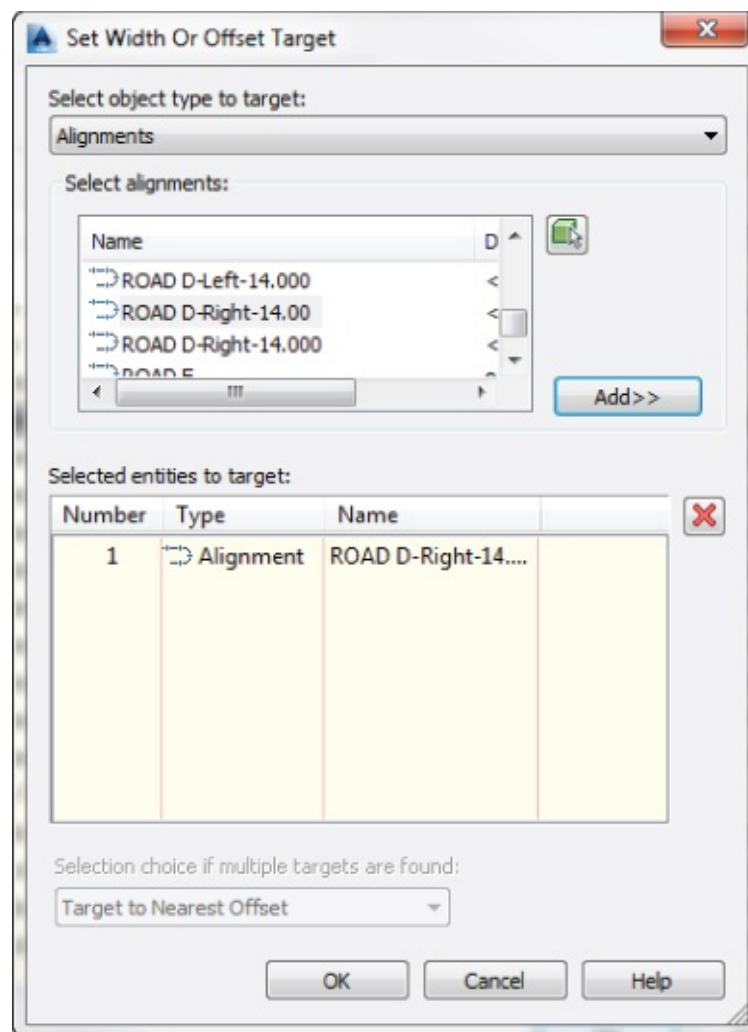


Figure 9.33 The Set Width Or Offset Target dialog

20. Click OK to accept the settings in the Set Width Or Offset Target dialog.
21. The Target Mapping dialog should now look like [Figure 9.34](#).

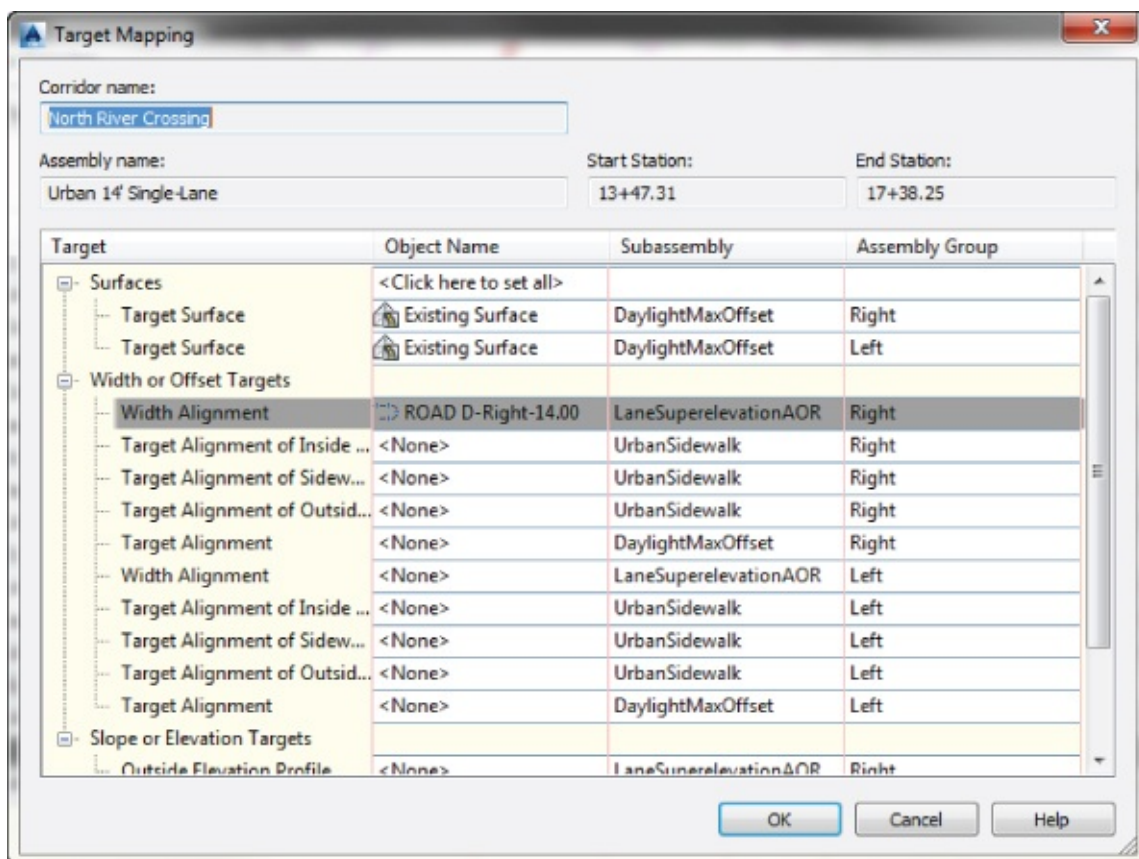


Figure 9.34 Targets set for surface and lane width for the right side

22. Click OK to accept the settings in the dialog.
23. Click OK to accept the settings in the Corridor Properties dialog and allow the corridor to rebuild.
24. The corridor should now be following the ETW alignment and resemble [Figure 9.35](#).

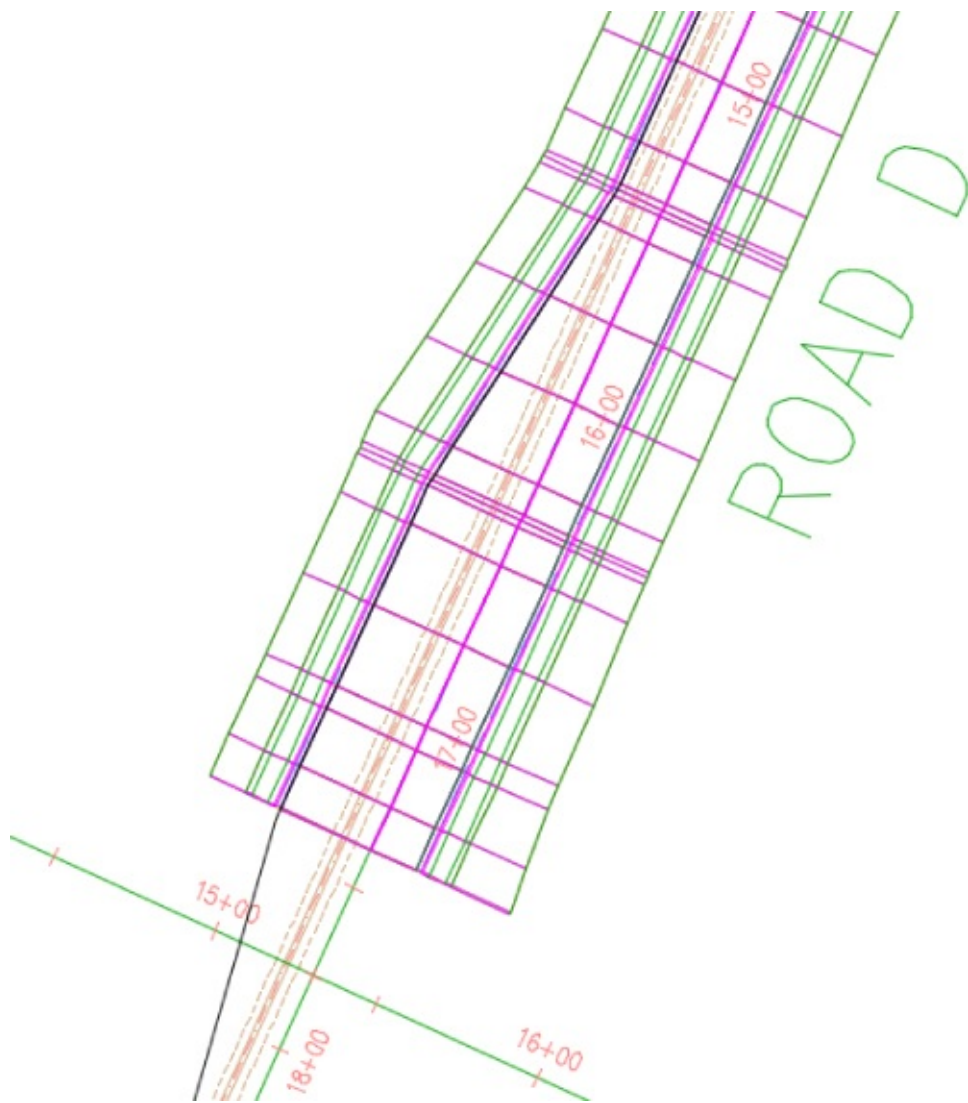



Figure 9.35 The completed exercise in plan view

A finished copy of this drawing is available from the book's web page
(0903_TargetPractice_FINISHED.dwg or 0903_TargetPractice_METRIC_FINISHED.dwg).



Corridor Properties Modifications Made Easy

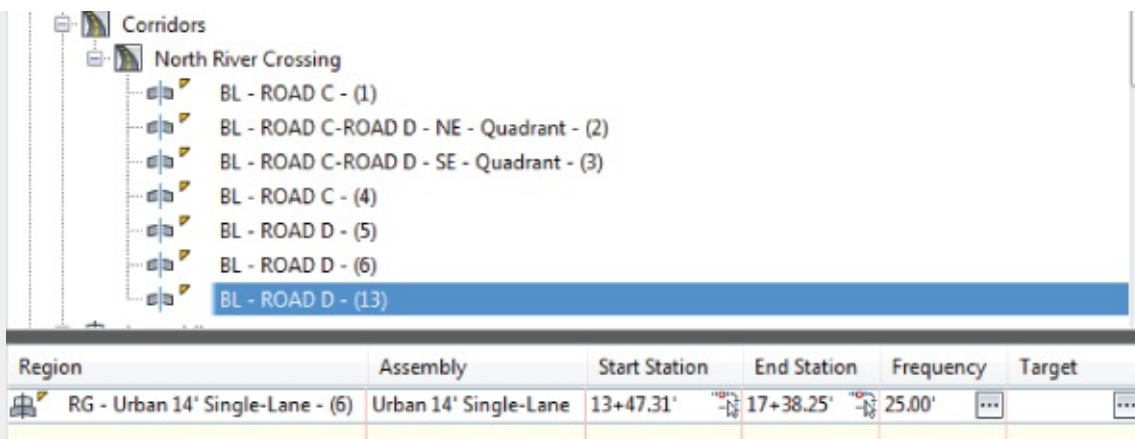
It can be tedious to modify alignments, profiles, starting stations, ending stations, frequencies, and targets along a corridor. Each of these items can be modified in the item view at the bottom of Prospector, as shown here.



In the following quick exercise, you will use Toolspace to access and modify Frequency values for the North River Crossing corridor region:

1. Open the 0904_CorridorFrequency.dwg or 0904_CorridorFrequency_METRIC.dwg file.
2. In Prospector, expand and highlight the North River Crossing corridor.
3. Click the Frequency ellipsis button for the BL - ROAD E - (14) baseline to display the Frequency To Apply Assemblies dialog.
4. Set the Along Curves value to By Curvature and then set the Mid-ordinate Distance To Define Curvature value to **0.1'** (or **0.03 m** for metric users).
5. Click OK.

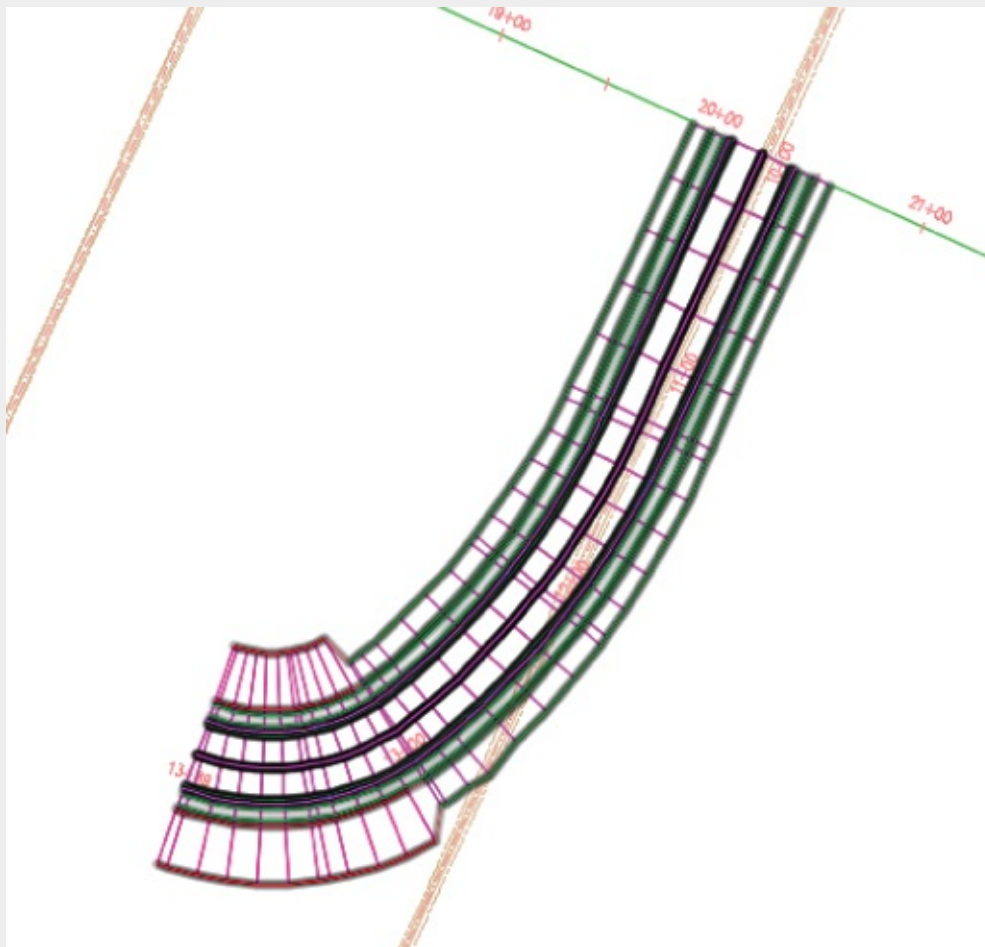The corridor will rebuild and the additional frequency lines should be visible in the plan, as shown here.



When this exercise is complete, you may close the drawing. A finished copy of this drawing is available from the book's web page with the filename 0904_CorridorFrequency_FINISHED.dwg or 0904_CorridorFrequency_METRIC_FINISHED.dwg.

Editing Sections

Once your corridor is built, chances are you will want to examine it section by section, make some adjustments, and check for problems. For a station-by-station look at a corridor, select the corridor and from the Corridor contextual tab ► Modify Corridor Sections panel, choose Section Editor (see [Figure 9.36](#)).

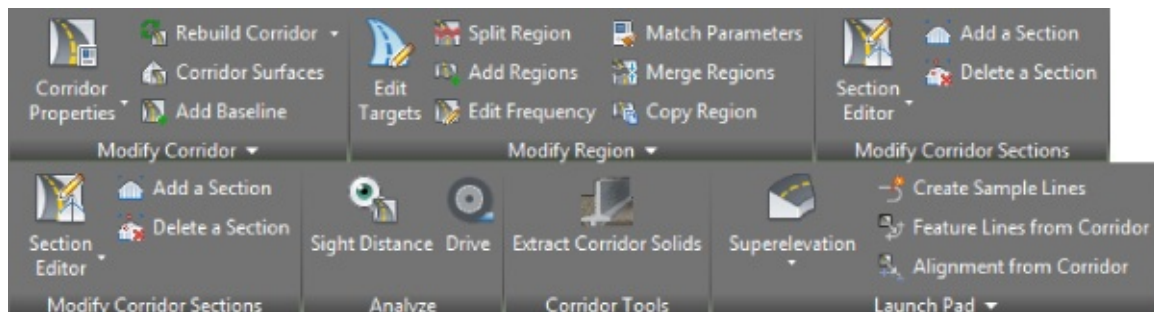


Figure 9.36 Some of the many tools, including the Section Editor, available on the Corridor contextual tab

Once you are in the Section Editor, you are in a purely data-driven view. That means that this is a live, editable section of the corridor and is not for plotting purposes. We will discuss plotting cross sections in Chapter 12, “Cross Sections and Mass Haul.”

The Section Editor allows for multiple viewport configurations so that you can see the plan, profile, and section all at the same time, as demonstrated in the following exercise:

1. Open the 0904_CorridorFrequency_FINISHED.dwg or 0904_CorridorFrequency_METRIC_FINISHED.dwg file.
2. Select the corridor, and from the Corridor contextual tab ► Modify Corridor Sections panel choose Section Editor.
3. From the Section Editor contextual tab ► View Tools panel choose Viewport Configuration to display the Corridor Section Editor: Viewport Configuration dialog, as shown in [Figure 9.37](#).

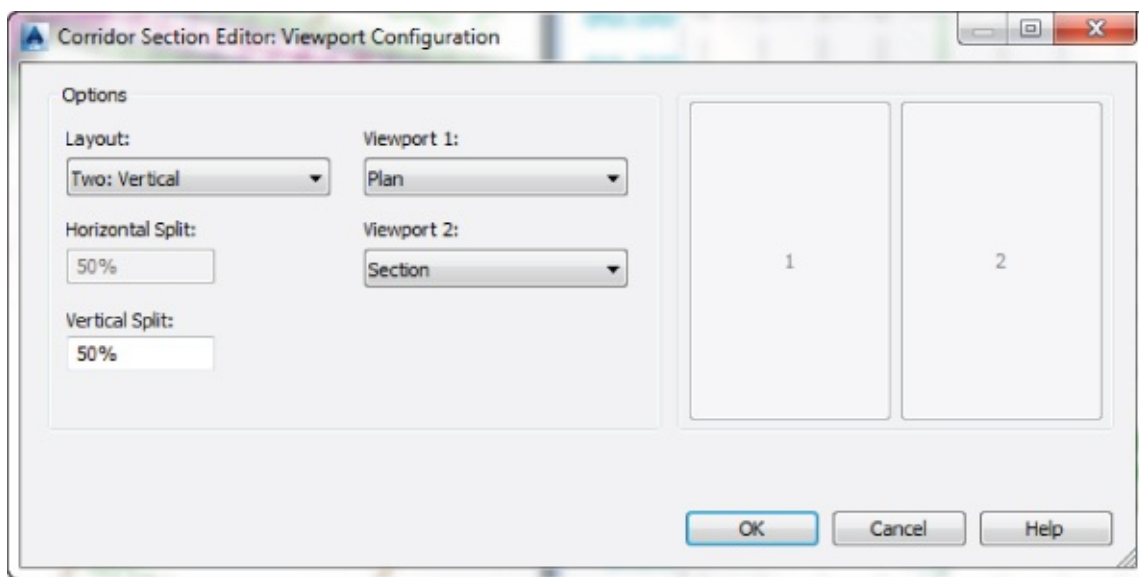


Figure 9.37 The Corridor Section Editor: Viewport Configuration dialog

4. Set Layout to Three: Above and Viewport 1 to Plan, Viewport 2 to Profile, and Viewport 3 to Section with a 50% horizontal split and a 50% vertical split.
5. Click OK to accept the settings in the Viewport Configuration dialog. Your screen should now look similar to [Figure 9.38](#).

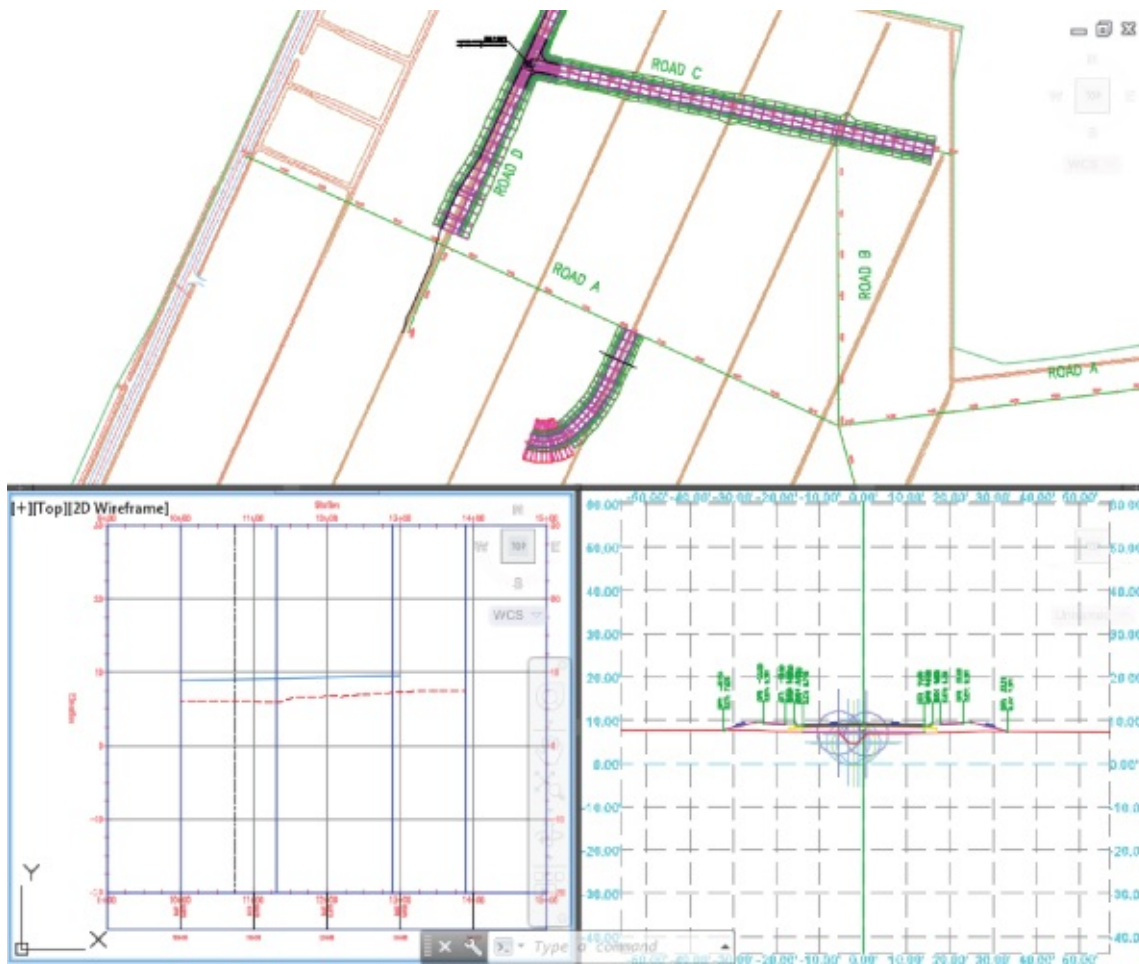


Figure 9.38 The Corridor Section Editor with Viewport Configuration set to Three: Above

6. You may receive a warning dialog asking if you would like to turn on Viewport Configuration; if so, select Yes.
7. To exit the Section Editor, click the Close button on the Close panel.

8. Close the drawing. You don't need to save changes.

The Section Editor contextual tab offers many commands other than just Viewport Configuration, as shown in [Figure 9.39](#).

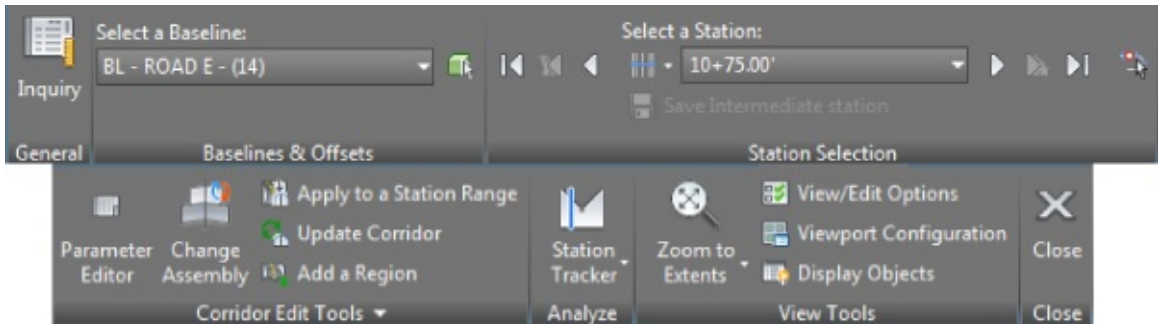


Figure 9.39 The Corridor Section Editor contextual tab

The Station Selection panel on the Section Editor contextual tab allows you to move forward and backward through your corridor to see what each section looks like.

If you wish to edit a section, you may do so geometrically in the viewport showing the section in the Section Editor or through the Parameter Editor palette but not both. To graphically edit a link, hold down the Ctrl key on the keyboard while selecting the item. This will activate grips that you can use to relocate or stretch the link ([Figure 9.40](#)).

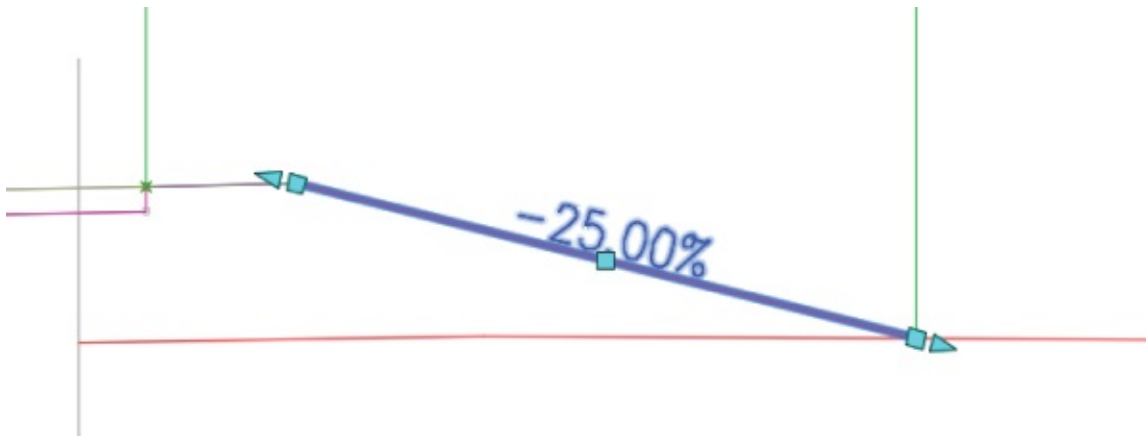


Figure 9.40 A Daylight link ready for grip-editing in the Section Editor

If you would rather use the Parameter Editor to make more precise changes to your section, do the following:

1. From the Section Editor contextual tab > Corridor Edit Tools panel, choose Parameter Editor.
2. Advance the Select A Station list until you reach the station of interest. The Parameter Editor button will not be active for stations without an assembly applied.
3. Look through the listing of subassemblies and their current parameter values.
4. When you find a value you wish to edit, click in the Value field to override the design value, as shown in [Figure 9.41](#).

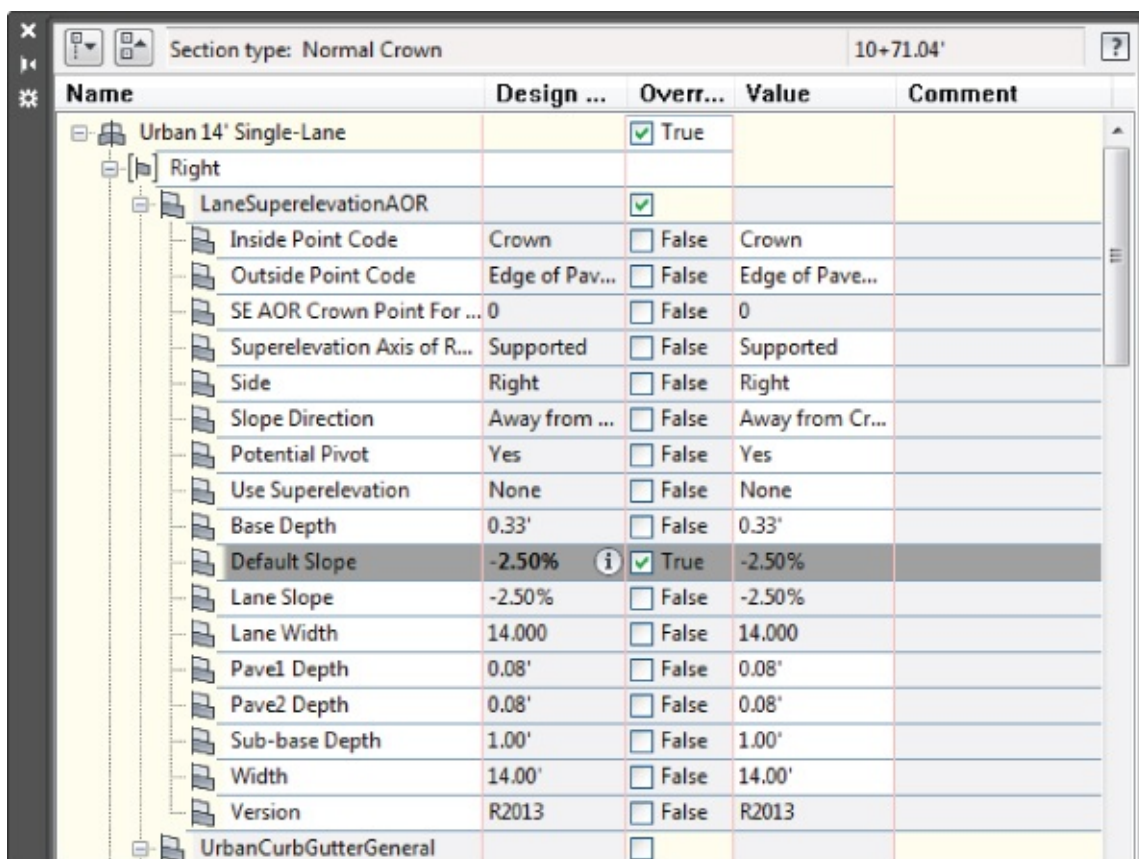


Figure 9.41 The Corridor Parameter Editor

When you change the value, a check mark will appear in the Override column. You will find that some of the values are uneditable.

The changes you make can be applied to just the section you are viewing or to a range of stations in the region you are working in (use the Apply To A Station Range button in the Corridor Edit Tools panel to apply the changes to a region).

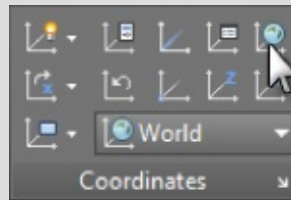
Ack! Stuck in Bizarro Coordinate System

If you accidentally exit your drawing without exiting the Section Editor, you will return to a drawing in a rotated coordinate system, as shown here. It may be difficult to see your design, but don't panic.



At the command line, type **Plan** ↵ **w** ↵. You will see your project, but there is still another step.

From the View tab > Coordinates panel, set the current UCS to World, as shown in the following graphic. The UCS icon will return to normal and you can continue working.



If your viewport configuration was set to three views, you can return to a single view on the View tab > Model Viewports panel. Click the drop-down from the Viewport Configuration button and select Single. Whichever viewport is current when you select Single will be the only one visible after you complete the command.

Creating a Corridor Surface

Certification Objective

A corridor provides the raw components for surface creation. Just as you would use points, breaklines, and boundaries to make a surface, a corridor surface uses corridor points as point data, feature lines and links as breaklines, and various commands for using corridor geometry as an outer boundary.

The Corridor Surface

Civil 3D does not automatically build a corridor surface when you build a corridor. From examining subassemblies, assemblies, and the corridors you built in the previous exercises, you have probably noticed that there are many “layers” of points, links, and feature lines. Some represent the very top of the finished ground of your road design, some represent subsurface gravel or concrete thicknesses, and some represent subgrade, among other possibilities. You can choose to build a surface from any one of these layers or from all of them. [Figure 9.42](#) shows an example of a TIN surface built from the links that are coded Top, which would represent final finished ground.

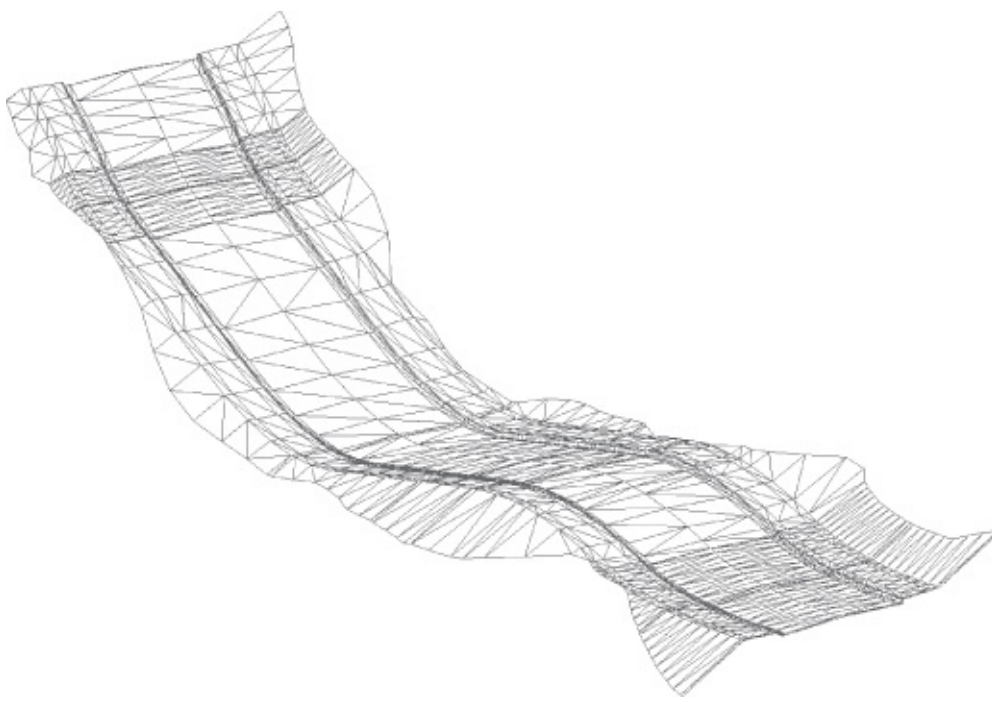




Figure 9.42 A surface built from Top code links



When you create a surface from a corridor, the surface is dependent on the Corridor object. This means that if you change something about your corridor and then rebuild the corridor, the surface will also update.

 A corridor surface shows up as a surface under the Surfaces branch in Prospector with a slightly modified icon that denotes it is related to the corridor.

 After you create the initial corridor surface, you can create a static export of the surface by changing to the Home tab > Create Ground Data panel and choosing Surfaces > Create Surface From Corridor. The Create Corridor Surfaces dialog will appear. If you have created multiple surfaces inside multiple corridors, all of the surfaces will be listed. Fill the check box next to each surface to be exported and then click OK. A detached surface will not react to corridor changes and can be used to archive a version of your surface. To remind you that this surface is not related to a corridor, the icon in the Surfaces branch in Prospector will not show the corridor icon.

Corridor Surface Creation Fundamentals

You create corridor surfaces on the Surfaces tab in the Corridor Properties palette using the following three steps (which are examined in detail later):

1.  Click the Create A Corridor Surface button to add a surface item.
2. Choose the data type, either links or feature lines.
3.  Choose the data to add, and click the Add Surface Item button.

You can choose to create your corridor surface on the basis of links, feature lines, or a combination of both.

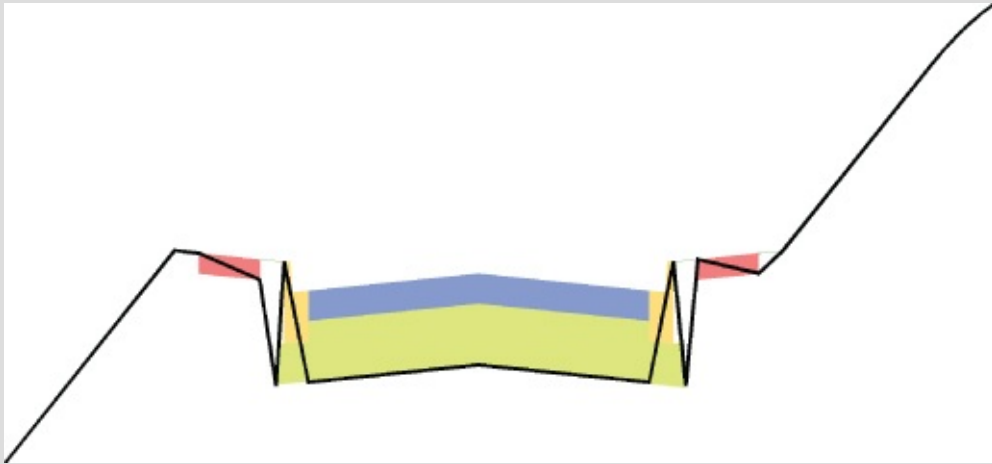
Creating a Surface from Link Data

Most of the time, you will build your corridor surface from links. As discussed earlier, each link in a subassembly is coded with a name such as Top, Pave, Datum, and so on. Choosing to build a surface from Top links will create a surface that triangulates between the points at the link vertices that represent the final finished grade.

The most commonly built link-based surfaces are Top for contours and Datum for earthworks; however, you can build a surface from any link code in your corridor. [Figure 9.43](#) shows a schematic of how links are used to form the most common surfaces—in this case a top surface, as shown in the top image of [Figure 9.43](#), and a datum surface, as shown in the bottom image of [Figure 9.43](#).

Overhang Correction for Confused Datum Surfaces

A common situation with assemblies is a material that juts out past another material, such as curb sub-base. Triangulated surfaces cannot contain caves or perfectly vertical faces because both of those scenarios result in two elevation points for a given (x,y) coordinate pair, so Civil 3D needs to go around the material in a logical manner. What the software sees as logical and what you actually want from the surface may not always be the same thing, as shown next.



If you have a datum surface doing an unexpected zigzag, change the Overhang Correction setting to Bottom Links. There is also an option to set Overhang Correction to Top Links. This Overhang Correction setting is in the Corridor Properties dialog on the Surfaces tab. After your corridor rebuilds, the result will resemble the bottom image of [Figure 9.43](#).

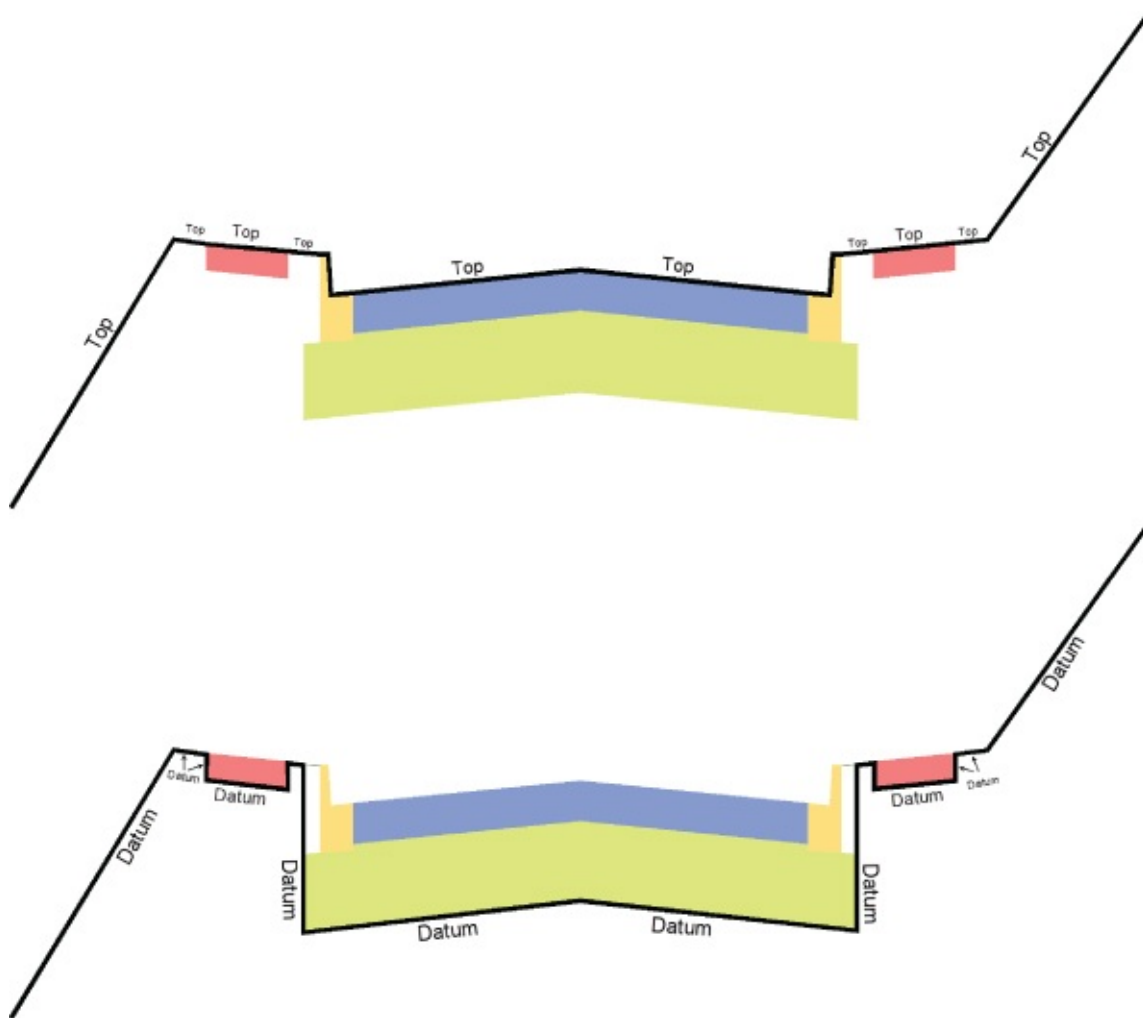


Figure 9.43 Schematic of Top links connecting to form a surface (top) and schematic of Datum links connecting to form a surface (bottom)

When building a surface from links, you have the option of checking a box in the Add As Breakline column. Checking this box will add the actual link lines themselves as additional breaklines to the surface. In most cases, especially in intersection design, checking this box forces better triangulation.

Creating a Surface from Feature Lines

There might be cases where you would like to build a simple surface from your corridor—for example, by using just the crown and edge-of-travel way. If you build a surface from feature lines only or a combination of links and feature lines, you have more control over what Civil 3D uses as breaklines for the surface.

If you added all the topmost corridor feature lines to your surface item and built a surface, you would get a result that's very similar to the result you would get if you had added the Top link codes.

Creating a Surface from Both Link Data and Feature Lines

A link-based surface can be improved by the addition of feature lines. A link-based surface does not automatically include the corridor feature lines but instead uses the link vertex points to create triangulation. Therefore, the addition of feature lines ensures that triangulation occurs where desired along ridges and valleys. This is especially important for intersection design, curves, and other corridor surfaces where triangulation around tight corners is critical. [Figure 9.44](#) shows the Surfaces tab of the Corridor Properties dialog where a Top link surface will be improved by the addition of Back_Curb, ETW, and Top_Curb feature lines.

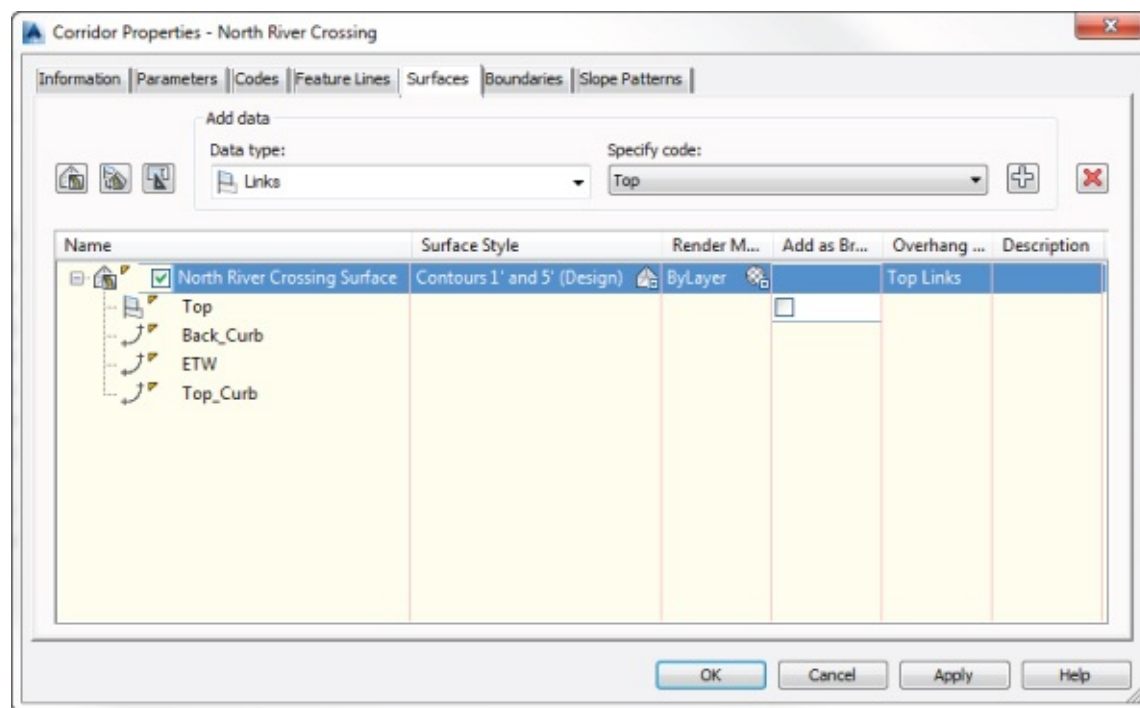




Figure 9.44 The Surfaces tab indicates that the surface will be built from Top links as well as from several feature lines.


If you are having trouble with triangulation or contours not behaving as expected, experiment with adding a few feature lines to your corridor surface definition.

Creating a Corridor Surface for Each Link

 To the right of the Create Corridor Surface button is the Create A Corridor Surface For Each Link button. Clicking this button populates the Surface List area with a multitude of corridor surfaces; as the button name would suggest, you will now have a corridor surface for each of the link codes.

 This may not be desirable for many people because you rarely need a surface for every link, but once they are created, you can always remove the unwanted corridor surfaces using the Delete Surface Item button.

Using the Corridor Surface Name Template

 The third button at the upper left of the Surfaces tab of the Corridor Properties dialog is the Surface Name Template button. When you click this button, the Name Template dialog shown in [Figure 9.45](#) appears.

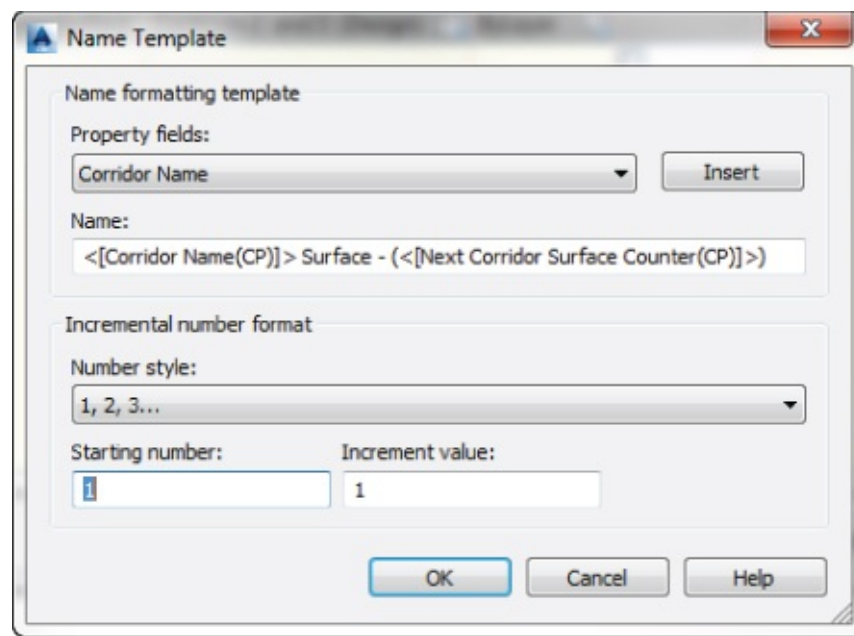


Figure 9.45 The Name Template dialog for corridor surfaces

Here you can set the formatting for the corridor name as well as the number style, starting number, and increment value. The Property fields are Corridor Name and Next Corridor Surface Counter. Based on the name shown in [Figure 9.45](#), the next surface created for the corridor named North River Crossing will be named North River Crossing Surface – (1). The Number style can be set to 1, 2, 3 ... or 01, 02, 03 ... or a multitude of other styles based on the number of leading zeros.

Completing Other Surface Tasks

You can do several other tasks on the Surfaces tab. For each corridor surface, you can set a surface style, revise the default name assigned by the Name Template, and provide a description for your corridor surface. Alternatively, you can do all those things once the corridor surface appears under the Surface branch in Prospector.

Adding a Surface Boundary

Surface boundaries are critical to any surface but especially so for corridor surfaces. Tools that automatically and interactively add surface boundaries, using the corridor intelligence, are available. [Figure 9.46](#) shows a corridor surface before and after the addition of a boundary. Notice how the extraneous contours have been eliminated along the line of intersection between the existing ground and the proposed ground (the daylight line), thereby creating a much more accurate surface.

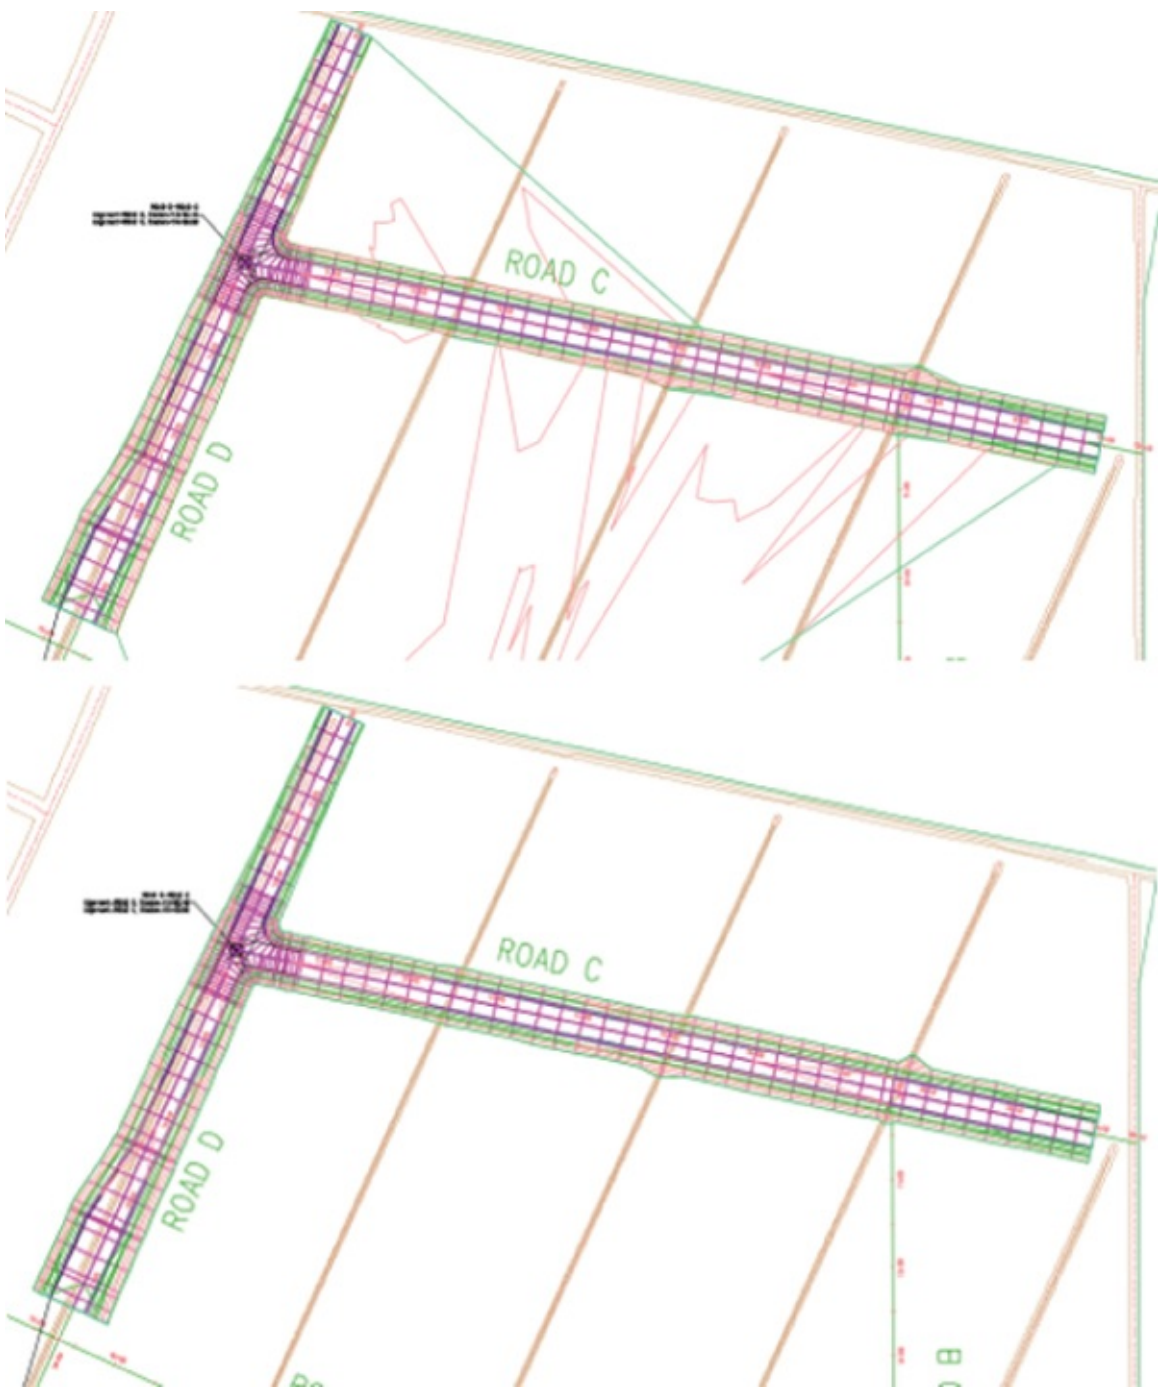


Figure 9.46 A corridor surface before the addition of a boundary (top) and after the addition of a boundary (bottom)

You can create corridor surface boundaries using the Boundaries tab of the Corridor Properties dialog. Each corridor surface will be listed. To add the boundary, right-click the corridor surface and select the desired boundary type.

Boundary Types

There are several tools to assist you in corridor surface boundary creation. They can be automatic, semiautomatic, or manual in nature, depending on the complexity of the corridor.

You access these options on the Boundaries tab of the Corridor Properties dialog by right-clicking the name of your surface item, as shown in [Figure 9.47](#).

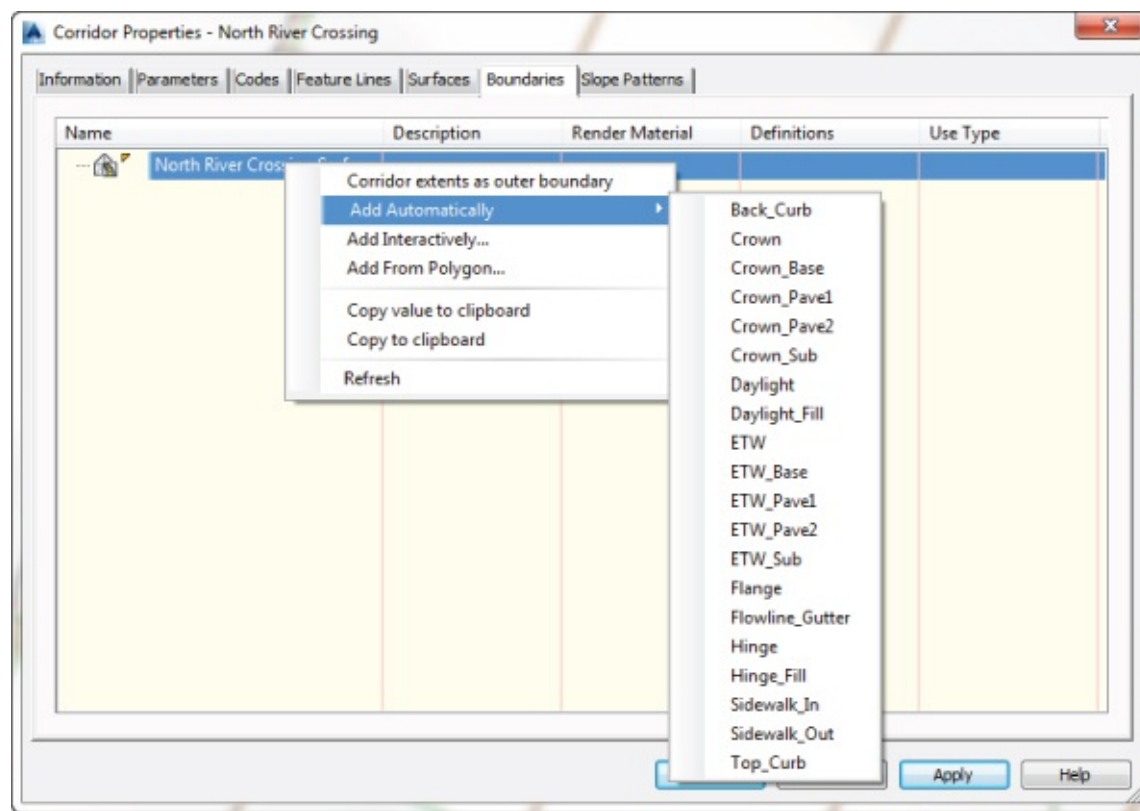


Figure 9.47 Corridor surface boundary options for a corridor containing a single baseline

The following corridor boundary methods are listed in order of desirability. Corridor Extents As Outer Boundary is the most user-friendly, whereas Add From Polygon is fast but needs constant updating because it is not dynamically linked to the corridor.

Corridor Extents As Outer Boundary With this selection, Civil 3D will shrink-wrap the corridor, taking into account intersections and various daylight options on different alignments. Corridor Extents As Outer Boundary will probably be your most-used boundary option unless you are modeling other parts of your roadway network in separate corridors. This topic will be covered in more detail in Chapter 10.



Add Automatically The Add Automatically boundary tool allows you to pick a point code and use the associated feature lines as your corridor boundary. This tool is available only for single-baseline corridors. This tool is automatic, easy to apply, and will remain dynamically linked to the corridor.

Add Interactively The Add Interactively boundary tool allows you to work your way around a corridor and choose which corridor feature lines you would like to use as part of the boundary definition.

Choosing this option is better than using Add From Polygon if Add Automatically and Corridor Extents are not available. This method is also good for defining hide boundaries in your corridor surface (hide boundaries were discussed in Chapter 4, “Surfaces”). It takes a bit of patience to trace the corridor, but the result is a dynamically linked boundary that changes when the corridor changes. Using this method, once you select a feature line, a thick line will trace around the corridor following your mouse; to switch to a different feature line, simply click the new feature line at the transition location. When it's complete, you can close the boundary just as you would a polyline.

Add From Polygon The Add From Polygon tool allows you to choose a closed 2D or 3D polyline or polygon in your drawing that you would like to add as a boundary for your corridor surface. This method is quick, but unlike the other methods, the resulting boundary is not dynamic to your design.

The next exercise leads you through creating a corridor surface with a shrink-wrap and an interactive boundary:

1. Open the 0905_CorridorBoundary.dwg or 0905_CorridorBoundary_METRIC.dwg file.
2. Select the corridor to activate the Corridor contextual tab.
3. From the Corridor contextual tab ➤ Modify Corridor panel, choose the Corridor Properties icon.
4.  On the Surfaces tab of the Corridor Properties dialog, click the Create A Corridor Surface button in the upper-left corner of the dialog.
5. You should now have a surface item in the bottom half of the dialog.
6. Click the surface item under the Name column and change the default name of your surface to **North River Crossing - Top**. If Imperial, do not change the surface style. If metric, set the surface style to Contours 1m and 5m (Design).
7. Verify that Links has been selected from the drop-down list in the Data Type selection box.
8. Verify that Top has been selected from the drop-down list in the Specify Code selection box.
9.  Click the Add Surface Item button to add Top Links to the Surface Definition.
10. Click OK to accept the settings in this dialog. Choose Rebuild The Corridor when prompted and examine your surface.
11. The road surface should look fine; however, because you have not yet added a boundary to this surface, undesirable triangulation is occurring outside your corridor area and the area inside by ROAD A, B, C, and D.
12. Expand the Surfaces branch in Prospector.
13. Note that you now have a corridor surface listed in addition to the existing surface that was already in the drawing.
14. Select the corridor again to activate the Corridor contextual tab.
15. From the Corridor contextual tab ➤ Modify Corridor panel, choose Corridor Properties icon.
16. If you do not see the Corridor Properties button on the Modify Corridor panel, you may have inadvertently chosen the corridor surface and may be viewing the Surface contextual ribbon.
17. On the Boundaries tab of the Corridor Properties dialog, right-click North River Crossing - Top in the listing.
18. Select Corridor Extents As Outer Boundary, which will define the outer boundary of the surface.
19. Click OK to accept the settings in the Corridor Properties dialog, and choose Rebuild The Corridor when prompted.
20. Examine your surface, and note that the triangulation terminates at the outer limits of the corridor.
21. Select the corridor again to activate the Corridor contextual tab.
22. From the Corridor contextual tab ➤ Modify Corridor panel, choose the Corridor Properties icon.
23. On the Boundaries tab of the Corridor Properties dialog, right-click North River Crossing - Top in the listing.

24. Select Add Interactively.
25. The Corridor Properties dialog will temporarily disappear while you define this boundary. You will now digitize around the area enclosed by ROAD A, B, C, and D, tracing over the edge of the corridor defining the enclosed area. You may find it helpful to turn on your endpoint Osnap setting, but it isn't necessary.
26. Using your scroll button, zoom into the northwest corner of the intersection of ROAD A and ROAD B. Be careful to avoid exiting the command while doing so.
27. Pick the edge of the corridor. If you see the Select A Feature Line dialog open, select Edge and click OK.
28. Drag the cursor to the left along the edge of the corridor until you see a red, dashed line representing your interactive boundary beginning to trace over the Edge feature line, as shown in [Figure 9.48](#).

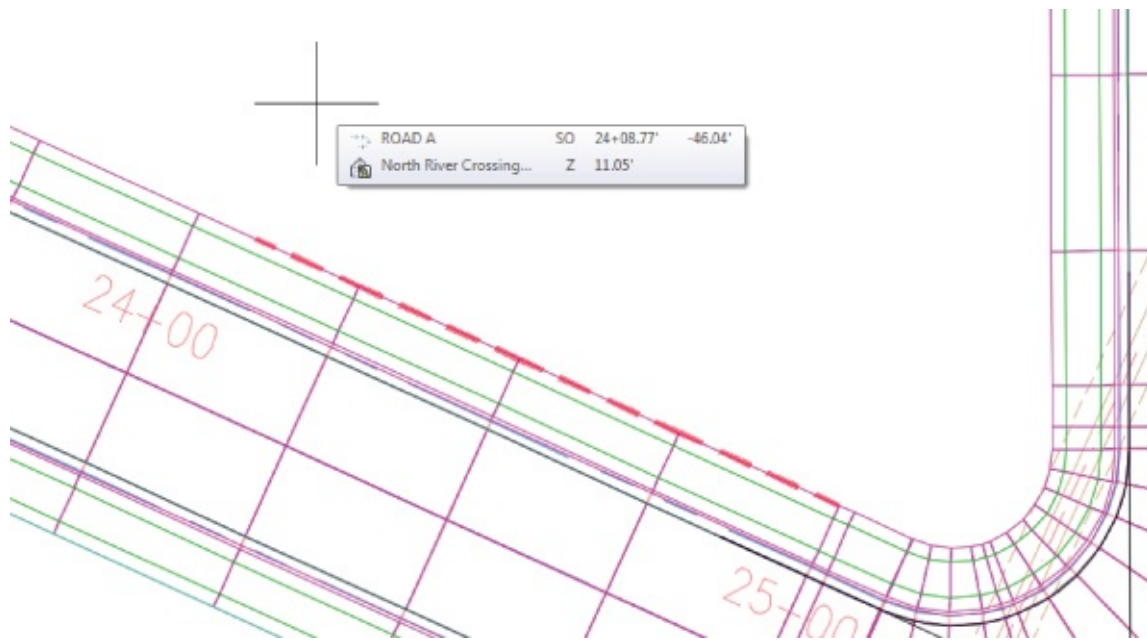


Figure 9.48 Defining an interactive boundary

29. Pan to the left along the edge of the corridor until the red, dashed line makes a stop. It will make a stop when it reaches another baseline.
30. Click the stopping point, and then click the link ahead of the stopping point to continue the generation of the interactive boundary.
31. Repeat step 25 whenever the interactive boundary makes a stop until you reach the point of closing your boundary.
32. If you accidentally click the wrong location, just type **U** for undo to redefine the last segment. If the interactive boundary doesn't want to follow the edge of your corridor in certain areas, click the link the edge at the location just before the bad behavior begins. If the Select A Feature Line dialog opens displaying two Edge feature lines, just pick the top one and click OK.
33. To close your boundary, click on the link just before the start point and type **C** for close.
34. The Corridor Properties dialog will reappear.
35. On the Boundary tab of the Corridor Properties dialog, there are two boundaries listed.
36. Select Corridor Boundary(2) and click in the Use Type column to change the setting to Hide

Boundary, as shown in [Figure 9.49](#).

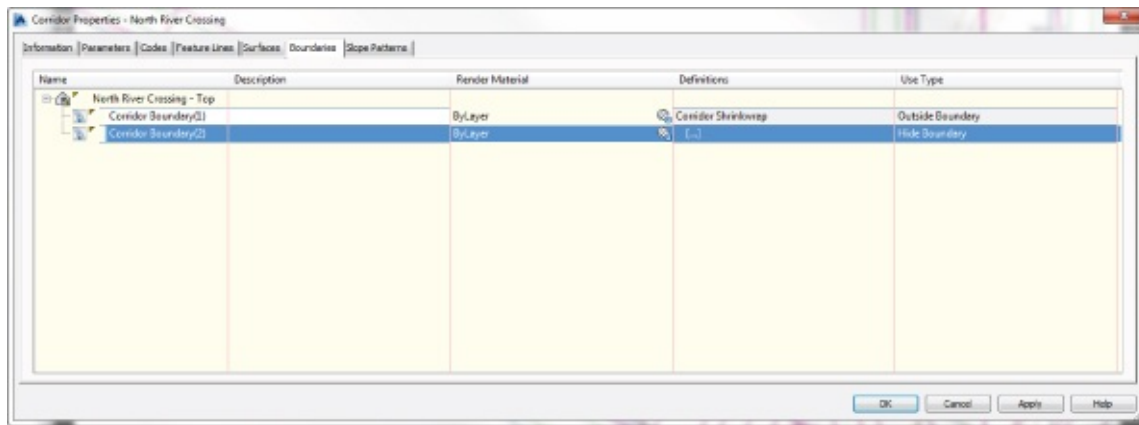


Figure 9.49 Configuring the interactive boundary as a Hide boundary

37. Click OK to dismiss the Corridor Properties dialog. Rebuild the corridor if prompted.
38. (Optional) Experiment with making changes to your finished grade profile, assembly, or alignment geometry and rebuilding both your corridor and finished ground surface to see the boundary in action.

When this exercise is complete, you may close the drawing. A finished copy of this drawing is available from the book's web page with the filename 0905_CorridorBoundary_FINISHED.dwg or 0905_CorridorBoundary_METRIC_FINISHED.dwg.

Rebuild: Leave It On or Off?

Once you rebuild your corridor, your corridor surface will need to be updated. Typically, the best practice is to leave Rebuild – Automatic off for corridors and keep it on for corridor surfaces. The corridor surface will want to rebuild only when the corridor is rebuilt. For very large corridors, this may cause a bit of a memory lag, so try it both ways to see what you like best.

Common Surface-Creation Problems

Here are some common problems you may encounter when creating surfaces:

Problem Your corridor surface does not appear or seems to be empty.

Typical Cause You might have created the surface item but not added any data. Another cause could be the surface style is set to No Display or to display contours at a wide interval, or the surface was created on a frozen layer.

Fix Open the Corridor Properties dialog and switch to the Surfaces tab. Select a data type from the drop-down menus in the Data Type and Specify Code selection boxes, and click the Add Surface Item button. Make sure your dialog shows both a surface item and a data type, as shown in [Figure 9.50](#).

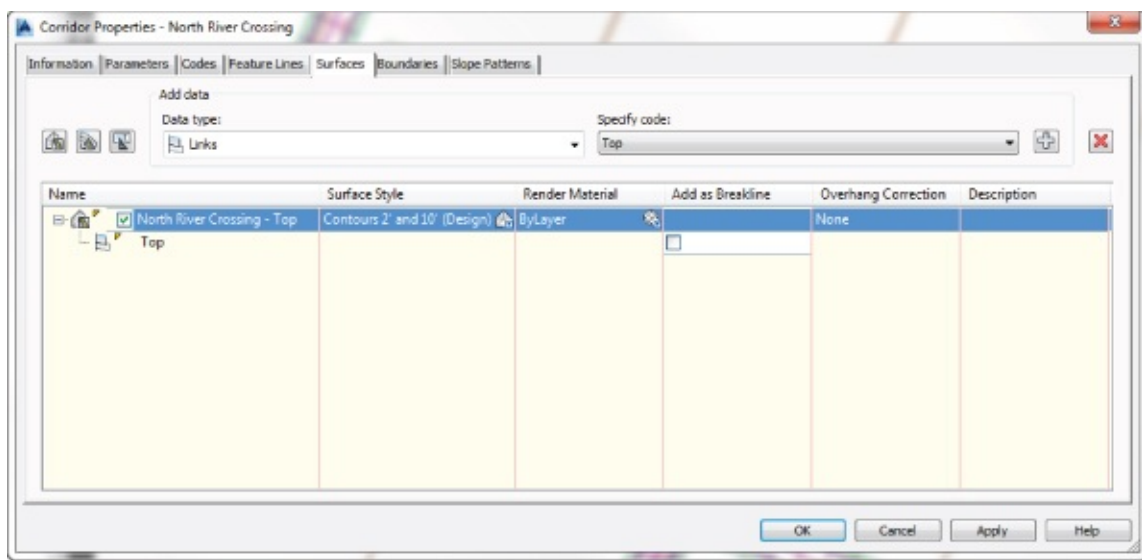


Figure 9.50 A surface cannot be created without both a surface item and a data type.

Problem Your corridor surface does not seem to respect its boundary after a change to the assembly or surface-building data type (in other words, you switched from link data to feature lines).

Typical Cause Automatic and interactive boundary definitions are dependent on the codes used in your corridor. If you remove or change the codes used in your corridor, the boundary needs to be redefined.

Fix Open the Corridor Properties dialog and switch to the Boundaries tab. Remove any boundary definitions that are no longer valid (if any) by right-clicking the boundary and selecting Remove Boundary. Once the outdated boundary has been removed, you can redefine the corridor surface boundaries using any of the applicable boundary types.

Problem Your corridor surface seems to have gaps at points of curvature (PCs) and points of tangency (PTs) near curb returns.

Typical Cause You may have encountered an error in rounding station values at these locations and as a result created gaps in your corridor. This is commonly caused by osnapping to start and end region stations using two-dimensional linework as a guide when some segments of that linework do not touch.

Fix Be sure your corridor region definitions produce no gaps. You might consider using the `PEDIT` command to join lines and curves representing corridor elements that will need to be modeled later. You might also consider setting a COGO point at these locations (PCs, PTs, and so on) and using the Node object snap instead of the Endpoint object snap to select the same location each time you are required to do so.



Performing a Volume Calculation

One of the most powerful aspects of Civil 3D is having instant feedback on your design iterations. Once you create a preliminary road corridor, you can immediately compare a corridor surface to existing ground and get a good understanding of the earthwork magnitude. When you make an adjustment to the finished grade profile and then rebuild your corridor, you can see the effect that this change has on your earthwork within minutes, if not sooner.

Even though volumes were covered in detail in Chapter 4, it is worth revisiting the subject here in the

context of corridors.

This exercise uses a TIN-to-TIN composite volume calculation to compare the existing ground surface and the datum corridor surface; average end area and other section-based volume calculations are covered in Chapter 12.

1. Open the 0906_CorridorVolume.dwg or 0906_CorridorVolume_METRIC.dwg file.
2. Note that this drawing has a completed North River Crossing corridor, as well as a top corridor surface and a datum corridor surface.
3.  From the Analyze tab > Volumes And Material panel, choose Volumes Dashboard to display the Volumes Dashboard tab in the Panorama.
4.  Click the Create New Volume Surface button to display the Create Surface dialog.
5. Change the name to **Vol - Road Datum** and set Style to Elevation Banding (2D).
6. Click the <Base Surface> field to display the ellipsis button; once it's visible, click the ellipsis button to select Existing Surface. Then click OK.
7. Click the <Comparison Surface> field to display the ellipsis button; once it's visible, click the ellipsis button to select North River Crossing - Datum. Then click OK.
8. Click OK to accept the settings in the Create Surface dialog.

A Cut/Fill breakdown should appear in the Volumes Dashboard tab of Panorama, as shown in [Figure 9.51](#). Your numbers may vary.

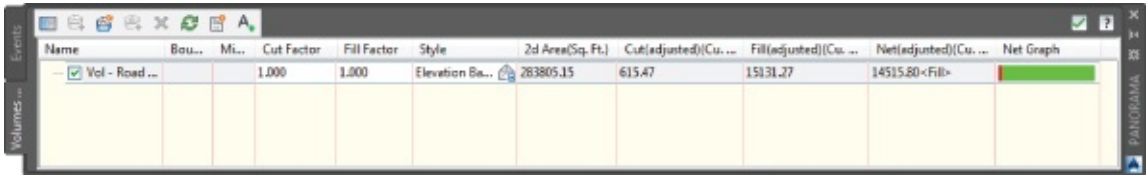


Figure 9.51 Panorama showing an example of a volume surface and the cut/fill results

9. Make a note of these numbers.
10. Leave Panorama open on your screen (make it smaller, if desired), and pan over to the proposed profile for Road D.
11. Select the Finished Ground profile and move the vertical triangular grip on the second PVI to the center of the circle shown in the profile view. Notice that the volume calculations have changed to Out Of Date because the corridor isn't set to rebuild automatically.
12. In Prospector, expand Corridors, select the North River Crossing corridor, right-click, and choose Rebuild.
Notice that the corridor changes, and therefore the corridor surfaces (which are both set to Rebuild Automatic) change as well. However, the volume surface did not automatically rebuild.
13. On the Volumes Dashboard tab of Panorama, right-click the volume surface and select Rebuild.
Notice the new values for cut and fill.
14. Close Panorama using the X in the upper corner.

When this exercise is complete, you may close the drawing. A finished copy of this drawing is available from the book's web page with the filename 0906_CorridorVolume_FINISHED.dwg or 0906_CorridorVolume_METRIC_FINISHED.dwg.

Building Non-Road Corridors

As discussed in the beginning of this chapter, corridors are not just for roads. Once you have the basics about corridors down, your ingenuity can take hold.

Corridors can be used for far more than just road designs. You will explore some more advanced corridor models in Chapter 10, but there are plenty of simple, single-baseline applications for alternative corridors such as channels, berms, retaining walls, and more. You can take advantage of several specialized subassemblies or build your own custom assembly using the Subassembly Composer. [Figure 9.52](#) shows an example of a channel corridor.

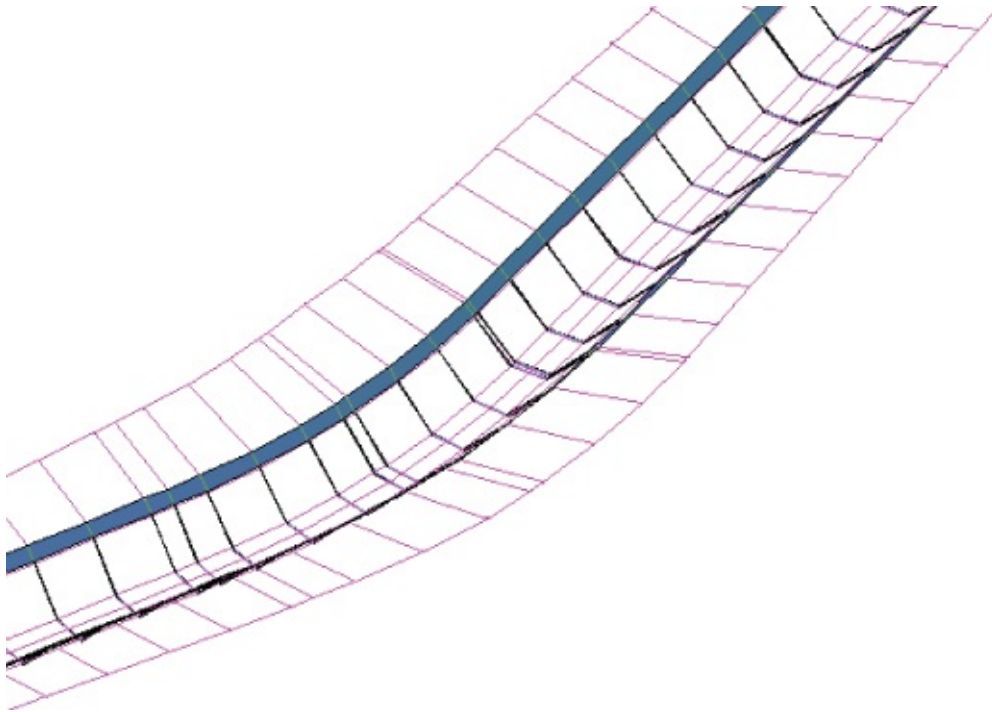


Figure 9.52 A simple channel corridor, viewed in 3D, built from the channel subassembly and a generic link subassembly

One of the subassemblies discussed in Chapter 8 is the channel subassembly. The following exercise shows you how to apply this subassembly to design a simple drainage channel:

1. Open the 0907_CorridorChannel.dwg or 0907_CorridorChannel_METRIC.dwg file.
2. Note that there is an alignment that represents a drainage channel centerline, a profile that represents the drainage channel normal water line, and an assembly created using the Channel and LinkSlopetoSurface subassemblies.
3. From the Home tab ► Create Design panel, choose Corridor to display the Create Corridor dialog.
4. In the Name text box, name your corridor **Drainage Channel**.
5. Keep the default values for Corridor Style and Corridor Layer.
6. Verify that Alignment is set to Channel CL and Profile is set to Channel NWL.

7. NWL stands for *normal water level*.
8. Verify that Assembly is set to Project Channel.
9. Verify that Target Surface is set to Existing Ground.
10. Verify that the Set Baseline And Region Parameters check box is checked.
11. Click OK to accept the settings in the Create Corridor dialog and to display the Baseline And Region Parameters dialog.
12. Click the Set All Frequencies button.
13. Change the values for Along Tangents and Curve Increment to **10'** (**3 m** for metric users).
14. Click OK to accept the settings in the Frequency To Apply Assemblies dialog. Click OK to accept the settings in the Baseline And Region Parameters dialog.
15. You may receive a dialog warning that the corridor definition has been modified. If you do, select the Rebuild The Corridor option.
16. Select the corridor to activate the Corridor tab.
17. From the Corridor contextual tab ➤ Modify Corridor Sections panel, choose Section Editor.
18. From the Section Editor contextual tab ➤ Station Selection panel, you can navigate through the drainage channel cross sections by clicking the forward or backward arrows.
19. The cross section should look similar to [Figure 9.53](#).

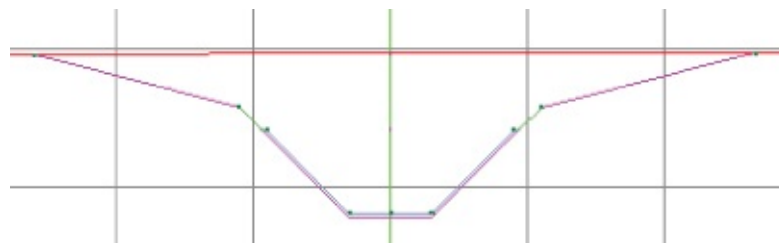


Figure 9.53 The completed Drainage Channel corridor viewed in the Section Editor

This corridor can be used to build a surface for a TIN-to-TIN volume calculation or to create sections and generate material quantities, cross-sectional views, and anything else that can be done with a more traditional road corridor.

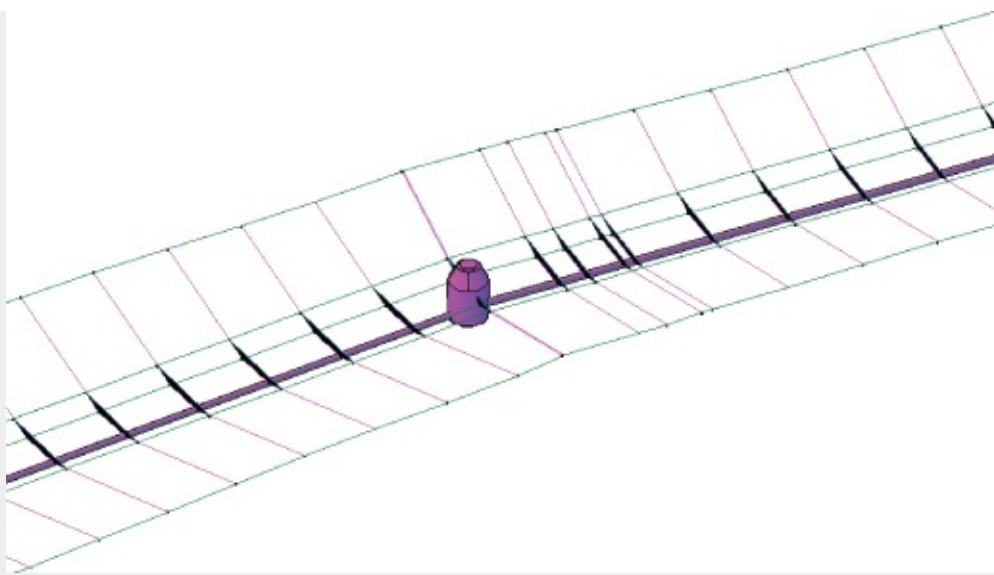
When you are finished viewing the sections, dismiss the dialog by clicking the X on the Section Editor contextual tab ➤ Close panel. When this exercise is complete, you may close the drawing. A finished copy of this drawing is available from the book's web page with the filename 0907_CorridorChannel_FINISHED.dwg or 0907_CorridorChannel_METRIC_FINISHED.dwg.



Real World Scenario

Creating a Pipe Trench Corridor

Another use for a corridor is a pipe trench. A pipe trench corridor is useful for determining quantities of excavated material, limits of disturbance, trench-safety specifications, and more. This graphic shows a completed pipe trench corridor.




One of the subassemblies discussed in Chapter 8 is the TrenchPipe1 subassembly. The following exercise leads you through applying this subassembly to a pipe trench corridor:

1. Open the 0908_CorridorPipeTrench.dwg or 0908_CorridorPipeTrench_METRIC.dwg file.
Note that there is a pipe network with a corresponding alignment, profile view, and pipe trench assembly. Also note that there is a profile drawn that corresponds with the inverts of the pipe network.
2. From the Home tab ► Create Design panel, choose Corridor.
3. In the Name text box, name the corridor **Pipe Trench**.
Keep the default values for Corridor Style and Corridor Layer.
4. Verify that Alignment is set to Pipe Centerline and Profile is set to Bottom Of Pipe Profile.
5. Verify that Assembly is set to Pipe Trench.
6. Verify that Target Surface is set to Existing Ground.
7. Verify that the Set Baseline And Region Parameters check box is selected.
8. Click OK to accept the settings in the Create Corridor dialog and display the Baseline And Region Parameters dialog.
9. Click the Set All Frequencies button.
10. Change the values for Along Tangents and Curve Increment to **10'** (3 m for metric users).
11. Click OK to accept the settings in the Frequency To Apply Assemblies dialog, and click OK again to accept the settings in the Baseline And Region Parameters dialog.
12. You may receive a dialog warning that the corridor definition has been modified. If you do, select the Rebuild The Corridor option.
The corridor will build.
13. Select the corridor to activate the Corridor contextual tab.
14. From the Corridor contextual tab ► Modify Corridor Sections panel, choose Section Editor.
Browse the cross sections through the trench.
15. When you are finished viewing the sections, dismiss the Section Editor by clicking the X on the

Section Editor contextual tab > Close panel.

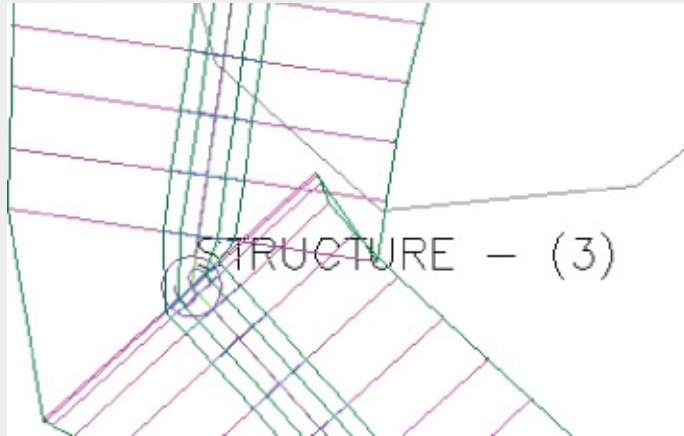You may notice that at the sharp bends in the pipe alignment the corridor frequency lines cross one another. This is called a bow-tie and will be discussed further in the next chapter.



When this exercise is complete, you may close the drawing. A finished copy of this drawing is available from the book's web page with the filename 0908_CorridorPipeTrench_FINISHED.dwg or 0908_CorridorPipeTrench_METRIC_FINISHED.dwg.

The Bottom Line

Build a single baseline corridor from an alignment, profile, and assembly. Corridors are created from the combination of alignments, profiles, and assemblies. Although corridors can be used to model many things, most corridors are used for road design.

Master It Open the MasterIt_0909.dwg or MasteringIt_0909_METRIC.dwg file. Build a corridor named Corridor A on the basis of the Alignment A alignment, the FG profile, and the Basic Assembly. Set all frequencies to 10' (or 3 m for metric users).

Use targets to add lane widening. Targets are an essential design tool used to manipulate the geometry of the road.

Master It Open the MasterIt_0910.dwg or MasterIt_0910_METRIC.dwg file. Set Right Lane to target Alignment A-Right.

Create a corridor surface. The corridor model can be used to build a surface. This corridor surface can then be analyzed and annotated to produce finished road plans.

Master It Open the MasterIt_0911.dwg or MasterIt_0911_METRIC.dwg file. Create a corridor surface for the Alignment A corridor from Top links. Name the surface Corridor A-Top.

Add an automatic boundary to a corridor surface. A surface can be improved with the addition of a boundary. Single-baseline corridors can take advantage of automatic boundary creation.

Master It Open the MasterIt_0912.dwg or MasterIt_0912_METRIC.dwg file. Use the Automatic Boundary Creation tool to add a boundary using the Daylight code.

Chapter 10

Advanced Corridors, Intersections, and Roundabouts

This chapter focuses on taking your corridor-modeling skills to a new level by introducing more tools to your corridor-building toolbox, such as intersecting roads, cul-de-sacs, advanced techniques, and troubleshooting. You will use advanced corridor targets and work with conditional subassemblies.

This chapter assumes that you've worked through the examples in the chapters on alignments, profiles, profile views, assemblies, and basic corridors. Without a strong knowledge of the foundational skills, many of the tasks in this chapter will be difficult.

In this chapter, you will learn to

- Create corridors with non-centerline baselines
- Add alignment and profile targets to a region for a cul-de-sac
- Create a surface from a corridor and add a boundary

Using Multiregion Baselines

In the previous chapter, you modeled corridors with one baseline and one region. A question many people ask when working with corridors is, “At what point do I need another region?” The answer is simple: If you need a different assembly, you need a different region.

In the following example, you will step through adding an additional region to an existing baseline:

1. Open the drawing `1001_MultiRegionCorr.dwg` (`1001_MultiRegionCorr_METRIC.dwg`), which you can download from this book's web page, www.sybex.com/go/masteringcivil3d2015.

This drawing has been split into two modelspace viewports so that you can observe the results of your efforts in 3D.

2. Select the corridor and, from the Corridor contextual tab ➤ Modify Corridor panel, select Corridor Properties.

On the Parameters tab of the Corridor Properties dialog, notice that there is a baseline containing a single region.

3. Click the icon in the End Station column for the region to pick a new end station in the drawing, as shown in [Figure 10.1](#).

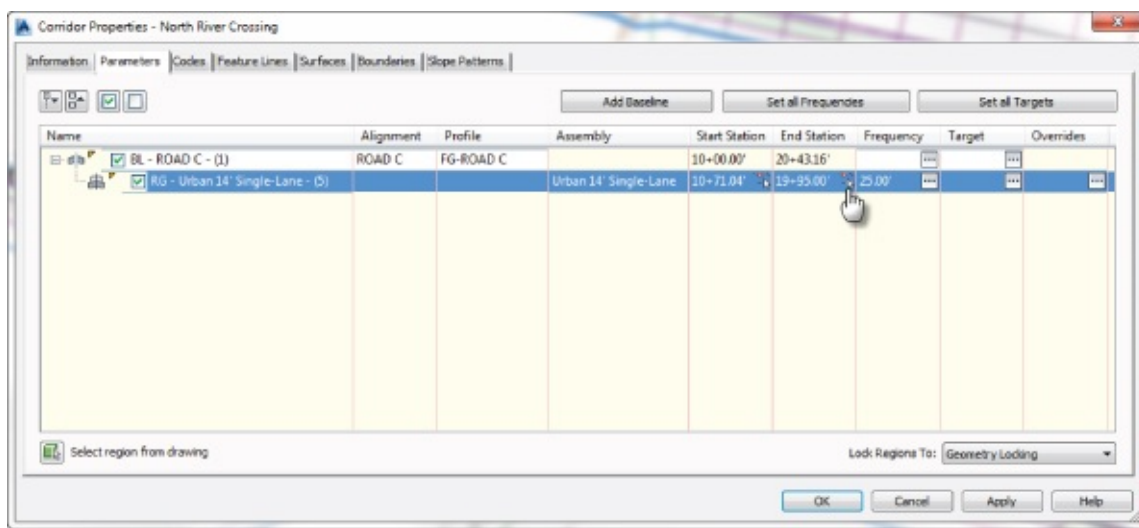


Figure 10.1 Changing the region end station

The Corridor Properties dialog temporarily disappears. The drawing contains linework representing the edge of pavement for this network of roadways in this subdivision. You will be using your Endpoint Osnap along with this linework to define multiple regions in this corridor.

4. In the drawing, with your cursor anchored to ROAD C, stretch the station picker south and Osnap to the end point of the left arc where it intersects ROAD C's edge of pavement, as shown in [Figure 10.2](#).

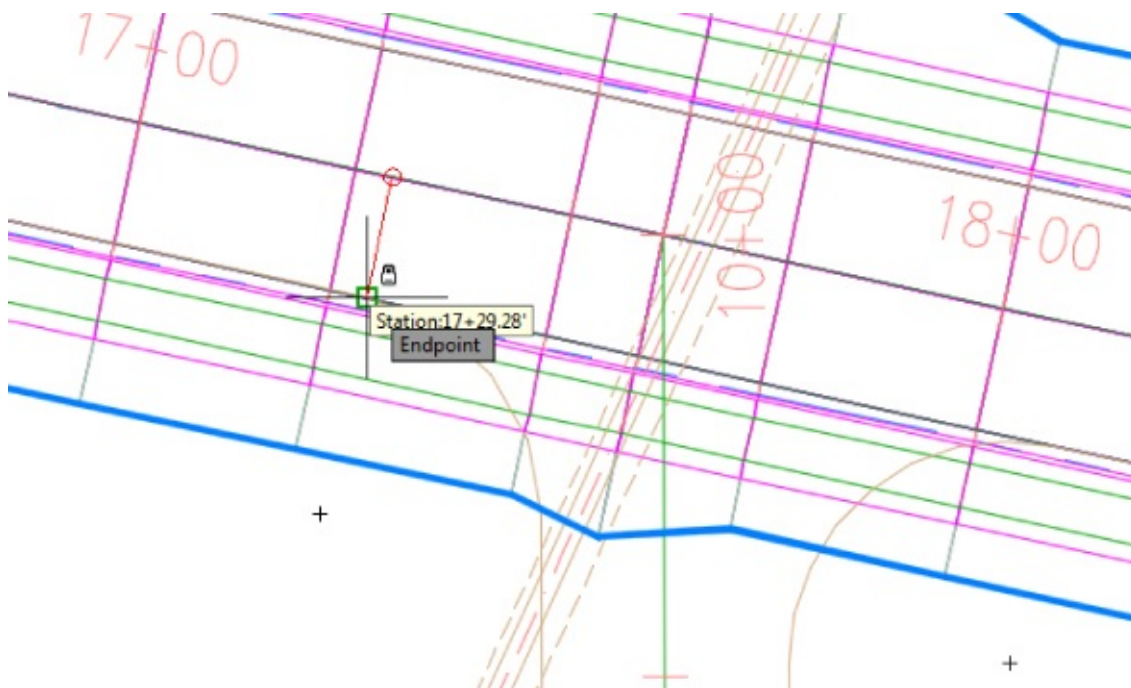


Figure 10.2 Using Osnaps to help define regions

The Corridor Properties dialog reappears. Notice the new End Station value.

5. Click Apply, and rebuild the corridor if prompted.
6. Move the Corridor Properties dialog aside to review the corridor in the drawing area.

Notice that the corridor region now stops exactly at the beginning of the curb return; you would not want the curb and gutter, sidewalk, and daylighting to shoot through the intersection on the right side of the road. In this situation you need another assembly, one without curb and gutter on the right. Since it is needed only in the intersection area, you'll add a region that picks up where the first region left off and ends at the end point of the opposite curb return.

7. Right-click the region and select Insert Region - After.
8. In the Create Corridor Region dialog, using the drop-down menu under Assembly, select Left Daylight-Right Pavement, as shown in [Figure 10.3](#).

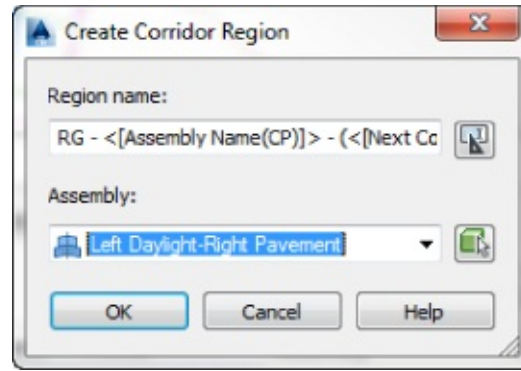


Figure 10.3 Assigning an assembly after inserting a new region

9. Click OK to close the Create Corridor Region dialog.
10. Click the ellipsis button in the Target column of the new region to open the Target Mapping dialog. This assembly contains a daylighting subassembly, so you'll need to set the surface target.
11. In the Object Name column next to Target Surface, click <None> to open the Pick A Surface dialog.
12. Select Existing Surface and click OK to close.
13. Click OK to close the Target Mapping dialog.
14. Click OK to close Corridor Properties and rebuild the corridor if prompted.

The new region was added but it is extending to the end of ROAD C, which wasn't the intent. Next, you will split that region in two and assign another assembly to finish this part of the corridor.

15. Select the corridor and open Corridor Properties using the contextual ribbon.
16. On the Parameters tab, right-click the second region and select Split Region.
17. Use your Endpoint Osnap to select the point where the curb return on the opposite side of the road meets the edge of pavement of ROAD C. Press \leftarrow .

If you see a warning dialog referring to 0+00 being outside of the station limits, click OK and continue.

Back on the Parameters tab, you now have three regions listed under your baseline. The last region requires an assembly change since this is the section on the corridor that requires curb and gutter, sidewalk, and daylighting on both sides.

18. On the third region in the Assembly column, click to open the Edit Corridor Region dialog. Using the drop-down menu under Assembly, select Full Section.
19. Set the surface targets for both sides of the road as described in steps 10–13.
20. Change the end station for the third region to **1995 (608 for metric)**.
21. Click OK to close Corridor Properties and rebuild the corridor if prompted.

The corridor along ROAD C is nearly complete with the exception of the curb returns, as shown in [Figure 10.4](#).



Figure 10.4 Corridor with multiple-baselines

The files `1001_MultiRegionCorr_FINISHED.dwg` and `1001_MultiRegionCorr_METRIC_FINISHED.dwg` are available on this book's web page for you to check your work.

Instead of moving into building out the regions required for the curb returns, you're going to switch gears for a bit and look at a building a cul-de-sac region. Then after you build the cul-de-sac, you'll learn how to use the intersection tool, which automates the process of creating regions, assigning assemblies, and designating targets.

Modeling a Cul-de-Sac

Even if you never plan to design one in real life, understanding what is going on in a cul-de-sac corridor model will set you on the right path for building more complex models. If you truly understand the principles explained in the section that follows, then expanding your repertoire to include intersections and roundabouts will become much easier.

Using Multiple Baselines

Up to this point, every corridor you've built has had a single baseline. When you worked with corridor surfaces, you were working with a complex corridor with multiple baselines. A cul-de-sac by itself can be modeled in two baselines, as shown in [Figure 10.5](#). The procedures that follow will work for most cul-de-sacs, including symmetrical, asymmetrical, and hammerhead styles. You will need a centerline alignment and design profile for the road leading into the cul-de-sac as well as an edge of pavement (EOP) alignment and design profile defining the cul-de-sac bulb.

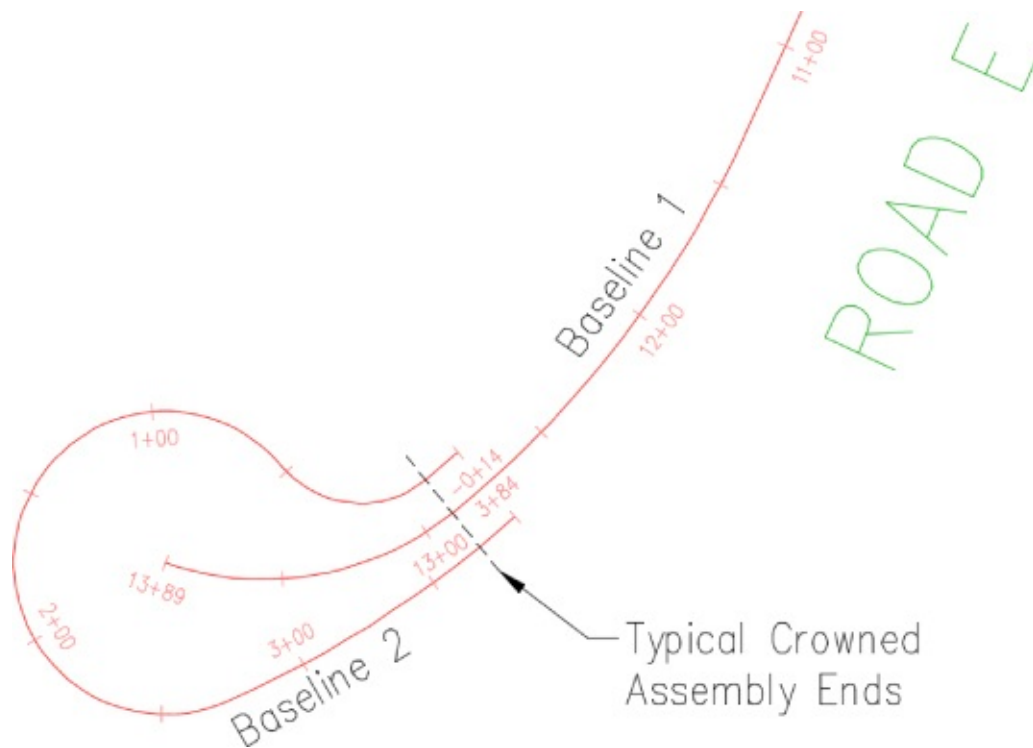


Figure 10.5 Example cul-de-sac alignment setup

In the example shown in [Figure 10.5](#), the centerline of the road, Baseline 1, will require a typical crowned assembly, which will terminate when it reaches the point in the cul-de-sac geometry where the bulb defining curvature begins. From that point, the baseline is swapped out for an alignment and profile that define the edge of the cul-de-sac.

As you've seen, when assemblies are applied to a baseline, the geometry of the subassemblies project perpendicularly from the baseline. In the example of [Figure 10.5](#), the curb and gutter subassembly as well as the rest of the subassemblies it carries (sidewalk, daylighting) need to be projected from the edge of the cul-de-sac bulb because that's the way their real-life counterparts are built. The assembly used on this baseline will have the curb and gutter subassembly on one side and the lane subassembly on the opposite side ([Figure 10.6](#)). The lane subassembly will stretch to meet the centerline alignment and profile as its targets.

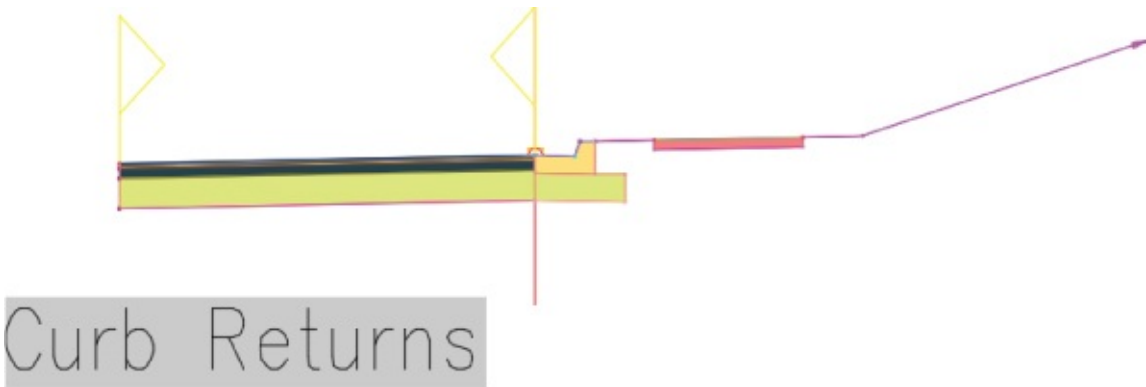


Figure 10.6 Assembly used for designing off the edge of pavement

It helps to think of the assembly as radiating away from the baseline, from the assembly base outward, toward a target ([Figure 10.7](#)). Because the assemblies are applied to the baseline in a perpendicular manner, using the edge of pavement for a baseline in curved areas (such as cul-de-sac bulbs or curb returns) will result in a smooth, properly graded pavement surface.

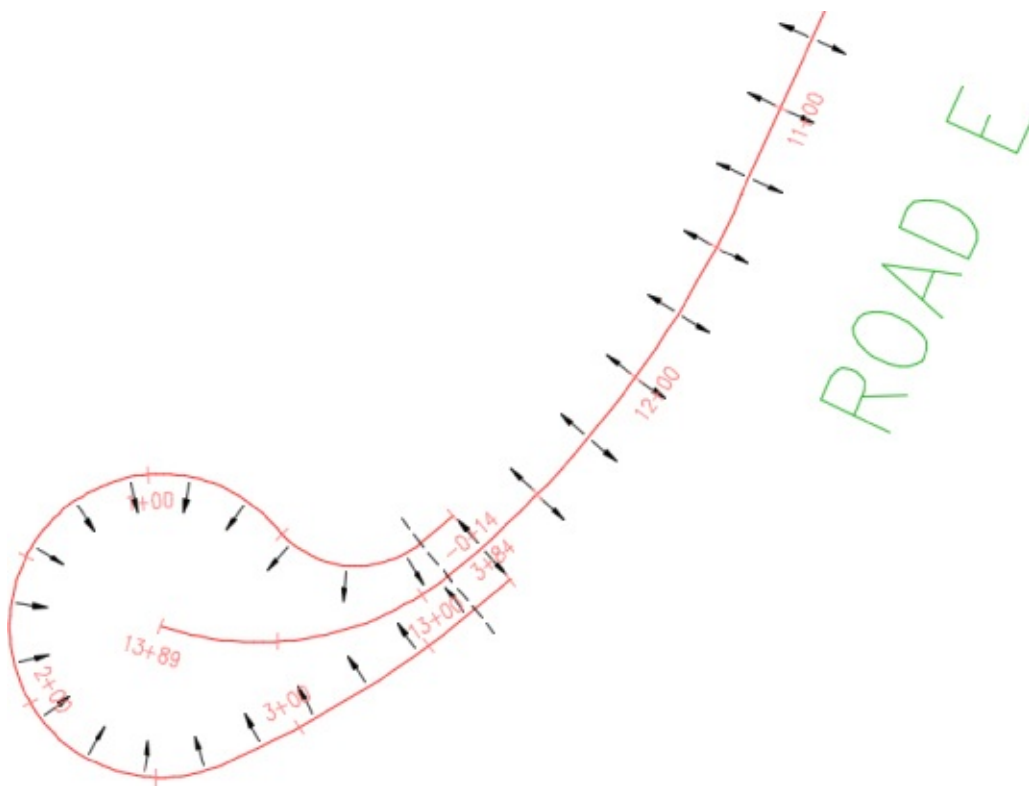



Figure 10.7 It helps to think of the assemblies radiating away from the baseline toward the targets.

Establishing EOP Design Profiles

One of the most challenging parts of complex corridor (i.e., cul-de-sac, intersection, or roundabout) is establishing design profiles for non-centerline alignments. You must have design profiles for both the centerline and edge of pavement alignments, but it does not have to be a painful process to obtain them.

Using a simple, preliminary corridor and the profile-creation tools you learned about in Chapter 7, “Profiles and Profile Views,” you’ll find that establishing an edge of pavement profile can go quickly.

In the exercise that follows, you will work through the steps of creating an EOP profile:

1. Open the 1002_EOPProfile.dwg (1002_EOPProfile_METRIC.dwg) file, which you can download from this book's web page, www.sybex.com/go/masteringcivil3d2015.
 This drawing contains the corridor you worked on in the last exercise, plus an additional baseline and region built for ROAD E. You may also notice that there is an alignment tracing around what would be the edge of pavement in the cul-de-sac for ROAD E.
2. Click the corridor, and open Corridor Properties from the contextual ribbon.
3. On the Surfaces tab of Corridor Properties, do the following:
4.
 1.  Click the Create A Corridor Surface button.
 2. Rename the surface to **North River Crossing - Top**.
 3. Change the surface style to Border Only.
 4. Under Add Data, verify that the Data Type setting is set to Links and the Specify Code setting is set to Top.

5.  Click the Add Surface Item button.

You will not be adding a boundary at this time.

5. Click OK to close the Corridor Properties dialog and rebuild the corridor when prompted.

You should now see a green surface boundary in your drawing.

6. Press Esc to clear the selection. Select the red edge of pavement alignment for the cul-de-sac, and in the Alignment contextual tab > Launch Pad panel, click Surface Profile.
7. In the Create Profile From Surface dialog, highlight North River Crossing - Top and click Add.
8. Click the Draw In Profile View button.
9. Leave all the defaults in the Create Profile View dialog and click Create Profile View.
10. Click in the graphic to the right of the surface to place the profile view.

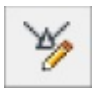
The profile you are seeing has a large gap in the middle. The two short segments at the beginning and end of this profile show what the proposed grade would be according to the corridor surface, which terminates at the PC and PT of the cul-de-sac bulb. The cul-de-sac alignment actually overlaps the corridor surface so you were able to show the proposed grades in profile view leading into and exiting the cul-de-sac.

Next, you will fill in the large gap with your own profile by snapping to the red profile segments to ensure that you are matching grade at the edge of pavement of your cul-de-sac.

11. Select the profile view. (Hint: Click a grid line rather than the profile itself.) From the Profile View contextual tab > Launch Pad panel, click Profile Creation Tools.
- a. For Name, prefix the alignment name with **FG** instead of XG.
 - b. For Profile Style, select Design Profile.
12. Click OK to accept the defaults in the Create Profile dialog.
13. Snap to the end of the first red segment where the preliminary surface ends (station 0+00, elevation 9.149 or 0+000, elevation 2.784 for metric).
14. Next, snap to the beginning of the last red segment where the preliminary surface begins (station 3+69.17, elevation 9.149 or 0+113.26, elevation 2.784 for metric). Press Esc to deselect.

You'll now add a high point along the corridor edge of pavement.



15.  Click the Insert PVIs – Tabular button on the Profile Layout Tools toolbar.
16. Enter station **1+62.04** and elevation **11.58** (or station **0+049.54**, elevation **3.528** for metric).
17. Close the Profile Layout Tools toolbar.

Your profile should look like [Figure 10.8](#).

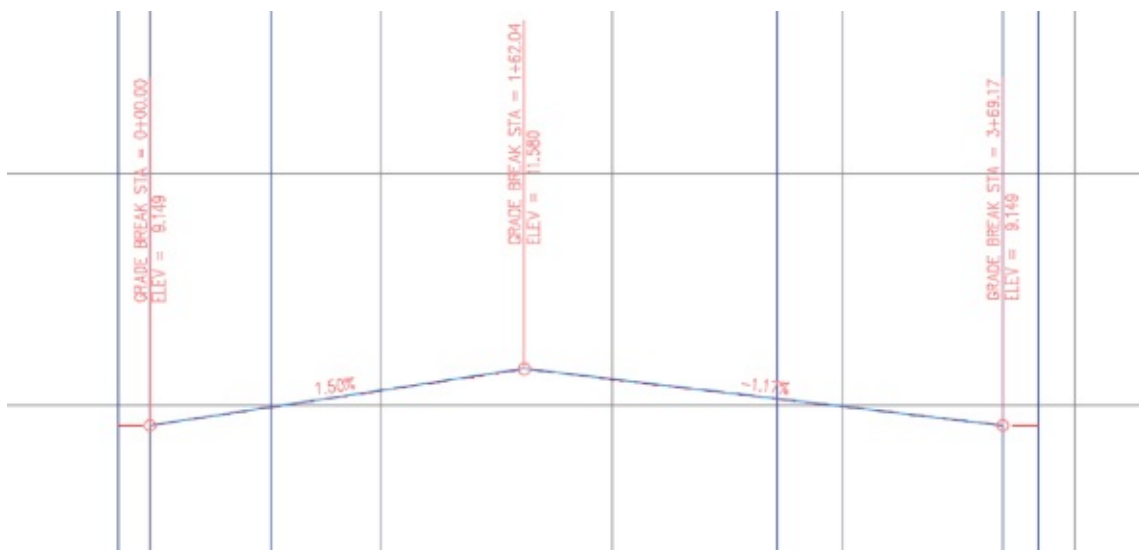




Figure 10.8 A completed cul-de-sac profile

You now have a proposed profile that is acceptable to use in the cul-de-sac baseline. Check your work against `1002_EOPProfile_FINISHED.dwg` or `1002_EOPProfile_METRIC_FINISHED.dwg` to see how your stations and elevations compare. You do not need to save the drawing file.

Putting the Pieces Together

You have all the pieces in place to perform the first iterations of this cul-de-sac design.

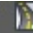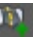The following exercise will walk you through the steps to put the cul-de-sac together. You will complete several steps and let the corridor build to observe what is happening at each stage. This exercise will also encourage you to get comfortable using the Corridor Properties dialog to make design modifications.


1. Open the `1003_Cul-de-SacDesign.dwg` (`1003_Cul-de-SacDesign_METRIC.dwg`) file, which you can download from this book's web page.
2. This drawing contains the cul-de-sac centerline alignment and profile, the EOP alignment and profile, and the assemblies needed to complete the process.
3. Click the corridor.
4.  **Add Baseline** From the contextual tab > Modify Corridor panel, click Add Baseline.
5. In the Create Corridor Baseline dialog, select ROAD E CUL-DE-SAC from the drop-down list. Click OK to continue.
6. In the Select a Profile dialog, select FG-ROAD E CUL-DE-SAC from the drop-down list. Click OK to continue.
7.  **Add Regions** From the contextual tab > Modify Region panel, select Add Regions.
8. At the Select a baseline: prompt, click over the cul-de-sac alignment in the drawing.
9. At the Specify the region start station: prompt, type **0** ↵ Alternatively, you could snap to the end of the corridor at this location.
10. At the Specify the region end station: prompt, type **369.17** (**113.26** for metric) ↵. Alternatively, you could snap to the edge of the corridor at this location.
11. In the Create Corridor Region dialog, under Assembly, select Curb Returns from the drop-down list. Click OK to continue.

2. In the Target Mapping dialog, in the Object Name column, click <None> next to Target Surface and select Existing Surface from the drop-down list in the Pick A Surface dialog. Click OK to dismiss the Pick A Surface dialog, and click OK again to dismiss the Target Mapping dialog.
3. Press the Esc button on your keyboard to end the command.

The curb return assembly has been wrapped around the cul-de-sac, as shown in [Figure 10.9](#). However, the curve frequency needs to be increased to mimic the curvature of the cul-de-sac bulb. Also, an offset and elevation target will have to be set so that the pavement of the assembly stretches to connect horizontally and vertically to the centerline design of ROAD E.



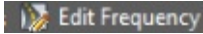Figure 10.9 Cul-de-sac region before configuring frequency and targets

4.  On the contextual tab, > Modify Region panel, select Edit Frequency.
5. At the Select a region to edit: prompt, click anywhere inside the cul-de-sac portion of the corridor. Be careful not to select inside the “donut hole” in the center of the cul-de-sac.
6. In the Frequency To Apply Assemblies dialog, change the Curve Increment value to 5 (1.5 for metric). Click OK to dismiss the dialog.
7. Press the Esc key to end the command.
8. To stretch the pavement to meet the horizontal and vertical centerline of ROAD E, on the contextual tab > Modify Region panel, select Edit Targets.
9. At the Select a region to edit: prompt, click anywhere inside the cul-de-sac portion of the corridor. Be careful not to select inside the “donut hole” in the center of the cul-de-sac.
10. In the Target Mapping dialog in the Width or Offset Targets section, click in the Object Name column next to Width Alignment. Note the name of the subassembly in the Subassembly column.
11. In the Set Width Or Offset Target dialog, under Select Alignments, click ROAD E.

22. Click the Add button to place it on the list below.
23. Click OK to continue.
24. Back in the Target Mapping dialog in the Slope or Elevation Targets section, click in the Object Name column next to Outside Elevation Profile. Note the name of the subassembly in the Subassembly column.
25. In the Set Slope Or Elevation Target dialog, select ROAD E as the alignment.
26. Under Select Profiles, choose FG-ROAD E and click the Add button to place it on the list below. You may need to change the width of the Name column to see the full profile name.
27. Click OK to dismiss the dialog.
28. Click OK again to close the Target Mapping dialog.
29. The corridor is completely modeled (see [Figure 10.10](#)).

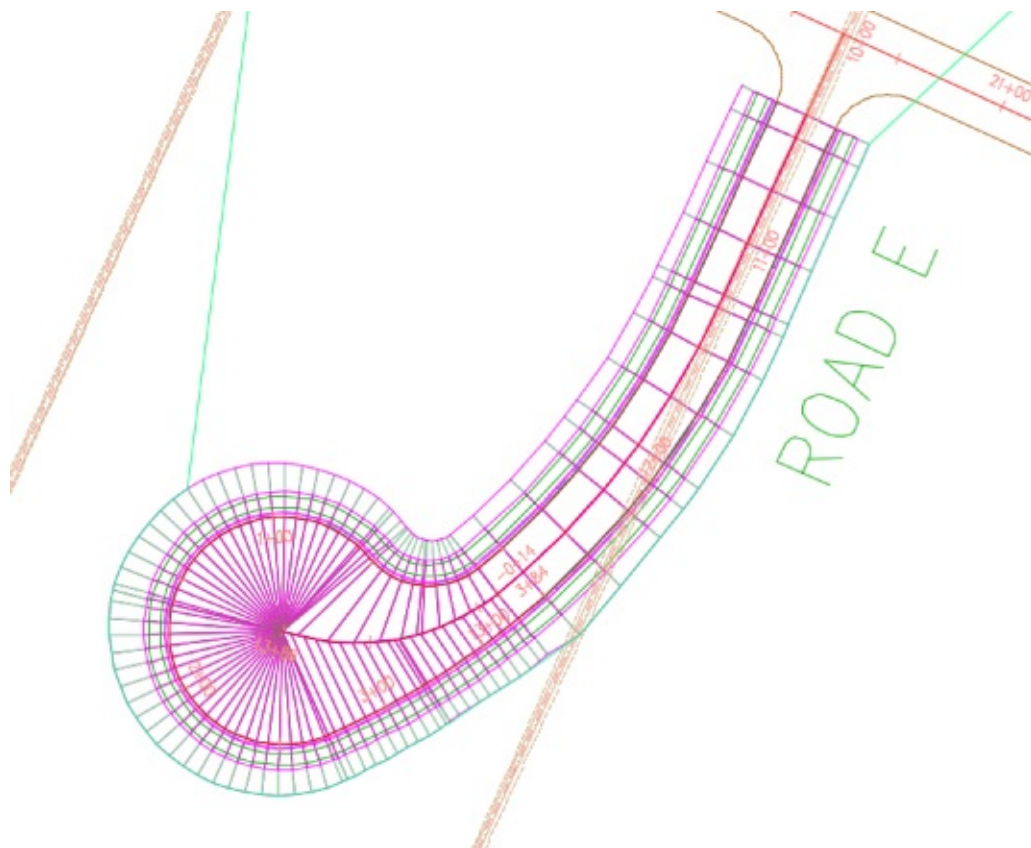


Figure 10.10 The completed cul-de-sac corridor

30. With the corridor still selected, open Corridor Properties from the contextual tab.
31. On the Parameters tab, inspect the baselines and regions that are accumulating in your corridor, as shown in [Figure 10.11](#).


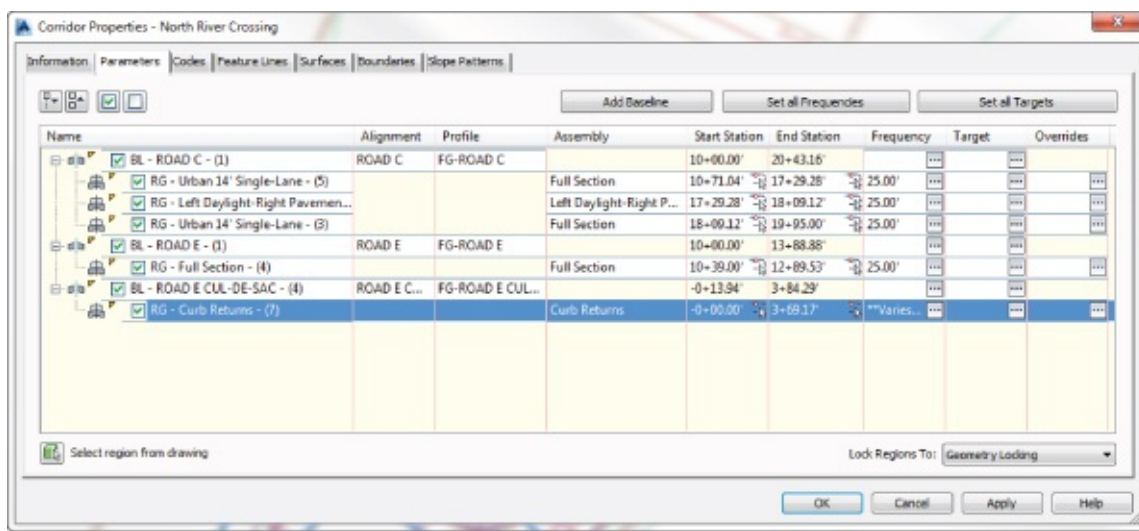


Figure 10.11 Multiple baselines and regions in Corridor Properties

The files 1003_Cul-de-SacDesign_FINISHED.dwg and 1003_Cul-de-SacDesign_METRIC_FINISHED.dwg are available for you to check your work.

Missing Contours

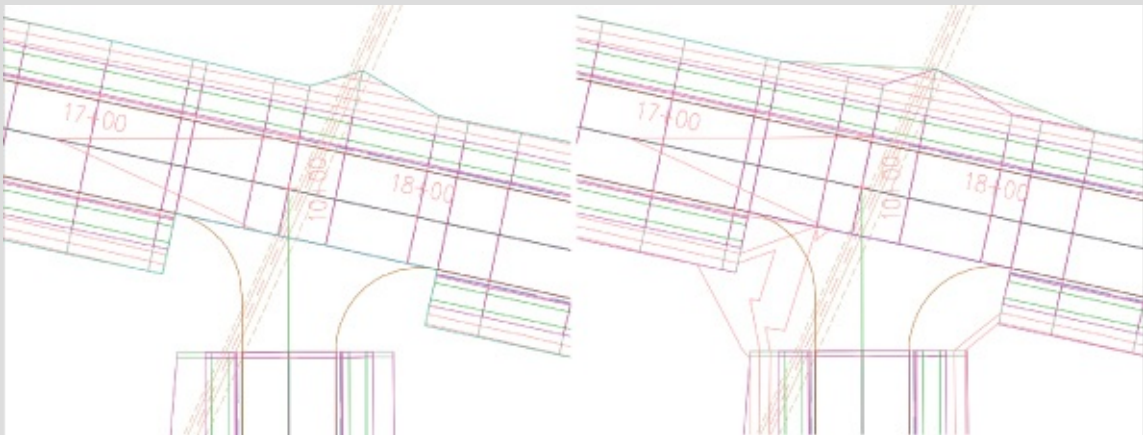You've created a corridor surface and used the boundary option Corridor Extents As Outer Boundary. Then you notice that contours are not generating over the entire corridor. Look for gaps in your corridor. If there are gaps in your corridor, the boundary will be applied to the first series of continuous baselines and exclude the baselines outside the gap.



Troubleshooting Your Cul-de-Sac

People make several common mistakes when modeling their first few cul-de-sacs:

Your cul-de-sac appears with a large gap in the center. If your curb line seems to be modeling correctly but your lanes are leaving a large empty area in the middle (see [Figure 10.12](#)), chances are pretty good that you forgot to assign targets or perhaps assigned the incorrect targets.

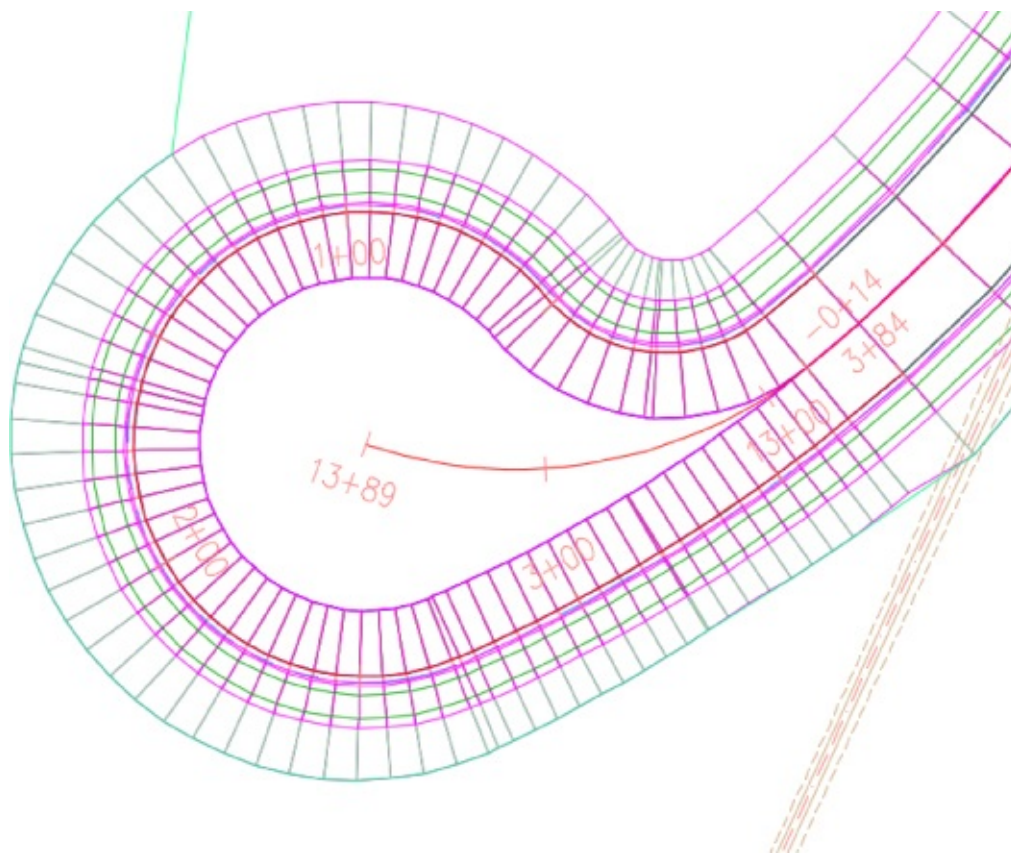


Figure 10.12 A cul-de-sac without targets

You can fix this problem by opening the Target Mapping dialog for your region and checking to make sure you assigned the road centerline alignment and FG profile for your targets. Also, check to see if you assigned these targets to the wrong subassembly.

To pinpoint the location of errors, use the Edit Targets tool from the Modify Region panel of the Corridor contextual ribbon. Edit targets one region at a time to avoid confusion.

Your cul-de-sac appears to be backward. Occasionally, you may find that your lanes wind up on the wrong side of the EOP alignment, as shown in [Figure 10.13](#). The direction of your alignment will dictate whether the lane should be on the left or right side. In the example from the previous exercise, the alignment was running counterclockwise around the cul-de-sac bulb; therefore, the lane was on the left side of the assembly.

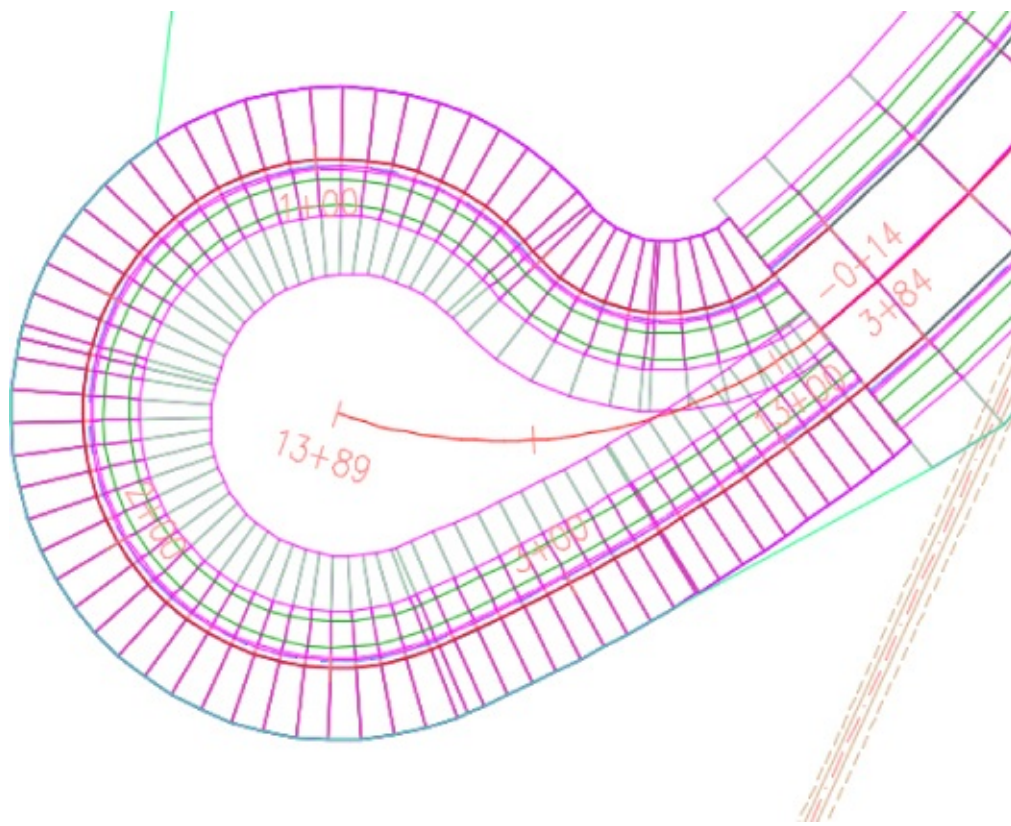


Figure 10.13 A cul-de-sac with the lanes modeled on the wrong side without targets

You can fix this problem by changing the assembly applied to the region to one that was created for the correct side or reversing the alignment.

Your cul-de-sac drops down to 0. A common problem when you first begin modeling cul-de-sacs, intersections, and other corridor components is that one end of your baseline drops down to 0. You probably won't notice the problem in plan view, but once you build your surface or rotate your corridor in 3D (see [Figure 10.14](#)), you'll see it. This problem will always occur if your region station range extends beyond the proposed profile.

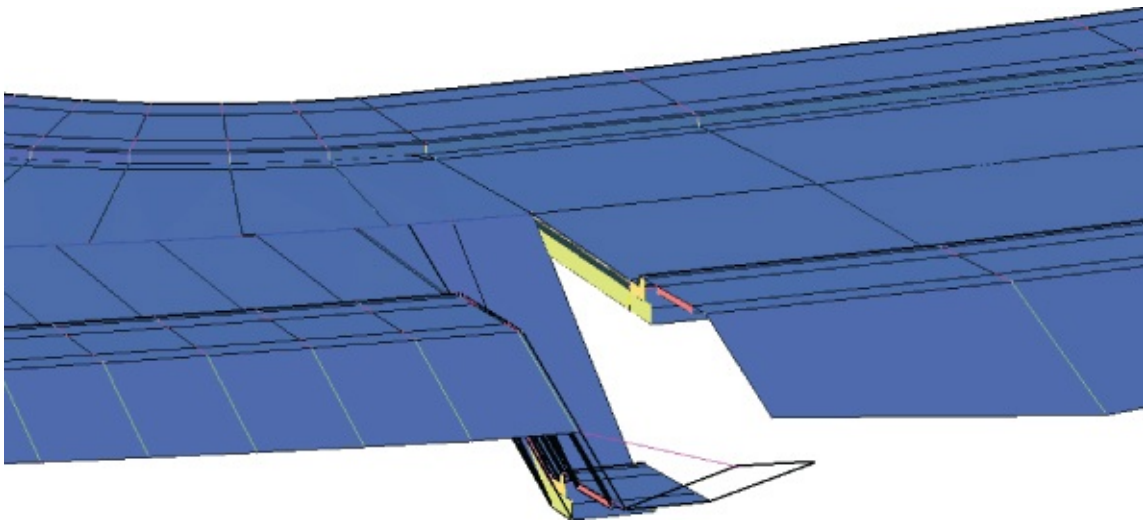


Figure 10.14 A corridor viewed in 3D showing a drop down to 0 (bottom)

To fix this problem, make sure your region station range corresponds with the design profile length. You may need to extend the design profile in some cases, but usually restricting the station range of the region will do the trick.

Your cul-de-sac seems flat. When you're first learning the concept of targets, it's easy to mix up

baseline alignments and target alignments. In the beginning, you may accidentally choose your EOP alignment as a target instead of the road centerline. If this happens, your cul-de-sac will look similar to [Figure 10.15](#).

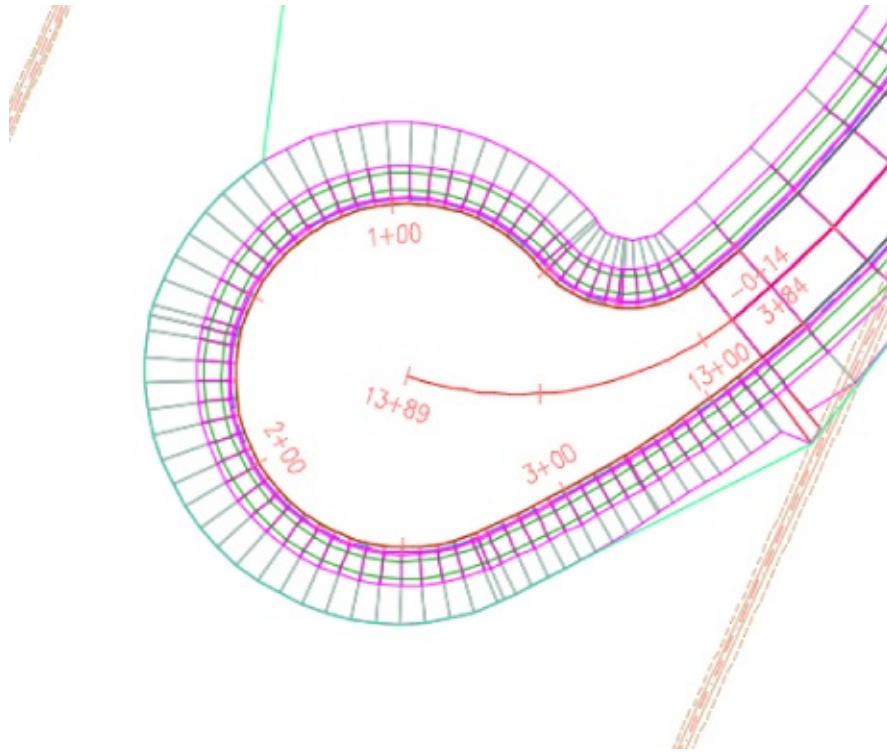


Figure 10.15 A flat cul-de-sac with the wrong lane target set

You can fix this problem by opening the Target Mapping dialog for this region and making sure the target alignment is set to the road centerline and the target profile is set to the road centerline FG profile.

Moving Up to Intersections

Now that you have a thorough understanding of cul-de-sacs, you're ready to take on intersections.

The steps that follow apply to all intersections, regardless of whether it is a T-shaped intersection, a four-way intersection, perfectly perpendicular, or skewed at an angle.

Certification Objective When you build your corridor model, chances are that it will not be graded perfectly, and you may need to tweak it to perfect it. This is why you build the model in the first place, so you can easily see if and where the model fails. Design flaws are difficult to catch right away when you're dealing with a two-dimensional model.

Plan what alignments, profiles, and assemblies you'll need to create the right combination of baselines, regions, and targets to model an intersection that will interact the way you want. It helps to create a simple sketch, as shown in [Figure 10.16](#).

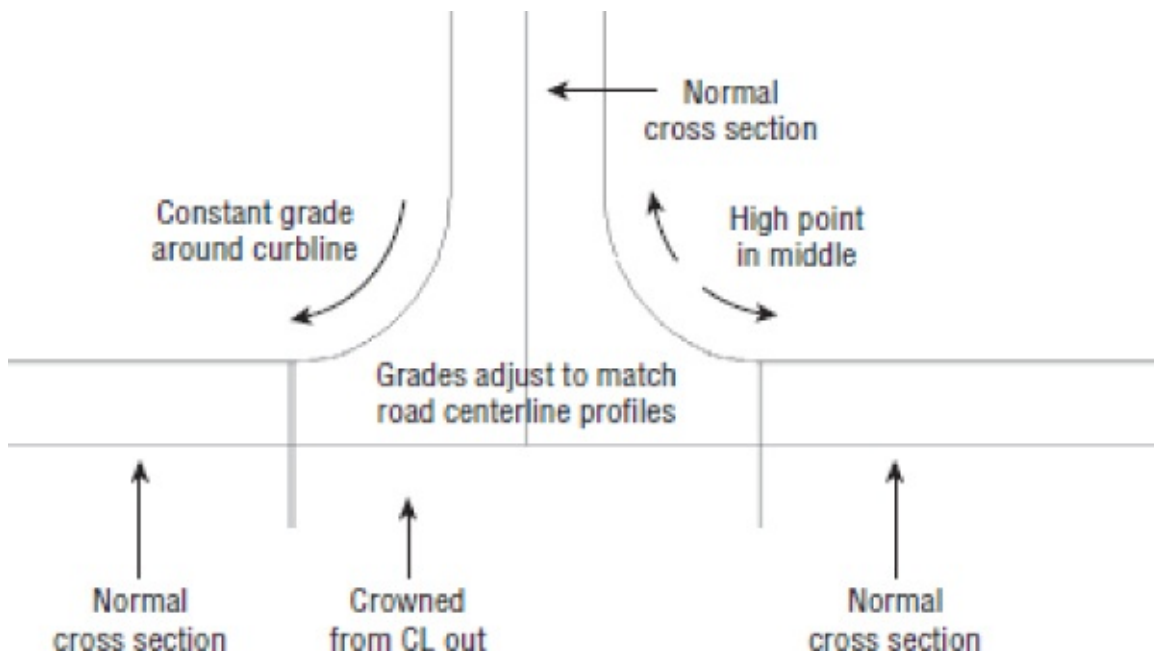


Figure 10.16 Plan your intersection model in sketch form.

Figure 10.17 shows a sketch of required baselines. As you saw in the previous example, *baselines* are the horizontal and vertical foundations of a corridor. Each baseline consists of an alignment and its corresponding finished ground (FG) profile. You may never have thought of edge of pavement in terms of profiles, but after you build a few intersections, thinking that way will become second nature. The Intersection tool on the Create Design panel of the Home tab will create EOP baselines as curb return alignments for you, but it will rely on your input for curb return radii.

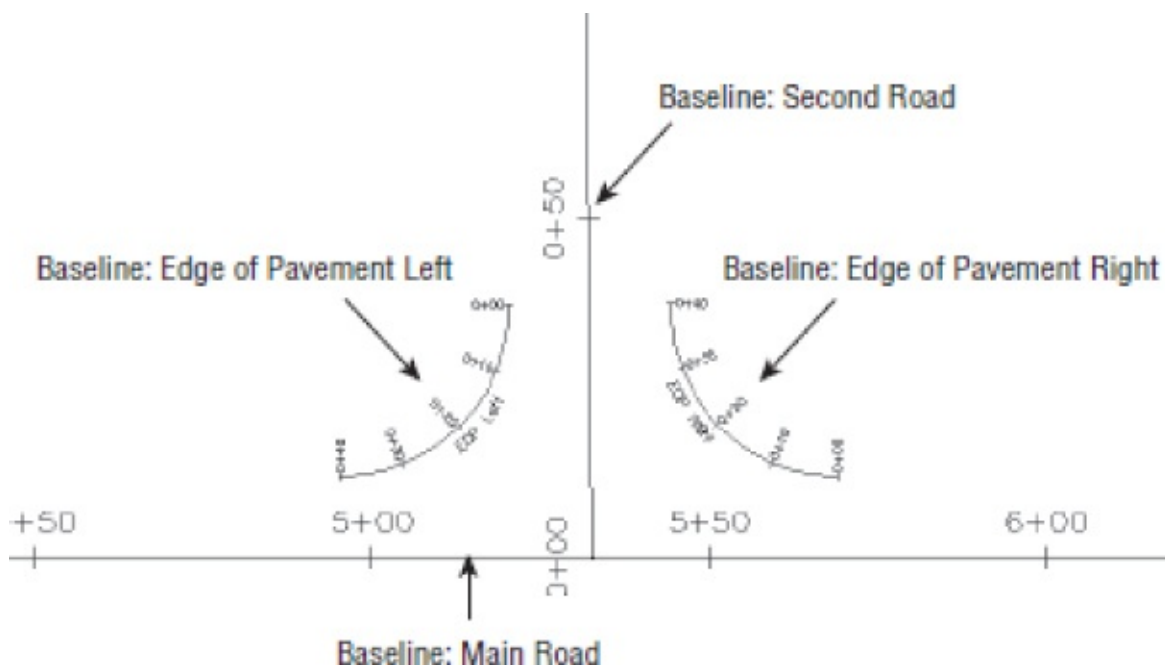


Figure 10.17 Required baselines for modeling a typical intersection

Figure 10.18 breaks each baseline into regions where a different assembly or different target will be applied. Once the intersection has been created, target mapping as well as other particulars can be modified as needed.

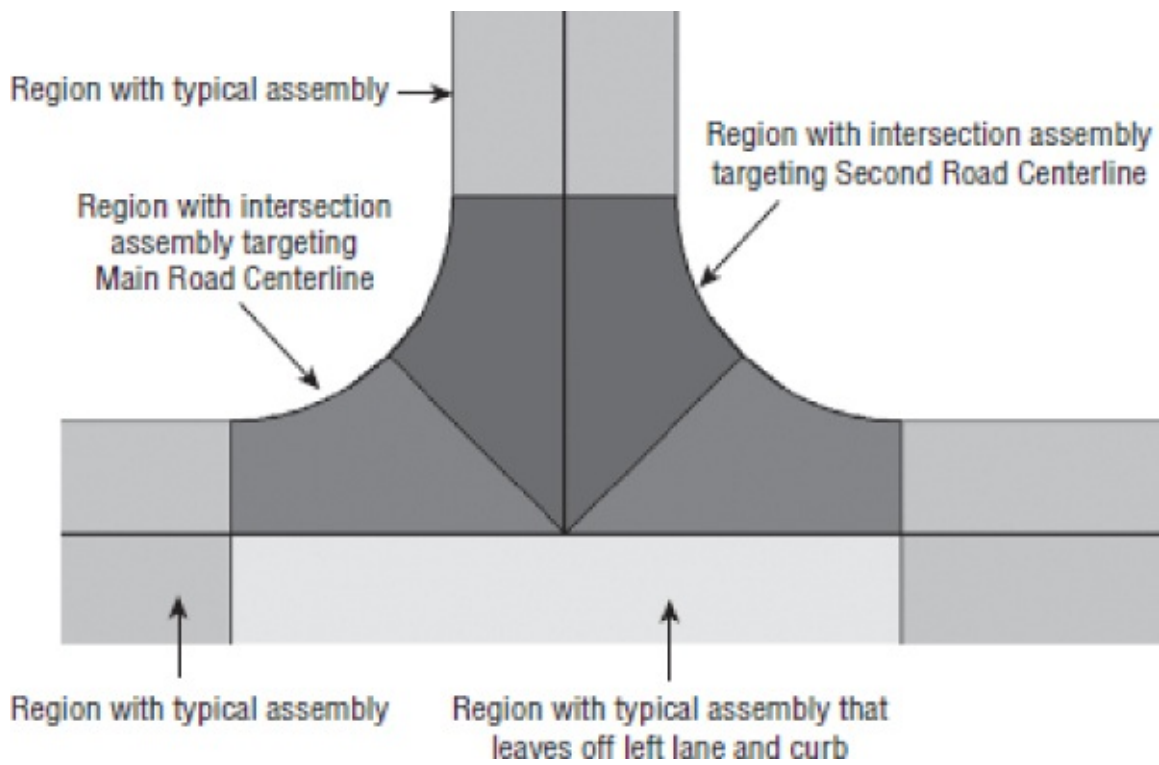


Figure 10.18 Required regions for modeling an intersection created by the Intersection tool

Using the Intersection Wizard

Certification Objective

All the work of setting baselines, creating regions, setting targets, and applying the correct frequencies can be done manually for an intersection. However, Autodesk® AutoCAD® Civil 3D® software contains an automated Intersection tool that can handle many types of intersections.

On the basis of the schematic you drew of your intersection, your main road will need several assemblies to reflect the different road cross sections. [Figure 10.19](#) shows the full range of potential assemblies you may need in an intersection and the design situations in which they may arise.

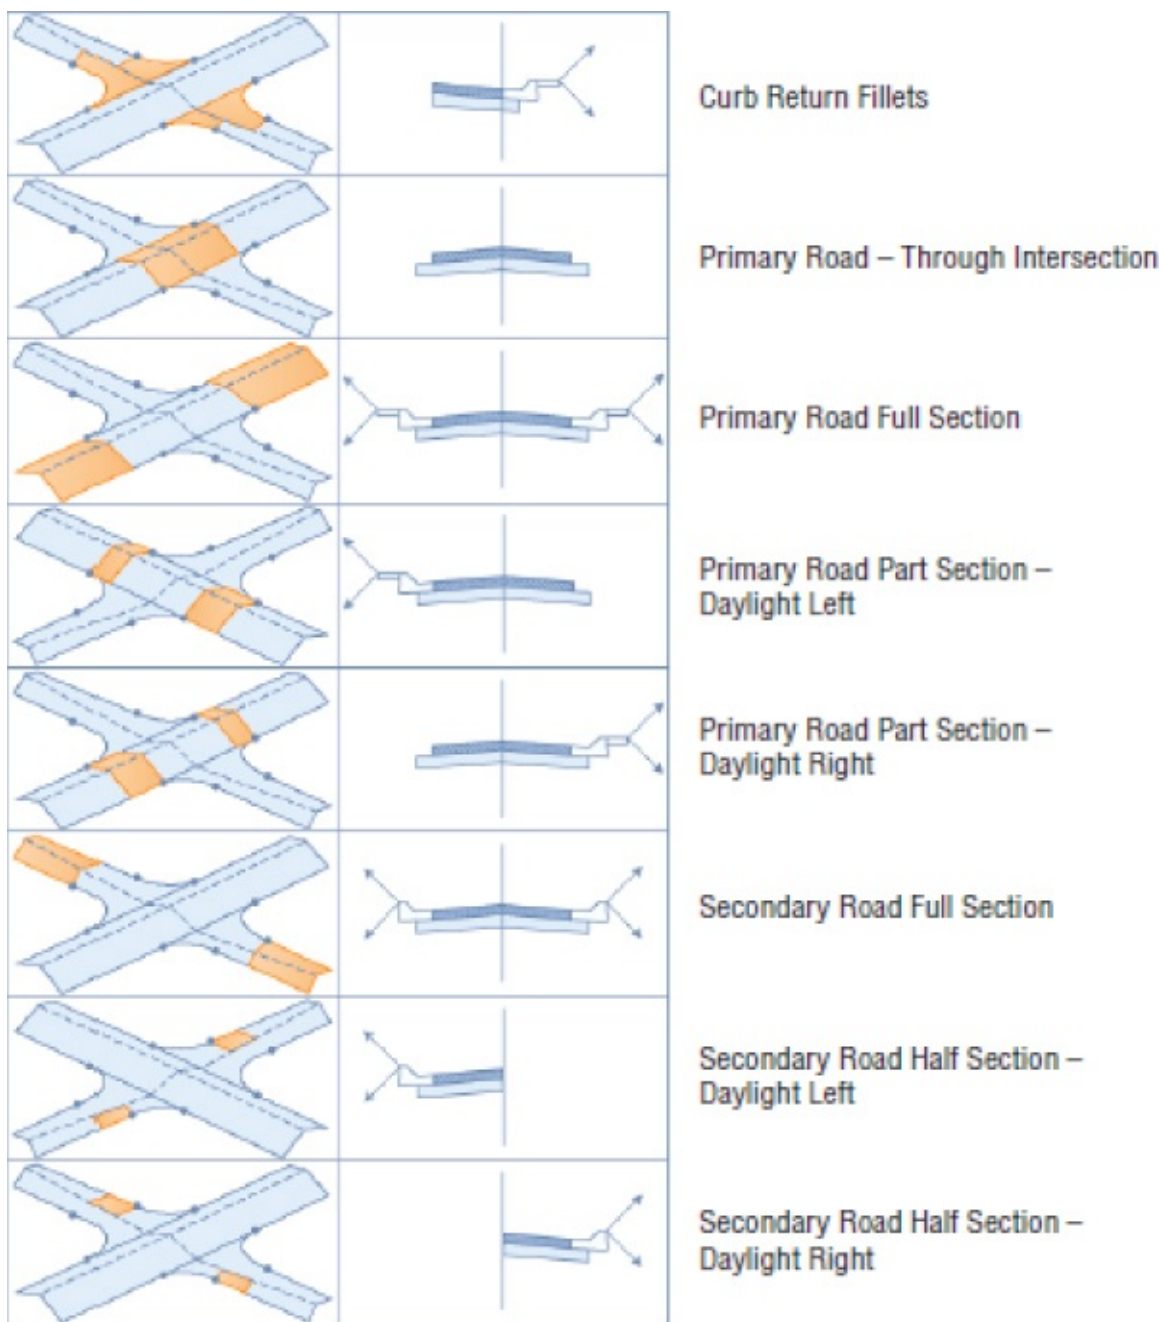


Figure 10.19 Various assembly schematics and applications

This exercise will take you through building a typical intersection with a couple of right-turn lanes using the Create Intersection Wizard:

1. Open the 1004_Intersection.dwg (1004_Intersection_METRIC.dwg) file, which you can download from this book's web page.

You'll start by building a four-way intersection for ROAD A and ROAD D.

2. From the Home tab > Create Design panel, choose the Intersections > Create Intersection tool.
3. At the Select intersection point: prompt, choose the intersection of the two existing alignments. (Hint: The Intersection Osnap will automatically turn on and be active.)
4. At the Select main road alignment <or press enter key to select from list>: prompt, click the ROAD A alignment that runs from west to east.

The Create Intersection – General dialog will appear ([Figure 10.20](#)).


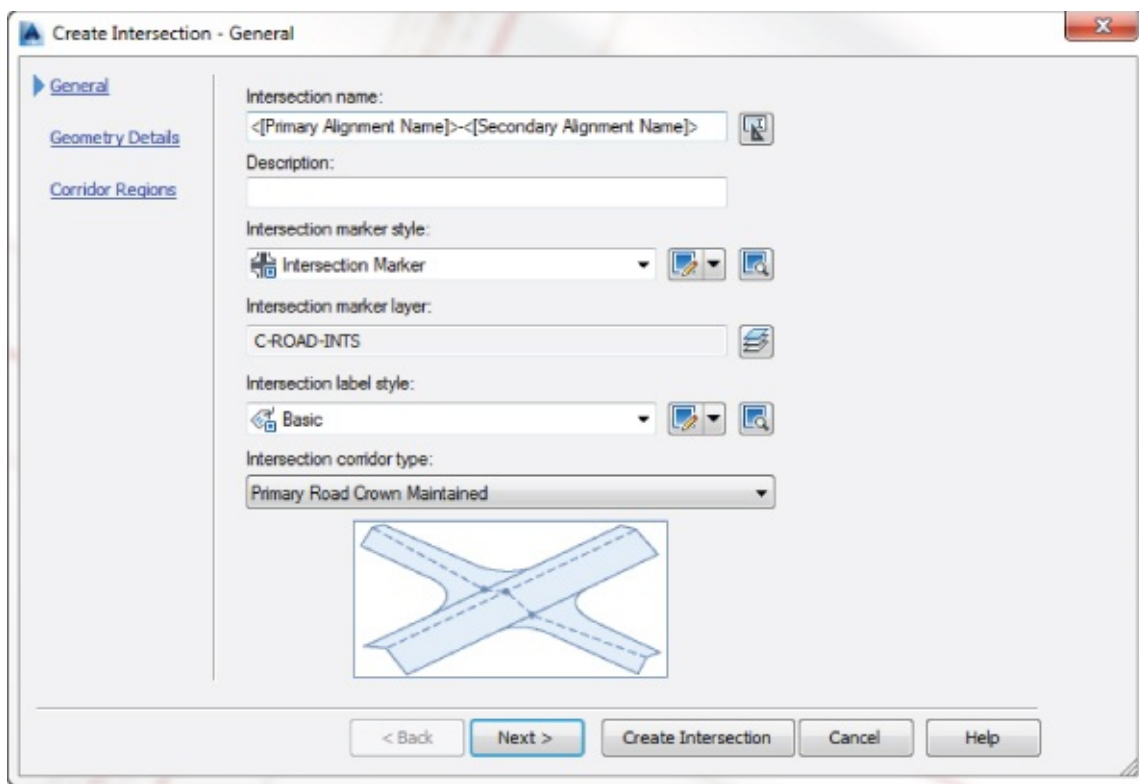


Figure 10.20 The General page of the Create Intersection Wizard

Assembly Sets

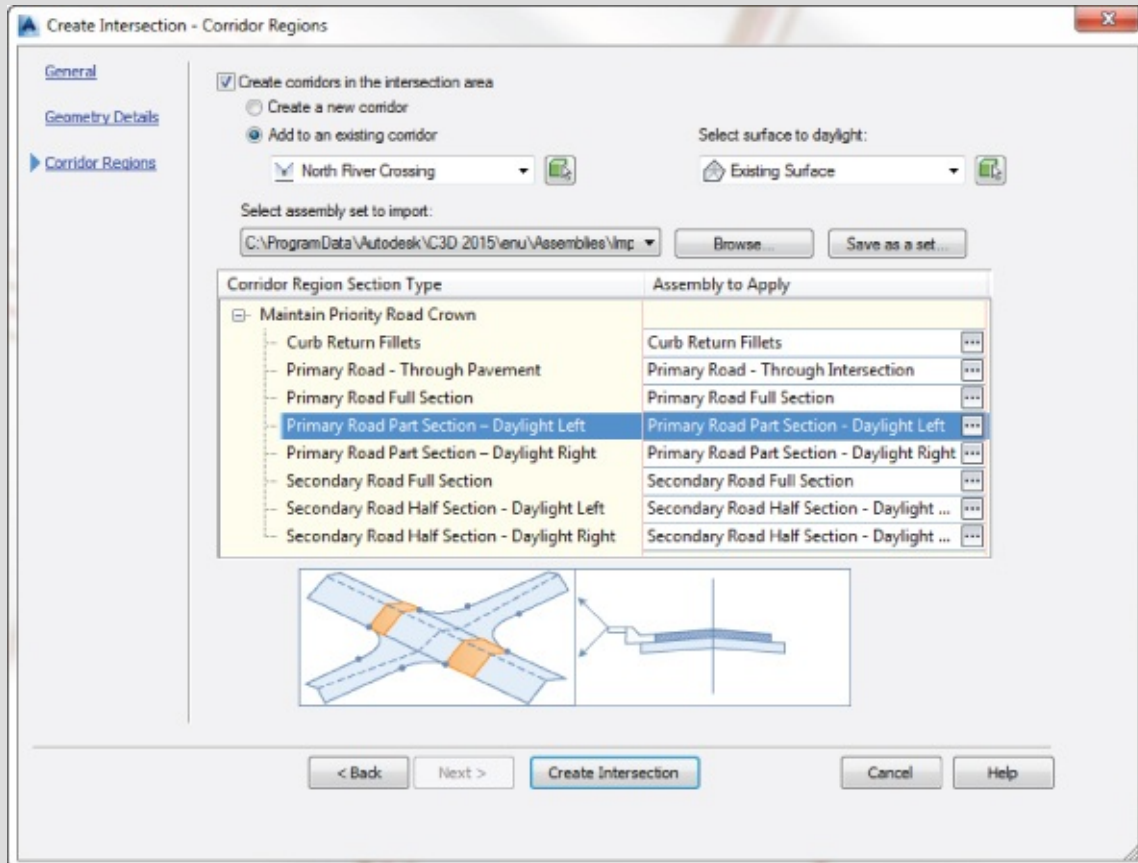When you are ready to create an intersection, you do not need to have all the special assemblies created ahead of time. On the Corridor Regions page of the Create Intersection Wizard, you will see a list of the assemblies Civil 3D plans to use. If the assemblies are not already part of the drawing, they will get pulled in automatically when you click Create Intersection.



The default intersection assemblies are general and may not work for your design situation. You will want to create and save an assembly set of your own.

1. In a file that contains all of your desired assemblies, work through the Create Intersection Wizard to get to the Corridor Regions page.
2. Click the ellipsis to select the appropriate assembly to use for each corridor region section type.
3. Once the list is complete, click the Save As A Set button.

Civil 3D creates an XML file that stores the list of the assemblies. It also creates a copy of each assembly as a separate DWG file. Save the set in a network shared location so your office colleagues can use the set as well.

The next time an intersection is created, you can use the assembly set by clicking Browse and selecting the XML file. Civil 3D will pull in your assemblies, saving lots of time!

5. Set Intersection Corridor Type to All Crowns Maintained and click Next.
6. In the Geometry Details page ([Figure 10.21](#)), verify that ROAD A is the primary road by looking at the Priority list. If ROAD A is not at the top of the list, use the arrow buttons on the right side to

reorder the roads.

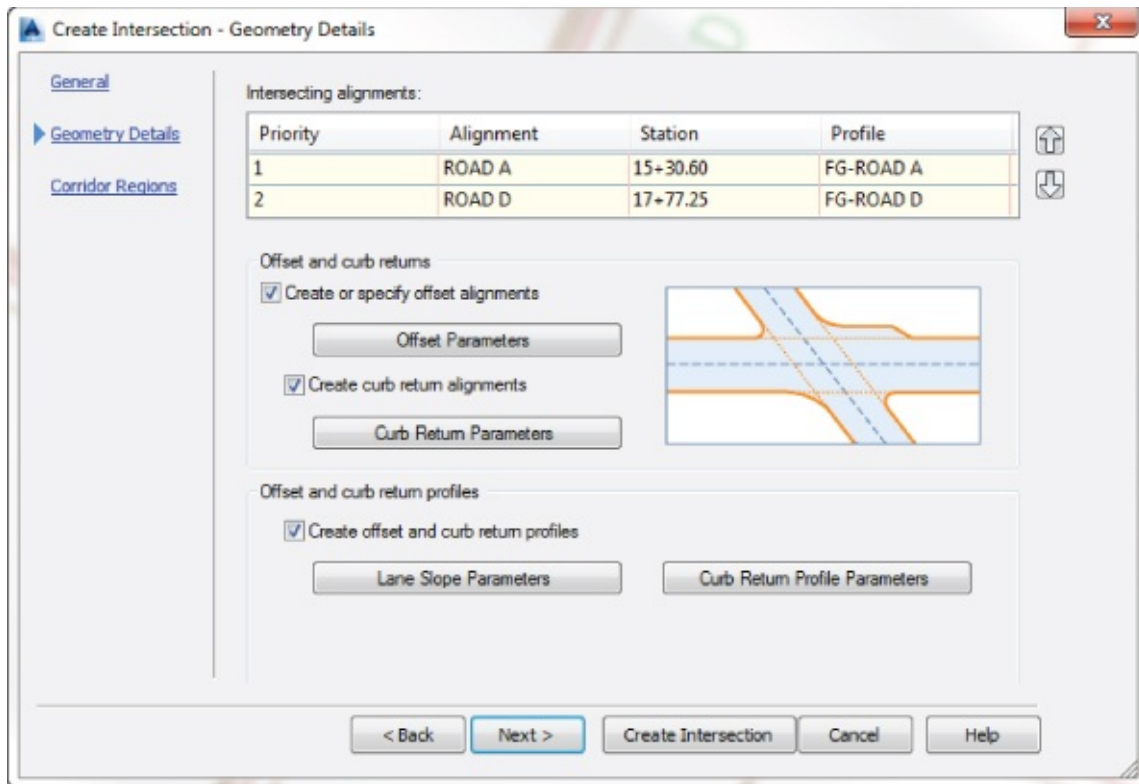


Figure 10.21 The Geometry Details page of the Create Intersection Wizard

7. Click the Offset Parameters button, and do the following in the Intersection Offset Parameters dialog:
 - a. Set the offset values for both the left and right sides to **14' (4.5 m)** for both ROAD A and ROAD D.
 - b. Fill in the check box for Create New Offsets From Start To End Of Centerlines. This will ensure that the turn lanes you're about to create will have targets to meet.

At this step, the screen should resemble [Figure 10.22](#).

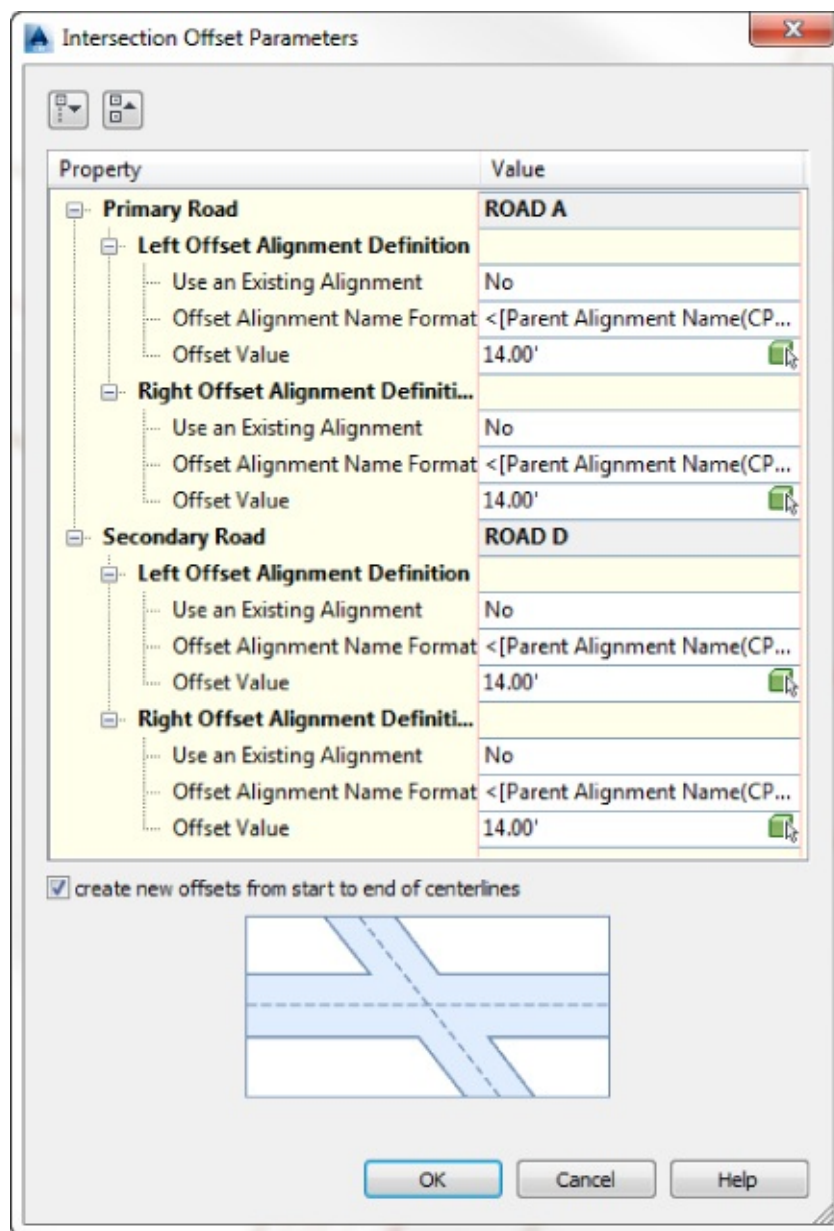


Figure 10.22 Intersection Offset Parameters dialog

c. Click OK to close the Intersection Offset Parameters dialog.

8. On the Geometry Details page, click the Curb Return Parameters button to enter the Intersection Curb Return Parameters dialog.

a. For the NE and SW quadrants, place a check mark next to Widen Turn Lane For Incoming Road.

You will be creating right-turn lanes for ROAD A. Notice how the dialog changes when the check box is filled to show widening parameters.

b. Click the Next button at the top of the dialog to move from quadrant to quadrant.

You will see a schematic name of the quadrant listed at the top of the dialog that corresponds to the glyph. As shown in [Figure 10.23](#), the temporary glyph will help you determine which quadrant you are currently modifying.

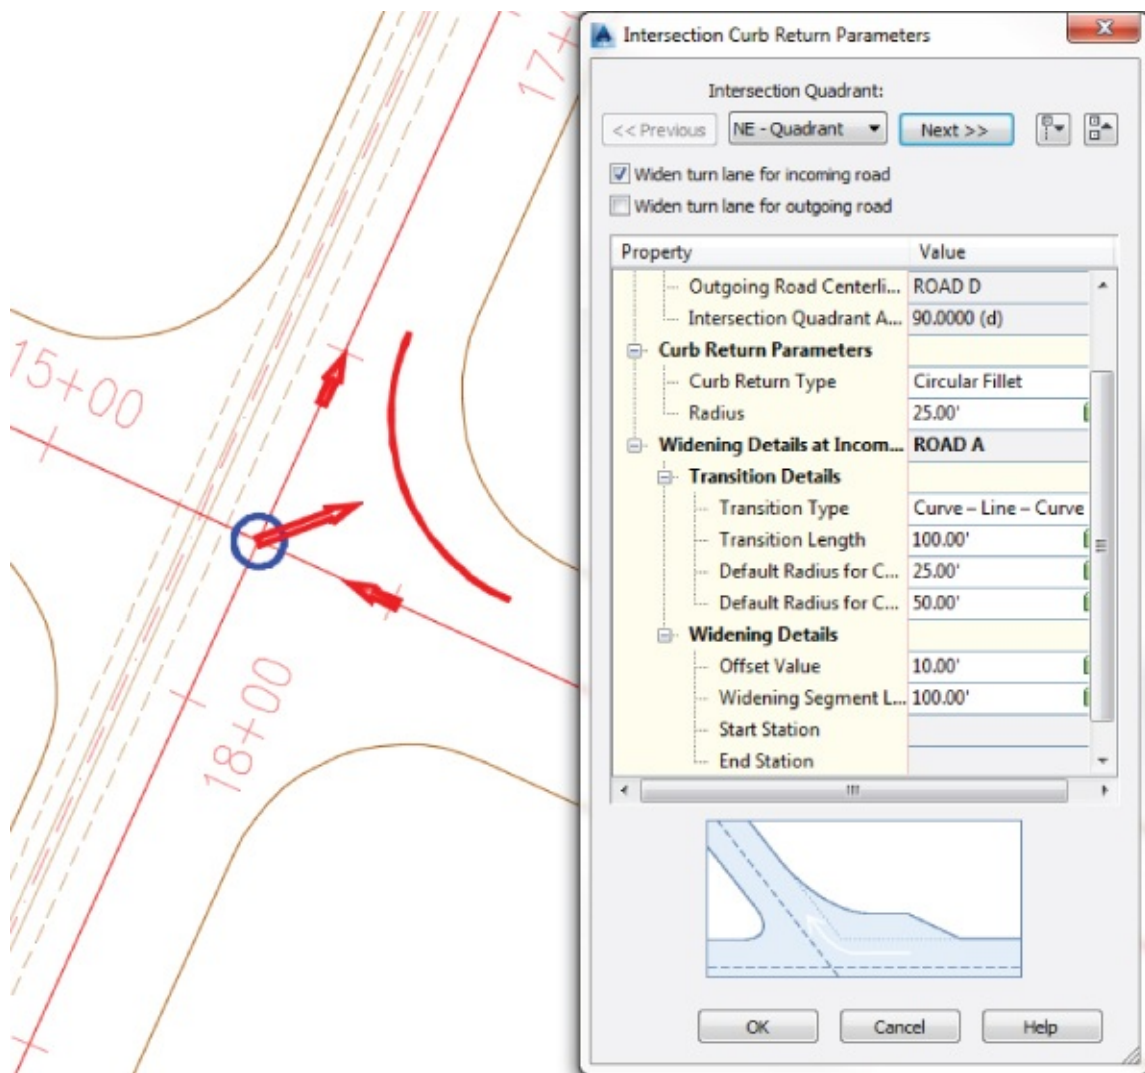


Figure 10.23 Adding lane widening to the NE – Quadrant of the intersection

When you reach the last quadrant, you will see that the Next button is grayed out. This means that you have successfully worked through all four curb returns.

- c. Click OK to return to the wizard's Geometry Details page.

Some locales require that lane slopes flatten out to a 1 percent cross-slope in an intersection. If this is the case for you, you can change the lane slope parameters in the Intersection Lane Slope Parameters dialog ([Figure 10.24](#)). In this exercise you will leave this setting at -2%.

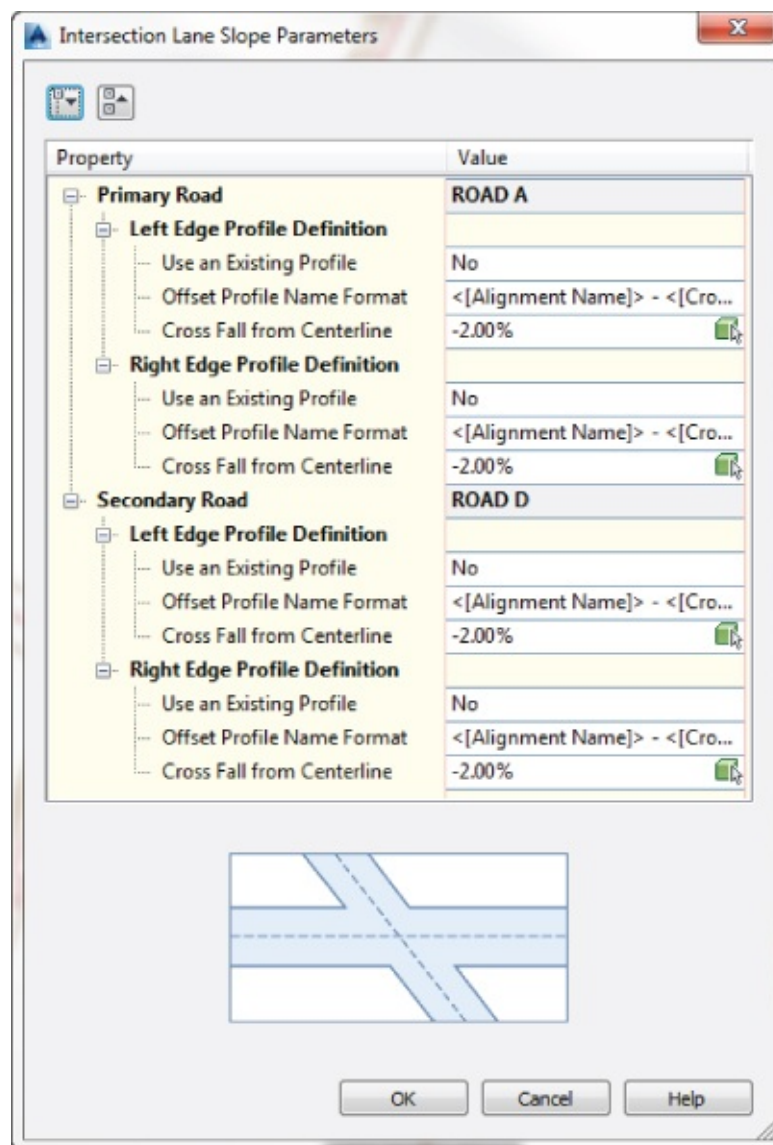


Figure 10.24 Lane slope parameters control the cross-slope in the intersection.

Civil 3D performs the task of generating the curb return profile. The profile will be at least as long as the rounded curb plus the turn lanes that are added in this exercise. If you wish to have Civil 3D generate even more than the length needed, you can specify that in the Intersection Curb Return Profile Parameters dialog ([Figure 10.25](#)). This dialog is actually a series of dialogs based on quadrant, as was the Curb Return Parameters dialog. According to [Figure 10.25](#), the alignment and profile for the SE - Quadrant curb return will be extended 25' beyond its PCs and PTs. And how is this useful? You'll find out in the upcoming section called "Manual Intersections."

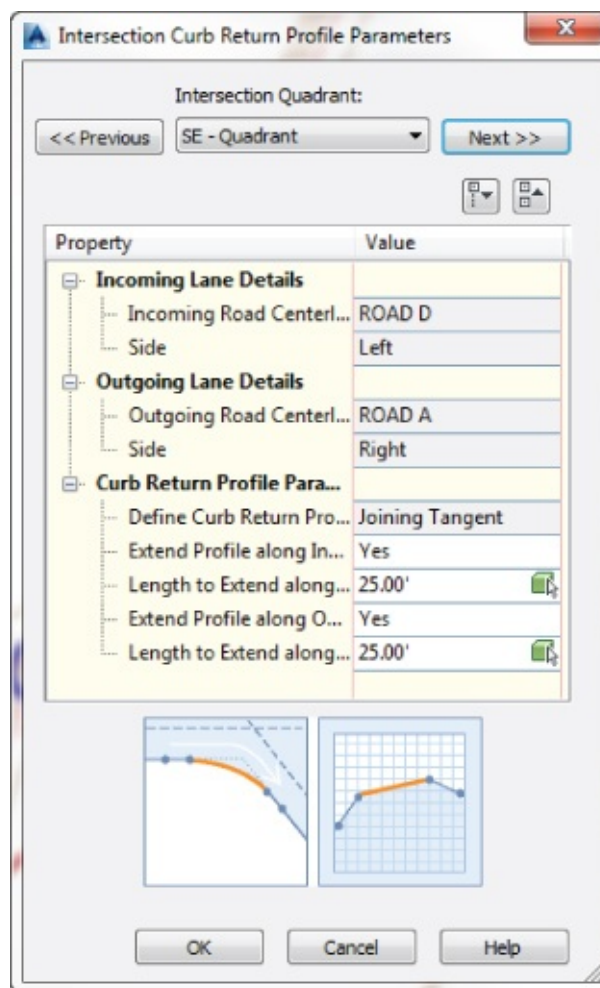


Figure 10.25 Intersection Curb Return Profile Parameters options extend the Civil 3D-generated profile beyond the curb returns by the value specified.

You will be keeping all default settings in both the Lane Slope Parameters area ([Figure 10.24](#)) and the Curb Return Profile Parameters area ([Figure 10.25](#)).

9. Click Next to continue to the Corridor Regions page of the Create Intersection Wizard ([Figure 10.26](#)).

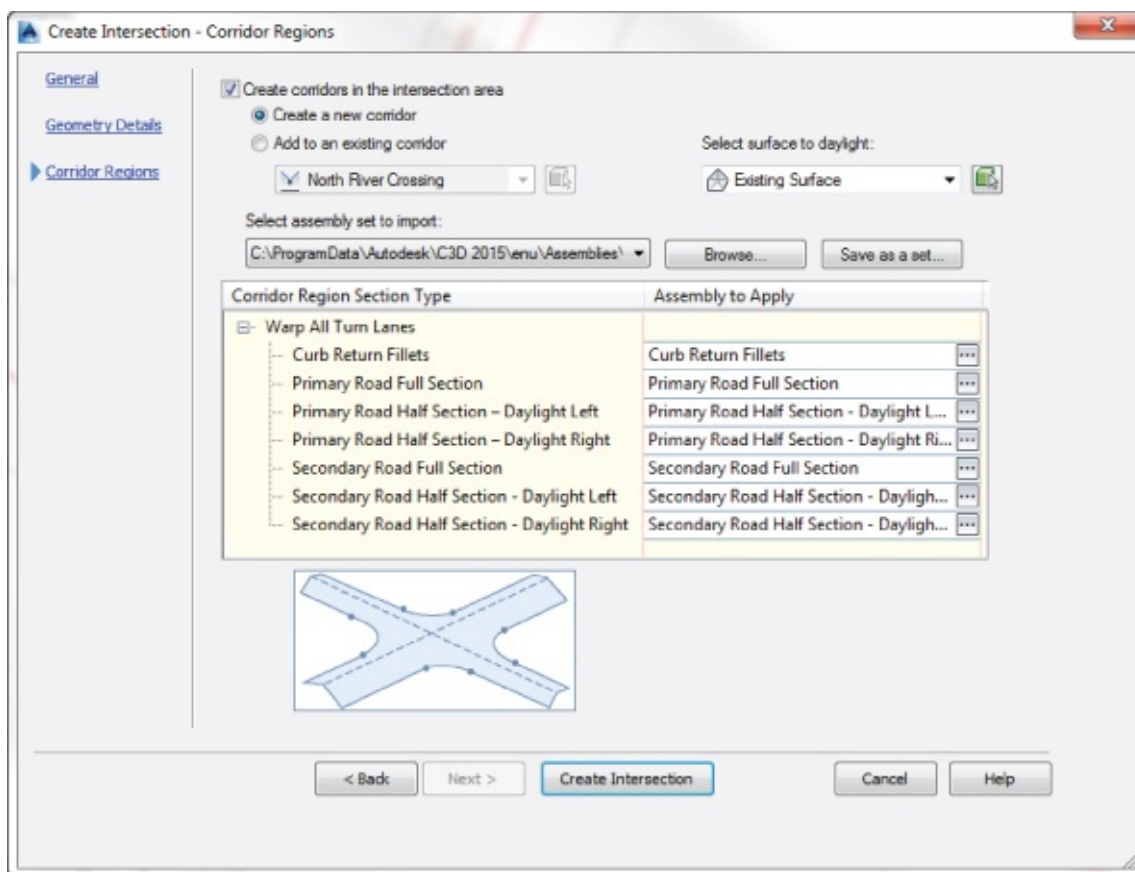


Figure 10.26 The Corridor Regions page of the Create Intersection Wizard drives the assemblies used in the intersection.

The Corridor Regions page is where you control which assemblies are used for the different design locations around the intersection. Clicking each entry in the Corridor Region Section Type list will give you a preview of what each assembly type should look like and where in the intersection it's applied (as shown at the bottom of [Figure 10.26](#)). If your assemblies have the same names as the default assemblies, they will be pulled from the current drawing. Alternatively, you can click the ellipsis to select any assembly from the drawing, which is what you will be doing in this example.

If you didn't have all the necessary assemblies created in your drawing at this point, you could still create your intersection with the default assemblies. You could always modify the default assemblies with your own criteria and subassemblies after they are brought in.

10. On the Corridor Regions page, do the following:
 - a. Click Add To An Existing Corridor to place the intersection in the North River Crossing corridor.
 - b. Verify that Select Surface To Daylight is set to Existing Surface.
 - c. In the Corridor Region Section Type list, set the following:

Corridor Region Section Type	Assembly To Apply
Curb Return Fillets	Curb Returns
Primary Road Full Section	Full Section
Primary Road Half Section - Daylight Left	Left Half
Primary Road Half Section - Daylight Right	Right Half
Secondary Road Full Section	Full Section
Secondary Road Half Section - Daylight Left	Left Half
Secondary Road Half Section - Daylight Right	Right Half

d. Giving each assembly a friendly, meaningful name will keep things less confusing.

11. Click Create Intersection.

After a few moments of processing, you will see a corridor appear at the intersection of the roads. Use the REGEN command if you do not see the frequency lines. Your corridor should now resemble [Figure 10.27](#).

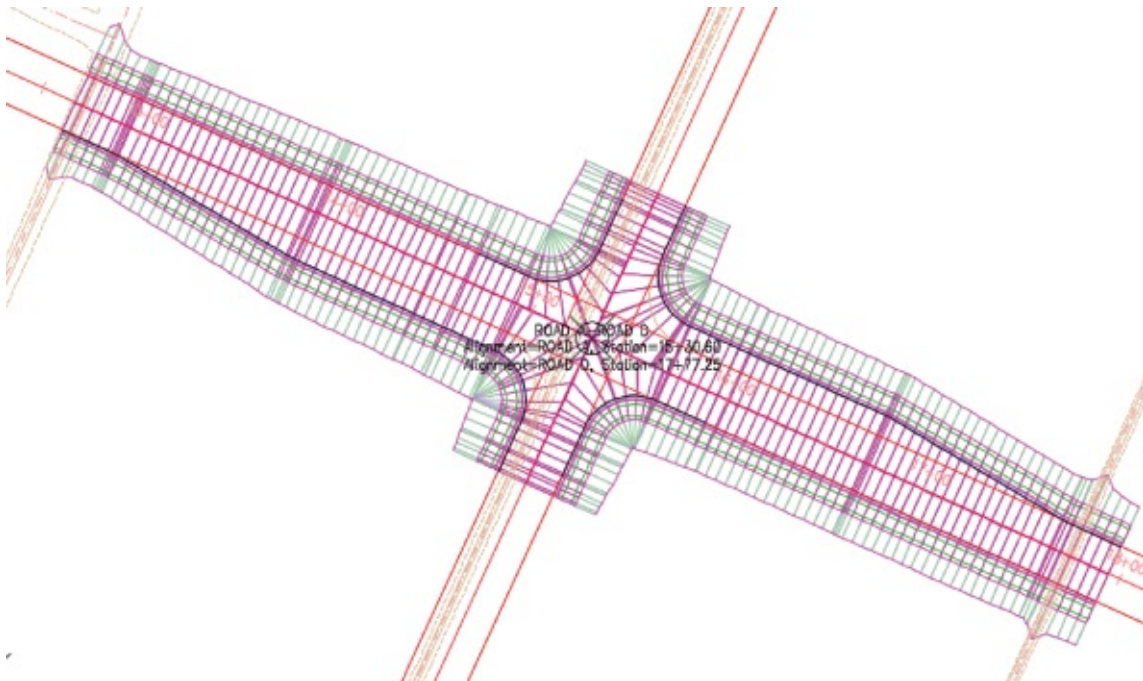


Figure 10.27 The completed intersection

12. Select the corridor, and from the Corridor contextual tab ➤ Modify Corridor panel, select Corridor Properties.

a. Switch to the Parameters tab of the Corridor Properties dialog and highlight one of the regions toward the bottom in the list, as shown in [Figure 10.28](#).

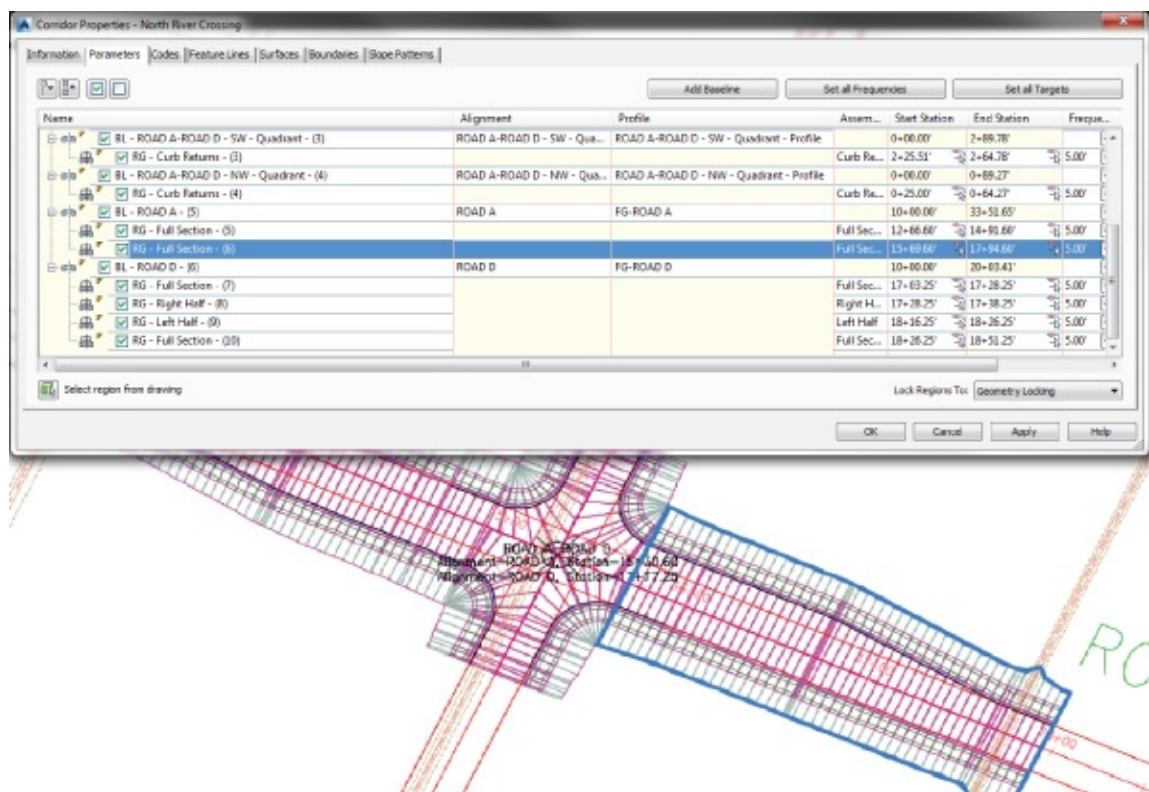


Figure 10.28 One way to modify regions is to use the Parameters tab in Corridor Properties. The selected region will highlight graphically.

Notice how the region highlighted in the Parameters tab is outlined in the graphic. This will help you determine which region to edit.



To move from region to region without searching through the overwhelming list of baselines and regions, use the Select Region From Drawing button.

- b. Click Cancel to close Corridor Properties and press Esc to deselect.

Next you will create a three-way intersection.

13. In your drawing, pan northward to the intersection of ROAD C and ROAD D.
 14. From the Home tab > Create Design panel, choose the Intersections > Create Intersection tool.
 15. At the Select intersection point: prompt, choose the intersection of the two existing alignments.
- You will not be prompted to pick a main/primary road alignment for three-way intersections. The Intersection tool automatically configures the through road as the primary road.
16. On the General page of the Intersection wizard, set the Intersection Corridor Type to All Crowns Maintained and click Next.
 17. On the Geometry Details page, accept the defaults and click Next.
 18. On the Corridor Regions page, do the following:
 - a. Click Add To An Existing Corridor to place the intersection in the North River Crossing corridor.
 - b. Verify that Select Surface To Daylight is set to Existing Surface.
 - c. In the Corridor Region Section Type list, set the following:

Corridor Region Section Type	Assembly to Apply
Curb Return Fillets	Curb Returns
Primary Road Full Section	Full Section
Primary Road Half Section - Daylight Left	Left Half
Primary Road Half Section - Daylight Right	Right Half
Secondary Road Full Section	Full Section
Secondary Road Half Section - Daylight Left	Left Half
Secondary Road Half Section - Daylight Right	Right Half

d. Before creating this intersection, click the Save As A Set button so this configuration of assemblies can be reused on the other two three-way intersections.

e. Name your file **NorthRiver** and click Save to continue.

19. Click the Create Intersection button to add this intersection to the North River Crossing corridor.

20. Repeat steps 15–19 for the intersection of ROAD C and ROAD B with the following exceptions:

a. On the Intersection Offset Parameters dialog, turn off Create New Offsets From Start To End Of Centerlines.

b. On the Corridor Regions page, click Browse to choose the assembly set you just created.

c. In the Select Assembly Set File dialog, select the NorthRiver.xml file and click Open to import.

This may take a few seconds, so wait for it.

d. Do not forget to add the intersection to the North River Crossing corridor.

e. Create the intersection.

21. Repeat steps 15–19 for the intersection of ROAD A and ROAD E with the following exceptions:

a. You will not need to browse for the assembly set. The wizard will remember the last assembly set used.

b. Do not forget to add the intersection to the North River Crossing corridor.

c. Create the intersection.

You should have four intersections in addition to your cul-de-sac modeled in your drawing, as shown in [Figure 10.29](#).

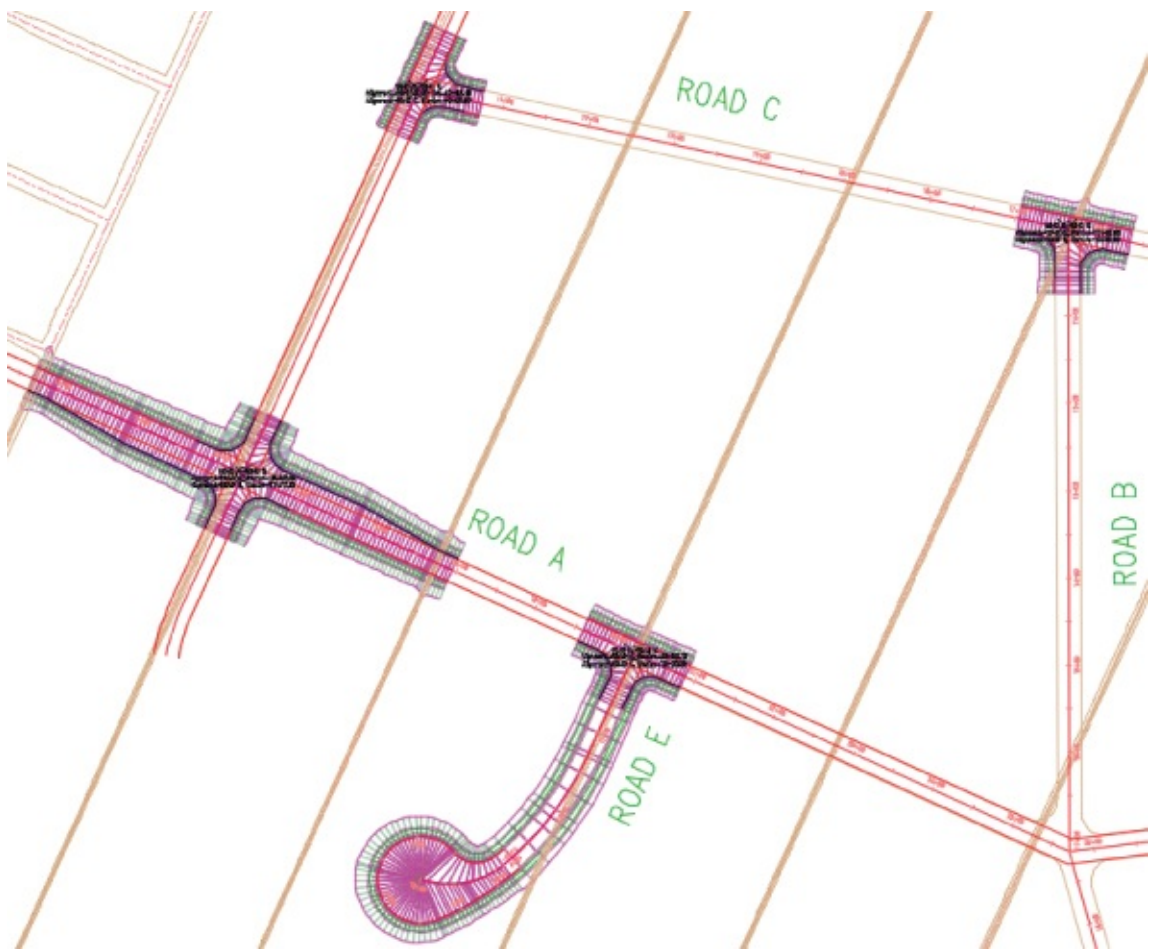


Figure 10.29 Four intersections and a cul-de-sac, all modeled in the North River Crossing corridor

2. Save and close the drawing when you have completed the exercise.

The files 1004_Intersection_FINISHED.dwg and 1004_Intersection_METRIC_FINISHED.dwg are available for your review.

Creating Intersections Manually

You will begin this section by visiting an intersection with unusual circumstances that must be built manually. Then we will discuss other issues you can experience with intersections.

1. Open the 1004_Intersection_FINISHED.dwg (1004_Intersection_METRIC_FINISHED.dwg) file, which you can download from this book's web page.
2. Zoom into the intersections of the ROAD A and ROAD B alignments.
3. From the Home tab, on the Create Design panel > Intersections tool, select Create Intersection and pick the intersection of ROAD A and ROAD B.
4. At the Select main road alignment <or press enter key to select from list>: prompt, click the ROAD A alignment that runs from west to east.
5. On the General page of the Create Intersection Wizard, for Intersection Corridor Type select All Crowns Maintained. Then click Next.
6. On the Geometry Details page, you'll be using the defaults for all parameters, so click Next.
7. On the Corridor Regions page, do the following:

- a. Turn on Add To Existing Corridor.
- b. Set the assemblies to the following:

Corridor Region Section Type	Assembly to Apply
Curb Return Fillets	Curb Returns
Primary Road Full Section	Full Section
Primary Road Half Section - Daylight Left	Left Half
Primary Road Half Section - Daylight Right	Right Half
Secondary Road Full Section	Full Section
Secondary Road Half Section - Daylight Left	Left Half
Secondary Road Half Section - Daylight Right	Right Half

- c. Click Create Intersection.

The intersection will be created. Event Viewer will open displaying a number of errors, as shown in [Figure 10.30](#).

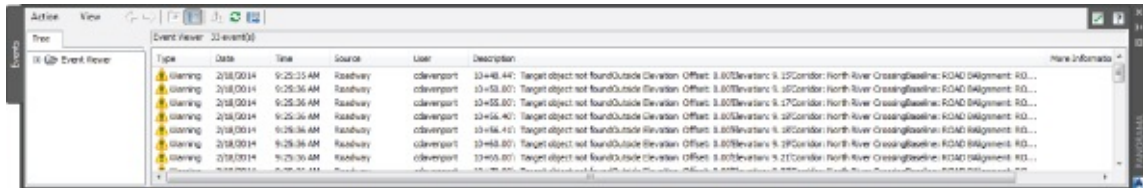


Figure 10.30 Errors resulting from creating final intersection

Upon looking through the errors in Event Viewer, you'll discover that they are all the same error occurring at different stations. Each mentions a target object not being found. The subassembly involved is LaneSuperelevationAOR and the Target name is Outside Elevation. Since the Intersection tool uses profiles for elevation targets, there must be a problem with one of the profiles that the tool created. A quick way to figure out which one(s) would be to examine the intersection in 3D.

8. On the ribbon, make the View tab current and do the following:
 - a. On the Model Viewports panel ➤ Viewport Configuration tool, select Two: Vertical to split your drawing window into two viewports.
 - b. Click in the right viewport to make it current.
 - c. On the Views panel ➤ Named View list, make the 3D named view current.

Your viewport configuration should be similar to [Figure 10.31](#).

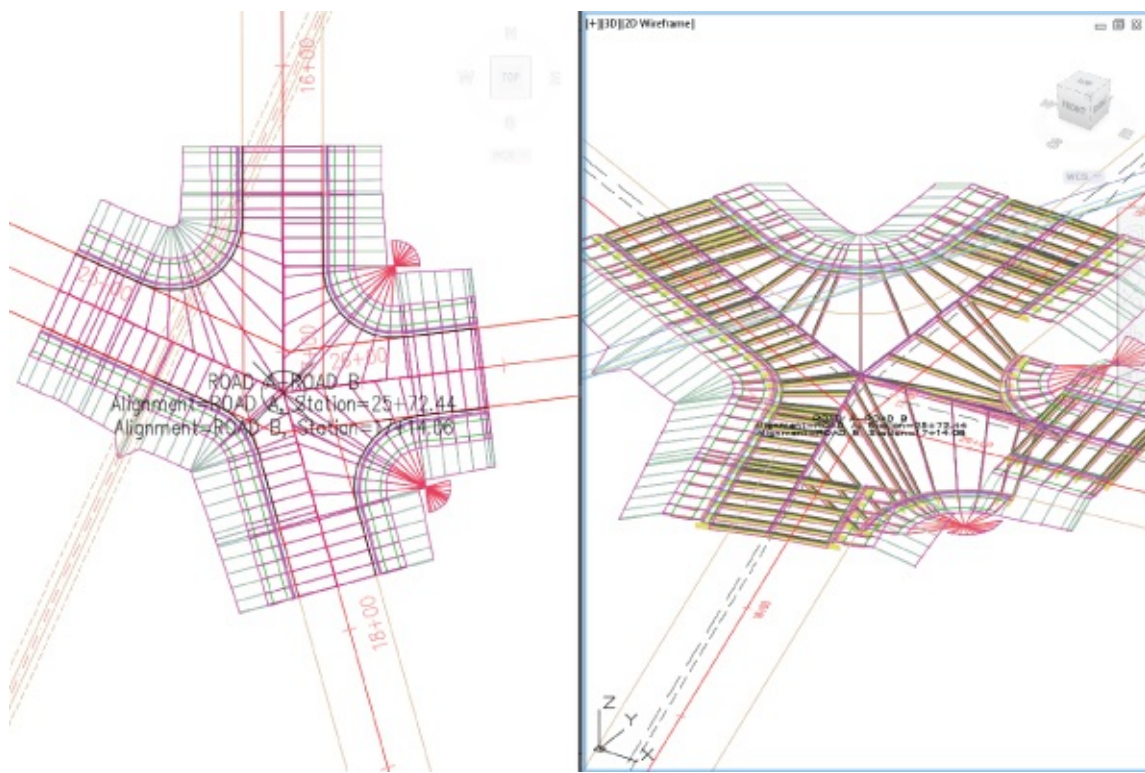


Figure 10.31 A combination of viewport configurations can help you keep an eye on your corridor design.

For some reason, you have two quadrants in this intersection that decided to set down at elevation zero. You could spend a lot of time trying to seek out the reasons for this, but if you're like most of us, you're in a time crunch and would like to finish up this roadway model. Before we delve into creating manual intersections, it's important that you look at a couple of things before moving on.

If you look at the profile properties for both the NE and SE quadrants on the Prospector under Alignments > Curb Returns, you'll see that the profile is empty of station and elevation data ([Figure 10.32](#)), so this is one area where the Intersection tool failed. However, according to the errors, the targeting problems are occurring along the ROAD B baseline, so what is happening there?

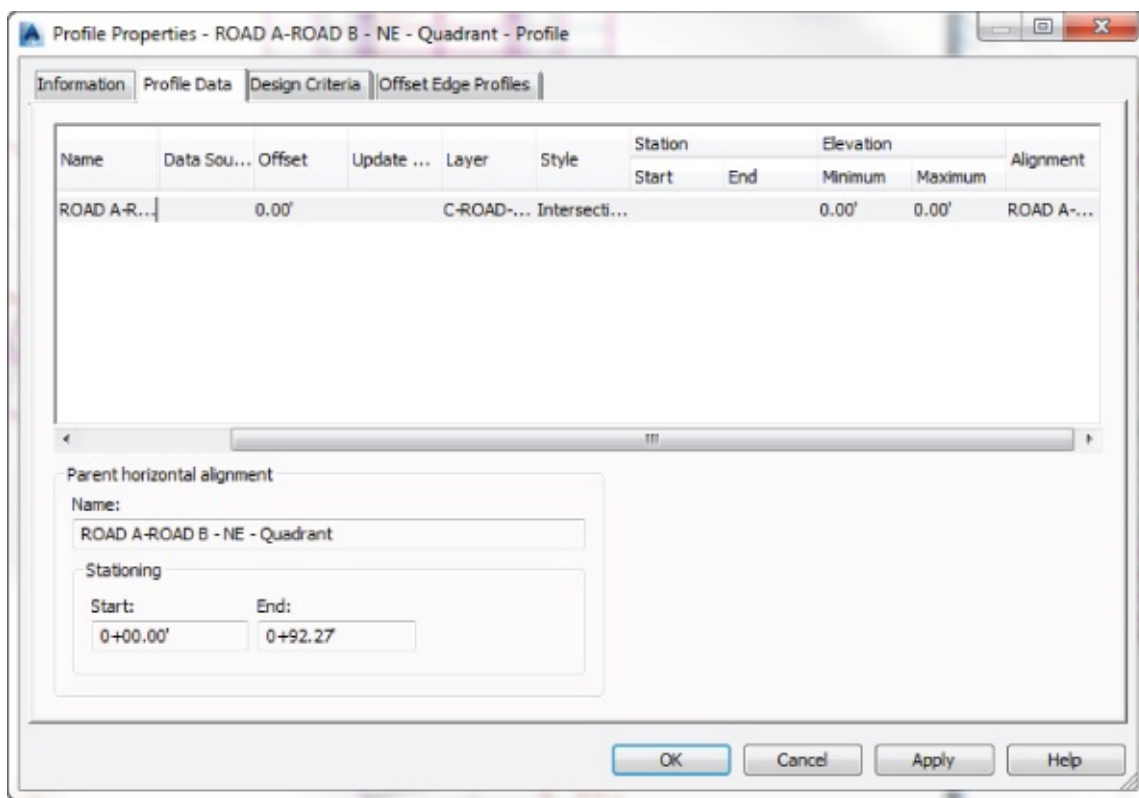


Figure 10.32 Curb return profile is empty of station and elevation data.

If you open up Corridor Properties, scroll all the way down to the bottom of the list on the Parameters tab, select one of the regions, click the Target ellipsis, and open the Set Slope Or Elevation Target dialog for the left lane, you'll see that the “bad” profiles show up for targeting there as well.

Even if you made manual overrides to cause your corridor to use relevant data, you will still receive errors in Event Viewer because the Intersection tool does not want to let go of the profiles and settings it created. The upside to this behavior is that autogenerated intersections will always update. The downside to this behavior is when you are in situations like this where the tool failed in an area and you need to make manual adjustments. The best thing to do here is to “turn the intersection off.” The Intersection tool did do a lot of the heavy lifting for you, so all is not lost.

9. Press the Esc key a few times to make sure nothing is currently selected. This is always a good thing to do when you are about to press the Delete key.
10. In the left viewport, click the intersection marker (X with a circle imposed at the center). When you do so, the Intersection contextual ribbon will appear.

Examine the contextual ribbon. Notice the tools for editing offset, curb return, lane slopes, and curb return parameters. If any of the parameters set in the Intersection wizard need to change, these tools can be used to reconfigure the intersection.

11. Press the Delete key.

The contextual ribbon closes, the intersection marker and label disappear, and the entry for this intersection on Prospector will no longer be found.

The next step is to re-create the two curb return profiles with relevant station and elevation data.

12. In Prospector, in Alignments > Curb Return Alignments, right-click ROAD A-ROAD B - NE Quadrant and choose Select.
13. Select Surface Profile from the Launch Pad panel on the contextual ribbon.

14. In the Create Profile From Surface dialog, do the following:
 - a. Under Select Surfaces, select North River Crossing Surface - Top.
 - b. Click the Add button to add it to the profile list.
 - c. Click Draw In Profile View.
15. In the Create Profile View dialog, click Create Profile View and place the profile in an open area in your drawing.

If you take a look at the profile, the surface that is being displayed in profile is doing exactly what your corridor is doing: taking a dive down to elevation 0 where the quadrant begins and ends. Here is where you get to fill in the gap again.
16. On the Home tab ► Create Design Panel, select Profile and open the Profile Creation Tools.
17. At the Select profile view to create profile: prompt, select the profile view for the curb return.
18. In the Create Profile dialog, change the text in the Name field to **FG-<[Alignment Name]>**. Click OK to continue.
19. On the Profile Layout Tools toolbar, select Draw Tangents, and using your Endpoint Osnap, bridge the gap as shown in [Figure 10.33](#).

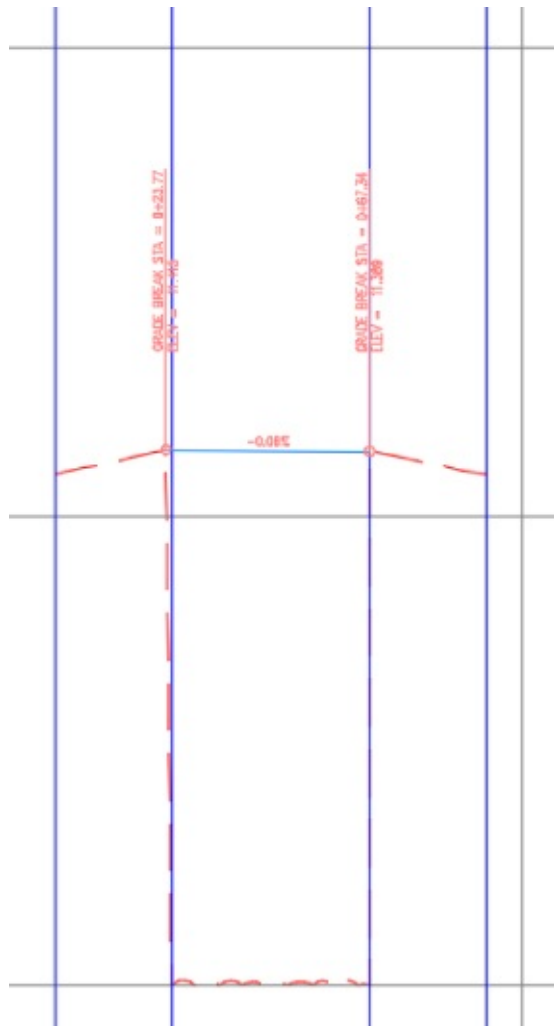



Figure 10.33 Filling in the elevation gap in profile view

20. Press \leftarrow to end the command. Close the Profile Layout Tools toolbar.

You have created an actual profile that can be used in the NE quadrant of this intersection. Next, you'll address the SE quadrant.

21. Repeat steps 12–20 for the curb return alignment called ROAD A-ROAD B - SE Quadrant.
22. Using the left viewport, pan back over to the troubled intersection.
23. Select the corridor to reveal the contextual ribbon.
24. On the contextual ribbon, select Corridor Properties and do the following:
25.
 1.  On the Parameters tab, locate BL - ROAD A-ROAD B - NE - Quadrant (the name of the baseline may have a counter behind it depending how many times the Intersection command was executed). It may be helpful to simplify the list using the Collapse All Categories button in the top left of the dialog. You may use the Select Region From Drawing button as an alternative to searching the list.
 2. In the Profile column, click the profile name for that baseline to change the selection.
 3. In the Select A Profile dialog, change the selection to FG-ROAD A-ROAD B - NE - Quadrant. Click OK to continue.
 4. Next, locate BL - ROAD A-ROAD B - SE - Quadrant.
 5. In the Profile column, click the profile name for that baseline to change the selection.
 6. In the Select A Profile dialog, change the selection to FG-ROAD A-ROAD B - SE - Quadrant. Click OK to continue.
 7. Click OK in the Corridor Properties and rebuild the corridor if prompted.

Event Viewer will pop up.

26. In Event Viewer, clear all the events being reported using the Action button.

Although the right viewport is now showing a good-looking intersection, you'll want to take the following steps to ensure that Event Viewer isn't picking up any more problems with the corridor.
27. On the contextual ribbon, on the Modify Regions tab, select Edit Targets.
28. At the Select a region to edit: prompt, select the RG - Full Section region along ROAD B north of the intersection, as indicated by [Figure 10.34](#).

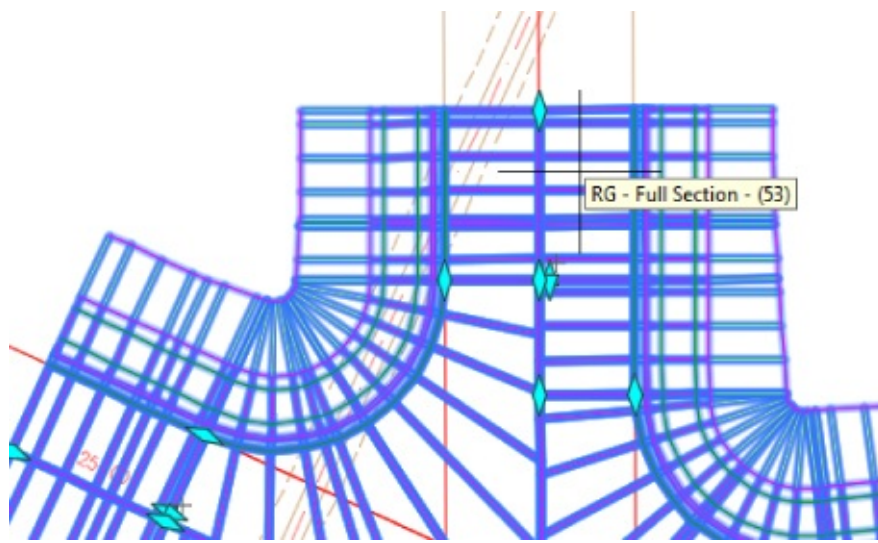



Figure 10.34 Selecting the RG - Full Section region along ROAD B north of the intersection.

29. In the Target Mapping dialog, under Slope Or Elevation Targets > Outside Elevation Profile for the Left assembly group, click in the Object Name column.
30. In the Set Slope Or Elevation Target dialog, do the following:
 - a. In the Selected Entities To Target section, select both profiles on the list.
 - b.  Click the Delete Selected Item button to remove both profile targets from the list.
Neither of these targets are needed since you are not widening the road in this area.
 - c. Click OK to close.
31. Click OK to close the Target Mapping dialog.

The Select a region to edit: prompt should still be active.

32. Select the RG - Left Half region in the north part of the intersection along ROAD B, as indicated by [Figure 10.35](#).

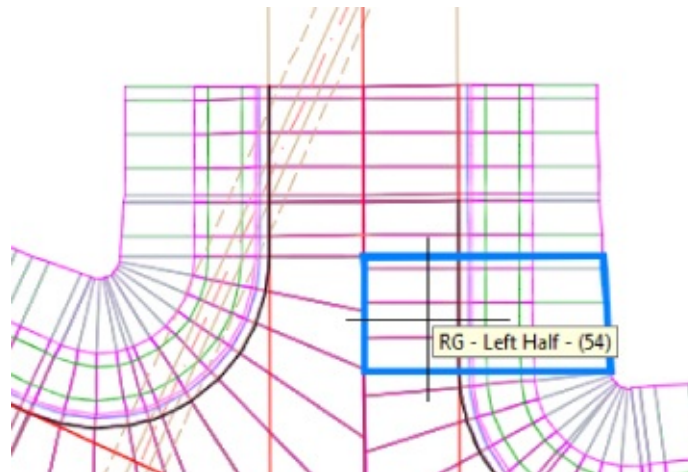


Figure 10.35 Selecting the RG - Left Half region along ROAD B north of the intersection

33. Repeat steps 28–30. Just be aware that sometimes the Intersection tool will throw in the alignment as an elevation target instead of the bad profile. If you find that to be the case, remove the alignment from the list.

The Select a region to edit: prompt should still be active.

34. Select the RG - Full Section region in the south part of the intersection along ROAD B, as indicated by [Figure 10.36](#).

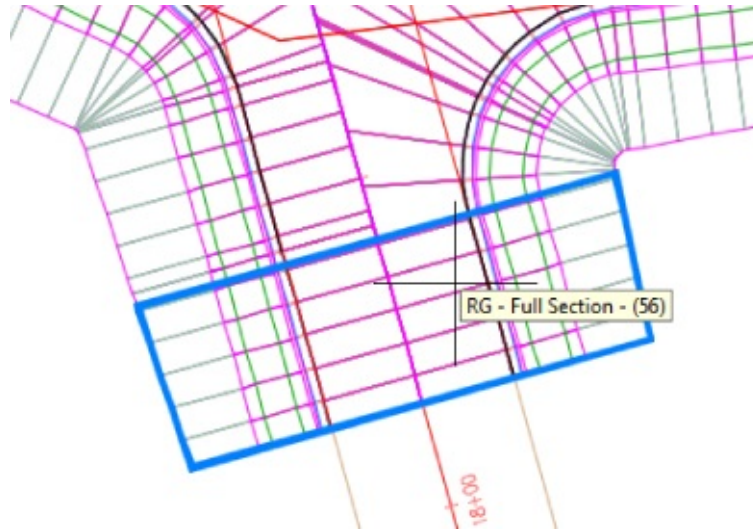


Figure 10.36 Selecting the RG - Full Section region along ROAD B south of the intersection

35. Repeat steps 28–30.

36. Press \leftarrow to end the command.

Now if you were to clear the events out of Event Viewer and rebuild the corridor, you would receive no errors. It's better to reserve the error list for those items that you need to address.

The files 1005_ManualIntersection_FINISHED.dwg and 1005_ManualIntersection_METRIC_FINISHED.dwg are available for your review.

Troubleshooting Your Intersection

The best way to learn how to build advanced corridor components is to go ahead and build them, make mistakes, and try again. This section provides some guidelines on how to “read” your intersection to identify what steps you may have missed.

Your lanes appear to be backward. Occasionally, you may find that your lanes wind up on the wrong side of the EOP alignment, as in [Figure 10.37](#). The most common cause is that your assembly is backward from what is needed based on your alignment direction.

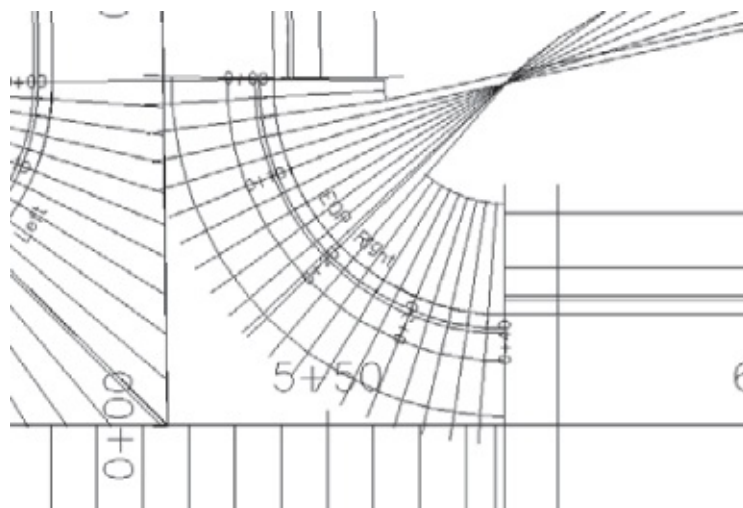


Figure 10.37 An intersection with the lanes modeled on the wrong side

Fix this problem by editing your subassembly to swap the lane to the other side of the assembly. If the assembly is used in another region that is correct, just make a new assembly that is the mirror image of the other assembly and apply the new one to the alignment.

Since so many design elements rely on the alignment as their base, it is better to add a new assembly rather than reversing the direction of the alignment.

Your intersection drops down to zero A common problem when modeling corridors is the cliff effect, where a portion of your corridor drops down to zero. You probably won't notice in plan view, but if you rotate your corridor in 3D using Object Viewer (see [Figure 10.38](#)), you'll see the problem. The most common cause for this phenomenon is incorrect region stationing.

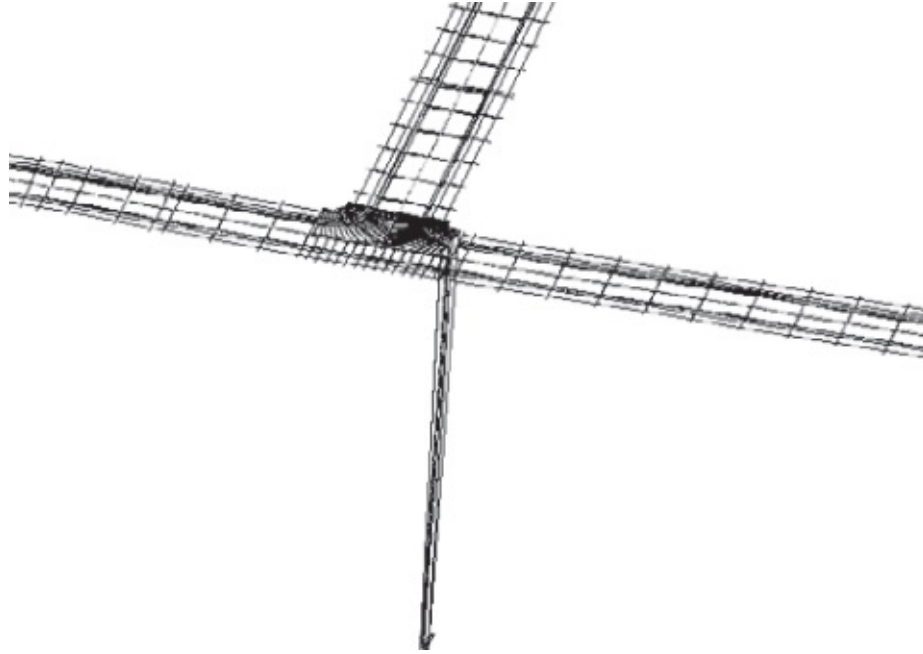


Figure 10.38 A corridor viewed in 3D, showing a drop down to zero

Fix this problem by making sure your baseline profile exists where you need it, and make note of the station range. Set your station range in the corridor to be within the correct range.

Your lanes extend too far in some directions. There are several variations on this problem, but they all appear similar to [Figure 10.39](#). All or some of your lanes extend too far down a target alignment, or they may cross one another, and so on.

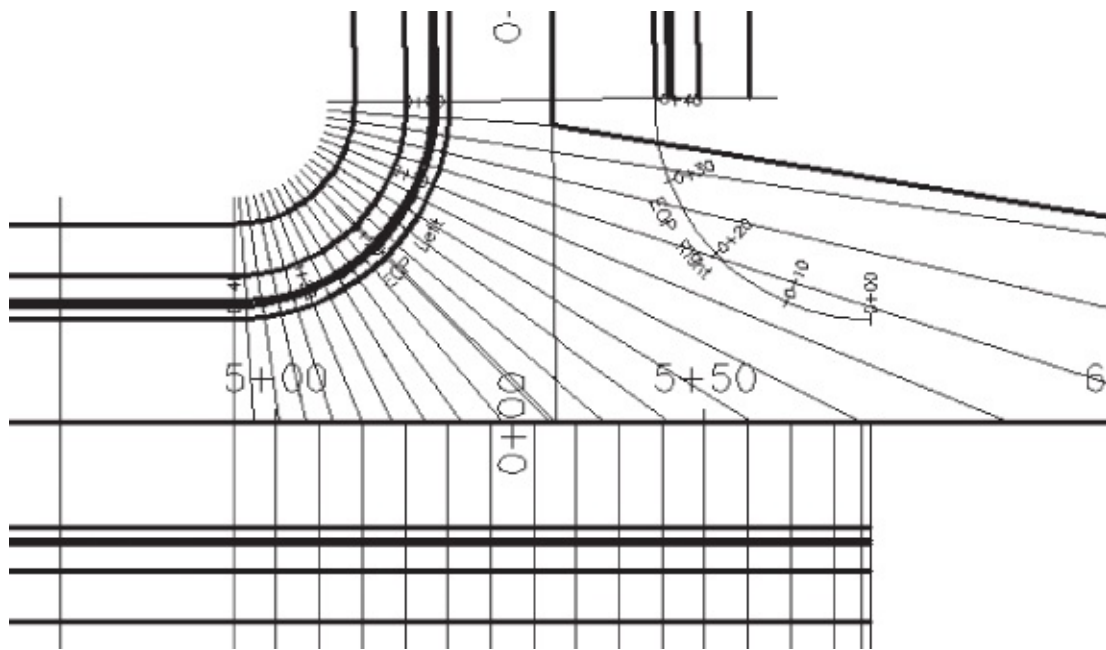


Figure 10.39 The intersection lanes extend too far down the main road alignment.

This occurs when a target alignment and profile have been omitted for one or more regions. In the case of [Figure 10.39](#), the EOP Left baseline region was set to only one alignment. In an intersection, you need two targets in a corner region to model the road correctly. You would see a similar issue appear if the Selection Choice If Multiple Targets Are Found option were set to Target Farthest From Offset.

Your lanes don't extend far enough. If your intersection or portions of your intersection look like [Figure 10.40](#), you neglected to set the correct target alignment and profile.

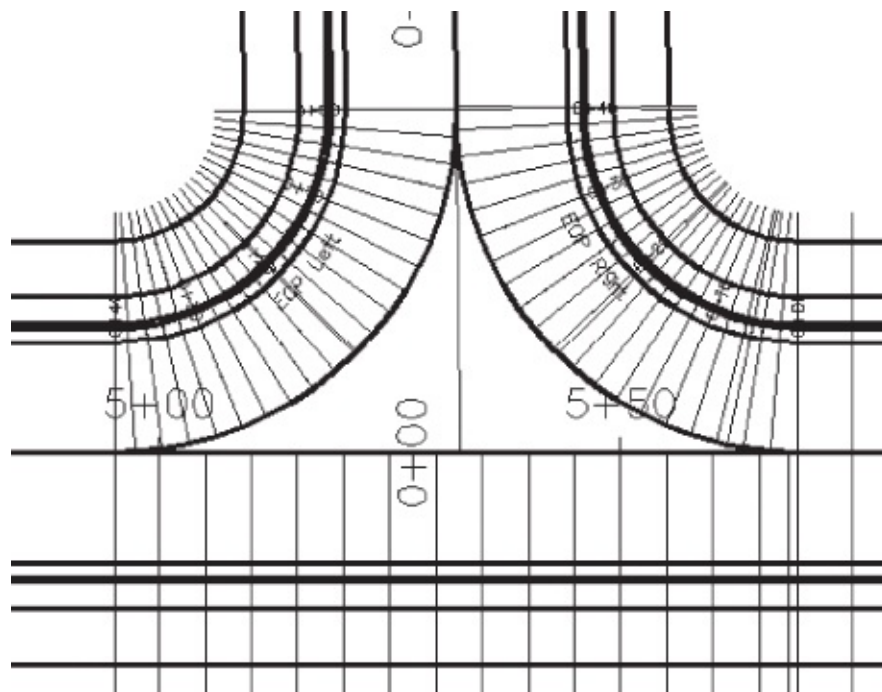


Figure 10.40 Intersection lanes don't extend out far enough.

You can fix this problem by opening the Target Mapping dialog for the appropriate regions and double-checking that you assigned targets to the right subassembly. It's also common to accidentally set the target for the wrong subassembly if you use Map All Targets or if you have poor naming conventions for your subassemblies.

Finishing Off Your Corridor

Now it's time for you to fill in another kind of gap in the corridor. You will be filling in the corridor between the intersections you created.

1. Open the 1005_ManualIntersection_FINISHED.dwg (1005_ManualIntersection_METRIC_FINISHED.dwg) file, which you can download from this book's web page.
2. On Prospector, expand the Intersections branch.
3. Zoom into the ROAD A-ROAD E intersection and select it to reveal its grips.
4. Grab the leftmost diamond shape region grip, which coincides with ROAD A alignment, and drag it over to the adjacent diamond shape region grip in the ROAD A-ROAD E intersection, as shown in [Figure 10.41](#).

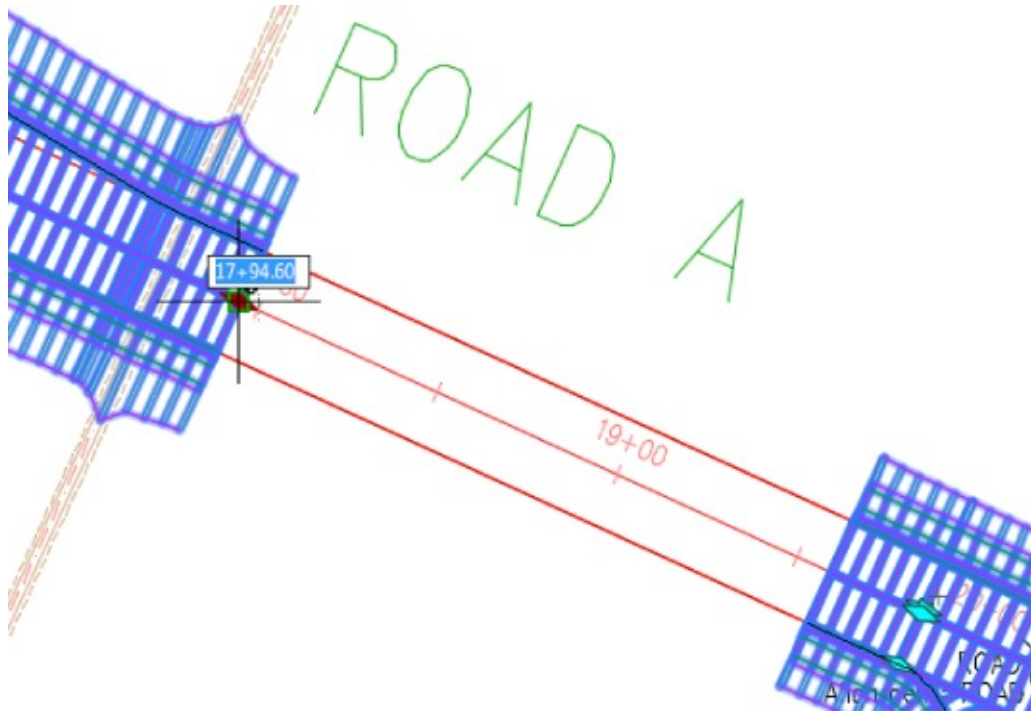


Figure 10.41 Stretching the region to match up with adjacent region.

5. Notice how your intersections become out of date according to the yellow alert shield that appears next to each.
6. Right-click ROAD A-ROAD E and select Update Regions And Rebuild Corridor.
7. When the Intersections - Update Corridor Regions dialog opens, select Continue With Update.
8. Notice how the stretched region returns to its original position.
9. This could be a problem if you are relying on the dynamic dependencies of your intersections to keep your corridor updated. Next, you'll try an alternative method of filling in the gaps.
10. Select the corridor, and on the contextual ribbon select Add Baseline from the Modify Corridor panel and do the following:
 - a. In the Create Corridor Baseline dialog, choose ROAD A as the Horizontal Alignment. Alternatively, you can use the green select object button in the dialog. Click OK to continue.
 - b. In the Select A Profile dialog, select FG-ROAD A. Click OK to continue.

1. On the contextual ribbon, select Add Regions from the Modify Regions panel, and do the following:
 - a. At the Select a baseline: prompt, place your cursor over the ROAD A alignment and left-click.

The Select A Baseline dialog opens. The command ascertains that there are four baselines associated with ROAD A. The first three on the list belong to the three intersections on ROAD A.
 - b. Select the last baseline on the list and click OK.
 - c. At the Specify region start station prompt, snap to the diamond grip, as shown in [Figure 10.42](#).

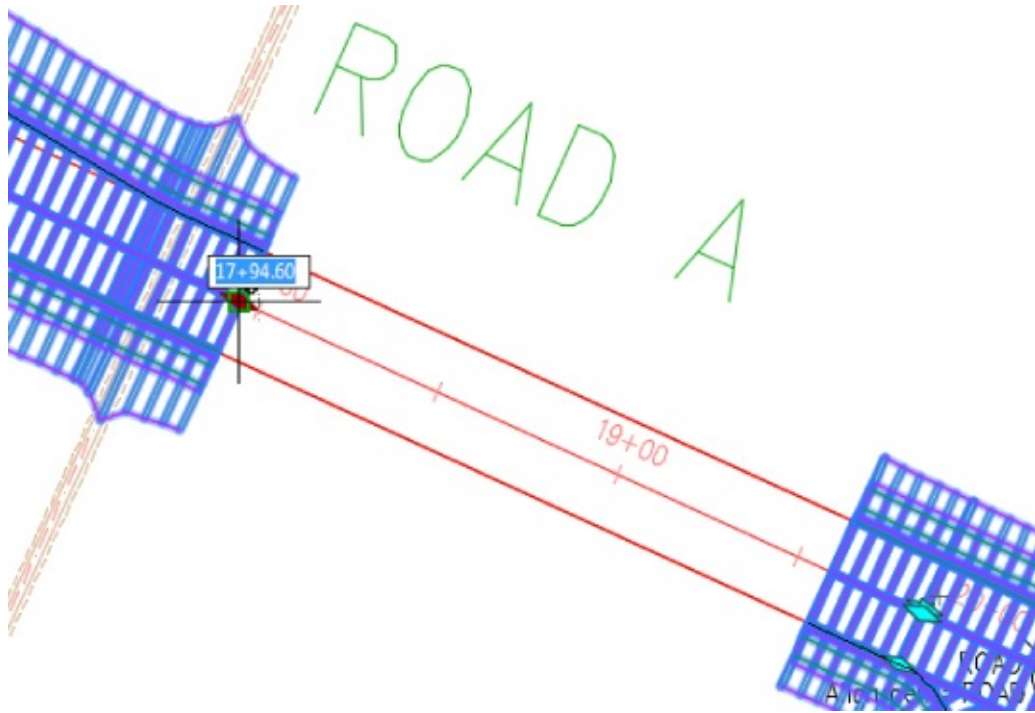


Figure 10.42 Defining the region start station

When selecting the region start station, it must be an earlier station than the region end station that you will select next.

- d. At the Specify region end station prompt, snap to the diamond grip, as shown in [Figure 10.43](#).

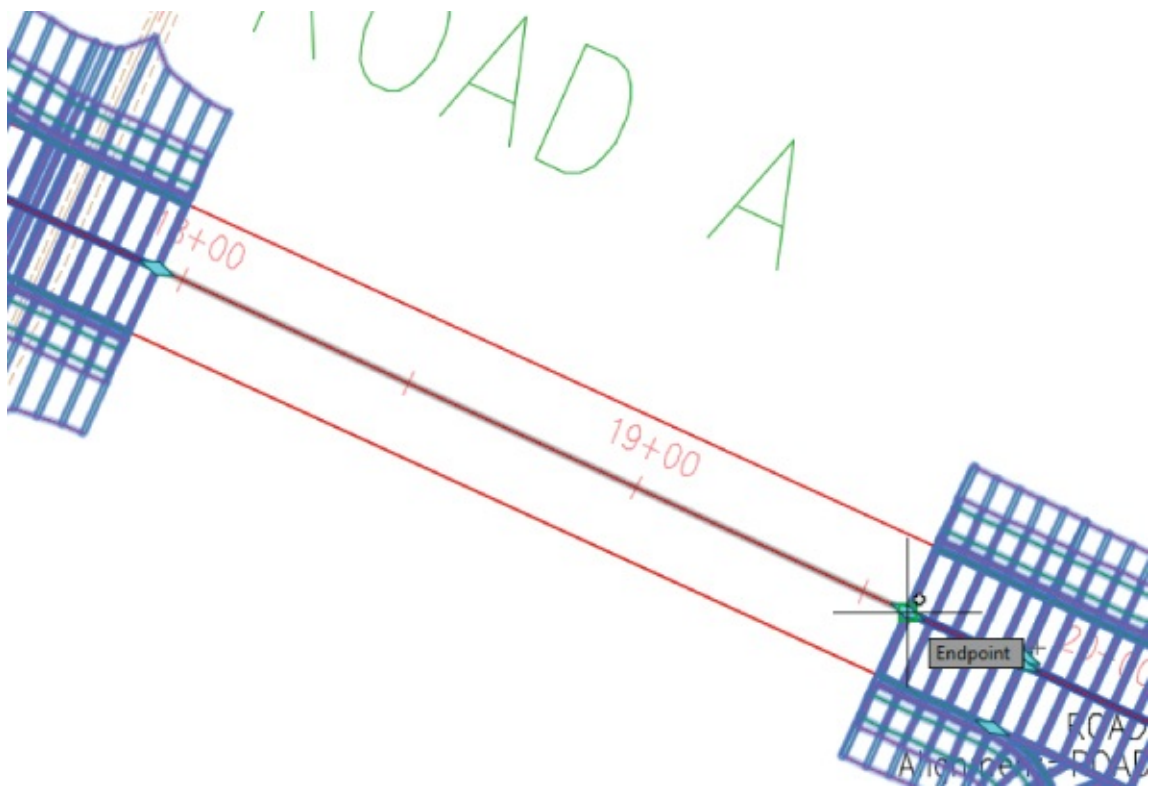


Figure 10.43 Defining the region end station

- e. In the Create Corridor Region dialog, select the Full Section assembly and click OK to apply.
- f. In the Target Mapping dialog, in the Object Name column next to Surfaces, click <Click Here To Set All> and then select Existing Surface.
- g. Click OK to continue.
- h. Click OK to close the Target Mapping dialog.

Your new baseline-region should resemble [Figure 10.44](#).

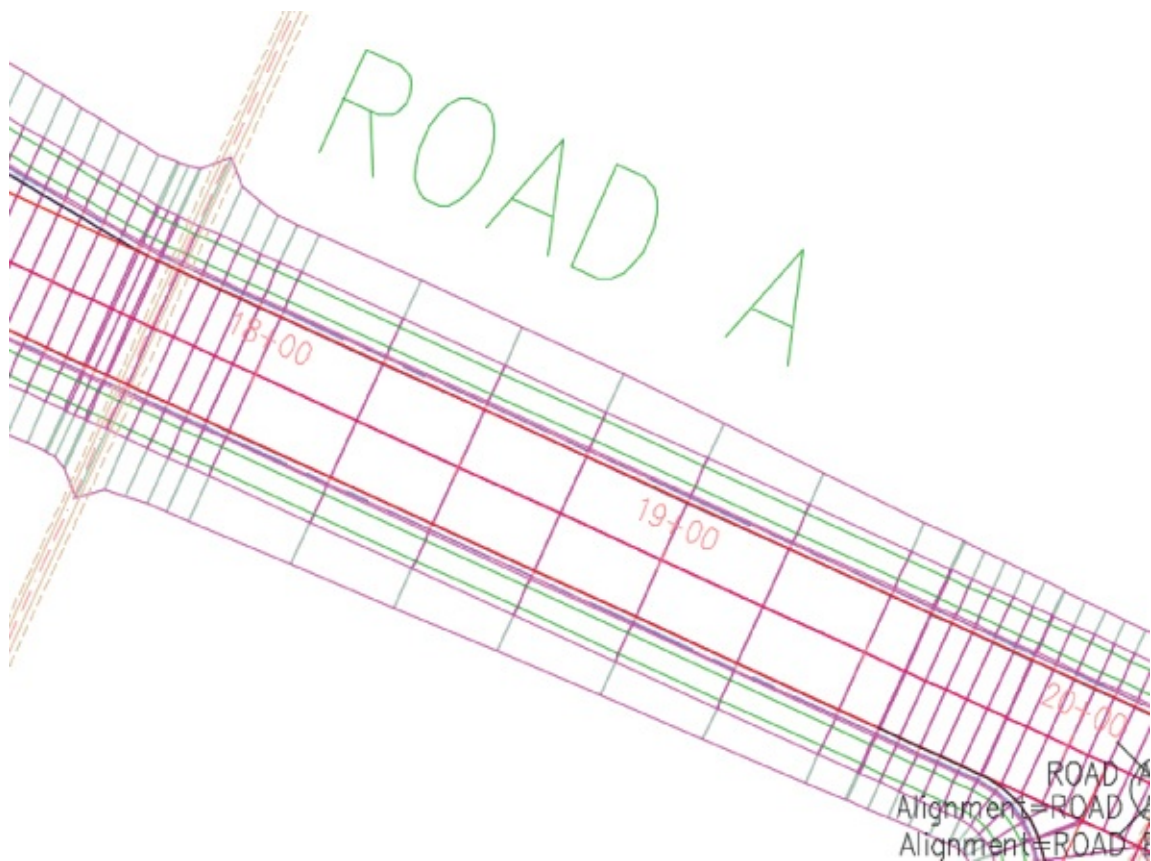


Figure 10.44 Filling in the gap with a new baseline region

The Add Region command is still active.

- i. Repeat steps 9c–9h for the rest of the empty regions along ROAD A.
- j. When the regions along ROAD A are complete, press \leftarrow to end the Add Regions command.

Optionally, you may repeat steps 8–9 to fill in the gaps in this corridor along the remaining areas of ROADS B, C, and D.

The files 1006_FillingCorridorGaps_FINISHED.dwg and 1006_FillingCorridorGaps_METRIC_FINISHED.dwg are available for your review.

Using an Assembly Offset

In Chapter 9, you completed a road-widening example with a simple lane transition. Earlier in this chapter, you worked with intersections and cul-de-sacs. These are just a few of the techniques for adjusting your corridor to accommodate a widening, narrowing, interchange, or similar circumstances. There is no single method for building a corridor model; every method discussed so far can be combined in a variety of ways to build a model that reflects your design intent.

Another tool in your corridor-building arsenal is the assembly offset. In Chapter 8, “Assemblies and Subassemblies,” you had your first glimpse of an offset assembly, but in the example that follows you will have a chance to use one for a bike path design.

Notice in [Figure 10.45](#) how the frequency lines in the corridor are running perpendicular to the main alignment. The bike path is an alignment that is not a constant offset through the length of the corridor. In this scenario, the cross section of the bike path itself is skewed. This could prove problematic when computing end area volumes for the bike path pavement. This is the result of using an assembly where all of the design is based on one main baseline assembly.

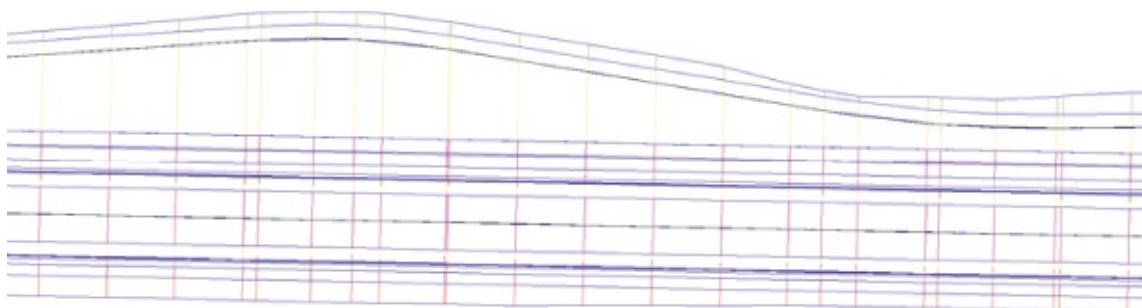


Figure 10.45 A bike path modeled with a traditional assembly

There are several advantages to using an offset assembly instead of creating an additional, separate assembly. The offset assembly requires its own alignment and profile for design. In the corridor that results, a secondary set of frequency lines is generated perpendicular to the offset alignment, as shown in [Figure 10.46](#). Additionally, you can use a marked point assembly to model the ditch between the bike path and the main road.

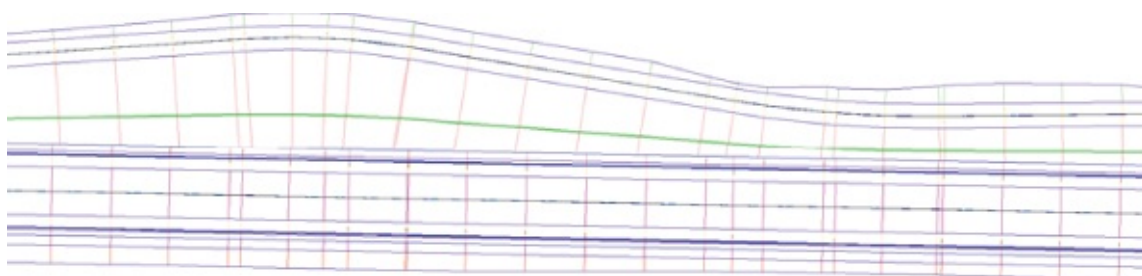


Figure 10.46 Modeling a bike path with an assembly offset

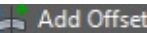
There are many uses of offset assemblies besides bike paths. Typical examples of when you'll use an assembly offset include transitioning ditches, divided highways, and interchanges. The assembly in [Figure 10.47](#), for example, includes two assembly offsets.



Figure 10.47 An assembly with two offsets representing roadside swale centerlines

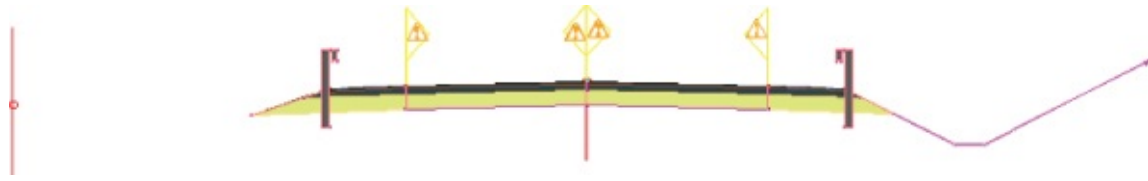
When you use an assembly with an offset in your corridor, you must assign an alignment and profile to it. The only restriction to the offset assembly is that it can't use the same alignment or profile as the main part of the assembly. In the case where you want your offsets to follow the same elevation, you will need to use the Superimposed Profile tool to effectively make a copy of the desired profile.

In this exercise, you will model a bike path with an assembly offset:

1. Open the 1007_BikePath.dwg (1007_BikePath_METRIC.dwg) file, which you can download from this book's web page.
2. Locate the assembly in the Prospector tab, right-click, and click Zoom To.
You'll see an incomplete assembly called Road With GR And Bikepath.
3.  Click the main assembly marker, and then from the Assembly contextual tab > Modify Assembly panel, click Add Offset.
4. At the Specify offset location: prompt, click to the left of the Road With GR And Bikepath

assembly, leaving enough room for the bike lane and ditch.


Your result should look like [Figure 10.48](#). The warning symbols indicate that you can no longer use the assembly for roads where superelevation occurs at points other than the centerline. Superelevation at the crown will still work, which is the situation used here.



[Figure 10.48](#) Road With GR And Bikepath assembly, so far

5. Press Ctrl+3 to open the subassembly tool palette.
6. Switch to the Basic tab, and select the BasicLane subassembly.
7. In the Advanced parameters in the Properties palette, set Side to Right and Width to 5' (1 m).
8. Click to place the subassembly on the offset assembly, and click the offset assembly again to form the left side.

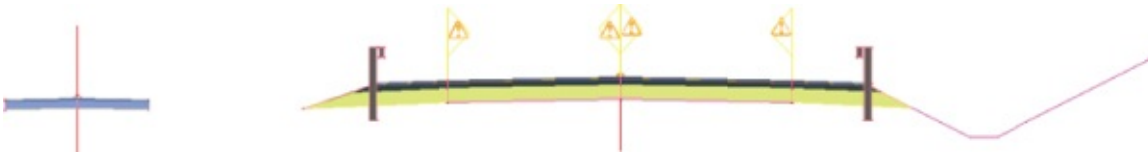Your assembly should now look like [Figure 10.49](#).




[Figure 10.49](#) Road With GR And Bikepath assembly with the BasicLane subassembly as a bike path

Next, you will use a MarkPoint assembly to set the stage for building a ditch between the bike path and the main road.

9. Switch to the Generic tab in the subassembly tool palette, and click the MarkPoint subassembly.
10. Change Point Name on the Properties palette to **BIKE** (use all capital letters).
11. Click the outermost point of the left shoulder subassembly.

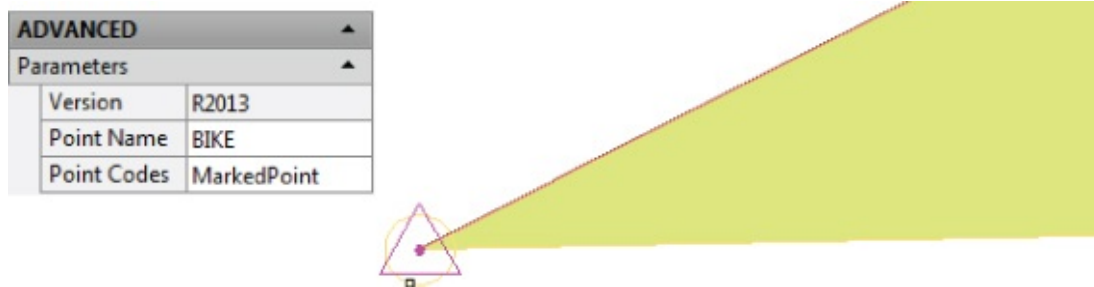Your marker will look like [Figure 10.50](#). Note that the point code defaults to MarkedPoint in the subassembly parameters but can be renamed as needed.



[Figure 10.50](#) A closeup of the MarkPoint subassembly

12. From the Generic tab of the subassembly tool palette, click the LinkSlopesBetweenPoints subassembly, and do the following:
 - a. Set Marked Point Name to **BIKE** (again, use all capital letters).

- b. Set Ditch Width to **0.5' (0.15 m)**.
- c. Click the right side of the bike path.

The offset assembly will now look like [Figure 10.51](#).

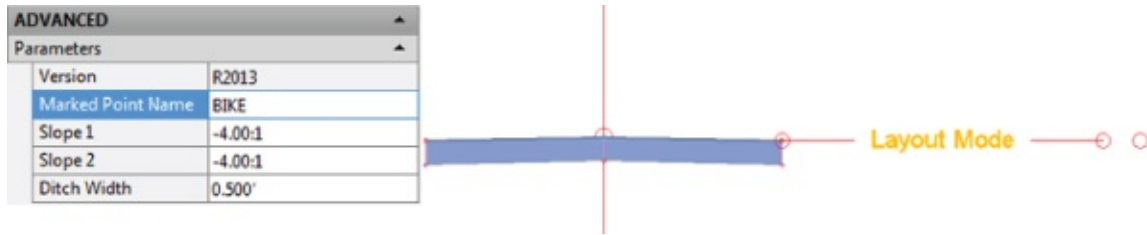


Figure 10.51 The LinkSlopes: BetweenPoints subassembly in layout mode

3. Add a LinkSlopeToSurface generic link subassembly, and do the following:
4.
 1. Set Side to Left and Slope to 25%.
 2. Place the subassembly on the left side of the bike path. Press Esc to finish adding subassemblies and save the drawing.

The completed assembly will look like [Figure 10.52](#).



Figure 10.52 The completed assembly with offset

Next, you will create a corridor using this new assembly. You need to have completed the previous exercise before proceeding:

5. Continue working in your drawing from the previous exercise.
6. From the Home tab > Create Design panel, click Corridor and do the following:
 - a. Name the corridor **Bike Path**.
 - b. Set Alignment to USH 10.
 - c. Set Profile to USH 10 Roadway CL Prof.
 - d. Set Assembly to Road with GR And Bikepath.
 - e. Set Target Surface to Existing Intersection.
 - f. Verify that there is a check mark next to Set Baseline And Region Parameters.
 - g. Click OK.

In the Baseline And Region Parameters dialog, notice that the Offset – (1) is not associated with an alignment (your numbers may vary).

7. Click the Alignment field for Offset – (1), select Bike Path from the drop-down list, and click OK.
8. Click the Profile field for Offset – (1) and do the following:
 - a. From the Select An Alignment drop-down list, select Bike Path.

- b. From the Select A Profile drop-down list, select Bike Path FG, and click OK.

The Bike Path alignment is slightly shorter than the main USH 10 alignment, which would cause the “waterfall” effect explained in Chapter 9.

19. To prevent corridor errors, do the following:

- a. Set the start station for the Offset – (1) region to **0+25.00** (**0+010.0** for metric users).
- b. Set the end station to **40+00** (**1+220** for metric users).
- c. Click OK and rebuild the corridor.

Your completed corridor will resemble the example shown earlier in [Figure 10.46](#).

20. Select the corridor by clicking on one of the frequency lines anywhere near the middle of the alignment, and click Section Editor.

You may want to change your annotation scale to 1" = 1' (1: 1 for metric users) to get an unobstructed view of your masterpiece.

21. Explore the finished design by clicking through the Corridor Editor.

At each station, the offset assembly ties back to the main assembly because of the use of the LinkSlopeBetweenPoints subassembly. Your design in the Section Editor should resemble [Figure 10.53](#).

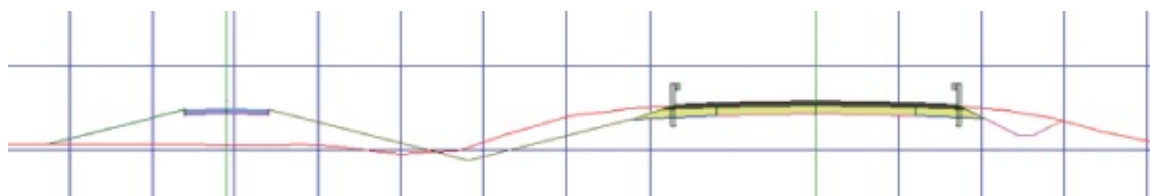


Figure 10.53 Inside the Corridor Section Editor

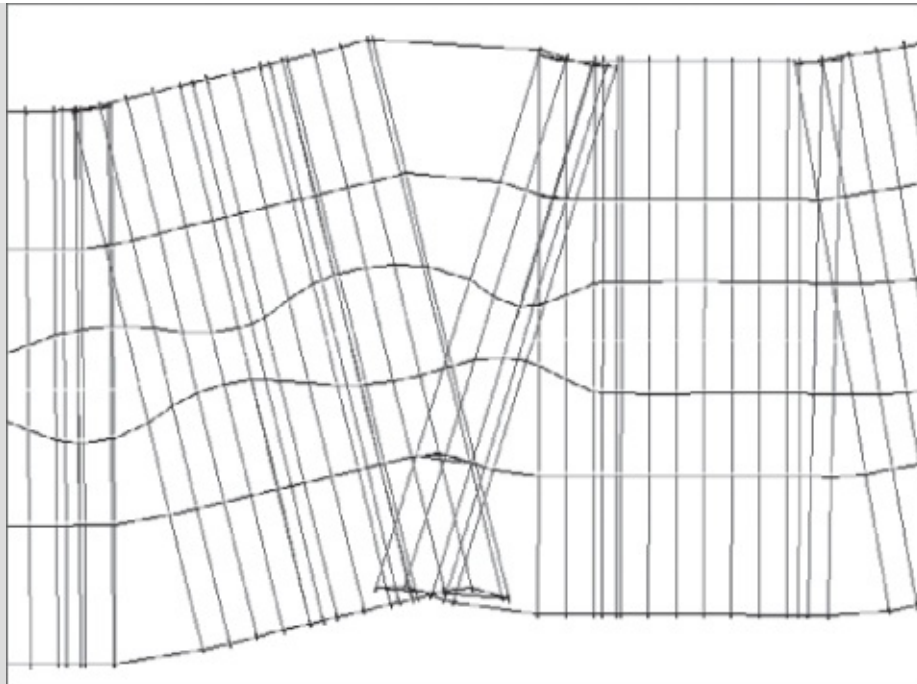
22. On the Section Editor contextual tab ➤ Close panel, click Close.

Completed versions of these drawings (1007_BikePath_FINISHED.dwg and 1007_BikePath_METRIC_FINISHED.dwg) are located with the rest of the dataset for your review.

23. Save and close the drawing.


The Trouble with Bowties

In your adventures with corridors, chances are pretty good that you'll create an overlapping link or two. These overlapping links are known not so affectionately as *bowties*. Here's an example.



Bowties are problematic for several reasons. In essence, the corridor model has created two or more points at the same x and y locations with a different z, making it difficult to build surfaces, extract feature lines, create a boundary, and apply codeset styles that render or hatch.

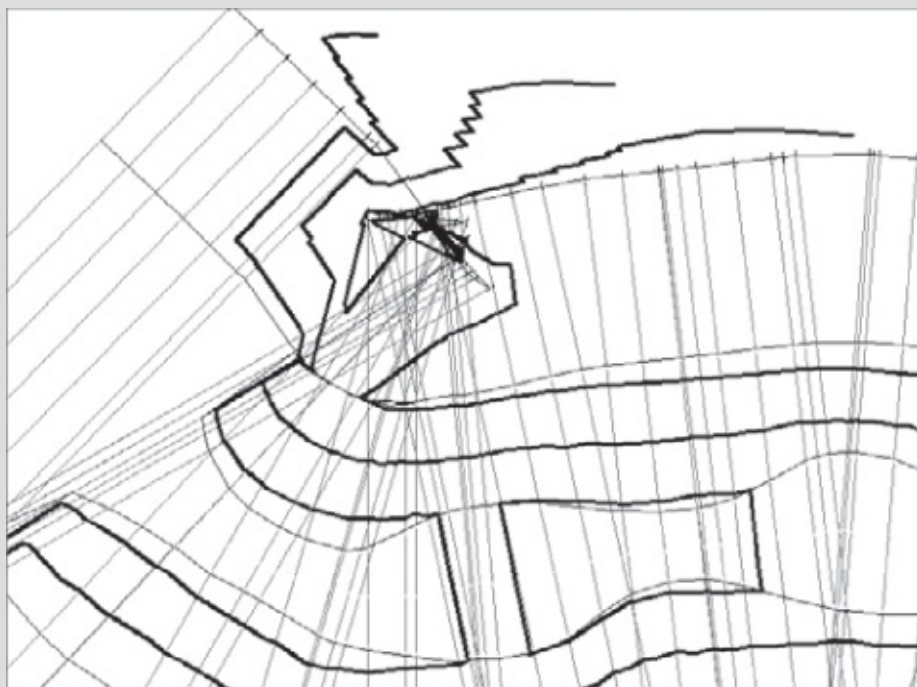When your corridor surface is created, the TIN has to make some assumptions about crossing breaklines that can lead to strange triangulation and incoherent contours, such as in the following image:




When you create a corridor that produces bowties, the corridor won't behave as expected. Using the Corridor contextual tab > Launch Pad panel to extract polylines or feature lines from overlapping corridor areas yields an entity that is difficult to use for additional grading or manipulation because of extraneous, overlapping, and invalid vertices. If the corridor contains many overlaps, you may have trouble even executing the extraction tools. The same concept applies to extracted alignments, profiles, and COGO points.

If you try to add an automatic or interactive boundary to your corridor surface, either you'll get


an error or the boundary jig will stop following the feature line altogether, making it impossible to create an interactive boundary.

To prevent these problems, the best plan is to try to avoid link overlap. Be sure your baseline, offset, and target alignments don't have redundant or PI locations that are spaced excessively close.

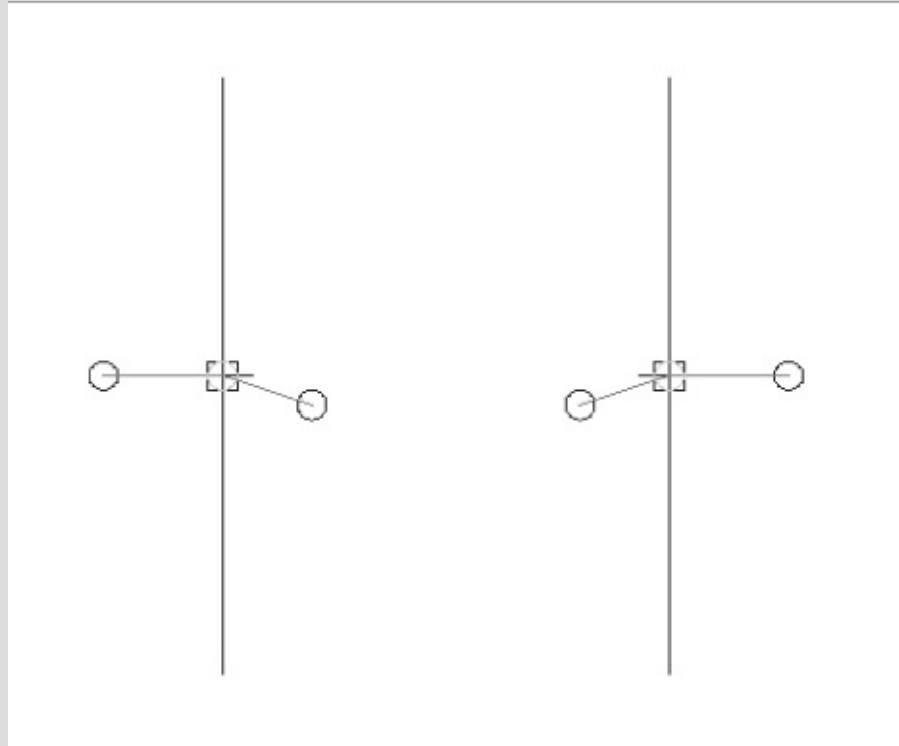If you initially build a corridor with simple transitions that produce a lot of overlap, try using an assembly offset and an alignment besides your centerline as a baseline. Another technique is to split your assembly into several smaller assemblies and to use your target assemblies as baselines, similar to using an assembly offset. This method was used to improve the river corridor shown in the previous images. The following image shows the two assemblies that were created to attach at the top of bank alignments instead of the river centerline.



The resulting corridor is shown here.

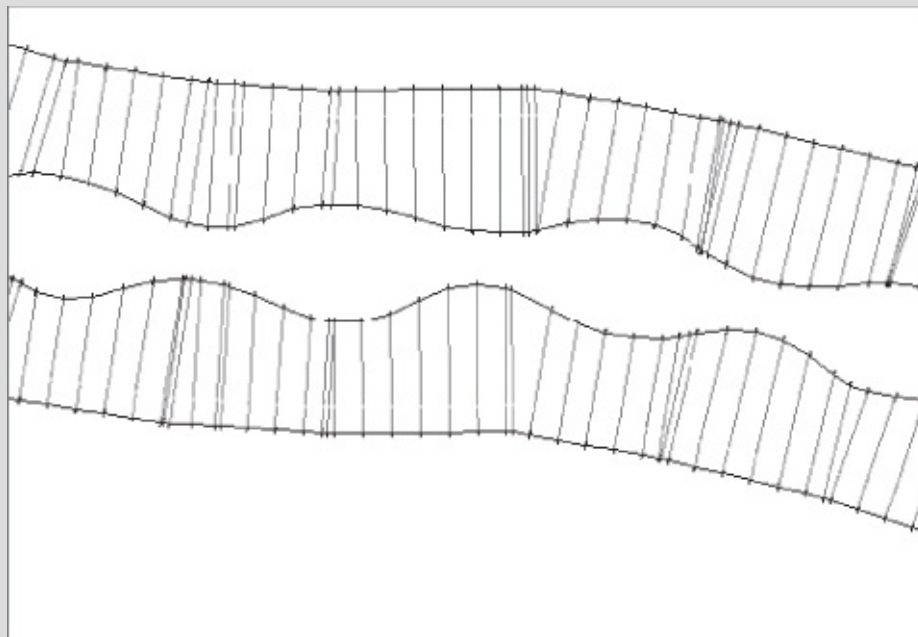

The TIN connected the points across the flat bottom and modeled the corridor perfectly, as you can see in the following image.



Another method for eliminating bowties is to notice the area where they seem to occur and then adjust the regions. If your daylight links are overlapping, perhaps you can create an assembly that doesn't include daylighting and create a region to apply that new assembly.

If overlap can't be avoided in your corridor, don't panic. If your overlaps are minimal, you should still be able to extract a polyline or feature line—just be sure to weed out vertices and clean up the extracted entity before using it for projection grading. You can create a boundary for your corridor surface by drawing a regular polyline around your corridor and adding it as a boundary to the corridor surface under the Surfaces branch in Prospector. The surface-editing tools, such as Swap Edge, Delete Line, and Delete Point, can also prove useful for the final cleanup and contour improvement of your final corridor surface.

As you gain more experience building corridors, you'll be able to prevent or fix most overlap situations, and you'll also gain an understanding of when they aren't having a detrimental effect on the quality of your corridor model and resulting surface.

Understanding Corridor Utilities

You'll now take advantage of some of the corridor utilities found in the Launch Pad panel ([Figure 10.54](#)) of the contextual tab.

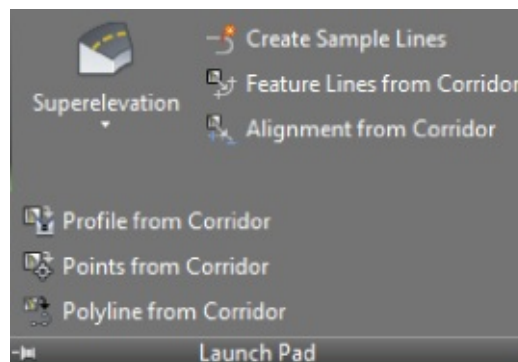


Figure 10.54 A bounty of corridor utilities on the Launch Pad panel

The utilities on this panel are as follows:

Superelevation This button will jump you to the alignment superelevation parameters. See Chapter 11, “Superelevation,” for a detailed look at how Civil 3D creates banked curves for your design speed.

Create Sample Lines Corridors and sample lines are both linked to alignments. Civil 3D gives you a shortcut to the sample line creation tool. Chapter 12, “Cross Sections and Mass Haul,” explores the creation and uses of sample lines.

Feature Lines From Corridor This utility extracts a grading feature line from a corridor feature line. This grading feature line can remain dynamic to the corridor, or it can be a static extraction. Typically, this extracted feature line will be used as a foundation for some feature-line grading or projection grading. If you choose to extract a dynamic feature line, it can't be used as a corridor target due to possible circular references.

Alignment From Corridor This utility creates an alignment that follows the horizontal path of a corridor feature line. By default, the alignment is categorized as an offset alignment, but it is not tied to the baseline. You can use this alignment to create target alignments, profile views, special labeling, or anything else for which a traditional alignment could be used. Extracted alignments are not dynamic to the corridor. If you place a check box next to the Create Profile option, the resulting profile will be related to the new alignment rather than the baseline.

Profile From Corridor This utility creates a profile that follows the vertical path of a corridor feature line. This profile appears in Prospector under the baseline alignment and is drawn on any profile view that is associated with that baseline alignment. This profile is typically used to extract edge of pavement (EOP) or swale profiles for a finished profile view sheet or as a target profile for additional corridor design. Extracted profiles are not dynamic to the corridor.

Points From Corridor This utility creates Civil 3D points that are based on corridor point codes. You select which point codes to use as well as a range of corridor stations. A Civil 3D point is placed at every point-code location in that range. These points are a static extraction and don't update if the corridor is edited. For example, if you extract COGO points from your corridor and then revise your baseline profile and rebuild your corridor, your COGO points won't update to match the new corridor elevations.

Polyline From Corridor This utility extracts a 3D polyline from a corridor feature line. The extracted 3D polyline isn't dynamic to the corridor. You can use this polyline as is or flatten it to create road linework.

Using Corridor Utilities in Practice

There are many uses for the utilities outlined in this section. Once you get the hang of using some of the corridor utilities, you should find that they are straightforward. In the exercise that follows, you will dabble in the corridor utilities:

1. Open the file `1008_CorrUtils.dwg` (`1008_CorrUtils_METRIC.dwg`).
2. Select the corridor by clicking one of the frequency lines (these are the magenta lines that are perpendicular to the alignment).
3. From the Corridor contextual tab ➤ Launch Pad panel, click Feature Lines From Corridor.
4. At the Select a Corridor Feature Line: prompt, click the south daylight line (this will be the

line that is not a constant offset from the centerline alignment).

The Select A Feature Line dialog will appear if you click the daylight line in a cut or fill region. This is because Civil 3D makes two distinct feature lines in these areas. Recall from Chapter 9 that feature lines are formed as a result of marker points with the same name in the assembly connecting together at frequency stations. In other words, why do you have two feature lines here? Because the daylight subassembly creates two marker points at the catch point.

You want the Daylight feature line because it is continuous through the length of the corridor.

Daylight_Cut appears only in the cut areas (red) and Daylight_Fill appears only in the fill areas (green). Where the corridor transitions from cut to fill (or fill to cut), you will see a yellow line. Only the Daylight feature line will appear in the transition regions.

5. If needed, highlight Daylight and click OK.
6. In the Create Feature Line From Corridor dialog ([Figure 10.55](#)), clear the check box labeled Create Dynamic Link To The Corridor.

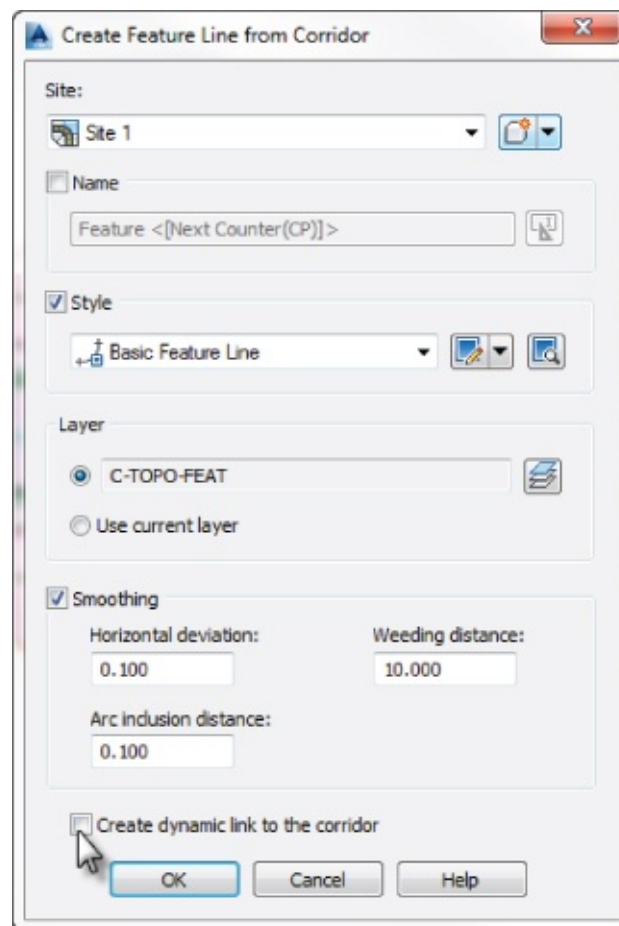


Figure 10.55 Creating a feature line from a corridor without a dynamic link to the corridor

7. Leave all other options at their defaults and click OK.
8. You should still be in the Create Feature Line From Corridor command and the command line should return to the Select a Corridor Feature Line: prompt. If you accidentally exited the Feature Lines From Corridor command, start it again from the Launch Pad panel. Click the daylight line on the north side of the road.
9. Repeat steps 5–7 to create a second feature line out of the north daylight feature line.
10. Press Esc to end the command.

1. Select the corridor again if it is not already selected.
2. From the Corridor contextual tab ➤ Launch Pad panel flyout, click Points From Corridor.
3. In the Create COGO Points dialog, do the following:
 - a. Toggle on the option For Entire Corridor Range.
 - b. Name the new point group **Corridor Stakeout**.
 - c. In the Select column, clear all the check boxes except Daylight and ETW, as shown in [Figure 10.56](#). (Hint: Press the Shift key as you click to unselect multiple items at once.)

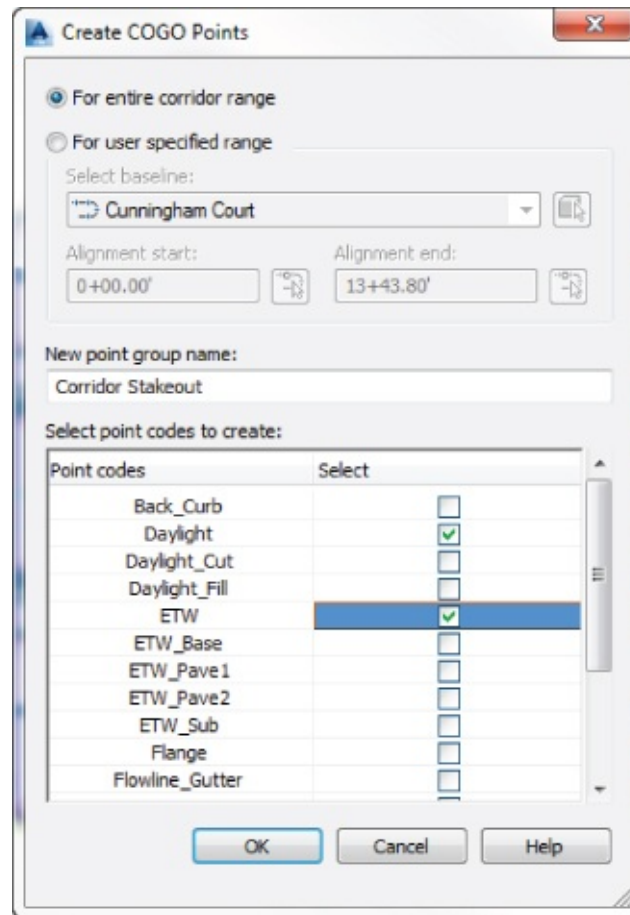


Figure 10.56 Creating points for stakeout along corridor feature lines

- d. Click OK.

4. Save and close the drawing.

Completed versions of this exercise are available with the rest of the dataset.

Using a Feature Line as a Width and Elevation Target

You've gained some hands-on experience using alignments and profiles as targets in an intersection and in a cul-de-sac design. Civil 3D adds options for corridor targets beyond alignments and profiles. You can use grading feature lines, survey figures, or polylines to drive horizontal and/or vertical aspects of your corridor model.

Imagine using an existing polyline that represents a curb for your lane-widening projects without duplicating it as an alignment, or grabbing a survey figure to assist with modeling an existing road for a rehabilitation project. Better yet, what if the object you are targeting is visible to the corridor drawing

only as an XRef? The next exercise will lead you through an example where a lot-grading feature line is integrated with a corridor model through an external reference:

1. Open the `1009_FeatureLineTarget.dwg` (`1009_FeatureLineTarget_METRIC.dwg`) file, which you can download from this book's web page. Note that the file `1009_XREF.dwg` (or `1009_XREF_METRIC.dwg`) must be extracted to the same folder as the main file in order to see it for use in this exercise.

This drawing includes a completed assembly and a partially completed corridor. Your task will be to use the feature lines that run through the project as targets in the corridor. These lines are in an external reference file.

2. Zoom to the corridor and select it. From the Corridor contextual tab ➤ Modify Corridor panel, choose Corridor Properties.
3. Switch to the Parameters tab in the Corridor Properties dialog.
4. Click the ellipsis button in the Targets field in the RG – Subdivision region. Note that the number following the region will vary. The higher the number, the more previous attempts at building the corridor the authors have made before handing the drawing over to you.

The Target Mapping dialog appears.

5. In the Target Mapping dialog, locate the Width Or Offset Targets in the Object Name column. Click the <None> field next to Target Alignment for the Slope-Left subassembly.

The Set Width Or Offset Target dialog appears.

6. Choose Feature Lines, Survey Figures And Polylines from the Select Object Type To Target drop-down list (see [Figure 10.57](#)).

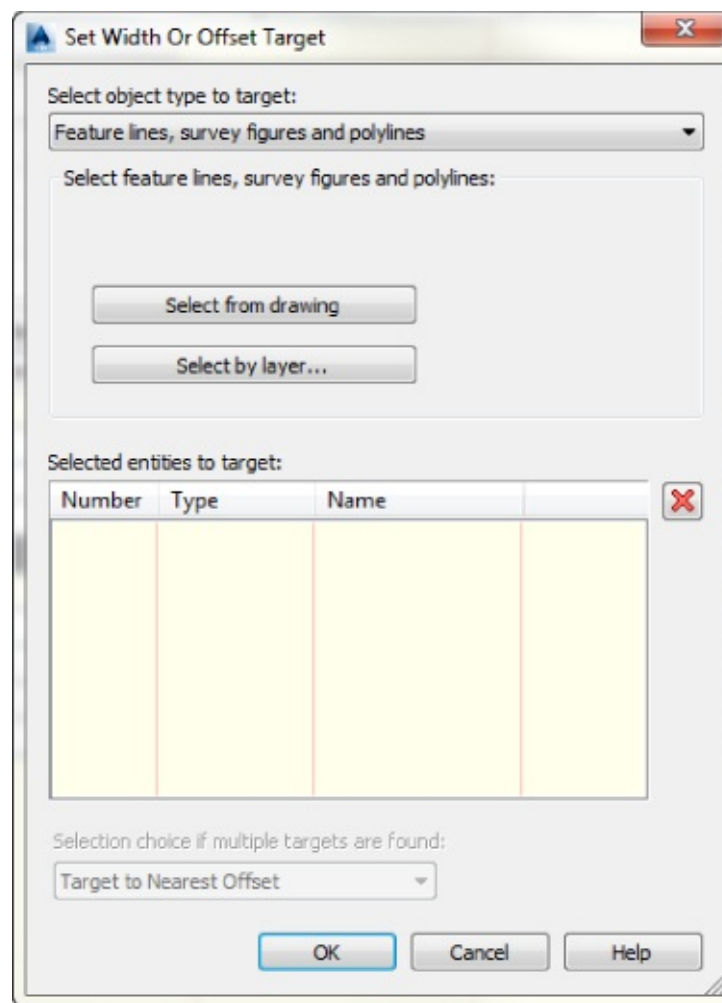


Figure 10.57 The Select Object Type To Target drop-down list at the top of the Set Width Or Offset Target dialog

7. In the Set Width Or Offset Target dialog, click the Select From Drawing button. At the Select feature lines, survey figures or polylines to target: prompt, select the north feature line to the left of the alignment and then press \leftarrow .

The Set Width Or Offset Target dialog reappears, with an entry in the Selected Entries To Target area.

8. Click OK to return to the Target Mapping dialog.

If you stopped at this point, the horizontal location of the feature line would guide the Slope-Left subassembly, and the vertical information would be driven by the slope set in the subassembly properties. Although this has its applications, most of the time you'll want the feature line elevations to direct the vertical information. The next few steps will teach you how to dynamically apply the vertical information from the feature line to the corridor model.

9. In the Object Name column in the Slope Or Elevation Targets section, click the <None> field next to Target Profile for the Slope-Left subassembly.
10. Make sure Feature Lines, Survey Figures And 3D Polylines is selected in the Select Object Type To Target drop-down.
11. Click the Select From Drawing button. At the Select feature lines, survey figures or 3D polylines to target: prompt, select the north feature line to the left of the alignment again and then press \leftarrow .

The Set Slope Or Elevation Target dialog reappears, with an entry in the Selected Entries To Target

area.

12. Click OK to return to the Target Mapping dialog.
13. Click OK to return to the Corridor Properties dialog.
14. Repeat steps 4–12 for Slope-Right on the right side of the corridor using the south feature line to the right of the alignment.
15. Click OK to close the Corridor Properties dialog and choose Rebuild The Corridor. Press Esc to deselect.

The corridor will rebuild to reflect the new target information and should look similar to [Figure 10.58](#).

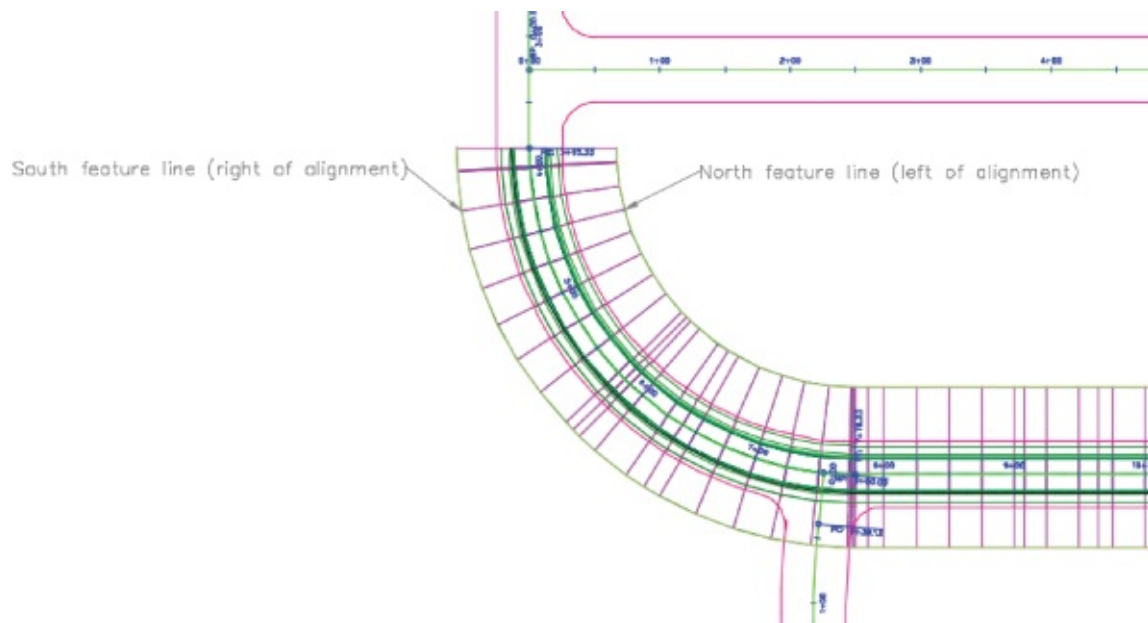


Figure 10.58 The corridor now uses the grading feature lines as width and elevation targets.

Once you've linked the corridor to these feature lines, any edits to the feature lines will be incorporated into the corridor model. You can establish this feature line at the beginning of the project and then make horizontal edits and elevation changes to perfect your design. The next few steps will lead you through making some changes to this feature line and then rebuilding the corridor to see the adjustments.

16. Select the text that resides in the XRef. From the External Reference context tab > Edit panel, click Open Reference.

This opens the external reference so you can modify the feature lines.

17. Select one of the feature lines so that you can see its grips. Experiment with the feature lines by moving several grips.
18. When you have edited several areas in the external reference file (1009_XREF.dwg or 1009_XREF_METRIC.dwg), save and close the drawing.

After the external reference closes, you should be back in the corridor drawing. A message will appear in the lower-right corner of your screen indicating External Reference File Has Changed.

19. In the bubble message, click the link to reload 1009_XREF.dwg (for metric users, 1009_XREF_METRIC.dwg).

20. Press Esc to deselect, and then select the corridor. From the Corridor contextual tab ➤ Modify Corridor panel, click Rebuild Corridor.

The corridor will rebuild to reflect the changes to the target feature lines.

See 1009_FeatureLineTarget_FINISHED.dwg (1009_FeatureLineTarget_METRIC_FINISHED.dwg) to view a completed version of this exercise.

Edits to targets—whether they're feature lines, alignments, profiles, or other Civil 3D objects—drive changes to the corridor model, which in turn drives changes to any corridor surfaces, sections, section views, associated labels, and other objects that are dependent on the corridor model.

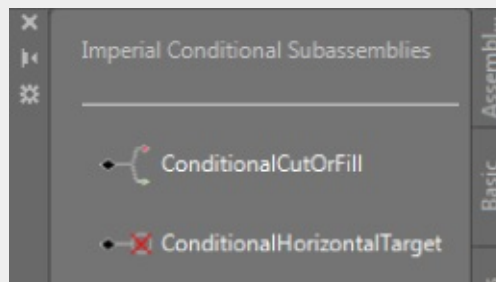


Real World Scenario

Conditional Love

Driveways are a common source of grief for designers. They pop up along corridors at irregular intervals, making them difficult to model with a traditional assembly. Luckily, we have the powerful *conditional subassemblies* available to us. Conditional subassemblies allow designers to test scenarios and have the assembly react to different conditions. In programmer-speak, the conditional subassemblies allow “if-then” statements within an assembly.

There are two conditional subassemblies available to Civil 3D users: ConditionalCutOrFill and ConditionalHorizontalTarget.



The ConditionalCutOrFill subassembly will check for a range of depth of cut or fill and apply the desired subassembly accordingly. For example, you may have a shoulder subassembly with daylight for cut scenarios, but after a cut of more than 10', you want a retaining wall subassembly to be placed instead.

The ConditionalHorizontalTarget subassembly checks for the presence of a specific offset object or objects. For example, you will use the existence of a driveway to trigger the assembly to apply geometry in the following example:

1. Open the drawing 1010_Conditional.dwg (or 1010_Conditional_METRIC.dwg).

There are five total assemblies in this drawing. The one that is modified in this exercise is the DRIVEWAY CONDITIONAL. The other four assemblies in the drawing are there to illustrate the assemblies that would be needed to accomplish the corridor modeling task without the use of conditional subassemblies. In other words, one assembly has the power of four!

2. In the right viewport, zoom in to the assembly labeled DRIVEWAY CONDITIONAL.
3. Open the Tool Palettes if they are not already open. Switch to the Conditional tab.

- Click the ConditionalHorizontalTarget subassembly. In the Properties palette, set the side to **Right**. Change the type to **Target Found**. Leave all other parameters as default.

ADVANCED		-
Parameters		-
Version	R2013	
Side	Right	
Layout Width	12.00'	
Layout Grade	1.00:1	
Type	Target Found	
Maximum Di...	9999.00'	

- Click the marker point at the top-right edge of the lane to place the subassembly in the drawing.
- Again, click the ConditionalHorizontalTarget subassembly. In the Properties palette, set the side to Right. Change Layout Grade to -1.00:1 and change the type to **Target Not Found**.


ADVANCED		-
Parameters		-
Version	R2013	
Side	Right	
Layout Width	12.00'	
Layout Grade	-1.00:1	
Type	Target Not Found	
Maximum Di...	9999.00'	

The Layout Width and Layout Grade values do not have any effect on the resulting corridor. Changing Layout Grade only helps to visually separate the different conditions so they do not overlap graphically.


- Click the same marker point at the top-right edge of the lane to place the subassembly in the drawing.
- Press Esc to clear any previous selections. Select one of the new subassemblies. From the Subassembly contextual tab, click Assembly Properties.
- In the Assembly Properties dialog, switch to the Construction tab.
- Right-click the first ConditionalHorizontalTarget in the listing and select Rename. Change the name to **DRIVEWAY**.
- Right-click the second ConditionalHorizontalTarget in the listing and select Rename. Change the name to **NO DRIVEWAY**.
- Click OK to close the Assembly Properties dialog. Press Esc to clear the selection.
- Select the shoulder and the daylight subassemblies from the right side of the Driveway Right assembly.
- From the Subassemblies contextual tab ➤ Modify Subassembly panel, click Copy.
- At the Select marker point within assembly for the copied subassemblies: prompt, click the marker point at the end of the DRIVEWAY subassembly. This will be the geometry that is created when the driveway target is found.
- Press Esc to clear the selection.
- Select the shoulder and the daylight subassemblies from the right side of the Driveway Left

assembly.

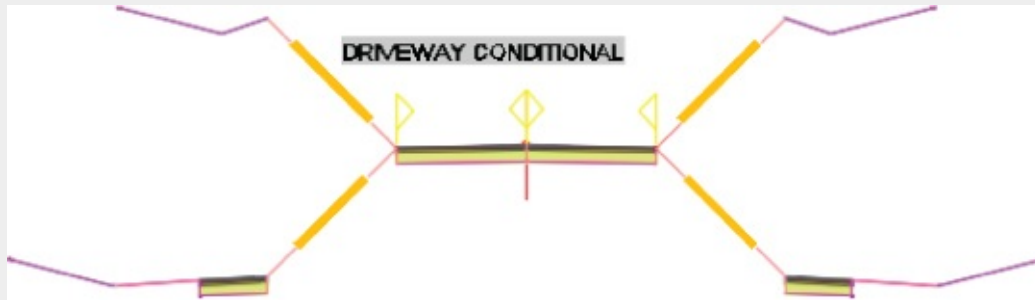18. From the Subassemblies contextual tab ➤ Modify Subassembly panel, click Copy.
19. At the Select marker point within assembly for the copied subassemblies: prompt, click the marker point at the end of the NO DRIVEWAY subassembly, completing the right side of the assembly.
20. Press Esc to clear the selection; then select all the subassemblies that you have added in this exercise.
21. From the Subassemblies contextual tab ➤ Modify Subassembly panel, click Mirror.
22. Click the top-left edge of pavement marker point.



23. In Toolspace ➤ Prospector, expand Corridors. Right-click USH 10 – w Driveways and select Properties.
24. In the Corridor Properties dialog, switch to the Parameters tab. Click the ellipsis in the Target column of the DRIVEWAY CONDITIONAL region row.
25. In the Target Mapping dialog, click the <Click Here To Set All> option in the Object Name column in the Surfaces row. Highlight the surface Existing Intersection and click OK.
26. Under Width or Offset Targets, click the <None> field next to Target Offset for the DRIVEWAY subassembly (in the assembly group Right).
27. Under Select Object Type To Target, use the drop-down list to switch to Feature Lines, Survey Figures And Polylines, and then click Select By Layer.

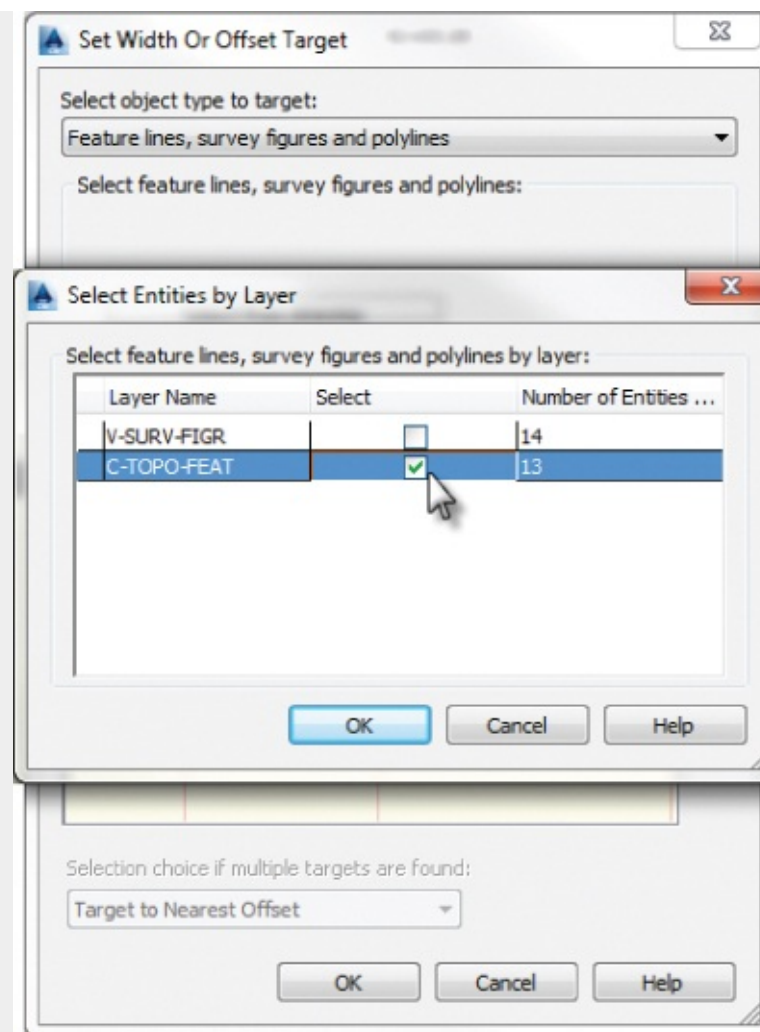

28. Place a check mark next to the C-TOPO-FEAT layer and click OK. Click OK again to close the Set Width Or Offset Target dialog.
29. Repeat steps 24–26 for NO DRIVEWAY on the right and again for both DRIVEWAY and NO DRIVEWAY on the left.
30. Click OK to close the Target Mapping dialog and then click OK (click Rebuild The Corridor if prompted to do so) to close the Corridor Properties dialog.

See 1010_Conditional_FINISHED.dwg (1010_Conditional_METRIC_FINISHED.dwg) to view a completed version of this exercise.

Tackling Roundabouts: the Mount Everest of Corridors

If you really understand what went on earlier in this chapter, you are almost ready for roundabout design. You may want to wait to tackle your first roundabout until after reading Chapter 14, “Grading.”

The same concepts apply to a roundabout as for a standard road junction, but you will have several more regions, baselines, and corresponding profiles.

The following sections will help you prepare files for roundabout design. We will not take you through every detail of corridor creation, but once you master the topics of intersection design, a roundabout is an extension of the same concepts.

A roundabout is best done in several corridors:

Preliminary Corridor for Circulatory Road This is a corridor used to determine the elevations of the approach road profiles. The circular portion of the roadway will set the elevations for all of the alignments leading into it. Using similar techniques to those used earlier in the chapter, you create a corridor surface from this corridor and use it as a tie-in for approach road profiles.

Main Corridor with Approaches and Circulatory Road This corridor is the main part of your design. You will spend lots of time in the corridor properties tweaking stations, adding baselines and regions, and targeting the appropriate locations.

Curb Island Corridors (Optional) There are many different philosophies about the best way to show curb islands. If showing them in a section is not important, you can omit this altogether. Some people prefer to use grading feature lines (as discussed in Chapter 14). In the following sections, you will go “all out” and use the dynamic capabilities of the corridor model to make curb islands.

Drainage First

Based on your existing ground surface, determine the general direction that you want water to flow away from the center of the roundabout. Use grading tools and a feature line to create the general drainage direction of the roundabout.

Chapter 14 will go into much more depth on creating grading. You will certainly want to have an understanding of grading basics before you tackle a roundabout.

Create a feature line that represents the highest elevations. In the example shown in [Figure 10.59](#), the feature line slopes downward and acts as a ridge to separate water flow. The grading tools are then used to create grading objects and a corresponding surface model called Roundabout Grading.

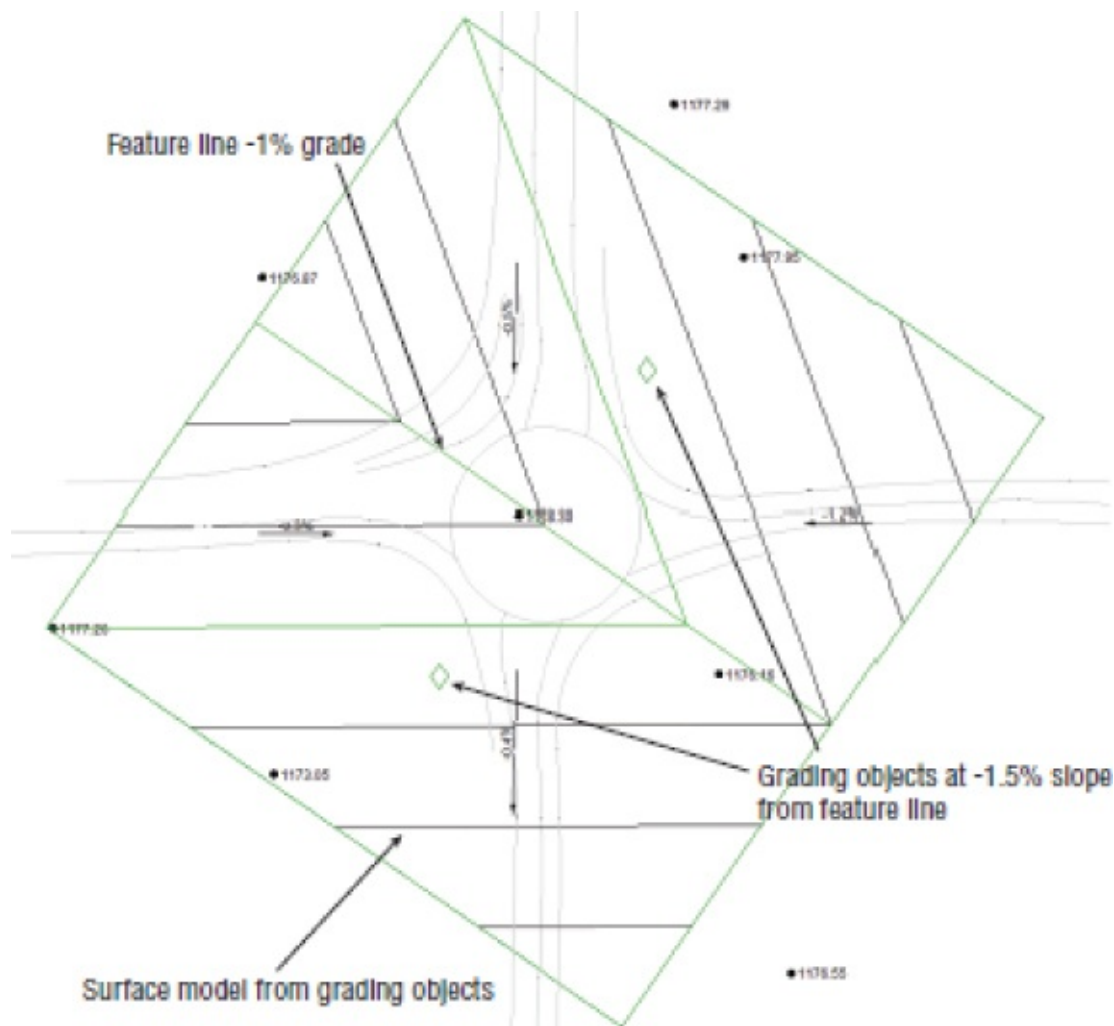


Figure 10.59 Feature lines and grading create a preliminary surface to ensure proper drainage through the roundabout.

The Roundabout Grading surface will be the basis for your profile elevations through the rest of the design process.

Roundabout Alignments

Roundabouts need alignments to guide the design for the same reasons that an intersection needs them. Alignments will be baselines and targets for the approaches and rotary. Create alignments manually with the tools you learned to use earlier in this chapter, or start with the handy roundabout layout tool.

The roundabout layout tool creates horizontal data based on the location of the center of the roundabout and the approach alignments.

In the exercise that follows, you will create the Civil 3D alignments needed to create a roundabout:

1. Open the 1011_RoundaboutLayout.dwg (1011_RoundaboutLayout_METRIC.dwg) file, which you can download from this book's web page.
2. From the Home tab > Create Design panel, select Intersections > Create Roundabout, as shown in [Figure 10.60](#).

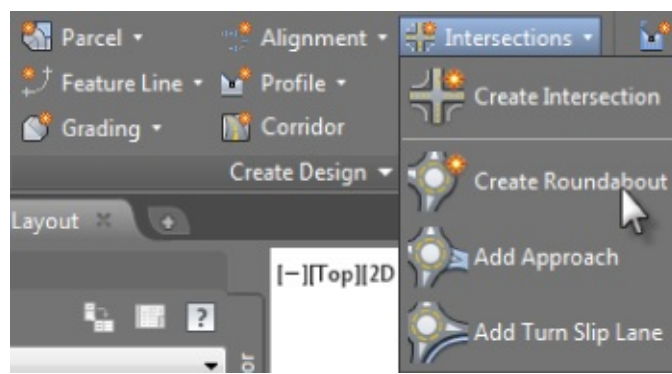


Figure 10.60 Access the Create Roundabout tool from the Home tab.

3. At the Specify roundabout center point: prompt, use your Intersection Osnap to select the point where the alignments intersect.

The alignments leading into the roundabout are often referred to as *approaches*.

4. At the Select approach road: prompt, select all four alignments leading into the roundabout, and press \leftarrow when you have finished.

You now see the Create Roundabout – Circulatory Road page of the wizard, shown in [Figure 10.61](#).

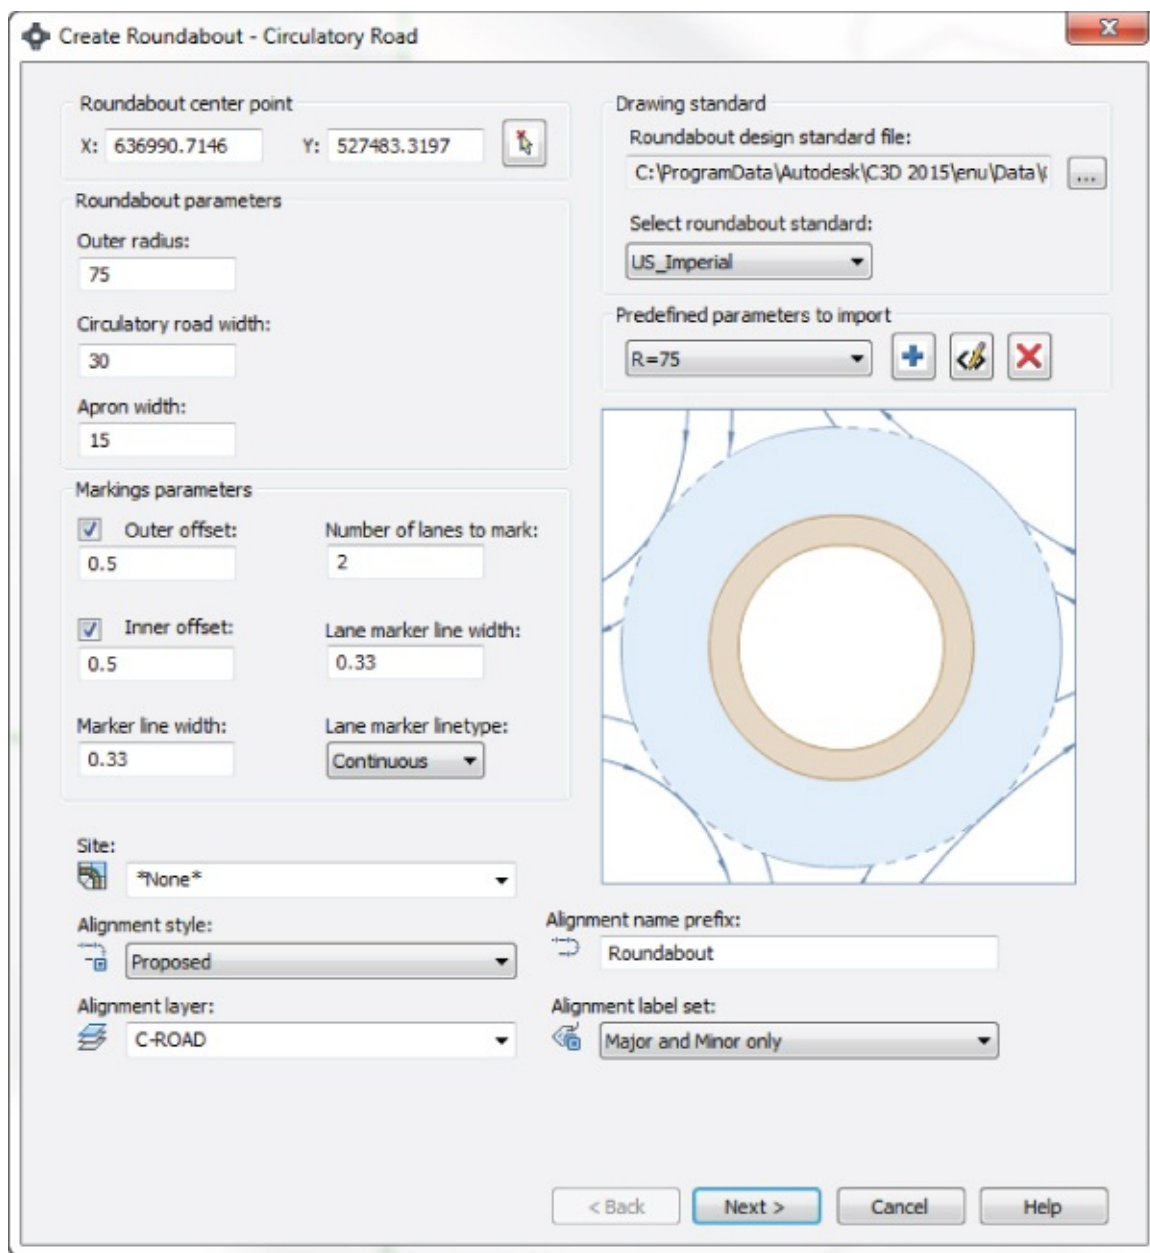


Figure 10.61 The first roundabout layout screen for designing the main circulatory road

5. Verify that you are using the correct standards for your units. Click the ellipsis next to the Roundabout Design Standard File field, and verify that you are using the correct XML standards file. Imperial users should be using Autodesk Civil 3D Imperial Roundabouts Presets.xml. Metric users should be using Autodesk Civil 3D Metric Roundabouts Presets.xml.
 - a. If Roundabout Design Standard File is set correctly, click Cancel and continue to step 6.
 - b. If it is not set correctly, browse to the C:\ProgramData\Autodesk\C3D 2015\enu\Data\Corridor Design Standards\ folder. Browse to either the Imperial or Metric units folder and select the correct roundabout presets XML file. Click Open to return to the Create Roundabout dialog.
6. From the Predefined Parameters To Import drop-down, choose R = 75 (Rg = 25m).
This will be the radius from the center of the roundabout to the outermost circular edge of pavement. This will also adjust other settings in the dialog.
7. Set Alignment Layer to C-ROAD and Alignment Label Set to Major And Minor Only. Click Next.
Now, you'll design the approach road exit and entry geometry. The options in the Create Roundabout –

Approach Roads page of the wizard (see [Figure 10.62](#)) can be set independently for each approach, or you can click Apply To All, which will set the geometry for all four approaches.

Create Roundabout - Approach Roads

4 approach road alignments are selected.

<< Previous North to south approach Next >> Apply to all

Predefined parameters to import: R=75

Default connecting radius: 100

Approach road parameters

Exit road width: 18

Exit radius: 100

Exit flare length: 150

Exit flare type: Arc

Width at departure: 15

Entry road width: 15

Entry radius: 75

Entry flare length: 150

Entry flare type: Arc

Width at approach: 15

Alignment style: Proposed

Alignment layer: C-ROAD

Alignment name prefix: Approach_NS

Alignment label set: Major and Minor only

< Back Next > Cancel Help

Figure 10.62 Approach road widths at entry and exit

8. On the Create Roundabout – Approach Road page, do the following:
 - a. Set Predefined Parameters To Import to $R = 75$ ($R_g = 25\text{m}$).
 - b. Change the alignment layer to C-ROAD. Hint: You can type in the layer name or pick it from the drop-down.
 - c. For Alignment Label Set, choose Major And Minor Only.
 - d. Leave all other settings at their defaults.
 - e. Click the Apply To All button, and click Next.
9. In the Create Roundabout – Islands screen (see [Figure 10.63](#)), again set Predefined Parameters To Import to $R = 75$ ($R_g = 25\text{m}$).

Create Roundabout - Islands

4 approach road alignments are selected.

<< Previous North to south approach Next >> Apply to all

Predefined parameters to import

R=75 + < X

Construction triangle parameters

Length: 100 Base: 18

Splitter island parameters

☒ Provide crosswalk (length): 6 Island total length: 65 Island base length: 18

Rounding at exit: 3 Rounding at entry: 3

Offset from circle at exit: 1 Offset from circle at entry: 1

Offset at exit: 1 Offset at entry: 1

Offset at departure: 1 Offset at approach: 1

Rounding at tip: 1 Rounding at crosswalk: 2

< Back Next > Cancel Help

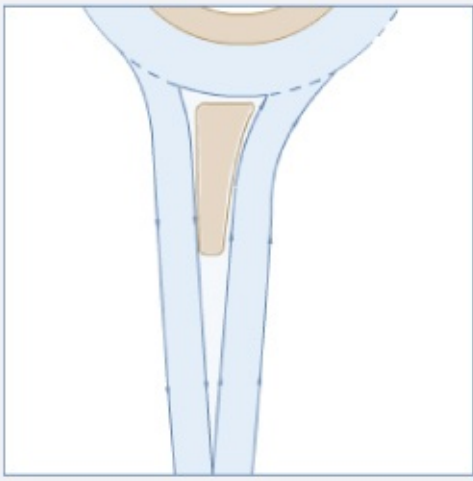


Figure 10.63 Roundabout Islands parameters

10. Click Apply To All, and then click Next.

The final screen of the Create Roundabout Wizard deals with pavement markings and signage. Notice that you can specify your own blocks for the signs that will be placed in this process.

Everything created in this last step is an AutoCAD polyline or block. The polylines have a global width set to indicate pavement marking thicknesses. These thicknesses are set in the Markings And Signs page ([Figure 10.64](#)).

Create Roundabout - Markings And Signs

4 approach road alignments are selected.

<< Previous North to south approach Next >> Apply to all

Signs

Sign:	Draw	Name:	Block	Distance:	Offset:	Leader length:	Post height:	Scale:
AB3a	<input checked="" type="checkbox"/>	AB3a	...		0.5	1	2	1
B21-1	<input checked="" type="checkbox"/>	B21-1	...	20	0.5	0	2	1
J5	<input checked="" type="checkbox"/>	J5	...		0.5	0	2	1
A25	<input checked="" type="checkbox"/>	A25	...	100	0.5	1	2	1
AB6	<input checked="" type="checkbox"/>	AB6	...	100	0.5	1	2	1

Top view ☒ sign_top_view ...

Pavement markings

Draw	Linetype:	Width:
Outer edge <input checked="" type="checkbox"/>	Continuous	0.3
Island edge <input checked="" type="checkbox"/>		0.3
Central line <input checked="" type="checkbox"/>	Continuous	0.3
Yield line <input checked="" type="checkbox"/>	Continuous	0.5

Island tip marking

☒ Draw

Offset:	Width:
0.2	0.5

Angle [%]: 50 Gap: 1.35

Crosswalk markings

Draw	Distance:	Length:	Width:	Gap:
Entry <input checked="" type="checkbox"/>	4	4	0.5	0.25
Exit <input checked="" type="checkbox"/>	4	4	0.5	0.25

Break at entry island edge ☒ Break Gap: 0.5

Break at exit island edge ☒ Break Gap: 0.5

< Back Finish Cancel Help

Figure 10.64 Pavement markings galore!

1. Leave all defaults in the Create Roundabout – Markings And Signs page ([Figure 10.64](#)), and click Finish.

Your roundabout should resemble [Figure 10.65](#). Since standards vary by region, the metric drawing will have slightly different default pavement markings.

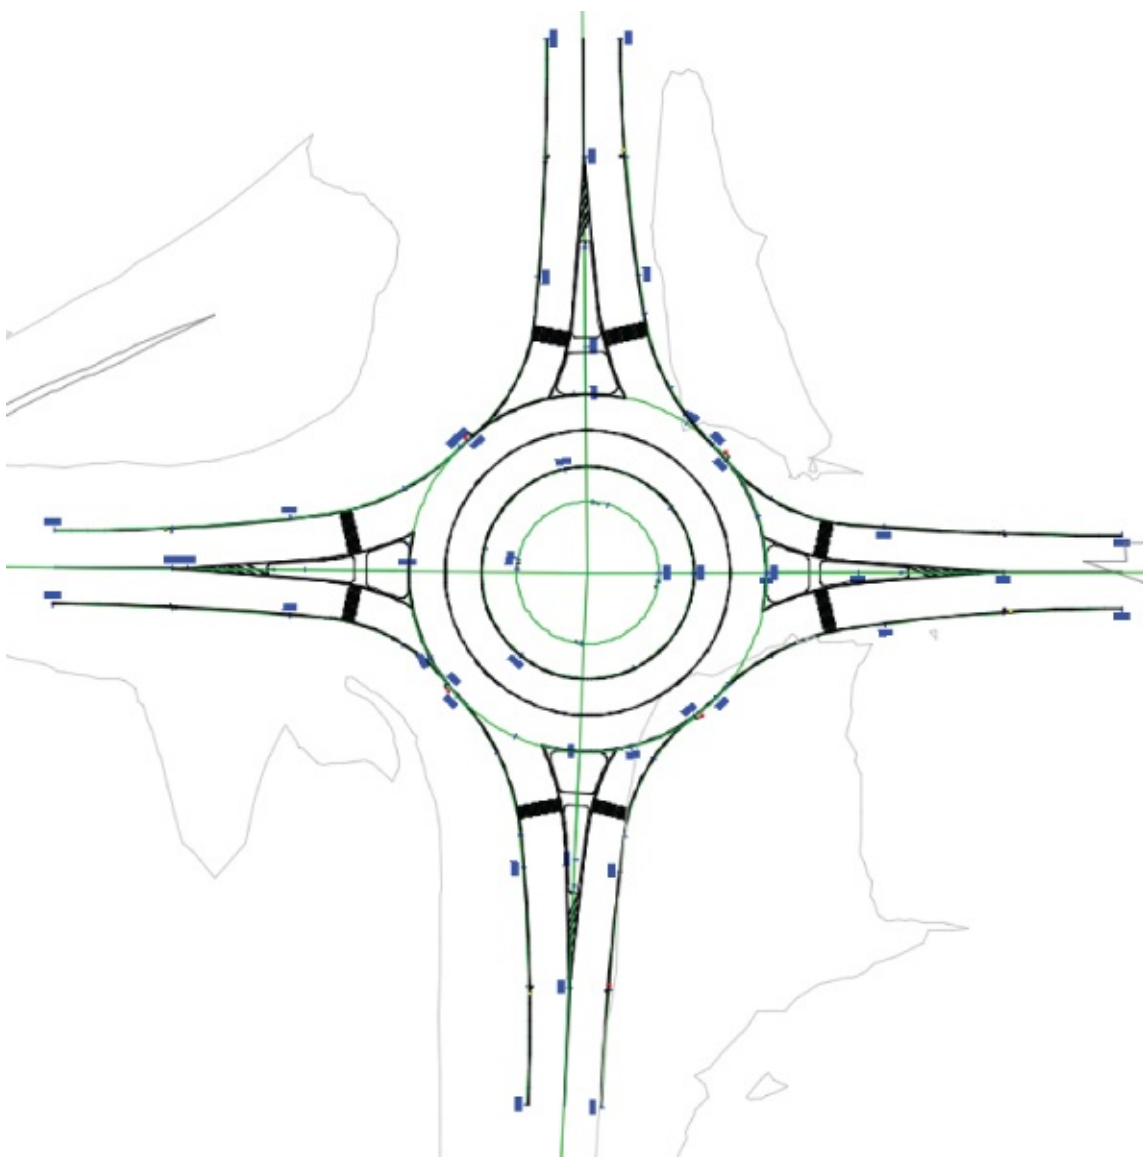


Figure 10.65 Completed roundabout alignment layout

Finally, you will add a turn lane in the NW quadrant of the roundabout. When you're creating slip turn lanes, remember that the turn radius must be large enough to fillet the exit and entry roads without overlapping the other alignments.

When selecting the approach entry and exit alignments, you need to click the shorter approach alignments created by Civil 3D rather than the original approach road. For this reason, the exercise has you select inside the islands, just to be sure.

2. From the Home tab > Create Design panel, select Intersections > Add Turn Slip Lane.
3. When prompted to select the entry approach, select the north approach alignment inside the curb island.
4. When prompted for the exit approach, select the west approach alignment inside the curb island, as shown in [Figure 10.66](#).

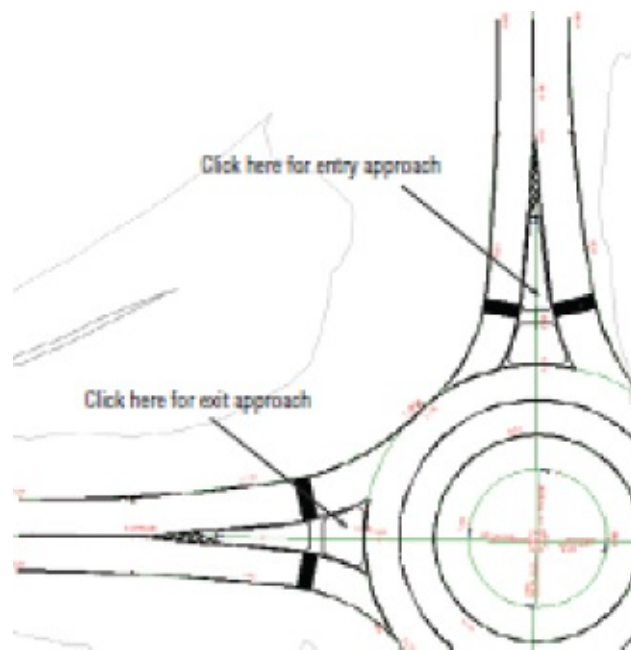


Figure 10.66 Entry and exit approach alignments for the slip lane

15. In the Draw Slip Lane dialog shown in [Figure 10.67](#), set the lane width to **14'** (4 m) and the radius to **150'** (45 m).

Draw Slip Lane					
Slip Lane parameters					
Segmentation line length:	1	Lane width:	14		
Length of deceleration lane:	80	Radius:	150		
Length of acceleration lane:	70	Taper length:	70		
Draw pavement markings					
	Draw	Linetype:	Width:	Offset:	
Outer edge	<input checked="" type="checkbox"/>	Continuous	0.3	0.15	
Decelerating transition line	<input checked="" type="checkbox"/>	Continuous	0.3	0.15	
Accelerating transition line	<input checked="" type="checkbox"/>	Continuous	0.3	0.15	
Alignment style:		Alignment name prefix:			
Proposed		SlipLane			
Alignment layer:					
C-ROAD					
Alignment label set:					
Major and Minor only					
		OK		Cancel Help	

Figure 10.67 Adding a slip lane

16. For Alignment Layer, choose C-ROAD, and for Alignment Label Set, choose Major And Minor Only. Click OK.

Your roundabout will now look like [Figure 10.68](#).

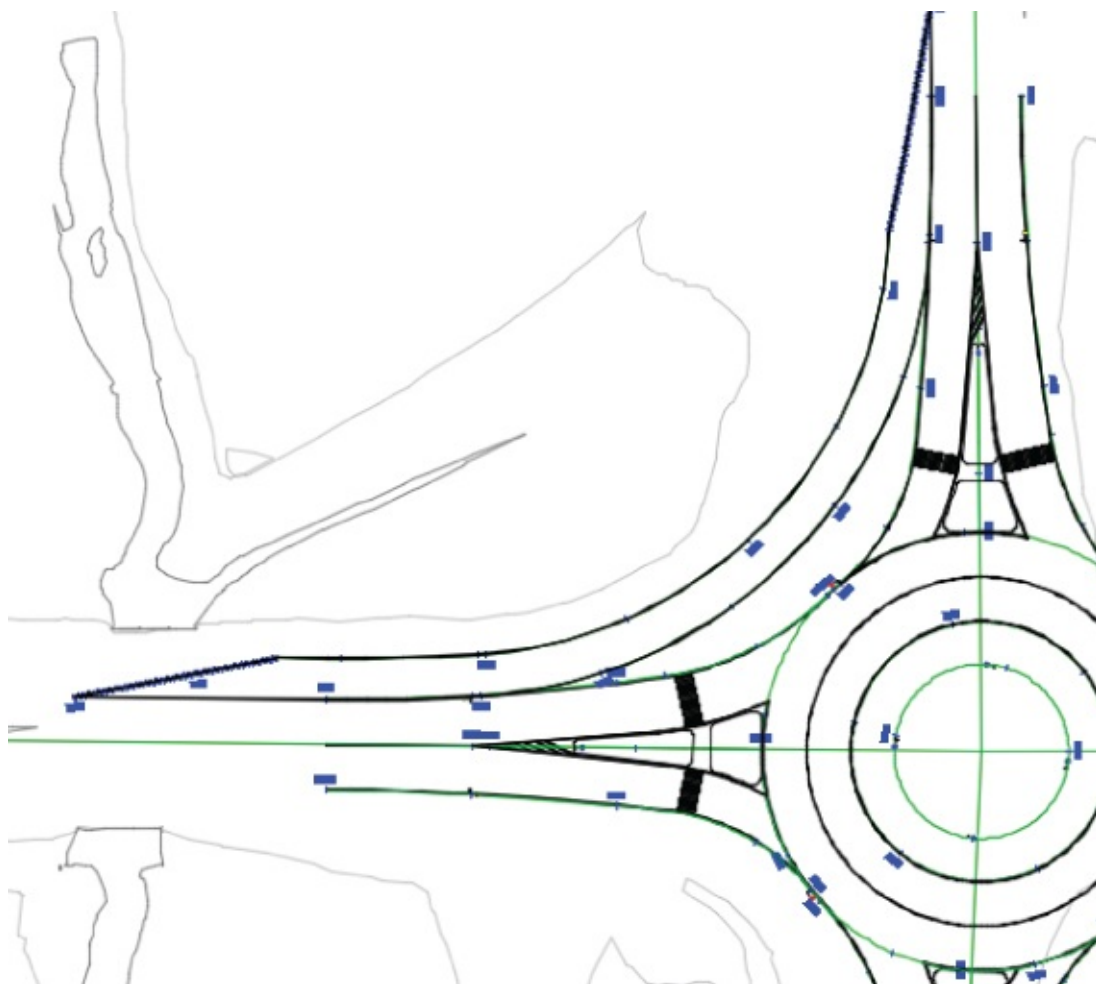


Figure 10.68 The completed slip lane alignments

7. Save and close the drawing.

The completed files, `1011_RoundaboutLayout_FINISHED.dwg` and `1011_RoundaboutLayout_METRIC_FINISHED.dwg`, are available for your review if desired.

You now have all the alignments you need to start your roundabout design. At this point, you can add geometry to the alignments and modify what Civil 3D has created for you.

The horizontal layout is complete, but the roundabout design is far from done. No vertical data has been created; that is up to you.

This is as far as we will take you in this book in regard to building a roundabout step by tedious step. Rest assured, however, that if you have truly mastered corridors, the technique for completing a roundabout is similar to that used for any intersection.

The remainder of this chapter gives you an overview of how to accomplish the rest on your own.

Center Design

All profiles need to meet at the elevations inside the traveled way in the circular pavement area of the roundabout. Therefore, the main circle design comes first.

To see an example of a completed roundabout corridor, open the drawing `1011_RoundaboutExample_FINISHED.dwg` or `1011_RoundaboutExample_METRIC_FINISHED.dwg`. Use these examples as a guide to “reverse engineer” your own roundabouts when you’ve mastered other forms of intersections.

You can use any of the circular alignments created by Civil 3D as the basis for this step, as long as your assembly works with the design. Remember to make note of which direction the alignment goes, to ensure that the assembly you create is not backward.

Extract profiles for the main circle design from the Existing Intersection and Roundabout Grading surfaces, as shown in [Figure 10.69](#).

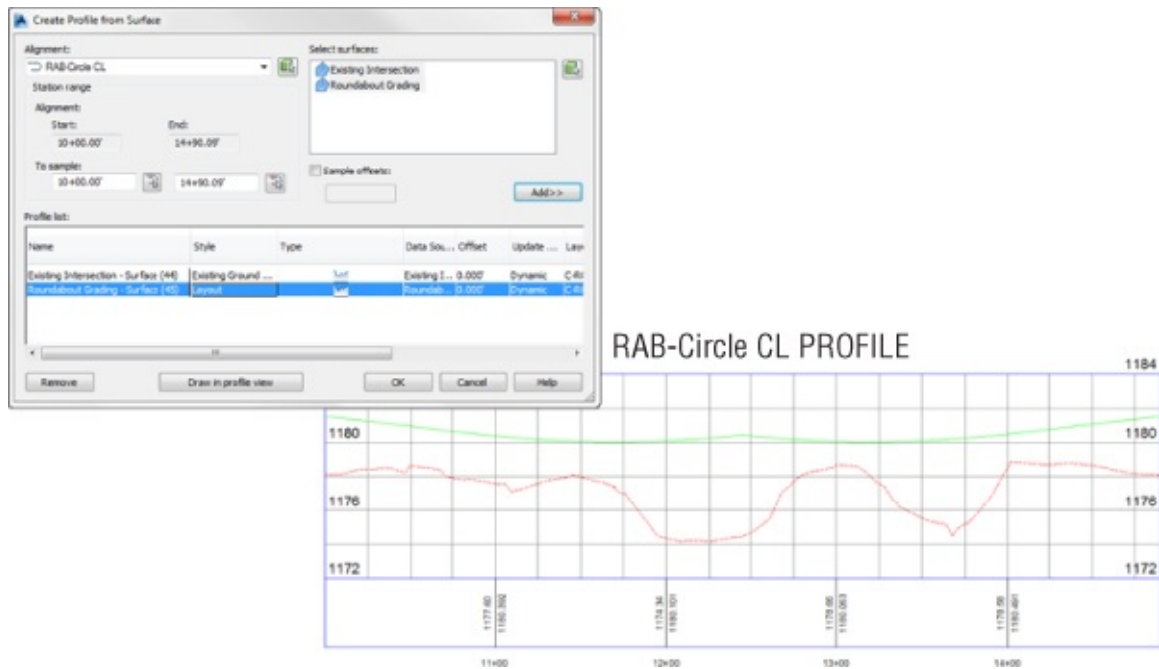


Figure 10.69 Extract surface profiles around the main circular alignment.

The assembly you create for this preliminary design will also be used in the main design. Decide which alignment will be used as the circular design basis, and create an assembly based on your alignment location and desired geometry, as shown in [Figure 10.70](#).

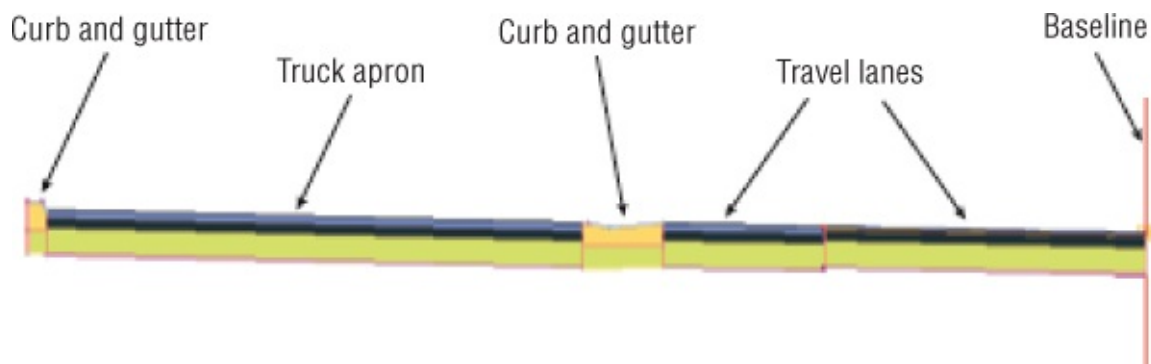


Figure 10.70 Center assembly for roundabout

This assembly can be used in several steps of the process. First, it is used in a preliminary corridor called RAB MAIN. It can also be recycled to be the centerpiece of your main corridor. In the example, the main circle alignment created by Civil 3D, Roundabout_OUTER_EDGE, was used as the baseline for this initial corridor. There are no targets or frequencies set in this corridor. Like the cul-de-sac example earlier in this chapter, this is a preliminary corridor, used to ensure that profiles from the approach roads tie in at the correct elevations.

In the example drawings, a Top link surface was created from the RAB MAIN corridor. At this point, the roundabout will resemble [Figure 10.71](#).

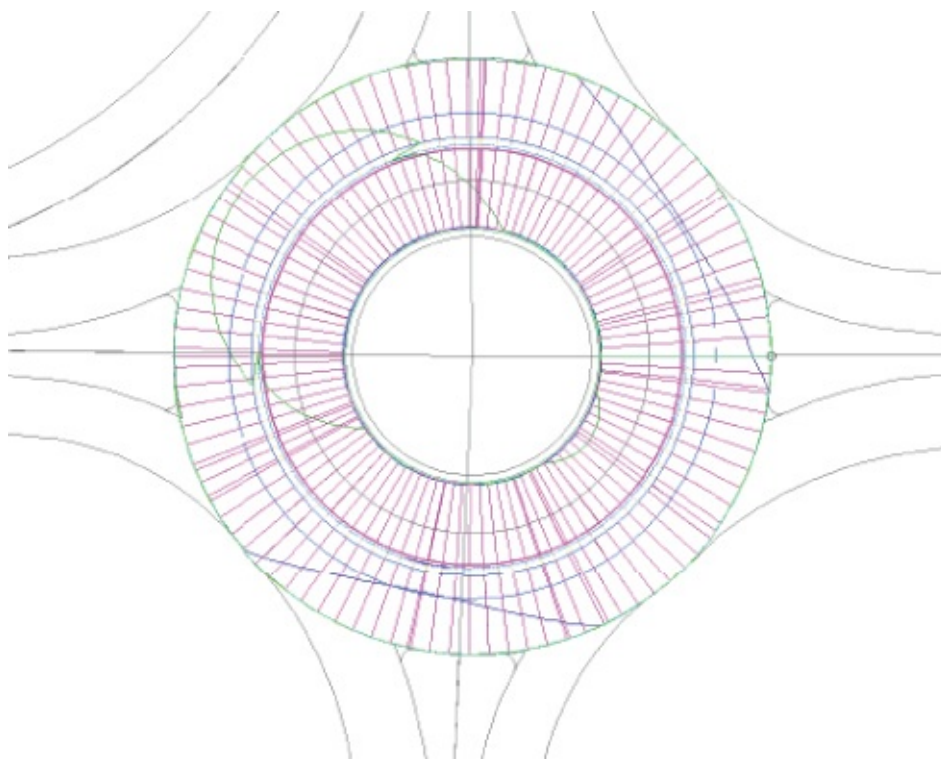


Figure 10.71 Preliminary center corridor and surface

Profiles for All

You have all the preliminary surfaces in place, and you have all the alignments you need, so it is time to extract profiles from your various surfaces.

In the 1011_RoundaboutExample_FINISHED.dwg and 1011_RoundaboutExample_METRIC_FINISHED.dwg files, the surface profiles for all the approach alignments were created by sampling the existing ground, drainage surface, and preliminary RAB MAIN corridor surface. These profiles will look something like [Figure 10.72](#).

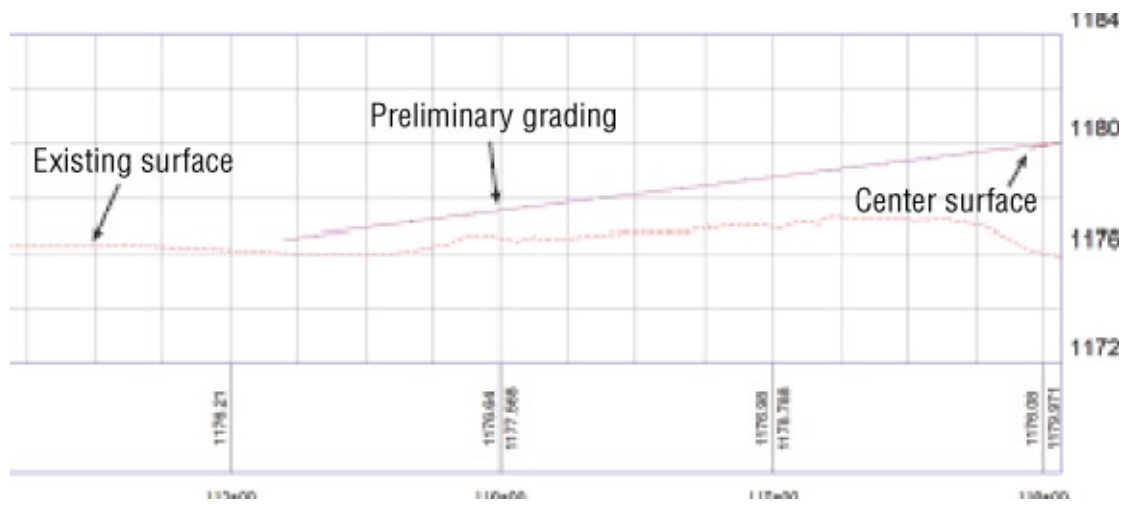


Figure 10.72 Surface profiles needed for design

When you create your design, you will see all your design considerations in the profile views. No matter how you decide to tie into existing ground and slope upward toward the surface, your design must tie into the preliminary center surface, as shown in [Figure 10.73](#).

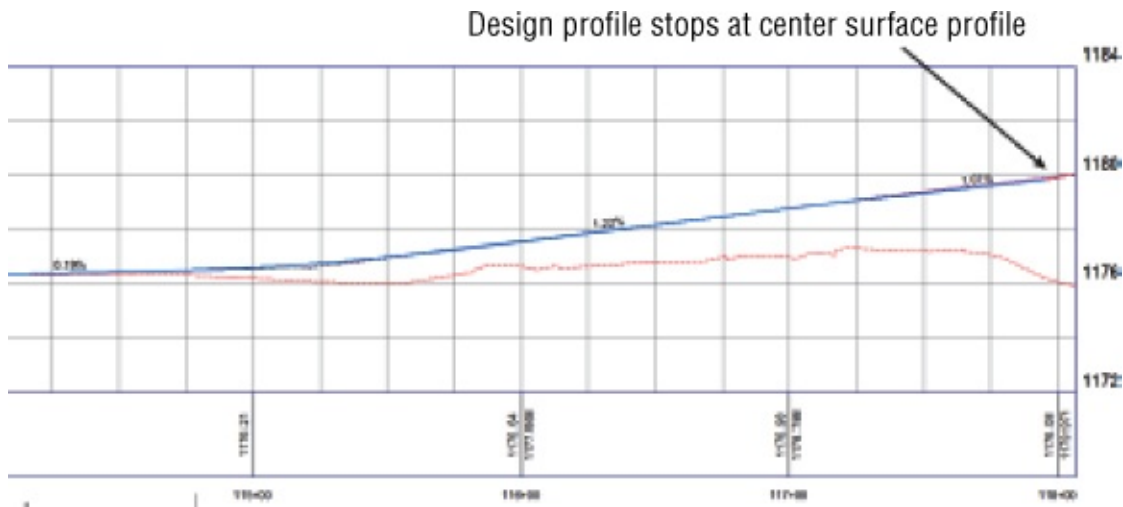


Figure 10.73 Design profiles must tie into the center.

Use techniques you learned earlier in this chapter to assist you. Labels are an especially valuable tool for roundabouts. Keep your profile views organized because you will have at least three for each approach. If you have a slip turn lane, you will have a profile for that as well.

Tie It All Together

Stretch your legs and go for more coffee. It is time to put this thing together into a completed corridor. When you model the corridor initially, ignore curb islands—you will add them as individual corridors in a later step.

A simple roundabout can be completed using as few as three assemblies. In our example, however, the slip turn lane necessitates a total of four assemblies. In addition to the RAB Main assembly you saw in [Figure 10.70](#), you will need three more assemblies, as shown in [Figure 10.74](#).

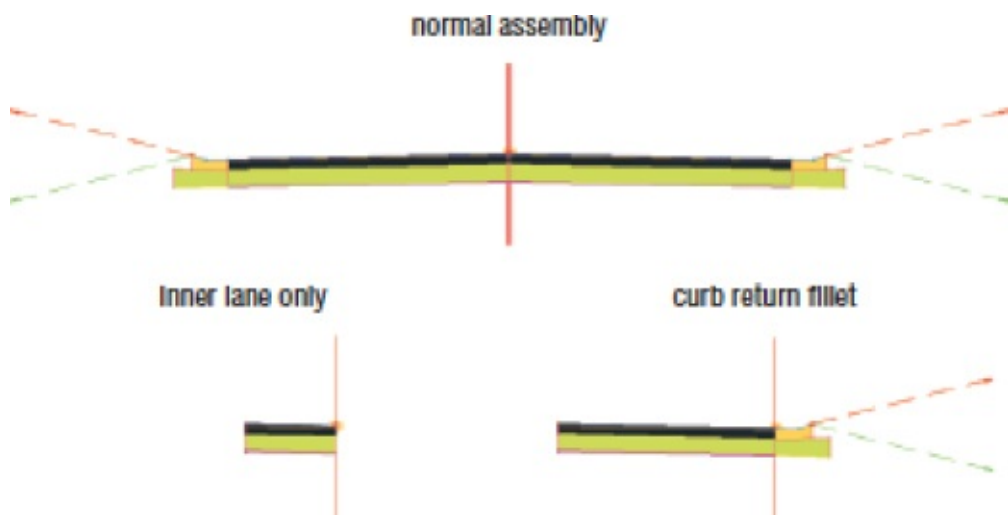


Figure 10.74 Assemblies needed for the main roundabout corridor

These assemblies will be tied to the EOP alignments and profiles as baselines, similar to a traditional intersection. Each quadrant of the roundabout will target at least two alignments and profiles, as shown in [Figure 10.75](#).

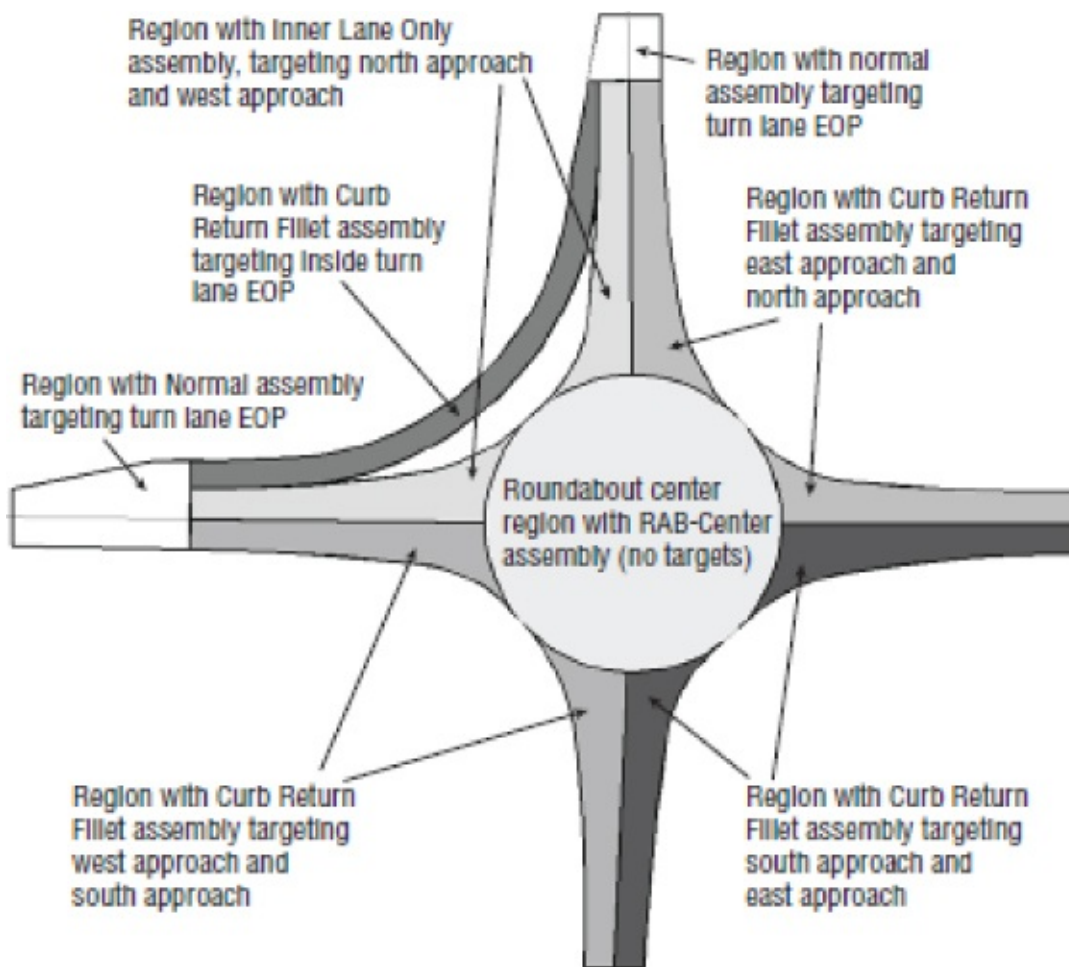


Figure 10.75 Roundabout corridor regions and targets

Keep in mind the direction of your alignments. If you build the corridor in stages, check the corridor periodically to make sure it is building correctly.

Create a corridor surface from your completed roundabout lanes. You will likely have to use the Add Interactively tool to add the boundary correctly.

Finishing Touches

The median islands are the last parts to go on the corridor. You can create them using simple grading objects, but since this is a book about mastering skills, and this is a chapter about corridors, you should examine the dynamic way.

Create a simple assembly containing the curb and gutter for the curb islands. This will be the assembly that you use with the median corridors ([Figure 10.76](#)).



Figure 10.76 Simple assembly containing just the curb and gutter on the median islands

Each median island will need its own alignment. Take note of the direction of the alignments to make sure they are compatible with the curb island assembly. If necessary, change the direction of the alignments using the Reverse Direction tool in the Modify panel of the contextual ribbon tab. [Figure 10.77](#) shows the bypass island and north island with directions.

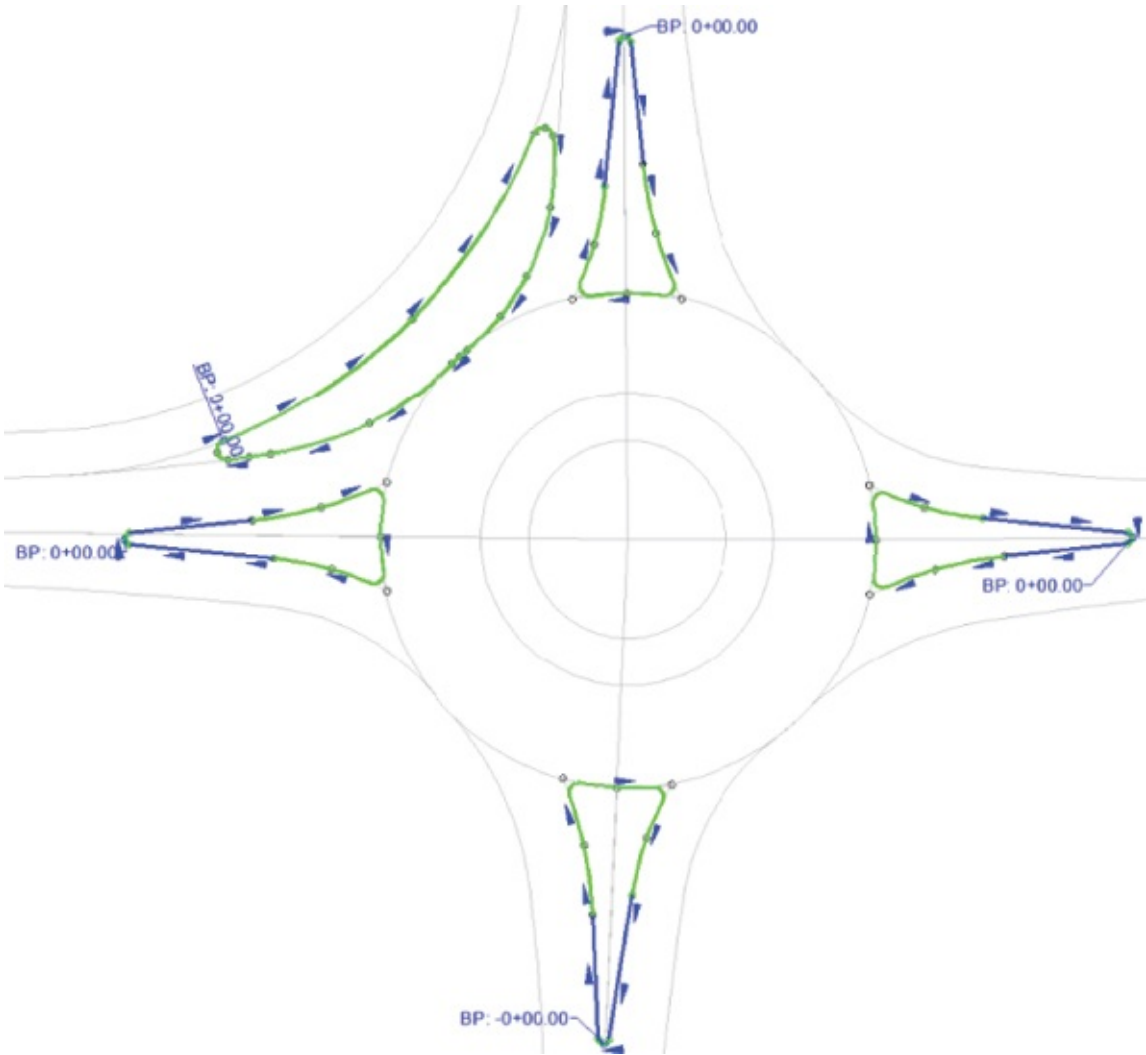


Figure 10.77 Several median island alignments with direction shown

The good news is that the elevation data for the medians is already complete. Your main corridor's

surface will act as the profile for each individual median. This also means that once the curb return corridors are created, they will be dynamic to the main corridor. After these little corridors are created and surface model information has been obtained, you can set them to Rebuild – Automatic and forget all about them.

Extract a profile for all the curb return alignments from the Top link surface model from the main roundabout corridor, as shown in [Figure 10.78](#). You do not need to see this profile in a view, so you can click OK to extract.

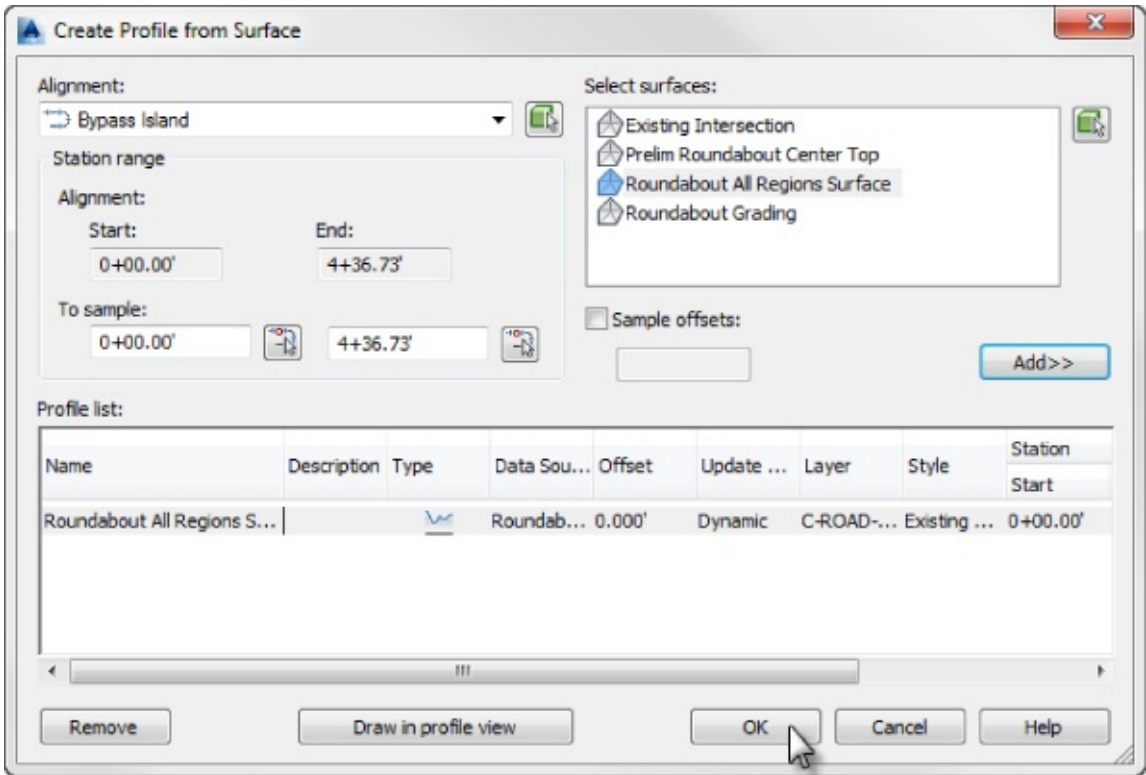


Figure 10.78 Extract the profile for medians from your main : roundabout surface.

When the design roundabout corridors are complete and surfaces are made, the next step is to merge the surfaces. Create a final surface model and paste the main roundabout design in first. After the main corridor is pasted in, paste the smaller median corridor surfaces, as shown in [Figure 10.79](#). The center median is already taken care of by the first baseline.

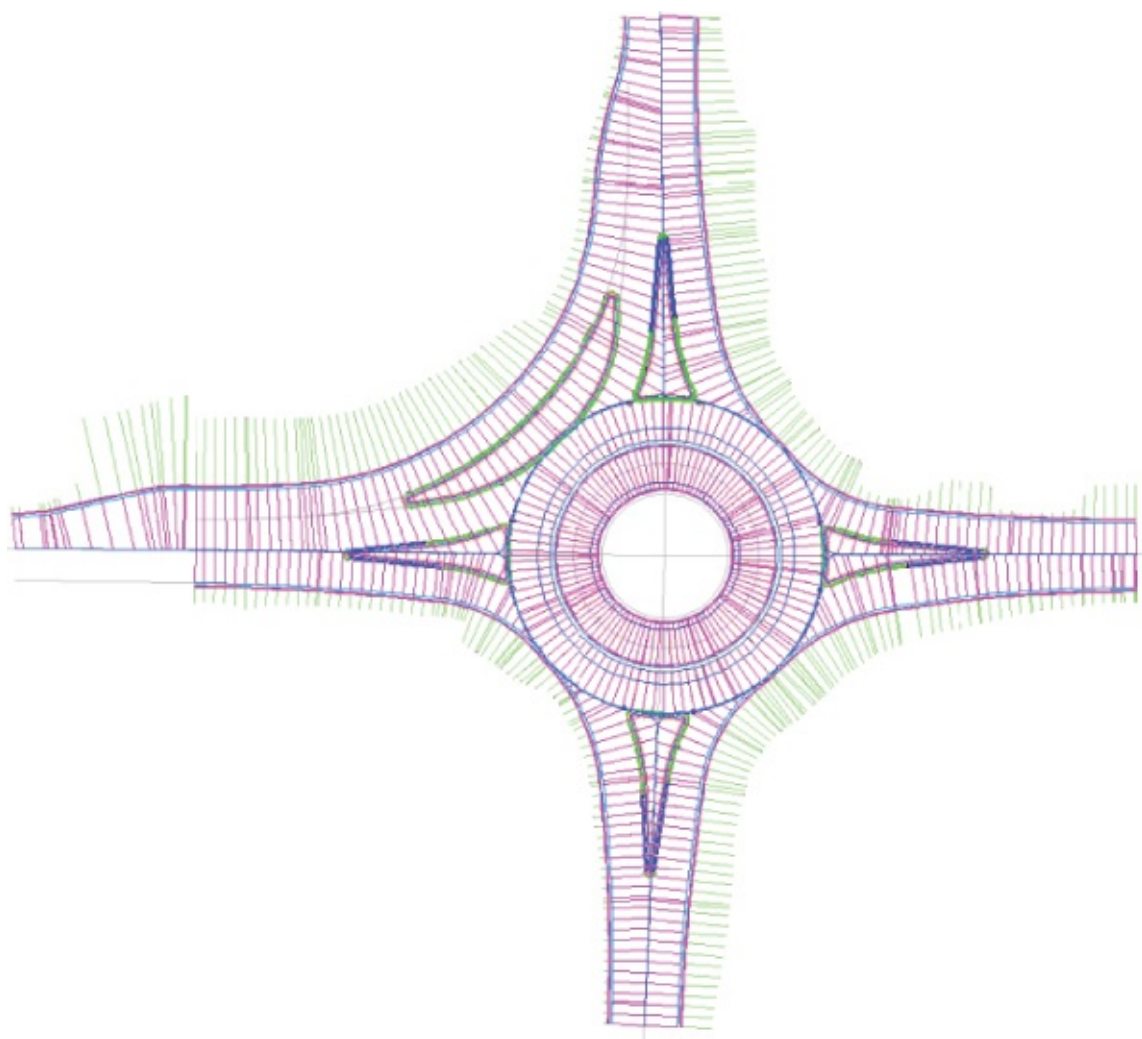


Figure 10.79 The completed roundabout

Your next step is to use the corridor fine-tuning techniques you learned earlier in this chapter to ensure that your grades are correct and the design is correct. To see an example of a completed corridor using these steps, take a look at `1011_RoundaboutExample_FINISHED.dwg` (`1011_RoundaboutExample_FINISHED_METRIC.dwg`), which you can download from this book's web page.

The Bottom Line

Create corridors with non-centerline baselines. Although for simple corridors you may think of a baseline as a road centerline, other elements of a road design can be used as a baseline. In the case of a cul-de-sac, the EOP, the top of curb, or any other appropriate feature can be converted to an alignment and profile and used as a baseline.

Master It Open the `MasterIt1001.dwg` (`MasterIt1001_METRIC.dwg`) file, which you can download from www.sybex.com/go/masteringcivil3d2015. Add the cul-de-sac alignment and profile to the corridor as a baseline. Create a region under this baseline that applies the Intersection Typical assembly.

Add alignment and profile targets to a region for a cul-de-sac. Adding a baseline isn't always enough. Some corridor models require the use of targets. In the case of a cul-de-sac, the lane elevations are often driven by the cul-de-sac centerline alignment and profile.

Master It Continue working in the `MasterIt1001.dwg` (`MasterIt1001_METRIC.dwg`) file. You

need to have completed the previous exercise before continuing. Add the Second Road alignment and Second Road FG profile as targets to the cul-de-sac region. Adjust Assembly Application Frequency to 5' (1 m) for tangents and curves.

Create a surface from a corridor and add a boundary. Every good surface needs a boundary to prevent bad triangulation. Bad triangulation creates inaccurate contours and can throw off volume calculations later in the process. Civil 3D provides several tools for creating corridor surface boundaries, including an Interactive Boundary tool.

Master It You need to have completed the previous exercise before continuing. Keep working in the MasterIt1001.dwg (MasterIt1001_METRIC.dwg) file. Create an interactive corridor surface boundary for the entire corridor model.

Chapter 11

Superelevation

Superelevation and cant are methods for changing the cross section of a design to keep cars and trains safely and comfortably on their paths when driving along a curve or series of curves. Superelevation tools also provide a convenient way to force the slope of a road for drainage purposes, without the need for additional assemblies.

Once you have a good grasp of alignments, assemblies, and corridors, you can add a level of sophistication to your design with the superelevation and cant tools within the Autodesk® AutoCAD® Civil 3D® software. Whether you are trying to match into an existing road's superelevation or creating new data, you will find the tools you need.

In this chapter, you will learn to

- Add superelevation to an alignment
- Create a superelevation assembly
- Create a rail corridor with cant
- Create a superelevation view

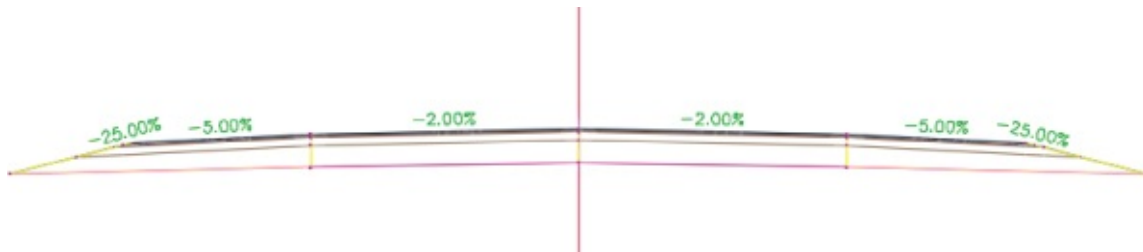
Preparing for Superelevation

Before superelevation can be applied to the design, you will need a *design criteria file* appropriate for your locale, design speeds applied to an alignment, an assembly with subassemblies that recognize superelevation, and an understanding of superelevation critical stations.

Critical Stations

Critical stations mark “milestones” in a superelevated region of an alignment. These points are located by means of calculations driven by the design criteria file.

End Normal Shoulder (ENS) This is the first station in the Transition In region. Normal shoulder slope is maintained, as shown in [Figure 11.1](#), but at subsequent stations, shoulder slope gradually becomes planar.



[Figure 11.1](#) End Normal Shoulder (ENS), the first station in the Transition In region

End Normal Crown (ENC) Normal lane slope is maintained, as shown in [Figure 11.2](#), but at subsequent stations lane slope gradually becomes planar. ENC also marks the beginning of runout distance in the region.

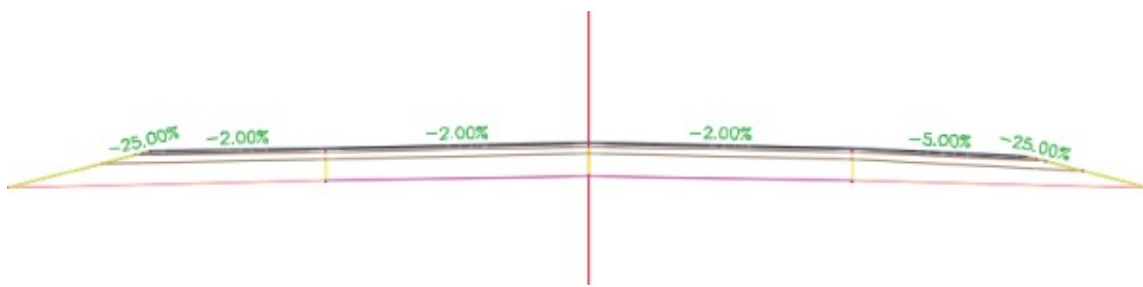


Figure 11.2 End Normal Crown (ENC), where the outside lane slope starts to flatten

Level Crown (LC) One side of the assembly will flatten to 0.00%, as shown in [Figure 11.3](#). This occurs in the Transition In region as well as the Transition Out region. It marks the beginning of runoff distance in the Transition In region and the beginning of runout distance in the Transition Out region.

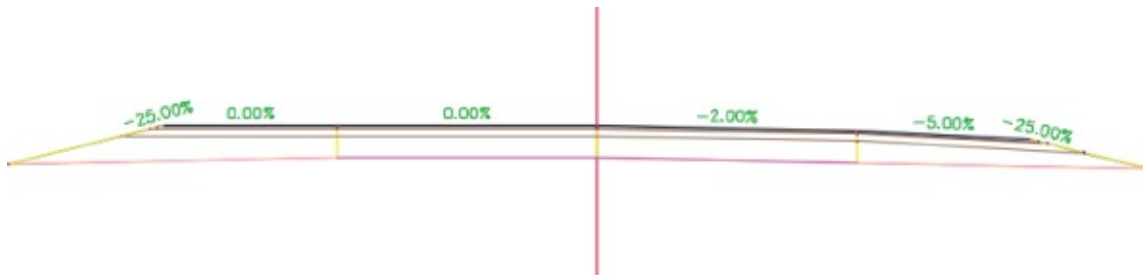


Figure 11.3 Level Crown (LC), where the outside lane flattens

Reverse Crown (RC) The outside lane becomes planar with the inside lane matching slope (normal), as shown in [Figure 11.4](#). This occurs in the Transition In region as well as the Transition Out region in the runoff distance.

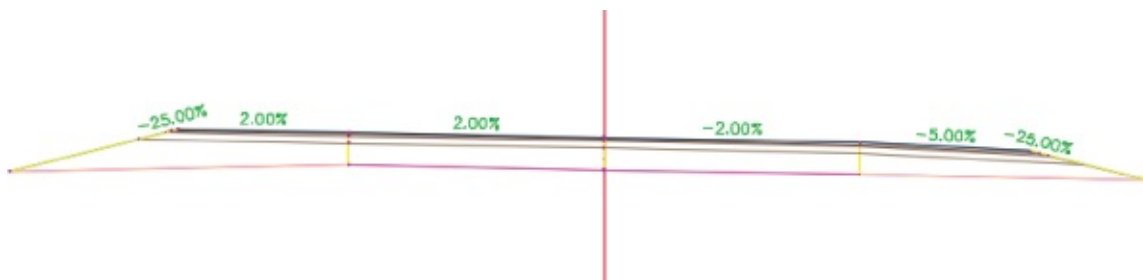


Figure 11.4 Reverse Crown (RC), where the outside lane becomes planar with the inside lane

Begin Full Super (BFS) Both lanes are planar and are at their maximum rate of superelevation (e_{\max}), as shown in [Figure 11.5](#). This occurs at the end of the Transition In region.

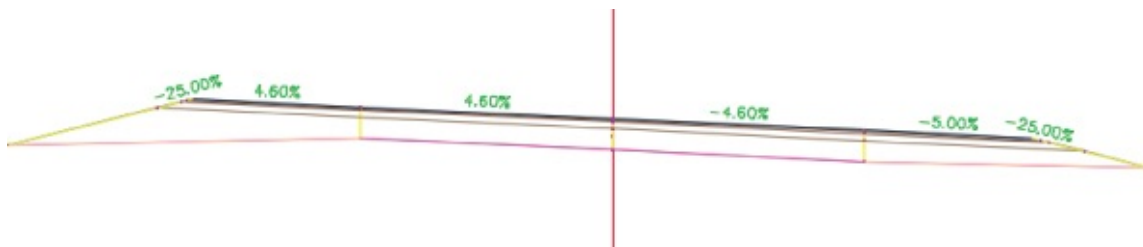


Figure 11.5 Begin Full Super (BFS), with both lanes at maximum slope

End Full Super (EFS) EFS has the same cross-slope conditions as Begin Full Super ([Figure 11.5](#)). This station marks the beginning of the Transition Out region and marks the beginning of the runoff distance for that region.

Begin Normal Crown (BNC) BNC has the same cross-slope conditions as End Normal Crown

([Figure 11.2](#)). This station in the Transition Out region marks the end of the runout distance.

Begin Normal Shoulder (BNS) BNS has the same cross-slope conditions as End Normal Shoulder ([Figure 11.1](#)). This station marks the end of the Transition Out region.

Now that you are familiar with the terminology used to describe transition stations, you are ready to examine design criteria.

Design Criteria Files

Having the correct design criteria file in place is the first step to applying superelevation to your corridor. These XML-based files contain instructions to the software on when to flag your design for geometry problems both horizontally and vertically. Design criteria files are the brains behind how your road behaves when superelevation is applied to the design.

Several design criteria files are supplied with Civil 3D upon installation. The out-of-the-box standards include AASHTO 2001, AASHTO 2004, and AASHTO 2010 for both metric and Imperial units. Several of the country kits include design criteria files for your locality if you are outside of the United States. If country or state kits do not exist for your situation, you can create your own user-defined files.

To create your own design criteria, follow these steps:

1. Select any alignment.
2. From the Alignment context tab ➤ Modify panel, click the Design Criteria Editor.
3. It is easier to modify an existing table in your desired units than to start from an empty file.
4. Be sure to click the Save As icon before making any changes.

User-Defined Criteria Files

If you create design criteria files for your region or design scenario, you will need to be able to share the file with anyone who will be working with your design.

Inside your organization, the best way to handle the design criteria file is to move it to a shared network location. If the design criteria file is stored in a shared location, be sure to have your IT personnel set the file to read-only to prevent inexperienced users from modifying it.

The default location for road design standards is C:\ProgramData\Autodesk\C3D 2015\enu\Data\Corridor Design Standards\.

The default location for rail design standards is C:\ProgramData\Autodesk\C3D 2015\enu\Data\Railway Design Standards\.

Once you browse to a design criteria file for an alignment, the location will be saved with the alignment.

If you are collaborating with someone without direct access to your design criteria files, you will need to send that person the XML file with your DWG. The XML file will not automatically go along for the ride if you use the eTransmit command.

Inside the Design Criteria Editor ([Figure 11.6](#)), you will see three headings: Units, Alignments, and Profiles. The Units page tells Civil 3D what type of values it will be using in the file. The Alignments

page is used for checking design, creating superelevation, and widening outside curves. The Profiles page provides tabular data for minimum K-value used to check vertical design.

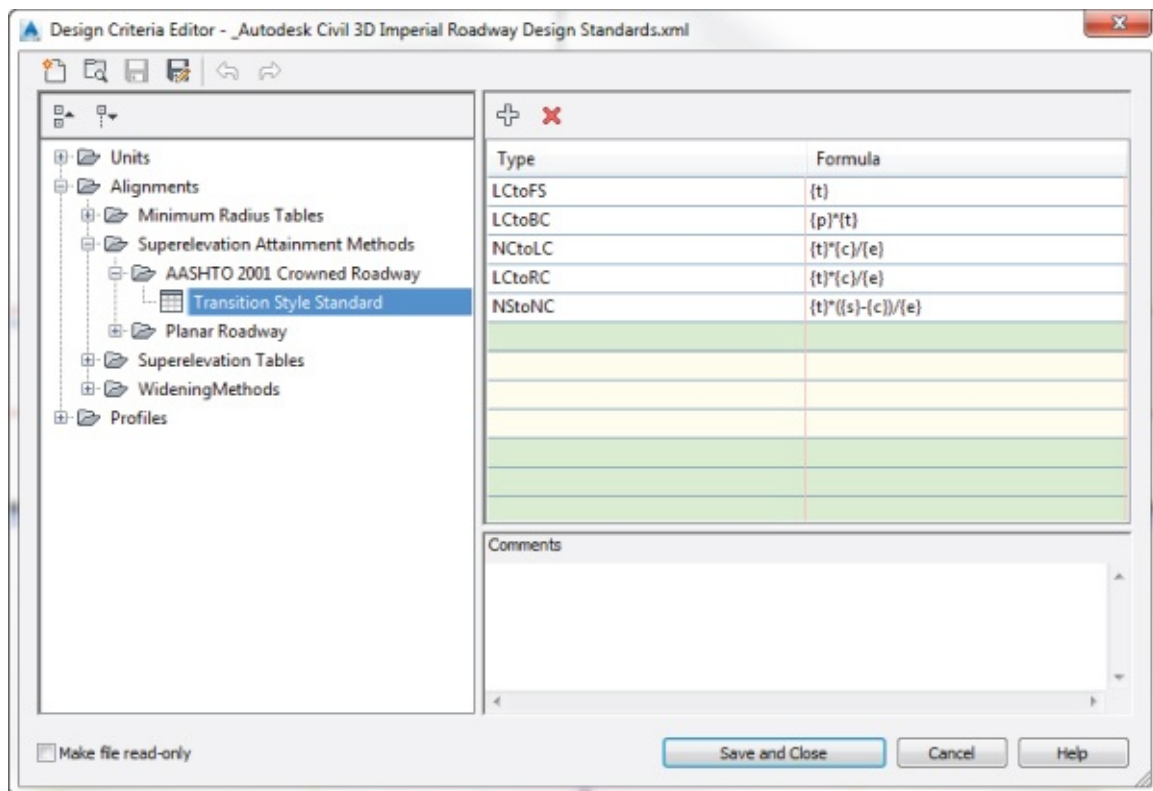


Figure 11.6 Inside the Design Criteria Editor

Civil 3D will graphically flag alignments when the design speed specified in the alignment properties has a radius less than the value specified in the Minimum Radius Table. The Minimum Radius Tables from AASHTO use superelevation rates in the table names, but this does not lock you into that rate for applying superelevation to the corridor. In other words, just because you use a more conservative value in your radius check, that doesn't mean you can't superelevate at a steeper rate. The tables are independent of one another.

Also in the Alignments branch you will find the superelevation attainment equations. These equations determine the distance between superelevation critical stations. Familiarize yourself with the terminology and locations represented by these stations, as shown in [Figure 11.7](#).


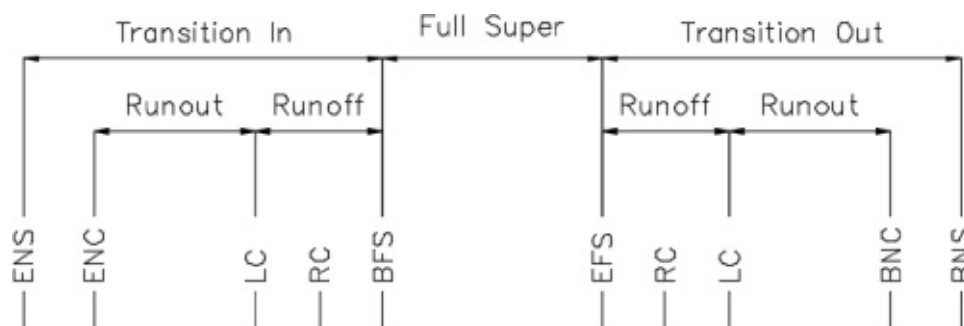


Figure 11.7 Diagram of superelevation critical stations and regions calculated by Civil 3D

In the following exercise, you will modify an example design criteria file and save it:

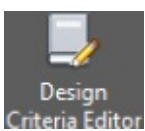1. Open the 1101_Criteria.dwg (1101_Criteria_METRIC.dwg) file, which you can download from this book's web page at www.sybex.com/go/masteringcivil3d2015. This exercise will also require 1101_CriteriaExample.xml (1101_CriteriaExample_METRIC.xml).



2. Select the USH 10 alignment that already exists in the drawing.
3. On the Alignment contextual tab ➤ Modify panel, select Design Criteria Editor.
4. Click the Open button at the top of the dialog, and browse to the 1101_CriteriaExample.xml (1101_CriteriaExample_METRIC.xml) file. Click Open.
5. Expand the Alignments branch, and expand the Superelevation Tables branch.
There is only one superelevation table in this example for 4% maximum slope.
6. Right-click Superelevation Tables, and select New Superelevation Table.
7. Double-click the new table and rename it **Example 6% Super**.
8. Right-click Example 6% Super, and select New SuperelevationTypeByTable.
9. Expand the new branch, right-click SuperelevationTypeByTable, and select New Superelevation Design Speed, as shown in [Figure 11.8](#).

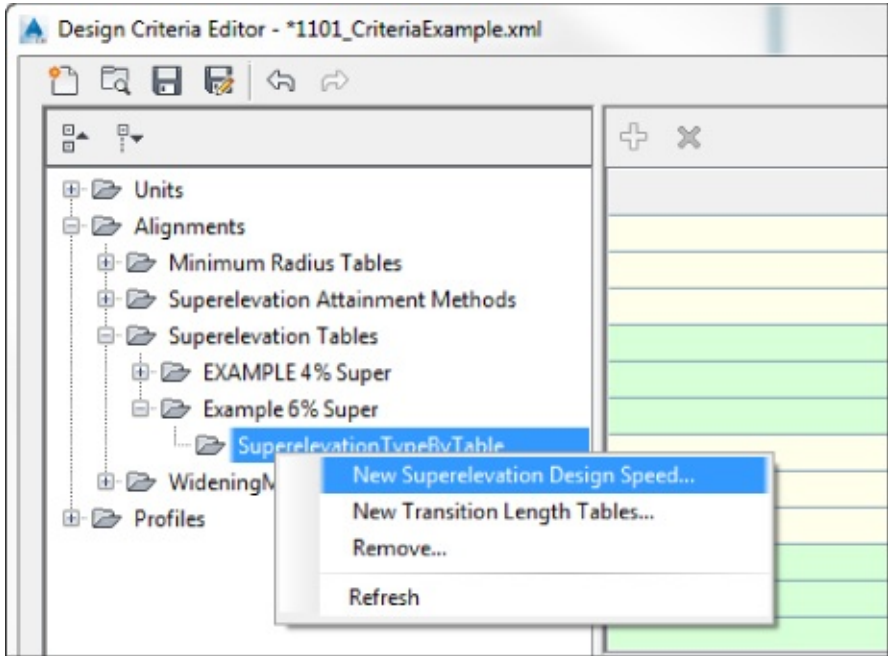


Figure 11.8 Adding a design speed to the design criteria file

When you expand the SuperelevationTypeByTable branch, you will see that Civil 3D has created a new table with a default design speed of 10 regardless of the units you are working in.

10. Double-click Design Speed 10 and change the design speed to **30 mi/hr (50 km/hr)**.
Notice that you need only the numeric value; Civil 3D fills in the rest of the table name for you.
11. Highlight your new design speed table.
The right side of the dialog will display an empty table containing columns labeled Radius and Superelevation Rate.
12. Select the first row of the table. Click the first field in the Radius column to start entering data. Add several radius and superelevation values, as follows:

Curve radius (feet)	Curve radius (meters)	Superelevation %
300	90	6
1000	300	4.5
1500	450	3.2
2000	600	2.6
4000	1250	NC

When you have completed your data entry from the table, the US units Design Criteria Editor will resemble [Figure 11.9](#).

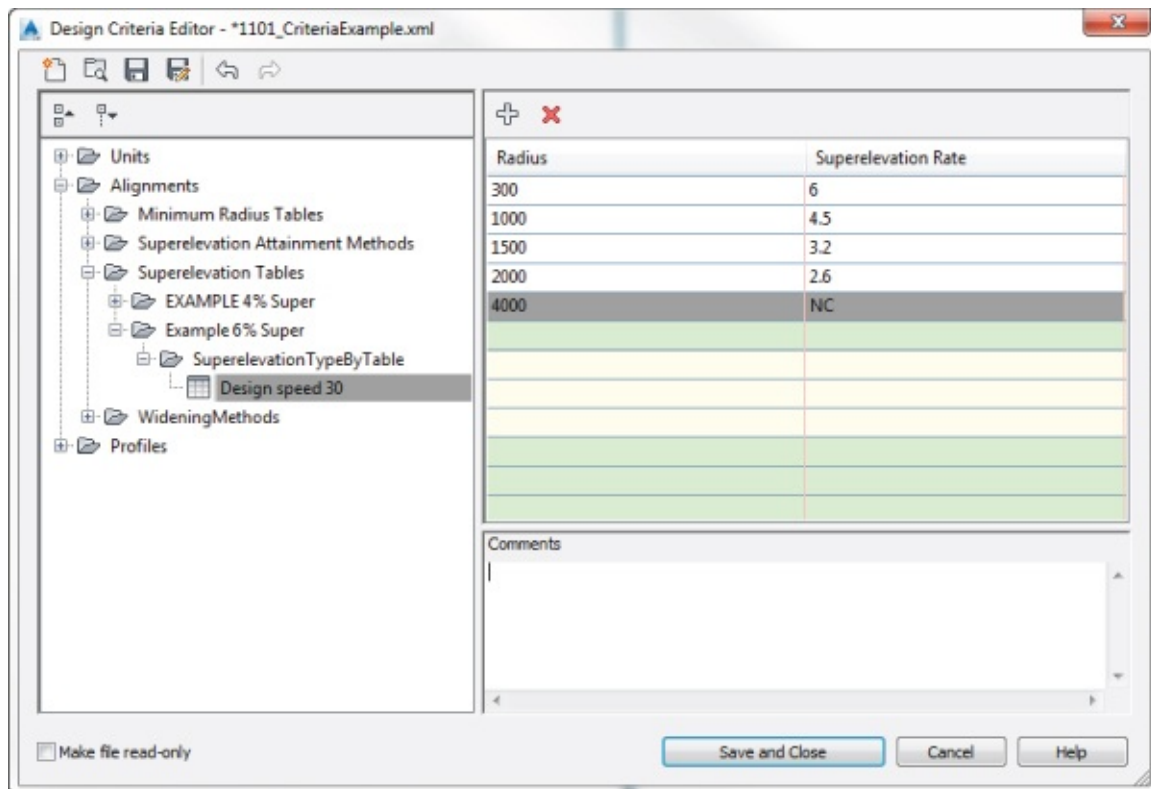


Figure 11.9 Adding example data using the Design Criteria Editor

13. Add a note in the Comments field that reads **Example Data Only!**
14. Click the Save And Close button at the bottom of the editor.
15. Click Save Changes and exit when prompted.
16. Save and close the current drawing.

Ready Your Alignment

Superelevation stations are connected to alignment curves (unless you create a user-defined curve in a tangent section). The design speed from the alignment properties is needed at each curve to specify which superelevation rate tables to use from the design criteria. The design speed has an effect on the distance between superelevation critical stations and the cross slope used when the road is at full-super.

It is a good idea to get your alignment geometry and design speed locations finalized before attaching superelevation. If a change is made to your alignment, the superelevation stationing will be marked as out of date.

Super Assemblies

As a general rule, if the lane subassembly has the word *super* somewhere in its name, it will respond to superelevation. If you want to verify that the lane you are choosing will behave the way you want it to in a superelevation situation, you can right-click it from the tool palette and access the subassembly help.

As long as you stay away from the Basic tab, all of the shoulder and curb subassemblies have parameters you can set to dictate how the assembly is to behave when an adjacent lane superelevates.

Most subassemblies that are capable of superelevating are intended for use where the pivot point for the cross section is at the center crown of the road. When the pivot point is at the center of the road, the baseline profile dictates the final elevation of the crown of the road. [Figure 11.10](#) shows an example of a two-lane highway (top image) and a four-lane divided highway (bottom image) that are designed to be used with the superelevation tools.

Axis of Rotation

The following is a list of the limitations and other factors to be aware of if you decide to take these new assemblies for a spin:

- Don't use an offset assembly with an axis of rotation superelevation assembly. The result in the corridor may not come out as expected.
- When working with curbs, medians, and shoulders, keep an eye out for the parameter Superelevation Axis Of Rotation. If this parameter reads Unsupported, it means that the subassembly will not adjust for superelevation other than at the center. None of the curb and gutter subassemblies adjust for breakover or rollover, but most of the shoulder assemblies do. This is a hard-coded parameter that cannot be changed by the end user. However, a custom subassembly could be composed that would accomplish this. Custom subassemblies will be covered in Bonus Chapter 1.

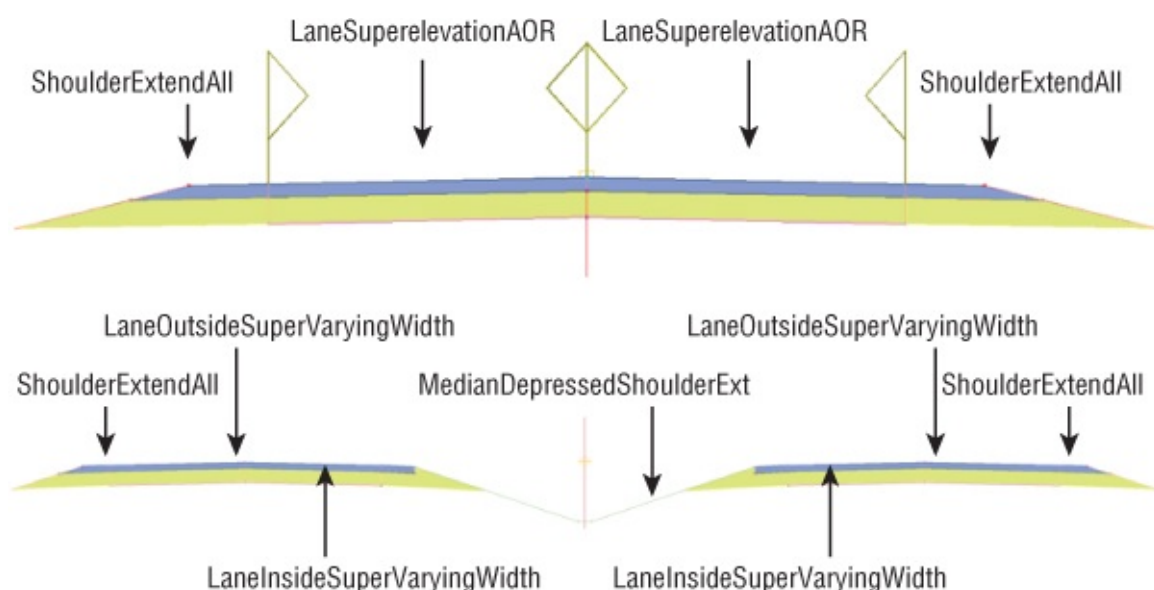


Figure 11.10 Two-lane and four-lane road assemblies designed to be used in super

Axis of Rotation Support

The axis of rotation (AOR) subassembly can be used when the centerline of the road is not the pivot point

for superelevation. The flag symbols (as shown in [Figure 11.11](#)) indicate potential pivot points on the assembly.

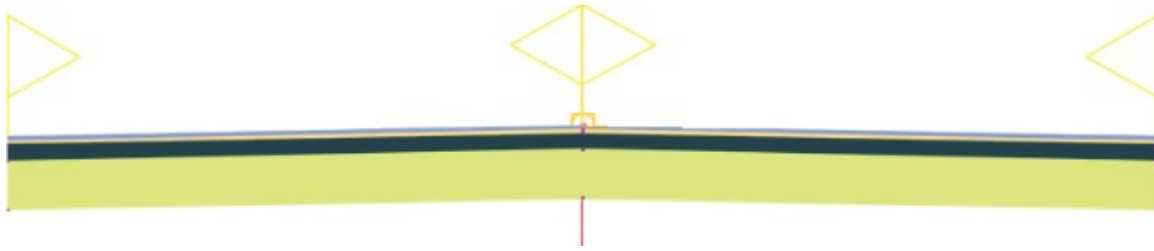


Figure 11.11 AOR subassemblies used on an undivided, crowned roadway

The flag symbols on LaneSuperelevationAOR indicate where the lane can be pinned down and used as a pivot point. When the axis of rotation is not the centerline of the road, the lane geometry is used to determine the change in elevation that will occur as a result.

When building assemblies with LaneSuperelevationAOR you may see warnings appear, as shown in [Figure 11.12](#).

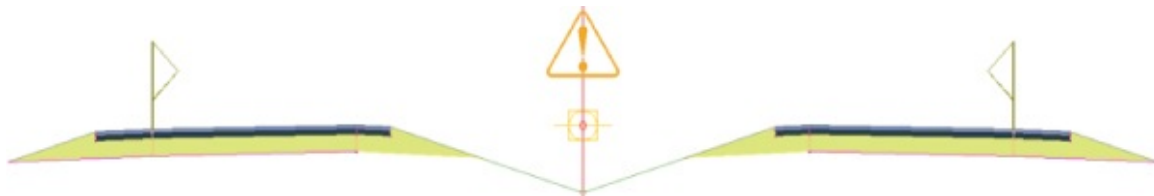


Figure 11.12 A warning symbol on an assembly using LaneSuperelevationAOR

Here are some of the warnings you may encounter:

Center Pivots Not Applied When Only One Group This usually occurs when you start your assembly with a median at the center. The construction of the assembly then does not have distinct left and right groups. Check the Construction tab of the assembly Properties dialog to verify. The fix is to build your assembly with left and right sides and add the median last.

Unsupported Subassemblies This warning will appear when you're attempting to use an assembly that has the Superelevation Axis Of Rotation parameter absent from its parameters.

Unsupported In Assemblies Containing Offsets Using an offset assembly will interfere with the software's ability to calculate the correct slope and curve widening on a superelevated road. Therefore, offset assemblies are not recommended for use with the AOR subassembly. You can still use offsets in traditional center-pivot-based superelevation.

No Center Pivots Found Make sure your assembly properties list the assembly as the correct type. For example, if you accidentally set Assembly Type to Divided Crowned Road when it is actually an undivided crowned road, you will receive this message. Check the Construction tab of the assembly Properties dialog to verify.

You can still add assemblies with warnings to a corridor; however, the superelevation may not behave as expected.



The Tipping Point

In some design situations that use superelevation, the crown of the road is not the ideal pivot point. In the following example, you will create a four-lane divided highway that pivots inside the curve rather than at the crowns during superelevation.

1. Open the file `1102_AORAssembly.dwg` (`1102_AORAssembly_METRIC.dwg`).

This drawing contains an assembly that was started for you. Note that a generic link has been placed on the right side of the main assembly marker as a spacer for the subassemblies that you will be adding in the next steps.

2. Open your subassembly tool palette (Ctrl+3 will work) and select the Lanes tab.
3. Select the LaneSuperelevationAOR subassembly.
4. In the Parameters section of the AutoCAD Properties palette, change Side to Right and set Use Superelevation to Right Lane Outside (as shown here).

ADVANCED		-
Parameters		-
Lane Slope	-2.00%	
Lane Width	12.000	
Version	R2013	
Superelevation Axis..	Supported	
Side	Right	
Width	12.000'	
Default Slope	-2.00%	
Pave1 Depth	0.083'	
Pave2 Depth	0.083'	
Base Depth	0.333'	
Sub-base Depth	1.000'	
Use Superelevation	Right Lane Outside	▼
Slope Direction	Away from Crown	
Potential Pivot	Yes	
Inside Point Code	Crown	
Outside Point Code	Edge of Pavement(ETW)	

5. Click the outer circular marker point on the generic link located on the right side to place the subassembly. Press Esc to complete the placement of the lane subassembly.
6. Select the newly placed subassembly.
7. From the Subassembly: LaneSuperelevationAOR contextual tab > Modify Subassembly, click Mirror.
8. Click the outer same marker point as you selected in step 5 on the generic link.

A dialog will appear asking you to confirm that you want to place the mirrored subassembly on the same side. Click OK.

9. Press Esc to deselect the first lane subassembly; then select the newly placed subassembly and

view its AutoCAD properties.


10. Change the Use Superelevation parameter to Right Lane Inside, as shown here.

ADVANCED	
Parameters	
Lane Slope	-2.00%
Lane Width	12.000
Version	R2013
Superelevation Axis of...	Supported
Side	Left
Width	12.000'
Default Slope	-2.00%
Pave1 Depth	0.083'
Pave2 Depth	0.083'
Base Depth	0.333'
Sub-base Depth	1.000'
Use Superelevation	Right Lane Inside
Slope Direction	Away from Crown
Potential Pivot	Yes
Inside Point Code	Crown
Outside Point Code	Edge of Pavement(ETW)

11. Select both of the new LaneSuperelevationAOR assemblies and the generic link. From the Subassemblies contextual tab > Modify Subassembly panel, click Mirror.
12. Click the baseline assembly marker to mirror all three subassemblies to the left side of the assemblies.

Be sure to set the subassembly parameters to the correct superelevation lane and side property. Note that the inside lane must have Use Superelevation set to Left Lane Inside and the outside lane must be set to Left Lane Outside.

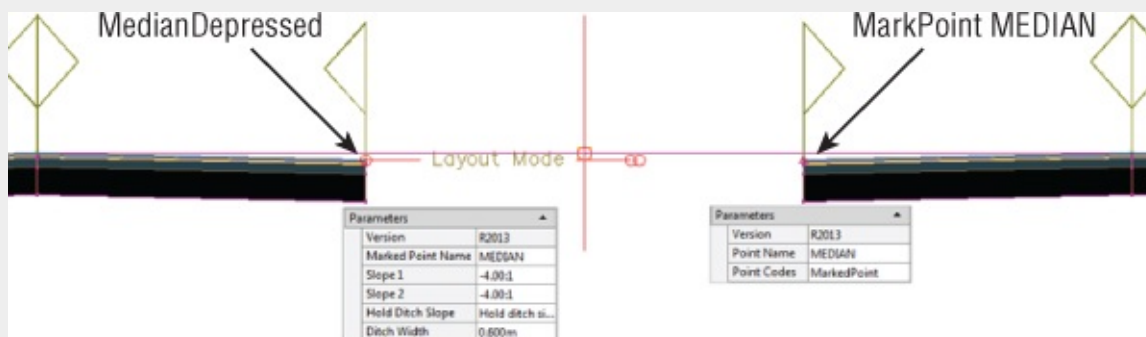13. On the tool palette, switch to the Generic tab. Select the MarkPoint subassembly, change Point Name to **MEDIAN**, and place it by clicking the red circle on the inside right edge of the pavement (as shown next).




14. On the Medians tab, select Median Depressed, and change Marked Point Name to **MEDIAN**.
Note that the Marked Point name is case sensitive and must match the point name exactly or the median will not form correctly.
15. Leave all other parameters at their defaults, and place the median on the inside left of the subassembly as shown in the previous image. Press Esc when complete.
16. As the final step in building this assembly, select both of the original generic link spacers and set the Omit Link property to Yes.

ADVANCED	
Parameters	
SlopeDirection	0
Begin Elevation	0.000
Begin Offset	0.000
End Elevation	0.000
End Offset	0.000
Link Slope	0.000
Version	R2012
Side	*VARIES*
Width	20.000'
Use Superelevation Slo...	None
Slope	0.00%
Point Codes	P2
Link Codes	Top, Datum
Omit Link	Yes

If time permits, add the ShoulderExtendAll subassembly from the Shoulder tab to the outermost edges using the default settings. Press Esc when complete.

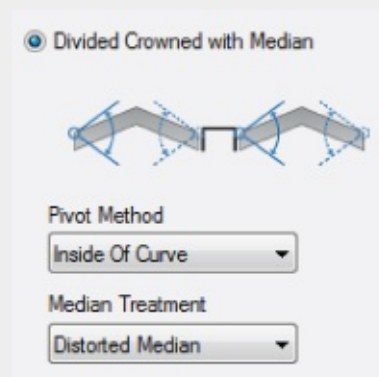17. Select the Route 66 alignment that runs through the plan view of the project (Hint: Zoom out to see it).
18. On the Alignment contextual tab > Modify panel, click Superelevation > Calculate/Edit Superelevation, and click the Calculate Superelevation Now option when notified that no data exists.
19. On the Calculate Superelevation – Roadway Type page, set Roadway Type to Divided Crown With Median.
20. Set the pivot method to Inside Of Curve.
21. Set the median treatment to Distorted Median, and click Next.



22. On the Calculate Superelevation – Lanes page, set the normal lane width to **12' (4 m)** and the normal lane slope to **-2.00%**.
23. Place a check mark next to Symmetric Roadway, and click Next.
24. On the Calculate Superelevation – Shoulder Control page, leave the settings at their defaults, and click Next.
25. On the Calculate Superelevation – Attainment page, set the design criteria file to Autodesk Civil 3D Imperial (2004) Roadway Design Standards.xml (metric users use Autodesk Civil 3D Metric (2004) Roadway Design Standards.xml).

26. Set the superelevation rate table to AASHTO 2004 US Customary eMax 6% (AASHTO 2004 Metric eMax 6%) using the 4 Lane transition length table.

Design criteria file:	C:\ProgramData\Autodesk\C3D 2015\enu\Data\...
Superelevation rate table:	AASHTO 2004 US Customary eMax 6%
Transition length table:	4 Lane
Attainment method:	AASHTO 2004 Crowned Roadway

27. Place a check mark next to Automatically Resolve Overlap, and click Finish.

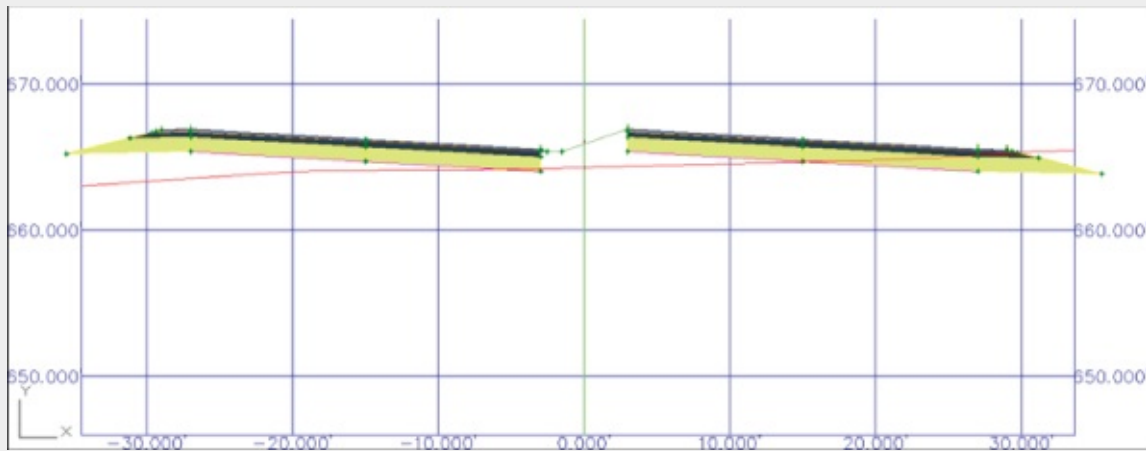
The Panorama palette will pop up displaying the Superelevation Tabular Editor containing the results of your superelevation calculation. Because the Automatically Resolve Overlap option was turned on, no warnings should appear in Panorama.

28. Click the green check mark to dismiss Panorama.

29. In the Prospector tab of Toolspace, expand the Corridors branch, select the corridor Route 66, right-click, and select Rebuild.

30. Select the corridor in plan and enter the Section Editor to examine your corridor. (Hint: Review “Editing Sections” in Chapter 9, “Basic Corridors.”)

You should observe that superelevation is occurring based on your specified pivot point inside the curves. Close the Section Editor.



Check out 1102_AORAssembly_FINISHED.dwg and 1102_AORAssembly_METRIC_FINISHED.dwg to see a complete version of this example.

Applying Superelevation to the Design

Civil 3D takes into account other factors such as curve station locations and assembly geometry. Superelevation information is associated with the alignment but is handled in a separate calculation area. In this section, you will put all the pieces in place that are needed for the software to dynamically apply superelevation or cant to your design.

Start with the Alignment

To begin applying superelevation to the design, select your alignment:

1. Open the 1103_Super .dwg (1103_Super_METRIC .dwg) file, which you can download from this book's web page.
2. Select the USH 10 alignment that already exists in the drawing.
3. From the Alignment contextual tab, select Superelevation ► Calculate/Edit Superelevation.
4. When prompted by the dialog, click Calculate Superelevation Now.
5. On the Calculate Superelevation – Roadway Type page, select the Undivided Crowned radio button.
6. From the Pivot Method drop-down, choose Center Baseline, as shown in [Figure 11.13](#), and click Next.

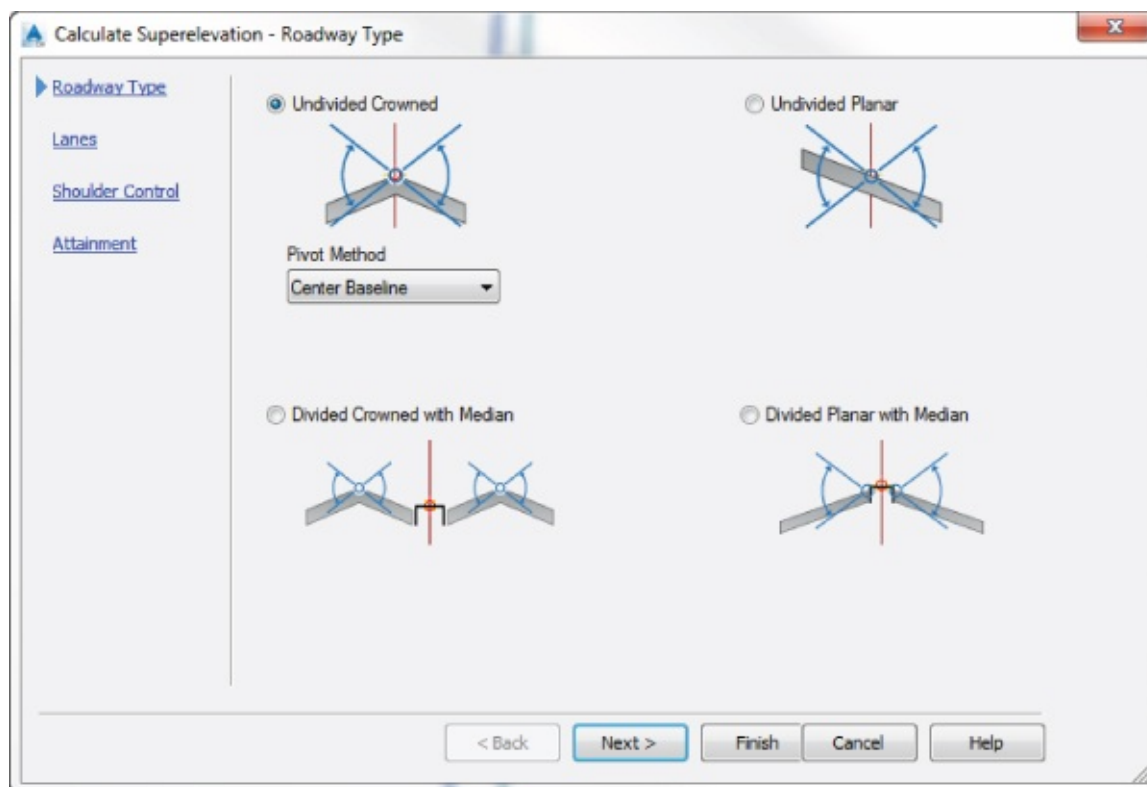


Figure 11.13 Roadway type specification for superelevation

7. On the Calculate Superelevation – Lanes page, verify that the Symmetric Roadway check box is selected.
8. Set Normal Lane Width to **12' (4 m)**, and set Normal Lane Slope to **-2.00%**, as shown in [Figure 11.14](#), and click Next.

Calculate Superelevation - Lanes

Roadway Type

Lanes

Shoulder Control

Attainment

Type: Undivided, Crowned

Pivot: Center Baseline ☒ Symmetric Roadway

Number of lanes left: 1

Number of lanes right: 1

Normal lane width: 12.000'

Normal lane slope: -2.00%

Normal lane width: 12.000'

Normal lane slope: -2.00%

< Back Next > Finish Cancel Help

Figure 11.14 Lane information

9. On the Calculate Superelevation – Shoulder Control page, make sure the Calculate check box is selected on the right side of the page.
10. Only the Outside Edge Shoulders options should be active. Since this is an undivided road, the options for the inside median shoulders are grayed out.
11. Set Normal Shoulder Width to **6' (2 m)**, and set Normal Shoulder Slope to **-5.00%**.
12. For Shoulder Slope Treatment, set the following:
 - Set the Low Side option to Breakover Removal.
 - Set the High Side option to Default Slopes.
 - Place a check mark next to Maximum Shoulder Rollover and set the value to **8.00%**.
 - Your Shoulder Control screen should look like [Figure 11.15](#).

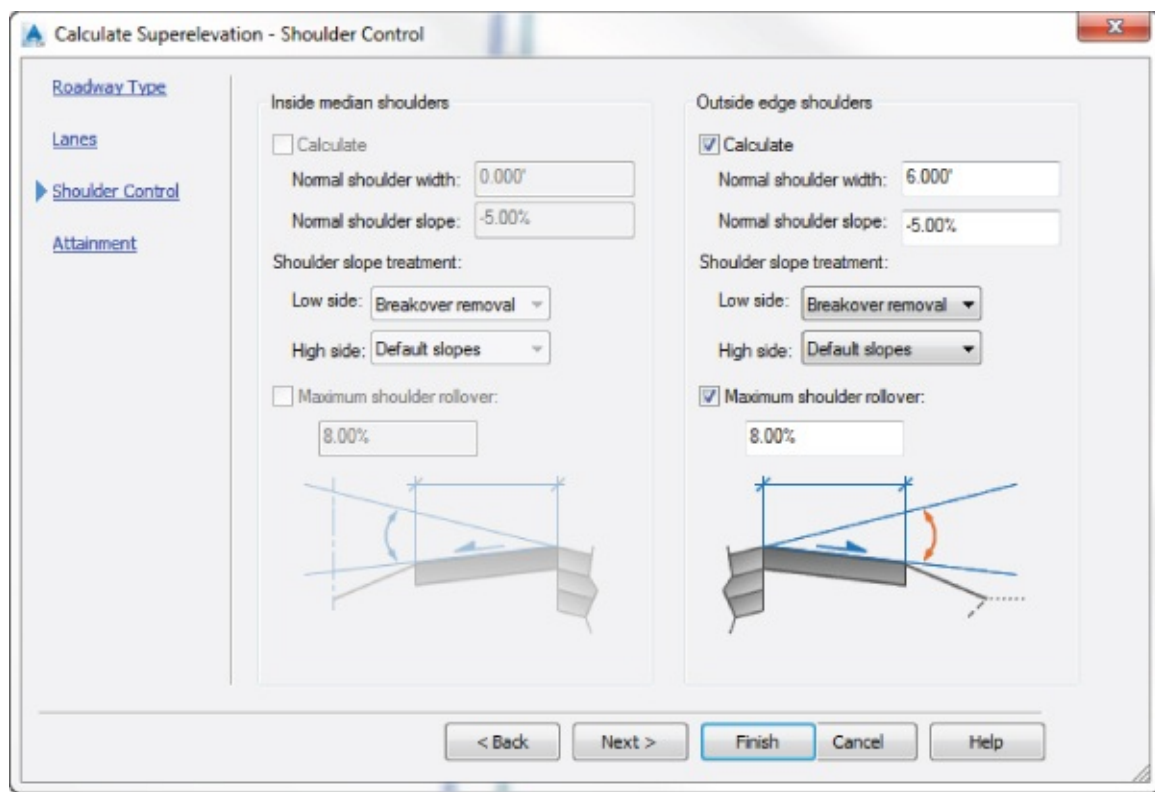


Figure 11.15 Shoulder Control and Breakover Removal parameters

13. Click Next.
14. On the Calculate Superelevation – Attainment page, click the ellipsis button to set the design criteria file to Autodesk Civil 3D Imperial (2004) Roadway Design Standards.xml (Autodesk Civil 3D Metric (2004) Roadway Design Standards.xml).
15. Set the superelevation rate table to AASHTO 2004 US Customary eMax 4% (AASHTO 2004 Metric eMax 4%).
16. Set the transition length table to 2 Lane.
17. Set the Attainment method to AASHTO 2004 Crowned Roadway.
18. Place a check mark next to Apply Curve Smoothing and set Curve Length to **50'** (**20 m**).
19. Leave all other settings at their defaults, as shown in [Figure 11.16](#).

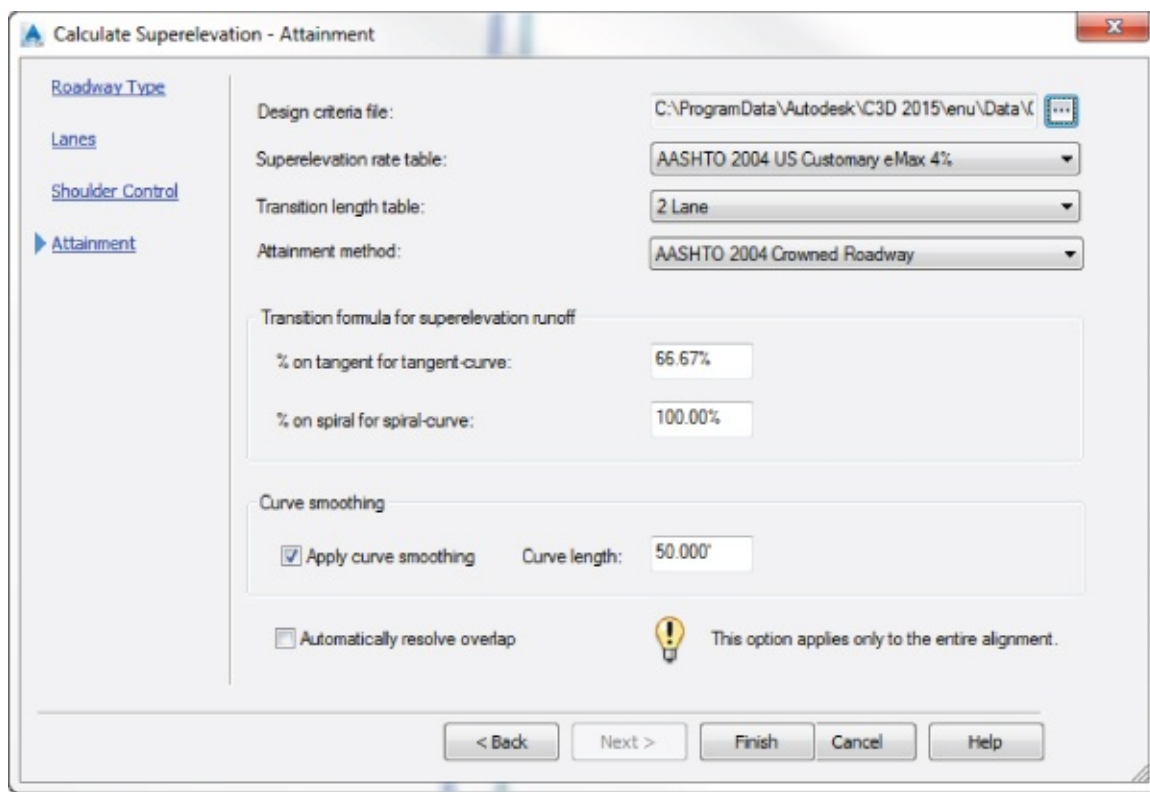


Figure 11.16 Finalizing the superelevation on the Attainment screen

20. Click Finish.

You should now see the Superelevation Tabular Editor appear inside Panorama with the data resulting from the wizard. Examine your alignment; you should now have labels showing the superelevation critical stations created by the wizard.

As you click in the table, you will see helpful glyphs showing you which superelevation station and corresponding curve you are editing, as shown in [Figure 11.17](#).

Superelevation Curve	Start Station	End Station	Length	Overlap	Left Outside Shoulder	Curve Smoothing (L)	Left Outside Lane
Curve.1							
Transition In Region	7+70.97'	9+26.61'	155.643'				
End Normal Shoulder	7+70.97'				-5.00%	50.000	-2.00%
Runout	8+33.38'	8+75.00'	41.613'				
End Normal Crown	8+33.38'				-5.00%	50.000	-2.00%
Level Crown	8+75.00'				-5.00%	50.000	0.00%
Runoff	8+75.00'	9+26.61'	51.612'				
Level Crown	8+75.00'				-5.00%	50.000	0.00%
Begin Curve	9+09.41'				-5.00%	50.000	2.00%
Reverse Crown	9+16.61'				-5.00%	50.000	2.48%
Begin Full Super	9+26.61'				-5.00%	50.000	2.48%
Transition Out Region	12+92.49'	14+48.13'	155.643'				
Runoff	12+92.49'	13+44.10'	51.612'				
End Full Super	12+92.49'				-5.00%	50.000	2.48%
Reverse Crown	13+02.49'				-5.00%	50.000	2.00%
End Curve	13+09.69'						
Level Crown	13+44.10'				-5.00%	50.000	0.00%
Runout	13+44.10'	13+85.71'	41.613'				
Level Crown	13+44.10'				-5.00%	50.000	0.00%
Begin Normal Crown	13+85.71'				-5.00%	50.000	-2.00%
Begin Normal Shoulder	14+48.13'				-5.00%	50.000	-2.00%
Curve.2							
Transition In Region	18+41.93'	20+06.97'	165.045'				
End Normal Shoulder	18+41.93'				-5.00%	50.000	-2.00%

Figure 11.17 Superelevation table with glyphs in the graphic

Compare your work with 1103_Super_FINISHED.dwg or 1103_Super_METRIC_FINISHED.dwg.

Transition Station Overlap

It is not uncommon to have overlap warnings in your superelevation table. You should resolve the transition station overlap before you continue your design.

Overlap occurs when there is not enough room between curves to fully transition out of one curve and back into the next. Transition station overlap will always occur when a reverse curve or compound curve exists in your alignment. As you can see in [Figure 11.18](#), Curve 1 does not complete its transition out until station 9+16.64, but according to the attainment calculations, Curve 2 will begin affecting the shoulder starting at station 5+98.21.

Superelevation Curve	Start Station	End Station	Length	Overlap	Left Outside Should...	Left Outside Lane	Right Outside Lane	Right Outside Shou...
Curve.1								
Transition In Region	1+79.81'	4+20.56'	240.750'					
End Normal Shoulder	1+79.81'				-5.00%	-2.00%	-2.00%	-5.00%
Runout	2+60.06'	3+13.56'	53.500'					
End Normal Crown	2+60.06'				-2.00%	-2.00%	-2.00%	-5.00%
Level Crown	3+13.56'				0.00%	0.00%	-2.00%	-5.00%
Runoff	3+13.56'	4+20.56'	107.000'					
Level Crown	3+13.56'				0.00%	0.00%	-2.00%	-5.00%
Reverse Crown	3+67.06'				2.00%	2.00%	-2.00%	-5.00%
Begin Curve	3+84.89'							
Begin Full Super	4+20.56'				4.00%	4.00%	-4.00%	-5.00%
Transition Out Region	6+75.89'	9+16.64'	240.750'					
Runoff	6+75.89'	7+82.89'	107.000'					
End Full Super	6+75.89'			⚠	4.00%	4.00%	-4.00%	-5.00%
End Curve	7+11.56'			⚠				
Reverse Crown	7+29.39'			⚠	2.00%	2.00%	-2.00%	-5.00%
Level Crown	7+82.89'			⚠	0.00%	0.00%	-2.00%	-5.00%
Runout	7+82.89'	8+36.39'	53.500'					
Level Crown	7+82.89'			⚠	0.00%	0.00%	-2.00%	-5.00%
Begin Normal Crown	8+36.39'			⚠	-2.00%	-2.00%	-2.00%	-5.00%
Begin Normal Shoulder	9+16.64'			⚠	-5.00%	-2.00%	-2.00%	-5.00%
Curve.2								
Transition In Region	5+98.21'	8+38.96'	240.750'					
End Normal Shoulder	5+98.21'			⚠	-5.00%	-2.00%	-2.00%	-5.00%
Runout	6+78.46'	7+31.96'	53.500'					
End Normal Crown	6+78.46'			⚠	-5.00%	-2.00%	-2.00%	-2.00%
Level Crown	7+31.96'			⚠	-5.00%	-2.00%	0.00%	0.00%
Runoff	7+31.96'	8+38.96'	107.000'					
Level Crown	7+31.96'			⚠	-5.00%	-2.00%	0.00%	0.00%
Reverse Crown	7+85.46'			⚠	-5.00%	-2.00%	2.00%	2.00%
Begin Curve	8+03.30'			⚠				
Begin Full Super	8+38.96'			⚠	-5.00%	-4.00%	4.00%	4.00%


Figure 11.18 Superelevation table showing overlap between two curves

You have several options for fixing superelevation overlap:

- You can choose to have Civil 3D rectify the overlap for you.
- You can manually modify the stations in the table.
- You can change the stationing for superelevation by modifying the superelevation view, which we will discuss later in this chapter.

Import or Export Superelevation Data to CSV

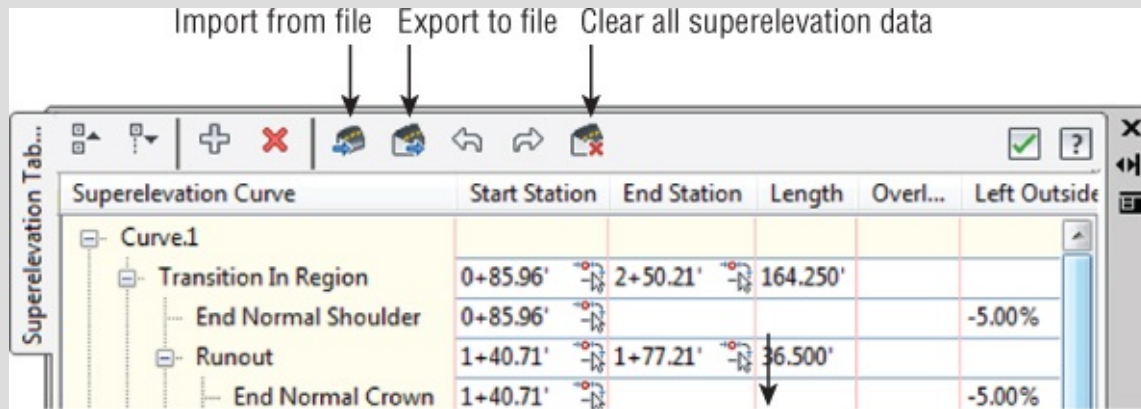You may spend hours getting your superelevation stations to work out correctly. However, it just takes one wrong button click to blow away all your time-consuming edits to the tabular input. To be safe, back up your superelevation tables by exporting them to a file. You'll find the Export Superelevation Data button at the top of the tabular input.



The nice thing about a CSV file is that it can easily be edited in an external spreadsheet program, such as Microsoft Excel. If you choose to modify your superelevation stations outside of Civil 3D, there are a few things to keep in mind:

- You must keep the same number of columns and column names.
- It is OK to add or delete rows.
- Blank shoulder or lane slope fields will be treated as 0.00%. However, if all of your lane and shoulder slope fields are blank, the row will be omitted from the import.
- It is OK to rename the superelevation critical stations.
- If your CSV file contains more superelevation regions in it than the alignment has curves, you must create additional user-defined curves in the Superelevation Curve Manager before importing the data. More information on user-defined curves can be found later in the following section.
- Importing data from a CSV file will override any data for existing stations in the file.

When you need to reimport the superelevation data, it is a best practice to clear any data before clicking Import From File.

To have Civil 3D clear the overlap for you, click the warning symbol that appears in the Superelevation Tabular Editor. Civil 3D resolves overlap by omitting noncritical stations and/or by compressing the transition length between certain stations. In the case of a reverse curve, Civil 3D will pivot the road from full-super to full-super, without transitioning back to normal crown. Be sure to verify that the software has made the update that meets the requirements of your locale.

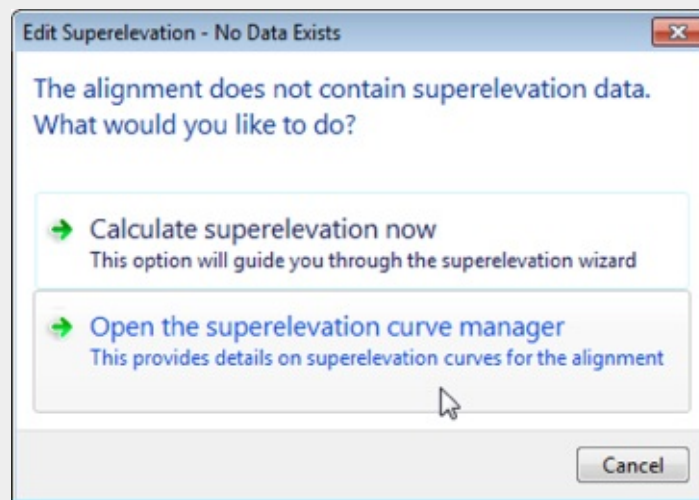


User-Defined Curves: Forcing Superelevation

By default, superelevation stations are calculated per curve. In most situations, the curves on the alignment will correspond to the needed superelevation regions. However, there are several situations where you want to force superelevation to occur on a tangent. In those situations, you can create a user-defined curve.

To create a user-defined curb, select the alignment along which you want to create superelevation. From the Alignment contextual tab > Modify panel, click Superelevation > Calculate/Edit Superelevation.

If your alignment already has curves with superelevation data attached to them, Civil 3D will open the Superelevation Curve Manager palette right away. If no superelevation data exists for the alignment, you will be prompted to either calculate superelevation now or open the Superelevation Curve Manager. If your alignment has no curves, click the Open The Superelevation Curve Manager option.



Once you are in the Superelevation Curve Manager, you will have access to any curves—if they exist. If you are working with an alignment that contains no curves, this palette will be blank.

To create a user-defined curve, click the Create User-Defined Curve button. You will be prompted to select an entity to associate to the user-defined curve.

The entity (or entities) you select must be a tangent segment that does not already have a user-defined curve associated with it. The segment geometry will be used as the Begin Curve and End Curve stations. If you pick more than one entity, they must be adjacent to each other.

After you pick your elements, you will have the ability to add “fake” curve information. If you plan to use Civil 3D to calculate superelevation, you must have a design speed assigned to the alignment. You can specify a radius and curve direction in the Superelevation Curve Manager palette (as shown here) so that the Superelevation Wizard knows which way you intend to tip the road.

Superelevation Curve: << Previous User-Defined.1 Next >>

Toggle real-time pan

Create user-defined curve

Property	Value
Superelevation Curve Details	
Curve Name	User-Defined.1
Curve Definition	User defined
Design Speed	60 mi/h
Radius	1505.00'
Direction	Left
Start Station	0+00.00'
End Station	247+29.69'
Length	24729.69'
Transition In Details	
Entities Before	None
Transition Method	Not calculated
Overlap	Not calculated
Transition Out Details	
Entities After	None
Transition Method	Not calculated
Overlap	Not calculated

Superelevation status
Not Calculated

Superelevation Wizard

Tabular editor...

Recalculate

After a user-defined curve has been assigned a design speed and radius, the Superelevation Wizard can be used to calculate superelevation similar to a traditional, “real” curve.

If you are planning to import all your stations from a CSV file or manually create stations and cross-slopes in the tabular editor, then you may omit design speed and radius.

Superelevation Curve	Start Station	End Station	Length	Overlap	Left Outside Should...	Left Outside Lane	Right Outside Lane	Right Outside Shou...
Transition Out Region	205+77.96'	249+34.78'	4356.82'					
Manual station	205+77.96'				-5.00%		4.00%	4.00%
Runoff	246+94.03'	248+01.03'	107.00'		-5.00%	-4.00%	4.00%	4.00%
End Full Super	246+94.03'							
End Curve	247+29.69'							
Reverse Crown	247+47.53'				-5.00%	-2.00%	2.00%	2.00%
Level Crown	248+01.03'				-5.00%	-2.00%	0.00%	0.00%

As shown in this image, you can manually add superelevation stations by clicking the plus sign in the Superelevation Tabular Editor. Initially, the lane and shoulder slopes will be blank in a manually added station. Use the Superelevation Tabular Editor to rename the special regions and set the slopes as needed.

Calculating Cants for Rail

In the civil engineering industry, the terms *superelevation* and *cant* are used interchangeably. Inside Civil 3D, the terms have distinct meanings. Superelevation tools in Civil 3D are used for roads; the cross-slope changes within a curve are expressed by a percentage. Unlike superelevation, cant applies to railways and is expressed as a difference in height between the outer and inner rails ([Figure 11.19](#)).

Cant Curve	Start Station	End Station	Length	Applied Cant	Equ
Curve.1					
Transition In Region	4+75.44'	8+42.44'	367.000'		
End Level Rail	4+75.44'			0.000"	0.000"
Begin Curve	6+58.94'				2.047"
Begin Full Cant	8+42.44'			0.400"	2.047"
Transition Out Region	13+86.97'	15+22.24'	135.264'		
End Full Cant	13+86.97'			0.400"	2.047"
Begin Level Rail	15+22.24'			0.000"	2.047"
Curve.2					
Transition In Region	15+22.24'	17+91.31'	269.074'		
End Level Rail	15+22.24'			0.000"	0.000"

[Figure 11.19](#) Example cant curve data table

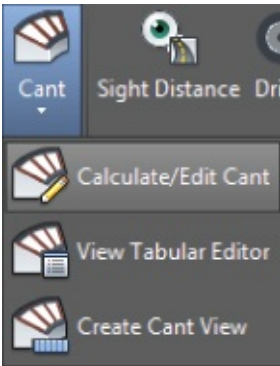
Preparing for Cants

In order to work with cant, the following must be in place:

Alignment Type Set to Rail Normally, you would set the alignment type when you first define the alignment. If you forget to set this initially, you can change it at any time in the Alignment properties on the Information tab.

Alignment Design Speed Like motorways and superelevation, rail requires a design speed in order to apply cant. Cant design standards are provided with the software and can be edited in the same manner as other design criteria files.

Cant Calculation Like superelevation, cant is attached to an alignment and its curves. As shown in [Figure 11.20](#), the icon's location in the Alignment contextual tab should be reminiscent of the superelevation button.



[Figure 11.20](#) Accessing the Cant Calculation tools from the Rail Alignment contextual tab

Rail Assembly When working with an assembly for rail, the type must be set to Railway. You can set this on assembly creation or in the Assembly properties after the fact. There is one subassembly that is purpose-built for cant, the RailSingle subassembly, shown in [Figure 11.21](#). If you are working with a drawing created in a release prior to 2013, make sure you replace the old assemblies with this new rail subassembly to ensure cant takes place. You can verify the version by checking Advanced Parameters > Version in the AutoCAD Properties palette.

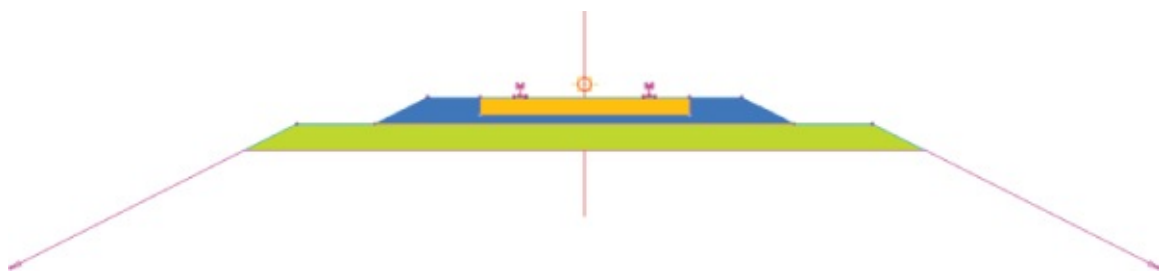


Figure 11.21 The RailSingle subassembly

Creating a Rail Assembly

You will find the RailSingle subassembly in the Bridge And Rail tab of the tool palettes. The following exercise will walk you through creating a typical rail bed design:

1. Open the drawing 1104_Rail.dwg (1104_Rail_METRIC.dwg), which you can download from this book's website.

This drawing contains an alignment and design profile.

2. On the Home tab > Create Design panel, choose Assembly > Create Assembly.
3. Name the assembly **Rail w Service Road**.
4. Set Assembly Type to Railway, and click OK.
5. Click to place the assembly anywhere in the graphic.
6. Open the subassembly tool palettes if they are not already open. In the subassembly tool palettes, locate the Bridge And Rail palette, and click RailSingle. In the Properties palette, make the following changes:
 - a. Set the subballast width to **20' (6 m)**.
 - b. Set the subballast side slope to **0.001:1**.

Leave all other parameters at their defaults.

7. Click the assembly to place the RailSingle subassembly.
8. Switch to the Basic tab of the subassembly tool palettes, and click GenericPavementStructure.

This will be your service road, constructed out of the same material as the subballast.

9. Enter the following data into the Properties palette, remembering that the codes are case sensitive:
 - a. Set Side to **Left**.
 - b. Set Width to **8' (2.5 m)**.
 - c. Set Depth to **1' (0.3 m)**.
 - d. Set DeflectOuterVerticalFace to **Yes**.
 - e. Set Outer Edge Slope to **2.00:1**.
 - f. Set TopLink Codes to **Top**, and set BottomLink Codes to **Datum**.
 - g. Set Shape Codes to Subballast.

10. When your parameters resemble [Figure 11.22](#), click to place the GenericPavementStructure to the left

of the subballast rail subassembly.

ADVANCED		-
Parameters		-
BottomWidth		12.670
CrossSlope		-0.020
TopWidth		12.670
Version		R2013
Superelevation Axis of Rotation		Supported
Side		Left
Width		8.000'
Shift Width		0.670'
Default Cross Slope		-2.00%
Use Superelevation Slope		No
Slope Direction		Away from Crown
Depth		1.000'
DeflectOuterVerticalFace		Yes
Outer Edge Slope		2.00:1
InsideTop Point Codes		None
OutsideTop Point Codes		None
OutsideBottom Point Codes		None
InsideBottom Point Codes		None
TopLink Codes		Top
BottomLink Codes		Datum
OutsideLink Codes		None
InsideLink Codes		None
Shape Codes		Subballast

Figure 11.22 Advanced Parameters for service road

- 1. Remain in the GenericPavementStructure tool, but change the width to **0.1’ (0.03 m)** and the side to Right.
 - 2. Click to place the structure on the right side of the rail subassembly.
 - 3. Switch to the Generic palette, and click LinkSlopeToSurface.
 - 4. Set Slope to **-50** and click the “tip” of the generic pavement structure on both sides of the assembly.
- Your completed assembly will look like [Figure 11.23](#).

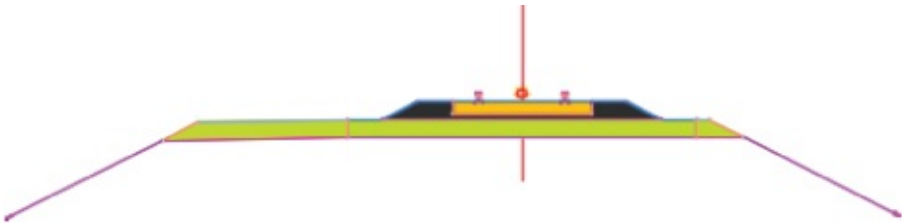


Figure 11.23 Your completed rail assembly

- 5. Save and close the drawing.

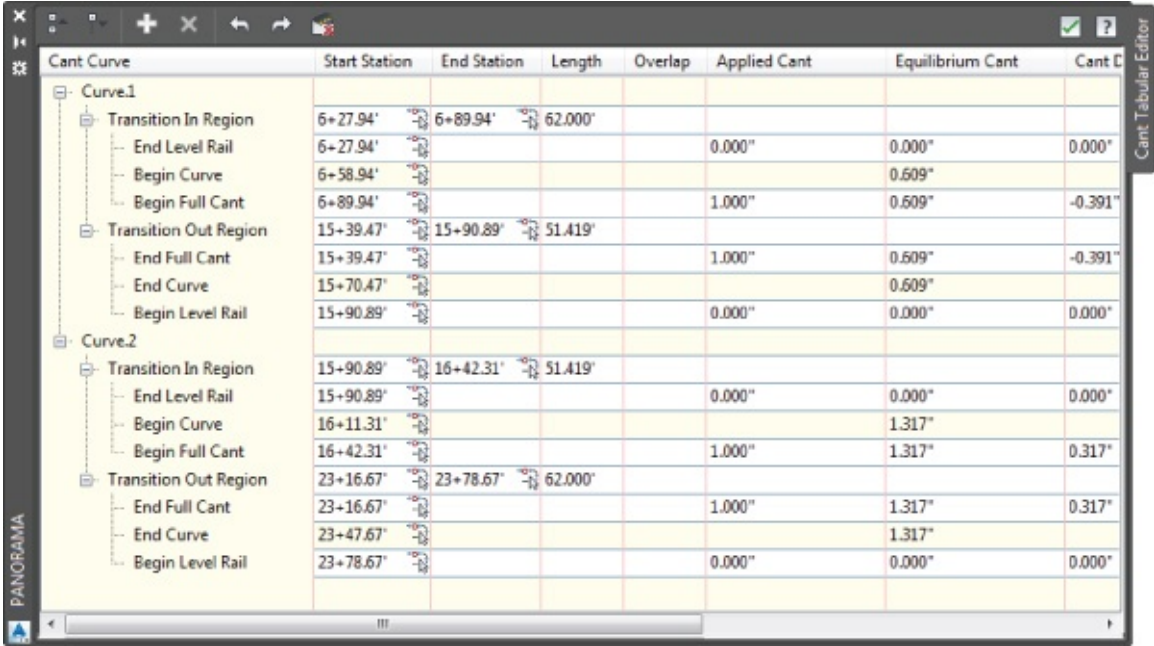
Compare your work with 1104_Rail_FINISHED.dwg or 1104_Rail_METRIC_FINISHED.dwg to see how you fared.

Applying Cant to the Alignment

Like superelevation in a roadway alignment, cant is related to a rail alignment. The following exercise

will walk you through applying cant to the alignment. You should experience a distinct feeling of déjà-vu if you completed earlier exercises involving applying superelevation to the alignment.

1. Open the drawing 1105_RailAlignment.dwg (1105_RailAlignment_METRIC.dwg), which you can download from this book's website.
2. This drawing contains a corridor with rail; your task is to update the alignment to apply cant. Observe the section views in the drawing (shown in the lower modelspace viewport in the file). Each is created at a location on the curve that should have cant applied. However, these views show flat rails.
3. Select the alignment from the upper viewport. From the Rail Alignment contextual tab > Modify panel, click Cant > Calculate/Edit Cant.
4. Click Calculate Cant Now.
5. Keep the pivot method as Low Side Rail, and click Next.
6. Place a check mark next to Automatically Resolve Overlap.
7. Set the Applied Cant Table setting to Freight Train Applied Cant Table (metric users, use Mixed Passenger And Freight Cant).
8. Leave all other settings at their defaults, and click Finish.
9. Panorama opens showing the Cant Tabular Editor, as shown in [Figure 11.24](#).



Cant Curve	Start Station	End Station	Length	Overlap	Applied Cant	Equilibrium Cant	Cant D
Curve.1							
Transition In Region	6+27.94'	6+89.94'	62.000'				
End Level Rail	6+27.94'				0.000"	0.000"	0.000"
Begin Curve	6+58.94'					0.609"	
Begin Full Cant	6+89.94'				1.000"	0.609"	-0.391"
Transition Out Region	15+39.47'	15+90.89'	51.419'				
End Full Cant	15+39.47'				1.000"	0.609"	-0.391"
End Curve	15+70.47'					0.609"	
Begin Level Rail	15+90.89'				0.000"	0.000"	0.000"
Curve.2							
Transition In Region	15+90.89'	16+42.31'	51.419'				
End Level Rail	15+90.89'				0.000"	0.000"	0.000"
Begin Curve	16+11.31'					1.317"	
Begin Full Cant	16+42.31'				1.000"	1.317"	0.317"
Transition Out Region	23+16.67'	23+78.67'	62.000'				
End Full Cant	23+16.67'				1.000"	1.317"	0.317"
End Curve	23+47.67'					1.317"	
Begin Level Rail	23+78.67'				0.000"	0.000"	0.000"

Figure 11.24 The Cant Tabular Editor

10. In Prospector, right-click and rebuild the Hiawatha corridor.
11. Save and close the drawing.
12. You should observe in the lower viewport that your section views show the cant applied to the design. Check your design against 1105_RailAlignment_FINISHED.dwg or 1105_RailAlignment_METRIC_FINISHED.dwg if desired.

Superelevation and Cant Views

Superelevation and cant views are a graphic representation of the roadway or rail superelevation. Grip

edits to the graphical view will also edit the superelevation stations. The view itself is not intended for plotting. The superelevation view plots station against lane slope to form a graph of the left and right edges of the pavement.

In the following exercise, you will create a superelevation view:

1. Open the drawing 1106_SuperView.dwg (1106_SuperView_METRIC.dwg), which you can download from this book's website.
2. The alignment in this file already has superelevation calculated for it. Your task is to create the superelevation view.
3. Select the Route 66 alignment by clicking it in the graphic.
4. From the Alignment contextual tab > Modify panel, click Superelevation > Create Superelevation View, as shown in [Figure 11.25](#).

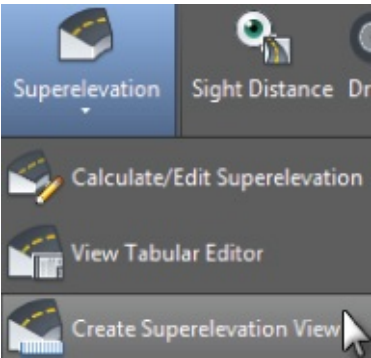


Figure 11.25 Creating a superelevation view

5. In the Create Superelevation View dialog, set the colors for the lane and shoulder slopes as shown in [Figure 11.26](#) by double-clicking the ByBlock field and picking the colors indicated.


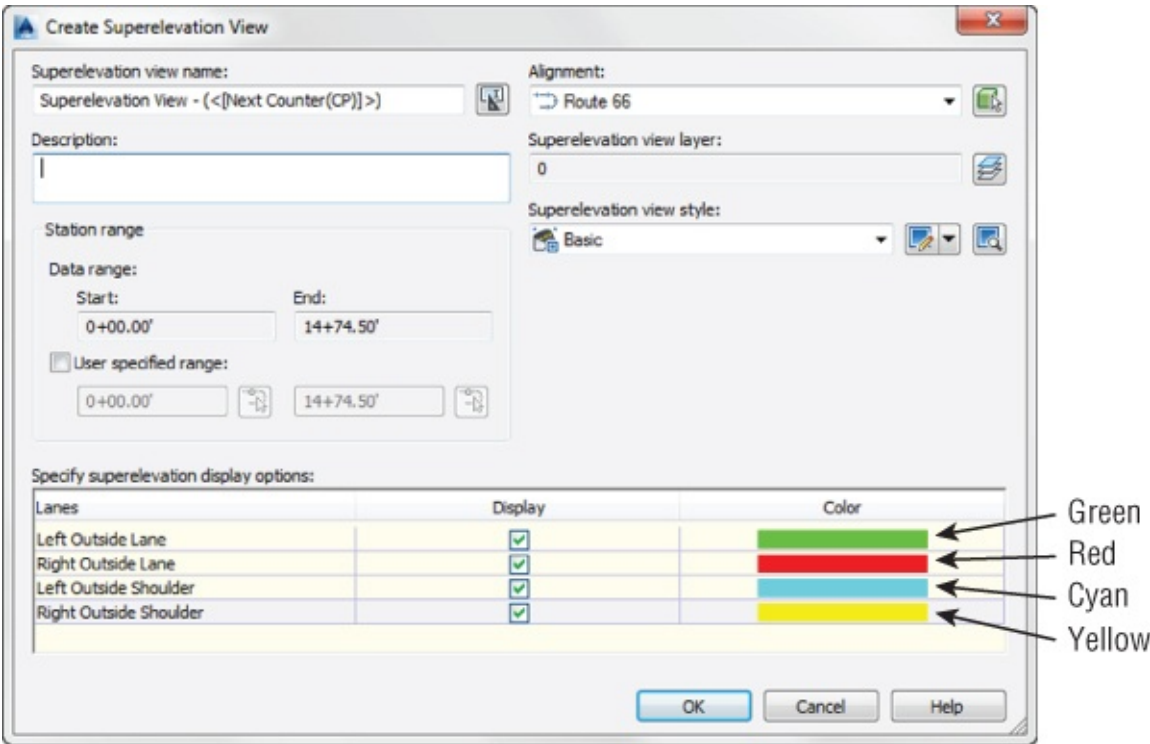


Figure 11.26 Set colors for different assembly components to easily differentiate them in the superelevation view.

6. Click OK and then click in the graphic to place the superelevation view. Your result should look like

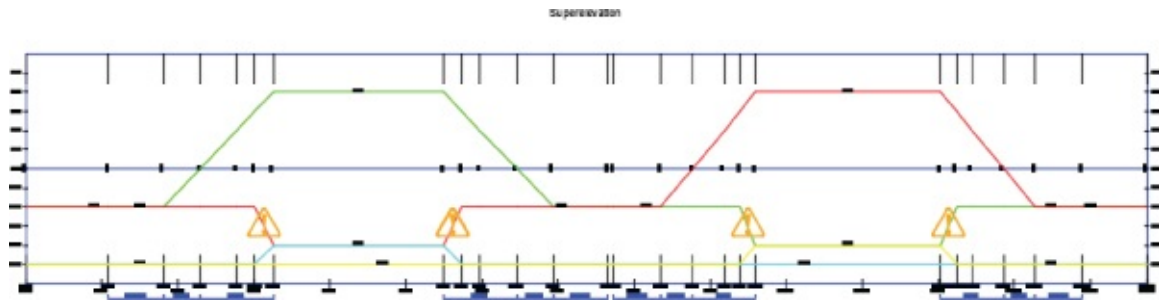[Figure 11.27.](#)



[Figure 11.27](#) The superelevation view for the Route 66 alignment

7. Save the file for use in the next exercise.

At first glance, the superelevation view may seem difficult to read, but with a little explanation it can shed a lot of light on what is going on with your lane and shoulder slopes. The superelevation graphic plots the station value against the percent cross-slope of each edge of pavement and edge of shoulder. The upper line shows the behavior of the right edge of the pavement, and the lower line shows the left edge of the pavement.

Where no superelevation is applied, the graph data for the lanes remains at -2% while the shoulders are shown at their default cross-slope of -5%. As the assembly twists into position during superelevation, the distances between the lines become greater as the right edge slopes up to a maximum superelevation of 4%.

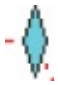




There are a few more observations you can make about your superelevation view. No overlap exists between the two curves' superelevation data. You can tell this by observing the center portion of the graph; the superelevation lines go back to the default cross-slope. The very astute observer can ascertain by looking at this graph that a maximum breakover slope of 8% was used on the shoulder. How can you tell? By seeing that when the lanes are in max super (i.e., the lane is at +4% slope), the shoulder slope jumps up to -4%.

Using a Superelevation View to Edit Data

Next, you will use the superelevation view to edit superelevation data. Editing superelevation data by the superelevation view is an alternative to editing the data in tabular form, as you learned about earlier.

The diamond-shaped grips can be slid in one axis to modify stationing (the horizontally oriented grips) or slope (the vertically oriented grips). The rectangular grip can be moved to reduce the maximum lane slope when it is in a full-super state, as shown in [Table 11.1](#).

Table 11.1 Superelevation view grips

Superelevation View Symbol	Meaning
	Grip (blue) is at a superelevation critical station and a grade break occurs at that station. Vertically oriented grips can be moved up or down to change the slopes associated with them.
	Grip is at a superelevation station. Horizontally oriented grips change the value of superelevation stations.
	Grip will appear at locations of constant slope. These can be moved up or down to change the superelevation cross-slope.
	Grip (gray) is at a superelevation critical station, but no grade breaks occur at the location. Vertically oriented grips can be moved up or down to change the slopes associated with them.
	The plus sign next to any grip indicates that more than one item is the same slope at that station.

In the following exercise, you will use the superelevation view to remove the normal crown area in the middle of the alignment. In other words, you will force the curves to transition directly from one to the other. You will also adjust the rate of maximum superelevation.

1. Continue working in the drawing 1106_SupervView.dwg (1106_SupervView_METRIC.dwg). You need to have completed the previous exercise before continuing.
2. Isolate the right outside lane line in the superelevation view by holding down Ctrl as you click the red line. (Hint: If you are not sure which line represents the various superelevation slopes, pause your cursor over the line to get a tooltip showing the line's information.)
3. Pause your cursor (without clicking) over the blue grip at station 5+73.47 (0+175.06 in the metric drawing).
4. Select Remove Grade Break from the grip menu, as shown in [Figure 11.28](#). Press Esc after the grip is removed.

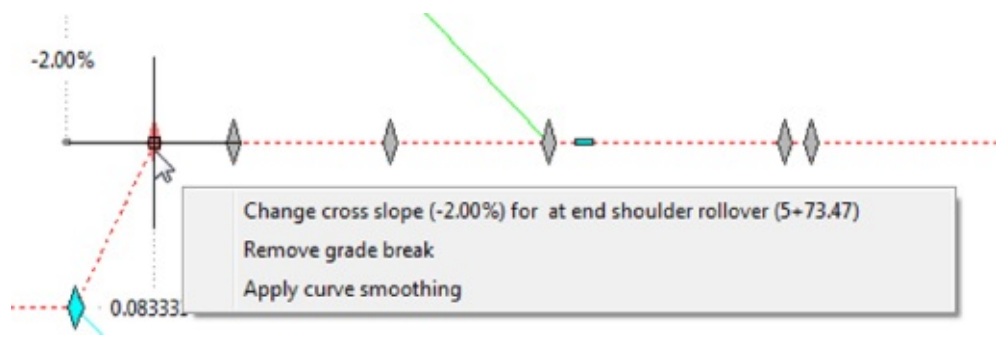


Figure 11.28 The grip menu at the superelevation critical station

5. Repeat steps 3 and 4 to remove the grade break at 8+35.56 (0+258.53 in the metric drawing).

6. Press Esc to clear your selection.
7. Hold down Ctrl and select the green line representing the left outside lane.
8. Using the same technique as before, remove the grade break at stations 6+93.47 (0+207.56 in the metric drawing) and 9+39.31 (0+286.03 in the metric drawing). Press Esc to clear the selection when complete.
9. Turn on dynamic input (F12 on your keyboard) if it is not already on.
10. Click your superelevation view to select it. All of the grips should be available.
11. Click the flat blue grip in the first left outside shoulder region just after station 1+09.41 (0+039.60 in the metric drawing). The grip will be associated with the cyan line.
12. In the dynamic input box, key-in **-4.5**, as shown in [Figure 11.29](#), and then press Enter.

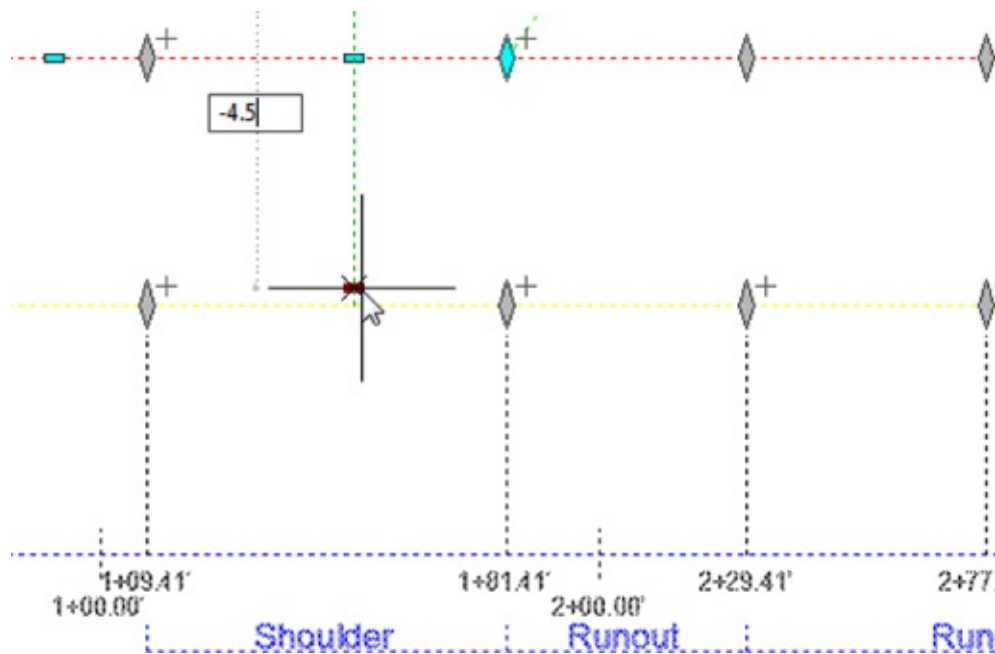


Figure 11.29 Changing the slope using grips and dynamic input

13. The shoulder slope has been changed slightly to match existing conditions.
14. Save the file.
15. Compare your work to 1106_SuperView_FINISHED.dwg or 1106_SuperView_METRIC_FINISHED.dwg if desired.

The Bottom Line

Add superelevation to an alignment. Civil 3D has convenient and flexible tools that will apply safe, correct superelevation to an alignment curve.

Master It Open the MasterIt1101.dwg (MasterIt1101_METRIC.dwg) file, which you can download from www.sybex.com/go/masteringcivil3d2015. Verify that the design speed of the road is 20 miles per hour (35 km per hour) and apply superelevation to the entire length of the alignment. Use AASHTO 2004 design criteria with an eMax of 6% 2-Lane. Use the option to automatically resolve overlap. For the remainder of the options, use the default settings unless otherwise directed.

Create a superelevation assembly. For superelevation to happen, you need to have an assembly that is capable of superelevation.

Master It Continue working in `MasterIt1101.dwg` (`MasterIt1101_METRIC.dwg`). You must have completed the previous exercise before starting this one. Create an assembly similar to the one in the top image shown earlier in the chapter in [Figure 11.10](#). Set each lane to be **14'** (4.5 m) wide and each shoulder to be **6'** (2 m) wide. Leave all other options at their defaults. If time permits, build a corridor based on the alignment and assembly.

Create a rail corridor with cant. Cant tools allow users to create corridors that meet design criteria specific to rail needs.

Master It In the drawing `MasterIt1102.dwg` (`MasterIt1102_METRIC.dwg`), create a Railway assembly with the `RailSingle` subassembly using the default parameters for width and depth. Add a `LinkSlopeToSurface` generic link with 50 percent slope to each side. Add cant to the alignment in the drawing using the default settings for attainment. Create a corridor from these pieces.

Create a superelevation view. Superelevation views are a great place to get a handle on what is going on in your roadway design. You can visually check the geometry as well as make changes to the design.

Master It Open the drawing `MasterIt1103.dwg` (`MasterIt1103_METRIC.dwg`). Create a superelevation view for the alignment. Show only the left and right outside lanes as blue and red, respectively.

Chapter 12

Cross Sections and Mass Haul

Cross sections are used in the Autodesk® AutoCAD® Civil 3D® program to allow the user to have a graphic confirmation of design intent as well as to calculate the quantities of materials used in a design. All that is needed for section creation is an alignment and a surface. Other objects, such as pipes, structures, and corridor components, can be sampled in a sample line group, which is used to create the graphical section displayed in a section view. These section views and sections remain dynamic throughout the design process, reflecting any changes made to the sampled information. The result is a plot-worthy set of section views and accurate end area volume information.

In this chapter, you will learn to

- Create sample lines
- Create section views
- Define and compute materials
- Generate volume reports

Section Workflow

When the time comes that you wish to see how the information along your alignment will appear plotted, you can create *sample lines*. If your goal is to show your completed design, at this point you should have a completed corridor, corridor top surface, and corridor datum surface.

Comparing Sample Lines and Frequency Lines

Sample lines are created at any stations where you wish to create a *section view*. Sample lines are also used to compute end area volumes.

A common point of confusion with new users is the difference between *frequency lines* and *sample lines*. [Table 12.1](#) explains the differences.

Table 12.1 Sample lines vs. frequency lines

Sample lines & section views	Frequency lines & Section Editor
Sample lines can be created without a corridor present (e.g., when you wish to see existing surface sections along the alignment).	Frequency lines are only part of a corridor.
Sample lines occur at any station where a section view or end area is needed.	Frequency lines occur anywhere the design needs to be calculated or modified (e.g., at certain station intervals, a driveway).
Sample lines are used for end area volume computation.	Frequency lines are used to apply assembly calculations to the design (e.g., locating slope-intercept).
Sample lines can be skewed at an angle other than 90° from the baseline.	Frequency lines are always perpendicular to the baseline.
Sample line swath width is usually uniform and dependent on user plotting needs.	Frequency lines' length from baseline depends on assembly and will vary from station to station.
Section views are read-only reflections of the design.	Design can be modified in the Section Editor at each frequency line.
Section views are readily adapted to plotting.	Plotting should never occur from the Section Editor.

When you create your sample line group, you will have the option to sample any surface in your drawing, including corridor surfaces, the corridor assembly itself, and pipes. The sections are then sampled along the alignment with the left and right *swath widths* specified and at the intervals specified. After you create sample lines, you can create section views or define materials for end area volume calculations.

Creating Sample Lines

A *sample line* is a powerful tool needed for both section view creation and end area material computations. Sample lines are created in batches and stored in *sample line groups*. A sample line group is always associated with an alignment and can be found under the associated alignment in Prospector, as shown in [Figure 12.1](#).

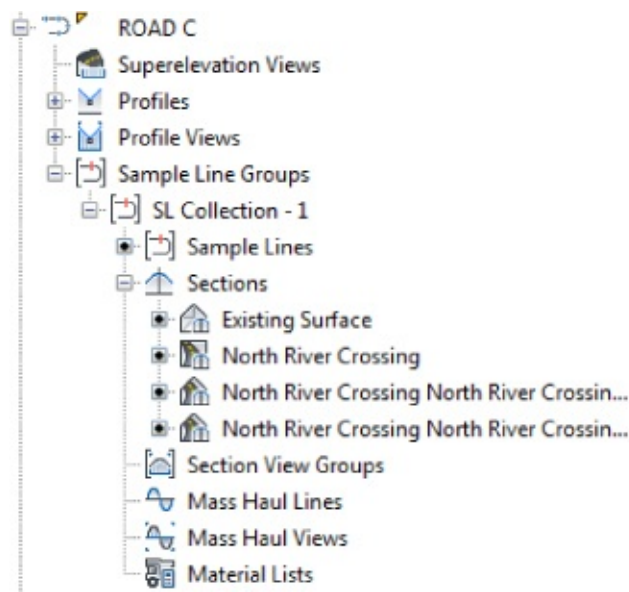


Figure 12.1 A view of Prospector; sample lines are stored in sample line groups and are dependent on an alignment.

You can also see in [Figure 12.1](#) that quite a few additional items are dependent on sample lines, such as *sections*, *section view groups*, *mass haul lines*, *mass haul views*, and *material lists*. If you click a sample line, you will see that it has three types of grips, as shown in [Figure 12.2](#).

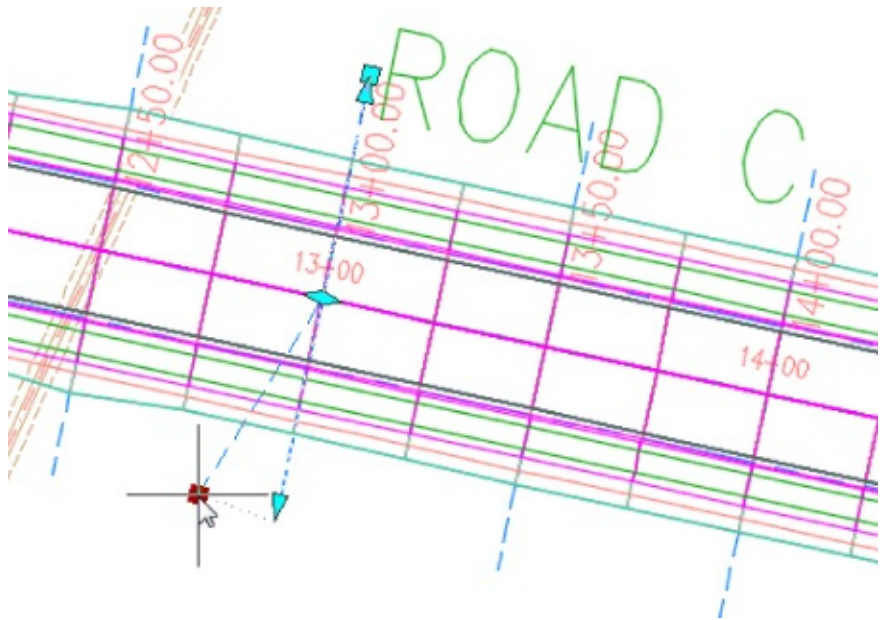


Figure 12.2 The three grips on a typical sample line

The grips are intended for changes to a sample line that cannot be accomplished through the sample line group properties. The diamond-shaped grip at the alignment location will allow you to slide the sample line to a different station. The triangular grips at the ends of a sample line allow you to extend the sample line swath width while maintaining its angle in relation to the alignment. The square grips on the sample line will allow you to change the length and angle of the sample line. If you have used the square grip to skew a sample line but wish to return it to its original perpendicular state, select the sample line, right-click with the mouse, and then click *Make Orthogonal* from the menu, as shown in [Figure 12.3](#). Note that this command is available only from the context menu, not in the ribbon tab.

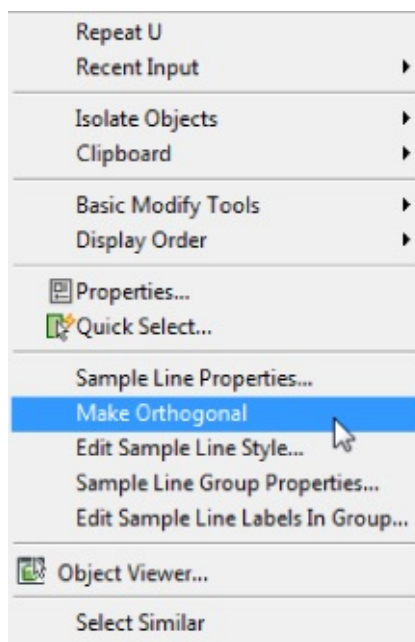


Figure 12.3 Removing the skew with the Make Orthogonal command

To create a sample line group, change to the Home tab > Profile & Section Views panel and choose Sample Lines. After you select the appropriate alignment, the Create Sample Line Group dialog, shown in [Figure 12.4](#), will appear. You should name the sample line group and verify the sample line and label styles.

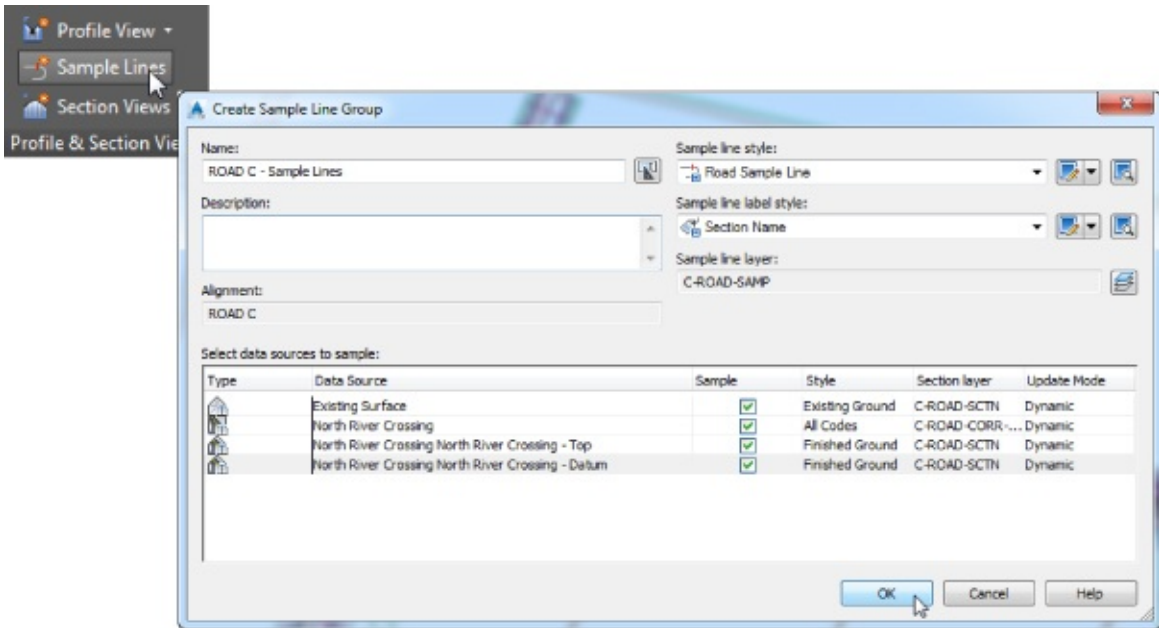


Figure 12.4 Click the Sample Lines icon to open the Create Sample Line Group dialog.

Every source object that is available will be displayed at the bottom of this box. If you wish to omit specific data from the section view, you can clear the check box. Set the applicable style for each item by clicking in the column to the right of the object. The section layer should be preset as specified in your template Object Layers settings.

Once you've selected the sample data and clicked OK, the Sample Line Tools toolbar that shows in the background will become active ([Figure 12.5](#)).

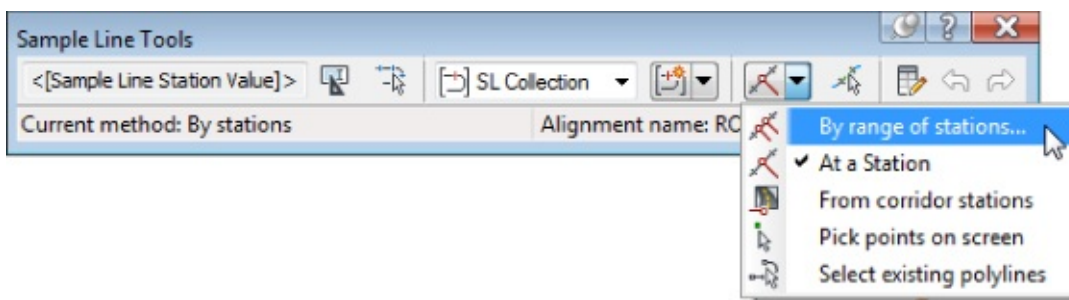


Figure 12.5 From the Sample Line Tools toolbar, choose By Range Of Stations.

The By Range Of Stations option is used most often. You can use At A Station to create one sample line at a specific station. From Corridor Stations will insert a sample line at the same locations as corridor frequency stations. Pick Points On Screen allows you to pick any two (or more) points to define a sample line. This option can be useful in special situations, such as sampling a pipe on a skew or cross sections for drainage area calculations. The last option, Select Existing Polygons, lets you define sample lines from existing polygons. Like Pick Points On Screen, this tool is useful in the case of cross sections for drainage area calculations.

To define sample lines, you need to specify a few settings. [Figure 12.6](#) shows these settings in the Create Sample Lines - By Station Range dialog.

Station Range Station Range controls where on your alignment sample lines are created. By default, the dialog picks up the start and end station of the alignment. Change the station range by changing From Alignment Start or To Alignment End to False and setting the desired stations.

Left/Right Swath Width Swath width is the offset from the alignment along which you create sample lines. When using sample lines for end area volume calculations, be sure that the swath width is large enough to encompass the design but not so large that they overlap in curve areas. You can change the Snap To An Alignment option to True if you wish to force your sample lines to stop at an alignment that is not a constant offset from the centerline.

Sampling Increments Sampling Increments allows you to choose the interval at which sample lines are created. Notice that you can control the sample line interval separately along tangents, curves, and spirals.

Additional Sample Controls Additional Sample Controls adds a sample line at the beginning, end, and other special stations, such as horizontal geometry (PC, PT, and so on) and superelevation critical stations.

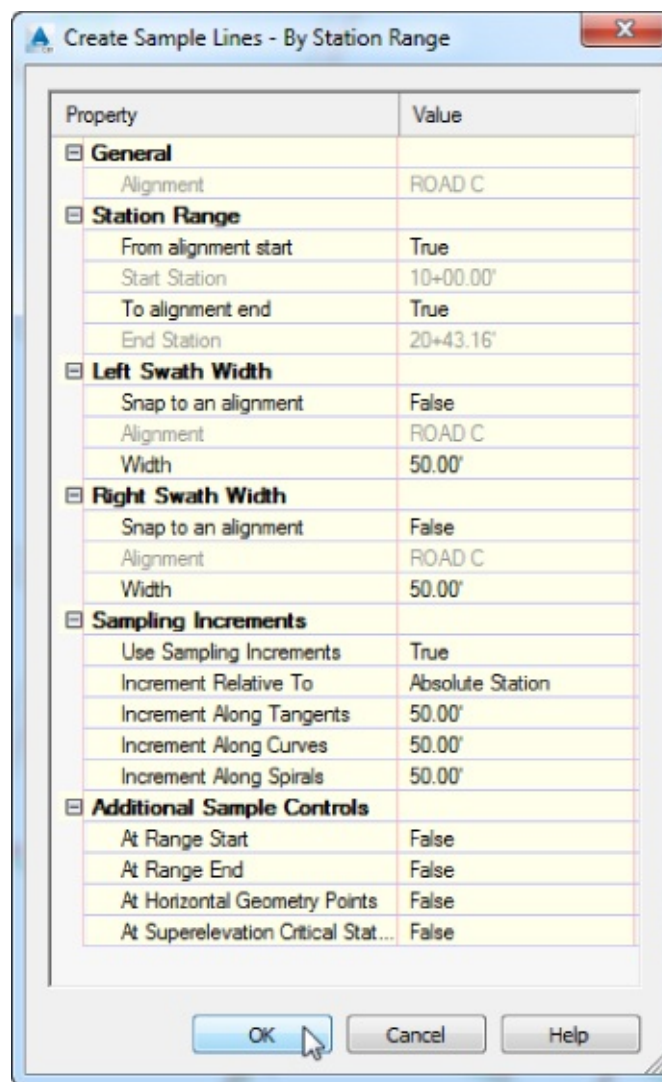


Figure 12.6 Create Sample Lines – By Station Range dialog

Certification Objective

In the following exercise, you'll create sample lines for ROAD C alignment:

1. Open the 1201_SampleLines.dwg (1201_SampleLines_METRIC.dwg) file, which you can download from this book's web page at www.sybex.com/go/masteringcivil3d2015.



2. From the Home tab > Profile & Section Views panel, choose Sample Lines.

3. At the Select an alignment, <or press enter key to select from list>: prompt, press ↵ to display the Select Alignment dialog.


4. Select the ROAD C alignment and click OK.

The Create Sample Line Group dialog opens.

5. In the Create Sample Line Group dialog, follow these steps:
 - a. Name the group **ROAD C - Sample Lines**.
 - b. Set Existing Surface to the Existing Ground style, if not already set, by selecting that style from the Style column. (Hint: The first click will activate the cell, and the second click will give you the list of styles.)
 - c. Set the style for both the Top and Datum corridor surfaces to Finished Ground.

The column is too narrow to view the full names of the items, so to see the name of the item, pause your cursor over the name or expand the column.

d. Set the corridor North River Crossing style to All Codes.

6. Leave the default settings for Sample Line Style and Sample Line Label Style.
7. When your dialog looks similar to [Figure 12.4](#) (your sampled items may be listed in a different order), click OK.
8.  On the Sample Line Tools toolbar, click the Sample Line Creation Methods drop-down arrow and then choose By Range Of Stations.
9. In the Create Sample Lines – By Station Range dialog, leave the swath widths and sampling increments at their defaults (this will be 50.00' for Imperial units and 20.00 m for metric units).
10. Make sure that both the At Range Start and At Range End options are set to False, as shown earlier in [Figure 12.6](#).
11. Click OK, and press \leftarrow to end the command.
12. If you receive a Panorama view telling you that your corridor is out of date and may require rebuilding, dismiss it by clicking the green check box.

 
You should now have dashed lines at even station intervals; these are your new sample lines.

13. Save the drawing for use in the next exercise.

Check your completed drawings at this stage against 1201_SampleLines_A.dwg or 1201_SampleLines_A_METRIC.dwg if desired.


Editing the Swath Width of a Sample Line Group

There may come a time when you need to show information outside the limits of your section views or not show as much information. To edit the width of a section view, you will have to change the swath width of a sample line group. These sample lines can be edited manually on an individual basis, or you can edit the entire group at once.



Sample Line and Section View Words of Wisdom

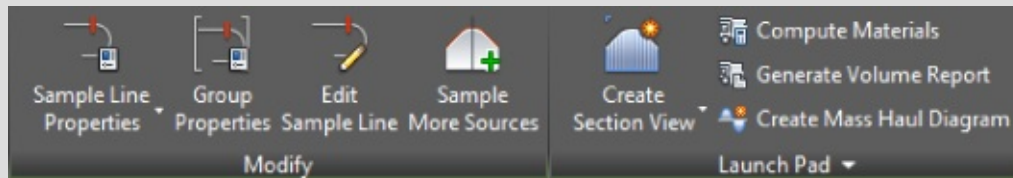
It is extremely rare to encounter situations where you need to touch each sample line or section view individually. From the contextual tab, select a sample line or section view to access many tools that will save time (and your sanity).



You Want to Change All the Sample Line Lengths

To change many swath widths at once, use this process:

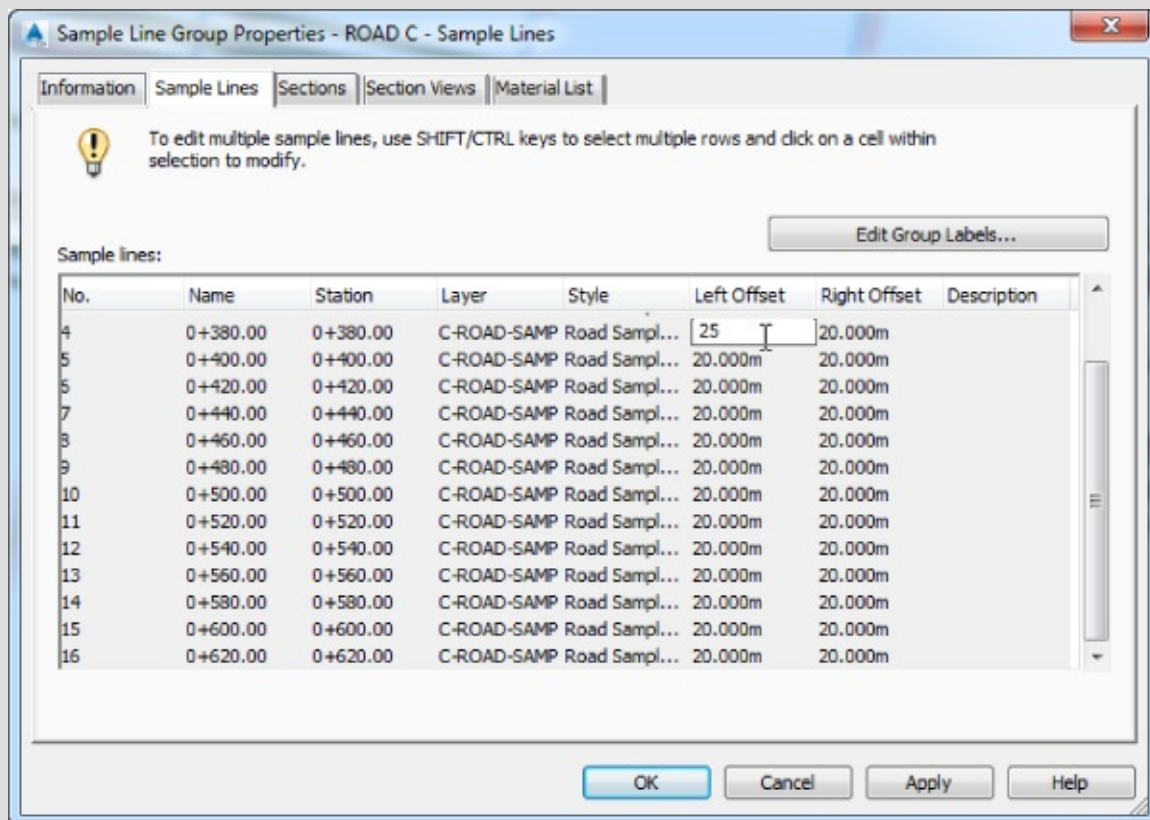1. Click the sample line contextual tab > Modify panel > Group Properties icon to open the Sample Line Group Properties dialog; then switch to the Sample Lines tab.



2. Select the first station of the range you wish to change and hold down Shift as you click the last row. All the stations in between will be selected as well.
3. Click the offset distance to change the swath widths as desired. Upon entering the desired value, all the selected offsets will reflect that value.

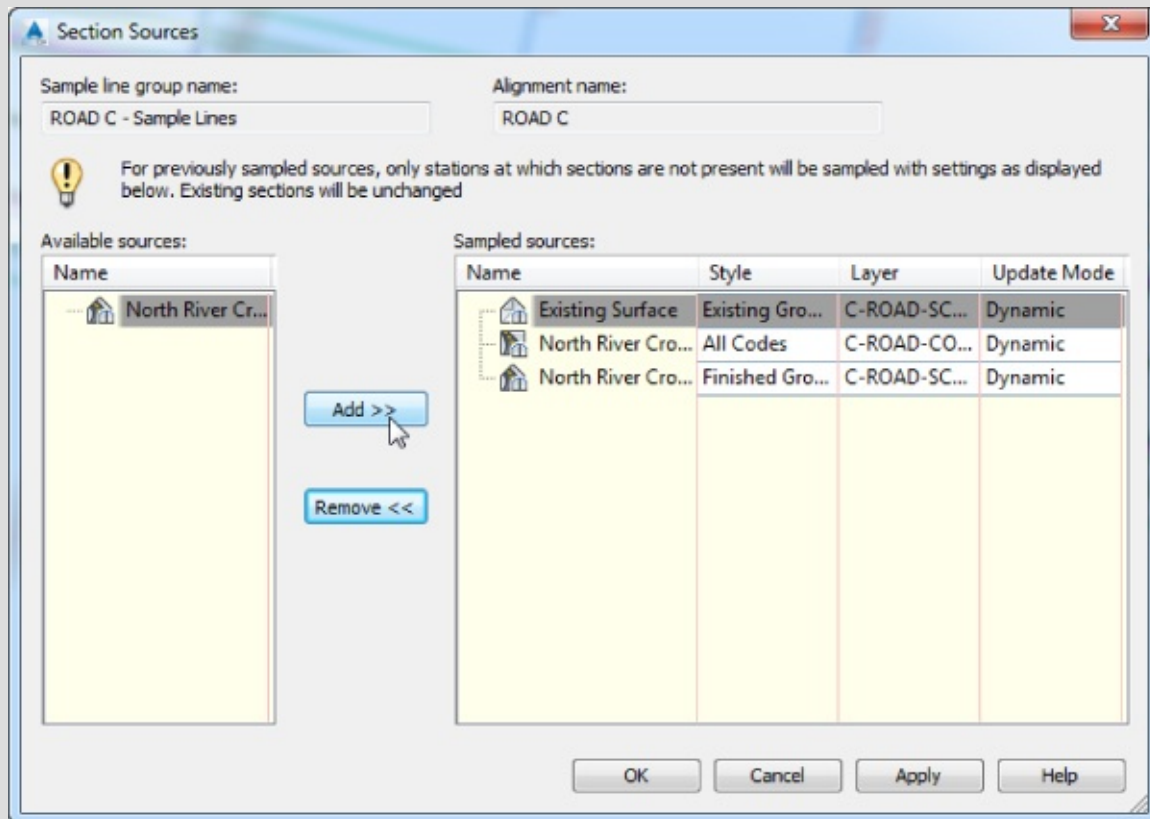
You will need to change both the left and right offsets because they are independent from each other.

You Want to Add or Remove Section Data in Many Views

A common situation with sections is that surface or corridor data you've created after you created sample lines does not appear in your cross sections. This is easily rectified:

1. Click the Sample More Sources button. (Hint: You can get to this directly from the contextual tab or from the Sample Line Group Properties dialog, Sections tab.)

Data that exists but that is not recognized by the sample lines will appear to the left. The sampled data that is recognized and used by the sample lines will appear on the right.



2. Highlight the data you wish to add, and click Add.

In this exercise, you'll edit the widths of an entire sample line group.

1. Continue working on the 1201_SampleLines.dwg (1201_SampleLines_METRIC.dwg) file or open 1201_SampleLines_A.dwg (1201_SampleLines_A_METRIC.dwg).

2. Select a sample line.



3. From the Sample Line contextual tab > Modify panel, click Group Properties.

4. Switch to the Sample Lines tab.

5. Click to select the first sample line in the listing at station 0+00.00 (0+000.00).

- a. Scroll down to the bottom of the list.
- b. While holding the Shift key, select the last station in the listing. This will highlight all rows.
- c. Click your mouse in the Left Offset column and change it to **100' (30 m)**. Press **↵** to complete the edit.

The left offsets will change in the listing. If you have a long list of sample lines in a project, it may take a moment to update.

d. With all of the rows still highlighted, make the same change to the Right Offset column.

6. Click OK.

7. After a moment, the sample lines will resize to reflect your change. The Event Viewer panorama might appear.

8. Save the drawing. Check your completed drawings against `1201_SampleLines_FINISHED.dwg` or `1201_SampleLines_METRIC_FINISHED.dwg` if desired.

Creating Section Views

Once the sample line group is created, it is time to create views. You can create a single view or many views arranged together ([Figure 12.7](#)).

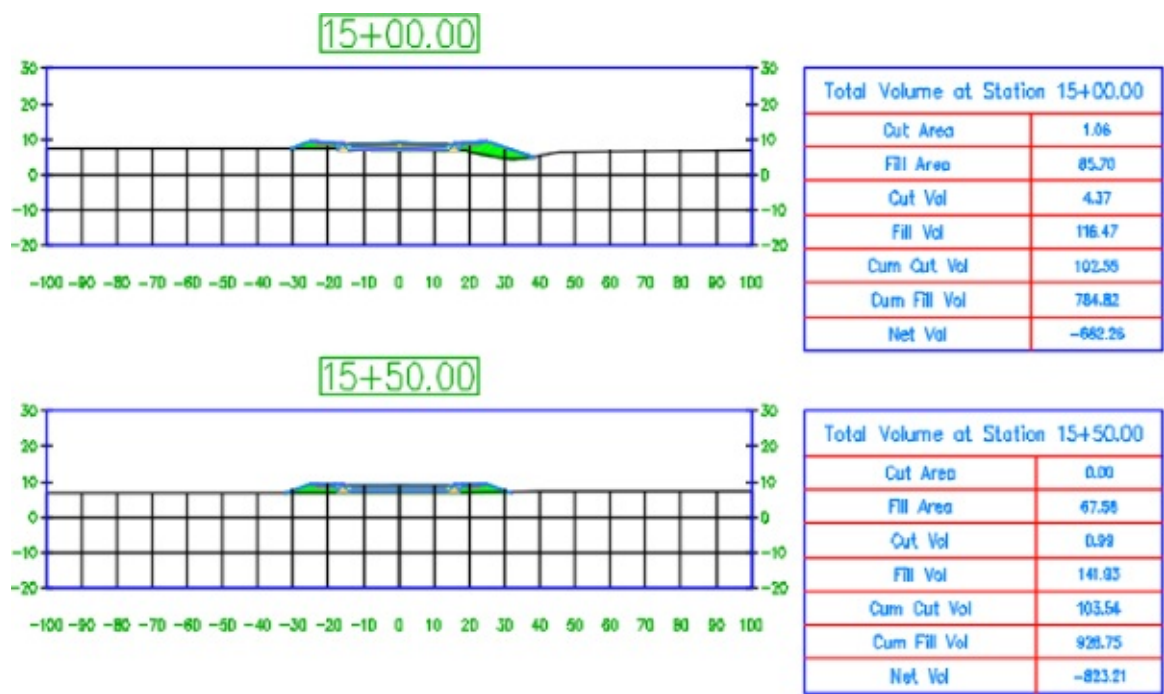



Figure 12.7 Section views arranged to plot by page

A section view is a reflection of the design and can be used for plotting purposes. No edits to the corridor, surface, or other design elements can be made from a section view. The view contains horizontal and vertical grids, tick marks for axis annotation, the axis annotation itself, and a title. Views can also be configured to show horizontal geometry, such as the centerline of the section, edges of pavement, and right of way. Tables displaying end areas or volumes can also be shown with the sections.

Creating a Single-Section View

Certification Objective There are occasions when all section views are not needed. In these situations, a single-section view can be created. In this exercise, you'll create a single-section view of station 15 + 00.00 (0+460.00 for metric users) from sample lines:

1. Open the 1202_SectionViews.dwg (1202_SectionViews_METRIC.dwg) file, which you can download from this book's web page.

You will want to switch to this drawing because there are a few steps completed for you that you will learn about later in the chapter.
2. Select the sample line at 15+00.00 (0+460.00 for metric users).
3.  From the Sample Line contextual tab > Launch Pad panel, choose Create Section View > Create Section View.
4. Verify that your alignment and sample line group name are correct on the General page of the wizard, shown in [Figure 12.8](#).

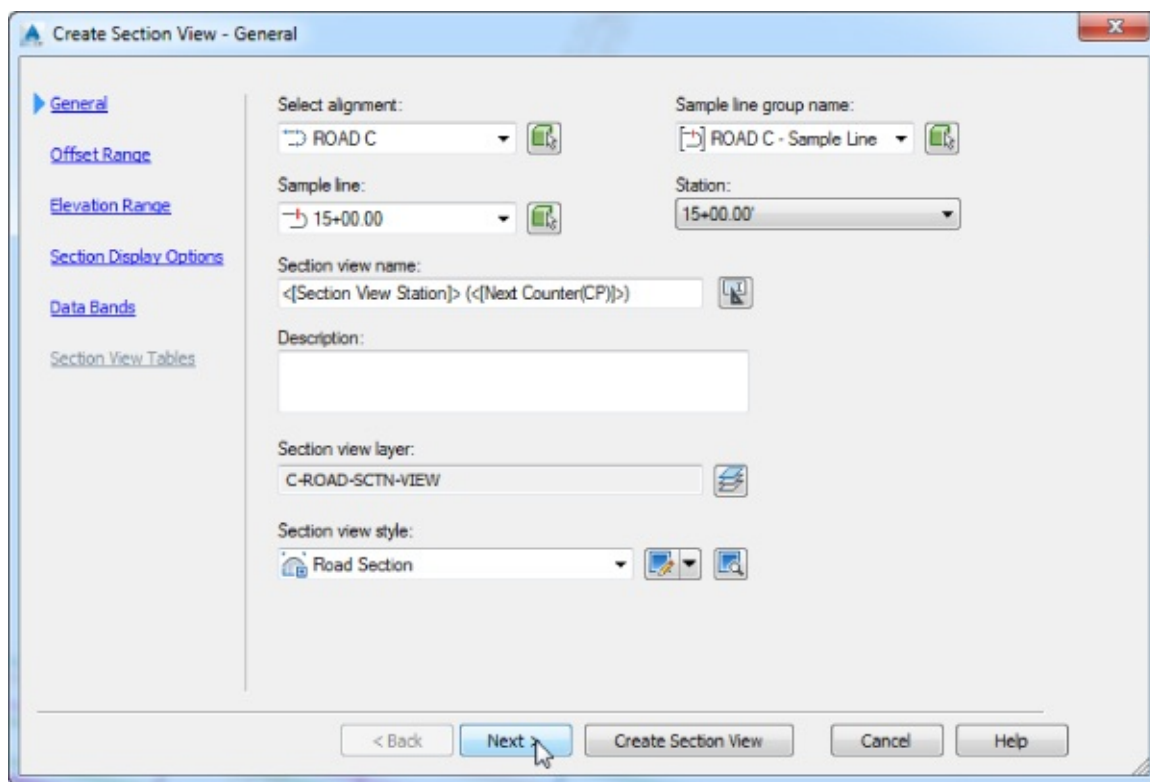


Figure 12.8 The General page of the Create Section View Wizard

You can navigate from one page to another by either clicking Next at the bottom of the screen or clicking the links on the left side of the screen.

5. Click Next to view the Offset Range page.

The top of [Figure 12.9](#) shows the Offset Range page, which should match your sample line swath width. In this case, you will leave this set to Automatic. No action is needed on the Offset Range page.

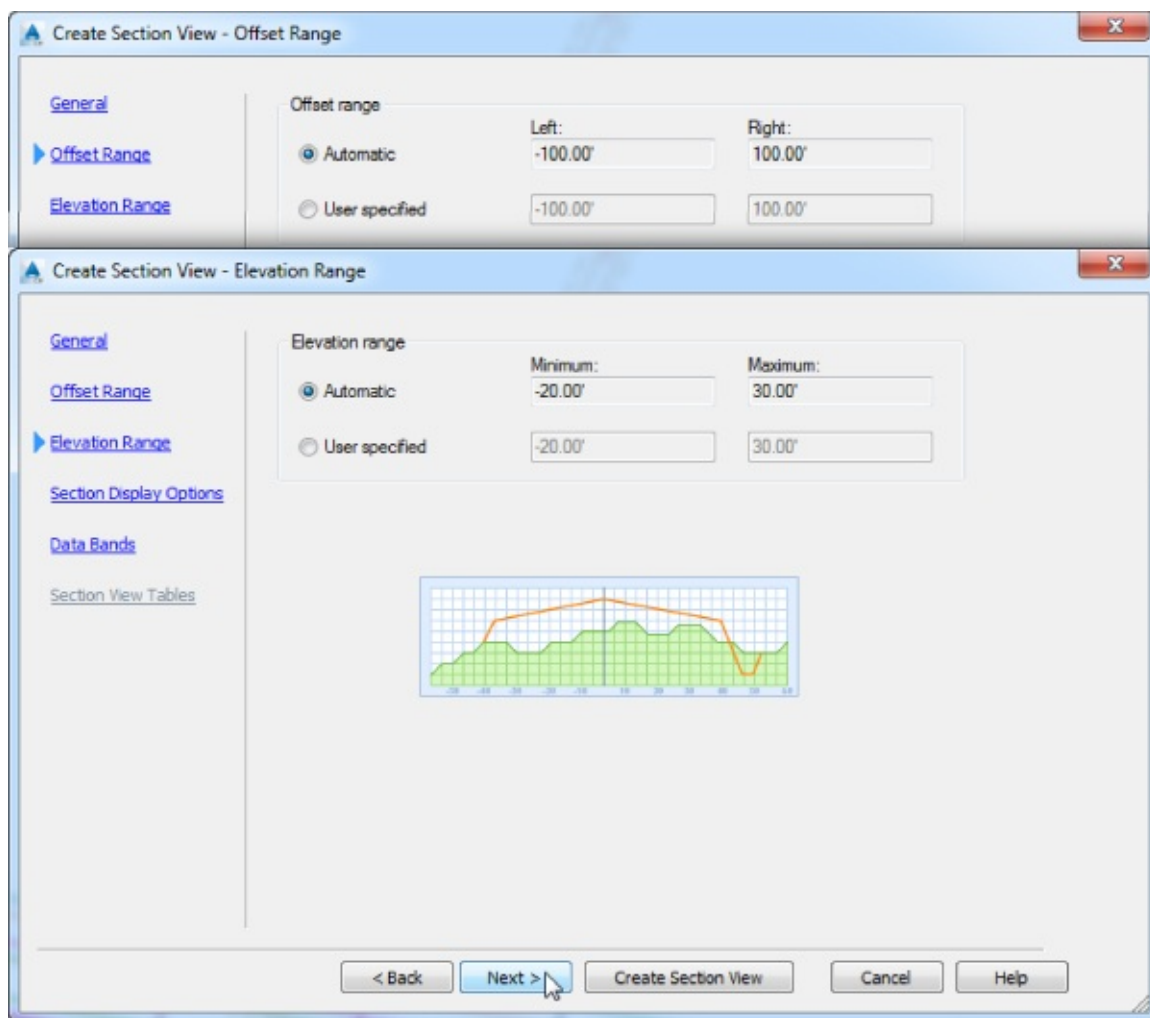


Figure 12.9 The Offset Range page (top) and Elevation Range page (bottom) of the Create Section View Wizard

6. Click Next to view the Elevation Range page.

The bottom of [Figure 12.9](#) shows the Elevation Range page. The values shown here are taken from your design max and min elevations. In this case, and in most cases, you will leave this set to Automatic. No action is needed on the Elevation Range page.

7. Click Next to view the Section Display Options page. Change all three surface label styles to _No Labels by clicking in the Label Set column for each surface item.

The fourth page contains the section display options, as shown in [Figure 12.10](#). This page reflects the styles and data you selected when creating your sample lines. If you forgot to set a style or wish to omit additional data, you can change your options here.

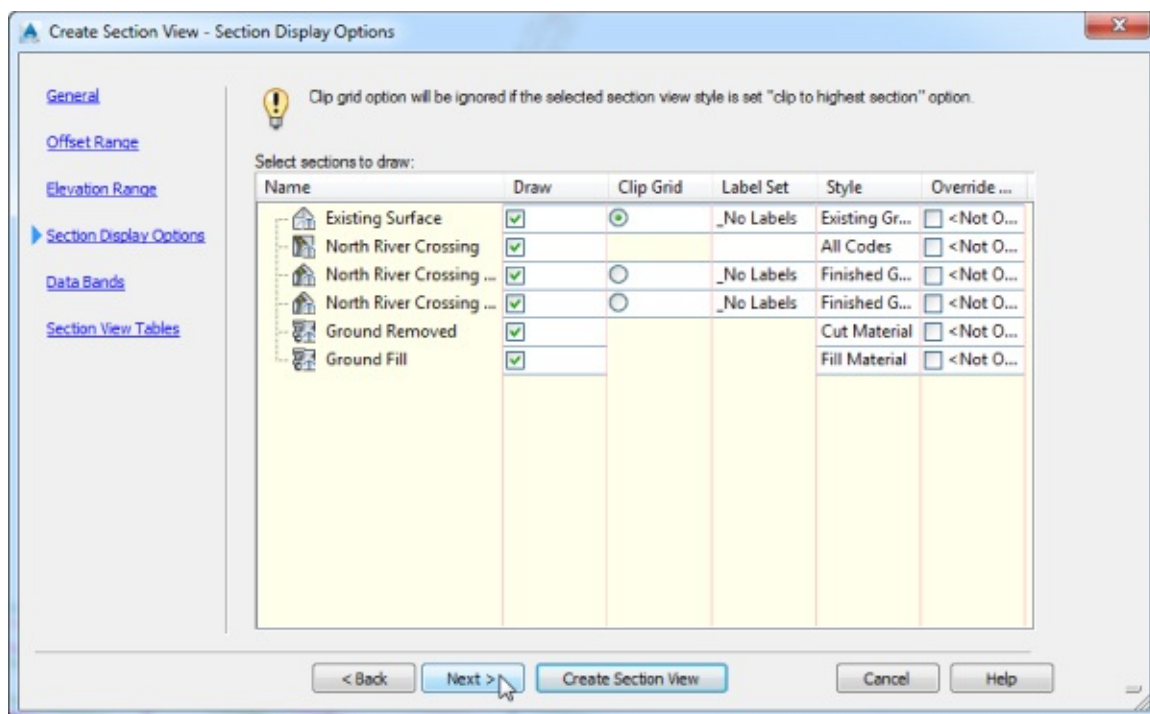


Figure 12.10 The Section Display Options page of the Create Section View Wizard

- Click Next to view the Data Bands page.

The fifth page, shown in [Figure 12.11](#), lets you specify the data band options. Here, you can select band sets to add to the section view, pick the location of the band, and choose the surfaces to be referenced in the bands. The data bands used in this example show only offset distance (rather than offset and elevation), and therefore no action is needed on the Data Bands page.

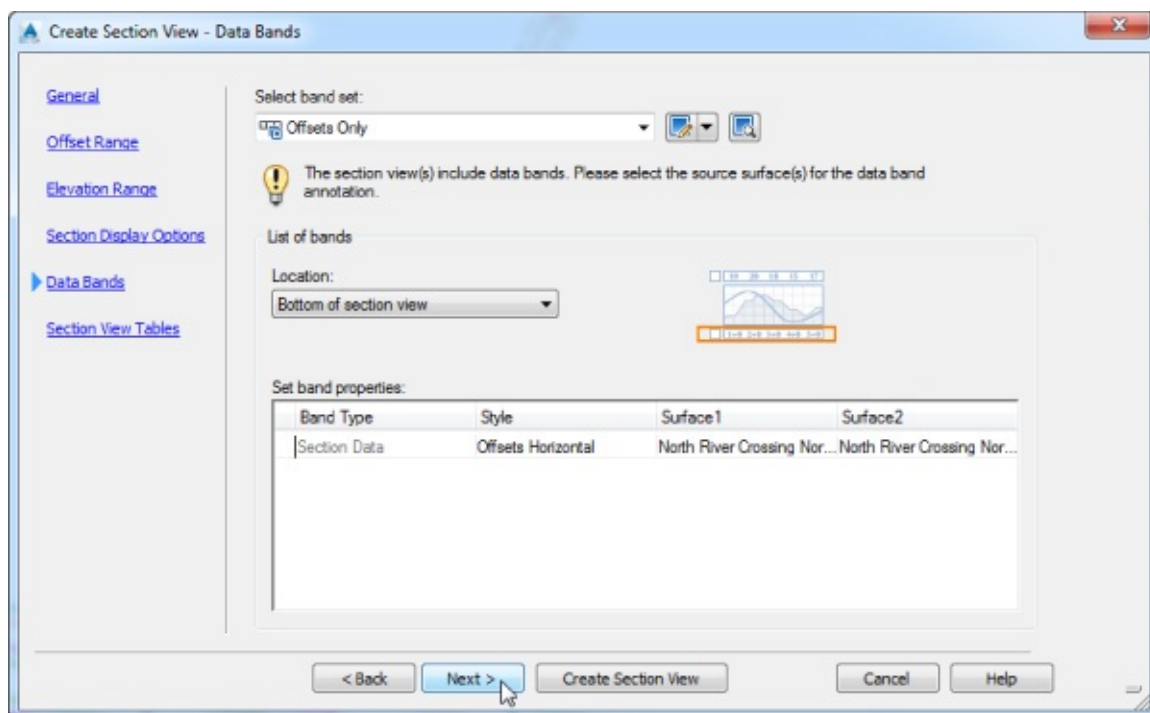


Figure 12.11 The Data Bands page of the Create Section View Wizard

- Click Next to view the Section View Tables page.

The sixth and last page, shown in [Figure 12.12](#), is where you set up the section view tables. Note that this screen will be available only if you have already computed materials for the sample line group. On this page, you can select the type of table and the table style and select the position of the table

relative to the section view. The graphic on the lower-right side of the window will help to illustrate the table placement and changes as you update these settings.

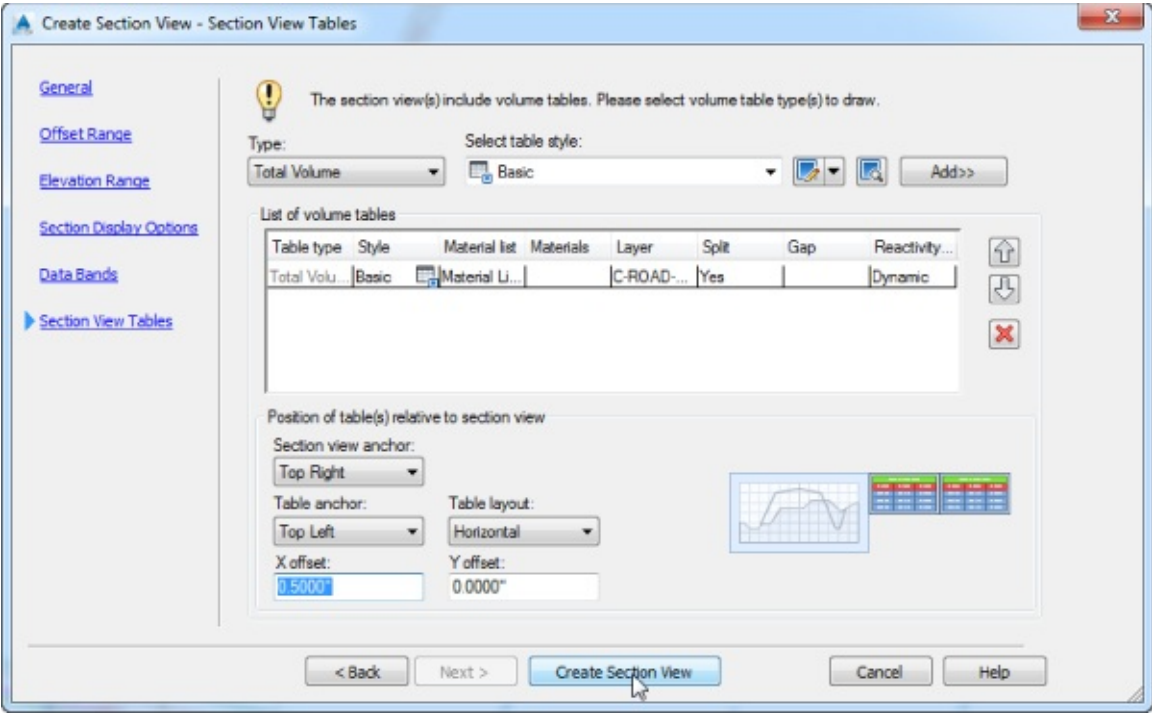


Figure 12.12 The Section View Tables page of the Create Section View Wizard

- 10. With the table type set to Total Volume and Select Table Style set to Basic, click Add.
- As shown in [Figure 12.12](#), you will have a row of data indicating that a material table will come in to the right of your view. Make sure that the X Offset is set to 0.5 (10 for metric users).
- 11. Click the Create Section View button.
- 12. Pick any point in the drawing area to place your section view.
- 13. Examine your section view.

The display should resemble [Figure 12.13](#).

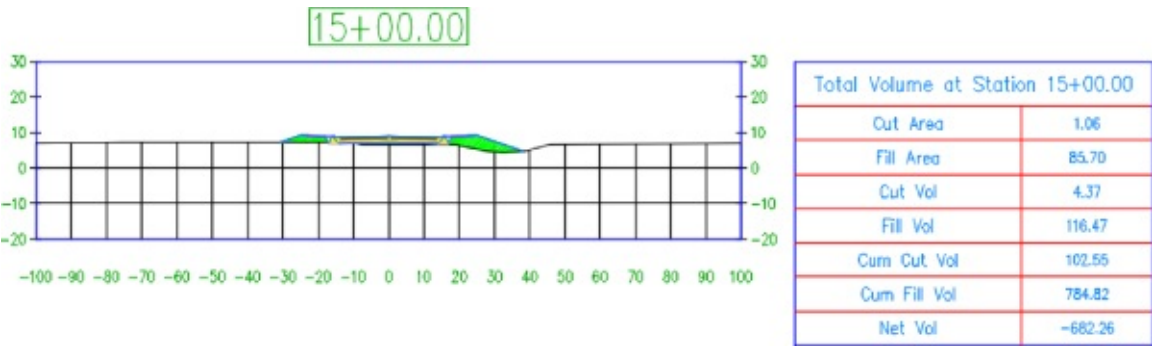


Figure 12.13 The finished section view

- 14. Save the drawing for use in the next exercise.
- Check your completed drawings at this stage against 1201_SectionViews_A.dwg or 1201_SectionViews_A_METRIC.dwg if desired.

Creating Multiple Section Views

Section views belong in packs. In the exercise that follows, you will create section views intended to plot

together on a sheet:

1. Continue working in 1202_SectionViews.dwg (1202_SectionViews_METRIC.dwg) or open 1202_SectionViews_A.dwg (1201_SectionViews_A_METRIC.dwg). You do not need to have completed the previous exercise to continue.
2. Change your drawing scale to 1" = 20' (1:500 for metric users) from the lower-right corner of the drawing window, and select any sample line.
3. From the Sample Line contextual tab ► Launch Pad panel, choose Create Section View ► Create Multiple Section Views.
Alternatively, you can access this tool from the Home tab ► Profile & Section Views panel ► Section Views ► Create Multiple Views.
4. On the General page, set the Section View Style option to Road Section, if not already set, and leave all the other settings at the default. Click Next.
5. On the Section Placement page, click the ellipsis button next to the path for Template For Cross Section Sheet.
6. From the default cross section sheet template, select ARCH D Section 20 Scale (ISO A1 Section 1 to 500 for metric users), as shown in [Figure 12.14](#), and click OK.

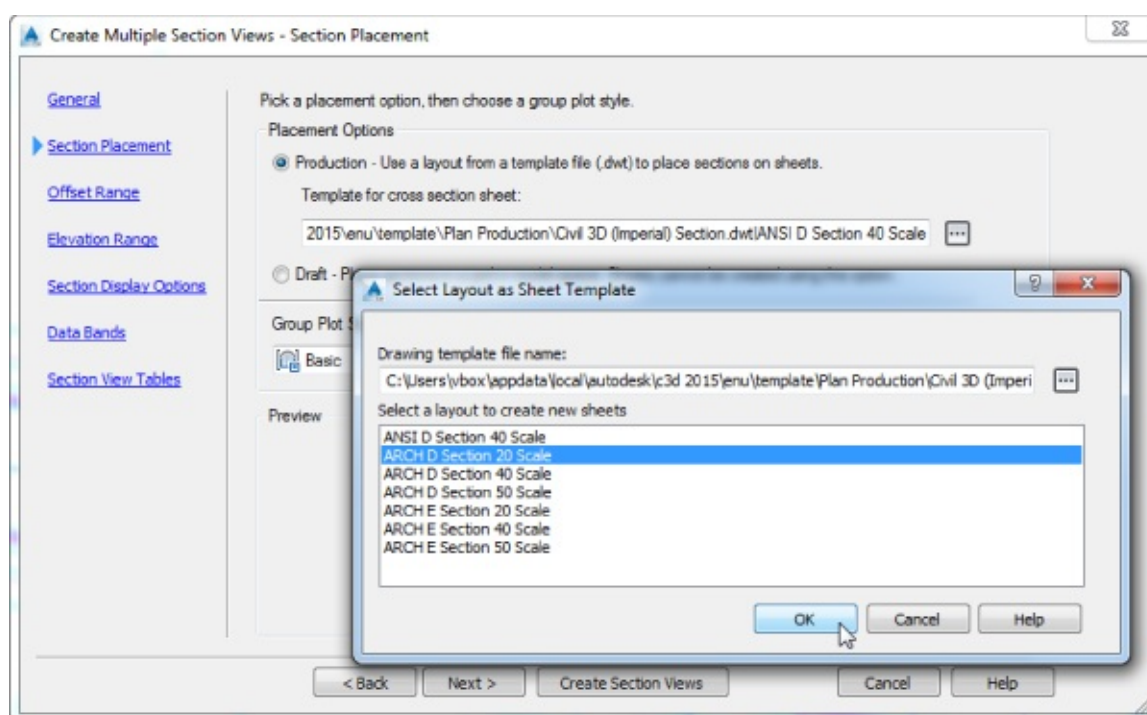


Figure 12.14 When you're creating multiple views, the scale and spacing of the final product depend on layouts from sheet templates.

The Civil 3D default cross section template should be `Civil 3D (Imperial) Section.dwt` or `Civil 3D (Metric) Section.dwt`. Each scale listed in the dialog box ([Figure 12.14](#)) relates to a layout tab in the section template file. You can also set up your own templates based on these layouts, but it is important to note that the viewports set for the sections must be assigned that type in the Viewport object AutoCAD properties.

7. Leave Group Plot Style set to Basic, and click Next.

You did not see the Create Multiple Section Views - Section Placement page, shown in [Figure 12.14](#),

when placing a single view. Setting the Production radio button allows you to use the Create Section Sheets tool from the Output tab. The Draft option forces Civil 3D to behave like version 2010 and prior. Do not use the Draft option if you intend to run the Create Section Sheets command with the section views.

Group Plot Style controls how the views are arranged on a page. In this example, the grid will come from the group plot style rather than the section view style.

You can skip the rest of the wizard because you will keep the default input for the remainder of the settings.

8. Click the Create Section Views button.
9. Click anywhere off to the right of the graphic to place the views.

You should see views arranged on the screen ([Figure 12.15](#)). Metric users will see two pages of section views, and Imperial unit users will see three pages of section views. Notice that the scale chosen in the Select Layout As Sheet dialog box matches the annotative scale of the drawing, creating a neat, coherent set of section views.

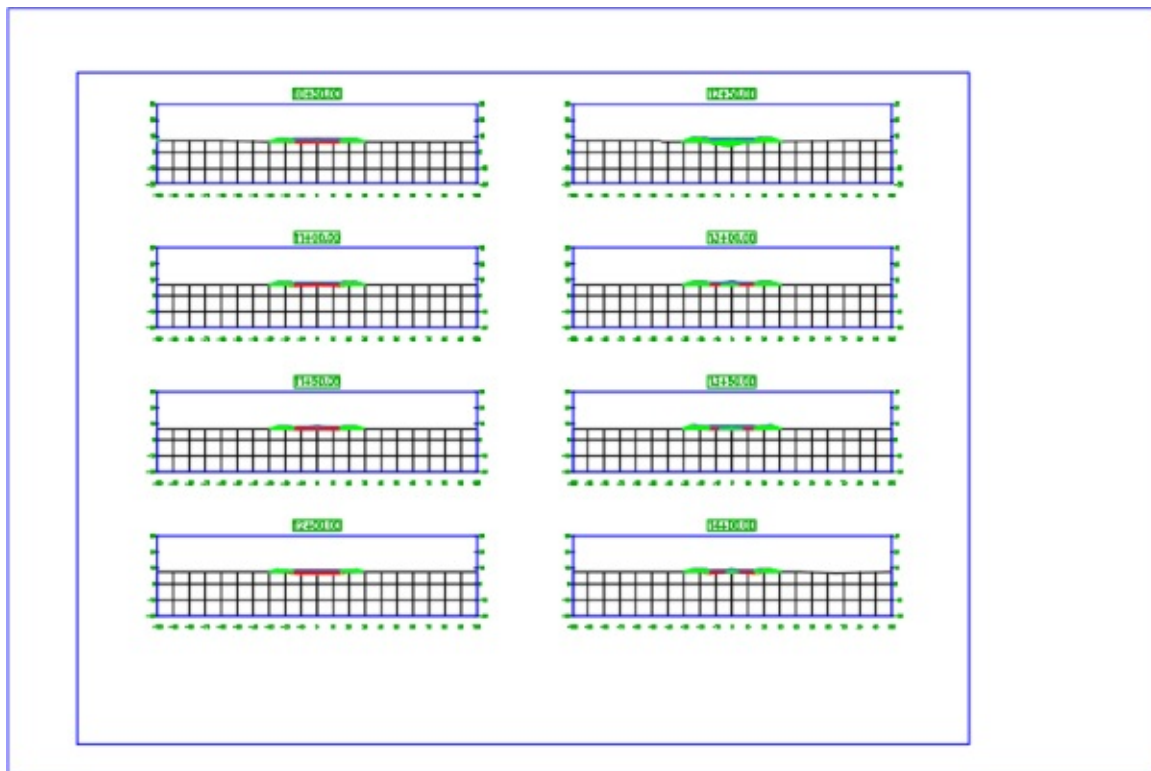


Figure 12.15 One of the pages of cross-section views

10. Save the drawing for use in the next exercise.

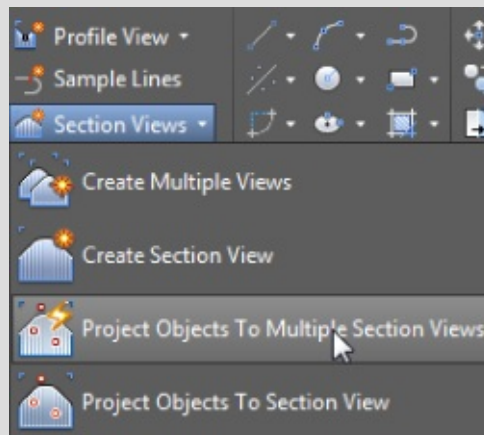
Check your completed drawings at this stage against 1202_SectionViews_B.dwg or 1202_SectionViews_B_METRIC.dwg if desired.

Section View Object Projection

Civil 3D has the ability to project AutoCAD points, blocks, 3D solids, 3D polylines, Civil 3D COGO points, feature lines, and survey figures to section views. Each of the objects listed can be projected to a section view and labeled appropriately.

In the following exercise, you will project several COGO points and an AutoCAD cylinder solid to a section view:

1. Open the drawing 1203_SectionProjection.dwg (1203_SectionProjection_METRIC.dwg).
2. On the Home tab > Profile & Section Views panel, choose Section Views > Project Objects To Multiple Section Views.




3. When prompted at the command line Select a sample line or a section view:, select any sample line in the drawing.
4. In the Project Objects To Multiple Section Views dialog, switch the projection rule to the By Distance option.
5. Change Distance Before and Distance After to **25** (**10** for metric users).

The distance before and distance after tell Civil 3D how far away from the sample line to look for objects for projection.

This tool will pick up all of the object types listed in the Name column that it encounters. If you do not wish a certain type of object to be projected to a section view, clear the check box. For Cogo Points, Feature Lines, and Survey Figures, the default behavior for the tool is to use the object style section settings. You can override this by clicking in the Style field and choosing a projection style. For all other objects listed in this dialog box, a project style must be specified. The elevation for the projected object can be taken from the object or a surface or set to Manual, in which case you will be able to edit the Elevation Value field.

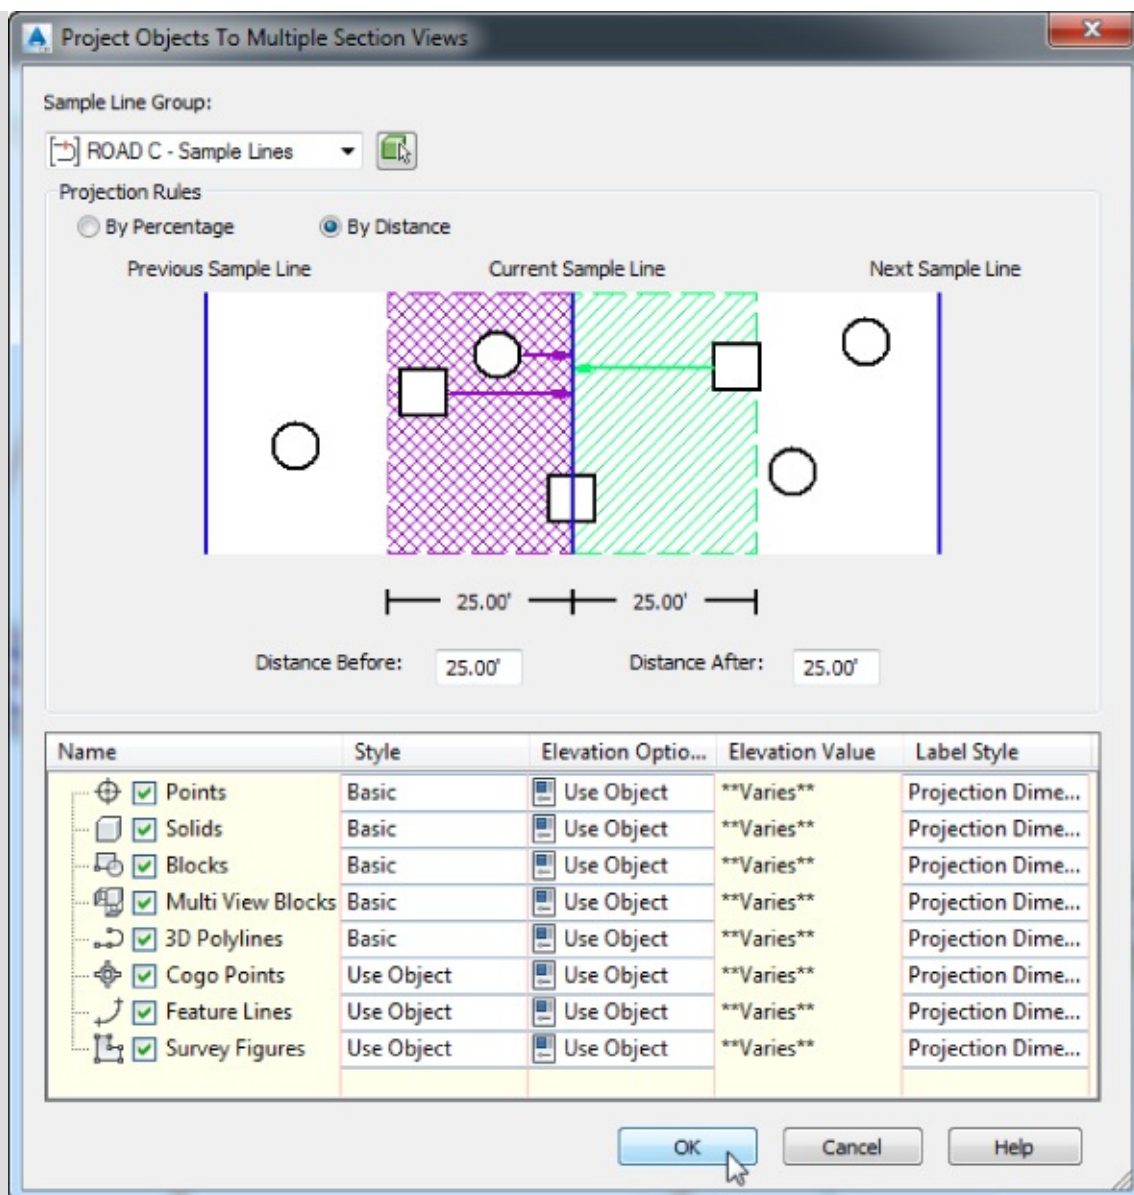Many other Civil 3D objects, such as pipes, structures, and surfaces, do not appear in this list because they can be picked up by sample lines for display in section views.



6. Leave the default settings for all other options and click OK.
7. Examine your section views. For example take a look at the section at station 10+50.00 (0+320.00 for metric users). You should now see additional information in that section view representing objects that would have not been visible in section view without this command.
8. Save and close the drawing.

 
Check your completed drawings against 1203_SectionProjection_FINISHED.dwg or 1203_SectionProjection_METRIC_FINISHED.dwg if desired.

Section Views and Annotation Scale

In the last section, you created section views using a cross-section sheet template. You chose a scale for the section sheet layout at the same time that you picked a page size. Coincidentally, the scale you used in the exercise was already set as the annotation scale. Since both scales agreed with each other, everything came out nicely.


Depending on what portion of the design you are working on, the scale of the sections and the scale you are comfortable working with may not agree. Additionally, you may just forget to set the scale ahead of placing section views.

Ideally, your section views and their sheets should be in a drawing separate from the corridor and the rest of the design. In Chapter 16, “Advanced Workflows,” you will learn how to do this using data shortcuts.



Delete Section Views the Pain-Free Way

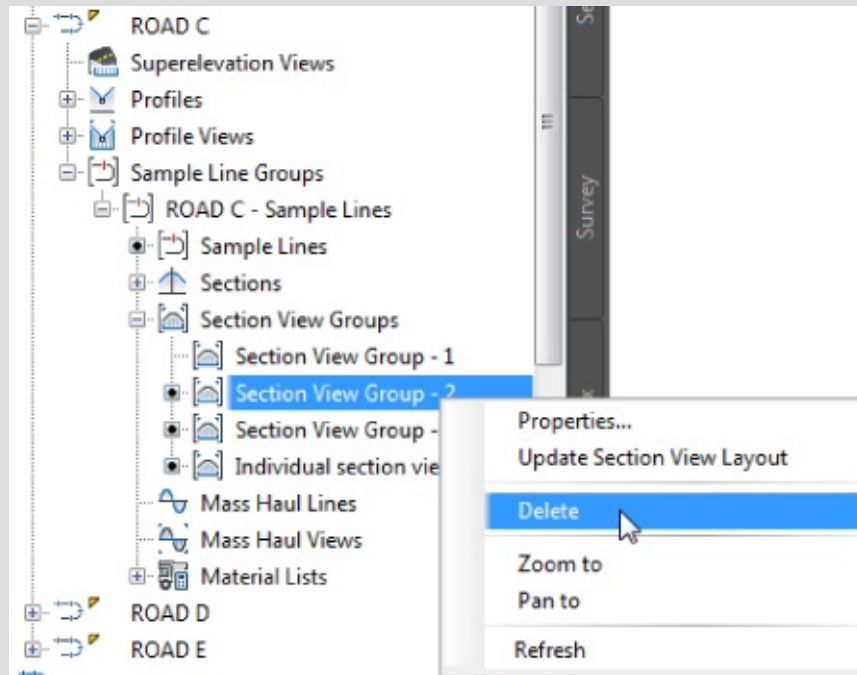The best way to remove an unwanted batch of section views from your graphic is to delete them through Prospector. In the following image you can see that the intrepid user tried (and apparently failed) multiple times before keeping the view group.



If you delete views graphically, you'll create more work for yourself. First, the section view group stays behind in Prospector, as you see in the following image. As indicated by the dot in front of the group in the first image, three section views groups contain information.



The second problem with graphically deleting your section views is that Civil 3D interprets this maneuver as removing data from the sample lines. The next time you create sections, not all of the data you expect will be there. In this case, you would need to use the Sample More Sources tool to bring back the missing data.

The best way to delete section view groups is by right-clicking the group in Prospector and selecting Delete, as shown in the first image in this sidebar.

It is helpful to learn how to work with annotation scale and section views. In the following exercise, you will go through a brief lesson in reorganizing sections:

1. If you completed the previous exercise, continue working in your open file; otherwise, open 1202_SectionViews_B.dwg (1202_SectionViews_B_METRIC.dwg).
2. Select the Annotation scale in the lower-right portion of the screen.
3. Change the scale to **1"=10' (1:250 mm)**.
4. The views probably look pretty funky—and not in a good way. The page has gotten smaller, but the views have not updated.
5. Select any section view by clicking on the station value.



6. From the Section View contextual tab ► Modify View panel, click Update Group Layout.
7. Save and close the drawing.
8. The views should now be reorganized to a better-looking state.

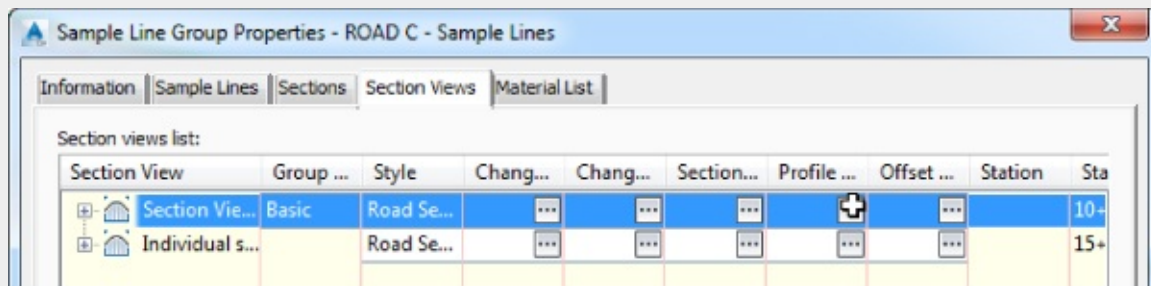
Check your completed drawings against 1202_SectionViews_FINISHED.dwg or 1202_SectionViews_METRIC_FINISHED.dwg if desired.



Showing ROW Lines in Cross-Section Views


The trick you are about to learn will come in handy for more than just showing right-of-way locations in cross section. Any item that is alignment based can work the same way.

1. Open the drawing 1204_SectionROW.dwg (1204_SectionROW_METRIC.dwg).
2. Select any sample line, and then from the Sample Line contextual tab > Modify panel, click Group Properties.
3. Switch to the Section Views tab.
4. Locate the Profile Grade column for the section view group. You may need to expand the columns to read their names.
5. Select Section View Group - 1 and then click the ellipsis button in the Profile Grade column, as shown here.




The offset alignments representing the ROW location have been added to the drawing. An existing ground profile has been created for you as well. You will use this information to place the ROW symbol in the cross-section graphic.

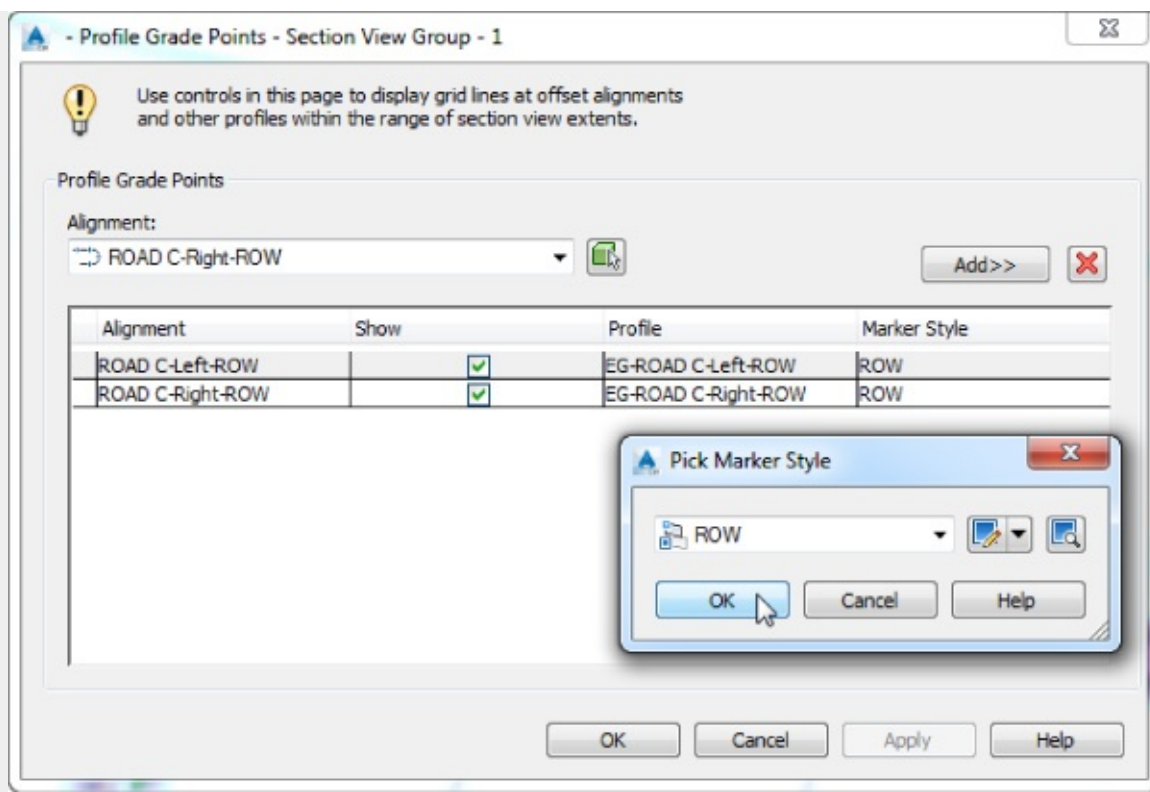6. Set ROAD C-Left-ROW as the active alignment in the list, and click Add.
7. Repeat step 6 for ROAD C-Right-ROW.
8. Set the Marker Style option for both left and right alignments to ROW.



9. Click OK several times until you are out of all dialog boxes.

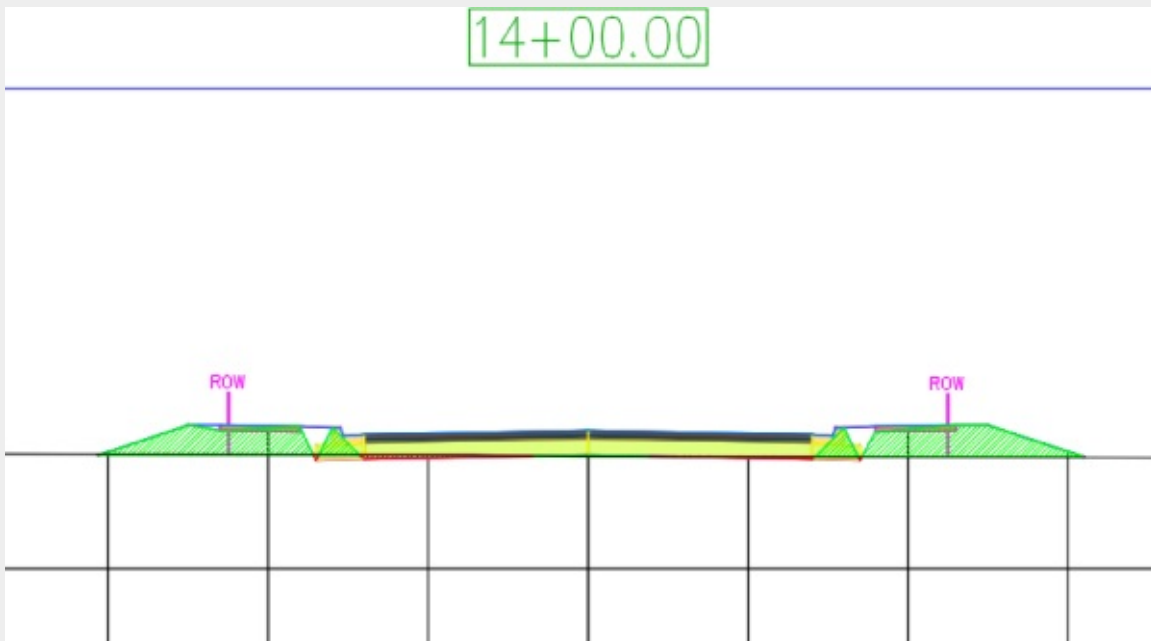You should now have a ROW symbol whose insertion offset was determined by the alignment and whose elevation was from the surface profile.



Check your completed drawings against 1204_SectionROW_FINISHED.dwg or 1204_SectionROW_METRIC_FINISHED.dwg if desired.

Calculating and Reporting Volumes

Once alignments are sampled, volumes can be calculated from the sampled surface or from the corridor section shape. These volumes are calculated in a materials list and can be displayed as a label on each section view or in an overall volume table, as shown in [Figure 12.16](#).

Total Volume Table						
Station	Fill Area	Cut Area	Fill Volume	Cut Volume	Cumulative Fill Vol	Cumulative Cut Vol
10+50.00	33.99	9.21	0.00	0.00	0.00	0.00
11+00.00	30.21	13.10	59.45	20.66	59.45	20.66
11+50.00	28.66	14.98	54.51	26.00	113.95	46.65
12+00.00	29.88	13.49	54.20	26.36	168.15	73.02
12+50.00	106.20	0.00	126.00	12.49	294.15	85.51
13+00.00	42.35	1.82	137.55	1.69	431.71	87.19
13+50.00	44.74	0.95	80.64	2.57	512.34	89.77
14+00.00	41.83	2.25	80.15	2.96	592.50	92.73
14+50.00	40.09	3.65	75.85	5.46	668.34	98.19
15+00.00	85.70	1.06	116.47	4.37	784.82	102.55
15+50.00	67.58	0.00	141.93	0.99	926.75	103.54
16+00.00	83.54	0.00	139.92	0.00	1066.67	103.54
16+50.00	87.14	0.00	158.04	0.00	1224.71	103.54
17+00.00	79.03	0.00	153.86	0.00	1378.57	103.54
17+50.00	49.90	0.00	119.38	0.00	1497.94	103.54
18+00.00	51.88	1.16	94.23	1.08	1592.18	104.62
18+50.00	49.50	0.18	93.87	1.25	1686.05	105.87
19+00.00	46.51	0.73	88.90	0.85	1774.95	106.71
19+50.00	41.77	2.41	81.74	2.91	1856.70	109.62
20+00.00	0.00	0.00	38.68	2.23	1895.37	111.85

Figure 12.16 A total volume table inserted into the drawing

The volumes can also be displayed in an XML report, as shown in [Figure 12.17](#).

Volume Report

Project: C:\Mastering\Ch12\1205_Materials_C_METRIC.dwg

Alignment: ROAD C

Sample Line Group: ROAD C - Sample Lines

Start Sta: 0+320.000

End Sta: 0+620.000

Station	Cut Area (Sq.m.)	Cut Volume (Cu.m.)	Reusable Volume (Cu.m.)	Fill Area (Sq.m.)	Fill Volume (Cu.m.)	Cum. Cut Vol. (Cu.m.)	Cum. Reusable Vol. (Cu.m.)	Cum. Fill Vol. (Cu.m.)	Cum. Net Vol. (Cu.m.)
0+320.000	1.24	0.00	0.00	3.08	0.00	0.00	0.00	0.00	0.00
0+340.000	1.63	28.66	28.66	2.54	56.21	28.66	28.66	56.21	-27.55
0+360.000	1.63	32.64	32.64	2.50	50.45	61.30	61.30	106.67	-45.37
0+380.000	0.00	16.34	16.34	9.04	115.43	77.64	77.64	222.10	-144.45
0+400.000	0.28	2.76	2.76	3.75	127.91	80.41	80.41	350.01	-269.60
0+420.000	0.35	6.23	6.23	3.77	75.27	86.64	86.64	425.27	-338.64
0+440.000	0.56	9.07	9.07	3.53	73.03	95.71	95.71	498.30	-402.59
0+460.000	0.00	5.60	5.60	10.37	138.94	101.31	101.31	637.25	-535.93
0+480.000	0.00	0.00	0.00	6.69	170.56	101.31	101.31	807.80	-706.49
0+500.000	0.00	0.00	0.00	7.75	144.44	101.31	101.31	952.24	-850.93
0+520.000	0.00	0.00	0.00	6.79	145.42	101.31	101.31	1097.66	-996.35
0+540.000	0.00	0.00	0.00	9.11	158.98	101.31	101.31	1256.64	-1155.33
0+560.000	0.17	1.70	1.70	4.09	132.03	103.01	103.01	1388.67	-1285.67
0+580.000	0.21	3.79	3.79	4.00	80.92	106.79	106.79	1469.59	-1362.80
0+600.000	0.53	7.38	7.38	3.54	75.39	114.18	114.18	1544.98	-1430.80
0+620.000	0.00	5.29	5.29	0.00	35.41	119.47	119.47	1580.39	-1460.92

Figure 12.17 A total volume XML report shown in the browser

Once a materials list is created, it can be edited to include more materials or to make modifications to the existing materials. For example, soil expansion (fluff or swell) and shrinkage factors can be entered to make the volumes more accurately match the true field conditions. This can make cost estimates more accurate, which can result in fewer surprises during the construction phase of any given project.

Computing Materials



Materials can be created from surfaces or from corridor shapes. Surfaces are great for earthwork because you can add cut or fill factors to the materials, whereas corridor shapes are great for determining quantities of asphalt or concrete. In this exercise, you practice calculating earthwork quantities for the ROAD C corridor:

1. Open the 1205_Materials.dwg (1205_Materials_METRIC.dwg) file, which you can download from this book's web page.



2. From the Analyze tab ➤ Volumes And Materials panel, choose Compute Materials.

The Select A Sample Line Group dialog appears.

3. Select the ROAD C alignment and the ROAD C - Sample Lines group, and click OK.

The Compute Materials dialog appears.

- 4. In the Quantity Takeoff Criteria drop-down box, select Earthworks from the drop-down menu.
- 5. Click the Object Name cell for the Existing Ground surface, and select Existing Surface from the drop-down menu.
- 6. Click the Object Name cell for the Datum surface, and select North River Crossing North River Crossing - Datum (this is the name of the corridor followed by the name of the surface) from the drop-down menu.
- 7. Verify that your settings match those shown in [Figure 12.18](#), and then click OK.

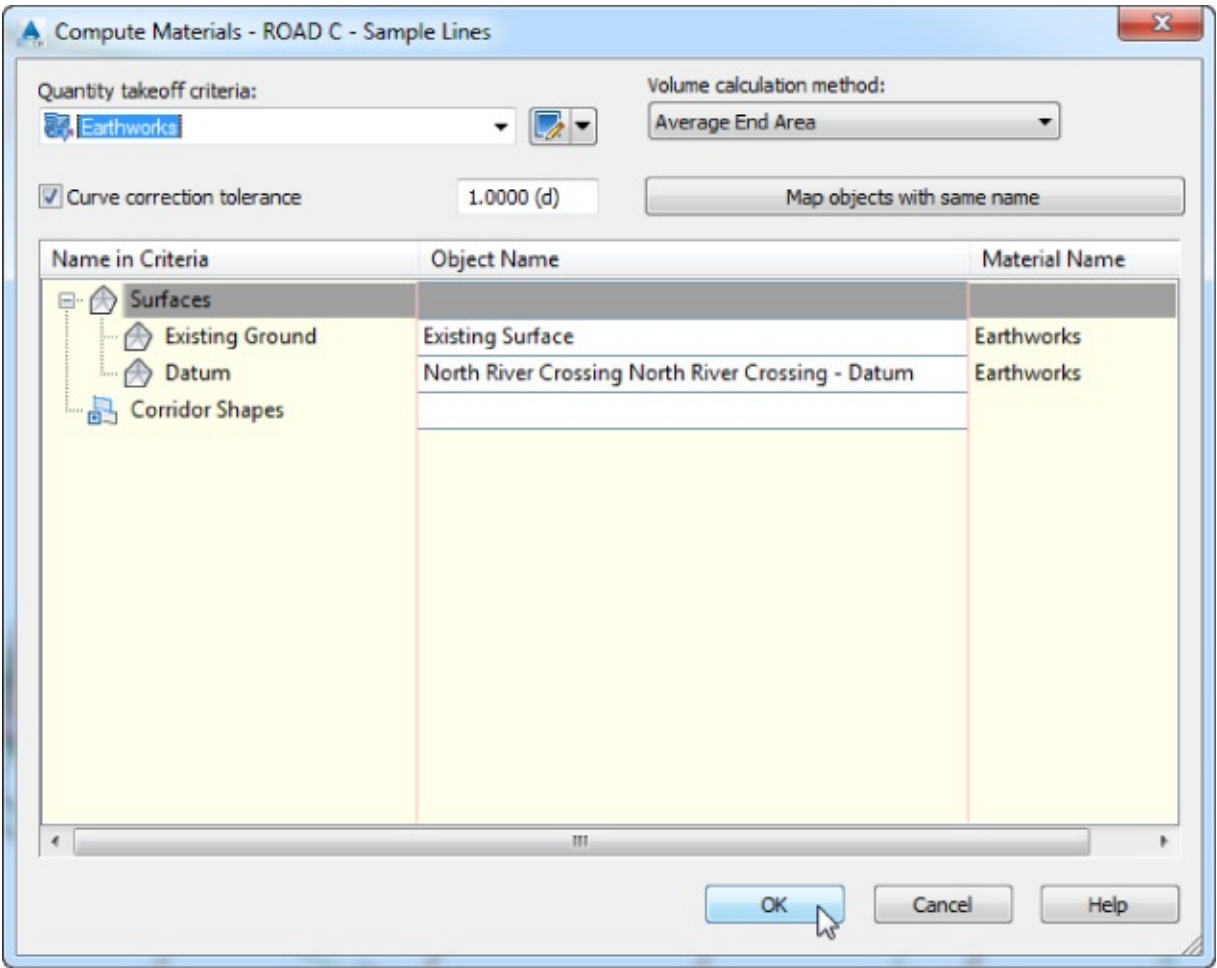


Figure 12.18 The settings for the Compute Materials dialog


Graphically, nothing will happen. However, in the background Civil 3D has computed material data.

- 8. Save the drawing for use in the next exercise.
- 9. Check your completed drawings at this stage against 1205_Materials_A.dwg or 1205_Materials_A_METRIC.dwg if desired.

Creating a Volume Table in the Drawing

In the preceding exercise, materials were computed that represent the total dirt to be moved or used in the sample line group. In the next exercise, you insert a table into the drawing so you can inspect the volumes.

- 1. If you completed the previous exercises, continue working in 1205_Materials.dwg (1205_Materials_METRIC.dwg); otherwise open 1205_Materials_A.dwg (1205_Materials_A_METRIC.dwg).

2.  From the Analyze tab ➤ Volumes And Materials panel, choose Total Volume Table.
3. The Create Total Volume Table dialog appears.
4. Verify that your settings match those shown in [Figure 12.19](#).

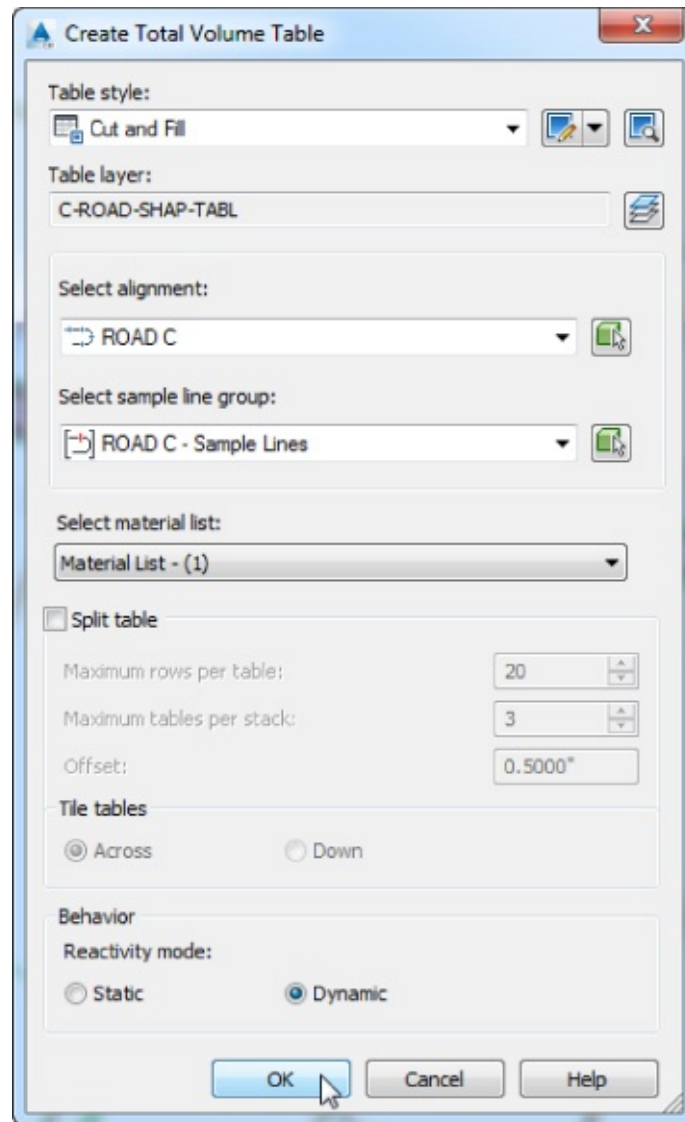


Figure 12.19 The Create Total Volume Table dialog settings

5. Verify that Reactivity Mode at the bottom of the dialog is set to Dynamic.
6. Clear the check box next to Split Table and click OK.
7. Pick a point in the drawing to place the volume table.
8. The table indicates a cumulative fill volume of 1896.91 cubic yards (1580.39 cubic meters) and a cumulative cut volume of 111.85 cubic yards (119.47 cubic meters).
9. Save the drawing for use in the next exercise.
10. Check your completed drawings at this stage against 1205_Materials_B.dwg or 1205_Materials_B_METRIC.dwg if desired.

Adding Soil Factors to a Materials List

Certification Objective Civil 3D allows for more accurate earthwork computations by providing entry of cut factors,

fill factors, and refill factors.

Cut Factor Sometimes known as expansion factor, or “fluff” factor, the *cut factor* is always expressed as a number greater than or equal to 1.0. Cut volume is multiplied by this value to determine the volume of soil after excavation has taken place. For example, soil that expands 5 percent after excavation would use a cut factor of 1.05.

Fill Factor Commonly known as compaction factor, the *fill factor* is used to determine the volume of material after it has been mechanically compacted. Counter to most people's intuition, this value is also expressed as a value greater than or equal to 1.0. A material that compacts to 90 percent of its original volume would use a fill factor of 1.1. The fill volume is divided by the fill factor to determine the final amount of fill needed on a site.

Refill Factor The *refill factor* dictates what amount of the cut material can be reused as fill. This value is expressed as a percentage of the cut volume (with cut factor applied). This factor is used only when the material quantity type is set to Cut And Refill.

In the following exercise, the materials need to be modified to bring them closer in line with true field numbers. For this exercise, the shrinkage factor will be assumed to be 80 percent, which is entered into Civil 3D as 1.2. The expansion on cut will be 115 percent, or, as entered into Civil 3D, 1.15. In addition to these numbers (which Civil 3D represents as cut factor for swell and fill factor for shrinkage), for this exercise, we assume a Refill Factor value of 1.00.

1. If you completed the previous exercise, continue working in 1205_Materials.dwg (1205_Materials_METRIC.dwg); otherwise open 1205_Materials_B.dwg (1205_Materials_B_METRIC.dwg).
2. From the Analyze tab ➤ Volumes And Materials panel, choose Compute Materials.
3. The Select A Sample Line Group dialog appears.
4. Select the ROAD C alignment and the ROAD C - Sample Lines group, and click OK.
5. The Edit Material List dialog appears. We will use a different criteria that allows the input of the previously mentioned values.
6. Click the Import Another Criteria button, and from the Select A Quantity Takeoff Criteria dialog select the Cut And Fill criteria and click OK.
7. In the Compute Materials - ROAD C - Sample Lines dialog, click the <Click Here To Set All> cell and set the EG surface to Existing Surface. Click the same cell again for the DATUM surface and set it to North River Crossing North River Crossing - Datum surface. Click OK.
8. In the Edit Material List dialog for the alignment you will now have two Material Lists, as shown in [Figure 12.20](#). Expand Material List - (2), as shown in the figure.

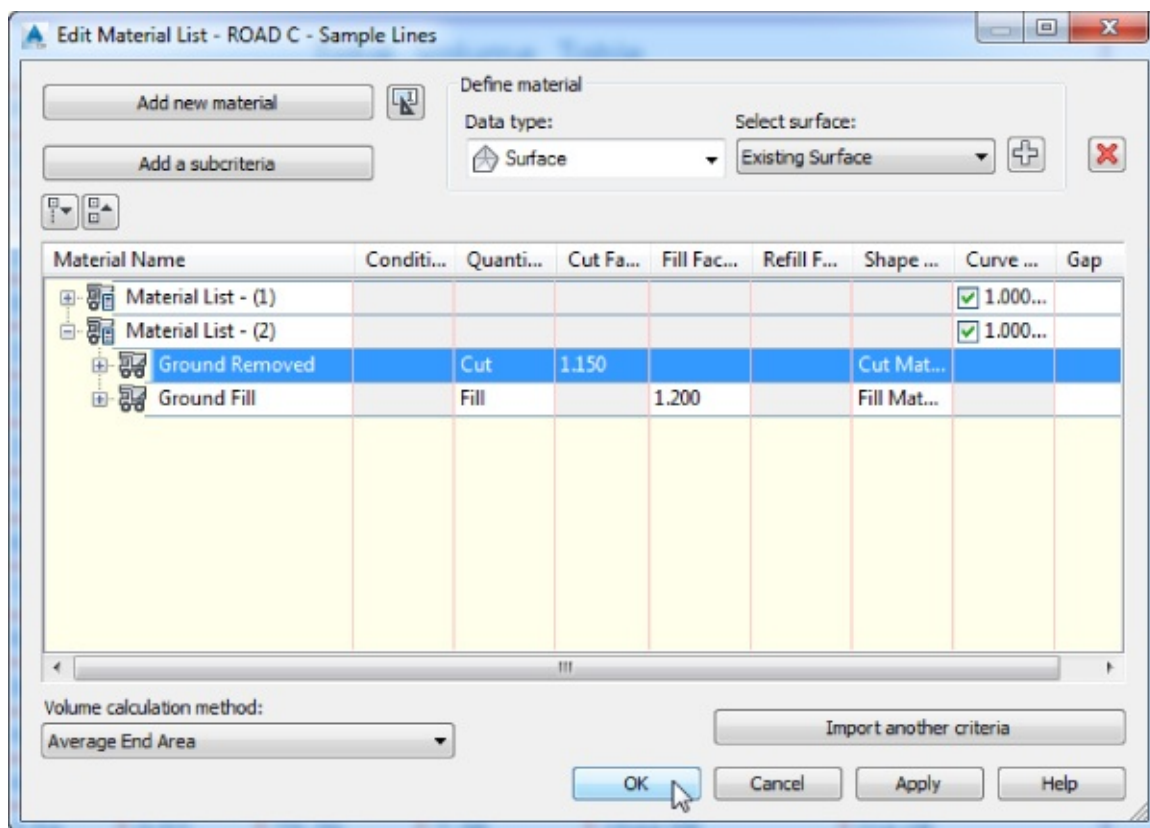


Figure 12.20 The Edit Material List dialog

9. Enter a cut factor of **1.15** in the Cut Factor cell for the Ground Removed row and a fill factor of **1.2** in the Fill Factor cell of the Ground Fill row.
10. Verify that all other settings are the same as in [Figure 12.20](#), and click OK.
11. From the Analyze tab > Volumes And Materials panel, choose Total Volume Table.
12. The Create Total Volume Table dialog appears.
13. Set the Select Material List drop-down to Material List - (2), uncheck the Split Table check box if selected, and leaving all the other settings at their defaults, click OK.
14. Place the new table next to the one already present and examine the total volume table again for the changed values when the factors are considered and applied.
15. Notice that the new Cumulative Fill Volume value is 2276.30 cubic yards (1896.47 cubic meters) and the new Cumulative Cut Volume value is 128.63 cubic yards (137.39 cubic meters).
16. Save the drawing for use in the next exercise.
17. Check your completed drawings at this stage against 1205_Materials_FINISHED or 1205_Materials_METRIC_FINISHED.dwg if desired.

Generating a Volume Report

Civil 3D provides you with a way to create a report that is suitable for printing or for transferring to a word processing or spreadsheet program. In this exercise, you'll create a volume report for the North River Crossing corridor.

1. If you completed the previous exercise, continue working in 1205_Materials.dwg (1205_Materials_METRIC.dwg); otherwise open 1205_Materials_FINISHED.dwg (1205_Materials_METRIC_FINISHED.dwg).



2. From the Analyze tab ➤ Volumes And Materials panel, choose Volume Report.
3. The Report Quantities dialog appears.
4. Verify that Material List - (2) is selected in the dialog, and click OK. Calculating the volume report may take a few moments depending on your computer specifications.
5. You may get a warning message that says, “Scripts are usually safe. Do you want to allow scripts to run?” Click Yes.
6. Civil 3D temporarily takes over your web browser to display the volume report. This is the same information that you placed in your drawing, but since it's in this form, you can more readily copy and paste it into Excel, Word, or another program.
7. Note the cut-and-fill volumes and compare them to your volume table in the drawing. You will notice the same values for the report as they are displayed in the table.
8. Close the report when you have finished viewing it.
9. Close the drawing without saving it.


Adding Section View Final Touches

Before you move away from section views, a few last touches are needed in your sections. First, you will add last-minute data to the sections. You will also add labels to the sections.

Adding Data with Sample More Sources

It is a common occurrence that data is created from the design after sample lines have been generated. For example, you may need to add surface data or pipe network data to existing section views. To accomplish this, you need to add that data to the sample line group using the Sample More Sources command.

In this exercise, you'll add a pipe network to a sample line group and inspect the existing section views to ensure that the pipe network was added correctly:

1. Open the 1206_FinalTouches.dwg (1206_FinalTouches_METRIC.dwg) file, which you can download from this book's web page.
2. Select one of the section views by clicking the station label.
3.  From the Section View contextual tab > Modify Section panel, click the Sample More Sources button.
4. In the Section Sources dialog, click ROAD C Sanitary on the left side of the dialog to highlight it, as shown in [Figure 12.21](#), and then click Add.

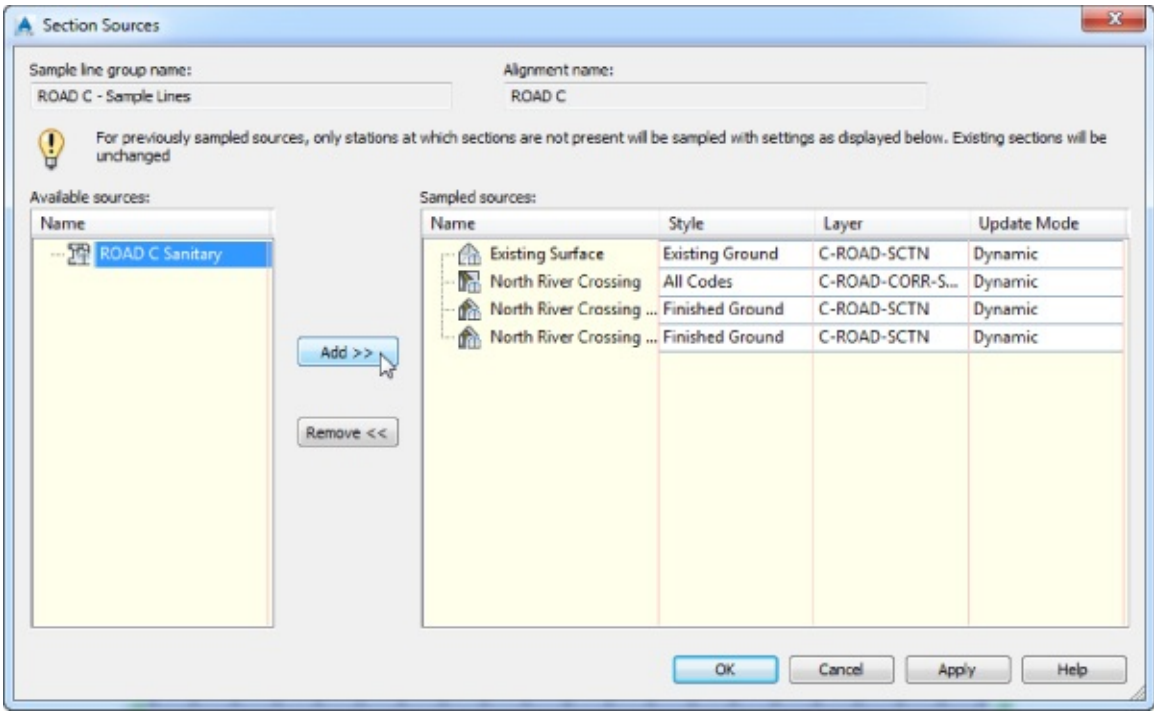


Figure 12.21 Adding sanitary pipe network to the cross-section view via Sample More Sources

The sanitary network will now appear on the right side of the dialog.

5. Click OK to dismiss the Section Sources dialog.

Take a look at the sections. You should now see pipes and structures in the various section views. Sometimes the sections views placed on the sheets might come close to overlapping the sheet border. To fix or avoid this, make sure you have well defined settings for the generation of section views

sheets in your template to take into account any future data added using the Sample More Sources.

6. Save the drawing for use in the next exercise.

Check your completed drawings at this stage against 1206_FinalTouches_A.dwg or 1206_FinalTouches_A_METRIC.dwg if desired.

Adding Cross-Section Labels

The best way to label cross sections that contain corridor data is to use the code set style. Using the code set style, you can control which parts of the corridor are labeled. You can learn more about creating code set styles in Chapter 18, “Label Styles.” In the meantime, you will look at how to change the active code set style on a cross-section view group.

In the following exercise, you will use the view group properties to add labels:

1. Continue working in 1206_FinalTouches.dwg (1206_FinalTouches_METRIC.dwg) or open 1206_FinalTouches_A.dwg (1206_FinalTouches_A_METRIC.dwg).
2. Select one of the section views by clicking its station label.



3. From the Section View contextual tab ► Modify View panel, choose View Group Properties.
4. On the Sections tab, locate the Style column for the corridor and click the field that currently reads All Codes.

This is the code set style that is current in the views.

5. Click the field again to switch the style to Codes With Labels from the drop-down list, as shown in [Figure 12.22](#), and click OK to dismiss the Code Set Style dialog. Click OK once more to dismiss the Section View Group Properties dialog. Press Esc to deselect the selected section view.

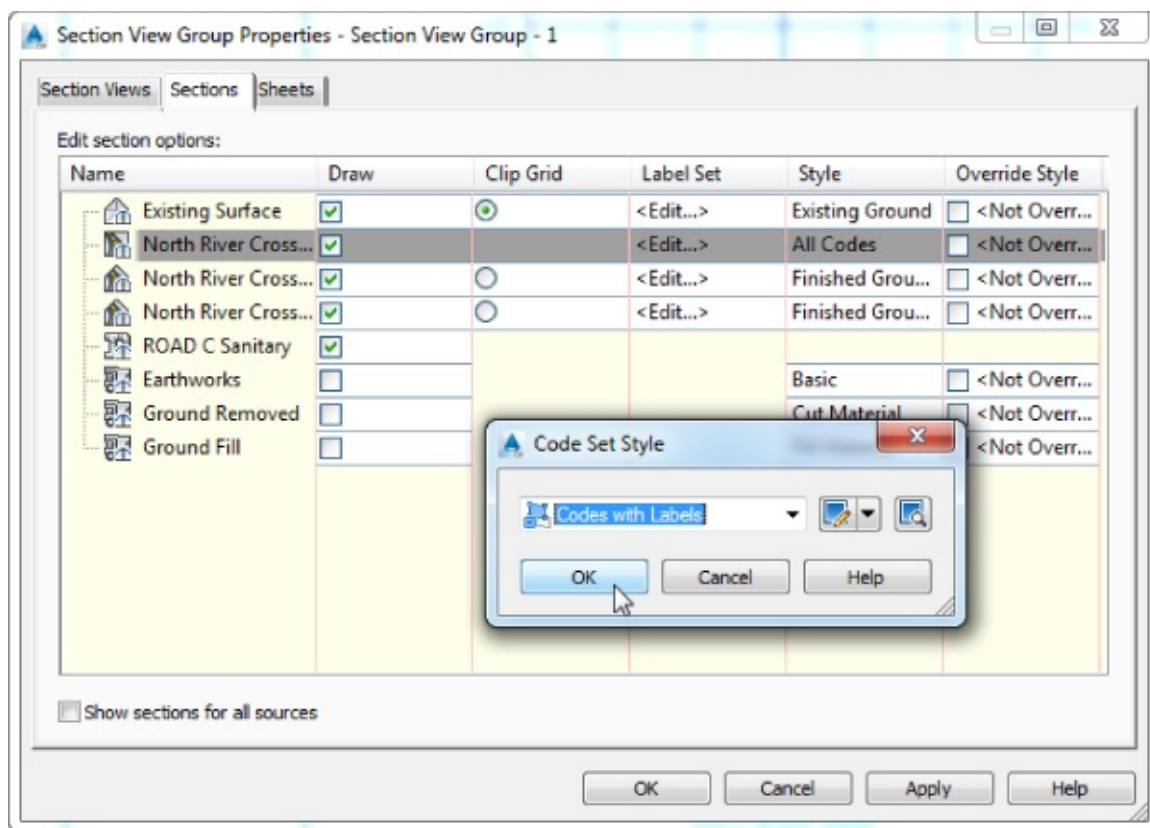


Figure 12.22 Changing the active code set style for all views in the group

You will notice that the only labels that you see are the pavement grade labels. In order to show the elevation and offsets labels, you will use a feature introduced in the current release. This feature uses labels from within the section labels part of the Settings tab in Toolspace. The advantage of using these new labels is that you can automatically stagger labels, making it easier to manage their placement in the section view.

The point labels within the code sets are considered legacy elements and are still available to display if needed. If you ever need to create the section views using the legacy code set labels for points, you can change the setting from Section Label Set to Section Code Set Style, as shown in [Figure 12.23](#). Note that this has to be done before the creation of the cross-section views.

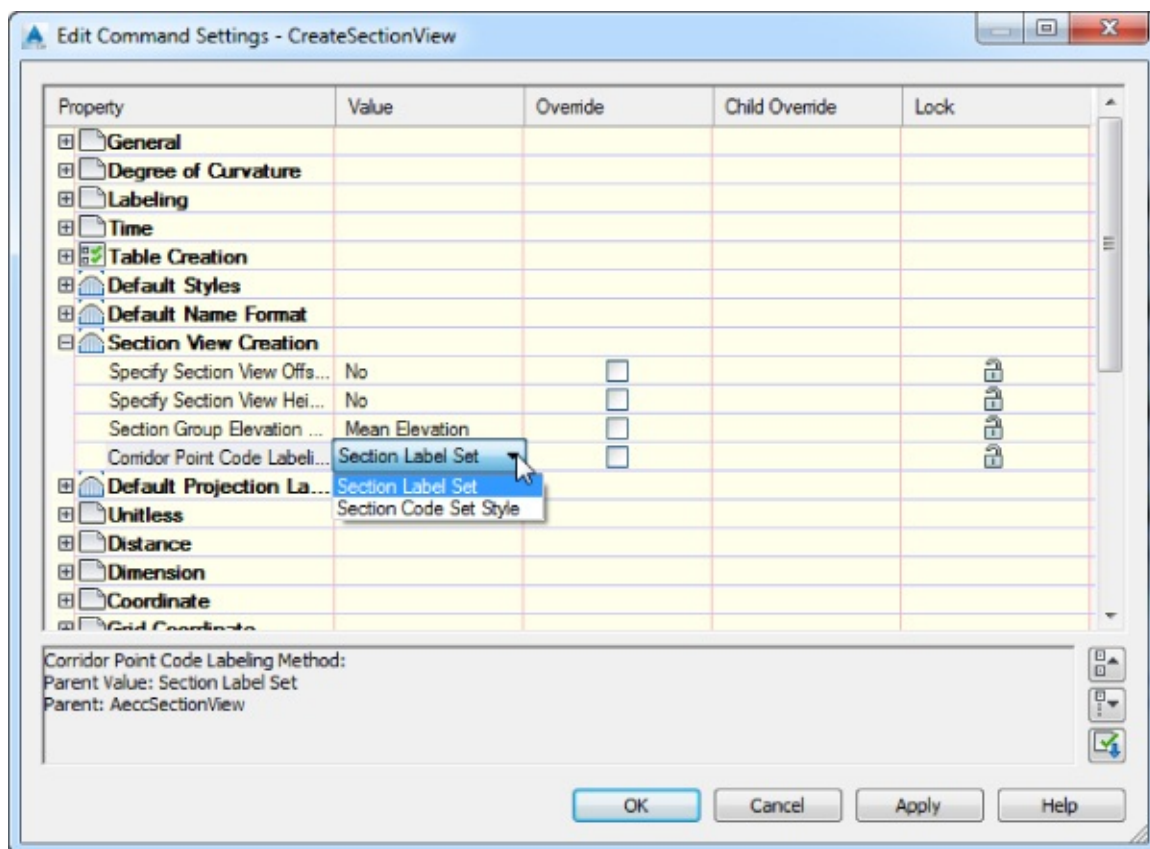


Figure 12.23 Change command settings before creating section views to maintain legacy point labels.

6. Select one of the section views by clicking its station label and from the Section View contextual tab ➤ Modify View panel, choose View Group Properties.
7. Click within the cell for Label Set assigned to the corridor, which is located to the left of the Code With Labels cell that you assigned previously.
8. In the Select Label Set dialog, in the drop-down menu select Corridor Points. Click OK twice to apply the label set and dismiss the dialog. Press Esc to deselect the section view.

You should now have lovely little labels on all of the views, as shown in [Figure 12.24](#). Next, you will convert one of the section views to display the legacy labels for corridor points.

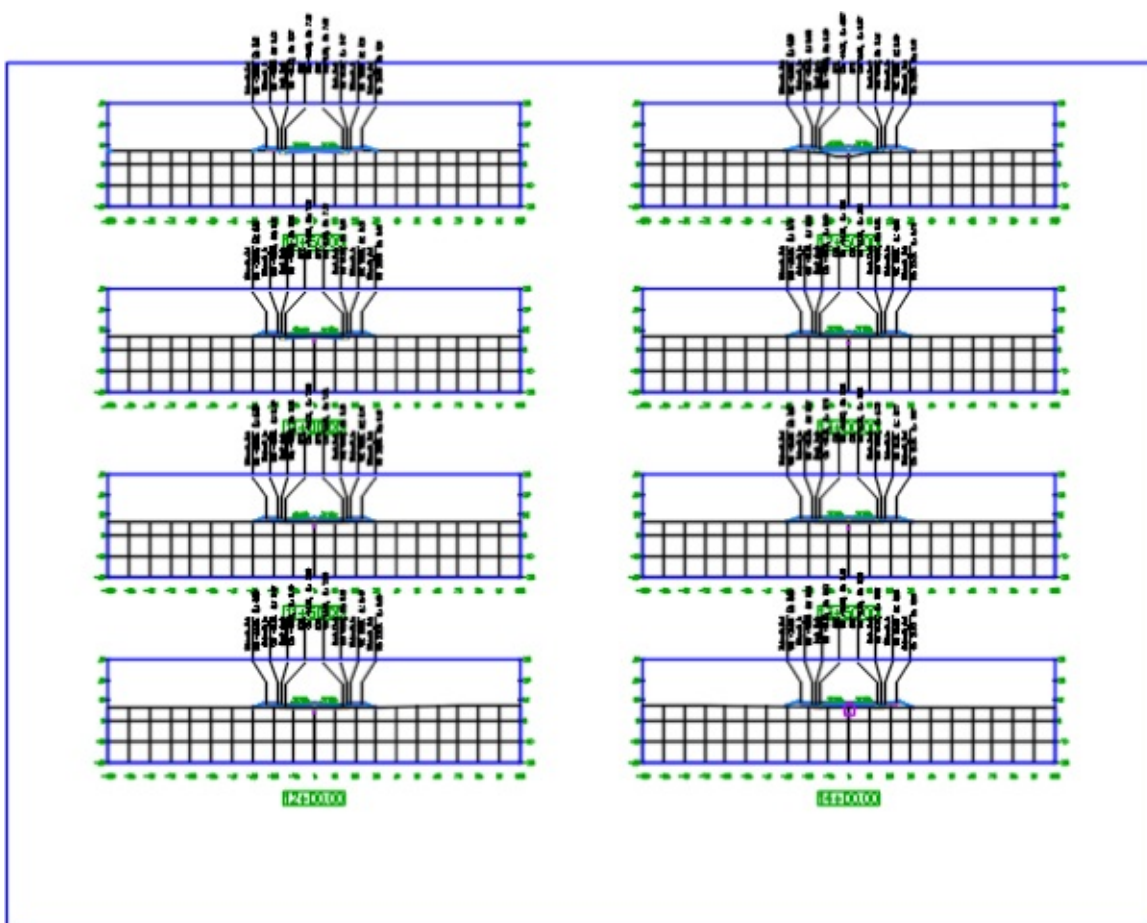


Figure 12.24 Slope, elevation, and offset labels from the code set style and corridor section labels

9. At the command line type in **CORRIDORSECTIONLABELSCONV**. Hit the Enter key and at the Select section views you want to convert: prompt, pick the section view at station 10+50.00 (0+340.00 for metric users) and press the Enter key to accept the selection.
10. At the Convert all corridor point labels to [Code set style labels corridor Points style labels] <Code set style labels>: prompt, press Enter once more to accept the default.
11. The section view will be converted to legacy mode and the code set style defined labels for points will be now displayed for the converted section view.

Check the result of you work, and then save and close the drawing.

Check your work against the file 1206_FinalTouches_FINISHED.dwg or 1206_FinalTouches_METRIC_FINISHED.dwg if time permits and you have the inclination.

Using Mass Haul Diagrams

Mass haul diagrams help designers and contractors gauge how far and how much soil needs to be moved around a site. [Figure 12.25](#) shows the mass haul diagram for a road named Syrah Way. The free haul area is material the contractor has agreed to move at no extra charge. The fact that the mass haul line is always above 0 indicates that the project is in a net cut situation through the length of the Syrah Way alignment.

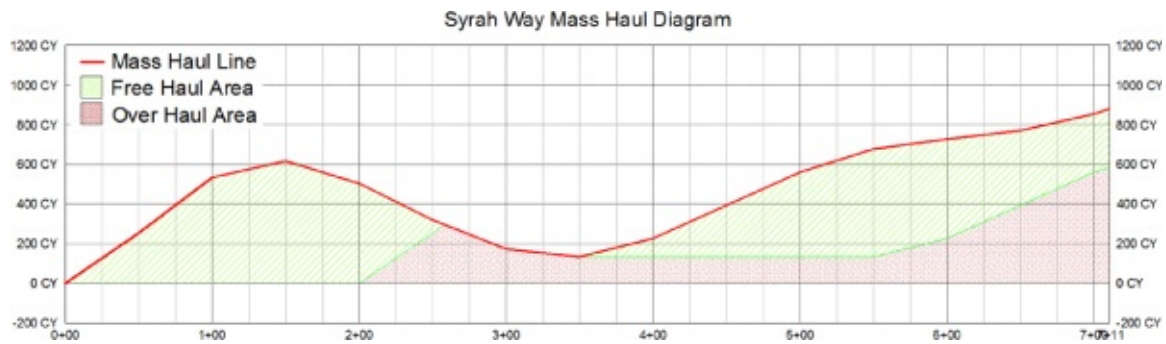


Figure 12.25 Syrah Way Mass Haul diagram (Note that the legend was added for illustration purposes only.)

Taking a Closer Look at the Mass Haul Diagram

In an ideal design situation, there is no leftover cut material and no extra material needs to be brought in. This would mean that net volume = 0. When the line appears above the zero volume point, it is showing net cut values.

As the mass haul diagram continues, it shows the cumulative effect of net cut and fill for the alignment. When the net cut and net fill converge at the zero volume, the earthwork along the alignment is balanced. When the line appears below the zero volume point, it is showing net fill values, as you can see in [Figure 12.26](#).

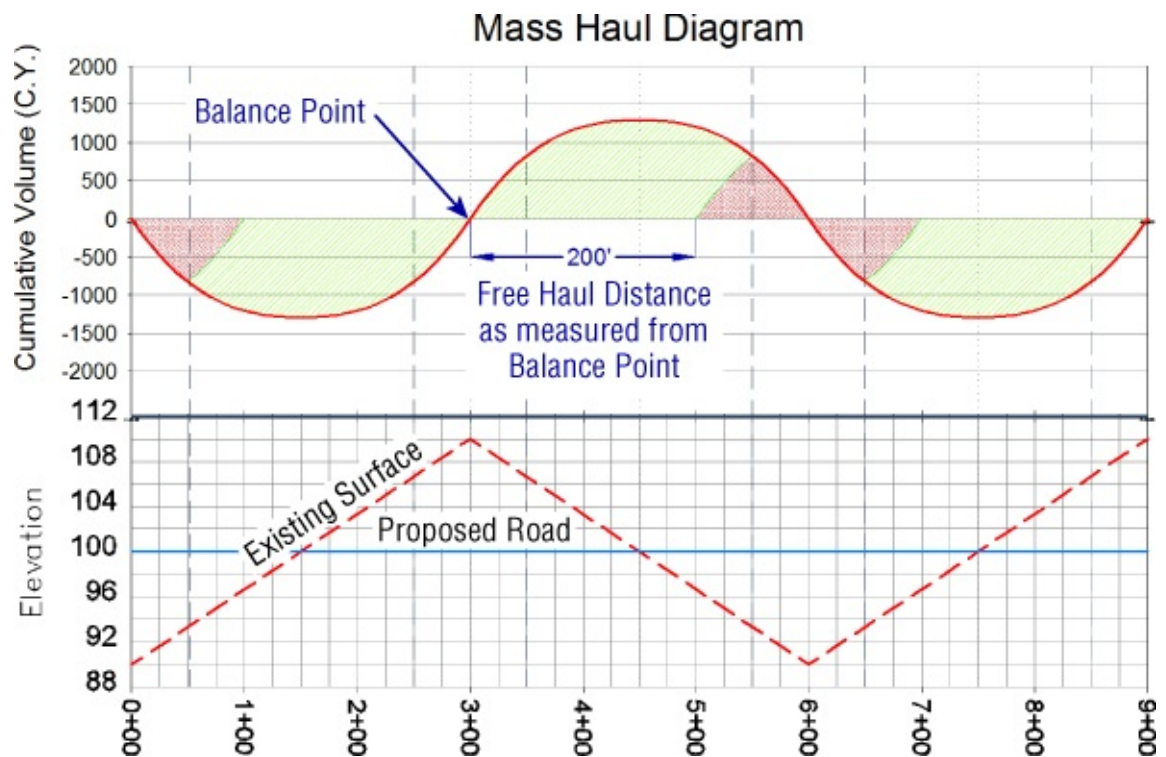


Figure 12.26 The volume, net cut, and net fill on an idealized mass haul diagram shown with profile

Here is some of the terminology you will encounter:

- Balanced** The state where the cumulative cut and fill volumes are equal.
- Origin Point** The beginning of the mass haul diagram, typically at station 0+00, but it can vary depending on your stationing.
- Borrow** A negative value, typically at the end of the mass haul diagram, that indicates fill material that will need to be brought into the site.

Waste A positive value, typically at the end of the mass haul diagram, that indicates cut material that will need to be hauled out of the site.

Free Haul Earthwork that a contractor has contractually agreed to move. This typically specifies a contracted distance.

Over Haul Earthwork that the contractor has not contractually agreed to move. This excess can be used for borrow pits or waste piles.

Create a Mass Haul Diagram

Now, let's put it all together and build a mass haul diagram in Civil 3D for Syrah Way and you'll see how easy it is:

1. Open the 1207_MassHaul1.dwg (1207_MassHaul1_METRIC.dwg) file.

Remember, you can download all the data files from this book's web page.

2.  From the Analyze tab > Volumes And Materials panel, choose Mass Haul.

The Create Mass Haul Diagram Wizard opens.

3. On the General page, complete these steps:
 - a. Verify that you are creating a mass haul diagram for the Syrah Way alignment.
 - b. Verify that you are using the Syrah Way - Sample Lines group.
 - c. Leave all other options at their defaults, as shown in [Figure 12.27](#), and click Next.

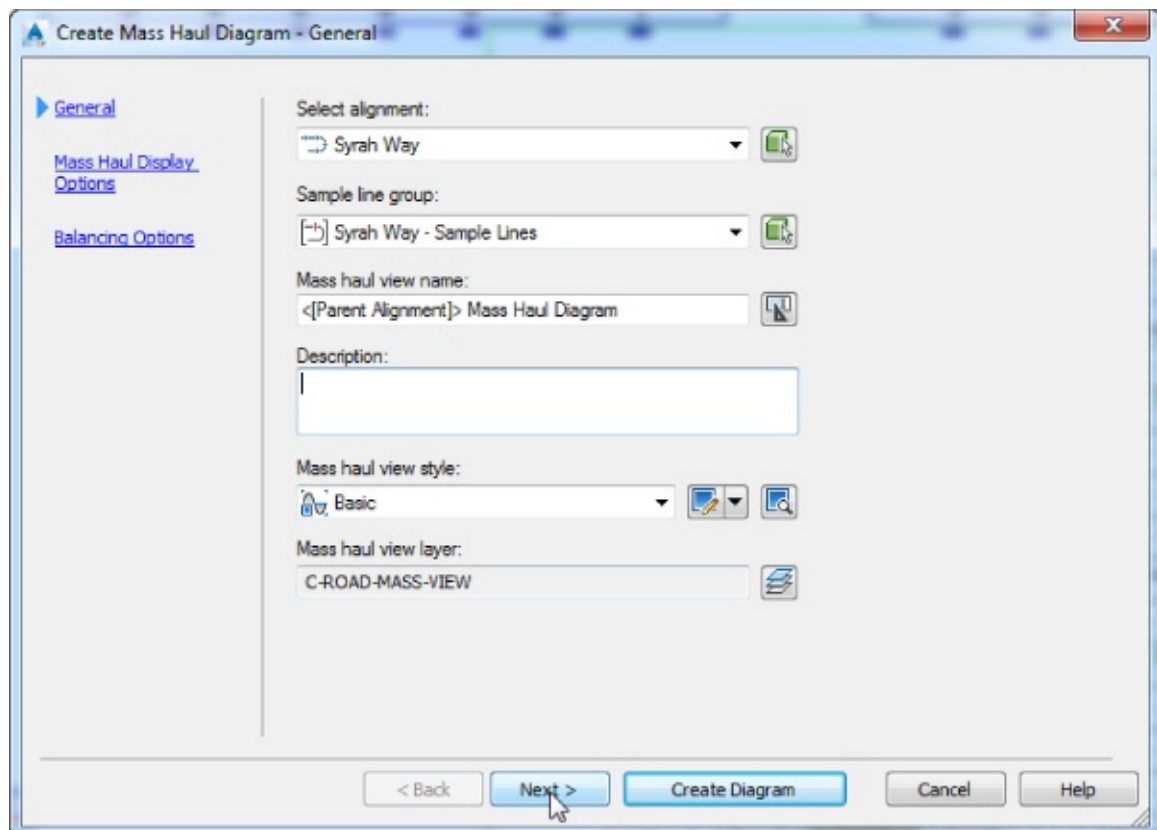


Figure 12.27 The General options of the Create Mass Haul Diagram Wizard

On the Mass Haul Display Options page, no changes are needed.

4. Click Next.

- 5. In the Balancing Options page, place a check mark next to Free Haul Distance.
- 6. Set the distance to **200** (**60** for metric users), as shown in [Figure 12.28](#), and click Create Diagram.

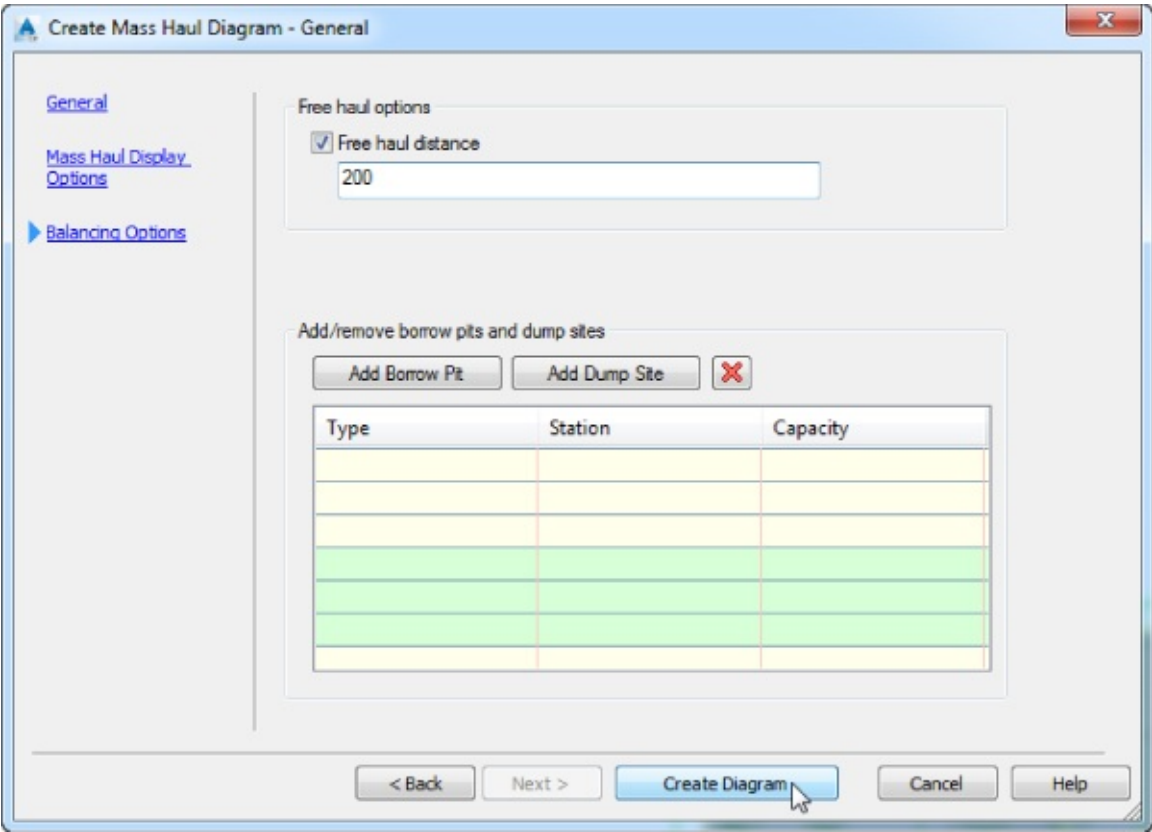


Figure 12.28 The Balancing Options page of the Create Mass Haul Diagram Wizard

- 7. Find a clear spot on your drawing to place the mass haul diagram.
The diagram should look similar to [Figure 12.25](#) (shown previously). Note that the legend was added for explanation purposes and is not generated by Civil 3D. We created this using AutoCAD text and hatching tools.
 - 8. Save the drawing and keep it open for the next exercise.
- Check your completed drawing at this stage against 1207_MassHaul_A.dwg or 1207_MassHaul_A_METRIC.dwg if desired.

Editing a Mass Haul Diagram

When you create a mass haul diagram, you can easily modify parameters and get instant feedback on it. Follow these steps to see how:

- 1. If you completed the previous exercise, continue working in 1207_MassHaul.dwg (1207_MassHaul_METRIC.dwg); otherwise open 1207_MassHaul_A.dwg (1207_MassHaul_A_METRIC.dwg).
- 2. Select anywhere on the mass haul object or grid.

If you look at your mass haul diagram, you can see that nearly all the earthwork for Syrah Way involves net cut, which means hauling away dirt.

The Balancing options give you a chance to change or add waste and borrow pits. You will now make a few changes and observe what happens to the mass haul diagram.



3. Select Mass Haul View or Mass Haul Line and from the Mass Haul View (or Mass Haul Line) contextual tab > Modify panel, click the Balancing Options button.

The Mass Haul Line Properties dialog opens with the settings you used when initially generating the mass haul diagram.

4. Free Haul Distance is presently set for 200 (60 for metric users). Change it to **500'** (**150 m**).
5. Drag the dialog away from the screen to see the changes and then click Apply.
You can further tweak this amount to cut down on the net cut values by adding a dump site.
6. Click the Add Dump Site button.
 - a. Set the station to **1+31.00 (0+040.00)**.
 - b. Set the capacity to **850** cubic yards (**650** cubic meters).
7. When your dialog resembles [Figure 12.29](#), click OK.

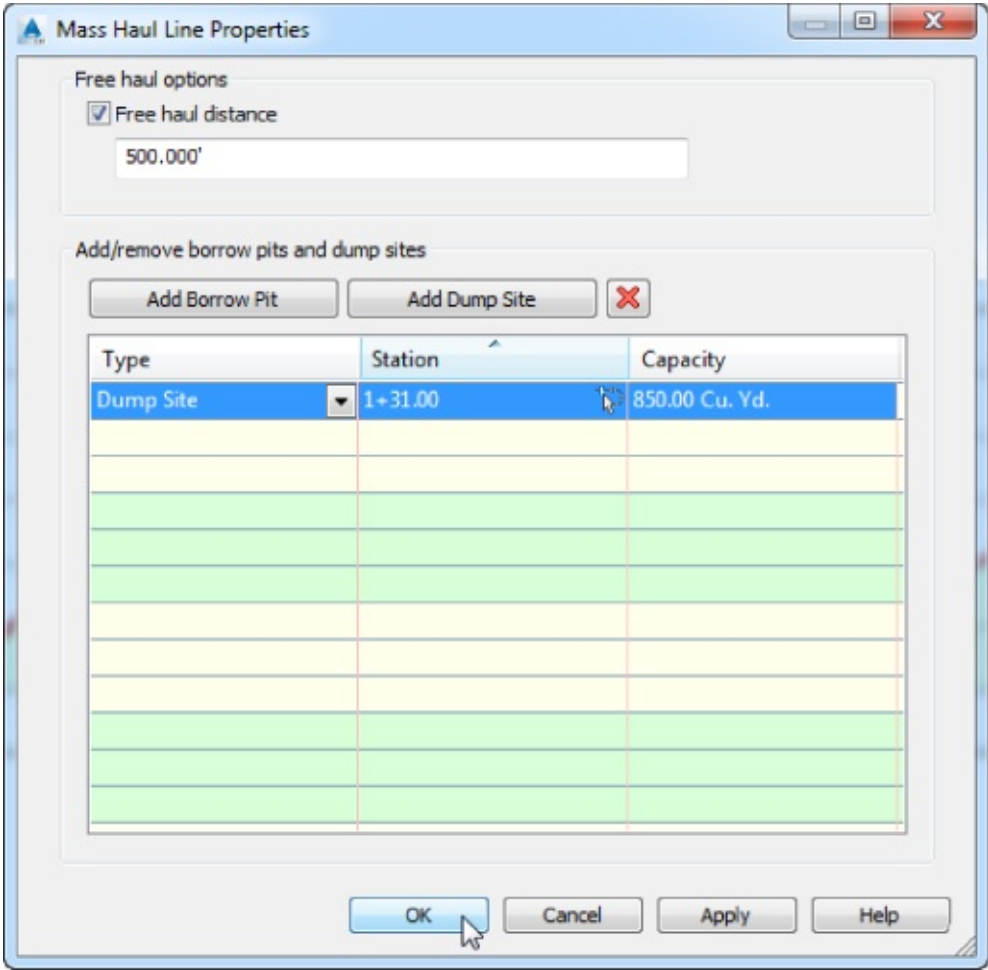


Figure 12.29 The Mass Haul Line Properties dialog: adding a dump site

The mass haul diagram will immediately update to reflect the changes. If the mass haul view does not reflect the desired layout, don't worry. Upon saving the drawing, closing it, and opening it again, the desired layout should be displayed.

8. Save and close the drawing.

If you'd like to compare how you did, open the file 1207_MassHaul_FINISHED.dwg or 1207_MassHaul_METRIC_FINISHED.dwg.

For this stretch of the project, the mass haul diagram ends near zero. The changes you made also decrease the amount of overhaul in the project, potentially decreasing the earthwork cost.

The Bottom Line

Create sample lines. Before any section views can be displayed, sections must be created from sample lines.

Master It Open `MasterIt_1201.dwg` (`MasterIt_1201_METRIC.dwg`) and create sample lines along the USH 10 alignment every 50 units (20 for metric users). Sample all data, and set the left and right swath widths to **50** (**20** for metric users).

Create section views. Just as profiles can be shown only in profile views, sections require section views to be displayed. Section views can be plotted individually or all at once. You can break them up into groups for plotting into sheets.

Master It In the previous exercise, you created sample lines. In that same drawing, create section views for all the sample lines. For US units, use a cross-section scale of $1'' = 20'$ on an Arch D size layout sheet. For metric units, use a cross-section scale of 1:500 on an ISO A0 size sheet. For all other options, use the default settings and styles.

Define and compute materials. Materials are required to be defined before any quantities can be displayed. You learned that materials can be defined from surfaces or from corridor shapes. Corridors must exist for shape selection, and surfaces must already be created for comparison in materials lists.

Master It Using `MasterIt_1201.dwg` (`Master It_1201_METRIC.dwg`), create a materials list that compares Existing Intersection with HWY 10 DATUM Surface. Use the Earthworks Quantity takeoff criteria.

Generate volume reports. Volume reports give you numbers that can be used for cost estimating on any given project. Typically, construction companies calculate their own quantities, but developers often want to know approximate volumes for budgeting purposes.

Master It Continue using `MasterIt_1201.dwg` (`MasterIt_1201_METRIC.dwg`). Be sure you have completed all the previous “Master It” exercises before continuing. Use the materials list created earlier to generate a volume report. Create a web browser–based report and a total volume table that can be displayed on the drawing.

Chapter 13

Pipe Networks

In this chapter, you'll look at two different types of pipe systems used in Autodesk® AutoCAD® Civil 3D® installations. *Pipe networks* refer to the gravity-based object type in Civil 3D that works best for sewer systems. *Pressure networks* are a separate object type that works best for systems such as water and gas.

First, you will take an in-depth look at pipe networks. In the latter part of this chapter, you'll learn about pressure networks.

In this chapter, you will learn to

- Create a pipe network by layout
- Create an alignment from network parts and draw parts in profile view
- Label a pipe network in plan and profile
- Create a dynamic pipe table

Setting Up a Pipe Network

Before you can draw pipes in your project, some setup is needed. The setup discussed in this first section should be done in your Civil 3D template so it can be applied to multiple projects. In this section, you'll examine what is needed for an example waste water network.

Pipe networks contain the following object types:

Pipes *Pipes* are components of a pipe network that primarily represent underground pipes or culverts. The standard catalog has pipe shapes that are circular, elliptical, egg-shaped, and rectangular and are made of materials that include PVC, RCP, DI, and HDPE. You can use Part Builder (discussed later in this chapter) to create your own shapes and materials if the default shapes and dimensions can't be adapted for your design.

Structures *Structures* are the components of a pipe network that represent manholes, catch basins, inlets, joints, and any other type of junction between two pipes. The standard catalog includes inlets, outlets, junction structures with frames (such as manholes with lids or catch basins with grates), junction structures without frames (the same as the previous ones, less the frame), and simple shape structures.

Null Structures *Null structures* are needed when two pipes are joined without a structure; they act as a placeholder for a pipe endpoint. They have special properties, such as allowing pipe cleanup at pipe intersections. Most of the time, you'll create a style for them that doesn't plot or is invisible for plotting purposes. (See Chapter 19, “Object Styles,” for more information on creating structure styles.)

Understanding Parts List—Waste Water Systems

A *parts list* contains the pieces needed to complete a pipe design. Both pipe networks and pressure networks use parts lists to help you organize design elements and determine how they will appear in a

drawing. For example, you'll want to have different parts available when working with waste water than you'll want when working with storm sewers.

Pipe network parts lists (for gravity systems) contain pipes, structures, pipe rules, pipe and structure styles, render material, and the ability to associate a quantity takeoff pay item number with each item. You'll learn more about pressure network parts lists later in this chapter.

Examples of pipe network parts lists include

- Storm sewer
 - Catch basin/inlet structures
 - Manhole structures
 - Concrete pipe
 - HDPE pipe
- Waste water (gravity), as shown in [Figure 13.1](#)

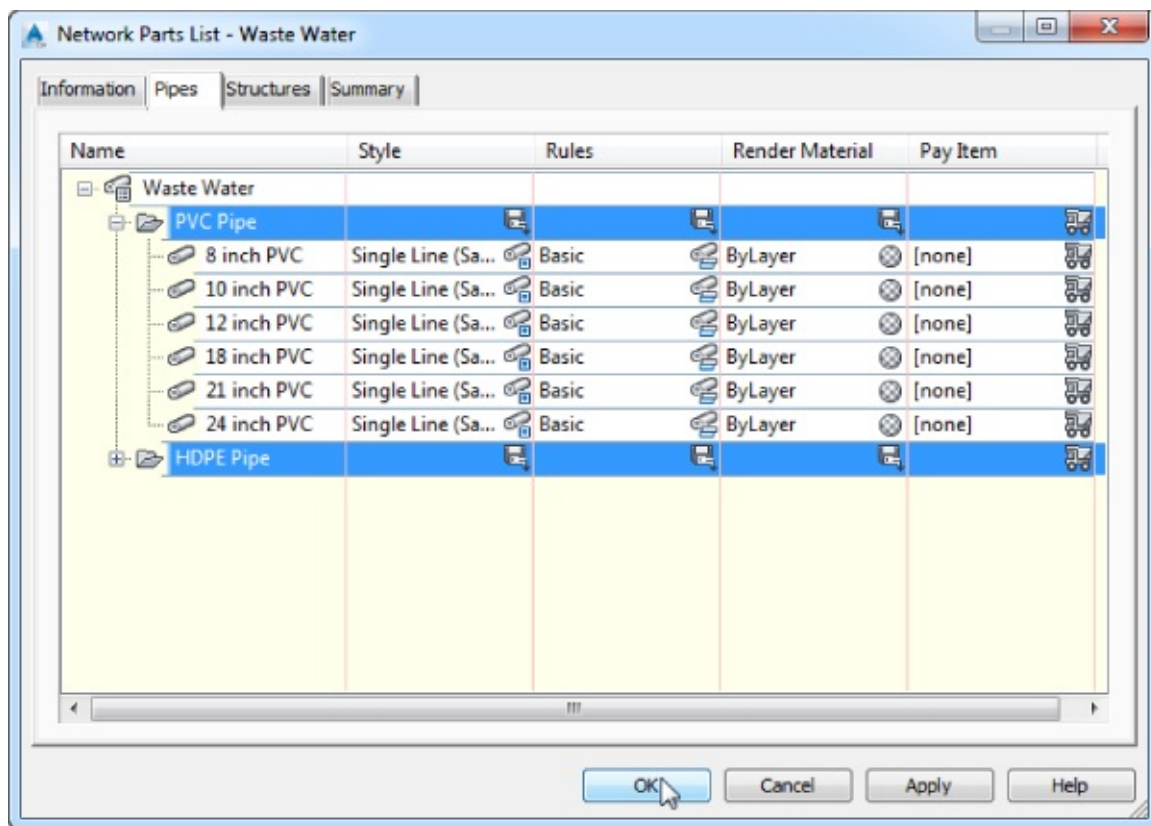


Figure 13.1 A waste water parts list

- Manhole structures
- HDPE pipe
- PVC pipe

In the upcoming section, you will explore planning and creating a parts list. You'll start by examining your local requirements, and then you will compare those needs with what is available in the software.

Planning a Typical Pipe Network

Let's look at a typical waste water design. You'll start by going through the waste water specifications for

the jurisdiction in which you're working. The following is an example of a completed checklist for the example's jurisdiction, Sample County:

Waste water network in Sample County

- Recommended structures: Standard concentric manhole, small-diameter cleanout.
- Structure behavior: All structures have 1.5' (0.46 m) sump, rims, and a 0.10' (0.03 m) invert drop across all structures. All structures' rim elevations are designed at finished road grade.
- Structure symbology: Manholes are shown in plan view as a circle with an S inside. Cleanouts are shown as a hatched circle (see [Figure 13.2](#)).

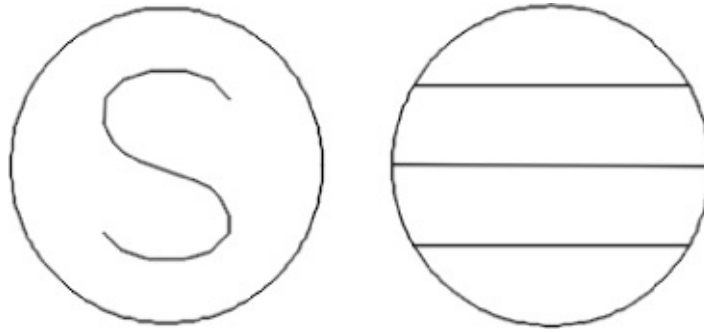


Figure 13.2 Waste water manhole in plan view (left) and a cleanout in plan view (right)

- Manholes are shown in profile view with a coned top and rectangular bottom. Cleanouts are shown as a rectangle (see [Figure 13.3](#)).

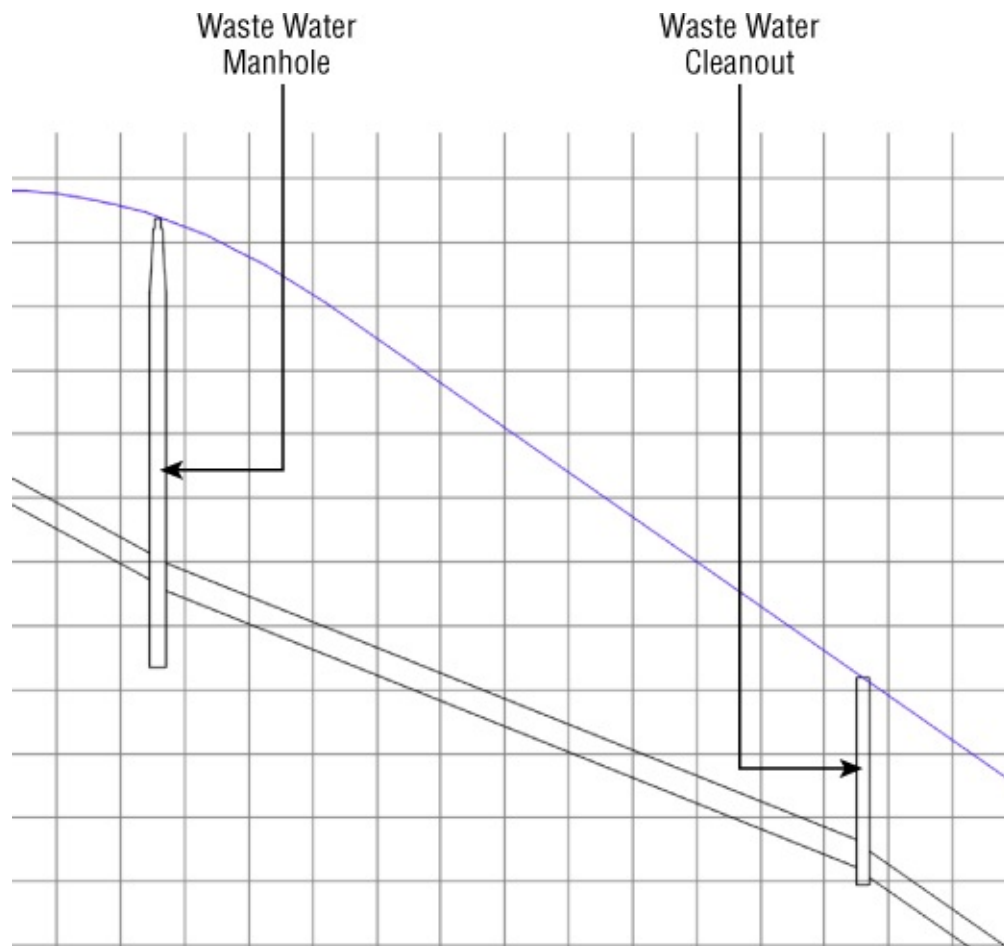


Figure 13.3 Profile view of a waste water manhole (left) and a cleanout (right)

- Recommended pipes: 8" (200 mm), 10" (250 mm), and 12" (300 mm) PVC pipe, per manufacturer

specifications.

- Pipe behavior: Pipes must have a minimum cover of 4' (1.22 m) to the top of the pipe; the maximum slope for all pipes is 10 percent, although minimum slopes may be adjusted to optimize velocity as follows:

Pipe size	Minimum slope
8" (200 mm)	0.40%
10" (250 mm)	0.28%
12" (300 mm)	0.22%

- Pipe symbology: In plan view, pipes are shown with a CENTER2 linetype line that has a thickness corresponding to the inner diameter of the pipe. In profile view, pipes show both inner and outer walls, with a hatch between the walls to highlight the wall thickness (see [Figure 13.4](#)).

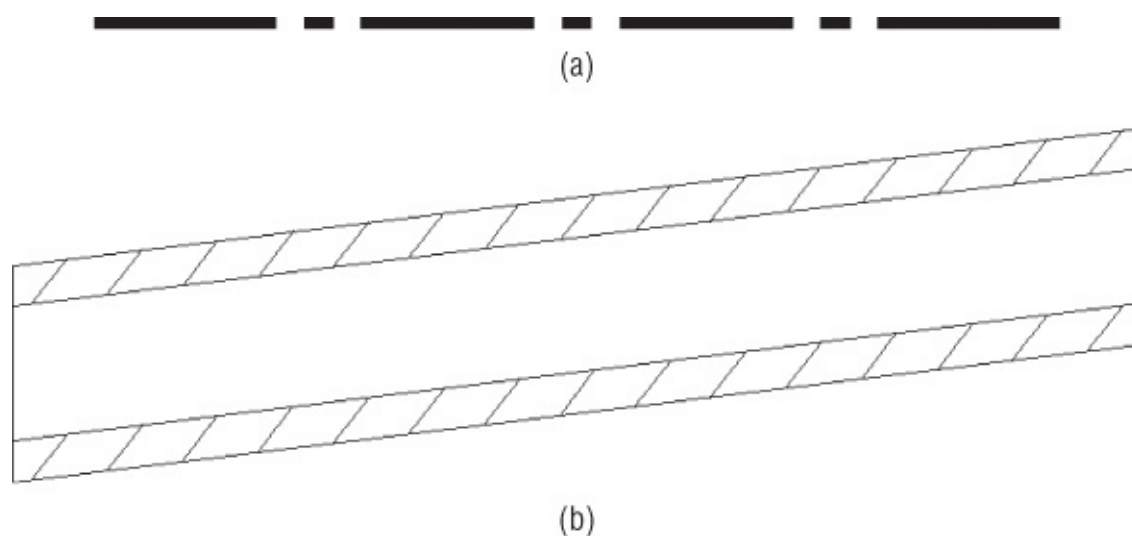


Figure 13.4 Waste water pipe in plan view (a) and in profile view (b)

Now that you know your requirements for Sample County, the next step is to begin entering this information into your Civil 3D template file.

Using Part Rules

Rules define the constraints on things like minimum slope, sump depths, and pipe-invert drops across structure. Rules are assigned to parts in the parts list. Depending on the type of network and the complexity of your design, you may have many rules. Civil 3D allows you to establish structure and pipe rules that will assist in respecting these constraints during initial layout and edits.

Rules don't restrict you from drawing the location and lengths you want. As you draw your pipe network in plan view, Civil 3D tries to adhere to as many rules as it can. If the constraints defined in the rules conflict with each other (for example, maximum slope may be violated to maintain minimum depth), rules are violated even in the layout stage.

Furthermore, rules will never change your design without your direct guidance. For example, if the surface tied to a structure changes, the rim elevation *will* change, but the pipe invert elevations *will not* change.

To see where the design needs to be altered, you will need to view the violations in the Status column of Panorama. Panorama is the only place where rule violations are flagged; there is no graphic

representation of rule violations in plan view.

Structures and pipes have separate rule sets. When creating rules, don't be thrown off by the fact that the category always reads Storm Sewer, as you'll see in [Figure 13.6](#). You can use these rules regardless of the type of parts list you are creating. You can then add these rule sets to specific parts in your parts list, which you'll build later in this chapter.

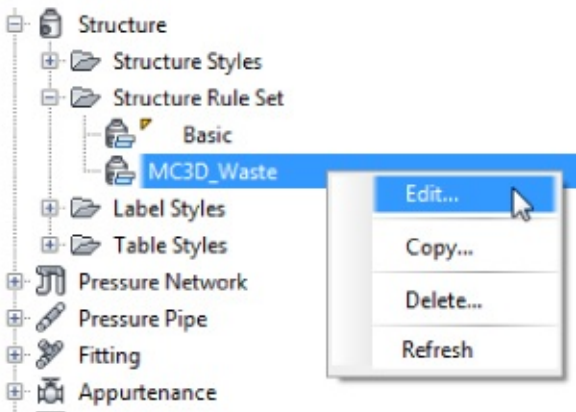


Figure 13.5 On the Settings tab of Toolpace, right-click a structure rule set to edit it.

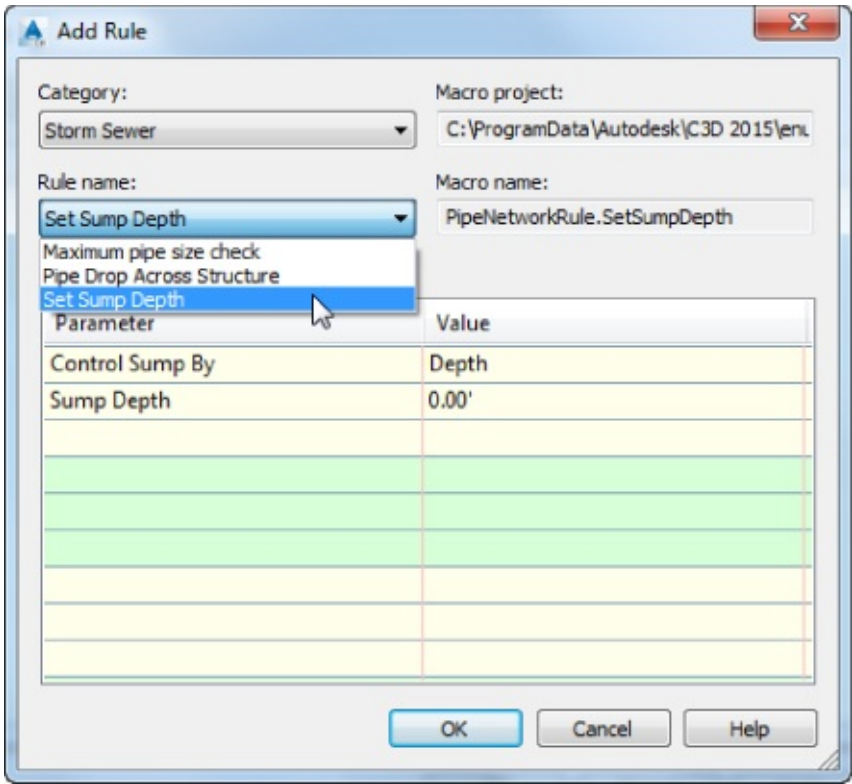


Figure 13.6 In the Add Rule dialog, the category always shows Storm Sewer, but you can use rules for whatever type you want.

Understanding Structure Rules

Structure rule sets are located on the Settings tab of Toolpace, under the Structure branch, as shown in [Figure 13.5](#).

Right-click the rule set and choose Edit. In the Rules tab, click the Add Rule button on the Rules tab in the Structure Rule Set dialog. The Add Rule dialog will appear, which will allow you to access all the various structure rules (see [Figure 13.6](#)). Although it looks like you can, you won't be able to change the values until you finalize adding the rule. The rules that are available for the structures are different from

the ones that are available for and apply to pipes.

You will have a chance to work with this firsthand in the upcoming exercise.

Maximum Pipe Size Check Rule

The Maximum Pipe Size Check rule (see [Figure 13.7](#)) examines all pipes connected to a structure and flags a violation in Prospector if any pipe is larger than your rule. This is a violation-only rule—it won't change your pipe size automatically.

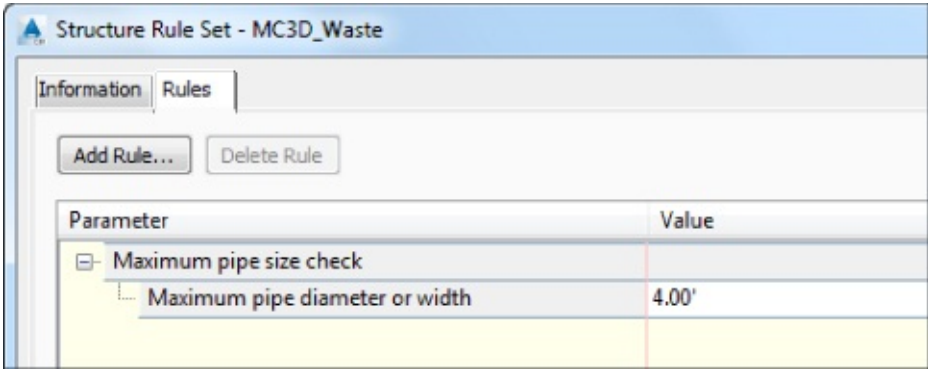


Figure 13.7 The Maximum Pipe Size Check rule option

Pipe Drop Across Structure Rule

The Pipe Drop Across Structure rule (see [Figure 13.8](#)) tells any connected pipes how their inverts (or alternatively, their crowns or centerlines) must relate to one another.

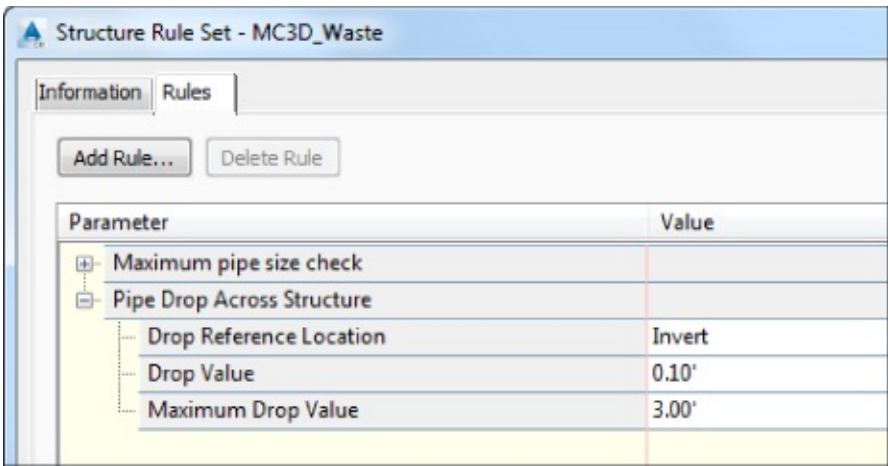


Figure 13.8 The Pipe Drop Across Structure rule options

When a new pipe is connected to a structure that has the Pipe Drop Across Structure rule applied, the following checks take place:

- A pipe drawn to be exiting a structure has an invert equal to or lower than the lowest pipe entering the structure based on the minimum drop across structure setting.
- A pipe drawn to be entering a structure has an invert equal to or higher than the highest pipe exiting the structure based on the minimum drop across structure setting.
- Minimum specified drop distance is calculated by measuring between the lowest entering pipe and the highest exiting pipe. If at any time this value is lower or higher than the rule setting, it will be flagged in the Status column of the Panorama view, as noted previously.

In the hypothetical waste water example, you're required to maintain a 0.10' (3 cm) invert drop across all

structures. You'll use this rule in your structure rule set in the next exercise.

Set Sump Depth Rule

Sump depth is additional structure depth below the lowest pipe invert. The Set Sump Depth rule ([Figure 13.9](#)) establishes sump depth for structures.

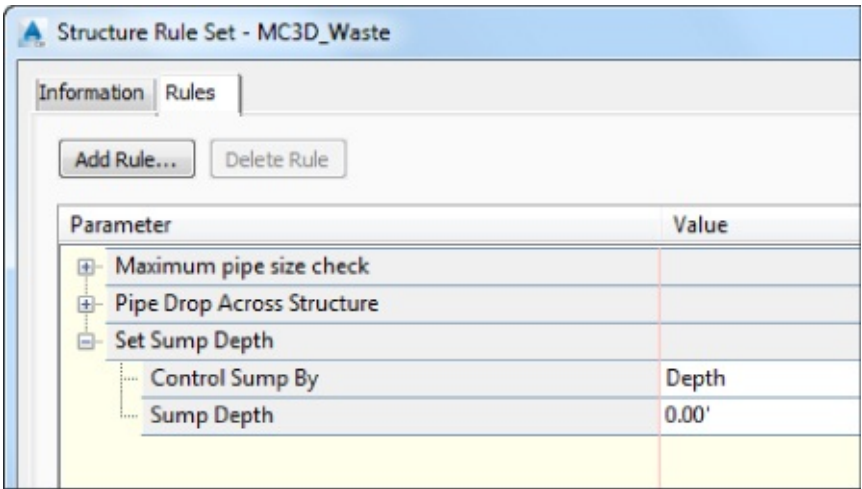


Figure 13.9 The Set Sump Depth rule option

It's important to add a sump depth rule to all of your structure rule sets. If no sump rule is used, Civil 3D will assume a 2' sump for English units and 2 meters in metric units! If you forget to set this before placing structures, you will need to edit the individual structure properties or make the rule and retroactively apply it to the network.

In the hypothetical waste water example, all the structures have a 1.5' (0.5 m) sump depth. You'll use this rule in your structure rule set in the next exercise.

Understanding Pipe Rules

Pipe rule sets are located on the Settings tab of Toolspace, under the Pipe branch. After you right-click a pipe rule set and choose Edit (as shown in [Figure 13.10](#)), you can access all the pipe rules by clicking the Add Rule button on the Rules tab of the Pipe Rule Set dialog.

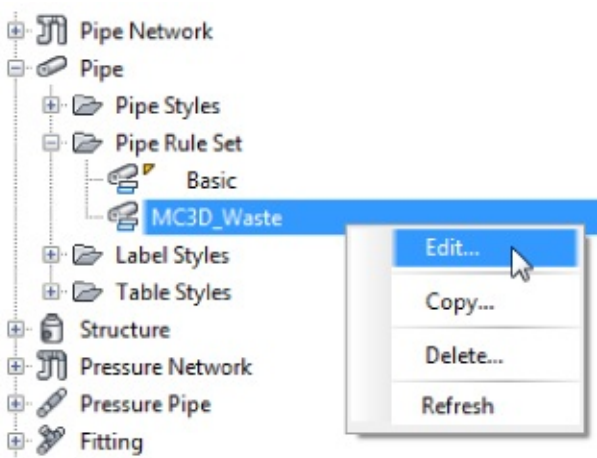


Figure 13.10 Accessing the pipe rules dialog from the Settings tab

Cover And Slope Rule

The Cover And Slope rule ([Figure 13.11](#)) allows you to specify your desired slope range and cover

range. As you place your pipe network, Civil 3D tries to use the minimum and maximum depths and minimum and maximum slopes to set the initial pipe depth and slope.

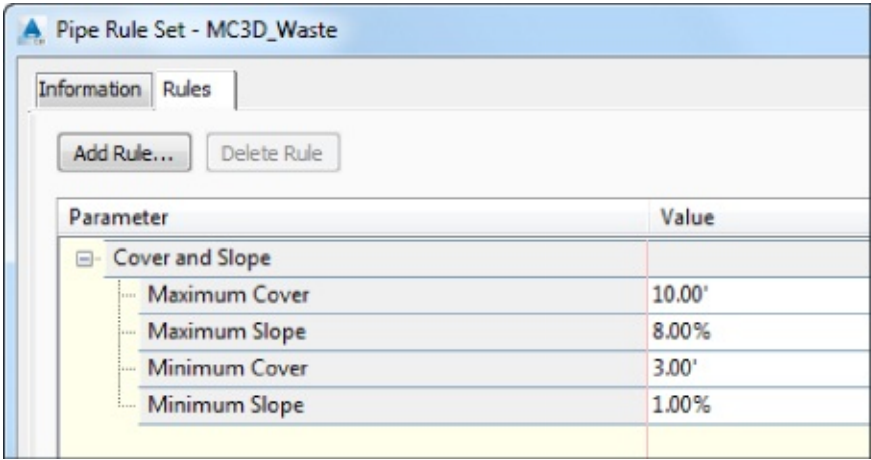


Figure 13.11 The Cover And Slope rule options

Depending on your site conditions, applying this rule to every pipe may not be feasible. In this situation, the rule becomes what is referred to as *violation only*. You will still be able to place pipes that violate the rule, and the rule will cause a violation message to show in the Status column of the Pipe Network panel of Panorama.

If part of your design changes and you'd like Civil 3D to make another attempt to enforce the Cover And Slope rule, you can use the Apply Rules feature, which is discussed later in this chapter.

Cover Only Rule

The Cover Only rule ([Figure 13.12](#)) is designed for use with pipe systems where slope can vary or isn't a critical factor. Like Cover And Slope, this rule is used on first placement. Manual edits can cause rules to be violated. The rule will show as a violation in the Status column of the Pipe Network panel, but no changes to your design take place until you use the Apply Rules command.

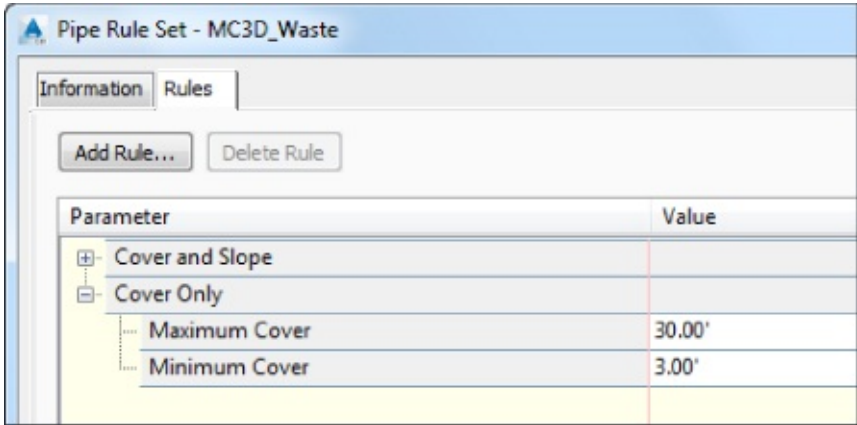


Figure 13.12 The Cover Only rule options

Length Check Rule

Length Check is a violation-only rule; it won't change your pipe length size automatically. The Length Check options (see [Figure 13.13](#)) allow you to specify minimum and maximum pipe lengths.

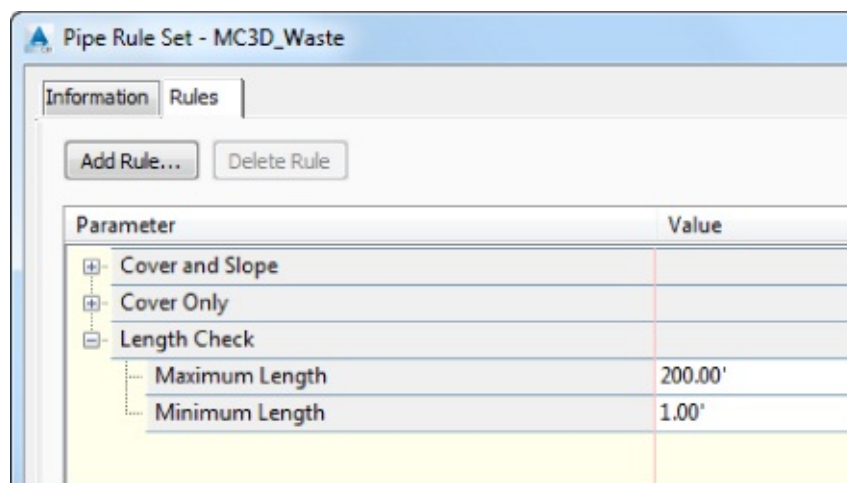


Figure 13.13 The Length Check rule options

Pipe To Pipe Match Rule

The Pipe To Pipe Match rule ([Figure 13.14](#)) is also designed for use where there are no true structures (only null structures), including situations where pipe is placed to break into an existing pipe. This rule determines how pipe inverts are assigned when two pipes come together, similar to the Pipe Drop Across Structure rule.

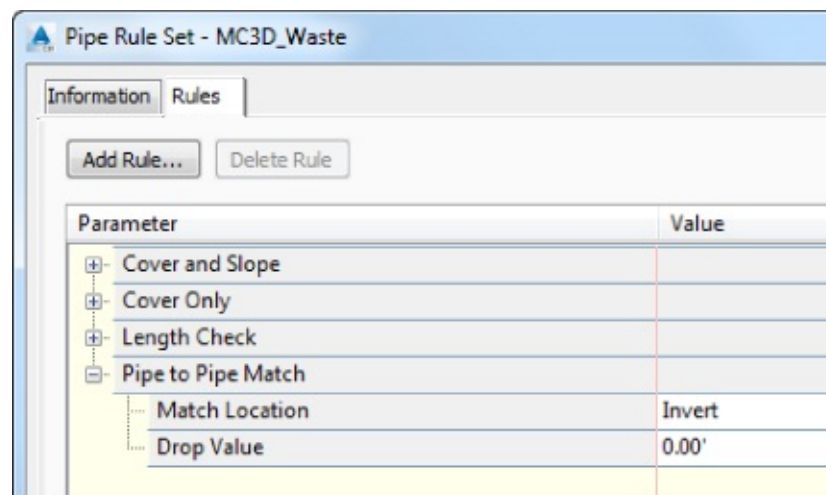


Figure 13.14 The Pipe To Pipe Match rule options

Set Pipe End Location Rule

Without the Set Pipe End Location rule ([Figure 13.15](#)), Civil 3D assumes you are measuring pipes from center of structure to center of structure. With the rule in place, you have the capability to determine where the pipe end is located on the structure. The options are Structure Center (the default without the rule), Structure Inner Wall, or Structure Outer Wall.

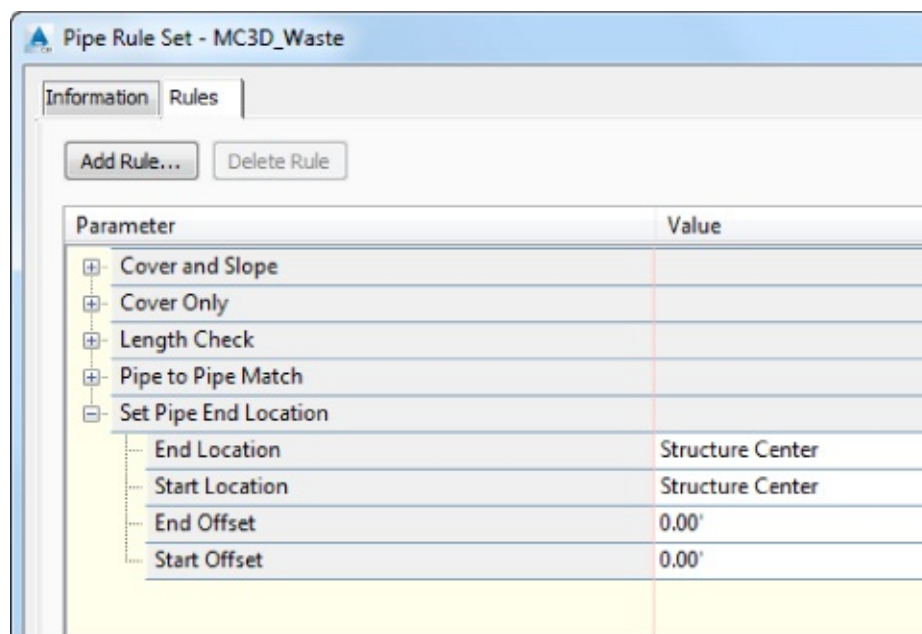


Figure 13.15 The Set Pipe End Location rule options

End Offset and Start Offset are used if you would like to have your pipes protrude past the inner or outer wall on the respective ends. The offset is ignored if the location for the end is set to the center of the structure. The value must be positive and will be ignored if the additional length causes the pipe end to be located past the center of the structure.

Graphically, you probably won't be able to tell that this setting is active until you add labels. The Set Pipe End Location will make a difference in the length and slope labels on pipes.

Creating Structure and Pipe Rule Sets

In this exercise, you'll create one structure rule set and three pipe rule sets for a hypothetical waste water project:

1. Open the 1301_RulesTemplate.dwg (1301_RulesTemplate_METRIC.dwg) drawing, which you can download from this book's web page at www.sybex.com/go/masteringcivil3d2015.
2. On the Settings tab of Toolspace, expand the Structure branch, right-click Structure Rule Set, and click New.
3. Switch to the Information tab and enter **Waste Water** in the Name text box.
4. Switch to the Rules tab, and click the Add Rule button.
5. In the Add Rule dialog, choose Pipe Drop Across Structure in the Rule Name drop-down. Click OK.
6. Expand the new rule and confirm that the parameters in the Structure Rule Set dialog are the following:

Drop Reference Location	Invert
Drop Value	0.1' (0.03 m)
Maximum Drop Value	3' (1 m)

These parameters establish a rule that will match your hypothetical municipality's standard for the drop across waste water structures.

7. Click the Add Rule button again.

8. In the Add Rule dialog, choose Set Sump Depth in the Rule Name drop-down. Click OK.
9. Expand the new rule. Change the Sump Depth parameter to **1.5' (0.5 m)** in the Structure Rule Set dialog to meet the hypothetical municipality's standard for sump in waste water structures, and click OK.
10. On the Settings tab of Toolspace, expand the Pipe branch, right-click the pipe rule set, and choose New.
11. Switch to the Information tab and enter **8 Inch Waste Water Pipe** (for metric, **200 mm Waste Water Pipe**) for the name.
12. Switch to the Rules tab. Click Add Rule.
13. In the Add Rule dialog, choose Cover And Slope in the Rule Name drop-down. Click OK.
14. Expand the Cover And Slope rule and then modify the parameters to match the constraints established by your hypothetical municipality for 8" (200 mm) pipe, as follows:

Maximum Cover	10' (3 m)
Maximum Slope	10%
Minimum Cover	4' (1.5 m)
Minimum Slope	0.40%

15. Click OK.
16. In the Settings tab of Toolspace, expand Pipe Rule Set and select the rule set you just created. Right-click, and choose Copy.
17. Switch to the Information tab and enter **10 Inch Waste Water Pipe** (for metric, **250 mm Waste Water Pipe**) in the Name text box.
18. Switch to the Rules tab, expand the Cover And Slope rule, and then modify the parameters to match the constraints established by your hypothetical municipality for a 10" (250 mm) pipe, as follows.

Maximum Cover	10' (3 m)
Maximum Slope	10%
Minimum Cover	4' (1.5 m)
Minimum Slope	0.28%

19. Click OK when you have finished modifying the rule set. Repeat the process to create a rule set for the 12" (300 mm) pipe using the following parameters:

Maximum Cover	10' (3 m)
Maximum Slope	10%
Minimum Cover	4' (1.5 m)
Minimum Slope	0.22%

20. You should now have one structure rule set and three pipe rule sets.
21. Save and close your drawing.

For your reference, completed versions of the drawing (1301_RulesTemplate_FINISHED.dwg and 1301_RulesTemplate_METRIC_FINISHED.dwg) are available with the rest of this book's download.

Putting Your Parts List Together

Everything you've done in this chapter up to this point is leading up to the creation of the parts list. Your parts lists should reside in your Civil 3D template file. Having this information in your template will prevent you from needing to re-create the parts list for every project. You will have multiple parts lists for each type of system you are creating and possibly for each jurisdiction you work in. You might even consider setting up a template for each jurisdiction.

1. Open the 1302_PartsListTemplate.dwg (1302_PartsListTemplate_METRIC.dwg) drawing.
2. From the Settings tab, expand the Pipe Network branch, and expand Parts Lists.

In the drawing, there are currently two parts lists: Standard and Storm Sewer.

3. Right-click Parts Lists and select Create Parts List.
4. In the Network Parts List dialog, switch to the Information tab and name the parts list **Sample County Waste Water**.
5. Switch to the Pipes tab.
6. Right-click New Parts List and select Add Part Family, as shown in [Figure 13.16](#).

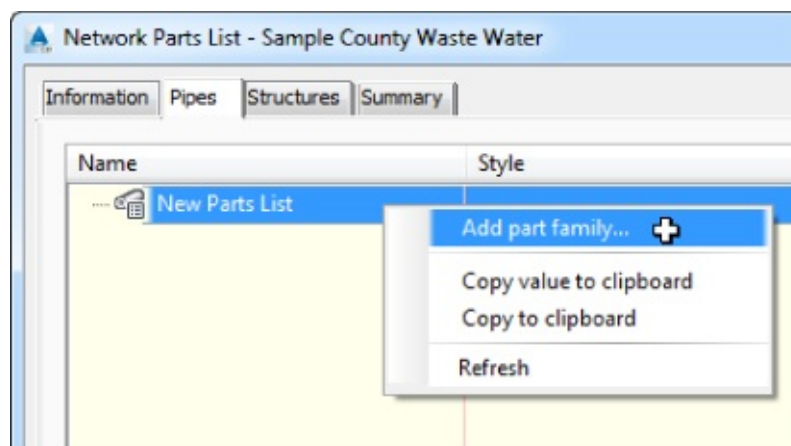


Figure 13.16 Add a part family for your new parts list.

The Part Catalog dialog will appear.

7. As shown in [Figure 13.17](#), place a check mark next to PVC Pipe (PVC Pipe SI in the metric catalog) and click OK.

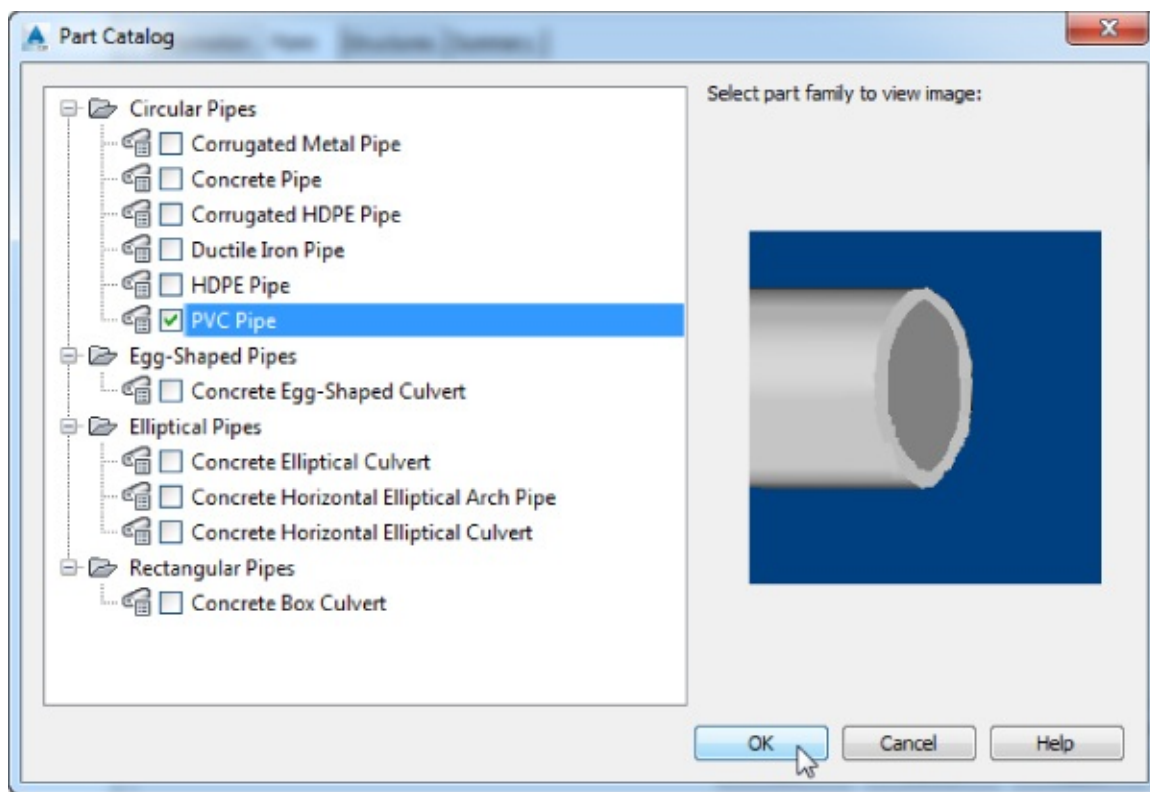


Figure 13.17 Choosing a part family to add

At this step, the parts list name should appear at the top of the pipe list.

8. Expand the pipe list name to see the new PVC Pipe family you just added.
9. Right-click PVC Pipe (PVC Pipe SI for metric users) and select Add Part Size, as shown in [Figure 13.18](#).

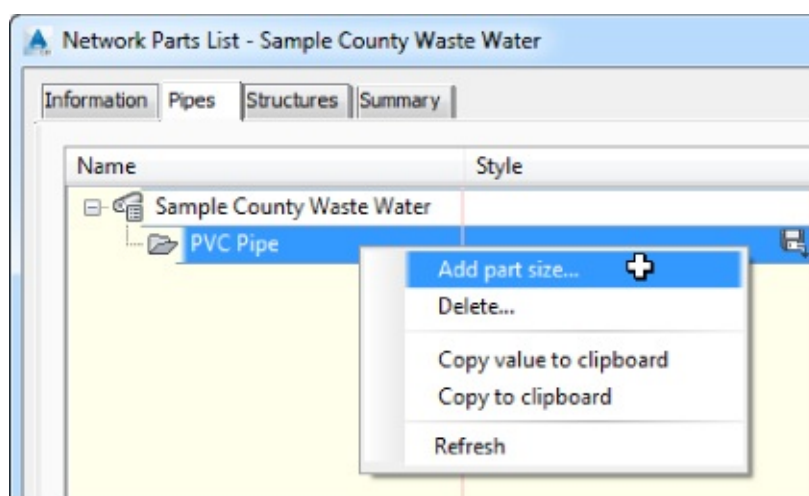


Figure 13.18 Add a new part size to the PVC Pipe part family.

10. In the Part Size Creator dialog, click the drop-down in the Inner Pipe Diameter field, as highlighted in [Figure 13.19](#).

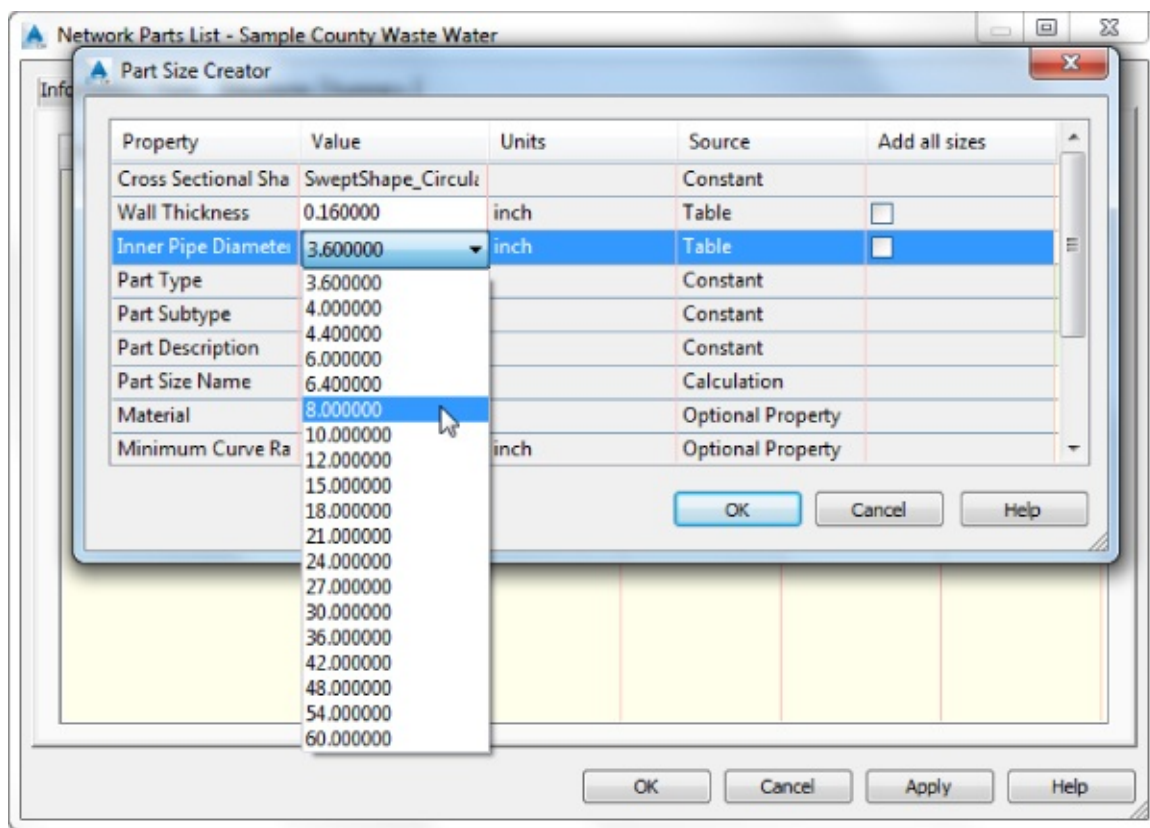




Figure 13.19 Set the diameter and material for all the needed pipes.

1. Select 8 Inch (metric: 200 mm). Click OK.
2. Expand the new PVC Pipe category to examine the result. Repeat steps 9 through 11 for 10" (250 mm) and 12" (300 mm) pipes.

In this example, the pipes will share the same style. Using the disk icon in the PVC Pipe part family row of the table, you will apply your style choice to the entire PVC family.

For the columns Render Material and Pay Item, leave the defaults. Render materials and pay items do not affect the design portion of the pipe network. Render materials are used if you want to give a realistic material to the object for visualization purposes. You will take an in-depth look at assigning pay items to a parts list in Chapter 17, "Quantity Takeoff."

3.  In the PVC Pipe part family row, click the disk icon in the Style column.
4. Set Pipe Style to Single Line (Waste Water) and click OK.
5.  For each pipe size, click the Pipe Rule Set icon in the Rules column, choose the respective rule in the Pipe Rule Set dialog, and then click OK.

At the end of the process, your Pipes tab will look like [Figure 13.20](#).

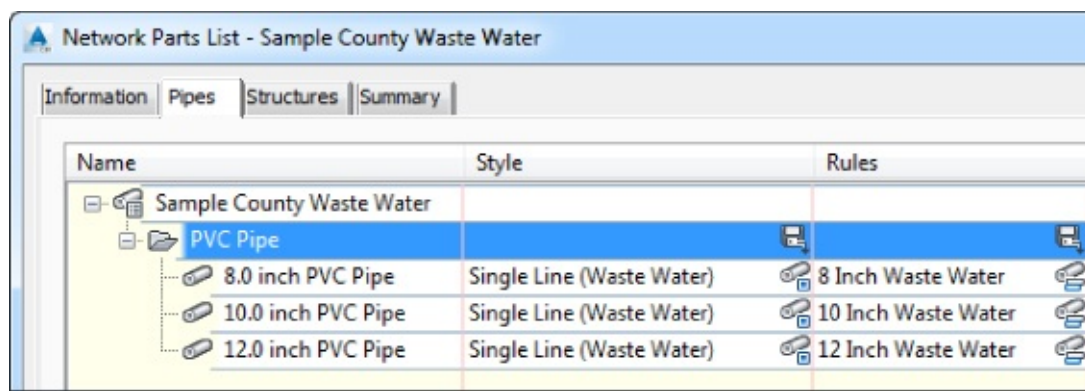



Figure 13.20 The completed Pipes tab

16. Switch to the Structures tab and expand New Parts List.
Notice there is already a null structure in the listing.
17.  Expand the Null Structure part family and click the Structure Style icon for the null structure.
18. Change the Null Structure style to Null and click OK.
19. Right-click the main heading New Parts List and select Add Part Family.
20. In the Part Catalog dialog, locate the Junction Structures With Frames grouping and place a check mark next to Concentric Cylindrical Structure and Cylindrical Structure Slab Top Circular Frame (in the metric drawings, the structure descriptions end with SI), as shown in [Figure 13.21](#). Click OK.

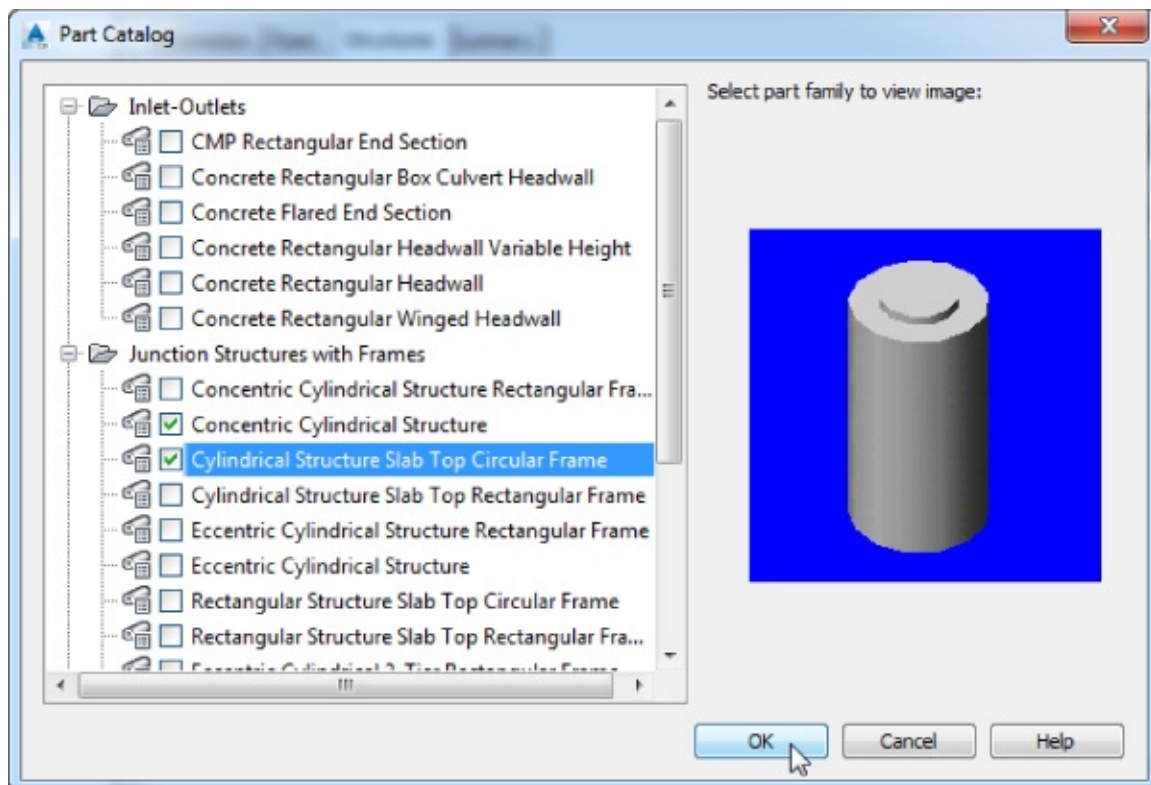


Figure 13.21 Adding structure part families

21. Right-click Concentric Cylindrical Structure and select Add Part Size.
22. In the Part Size Creator dialog, select an Inner Structure Diameter of 48" (1,200 mm).
23. Leave all other size options at their defaults, and click OK.
24. Repeat steps 22 through 24 to add the 60" (1,500 mm) structure.

If the Add Part Size option is not available in the list, make sure you don't have multiple parts selected. In this case, just select another part family and switch back to the desired part family you need to add new part sizes.

- 25. Use the disk icon to set the style for both concentric cylindrical structures to Waste Water Manhole.
- 26. Right-click Cylindrical Structure Slab Top Circular Frame, and select Add Part Size.
- 27. Set Inner Structure Diameter to 15" (450 mm), and click OK.
- 28. Using the same process you used in step 25, set Structure Style to Cleanout.
- 29. Use a similar procedure to set the rules for the three new structures to Waste Water.

If you expand all the structure part families, your network parts list will look like [Figure 13.22](#).

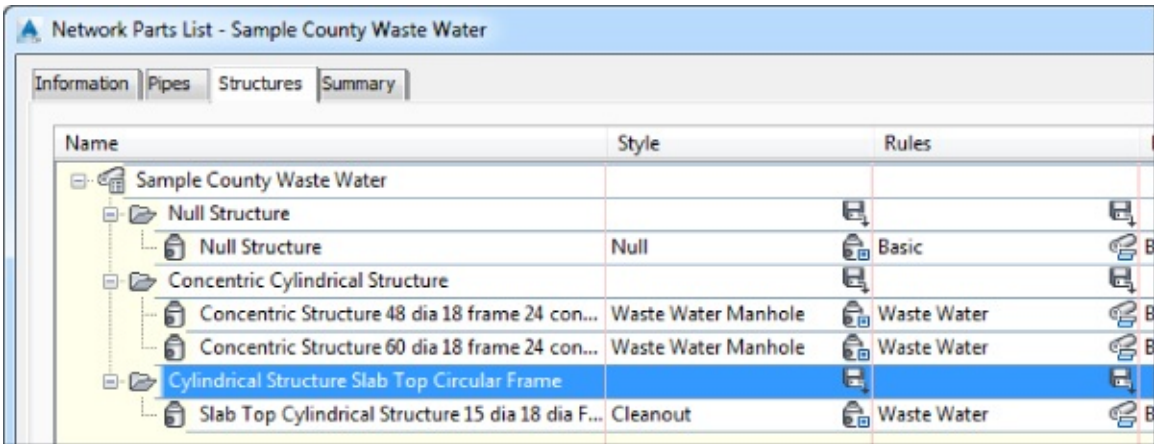


Figure 13.22 The completed Structures tab in your new parts list

- 30. Click OK to close the network parts list.
- 31. Save and close the drawing.

For your reference, completed versions of the drawing (1302_PartsListTemplate_FINISHED.dwg and 1302_PartsListTemplate_METRIC_FINISHED.dwg) are available with the rest of this book's download.

Creating a Waste Water Network

Earlier, you prepared a parts list for a typical waste water network. This chapter will lead you through several methods for using that parts list to design, edit, and annotate a pipe network.

A pipe network, such as the one in [Figure 13.23](#), can have many branches. In most cases, the pipes and structures in your network will be connected to each other; however, they don't necessarily have to be physically touching to be included in the same pipe network.



Figure 13.23 A typical Civil 3D pipe network

There are several ways to create pipe networks. You can do so using the Civil 3D pipe layout tools. You can also create pipe networks from certain AutoCAD and Civil 3D objects, such as lines, polylines, alignments, and feature lines.

Establishing Pipe Network Parameters

This section will give you an overview of establishing pipe network parameters. Use this section as a reference for the exercises in this chapter. When you're ready to create a pipe network by layout, select the Home tab > Create Design panel and choose Pipe Network > Pipe Network Creation Tools. The Create Pipe Network dialog appears (see [Figure 13.24](#)), and you can establish your settings.

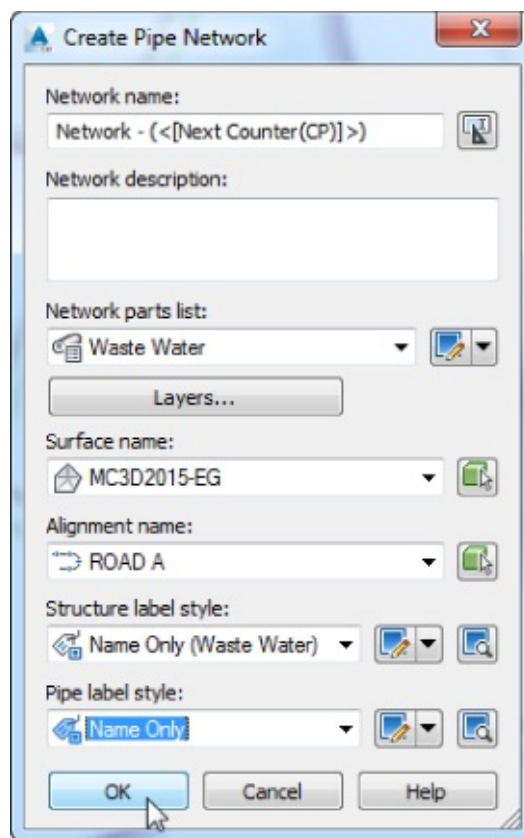


Figure 13.24 The Create Pipe Network dialog

Before you can create a pipe network, you must give your network a name, but more important, you need to assign a parts list for your network. As you saw earlier, the parts list provides a toolkit of pipes, structures, rules, and styles to automate the pipe network design process. It's also important to select a reference surface in this interface. This surface will be used for rim elevations and rule application.

When creating a pipe network, you'll be prompted for the following options:

Network Name Choose a name for your network that is meaningful and will help you identify it in Prospector and other locations.

Network Description The description of your pipe network is optional. You might make a note of the date, the type of network, and any special characteristics.

Network Parts List Choose the parts list that contains the parts, rules, and styles you want to use for this design.

Surface Name Choose the surface that will provide a basis for applying cover rules as well as provide an insertion elevation for your structures (in other words, rim elevations). You can change this surface later or for individual structures. For proposed pipe networks, this surface is usually a finished ground surface or a composite surface of the existing and proposed surfaces, which can be set to No Display in the drawing.

Alignment Name Choose an alignment that will provide station and offset information for your structures in Prospector as well as any labels that call for alignment stations and/or offset information. Because most pipe networks have several branches, it may not be meaningful for every structure in your network to reference the same alignment. Therefore, you may find it better to leave your Alignment option set to None in this dialog and set it for individual structures later using the layout tools or Structure list in Prospector.

Structure Label Style and Pipe Label Style As you create the network, you'll have the option to add

labels as you go. If you choose to use a label style that displays text (i.e., not the <None> option), these labels will apply only to the plan view. Section and profile pipe network labels are added in a separate area. You will learn about adding labels later in this chapter. For more information about creating label styles, see Chapter 18, “Label Styles.”

Using the Network Layout Creation Tools

Creating a pipe network with layout tools is much like creating other Civil 3D objects. After naming and establishing the parameters for your pipe network, you'll be presented with a special toolbar that you can use to lay out pipes and structures in plan, which will also drive a vertical design.

Certification Objective After establishing your pipe network parameters in the Create Pipe Network dialog (shown earlier in [Figure 13.24](#)), click OK; the Network Layout Tools toolbar will appear (see [Figure 13.25](#)).

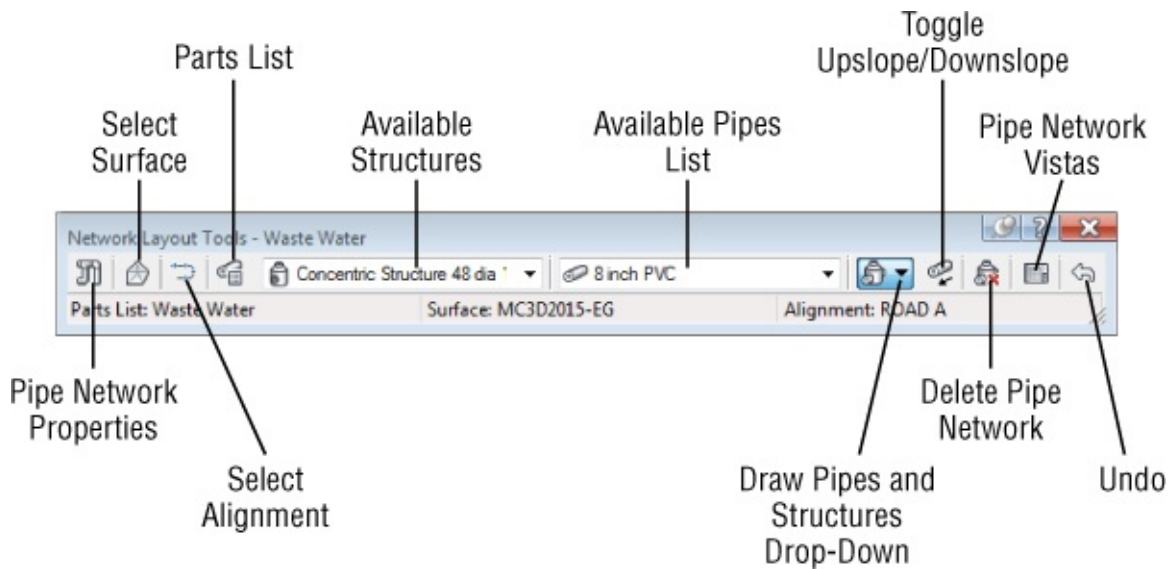



Figure 13.25 The Network Layout Tools toolbar

 Clicking the Pipe Network Properties tool displays the Pipe Network Properties dialog, which contains the settings for the entire network. If you mistyped any of the parameters in the original Create Pipe Network dialog, you can change them here. In addition, you can set the default label styles for the pipes and structures in this pipe network.

The Pipe Network Properties dialog contains the following tabs:

Information On this tab, you can rename your network, provide a description, and choose whether you'd like to see network-specific tooltips.

Layout Settings Here you can change the default label styles, network parts list, reference surface and alignment, master object layers for plan pipes and structures, as well as name templates for your pipes and structures (see [Figure 13.26](#)).

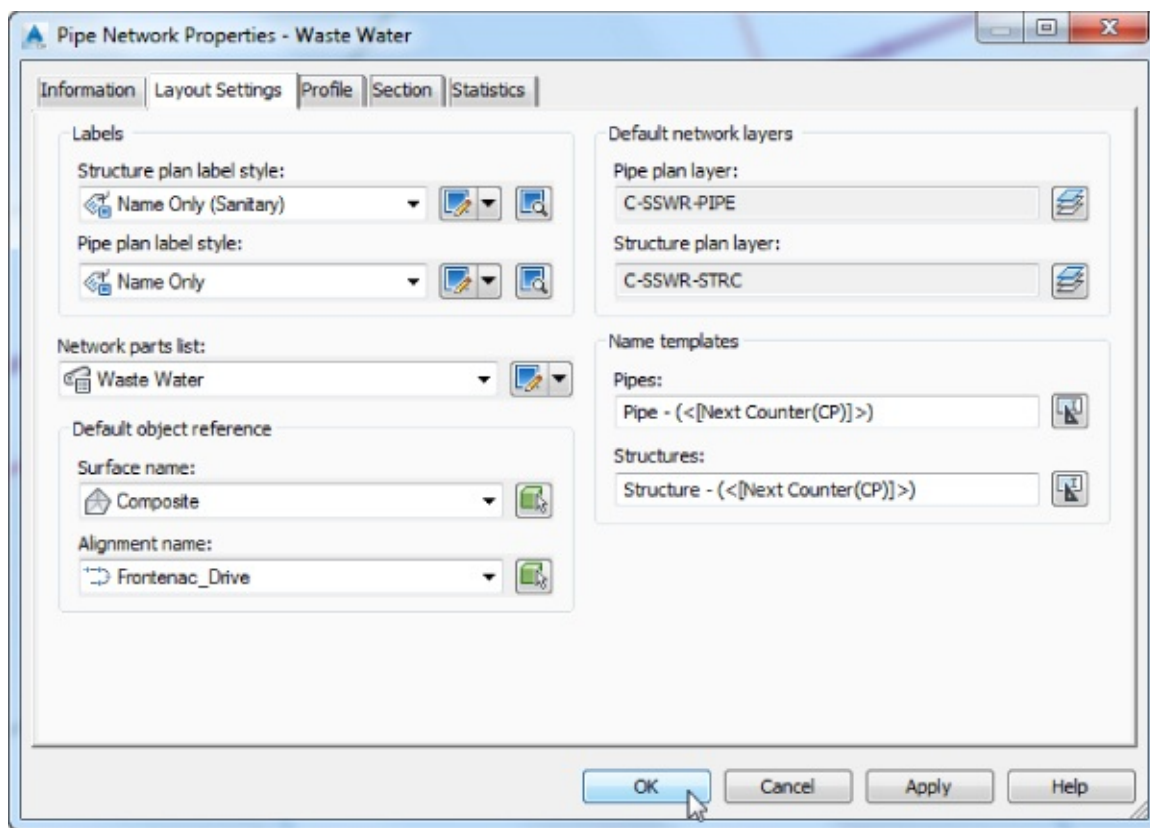


Figure 13.26 The Layout Settings tab of the Pipe Network Properties dialog

Profile On this tab, you can change the default profile label styles and master object layers for profile pipes and structures (see [Figure 13.27](#)).

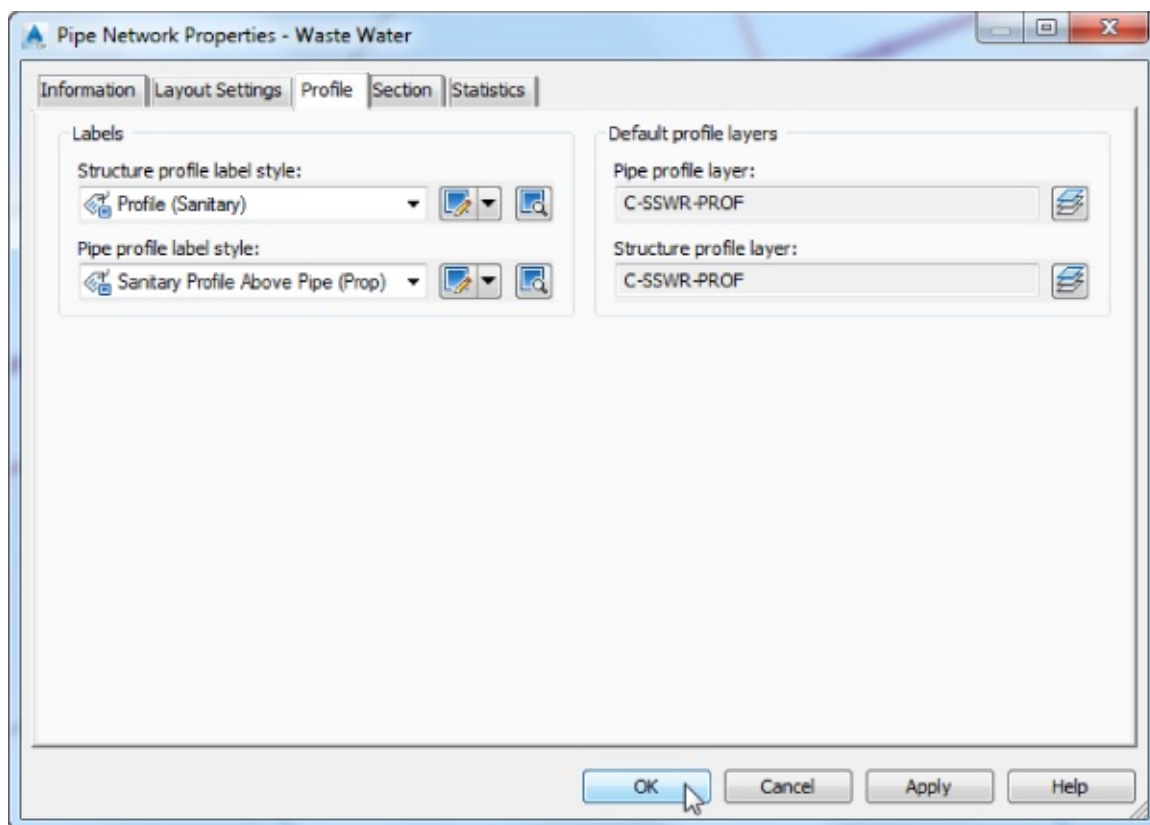


Figure 13.27 The Profile tab of the Pipe Network Properties dialog

Section Here you can change the master object layers for network parts in a section (see [Figure 13.28](#)).

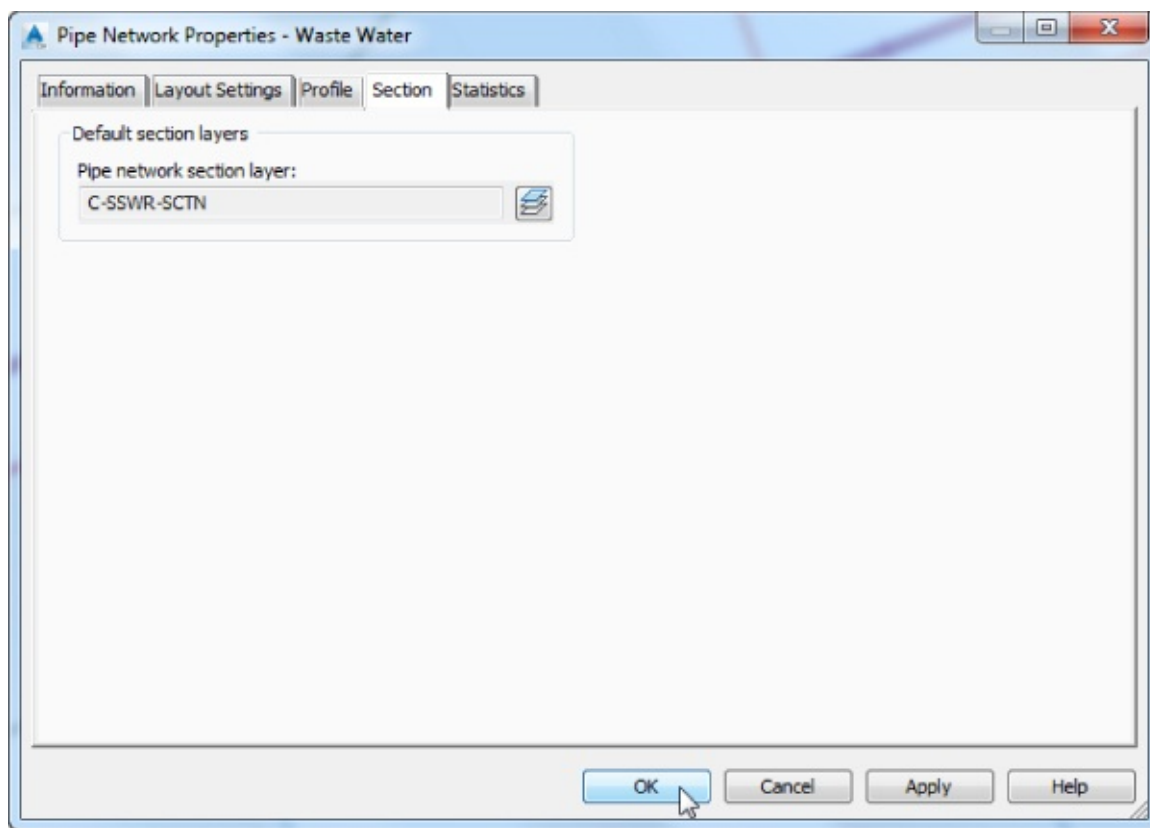


Figure 13.28 The Section tab of the Pipe Network Properties dialog

Statistics This tab gives you a snapshot of your pipe network information, such as minimum and maximum elevation information, pipe and structure quantities, and the assigned reference objects to the network such as alignments and surfaces (see [Figure 13.29](#)).

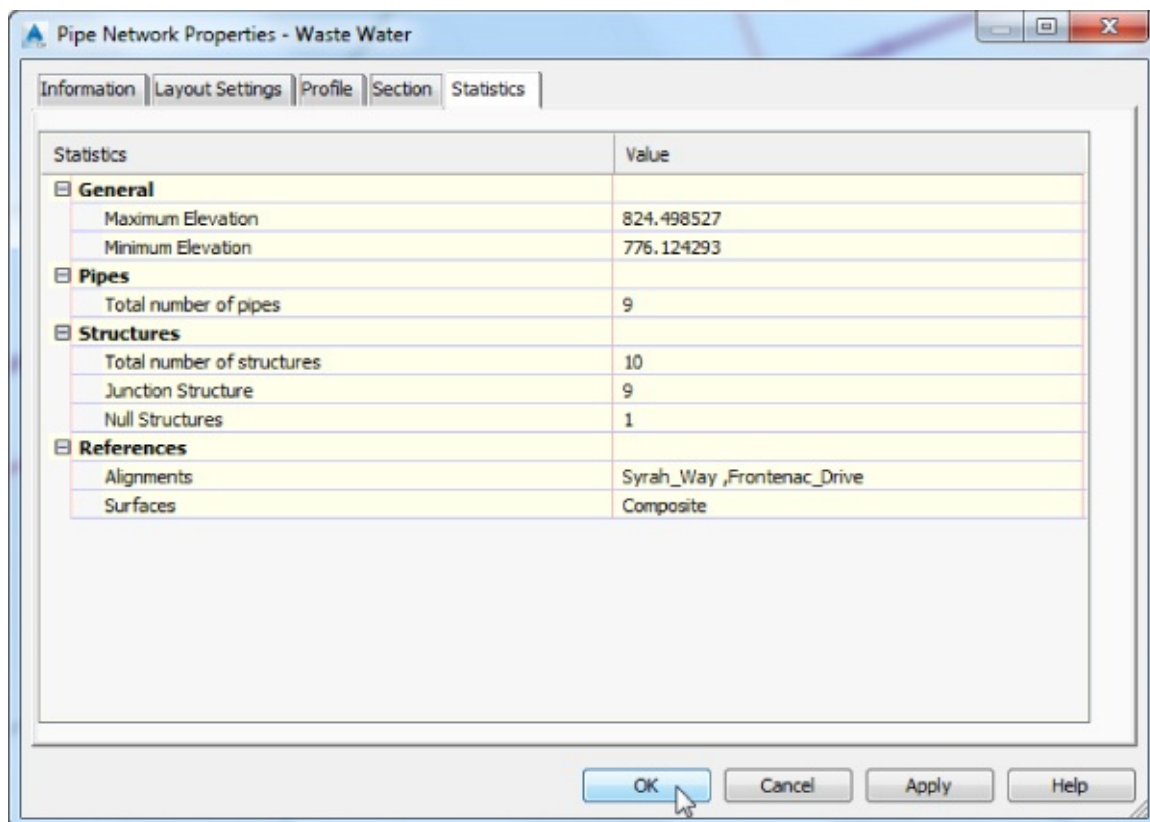



Figure 13.29 The Statistics tab of the Pipe Network Properties dialog

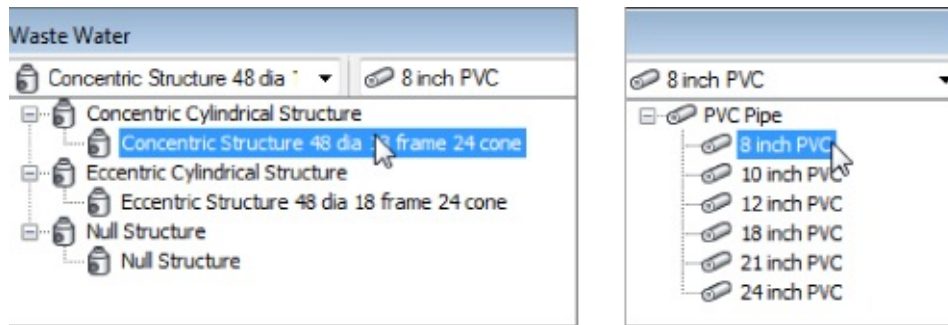
The Select Surface tool on the Network Layout Tools toolbar allows you to switch between reference surfaces while you're placing network parts if needed. However, you should create a merged surface

containing your existing surface plus your final design. Whenever possible, you should use a surface that incorporates the entire site (e.g., existing and proposed pasted together) to avoid needing to switch between surfaces.

 The Select Alignment tool on the Network Layout Tools toolbar lets you switch between : reference alignments while you're placing network parts, similar to the Select Surface tool.

 The Parts List tool allows you to switch parts lists for the pipe network.

The Structure drop-down (the image on the left in [Figure 13.30](#)) lets you choose which structure you'd like to place next, and the Pipes drop-down (the image on the right in [Figure 13.30](#)) allows you to choose which pipe you'd like to place next. Your choices come from the active : network parts list.



[Figure 13.30](#) The Structure drop-down (left) and the Pipes drop-down (right)

The options for the Draw Pipes And Structures category let you choose what type of parts you'd like to lay out next. You can choose Pipes And Structures, Pipes Only, or Structures Only.

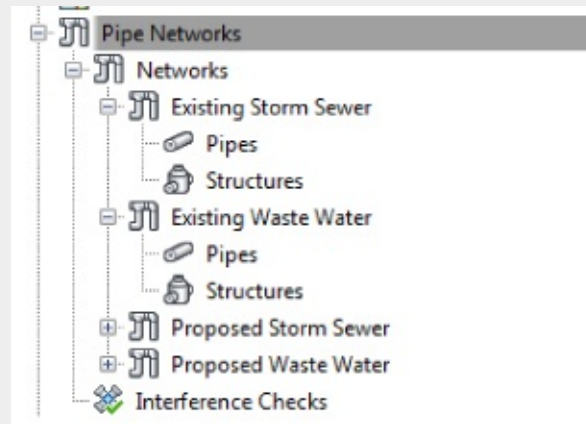


Real World Scenario

Precooked Pipe Networks in Your Template

The following tip is a revelation from a client—as many of the coolest tricks are. Even book authors have more to discover every day!

If you know that you will most likely have pipe networks in your project, you can create a few preset pipe networks in your template.





These “dummy” networks should be empty, but you can set the layout settings ahead of time. This will save you the steps of setting the correct parts catalog, object layers, object styles, and label styles.


Placing Parts in a Network

Network Parts can be placed in a manner similar to those of other Civil 3D objects or AutoCAD objects such as polylines. You can use your mouse, transparent commands, dynamic input, object snaps, and other drawing methods when laying out your pipe network.

If you choose Pipes And Structures, a structure is placed wherever you click, and the structures are joined by pipes. If you choose Pipes Only, you can connect previously placed structures. If you have Pipes Only selected and there is no structure where you click, a null structure is placed to connect your pipes.

 Use the Structures Only option when you want to add a structure along an existing pipe run. Watch for the “boxing glove” glyph to appear, indicating that the pipe network recognizes the connection. Clicking to connect to the pipe breaks the pipe into two pieces and places a structure (or null structure) at the break point.

 While you're actively placing pipes and structures, you may want to connect to a previously placed part. For example, there may be a service or branch that connects into a structure along the main trunk. Begin placing the new branch. When you're ready to tie into a structure, you'll get a circular connection marker as your cursor comes within connecting distance of that structure. If you click to place your pipe when this marker is visible, a structure-to-pipe connection will form and the end of the pipe will automatically be set as the center or attachment point for the structure. If you add a structure to the end of a pipe, the connection marker will be a box marker instead of a circular marker.

 As you create pipes, the default behavior is to draw them upstream to downstream. The Toggle Upslope/Downslope tool changes the flow direction of your pipes as they're placed. In [Figure 13.31](#), structure 9 was placed before structure 10.

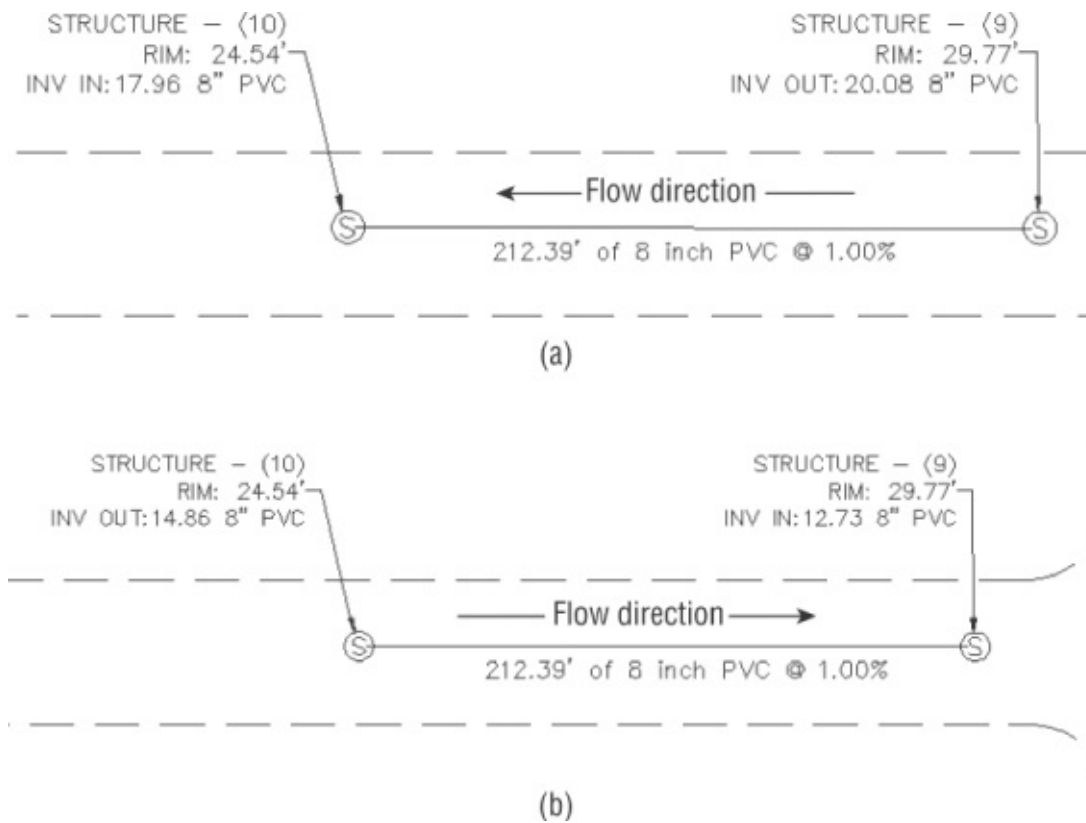




Figure 13.31 Using the Downslope toggle (a) and the Upslope toggle (b) to create a pipe network leg

 Click Delete Pipe Network Object to delete pipes or structures of your choice. AutoCAD Erase can also delete network objects, but be careful that you don't accidentally remove more objects than you intend. Also the AutoCAD Erase command might cause corruption when used to erase pipe networks parts; therefore, it isn't a recommended method. Always try to use the Delete tool available under the Network Layout Tools toolbar, or delete objects using either Pipe Network Vistas or through the Pipe Network branch of Toolspace, Prospector tab.

 Clicking Pipe Network Vistas brings up the Pipes and Structures tabs in Panorama (see [Figure 13.32](#)), where you can make tabular edits to your pipe network while the Network Layout Tools toolbar is active.

Top Screenshot: Pipes Tab

Status	Name	Descripti...	Style	Rule Set	Override ...	Render ...	Shape	Inner Dia...	Inner Wi...	Inner Hei...	Referenc...	Start O
1	Pipe - (9)	8 inch PVC	Single Line	Basic	No	ByLayer	Circular	12.000"				
1	Pipe - (9)	8 inch PVC	Single Line	Basic	No	ByLayer	Circular	12.000"				
2	Pipe - (1)	8 inch PVC	Single Line	Basic	No	ByLayer	Circular	12.000"				
1	Pipe - (1)	8 inch PVC	Single Line	Basic	No	ByLayer	Circular	12.000"				
1	Pipe - (1)	8 inch PVC	Single Line	Basic	No	ByLayer	Circular	12.000"				
1	Pipe - (1)	8 inch PVC	Single Line	Basic	No	ByLayer	Circular	12.000"				
1	Pipe - (1)	8 inch PVC	Single Line	Basic	No	ByLayer	Circular	12.000"				
1	Pipe - (1)	8 inch PVC	Single Line	Basic	No	ByLayer	Circular	12.000"				
1	Pipe - (1)	8 inch PVC	Single Line	Basic	No	ByLayer	Circular	12.000"				

Bottom Screenshot: Structures Tab

Status	Name	Descripti...	Style	Rule Set	Override ...	Render ...	Type	Inner Dia...	Inner Len...	Inner Wi...	Inner Hei...	Rotatio
0	SAN STR 1	SMH	Sanitary Sev	Basic	No	ByLayer	Junction Str	48.000"				0.0000 (
0	SAN STR 2	SMH	Sanitary Sev	Basic	No	ByLayer	Junction Str	48.000"				0.0000 (
0	SAN STR 3	SMH	Sanitary Sev	Basic	No	ByLayer	Junction Str	48.000"				0.0000 (
0	SAN STR 4	SMH	Sanitary Sev	Basic	No	ByLayer	Junction Str	48.000"				0.0000 (
0	SAN STR 5	SMH	Sanitary Sev	Basic	No	ByLayer	Junction Str	48.000"				0.0000 (
0	SAN STR 6	SMH	Sanitary Sev	Basic	No	ByLayer	Junction Str	48.000"				0.0000 (
0	SAN STR 7	SMH	Sanitary Sev	Basic	No	ByLayer	Junction Str	48.000"				0.0000 (
0	SAN STR 8	SMH	Sanitary Sev	Basic	No	ByLayer	Junction Str	48.000"				0.0000 (
0	SAN STR 9	SMH	Sanitary Sev	Basic	No	ByLayer	Junction Str	48.000"				0.0000 (
0	SAN STR 10	Null Struct	Sanitary Sev	Basic	No	ByLayer	Null Struct					0.0000 (

Figure 13.32 Pipe Network Vistas via Panorama for pipes (top) and structures (bottom)

The Pipe Network Vistas interface is similar to what you encounter in the Pipe Networks branch of Toolspace, Prospector tab. The advantage of using Pipe Network Vistas is that you can make tabular edits without leaving the Network Layout Tools toolbar. You can edit pipe properties, such as Invert and Slope, on the Pipes tab, and you can edit structure properties, such as Rim and Sump, on the Structures tab.

Creating a Waste Water Network

This exercise will apply the concepts taught in this section and give you hands-on experience using the Network Layout Tools toolbar:


1. Open 1303_Pipes.dwg (1303_Pipes_METRIC.dwg), which you can download from this book's web page.
2. Expand the Surfaces branch in Prospector.

This drawing has several surfaces that have a _No Display style applied to simplify the drawing. The surface you will be working from is a composite of the existing conditions, corridor surfaces, and grading surfaces.


Optimizing the Cover by Starting Uphill

If you're using the Cover And Slope rule for your pipe network, you'll achieve better cover optimization if you begin your design at an upstream location and work your way down to the connection point.

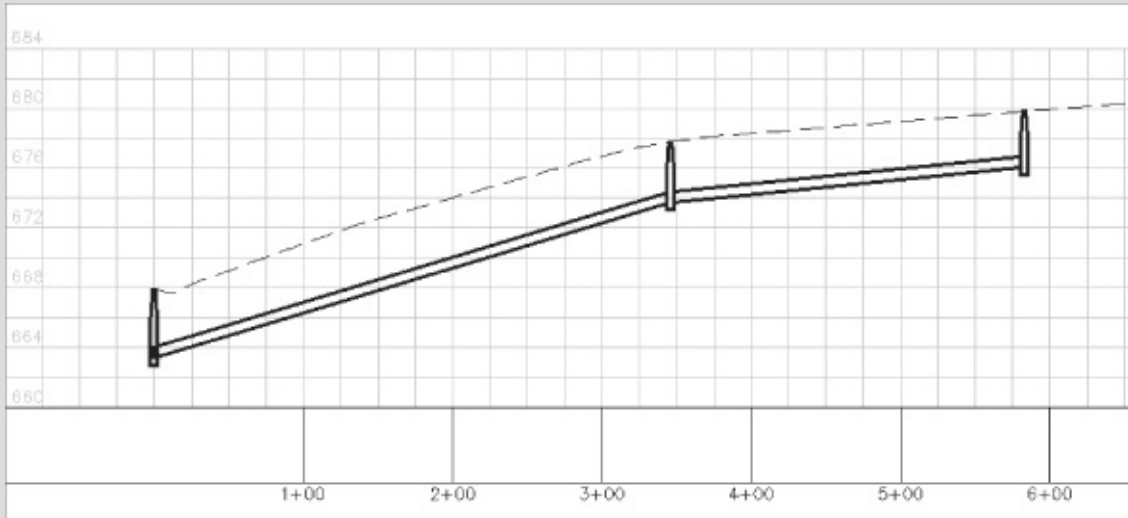The Cover And Slope rule prefers to hold minimum slope over optimal cover. In practice, this means that as long as minimum cover is satisfied, the pipe will remain at minimum slope. If you start your design from the upstream location, the pipe is forced to use a higher slope to achieve minimum cover. The following graphic shows a pipe run that was created starting from the upstream location (right to left):



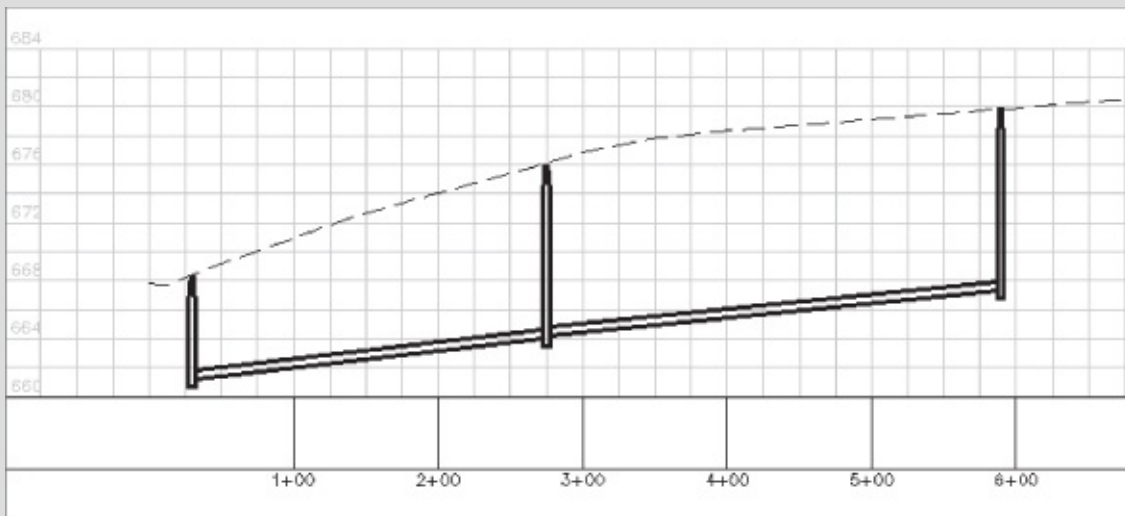When you start from the downhill side of your project, the Minimum Slope rule is applied as long as minimum cover is achieved. The following graphic shows a pipe run that was created starting from the downstream location (left to right):




Notice how the slope remains constant even as the pipe cover increases. Maximum cover is a violation-only rule, which means it never forces a pipe to increase slope to remain within tolerance; it provides only a warning that maximum cover has been violated.

3. Expand the Alignments and Centerline Alignments branches, and notice that there are several road alignments (no action is required).



4. On the Home tab > Create Design panel > Pipe Network drop-down, select Pipe Network Creation Tools.
5. In the Create Pipe Network dialog (shown previously in [Figure 13.24](#)), give your network the following information:
 - Network Name: **Waste Water Network**
 - Network Parts List: Waste Water
 - Surface Name: Composite
 - Alignment Name: **Syrah Way**
 - Structure Label Style: Data With Connected Pipes (Waste Water)
 - Pipe Label Style: Length Description And Slope
6. Click OK.

The Network Layout Tools toolbar will appear.

7. From the structure list, expand the Concentric Cylindrical Structure branch, choose Concentric Structure 48 Dia 18 Frame 24 Cone (metric: Concentric Structure 1,200 Dia 450 Frame 600 Cone).
8. From the pipe list, expand the PVC pipe branch and choose 8 Inch PVC (200 mm PVC).
9.  Click the Draw Pipes And Structures tool. Working right to left, snap using an Intersection Osnap to the X labeled 1 in the drawing to place the first structure. Snap the X labeled 2 to place the second structure.
10. Without exiting the command, go back to the Network Layout Tools toolbar and change the Pipe drop-down from 8 Inch PVC to 10 Inch PVC (200 mm PVC to 250 mm PVC) and then place structures at the Xs labeled 3, 4, and 5.

The labels show that the diameter of the pipe between these structures is 10" (250 mm).

11. Press **↵** to exit the command.

Next, you'll add a branch of the network from ROAD B. You may want to use the label grip to drag the label off to the side. This will form the leaders as shown in [Figure 13.33](#), making the next step easier.

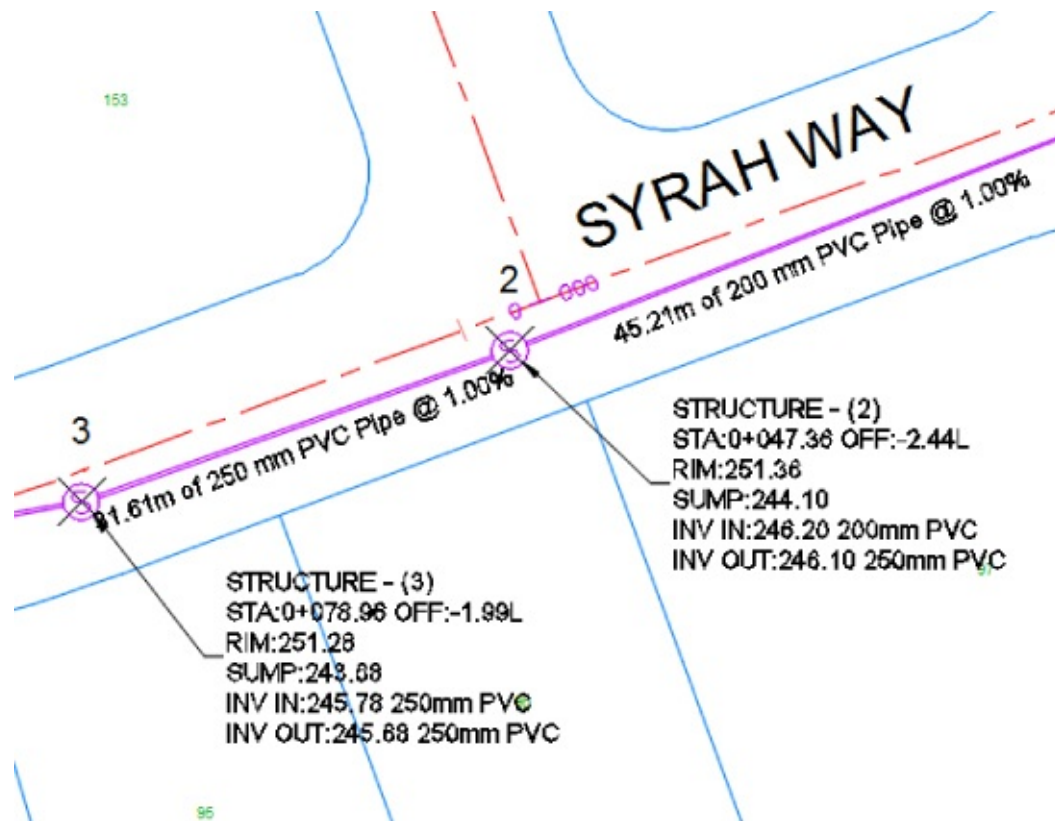


Figure 13.33 The connection marker appears when your cursor is near the existing structure.

2. Go back to the Network Layout Tools toolbar, and select 8 Inch PVC (200 mm PVC) from the pipe list.
3. Click the Draw Pipes And Structures tool button again.
4. Working north to south, click to place the next structure at the X labeled 6.
5. Tie into the ROAD A branch by moving your cursor near structure 2. You will be ready to click when you see the “sunshine” glyph, indicating that the pipe will tie into the structure.
6. Press \leftarrow to exit the command.

Observe your pipe network, including the labeling that automatically appeared as you drew the network.

7. Expand the Pipe Networks branch in Prospector in Toolspace, and locate your Waste Water Network.
8. Expand Waste Water Network, and click the Pipes branch.

The list of pipes appears in the preview pane.

9. Click the Structures branch; the list of structures appears in the preview pane.
10. Close the Network Layout Tools toolbar, and save the drawing.

For your reference, completed versions of the drawing (1303_Pipes_FINISHED.dwg and 1303_Pipes_METRIC_FINISHED.dwg) are available with the rest of this book's download.

Creating a Storm Drainage Pipe Network from a Feature Line

Certification Objective If you already have an object in your drawing that represents a pipe network (such as a polyline, an alignment, or a feature line), you can take advantage of the Create Pipe Network From Object

command in the Pipe Network drop-down.

This option can be used for applications such as converting surveyed pipe runs into pipe networks and bringing forward legacy drawings that used AutoCAD linework to represent pipes. The Create Pipe Network From Object option creates a pipe for every linear segment of your object and places a structure at every vertex of your object. Each object you convert will initially go to a separate network. However, once you have several networks, you can easily merge them if needed.

This exercise will give you hands-on experience building a pipe network from a feature line with elevations and merging it with an existing network:

1. Open the 1304_PipesFromObject.dwg (1304_PipesFromObject_METRIC.dwg) file.

This drawing contains the feature line you will use to generate a storm network.

2. Expand the Surfaces branch in Prospector.

This drawing has several surfaces that have a _No Display style applied to simplify the drawing (no action is required).

3. Expand the Alignments and Centerline Alignments branches, and notice that there are several road alignments.

In the drawing, a cyan feature line runs through Syrah Way (the horizontal road) and then goes onto Frontenac Drive. This feature line represents utility information for a storm-drainage line. The elevations of this feature line correspond with invert elevations that you'll apply to your pipe network.



4. Choose Create Pipe Network From Object from the Home tab, Create Design panel, Pipe Network drop-down.
5. At the Select Object or [Xref]: prompt, select the cyan feature line near the eastern side of the line.

You'll see a preview (see [Figure 13.34](#)) of the pipe-flow direction that is based on where you selected the line. In this case, the east end of the feature line is considered the upstream end.

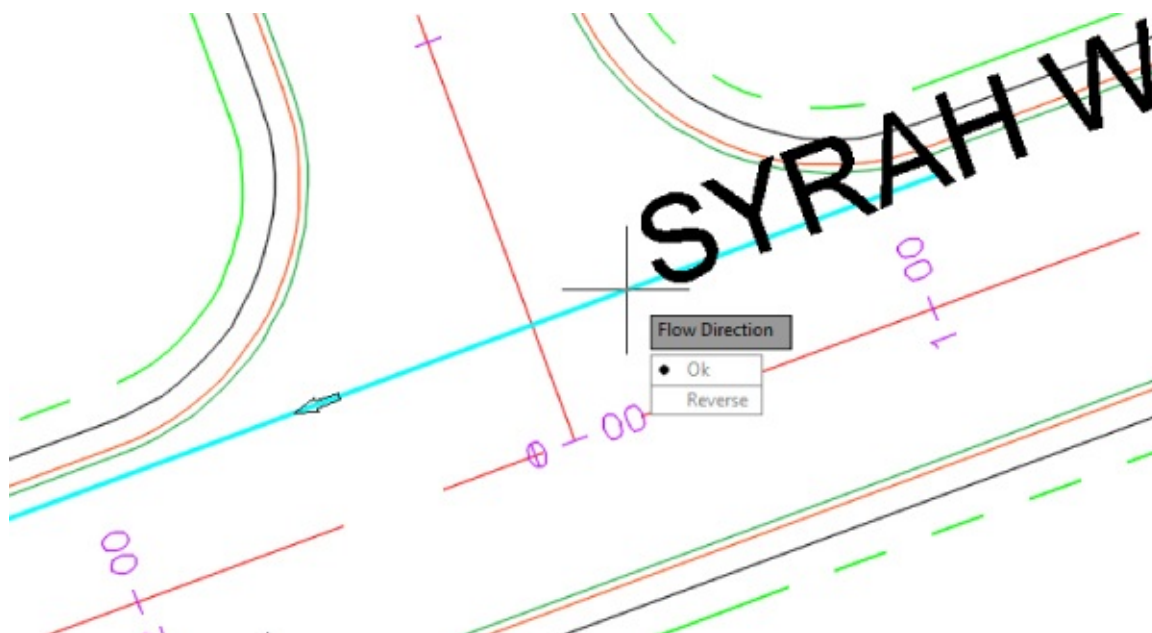


Figure 13.34 The flow-direction preview

6. At the Flow Direction [OK Reverse] <Ok>: prompt, press ↵ to choose OK.

The Create Pipe Network From Object dialog appears, as shown in [Figure 13.35](#).

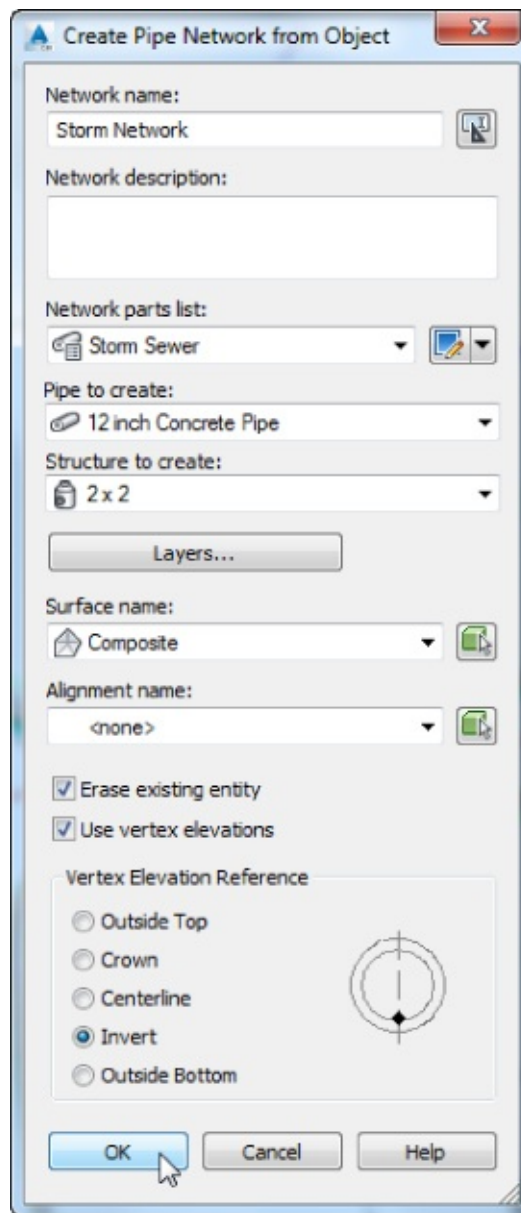


Figure 13.35 Converting a feature line to a pipe network

7. In the dialog, give your pipe network the following information:

8.

- Network Name: **Storm Network**
- Network Parts List: Storm Sewer
- Pipe To Create: 12 Inch Concrete Pipe (300 mm Concrete Pipe)
- Structure To Create: From the Rectangular Junction Structure NF (SI for metric) collection 2 × 2 (750 × 750 mm Rectangular Structure)
- Surface Name: Composite
- Alignment Name: <none>
- Erase Existing Entity check box: Selected

- Use Vertex Elevations check box: Selected
- Vertex Elevation Reference: Invert

If you select Use Vertex Elevations, the pipe rules for your chosen parts list will be ignored. If it becomes necessary later, you can use the Apply Rules tool as discussed in the next section of this chapter.

9. Click OK. A pipe network will be created.

Next, you will merge this network with another network that exists in the drawing.

10. Select a pipe or structure from the newly created network. From the Pipe Networks contextual tab ➤ Modify panel, select Merge Networks.

11. In the Select Pipe Network To Be Merged Into Another Network dialog, highlight Storm Network and click OK.

12. In the Select Destination Pipe Network dialog, highlight Existing Storm Network and click OK.


13. Save and close the drawing.

This exercise combined all your object-created networks into a more manageable single network.

For your reference, completed versions of the drawing (1304_PipesFromObject_FINISHED.dwg and 1304_PipesFromObject_METRIC_FINISHED.dwg) are available with the rest of this book's download.

Editing a Pipe Network

You can edit pipe networks in several ways:

- Using drawing layout edits such as grip, move, and rotate
- Grip-editing the pipe size
- Using vertical movement edits using grips in profile (see the “Editing Pipe Networks in Profile View Using Grips” section later in this chapter)
-  Using tabular edits in the Pipe Networks branch in Prospector or from Pipe Network Vistas (via Panorama) from the Network Layout Tools toolbar
- Right-clicking a network part to access tools such as Swap Part or Pipe/Structure Properties
- Returning to the Network Layout Tools toolbar by right-clicking the object and choosing Edit Network
- Selecting the pipe network in Toolspace ➤ Prospector, right-clicking, and choosing Edit Network
- Selecting a network part to access the Pipe Networks contextual tab

You will have the chance to explore most of these methods in the following sections.

Changing Flow Direction

By default, Civil 3D pipes are drawn upstream to downstream. It is easy to forget the Toggle Upslope/Downslope tool located on the Network Layout Tools. If you forget to use it, don't fret; you can change the flow direction after the pipes are placed.

To change flow direction, select any part from a pipe network to open the Pipe Networks contextual tab.

Select Change Flow Direction from the drop-down portion of the Modify panel. Change Flow Direction allows you to reverse the pipe's understanding of which direction it flows, which comes into play when you're using the Apply Rules command and when you're annotating flow direction with a pipe label–slope arrow.

Changing the flow direction of a pipe doesn't modify the pipe's inverts in any way. By default, a pipe's flow direction depends on how the pipe was drawn and how the Toggle Upslope/Downslope tool was set when the pipe was drawn:

- If the toggle was set to Downslope (the default setting), the pipe flow direction is set to Start To End, which means the first endpoint you placed is considered the start of flow and the second endpoint is established as the end of flow.
- If the toggle was set to Upslope when the pipe was drawn, the pipe flow direction is set to End To Start, which means the first endpoint placed is considered the end for flow purposes and the second endpoint the start.

After pipes are drawn, by default they will have a Start To End flow direction. This is among the four options of flow that can be assigned by going to Pipe Properties or by going to Prospector > Pipe Networks > *Network Name* > Pipe Branch:

Start To End A pipe label–flow arrow shows the pipe direction from the first pipe endpoint drawn to the second endpoint drawn, regardless of invert or slope.

End To Start A pipe label–flow arrow shows the pipe direction from the second pipe endpoint drawn to the first pipe endpoint drawn, regardless of invert or slope.

Bi-Directional Typically, this is a pipe with zero slope that is used to connect two bodies that can drain into each other, such as two stormwater basins, septic tanks, or overflow vessels. The direction arrow is irrelevant in this case.

By Slope A pipe label–flow arrow shows the pipe direction as a function of pipe slope. For example, if End A has a higher invert than End B, the pipe flows from A to B. If B is edited to have a higher invert than A, the flow direction flips from B to A.

Editing Your Network in Plan View

When selected, a structure has two types of grips, shown in [Figure 13.36](#). The first is a square grip located at the structure insertion point. You can use this grip to grab the structure and stretch/move it to a new location using the insertion point as a base point. Stretching a structure results in the movement of the structure as well as any connected pipes. Moving a structure allows the reposition of the structure to a new place while the connected pipes remain at the original location. You can also scroll through Stretch, Move, and Rotate by using your spacebar once you've grabbed the structure by this grip.

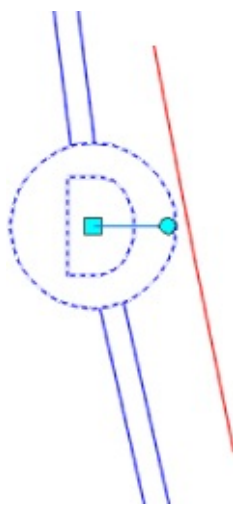


Figure 13.36 Two types of structure grips

The second structure grip is a rotational grip that you can use to spin the structure about its insertion point. This is useful for aligning eccentric structures, such as rectangular junction structures. Note that even though they will be rotated in plan view, the specified rotation may not be properly represented in the profile view.

In plan view, many common AutoCAD Modify commands work with structures. You can execute the following commands normally: Move, Copy, Rotate, Align, and Mirror. (Scale doesn't have an effect on structures.) You can use the AutoCAD Erase command to erase network parts. Note that erasing a network part in plan completely removes that part from the network. Once erased, the part disappears from plan, profile view, Prospector, and so on. Always remember that even though the AutoCAD Erase command is supported, its use is not recommended in the management of network parts.

When selected, a pipe end has two types of grips (see [Figure 13.37](#)). The first is a square endpoint-location grip. Using this grip, you can change the location of the pipe end without constraint. You can move it in any direction; make it longer or shorter; and take advantage of Stretch, Move, Rotate, and Scale by using your spacebar.

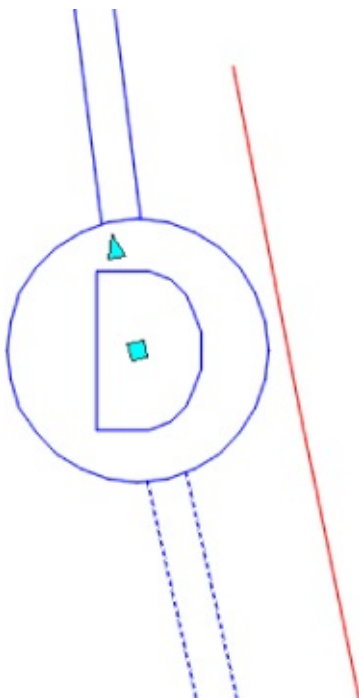


Figure 13.37 Two types of pipe-end grips

The second grip (triangular) is a pipe-length grip. This grip lets you extend a pipe along its current bearing and slope.

A pipe midpoint also has two types of grips (see [Figure 13.38](#)). The first is a square location grip that lets you move the pipe using its midpoint as a base point.

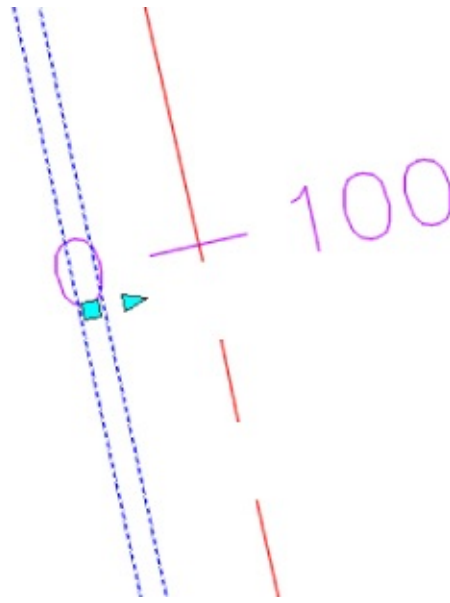


Figure 13.38 Two types of pipe midpoint grips

The second grip is a triangular-shaped pipe-diameter grip. Stretching this grip gives you a tooltip showing allowable diameters for that pipe, which are based on your parts list. Use this grip to make quick visual changes to the pipe diameter.

A Word about Pay Items

Be careful about using the grip to change the pipe diameter. Note that if a pay item is associated with a pipe in your parts list, changing the pipe diameter graphically does not change the associated pay item. For more information on associating pipe parts to pay items, see Chapter 17.

Using the Pipe Network Vista Effectively



To access the full tabular version of your pipe network, the best place to go is to the Pipe Networks contextual tab > Modify panel > Edit Pipe Network button.



Clicking Edit Pipe Network will display the Network Layout toolbar, from which you can click the Pipe Network Vistas (aka Panorama) tool. This will display the grid view shown in [Figure 13.39](#).

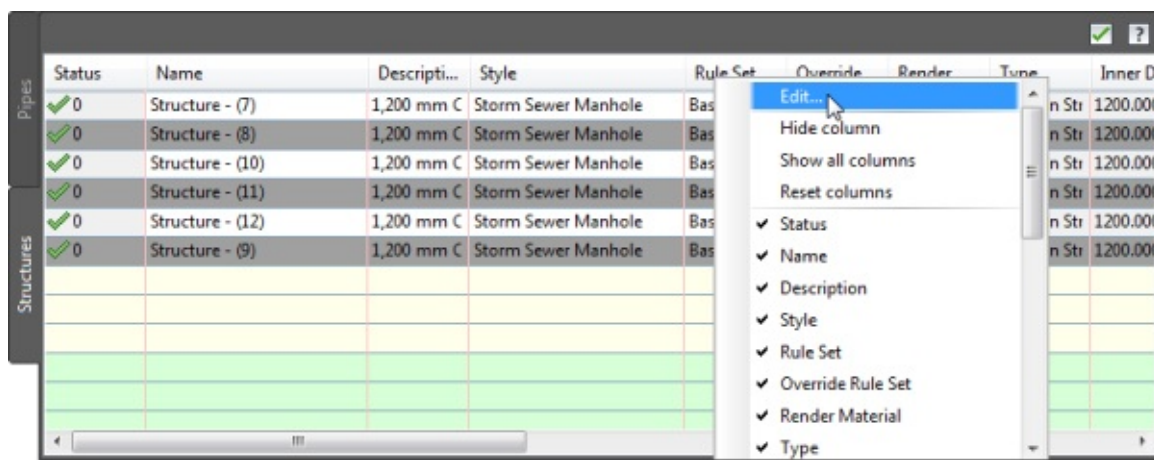



Figure 13.39 Selecting multiple rows and right-clicking the column name allows you to edit multiple items at once.

Note that pipes and structures are listed on separate tabs. Many items can be edited from this view. Subtle shading of the columns indicates which rows can be modified. If a column has a light gray background, this means the value is calculated or for information only.

 The Status column indicates any rule violations that exist in the network. When a rule violation exists, a red symbol will appear with the number of violations. When you pause your cursor over one of these symbols, a tooltip will inform you which rule has been violated.

You can adjust many things in this interface, but you'll find it cumbersome for some tasks. The interface is best used for the following:

Batch Changes to Styles, Render Materials, Reference Surfaces, Reference Alignments, Rule Sets, and So On Use your Shift or Ctrl key to select the desired rows, and then right-click the column header of the property you'd like to change. Choose Edit, and then select the new value from the drop-down. If you find yourself doing this on every project for most network parts, confirm that the correct values are set in your parts list and in the Pipe Network Properties dialog.

Batch Changes to Pipe Description Use your Shift key to select the desired rows, and then right-click the Description column header. Choose Edit, and then enter your new description. If you find yourself doing this on every project for most network parts, check your parts list. If a certain part will always have the same description, you can add it to your parts list and prevent the extra step of changing it here.

Changing Pipe or Structure Names You can change the name of a network part by typing in the Name field. If you find yourself doing this on every project for every part, check that you're taking advantage of the Name templates in your Pipe Network Properties dialog (which can be further enforced in your Pipe Network command settings).

This interface can be useful for changing pipe inverts, crowns, and centerline information. Keep in mind that Civil 3D will allow you to make changes that violate your pipe rules. Edits to a single pipe or structure are dynamic to parts that are directly connected, but Civil 3D will not reapply the rules for you automatically.

Editing Using the Pipe Networks Contextual Tab

You can perform many edits at the individual part level by selecting it. The Pipe Networks contextual tab will appear for the object you have selected.

If you realize you placed the wrong part at a certain location—for example, if you placed a catch basin where you need a drainage manhole—use the Swap Part option on the Pipe Networks contextual tab (see [Figure 13.40](#)). You'll be given a list of all the relevant parts from the parts list associated with the Pipe Network.



Figure 13.40 Selecting a network part brings up the Pipe Networks contextual tab with many options, including Swap Part.

The same properties listed in Prospector (or Pipe Network Vistas) can be accessed on an individual part level by selecting a pipe or structure and choosing Pipe Properties or Structure Properties from the Pipe Networks contextual tab. A dialog like the Structure Properties dialog in [Figure 13.41](#) will open, with several tabs that you can use to edit that particular part.

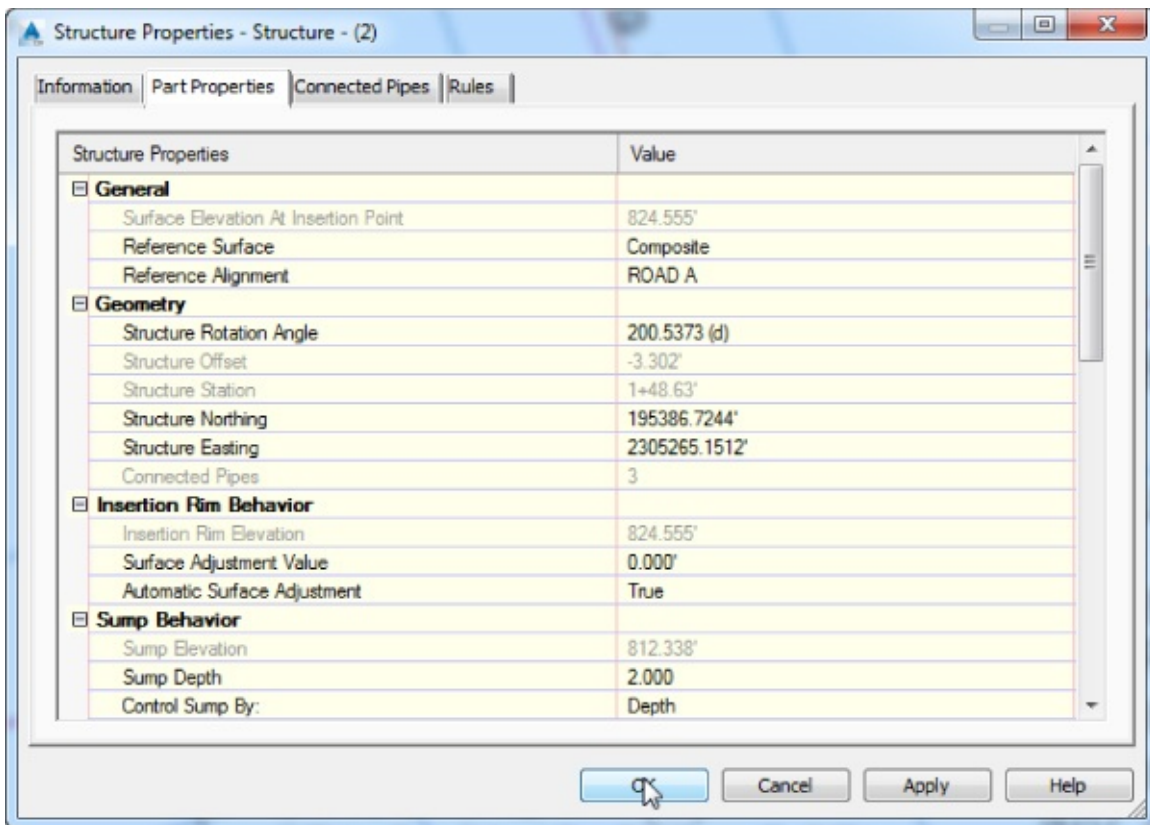


Figure 13.41 The Part Properties tab in the Structure Properties dialog gives you the opportunity to perform many edits and adjustments.

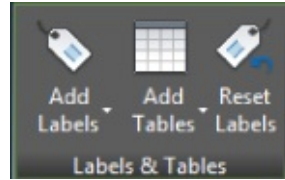
The Labels & Tables Panel

Many objects have a Labels & Tables panel in their contextual tabs. This panel ([Figure 13.42](#)) is where you do the most annotation labeling for pipes.

Add Labels For the best control over what styles are used in your label, use the Add Pipe Network Labels option. From there, you can add labels for the selected pipe network using the sub-options such as Entire Network Plan, Entire Network Profile, Entire Network Section, Single Part Plan, Single Part Profile, Single Part Section, Spanning Pipes Plan, and Spanning Pipes Profile.

Add Tables You can add a structure or pipe table.

Reset Labels This Reset Labels is different from the Reset Label option you see when right-clicking directly on a pipe or structure label. By using this specific contextual ribbon command, pipe networks that are in the drawing via data reference will be labeled using styles from the source drawing. For more information on source drawings and data references, see Chapter 16, “Advanced Workflows.”



[Figure 13.42](#) The Labels & Tables panel

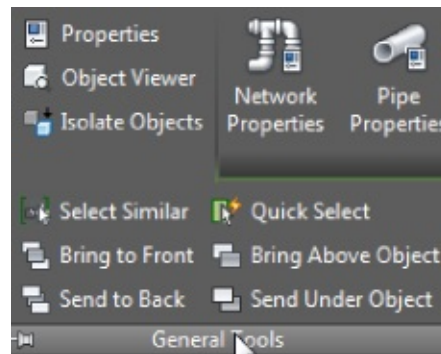
The General Tools Panel

The General Tools panel ([Figure 13.43](#)) is common to all Civil 3D objects' contextual tabs.

Properties Toggles the Properties palette on and off.

Object Viewer Allows you to view the selected object or objects in 3D via a separate window.

Isolate Objects Selected objects will be the only objects visible on the screen. This is useful if you are working in a tight area and do not want to see extraneous objects, and it is much quicker than clicking to turn off or freeze layers.



[Figure 13.43](#) The General Tools panel in the Pipe Networks contextual tab

These tools are available via the General Tools panel drop-down.

Select Similar This is the best tool ever invented! Select an example object or objects, and then click Select Similar. All objects of the same type and layer will be selected. This works great on base AutoCAD objects, not just Civil 3D objects.

Quick Select or QSelect Opens the Quick Select dialog, which allows custom filtering.

Draw Order Icons Allow you to move objects either to the front or back of other visible objects, or above or behind a specific object.

The Modify Panel

The Modify panel (shown previously in [Figure 13.40](#)) is where you edit an existing pipe network. The Modify panel contains the following tools:

Network Properties Opens the Pipe Network Properties dialog.

Pipe Properties Opens the Pipe Properties dialog.

Edit Pipe Style This tool resides in the Pipe Properties drop-down and opens the Pipe Style dialog.

If you are seeing the Modify panel because you have selected a structure, you will be prompted to select a pipe. For more on pipe styles, see Chapter 19, “Object Styles.”

Structure Properties Opens the Structure Properties dialog.

Edit Structure Style This tool resides in the Structure Properties drop-down and opens the Structure Style dialog. For more on structure styles, see Chapter 19.

Edit Pipe Network Opens the Network Layout Tools toolbar.

Connect / Disconnect Part Allows you to connect pipes to structures that may have been disconnected and to disconnect pipes from structures.

Swap Part Allows you to replace a structure or pipe type with another one from a Swap Part Size dialog that is part of the current network parts list.

Split / Merge Network Allow you to take an existing network and split it into two networks or take an existing pipe network and merge it into another pipe network.

The Modify panel has a flyout that contains the following tools:



Rename Parts Opens the Rename Pipe Network Parts dialog. Here, you can rename pipes and structures, modify pipe numbering, and decide how you want to handle conflicting names or numbers.



Apply Rules Apply Rules is an important yet easy-to-miss tool that will help you recalculate pipe slopes if changes need to be made. The easiest way to use this tool is to key in **APPLYRULES** with no objects selected. The reason for this is that it will give you a chance to pick an upstream part and a downstream part and automatically select items between. If you have items selected at the time you click Apply Rules, the rules will be rechecked only for the selected items, often leading to unexpected results. This command can be also accessed from the Modify panel of the Pipe Networks contextual tab.



Change Flow Direction Changes the path of the selected objects. It is very important to have this option set correctly if you are going to use any of the analysis programs.

The Network Tools Panel

The Parts List drop-down on the Network Tools panel ([Figure 13.44](#)) contains the following tools:

Create Parts List Allows you to create a new parts list via the Network Parts List - New Parts List dialog.

Create Full Parts List Takes all the parts available in the parts catalog and creates a list called Full Catalog.

Edit Parts List Opens the Parts List dialog, where you can select the network with which you want to work. A common mistake people make when getting to the parts lists this way is clicking OK. To edit, copy, or make a new list, use the drop-down to the right of the Parts List name.

Set Network Catalog Opens the Pipe Network Catalog Settings dialog, where you can indicate whether you want to use Imperial or metric parts, and also sets the location of the catalog folder.

Part Builder The last item in the Parts List drop-down is the Part Builder tool. This will open the Getting Started screen of the Part Builder tool. For more information about Part Builder, see the

section “Understanding Part Builder” later in this chapter.

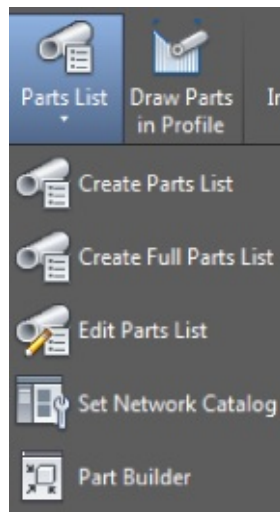


Figure 13.44 The Network Tools panel shown with the Parts List menu expanded

You'll also find Draw Parts In Profile on the Network Tools panel. This tool adds the selected pipe network objects into an existing profile view.

The Analyze Panel

The Analyze panel ([Figure 13.45](#)) contains three tools for performing various checks on a pipe network. Using the drop-down menu for Interference Check, you have these options:

Create Interference Check Allows you to create an interference check between parts, whether or not they are on the same network.

Interference Check Properties When you select the Interference Check Properties tool, you will be prompted to select Interference, and then the Interference Check Properties dialog will open:

- The Information tab displays basic information such as the name of the interference check set, style, render material, and layer.
- The Criteria tab contains specific editable items, such as whether to use 3D proximity check, distance, and scale factors.
- The Statistics tab is a combined listing of the other tabs but also allows you to see the networks used for the interference check.

Interference Properties The Interference Properties tool will give you information about a single interference location in your drawing. This differs from the Interference Check Properties in that you can't change the criteria from here. You see only the following information about a specific instance of interference:

- Information tab (where you can name the individual interference objects and change the style and render material)
- Statistics tab (which contains information about the networks causing the selected interference and its location)

Edit Interference Style This tool will prompt you to select an interference object (by default a brown, circular block). After selecting the interference object, this opens the Interference Style dialog, where you can change the visual parameters for the interference object. For more on styles,

see Chapter 19.

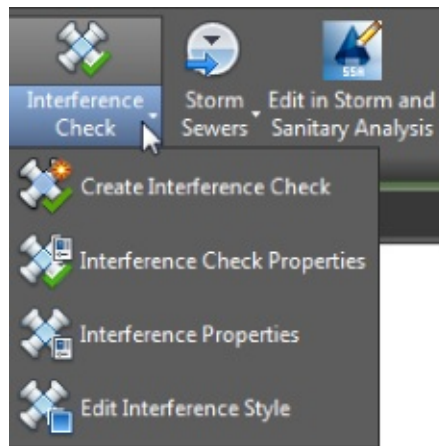


Figure 13.45 The Analyze panel with Interference Check expanded

Storms Sewers commands interact with the Hydraflow Storm Sewers Extension. Hydraflow is a separate program that is included with Civil 3D. An in-depth discussion of Hydraflow is beyond the scope of this book; see the Hydraflow Storm Sewers Extension help files for more information.

Choosing Edit In Storm And Sanitary Analysis opens the Storm and Sanitary Analysis (SSA) program. For more on SSA, see this book's website for a bonus chapter, “Storm and Sewer Analysis.”

The Launch Pad Panel

The Launch Pad panel ([Figure 13.46](#)) contains the following tools:

Alignment From Network Allows you to create an alignment from pipe network parts

Storm Sewers Launches the Hydraflow Storm Sewers program

Hydrographs Launches the Hydraflow Hydrographs program

Express Opens the Hydraflow Express program

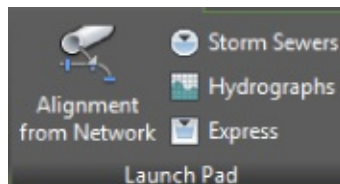


Figure 13.46 The Launch Pad panel

Hydraflow Storm Sewers, Hydraflow Hydrographs, and Hydraflow Express are separate programs that are included with Civil 3D. An in-depth discussion of these programs is beyond the scope of this book; see the relevant Hydraflow help files for more information.

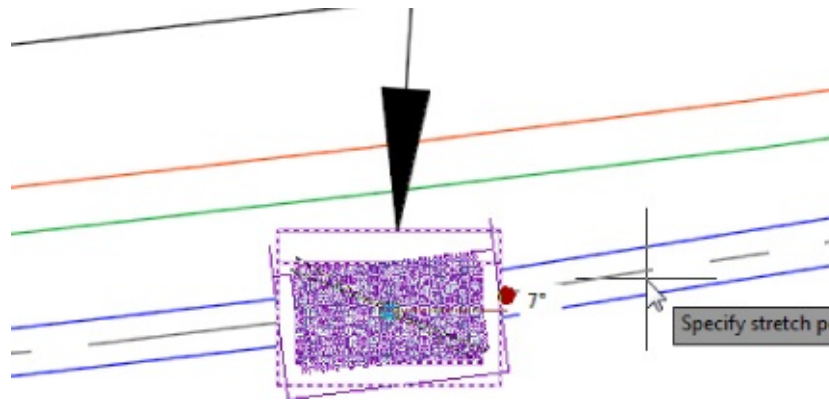
Editing with the Network Layout Tools Toolbar

You can also edit your pipe network by retrieving the Network Layout Tools toolbar. This is accomplished by selecting a pipe network object and choosing Edit Network from the contextual tab. You can also access the contextual tab via the Modify tab of the ribbon and click Pipe Network on the Design panel.

Once the toolbar is up, you can continue working exactly the way you did when you originally laid out your pipe network.

This exercise will give you hands-on experience in making a variety of edits to a waste water and storm drainage pipe network:

1. Open the 1305_PipeEditing.dwg (1305_PipeEditing_Metric.dwg) file.
This drawing includes a waste water network and a storm drainage network, as well as some surfaces and alignments. For metric users, the structure family names end with SI.
2. Select the structure STM STR 3 in the drawing. It is labeled with the structure name showing.
3. From the Pipe Networks contextual tab ► Modify panel, click Swap Part.
4. Select the 2 × 4 (1,500 × 750 mm) Rectangular Junction Structure structure from the Rectangular Junction Structure NF (Rectangular Structure Slab Top Rectangular Frame SI for metric users), and click OK.
5. Select the newly replaced catch basin so that you see the two structure grips.
6. Use the rotational grip and your nearest Osnap to align the catch basin to the centerline of the pipe, as shown in [Figure 13.47](#).



[Figure 13.47](#) Rotate the catch basin into place along the curb.

7. Press Esc to clear the selection.
8. In the Prospector tab of Toolspace ► Pipe Networks ► Networks ► Waste Water Network, click the Structures branch.
At the bottom of Toolspace, you should see a list of structures present in the network.
9. Scroll through the Structures list and locate SAN STR 7. (You will probably need to expand the width of the Name column to view the structure names.)
10. Right-click SAN STR 7 and click Pan To.
11. Again, right-click SAN STR 7 in the list. This time, click Delete. Select Yes at the prompt.
Next, you will use the AutoCAD dynamic input tool to force pipe lengths to the desired value.
12. At the command line, type **DYNMODE** and press **↵**.
13. Type **3** and press **↵**.
Your DYNMODE setting may already be set to a value of 3, meaning dimensional input will appear. This step ensures that dynamic input will allow you to enter a total length for the pipe.
14. If dynamic input is not already on, press F12 to enable it. Make sure that nothing is selected by pressing the Esc key until everything is cleared. Select the waste water pipe that is labeled in the

north of the drawing along the Frontenac Drive alignment.

15. Click the triangular Endpoint grip on the right end of the pipe.

Notice the tooltips at your cursor with information about the length of the pipe.

16. Press the Tab key to switch the input to the overall length of the pipe. Enter **200'** (60.96 m), as shown in [Figure 13.48](#).

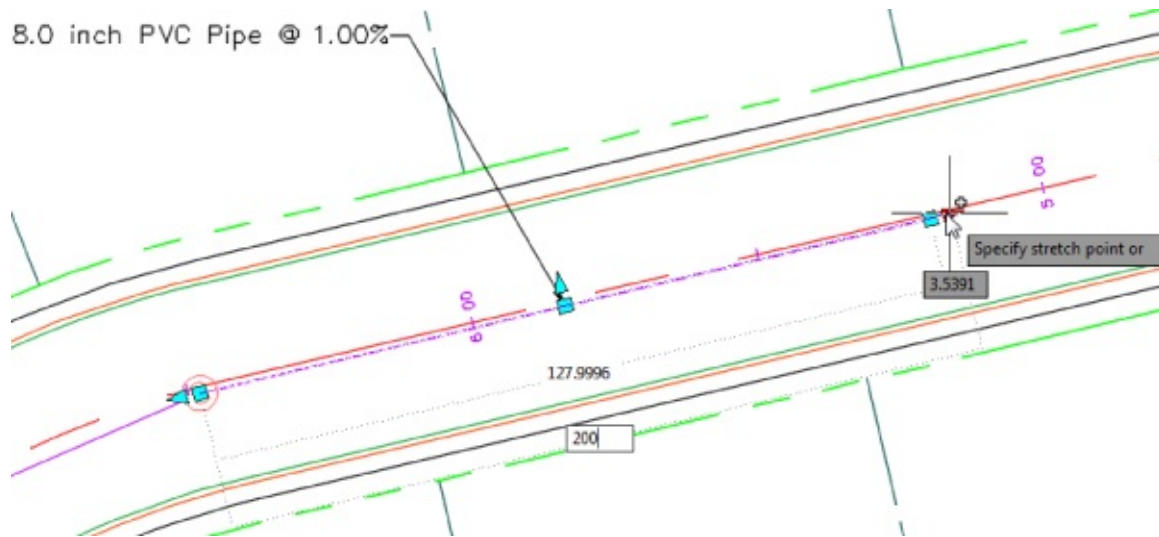


Figure 13.48 Lengthen the pipe to 200' (60.96 m).

Note that this is the 3D Center To Center Pipe length. Next, you will add a structure to the end of the pipe you just modified.

17. Select any pipe in the Waste Water Network. In the Pipe Networks contextual tab > Modify panel, click Edit Pipe Network.
18. From the Structures list, set the structure to SMH from the Concentric Cylindrical Structures NF family.
19. From the Draw Pipes And Structures drop-down, set the option to Structures Only. Place the structure in the drawing at the end of the pipe you lengthened previously. Make sure you can see the connection glyph before you click to add the structure.
20. Press Esc to clear the selection.
21. Select STM STR 3 in the drawing (this is the structure you modified at the beginning of this exercise), and from the Pipe Networks contextual tab > Modify panel, click Structure Properties.
22. Switch to the Part Properties tab, scroll down to the Sump Depth field, and change the value to **0'** (0 m).
23. Click OK to exit the Structure Properties dialog. Press Esc to clear the selection.
24. Select any pipe or structure from the Waste Water Network.
25. From the Pipe Networks contextual tab > Modify panel, click Edit Pipe Network.
26. From the Network Layout Tools, click Pipe Network Vistas.

This will bring up the Panorama interface, which will allow you to rename the structures.


27. Make sure that the active Panorama tab is set to Structures.

28. In the Name column heading, widen the column so you can see the full name of the structures in the list. (You can widen a column in all spreadsheet-like views in Civil 3D, much as you would in Microsoft Excel.)
29. Double-click the cell in the Name column for SAN STR 1.
30. Clear the text that is there and type **MH 1**.
31. Repeat steps 29 and 30 for SAN STR 2 through SAN STR 4, renaming each but keeping the number. Close the vista and then close the toolbar.
32. Save and close the drawing.

For your reference, completed versions of the drawing (1305_PipeEditing_FINISHED.dwg and 1305_PipeEditing_METRIC_FINISHED.dwg) are available with the rest of this book's download.

Creating an Alignment from Network Parts

On some occasions, certain legs of a pipe network require their own stationing. Perhaps most of your pipes are shown on a road profile, but the legs that run offsite or through open space require their own profiles. Whatever the reason, it's often necessary to create an alignment from network parts. To do so, follow these steps:

1. Open the 1306_Alignment.dwg (1306_Alignment_METRIC.dwg) file.
2. Select the CB1 structure, which will be the first structure in the network on the east side of the Syrah Way alignment.
3.  On the Pipe Networks contextual tab ►Launch Pad panel, select Alignment From Network.
The command line will read `Select next Network Part or [Undo]`.
4. Select the STM STR 7 structure, which will be the last structure on the alignment. Notice that all the pipes and structures between the two selected structures have been highlighted. If any of the pipes or structures are not connected, the selecting set won't work as expected.
5. Press **↵**, and a Create Alignment - From Pipe Network dialog will appear that is almost identical to the one you see when you create an alignment from the Alignments menu.
 - Name your alignment **Storm CL**.
 - Leave the default Alignment type.
 - Set the Alignment Style to Layout and the Alignment Label Set to Major And Minor Only.
 - Notice the Create Profile And Profile View check box on the last line of the dialog. Leave the box selected and click OK.
 - The Create Profile From Surface dialog will appear (see [Figure 13.49](#)).

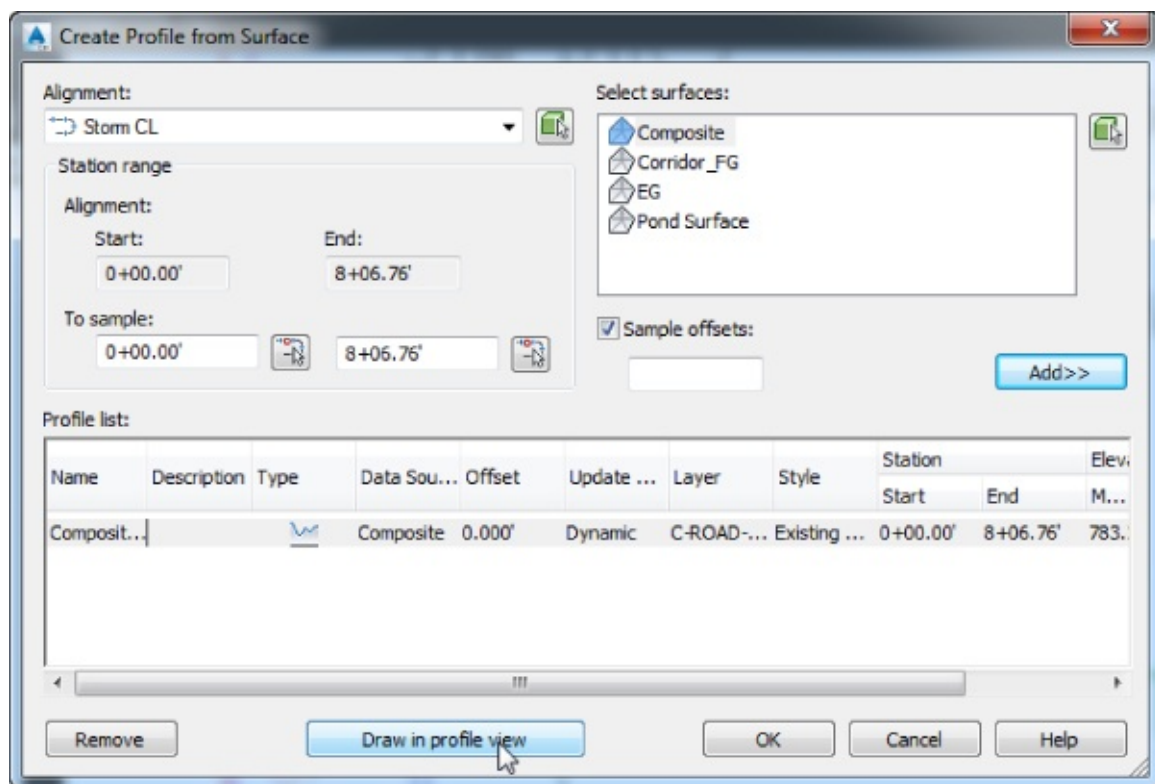


Figure 13.49 The Create Profile From Surface dialog

6. Select the Composite surface, and click Add.
7. Click Draw In Profile View.

The Create Profile View Wizard will appear (see [Figure 13.50](#)). Make sure your settings match those in the figure.

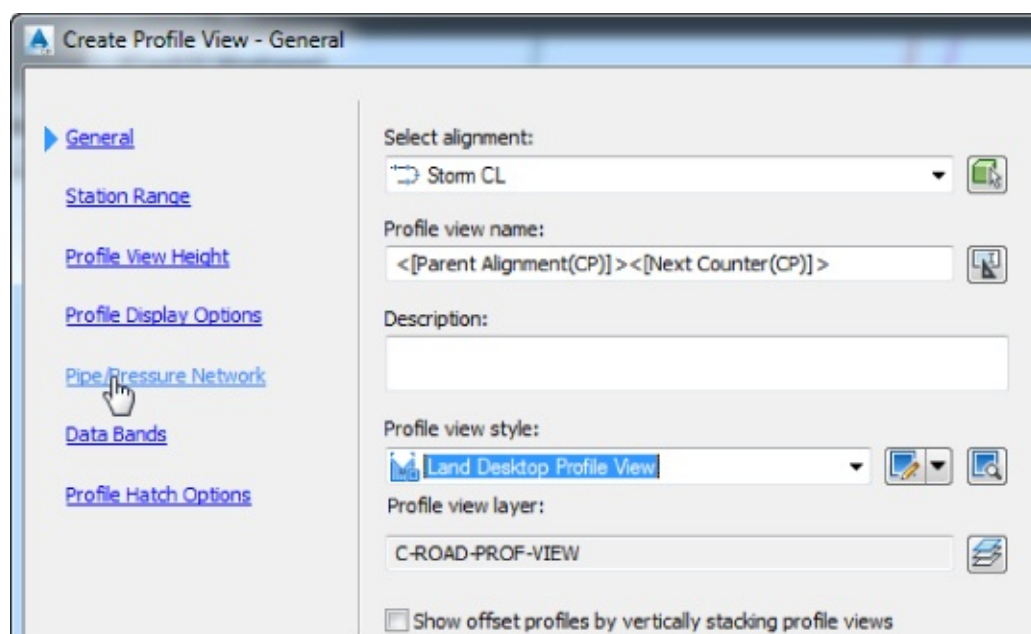


Figure 13.50 The Create Profile View Wizard

8. Click Pipe/Pressure Network to jump to that page.

You should see a list of pipes and structures in your drawing.

9. Verify that Yes is selected for each pipe and structure in the Storm Network only. By default only the previously selected pipes and structures will be set to Yes on this tab.

10. Click Create Profile View, and place the profile view to the right of the site plan. Notice that the profile shows the pipe network from upstream to downstream.

Seven structures and six pipes will be drawn in a profile view, which is based on the newly created alignment (see [Figure 13.51](#)).

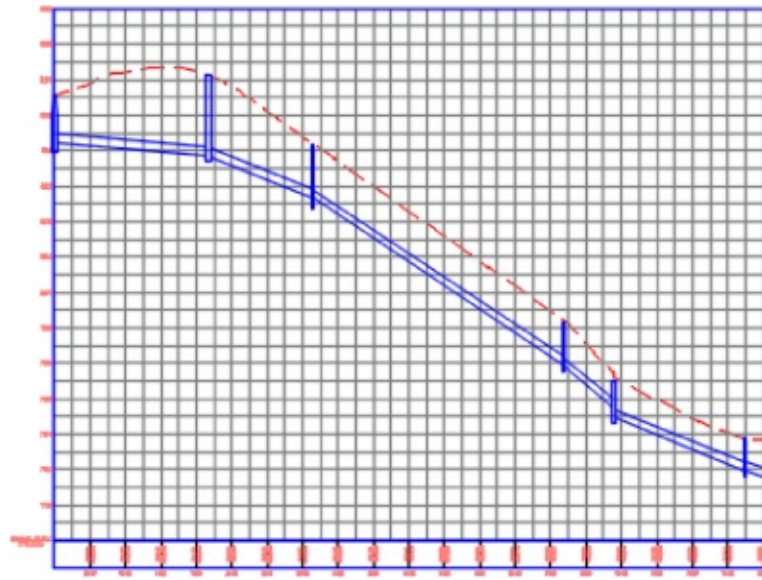


Figure 13.51 The completed profile view

11. Select the created alignment and from the contextual tab, Modify Panel, choose the Reverse Direction. On the warning prompt click OK.

Notice how the profile view updated and the pipe network is displayed from downstream to upstream.

12. Save and close the drawing.

For your reference, completed versions of the drawing (1306_Alignment_FINISHED.dwg and 1306_Alignment_METRIC_FINISHED.dwg) are available with the rest of this book's download.

Drawing Parts in Profile View

Certification Objective To add pipe network parts to an existing profile view, select a network part, and choose Draw Parts In Profile from the Network Tools panel of the Pipe Networks contextual tab. When you're using this command, it's important to note that only selected parts are drawn in your chosen profile view.

Profiles and profile views are always cut with respect to an alignment. Therefore, pipes are shown in the profile view on the basis of how they appear along that alignment or how they cross that alignment. Unless your alignment *exactly follows the centerline of your network parts*, your pipes will likely show some drafting distortion.

Let's look at [Figure 13.52](#) as an example. This particular jurisdiction requires that all utilities be profiled along the road centerline. There are a road centerline and a storm network that jogs across the road to connect with another catch basin.

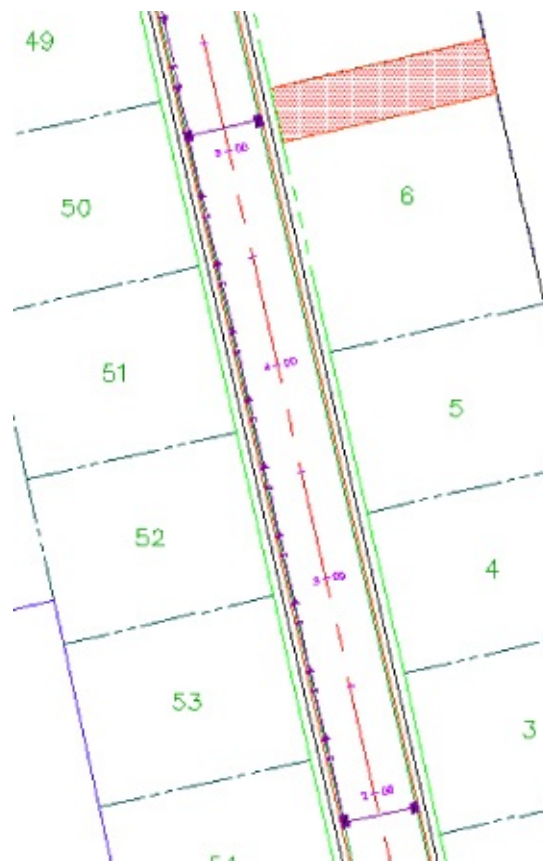


Figure 13.52 These pipe lengths will be distorted in profile view.

At least two potentially confusing elements show up in your profile view. First, the distance between structures (2D Length – Center To Center) isn't the same between the plan and the profile (see [Figure 13.53](#)) because the storm pipe doesn't run parallel to the alignment. Because the labeling reflects the network model, all labeling is true to the 2D Length – Center To Center or any other length you specify in your label style.

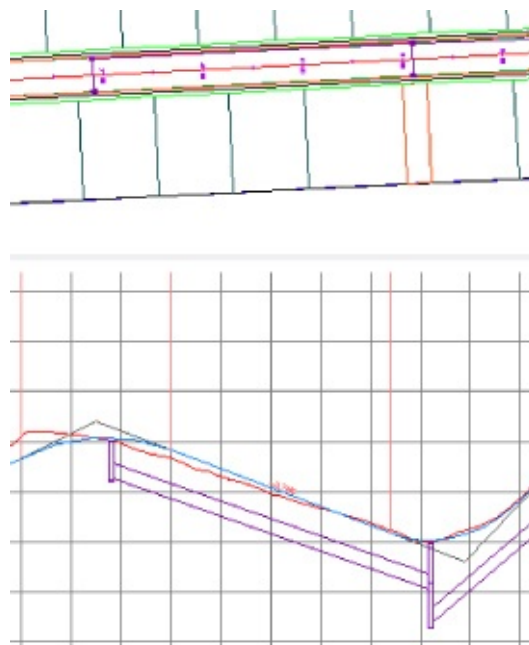


Figure 13.53 Pipe labels in plan view (top) and profile view (bottom)

The second potential issue is that the invert of your crossing storm pipe is shown at the point where the storm pipe *crosses the alignment* and not at the point where it connects to the storm sewer structure (see [Figure 13.54](#)).

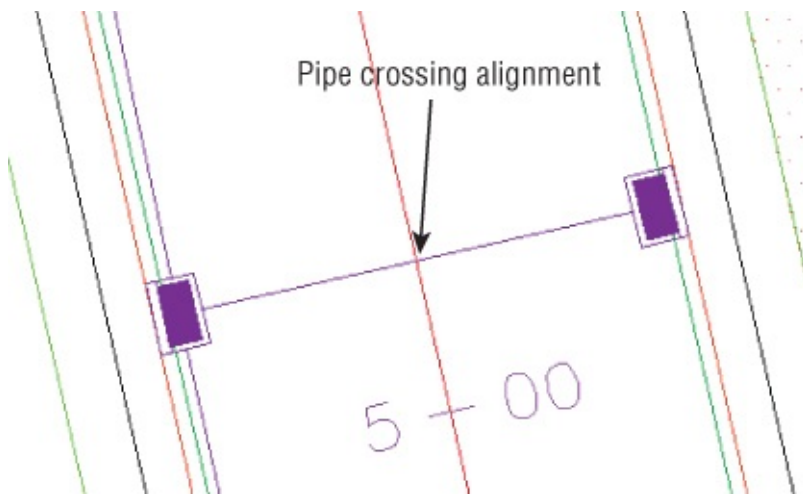


Figure 13.54 The invert of a crossing pipe is drawn at the location where it crosses the alignment.

Editing Pipe Networks in Profile View Using Grips

Although you can't make changes to certain part properties (such as pipe length) in profile view, pipes and structures both have special grips for changing their vertical properties in profile view.

When selected, a structure has two grips in profile view (see [Figure 13.55](#)). The first is a triangular-shaped grip representing a rim insertion point. This grip can be dragged up or down, and it affects the model structure-insertion point.

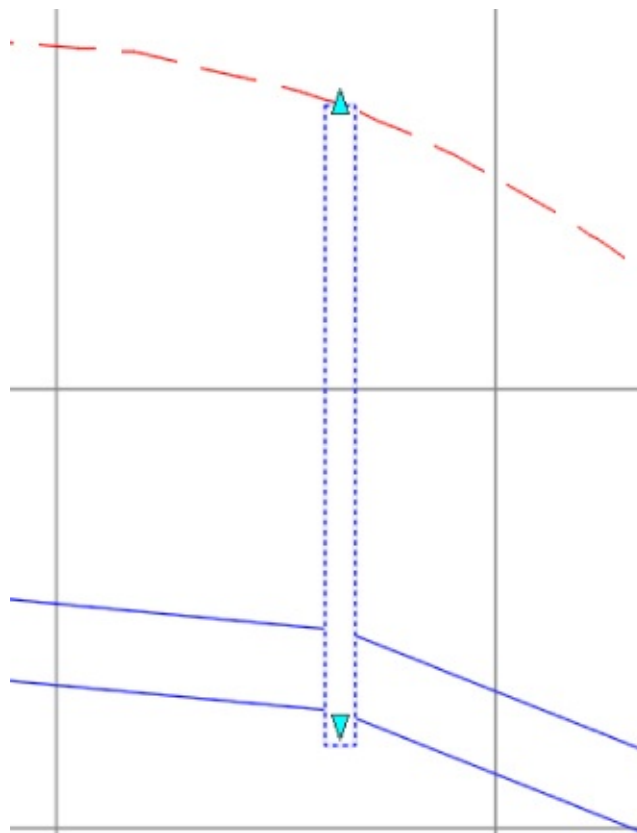


Figure 13.55 A structure has two grips in profile view.

Moving this grip can affect your structure insertion point in two ways, depending on how your structure properties were established:

- If your structure has Automatic Surface Adjustment set to True, grip-editing this Rim Insertion Point grip changes the surface adjustment value. If your reference surface changes, your rim will change along with it, plus or minus the surface adjustment value.

- If your structure has the Automatic Surface Adjustment set to False, grip-editing this Rim grip modifies the insertion point of the rim. No matter what happens to your reference surface, the rim will stay locked in place.

Typically, you'll use the Rim Insertion Point grip only in cases where you don't have a surface for your rims to target, or if you know there is a desired surface adjustment value. It's tempting to make a quick change instead of making the improvements to your surface that are fundamentally necessary to get the desired rim elevation. One quick change often grows in scope. Making the necessary design changes to your target surface will keep your model dynamic and, in the long run, will make editing your rim elevations easier.

The second grip is a triangular grip located at the sump depth. This grip doesn't represent structure invert. In Civil 3D, only pipes truly have invert elevation. The structure uses the connected pipe information to determine how deep it should be. When the sump has been set at a depth of 0, the sump elevation equals the invert of the deepest connected pipe.

This grip can be dragged up or down. It affects the modeled sump depth in one of two ways, depending on how your structure properties are established:

Control Sump By Depth If your structure is set to control sump by depth, editing with the Sump grip changes the sump depth.

The depth is measured from the structure insertion point. For example, if the original sump depth was 0, grip-editing the sump 0.5' (15.24 cm) lower would be the equivalent of creating a new sump rule for a 0.5' (15.24 cm) depth and applying the rule to this structure. This sump will react to hold the established depth for any changes that would affect the invert of the lowest connected pipe. This triangular grip is most useful in cases where most of your pipe network will follow the sump rule applied in your parts lists, but selected structures need special treatment.

Control Sump By Elevation If your structure is set to control sump by elevation, adjusting the Sump grip changes that elevation.

When sump is controlled by elevation, sump is treated as an absolute value that will hold regardless of the structure insertion point. For example, if you grip-edit your structure so its depth is 8.219' (2.51 m), the structure will remain at that depth regardless of what happens to the inverts of your connected pipes. The Control Sump By Elevation parameter is best used for existing structures that have surveyed information of absolute sump elevations that won't change with the addition of new connected pipes.

When selected, a pipe end has three grips in profile view (see [Figure 13.56](#)). You can grip-edit the invert, crown, and centerline elevations at the structure connection using these grips, resulting in the pipe slope changing to accommodate the new endpoint elevation.

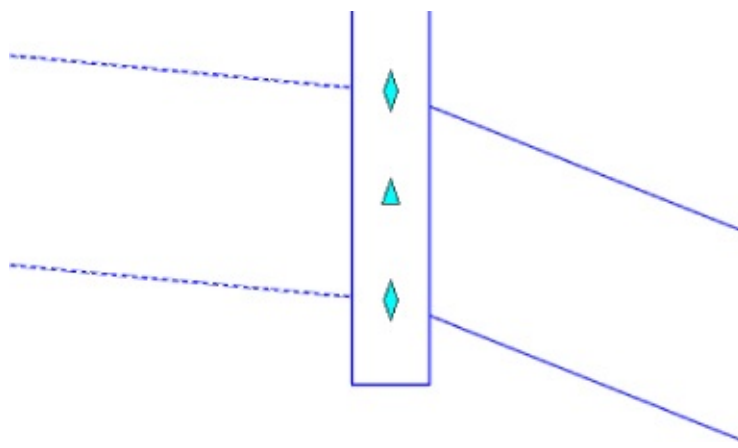


Figure 13.56 Three grips for a pipe end in profile view

When selected, a pipe in profile view has one grip at its midpoint (see [Figure 13.57](#)). You can use this grip to move the pipe vertically while holding the slope of the pipe constant.

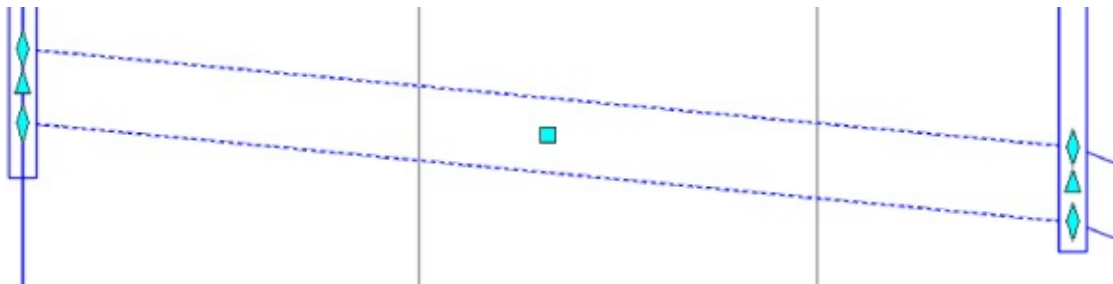


Figure 13.57 Use the midpoint grip to move a pipe vertically.

You can access pipe or structure properties by choosing a part, right-clicking, and choosing Pipe or Structure Properties.

Removing a Part from Profile View

If you have a part in profile view that you'd like to remove from the view without deleting it from the pipe network entirely, you have a few options.

AutoCAD Erase can remove a part from profile view; however, that part is then removed from every profile view in which it appears. If you have only one profile view or if you're trying to delete the pipe from every profile view, this is a good method to use.

Be careful when using the Del key or the Erase command on objects in plan view. Keep in mind that deleting any object from plan view removes the object outright, which includes pipe network parts. Use your Esc key liberally before selecting items to remove; this will help you avoid unintended deletion of items. Of course, if you accidentally blow away something, Undo will bring it back, but it isn't recommended, since pipe network corruption might occur.

A better way to remove parts from a particular profile view is through the Profile View Properties. You can access these properties by selecting the profile view and from the contextual tab select Profile View Properties from the Modify View panel.

The Pipe Networks tab of the Profile View Properties dialog (see [Figure 13.58](#)) provides a list of all pipes and structures that are shown in that profile view. You can deselect the check boxes next to parts you'd like to omit from this view.

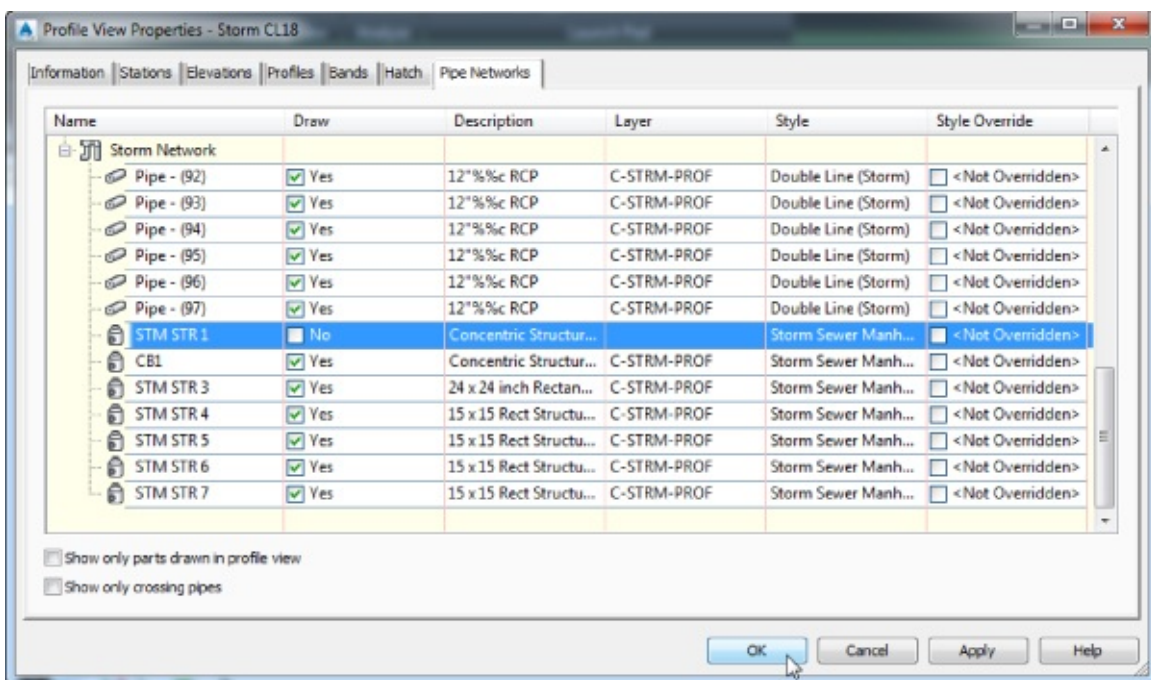


Figure 13.58 Deselect parts to omit them from a view.

At the bottom of the Profile View Properties dialog is a check box for Show Only Parts Drawn In Profile View. This check box is off by default so that you can see every possible pipe and structure. When it is checked on, the Pipe Network tab will hide any pipes that are not visible in the profile view you are examining.

Don't forget about the Show Only Crossing Pipes option. When this option is on, the list will narrow to only pipes that cross the alignment related to the profile view. This is a great help when you need to override the style of crossing pipes to show them as ellipses rather than linear pipes. Style overrides are discussed in more detail in the section of this chapter called “Adding Pipe Network Labels.”

Showing Pipes That Cross the Profile View

If you have pipes that cross the alignment related to your profile view, you can show them with a crossing style. A pipe must cross the parent alignment to be shown as a crossing in the profile view. The location of a crossing pipe is always shown *at the elevation where it crosses the alignment* (see [Figure 13.59](#)).

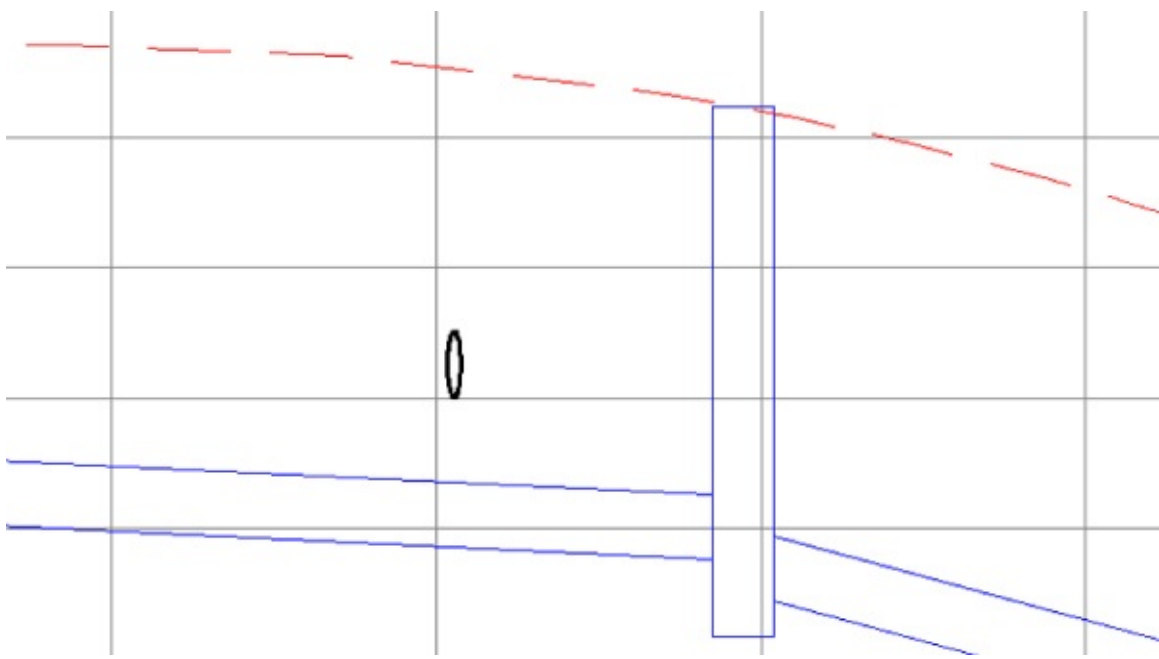


Figure 13.59 A pipe crossing a profile

When pipes enter directly into profiled structures, they can be shown as ellipses through the Display tab of the Structure Style dialog (see [Figure 13.60](#)). See Chapter 19 for more information about creating structure styles.



Figure 13.60 Pipes that cross directly into a structure can be shown as part of the structure style.

The first step to display a pipe crossing in profile is to add the pipe that crosses your alignment to your profile view by either selecting the pipe and from the contextual tab selecting Draw Parts In Profile from the Network Tools panel and then selecting the profile view or by checking the appropriate boxes on the Pipe Network tab of the Profile View Properties dialog. When the pipe is added, it's distorted when it's projected onto your profile view—in other words, it's shown as if you wanted to see the entire length of pipe in profile (see [Figure 13.61](#)).

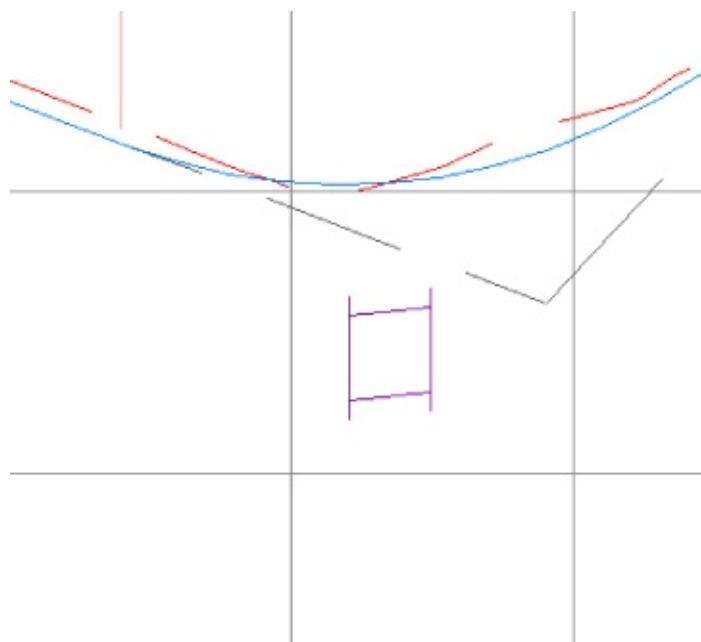


Figure 13.61 The pipe crossing is distorted.

The next step is to override the pipe style *in this profile view only*. Changing the pipe style through pipe properties won't give you the desired result, because that will affect the visibility of every single instance of the pipe. You must override the style on the Pipe Networks tab of the Profile View Properties dialog (see [Figure 13.62](#)).

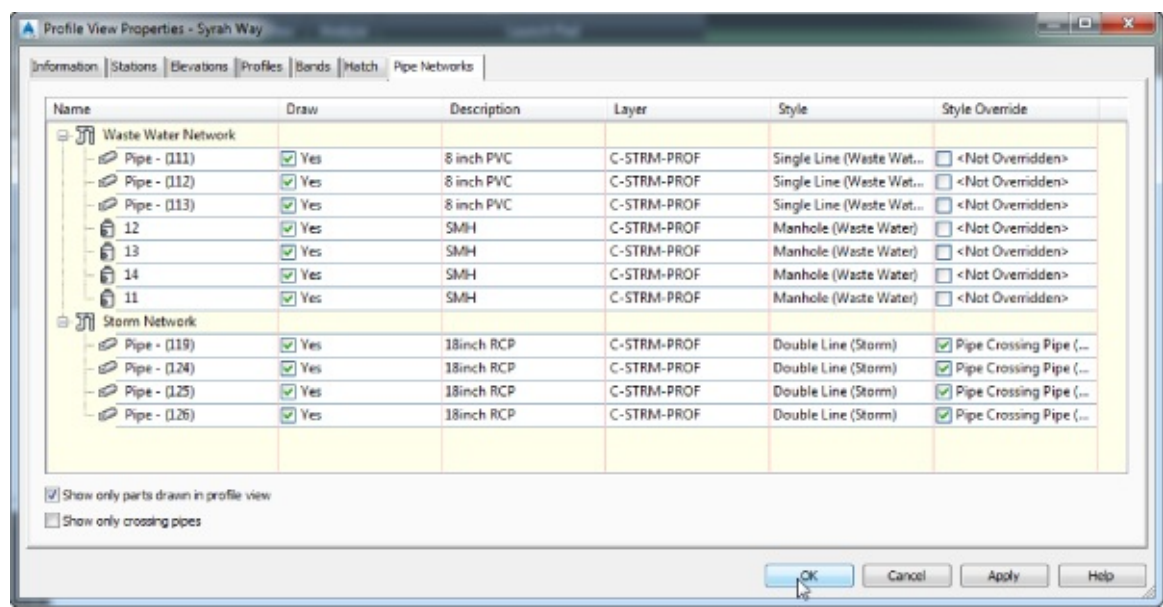



Figure 13.62 Use Style Override to display correctly a crossing in the Profile View Properties dialog.

Locate the pipe you just added to your profile view and scroll to the last column on the right (Style Override). Select the Style Override check box and choose your pipe crossing style. Click OK. Your pipe should appear as an ellipsis.

If your pipe appears as an ellipsis but suddenly seems to have disappeared in the plan and other profiles, chances are good that you didn't use Style Override but accidentally changed the pipe style. Go back to the Profile View Properties dialog and make the necessary adjustments; your pipes will appear as you expect.

Adding Pipe Network Labels

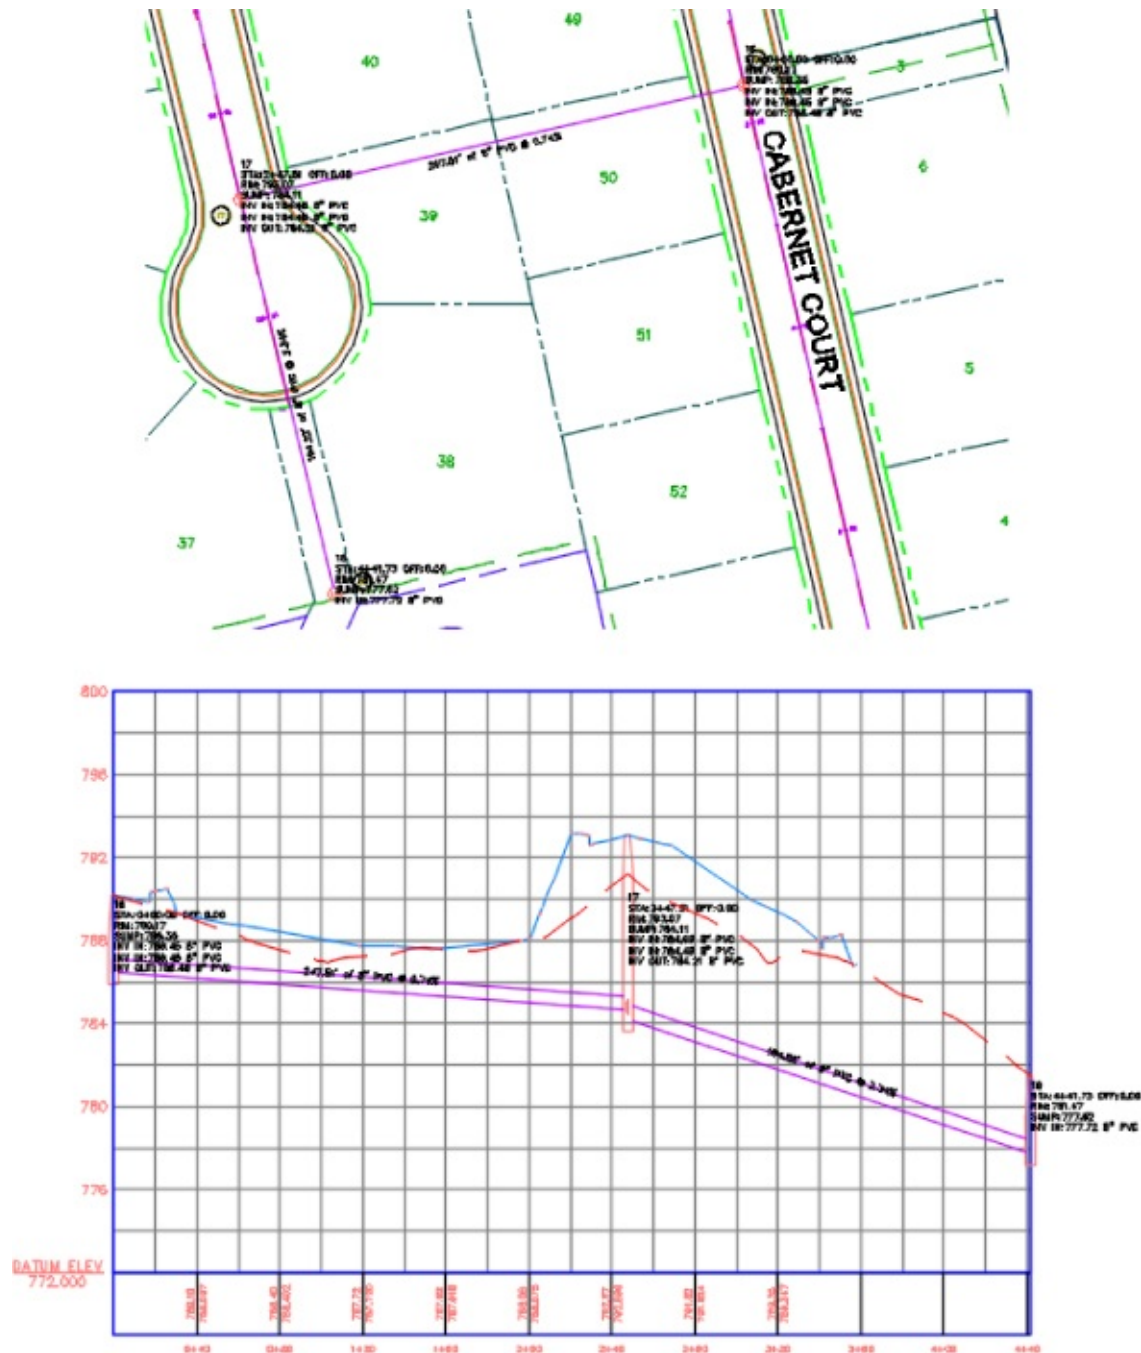Once you've designed your network, it's important to annotate the design. This section focuses on pipe network–specific label components in plan and profile views (see [Figure 13.63](#)).



this drawing rather than use the drawing from an earlier exercise.) Note that surface numbering may differ between drawings so these numbers have been omitted from the exercise.

2. Locate waste water structure 16 (near station 5+15 or 0+160 of Cabernet Court), select it to open the Pipe Networks contextual tab, and then select Alignment From Network on the Launch Pad panel.
3. When prompted to Select Next Network Part, select structure 18 and press **↵** to create an alignment from the waste water network.
4. Choose the following options in the Create Alignment From Network Parts dialog:
 - Site: <none>
 - Name: **SMH16 to SMH18 Alignment**
 - Alignment Type: Miscellaneous
 - Alignment Style: _None
 - Alignment Label Set: _No Labels
 - Create Profile And Profile View check box: Selected
5. Click OK.
6. In the Create Profile From Surface dialog, highlight the EG and Corridor FG surfaces, and click Add.
7. Change the Style for Corridor FG – Surface to Design Profile by clicking on the Style column cell for the profile and selecting the specified style.
8. Click Draw In Profile View to open the Create Profile View dialog.
9. Set Profile View Style to Land Desktop Profile View and click the Next button in the Create Profile View Wizard until you reach the Pipe/Pressure Network Display page.

You should see a list of pipes and structures in your drawing. Make sure Yes is selected for each pipe and structure under Waste Water Network.
10. Click Create Profile View. At the Select profile view origin: prompt, click to place the profile view to the right of the site plan.
11. Press the Esc key to complete the command. Select either a pipe or a structure in the profile view to open the Pipe Networks contextual tab. On the Labels & Tables panel, select Add Labels ► Entire Network Profile. Press Esc to deselect pipe network parts.

The alignment information is missing from your structure labels because the alignment was created after the pipe network.
12. Select one of the pipes in the drawing from either plan or profile view.
13. From the Pipe Networks contextual tab ► Modify panel, click Edit Pipe Network.
14. From the Network Layout Tools, click Pipe Network Vistas.
15. Verify that you are on the Structures tab of Panorama.
16. Select structures 16 through 18 in Panorama using Shift+click. You may need to left-click the Name column header to sort by name.
17. Scroll to the right until you see the Reference Alignment column.

18. Right-click the column header and select Edit. Choose SMH16 To SMH18 Alignment from the Select Alignment dialog and click OK.
 19. Close Panorama by clicking the green check mark on the Pipes and Structures tabs. You may need to enter **REGENALL** at the command line to see your updated structure labels. Close the Network Layout Tools toolbar.
 20. Pan your drawing until you see the Storm layout located on Syrah Way in the plan view.

The waste water pipe network has already been laid out on the Syrah Way profile view. You want to show the storm where it crosses the waste water so you can adjust the pipe elevations if necessary.
 21. Press Esc a few times to make sure no other parts are selected. Then select the four pipes that cross perpendicular to the Syrah Way alignment.
 22. In the Pipe Networks contextual tab > Network Tools panel, select Draw Parts In Profile.
 23. Select the Syrah Way profile view.
 24. Press Esc to ensure no extra objects are selected, and then select the profile view and pick Profile View Properties from the Profile View contextual tab.
 25. On the Pipe Networks tab of the Profile View Properties dialog, place a check mark next to Show Only Parts Drawn In Profile View.
 26. Select all four Storm Network pipes shown in [Figure 13.62](#), and override the pipe style in this profile view by placing a check mark next to <Not overridden> in the Style Override column. You will be prompted to pick the pipe style and select the Pipe Crossing Pipe (Storm) style. Click OK when you have selected the style.
 27. When overrides have been set for all four pipes, click OK and Esc to deselect any items.
- Your crossing pipes will resemble [Figure 13.64](#).



Figure 13.64 The completed exercise with crossing pipes

28. Adjust the elevations of the crossing pipes as needed. Close the Network Layout Tools toolbar. Save and close the drawing.

You can control the accuracy of the pipe crossing representation by changing the value of the `facetdev` variable.

For your reference, completed versions of the drawing (`1307_PipeLabels_FINISHED.dwg` and `1307_PipeLabels_METRIC_FINISHED.dwg`) are available with the rest of this book's download.

Using Pipe and Structure Labels

In earlier exercises, you had a sneak peek at adding labels for structures. Civil 3D makes no distinction between a plan label and a profile label. The same label style can be used in both places. In this chapter, you will use label styles that are already part of the drawing.

To create your own pipe labels from scratch, see Chapter 18.

Spanning Pipe Labels

In addition to single-part labels, pipes shown in either plan or profile view can be labeled using the Spanning Pipes option. This feature allows you to choose more than one pipe; the length that is reported in the label is the cumulative length of all pipes you choose.

Unlike Parcel spanning labels, no special label-style setting is required to use this tool. The Spanning Pipes option is on the Annotate tab. Select **Add Labels > Pipe Network > Spanning Pipes Profile** or **Spanning Pipes Plan** to access the command. Within these labels you can add and display specific parameters for spanned labels such as **Drop Across Span**, **Slope Across Span**, and **Number Of Pipes In Span**.

Creating an Interference Check

When designing, you must make sure pipes and structures are appropriately separated. You can perform some visual checks by rotating your model in 3D and plotting pipes in profile and section views (see [Figure 13.65](#)). Civil 3D also provides a tool called Interference Check that makes a 3D sweep of your pipe networks and lets you know if anything is too close for comfort.

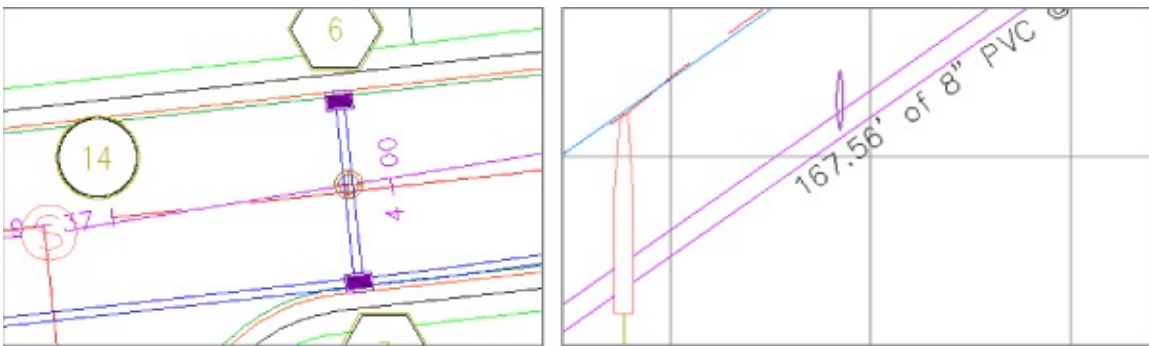


Figure 13.65 Two pipe networks may interfere vertically where crossings occur (left). Viewing your pipes in profile view can also help identify conflicts (right).

The following exercise will lead you through creating a pipe network and using Interference Check to scan your design for potential pipe network conflicts:

1. Open the `1308_Interference.dwg` (`1308_Interference_METRIC.dwg`) file. The drawing includes

a waste water pipe network and a storm drainage pipe network.

2. Select a part from either network, and on the Pipe Networks contextual tab ► Analyze panel, choose Interference Check ► Create Interference Check, as shown in [Figure 13.66](#).

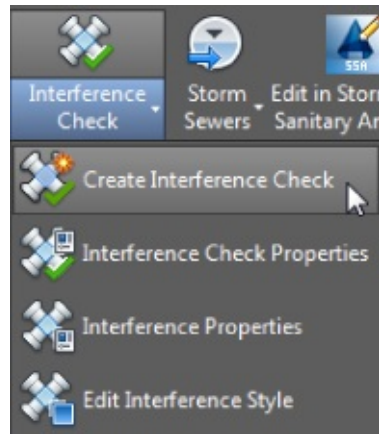


Figure 13.66 Creating an interference check

You'll see the Select a part from the same network or different network: prompt.

3. Select a part from the network that hasn't already been chosen.

The Create Interference Check dialog will appear ([Figure 13.67](#)).

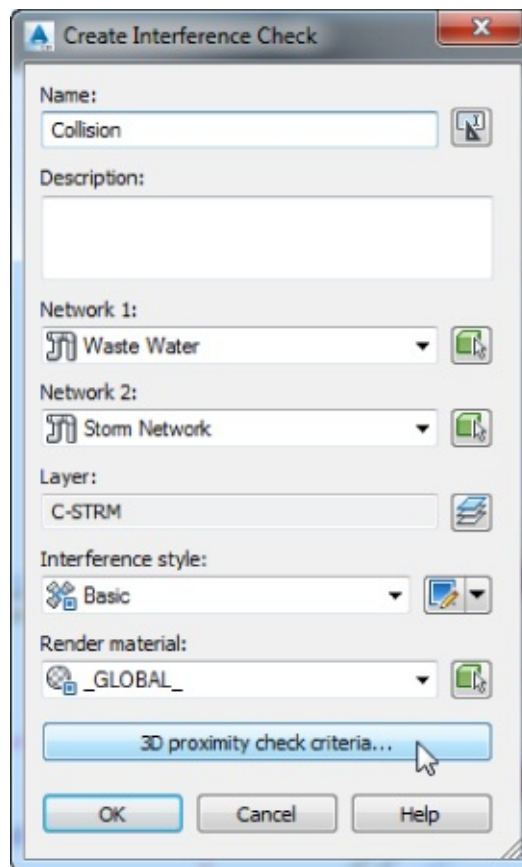


Figure 13.67 The Create Interference Check dialog

4. Name the Interference Check **Collision**, and confirm that Waste Water and Storm Network appear in the Network 1 and Network 2 boxes.
5. Click the 3D Proximity Check Criteria button, and the Criteria dialog will appear (see [Figure 13.68](#)).

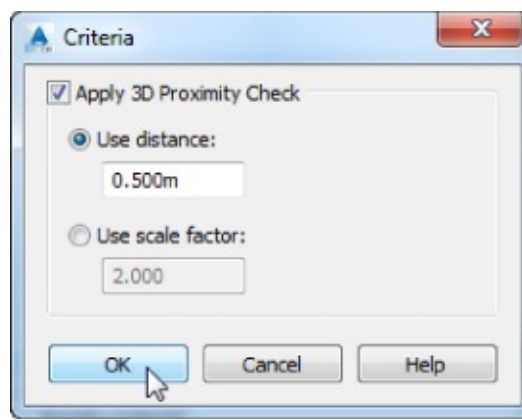


Figure 13.68 Criteria for the 3D proximity check

6. You're interested in finding all network parts that are within a certain tolerance of one another, so place a check mark next to Apply 3D Proximity Check. Then enter **1.5** (**0.5** for metric users) in the Use Distance box.

This setting creates a buffer to help find parts in all directions that might interfere. If you forget to check Apply 3D Proximity Check, only direct, physical collisions will be listed as collisions.

7. Click OK to exit the Criteria dialog, and click OK to run the Interference Check.

You should see a dialog that alerts you to three interferences.

8. Click OK to dismiss this dialog.

9. On the Prospector tab of Toolspace > Pipe Networks, expand the Interference Checks branch. Right-click Collision and select Zoom To.

A small marker will appear at each location where interference occurs, as shown in [Figure 13.69](#).

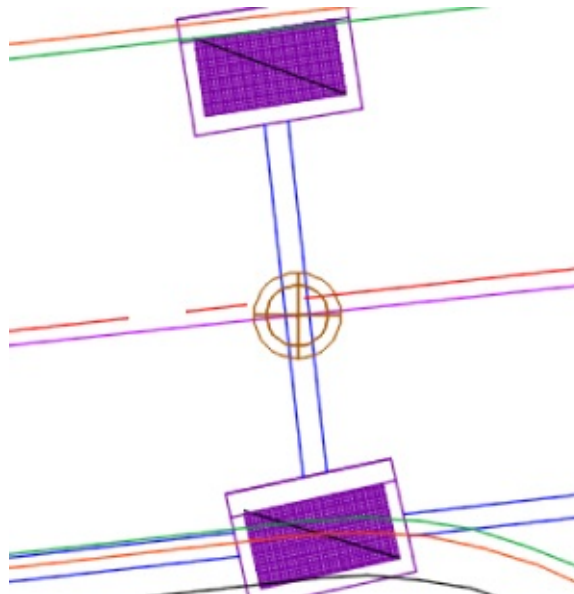



Figure 13.69 The interference marker in plan view

10. Make sure there is no item selected by pressing the Esc key a few times. Then select any one of the interference markers, the pipes that intersect, or the nearby inlets.
11.  From the Multiple contextual tab > General Tools panel, click Object Viewer.
12. In the upper-left corner of Object Viewer, click the Visual Style drop-down. Change the Visual Style

to Conceptual. Choose SW Isometric in upper-right corner of Object Viewer.

The interference marker will appear in 3D, as shown in [Figure 13.70](#).

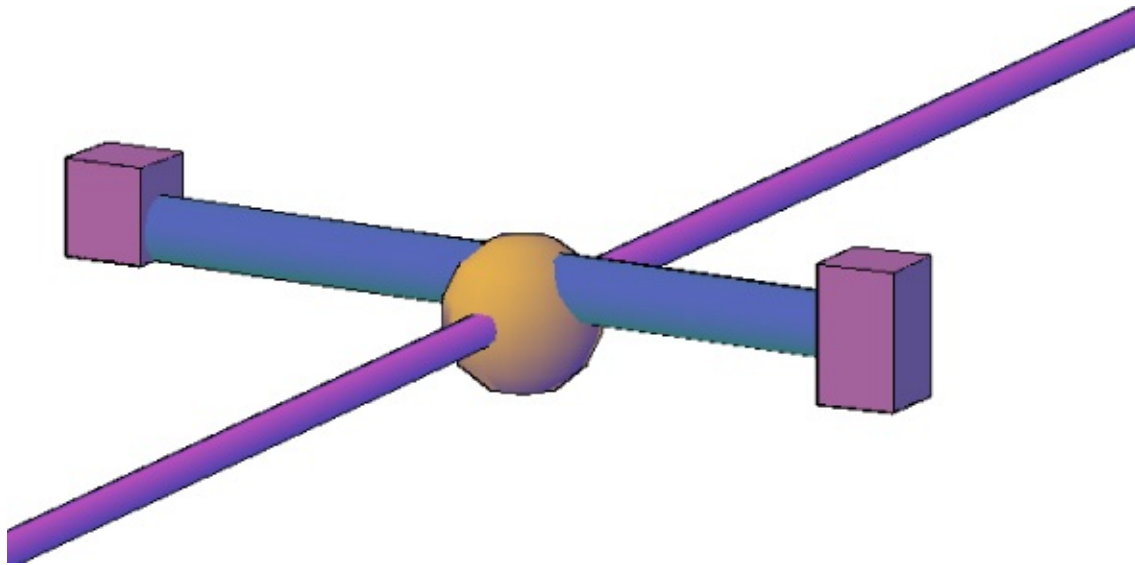


Figure 13.70 The interference marker in 3D

13. Use the ViewCube in Object Viewer to navigate in 3D.
14. Once you have examined the 3D objects, close Object Viewer. Save and close the drawing.

Note that each instance of interference is listed in the preview pane for further study.

For your reference, completed versions of the drawing (`1308_Interference_FINISHED.dwg` and `1308_Interference_METRIC_FINISHED.dwg`) are available with the rest of this book's download.

Editing your pipe network will flag the interference check as “out of date.” You can rerun Interference Check by right-clicking Interference Check in Prospector. You can also access the Interference Check Properties to edit your criteria in this context menu.

Creating Pipe Tables

Just as with parcels and labels, the process of labeling pipes can turn into a mess when all the labels are set on the plan (see [Figure 13.71](#)). In this section, you will explore the process of creating tables for pipes and structures.

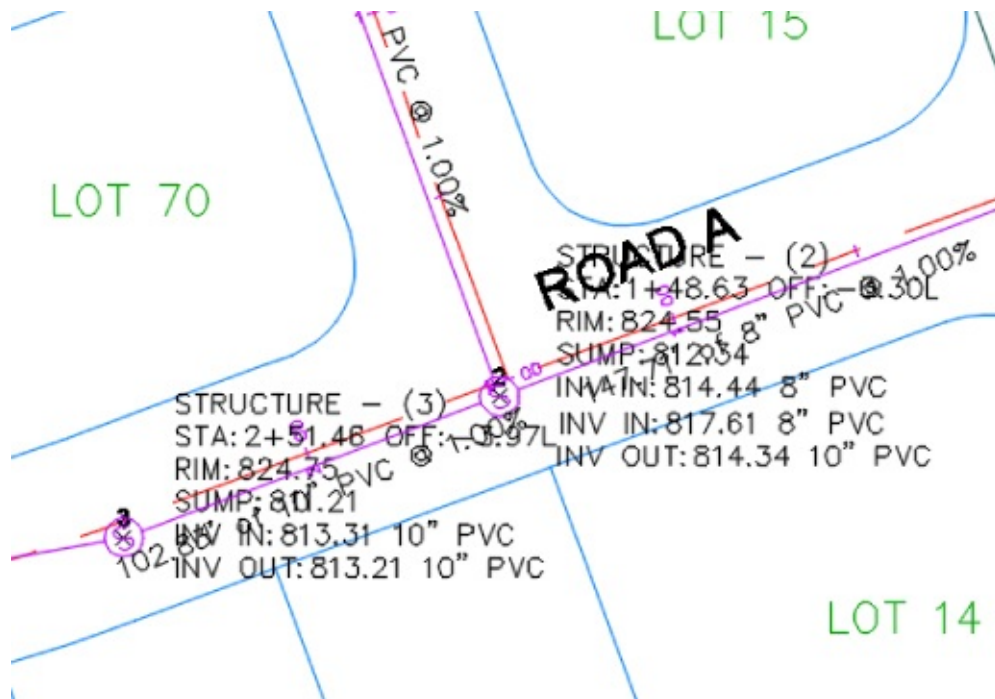


Figure 13.71 Crowded pipes and structure labels on a plan

Exploring the Table Creation Dialog

Because the Structure Table Creation dialog and Pipe Table Creation dialog are similar (see [Figure 13.72](#)), we will cover both of them in this section.

- The Table Style option allows you to select a table look or style. You can select the available styles from the arrow to the right of the Table Style name. You can also create new, copy, edit, or pick a table style from an existing table in the drawing. For more on table styles, see Chapter 18.
- The Table Layer option shows the layer where the table is placed.
- With the By Network radio button selected, you can select the network to create a table from the drop-down, or you can use the Pick icon to select the network from the drawing.
- With the Multiple Selection radio button selected and by using the Pick icon, you can select structures or pipes (depending on which table type is selected) from the drawing. You can pick pipes or structures regardless of the network.
- The Split Table check box allows you to split the table if it becomes too large. You can specify the maximum number of rows per table and the maximum number of tables per stack. Additionally, you can set the offset distance between the stacked tables.
- You can choose whether you want the split tables tiled across or down.
- In the Behavior section, choose Static or Dynamic. A static table will not update if any changes are made to the pipe network, such as swapping a part. Dynamic will update the table to those changes.

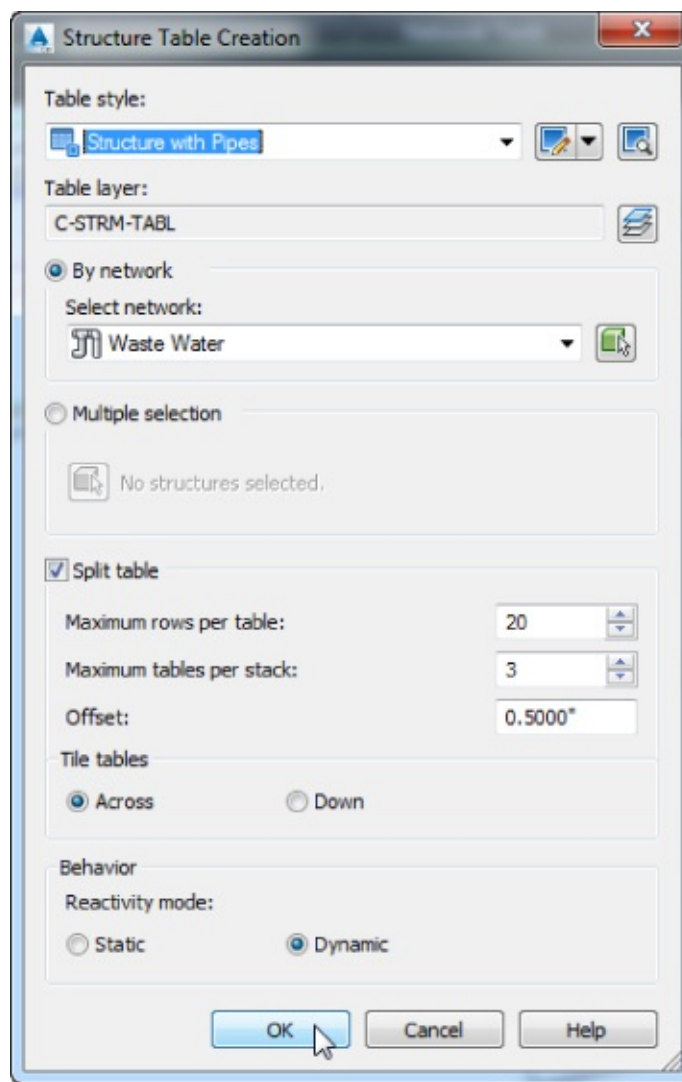


Figure 13.72 The Structure Table Creation dialog box

In the following exercise, you will create a pipe network table for the waste water structures:

1. Open the 1309_PipeTable.dwg (1309_PipeTable_METRIC.dwg) file.
2. Click on the MH1. This is a structure from the waste water network.
3. From the Pipe Networks contextual tab > Labels & Tables panel, select Add Tables > Add Structure.

The Structure Table Creation dialog opens.

4. Verify that the By Network option is set to Waste Water. Click OK to accept the default settings (shown in [Figure 13.72](#)).
5. Place the table to the right of your plan.

The table should look similar to [Figure 13.73](#).

STRUCTURE TABLE			
STRUCTURE NAME:	DETAILS:	PIPES IN:	PIPES OUT
MH2	48" RIM = 824.50 SUMP = 818.8 INV IN = 818.72 INV OUT = 820.81	Pipe 10, 12" PVC INV IN =818.72	Pipe 1, 6" PVC INV OUT =820.81
MH1	48" RIM = 823.35 SUMP = 814.8 INV IN = 814.92 INV OUT = 814.92	Pipe 1, 8" PVC INV IN =814.92	Pipe 2, 6" PVC INV OUT =814.92
SAN STR 11	48" RIM = 822.99 SUMP = 818.8 INV OUT = 818.90		Pipe 10, 12" PVC INV OUT =818.90
SAN STR 10	48" RIM = 815.82 SUMP = 775.0 INV IN = 775.06	Pipe 9, 8" PVC INV IN =775.06	
MH3	48" RIM = 811.06 SUMP = 806.1 INV IN = 806.21 INV OUT = 806.21	Pipe 2, 8" PVC INV IN =806.21	Pipe 3, 8" PVC INV OUT =806.21
SAN STR 4	48" RIM = 797.37 SUMP = 778.8 INV IN = 778.90 INV OUT = 778.90	Pipe 8, 8" PVC INV IN =778.90	Pipe 9, 8" PVC INV OUT =778.90
SAN STR 5	48" RIM = 793.30 SUMP = 788.7 INV IN = 788.83 INV OUT = 788.81	Pipe 3, 8" PVC INV IN =788.83	Pipe 4, 6" PVC INV OUT =788.81
SAN STR 6	48" RIM = 791.47 SUMP = 777.4 INV IN = 777.47 INV OUT = 777.47	Pipe 7, 8" PVC INV IN =777.47	Pipe 8, 6" PVC INV OUT =777.47
SAN STR 8	48" RIM = 785.43 SUMP = 778.2 INV IN = 778.28 INV OUT = 778.28	Pipe 6, 6" PVC INV IN =778.28	Pipe 7, 8" PVC INV OUT =778.28
SAN STR 9	48" RIM = 783.54 SUMP = 779.0 INV IN = 779.09 INV OUT = 779.09	Pipe 5, 6" PVC INV IN =779.09	Pipe 6, 8" PVC INV OUT =779.09

Figure 13.73 The finished structure table

The process of creating tables for pipes is similar to the process for creating tables for structures.

6. Press Esc to clear the current selection and click any waste water pipe.

Note that as long as you have the Pipe Networks contextual tab open you can create a table for either pipes or structures.

7. From the Pipe Networks contextual tab > Labels & Tables panel, select Add Tables > Add Pipe.

The Pipe Table Creation dialog opens ([Figure 13.74](#)).

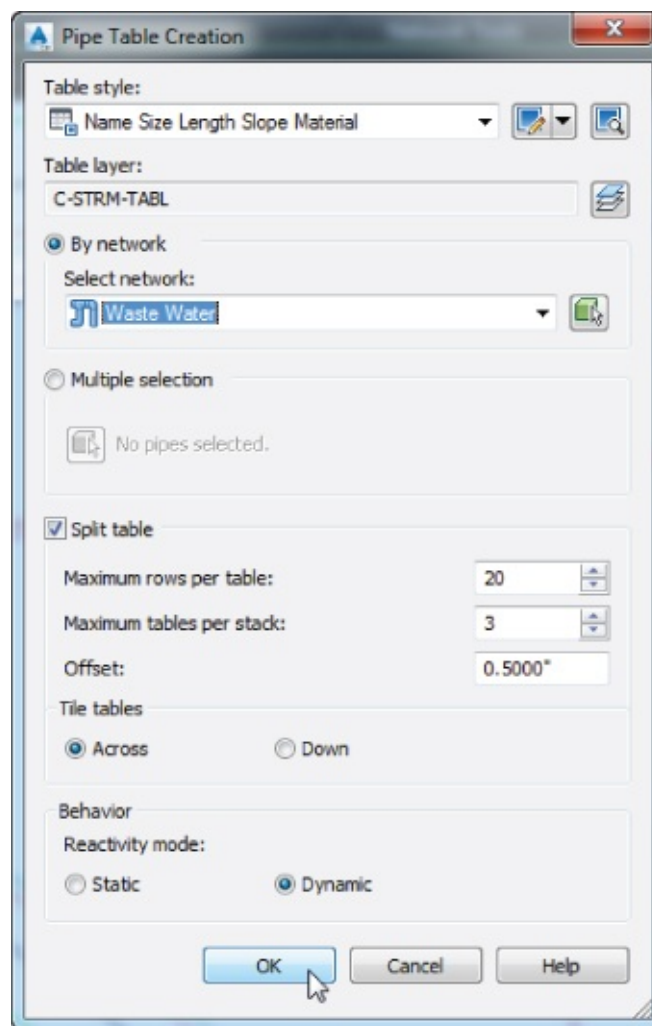


Figure 13.74 The Pipe Table Creation dialog

8. Verify that the By Network option is set to Waste Water. Click OK to accept the default settings.
9. Place the table to the right of the structure table.

The pipe table should look similar to [Figure 13.75](#). (Metric users will see Reinforced Concrete in the Material column.)

Pipe Table				
NAME	SIZE	LENGTH	SLOPE	MATERIAL
Pipe 1	8"	139.54'	4.22%	PVC
Pipe 2	8"	177.33'	4.91%	PVC
Pipe 3	8"	248.11'	7.00%	PVC
Pipe 4	8"	122.89'	6.00%	PVC
Pipe 5	8"	105.12'	3.00%	PVC
Pipe 6	8"	80.50'	1.00%	PVC
Pipe 7	8"	81.15'	1.00%	PVC
Pipe 8	8"	56.44'	1.00%	PVC
Pipe 9	8"	199.99'	0.92%	PVC
Pipe 10	12"	45.00'	0.40%	PVC

Figure 13.75 The finished pipe table

The Table Panel Tools

When you click a table, the Table contextual tab opens and has several tools available ([Figure 13.76](#)). You'll look at each in this section.

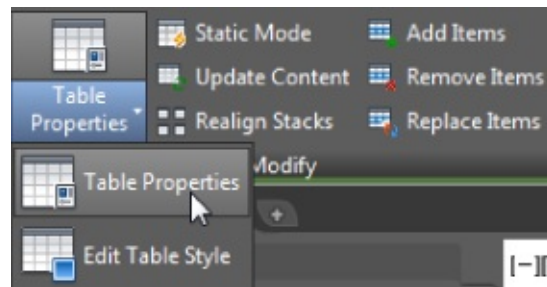


Figure 13.76 The Table contextual tab

The General Tools Panel

The tools here are the same as mentioned earlier when the pipe network tools were discussed.

The Modify Panel

The Modify panel contains the following tools:

Table Properties This tool opens the Table Properties dialog. With it, you can set the table style and choose whether to split the table with all the options mentioned earlier. In addition, you can force realignment of stacks, and if the reactivity mode is set to Static, you can force content updating.

Edit Table Style This tool is located under the Table Properties drop-down and opens the Table Style dialog. For more on editing table styles, see Chapter 18.

Static Mode This tool turns a dynamic table into a static table.

Update Content This tool forces an update on a table.

Realign Stacks This tool readjusts the table columns back to the default setting. This is especially useful after changing the annotation scale of the view or viewport.

Add Items This tool adds pipe data to the table that was added after the table was created.

Remove Items This tool removes pipe or structure objects from a table.

Replace Items This tool allows you to replace the current select set with a new one.

Setting and Using a Pressure Pipes Network

Pressure pipes work differently than gravity-flow pipe systems within Civil 3D. Much of the need for custom parts such as valves or hydrants is eliminated with these systems. In this section, you'll learn how easy it is to model water, gas, or other pressurized systems in 3D.

Pressure Network Parts List

Like gravity-based networks, a pressure network starts with a parts list. All of the parts available in Civil 3D are based on standards established by the American Water Works Association (AWWA) and are listed in both inches and millimeters.

Pressure parts lists contain pipes, fittings, and appurtenances. You'll find the style for each object in the parts list, but instead of rules, pressure pipe design checks are tucked into the command settings.

Examples of Pressure Pipe Network parts lists include

- Water main and service connections
 - Ductile iron pipe
 - Tees, elbows, and crosses
 - Valves
- Gas main
 - PVC pipe
 - Valves

Under the Hood of the Pressure Network

Before you can create a Pressure parts list, you must determine the catalog from which you will be working. Set the pressure network catalog by going to the Home tab > Create Design panel (expand the panel to view the additional tools) and selecting Set Pressure Network Catalog, as shown in [Figure 13.77](#).

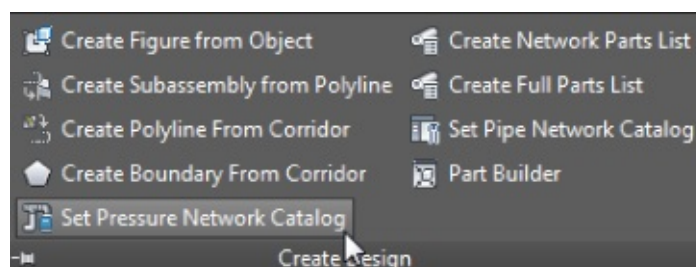


Figure 13.77 Setting the pressure network catalog

Set the path to the Pressure Pipes Catalog folder to C:\ProgramData\Autodesk\C3D 2015\enu\Pressure Pipes Catalog. Click the folder icon to choose either the Metric or the Imperial database, depending on your needs.

The catalog database file determines the join type between pressure network parts. In modern water main construction, the most commonly used join type is the push-on type, which is the default pressure database. As shown in [Figure 13.78](#), with Imperial units you have three options:

- Imperial_AWWA_Flanged
- Imperial_AWWA_Mechanical
- Imperial_AWWA_PushOn

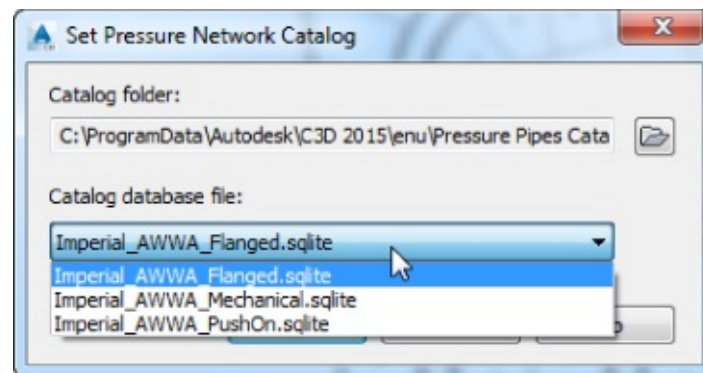


Figure 13.78 Setting your catalog database file

Metric_AWWA_PushOn is currently the only available option for metric users.

These differ slightly in their options for pipes, fittings, and appurtenances. Only one type of pressure network catalog can be active at a time. A parts list can have parts from only one catalog in it; for example, you cannot mix and match push-on with mechanical parts. You can, however, have multiple Pressure parts lists in your template; each can pull parts from the various catalog database files. You can place parts from different parts lists into the same pressure network, as long as the parts are meant for the same diameter and pressure.

Creating a Pressure Parts List

In the Settings tab of Toolspace, you will find the listing for pressure networks. The Pressure Networks > Parts List branch is where you will create a parts list. In the case of pressure networks, a parts list contains three components:

Pressure Pipes Ductile iron of various sizes can be added. Like the gravity networks, each part can have a style. Furthermore, different sizes within the part families can have styles, which can help you identify them in the graphic.

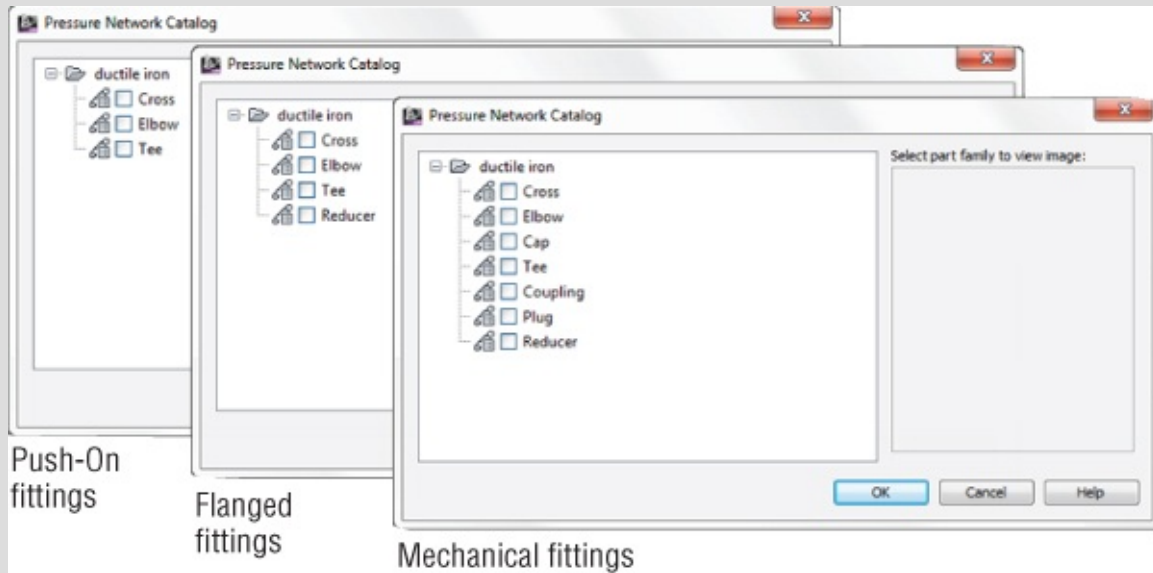
Fittings Fittings such as tees, crosses, and elbows are specified in this tab.

Appurtenances Valves are specified in the Appurtenances tab.

Bursting with Parts

To create a complete list of all pressure network parts available in your active part catalog, type **CreatePressurePartListFull** at the command line and press **↵**.

Keep in mind that the three different catalogs available to US Imperial units vary with regard to which parts are available. For example, the following graphic shows the variation of the fittings available to Push-on, Flanged, and Mechanical catalogs.



Your next question is probably, “Okay, so can I make my own parts?” The answer is, “Depends on your modeling skills and available time.”

Pressure pipe network parts are 3D solids with a few extra bells and whistles that tell the program how they connect to other parts. If you are comfortable drafting 3D solids using the tools from the 3D modeling workspace, the procedure is fairly painless.

The Part Publishing Wizard tools built into AutoCAD will allow you to create a *.CONTENT package—for example, Hydrant.CONTENT. Once the content package is created, you can import it into the pressure pipe catalog of your choice by launching the Content Catalog Editor.

The Content Catalog Editor is automatically installed with Civil 3D 2015 and can be found from your Windows Start menu along with the other Autodesk AutoCAD Civil 3D 2015 utilities.

For more information on creating parts through the Part Publishing Wizard, see [PartPublishingWizardUsersGuide.docx](#) located in C:\Program Files\Autodesk\AutoCAD 2015\C3D\Sample\Civil 3D API\Part Publishing Wizard.

In the following exercise, you will create a Pressure Network parts list:

1. Open the 1310_Pressure.dwg (1310_Pressure_METRIC.dwg) drawing, which you can download from this book's web page.

This file is set up with a layer state that makes other objects gray. This will help you focus on the placement of pressure pipe network objects.

2. On the Home tab ➤ Create Design panel, click the arrow to view additional tools and select Set Pressure Network Catalog.

3. In the Set Pressure Network Catalog dialog verify that Catalog Database File is set to Imperial_AWWA_PushOn.sqlite (Metric_AWWA_PushOn.sqlite). (You might need to change the Catalog Folder path to access the correct catalog database file for the metric drawing.) Click OK.
4. On the Settings tab of Toolspace > Pressure Network, expand the Pressure Network branch, right-click Parts Lists, and select New.
5. In the Pressure Network Parts List dialog, switch to the Information tab. Rename the Pressure Network parts list **Watermain**.
6. Switch to the Pressure Pipes tab. Right-click New Parts List and select Add Material.
7. In the Pressure Network Catalog dialog, place a check mark next to Ductile Iron and click OK.
8. The name of the Pipe Parts list will update to Watermain. Expand the Watermain branch.
9. Right-click Ductile Iron and select Add Size.
10. Set the Nominal Diameter value to **10"** (250 mm).
11. Set the Cut Length value to **20'** (6 m). Leave all other default values, as shown in [Figure 13.79](#), and click OK.

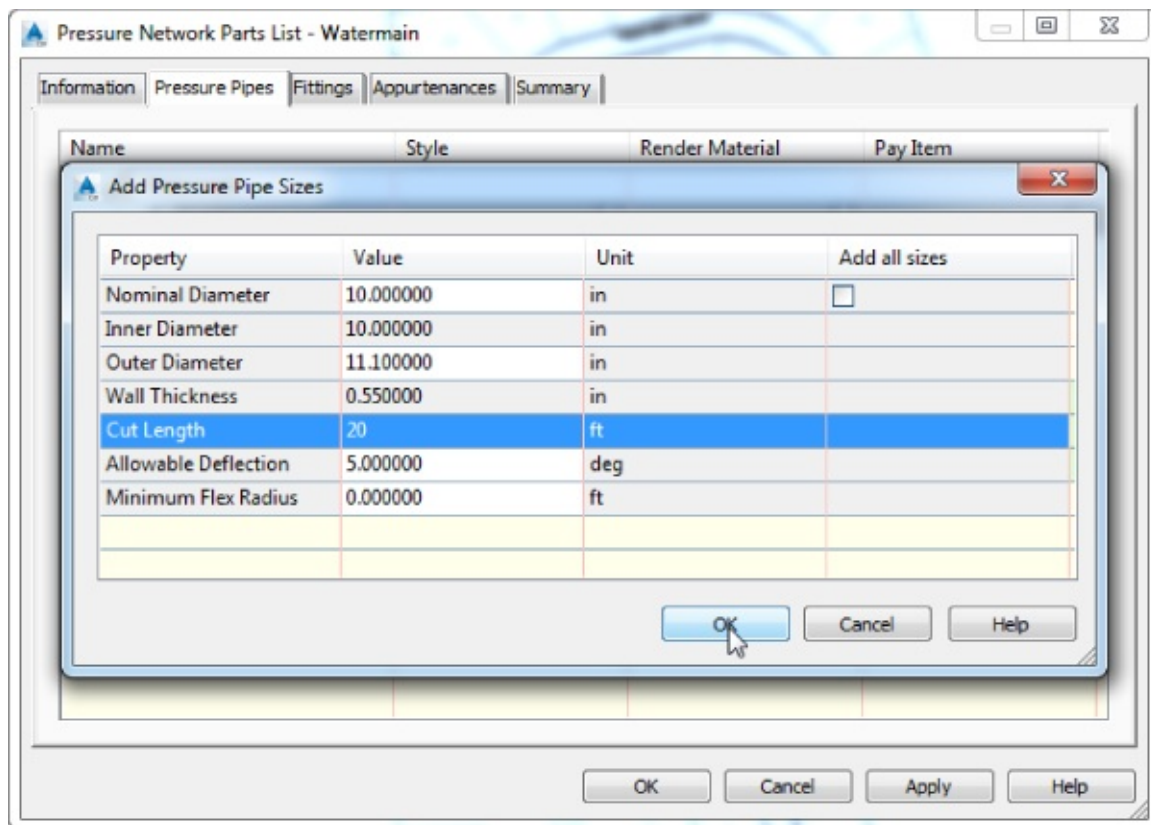


Figure 13.79 Adding ductile iron pipe to the Pressure Network parts list

12. Switch to the Fittings tab, right-click New Parts List, and select Add Type.
13. In the Pressure Network Catalog dialog, place a check mark next to all three fitting types—Cross, Elbow, and Tee—as shown in [Figure 13.80](#), and then click OK.

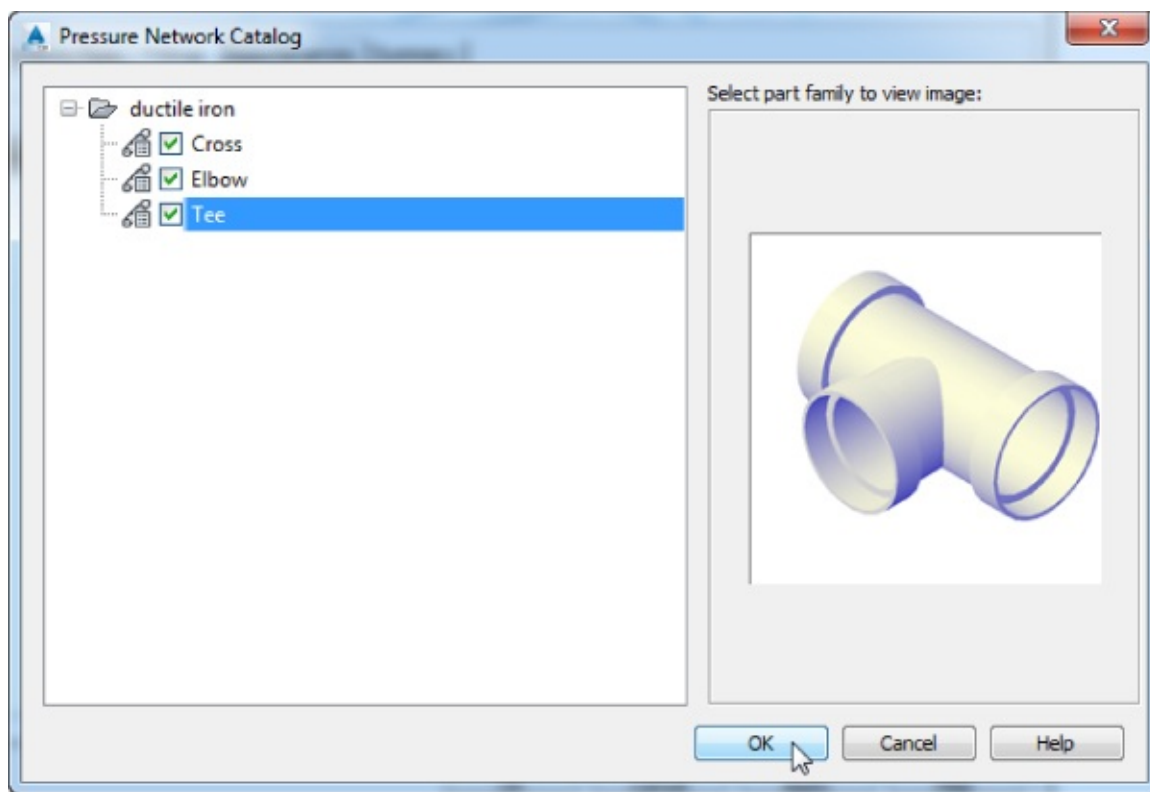


Figure 13.80 Adding fittings to the Pressure Network parts list

Metric users will have only the options for Elbow and Tee.

14. Expand the Watermain branch under the Fittings tab if it is not already expanded.
Metric users can skip to step 17.
15. Right-click Ductile Iron Cross and select Add Size.
16. Change Nominal Diameter to **10 × 10 × 14 × 14**. Leave the Allowable Deflection value as 5 degrees, and click OK.
17. Right-click Ductile Iron Elbow, and click Add Size.
18. Set Bend Angle to **11.25** and set Nominal Diameter to **10 × 10 (250 × 250 mm)**. Leave the Allowable Deflection value at 5 degrees, which is the default for the size you picked. Click OK.
19. Repeat steps 17 and 18 for 22.5-degree and 45-degree elbows, with a nominal diameter of **10 × 10 (250 × 250 mm)**.
20. Right-click Ductile Iron Tee and select Add Size.
21. Set Nominal Diameter to **10" (250 mm)**. Leave Allowable Deflection as 5 degrees. Click OK.
22. Switch to the Appurtenances tab.
23. Right-click New Parts List and select Add Type.
24. Place a check mark next to Gate Valve – Push-On – Ductile Iron – 200 psi (Gate Valve – Push-On – Ductile Iron – 16 Bar) and click OK.
25. Expand the Watermain branch under the Appurtenances tab.
26. Right-click the new gate valve and select Add Size.
27. Change the Nominal Diameter value to **10 × 10 (250 × 250 mm)** and click OK.

28. Click OK again to finish creating the Watermain Pressure Network parts list, and then save the drawing for use in the next exercise.

You can check your results against 1310_Pressure_A.dwg (1310_Pressure_A_METRIC.dwg), which can be downloaded from the book's website.

Creating a Pressure Network

After you have set your pressure network catalog, created your Pressure Network parts list, and set your design parameters, it is time to draw your first network.

Pressure Networks in Plan View

As you work with pressure pipes, you will see some useful glyphs appear as you draw.

As shown in [Figure 13.81](#), selecting a pressure pipe will give you tools to modify and continue your design.

Location The Location glyph moves the pipe both horizontally and vertically and will disconnect it from the adjoining fittings or appurtenances.

Deflection The Deflection glyph will change the angle at which the pipe sits in the adjoining fitting. When this glyph is active, you will see a fan-shaped guide indicating the allowable deflection from the fitting properties in the Pressure Network parts list. You are able to move the pipe beyond the guide, but will receive design check errors when analyzing the network. You will take a closer look at design checks later in this chapter.

Continue Layout Continue Layout will help you pick up where you left off when working with pressure pipes. When you use this glyph from the end of a pipe, it will create a bend using the elbows from your Pressure Network parts list.

Lengthen Lengthen will allow you to stretch or shorten a pipe. When used with dynamic input, you can set pipes to a specified 3D length. See the section on working with pipes and dynamic input earlier in the “Editing with the Network Layout Tools Toolbar” section.

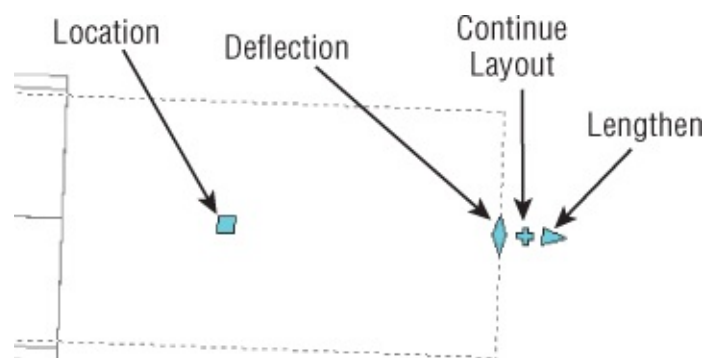


Figure 13.81 Glyphs on a pressure pipe end

As shown in [Figure 13.82](#), you will encounter more glyphs when working with fittings and appurtenances.

Slide The Slide glyph is similar to Lengthen, but it can modify a pipe's length when a fitting or appurtenance is already attached.

Flip The Flip glyph will mirror the part at its center. Flip glyphs are especially handy when working with tees, because it is often necessary to change the outlet direction of a tee after it is inserted. Be cautious when using the Flip glyph with elbows, because it may disconnect the adjoining pipe.

Location Changing the location of a fitting or appurtenance will move the pipe and maintain the connection.

Continue Layout When you use this grip from a fitting or appurtenance, you are restricted to creating your pipe within the object's deflection tolerance.

Rotation This grip allows you to rotate your fitting around its z-axis by a defined angle. Note that this grip is available only when the fitting is not connected to any pipe. Upon connection, the grip becomes unavailable.

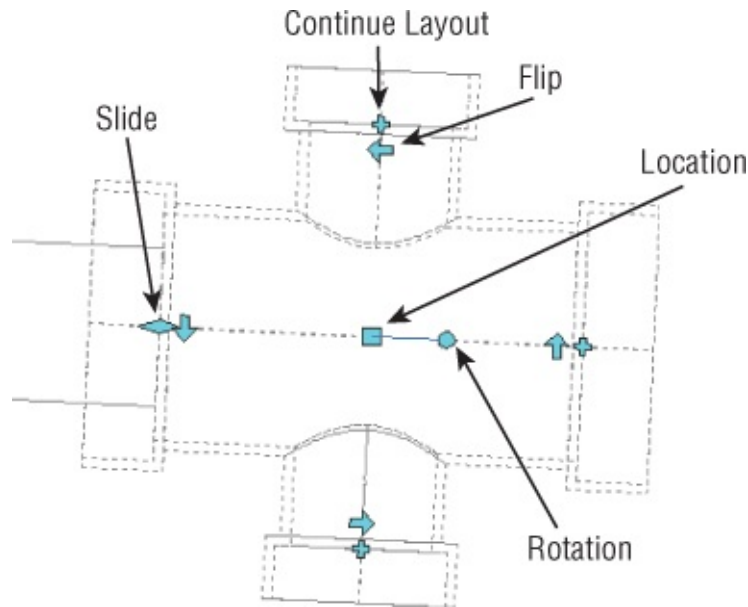


Figure 13.82 Glyphs on a cross fitting

In this exercise, you will create a pressure network. Use the Xs as guides for placement, but don't worry if your pipe network is slightly off from the guides. Due to the 3D nature of the pipes, the restrictions on placement angles within the pressure network parts, and object snap behavior, duplicating an example network exactly would be quite tedious. Get a feel for the pressure network creation tools and have fun! You need to have completed the previous exercise before continuing.

1. Continue working in the drawing 1310_Pressure.dwg (1310_Pressure_METRIC.dwg), or if you have not completed the exercise, open 1310_Pressure_A.dwg (1310_Pressure_A_METRIC.dwg). Make sure that your catalog is set to the Push-On part catalog, as shown in the previous exercise.

As you work through this exercise, you will get the best results if you turn off object snaps, object snap tracking, polar tracking, and/or ortho. Because the pressure pipe tools already have restrictions on how they can be drafted, sometimes these tools conflict with where you want to place the pipe.

2. From the Home tab > Create Design panel, click Pipe Network > Pressure Network Creation Tools, as shown in [Figure 13.83](#).

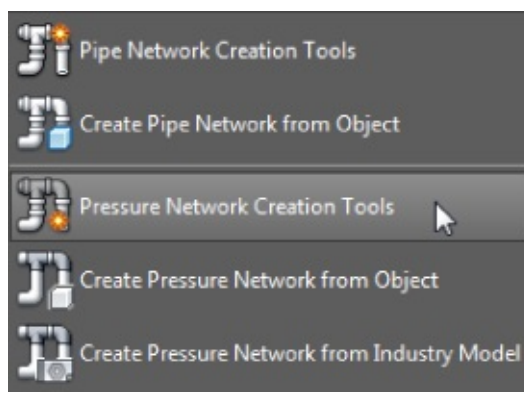


Figure 13.83 Selecting Pressure Network Creation Tools

3. In the Create Pressure Pipe Network dialog, name the network **Watermain North**, and then do the following:
 - a. Set Parts List to Watermain.
 - b. Set Surface Name to Composite.
 - c. Set Alignment Name to Syrah Way.
 - d. Set the pipe, fitting, and appurtenance labels styles as shown in [Figure 13.84](#).

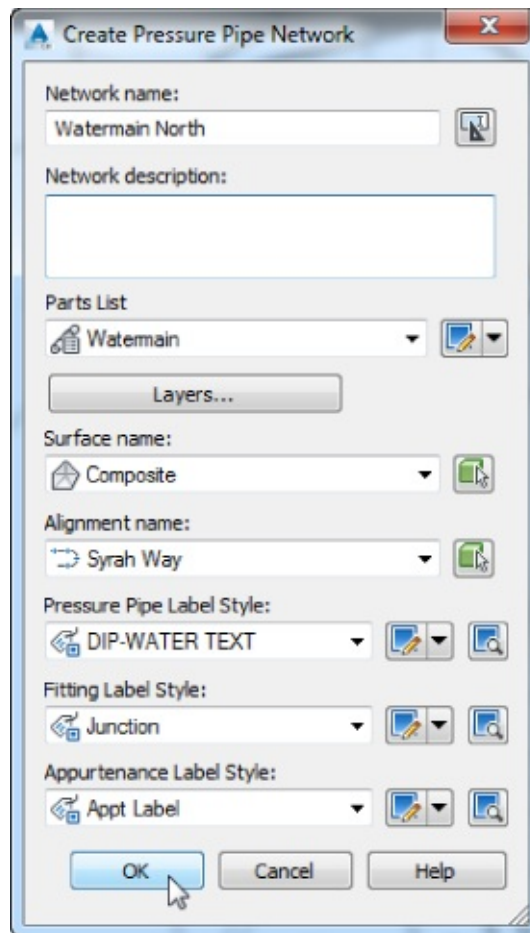


Figure 13.84 Creating your new Watermain North system using pressure pipe network tools

4. Click OK.

The ribbon will change to show you the Pressure Network Plan Layout contextual tab, as shown in [Figure 13.85](#).

 


Figure 13.85 The Pressure Network Plan Layout toolbar

5. On the Pressure Network Plan Layout contextual tab > Network Settings panel, set the default cover to 4.5' (1.5 m).
6. On the Layout panel, set your Size And Material drop-down to Pipe – 10 In – Push-On – Ductile Iron – 350 psi – AWWA C151 (Pipe – 250 mm – Push-On – Ductile Iron – 25 Bar – AWWA C151).
7. Start to place a waterline by clicking the X labeled 1 toward the east end of Syrah Way.
8. Place the first bend by clicking near the X labeled 2, to the left.
9. At the bend, you are restricted to the bend angles listed in your part network. The Compass glyph (Figure 13.86) that appears represents the elbow angles to the left and right of your pipe. If you had not included multiple elbow angles in your Pressure Pipe Network parts list, only the default elbow angle of 11.25 degrees would be available.

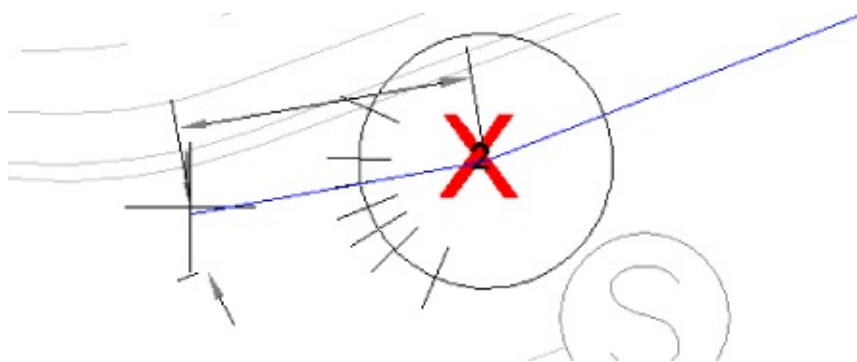


Figure 13.86 The Pressure Pipe Fitting glyph reflects your elbow angles.

10. Click the X labeled 3 to place the next pipe end.
11. Continue working east to west until you click near the X labeled 8. Press the Esc key.

To keep the pressure pipe on track, you will use the allowable deflection of the elbow to move the pipe closer to the edge of the road.

Make sure your object snaps are off for the next steps, because they will interfere with the pipe modification glyphs.

12. Select the pipe section between the X labeled 7 and the X labeled 8, and then use the Deflection glyph to move the end of the pipe up north toward (see Figure 13.87) the approximate center of the green circle in the drawing.

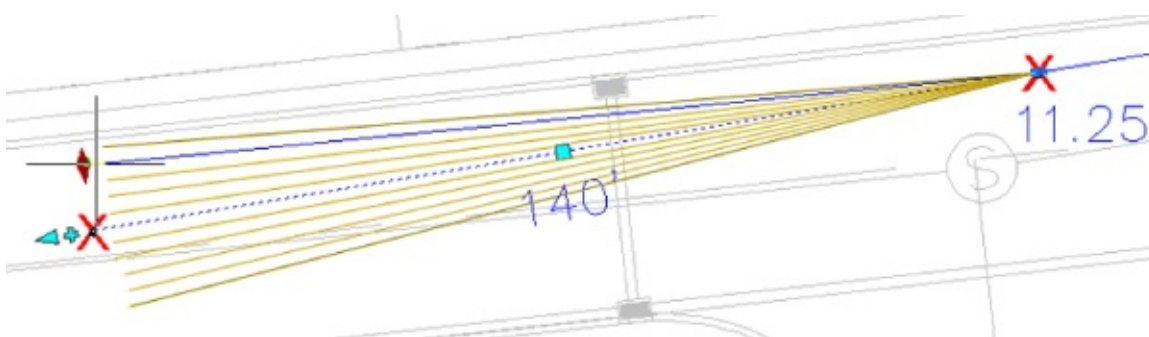


Figure 13.87 Use the Deflection glyph to move the pipe.

13. Click the Continue Layout glyph to continue the layout.
14. Place the next pipe end at the X labeled 9.
15. Continue working west until you reach near the X labeled 10.
Don't worry if you are off the desired location; you can always use the glyphs to edit the pipe location after the fact.
16. Press Esc after placing this pipe.
17. On the Pressure Network Plan Layout contextual tab > Insert panel, change the fitting to Tee–10 in × 10 in- push on-ductile iron-350 psi-AWWA C111/C153 (Tee–250 mm × 250 mm-push on-ductile iron-25 bar-AWWA C110/C111/C153).

18.  Click Add Fitting.

As you hover your cursor near the end of the pipe, you will see the Add Connection glyph, as shown in [Figure 13.88](#).

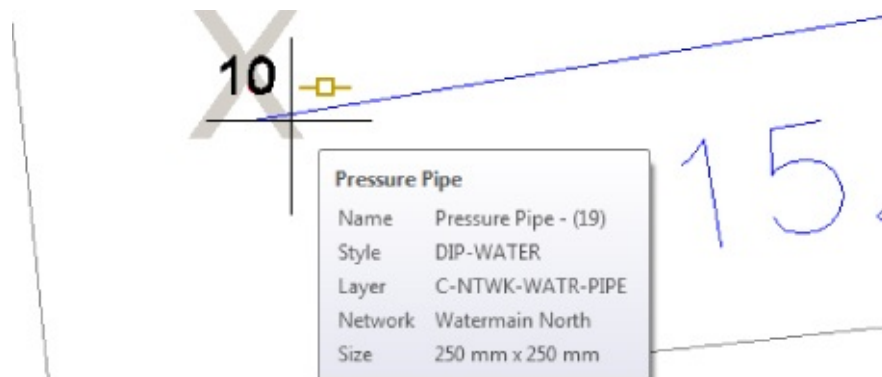


Figure 13.88 Add the fitting to the end of the pipe.

19. When the connection glyph is visible, click to add the tee.
20. Press Esc to complete the task.

At this point, the tee is in the graphic but it is not positioned in such a way that would make it useful in continuing the design north and south along the intersecting road (Frontenac Drive). To fix this situation, you will disconnect it from the pipe, rotate it, and then reconnect it to the pipe.

21. Click the tee in the graphic to select it, and then right-click the part and select Disconnect From Pressure Part, as shown in [Figure 13.89](#). (Note that this command is not available in the contextual tab.)

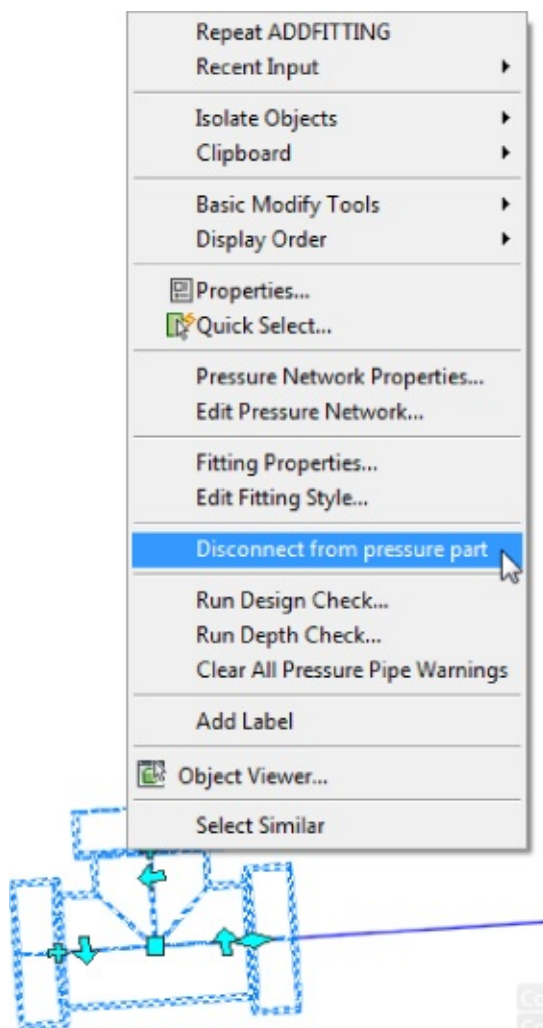


Figure 13.89 Disconnecting the part in preparation for rotating it

22. At the **Select connected pressure part:** prompt, select the pipe connected to the tee.

Now that the part is disconnected, you are free to rotate it into place. Select the part to reveal its glyphs. A Rotation glyph is visible on the object, which you will use to rotate the part 90 degrees counterclockwise.

23. Press F12 to turn on dynamic input if it is not already on.
24. Select the tee and then, as shown in [Figure 13.90](#), click the Rotation glyph and enter **-90**.

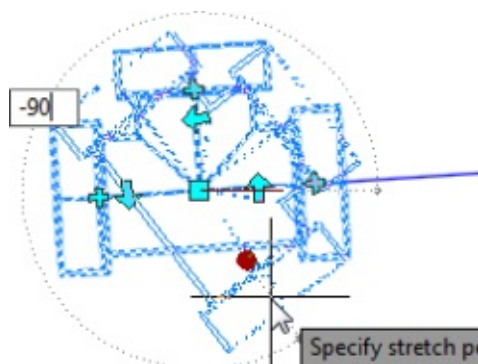



Figure 13.90 Rotate the tee to correct its position before reconnecting.

The tee is now in the correct position, but it must be reconnected to the pipe.

25.  Select the Location grip, and move the tee to the east until you see the Connection glyph similar to the one you saw in [Figure 13.88](#).

26. When you see the Connection glyph, click to set the tee.

You will know the tee is connected properly when the Rotation glyph no longer appears on the selected fitting. Another graphic indication that the tee is connected will be the reappearance of the Slide glyph on the connected end.

27. Working north from the tee, click the Continue Layout grip to continue the layout.

28. Click to place an elbow at the X labeled 11 and finally the X labeled 12. Press Esc.

29. Select the tee again, and working south from the tee, click the Continue Layout grip to continue the layout.

30. Click to place a pipe ending at the X labeled 13, and press Esc.



31. From the Home tab > Layers panel, click Layer Freeze.

32. Click one of the Xs to freeze the _PLACEMENT SYMBOLS layer, and press \leftarrow to complete.

If you no longer see the Pressure Network Plan Layout contextual tab, you can get back to it by selecting any pressure network part, and from the Pressure Networks contextual tab > Modify panel, clicking Edit Network > Plan Layout Tools.

33. Press Esc to deselect any items selected on the screen. On the Pressure Network Plan Layout contextual tab > Insert panel, verify that Appurtenance is set to the gate valve-10 inch-push on-ductile iron-200 psi-AWWA C111/C500 (gate valve-250 mm-push on-ductile iron-16 bar for metric users).



34. Click Add Appurtenance.

35. Place the appurtenance in the drawing by clicking near the end of the north pipe. Be sure to look for the single square Connection glyph that indicates you are connecting to the end of the pipe. If you see the double “boxing gloves” glyph, it means you are about to break the pipe.

Be sure to look for the Attachment glyph before clicking, as shown previously in [Figure 13.88](#). Don't be shy about zooming in close to get a good look at the object with which you are working.

36. Repeat the process to place another valve at the south end. Press the Esc key when you've finished. Close the contextual tab to exit the editing mode.

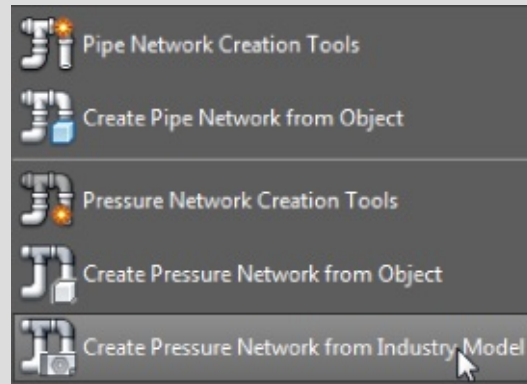
37. Save and close the drawing.

Completed versions of this drawing can be found with the dataset for comparison:

1310_Pressure_FINISHED.dwg (1310_Pressure_METRIC_FINISHED.dwg).

Importing an Industry Model

One of the options you have with Civil 3D 2015 is to create a pressure network from an industry model.



An *industry model* is a type of AutoCAD drawing file that contains data from one of the handful of Autodesk-created templates, most commonly from Autodesk® Map 3D software. The Map 3D standalone product comes with premade infrastructure data classes such as waste water, water, gas, and electric, just to name a few. Not just any Map 3D file will do. A drawing containing pipe and valve information will be recognized as an industry model only if it was created based on one of the industry-specific templates. The ability to create an industry model is not available on the Map 3D workspace that is part of Civil 3D.

Pressure Pipe Networks in Profile View

Pressure pipe networks can do things in profile view that gravity pipes cannot. With pressure pipes, the profile view can be used to change straight pipes to curves and delete parts from the project altogether. It is not a good idea to attempt to add parts to your pressure network in profile view, because the resulting location in plan cannot be controlled.

To access these tools, select any pressure part, and from the Pressure Networks contextual tab ► Modify panel, choose Edit Network ► Profile Layout Tools, as shown in [Figure 13.91](#).

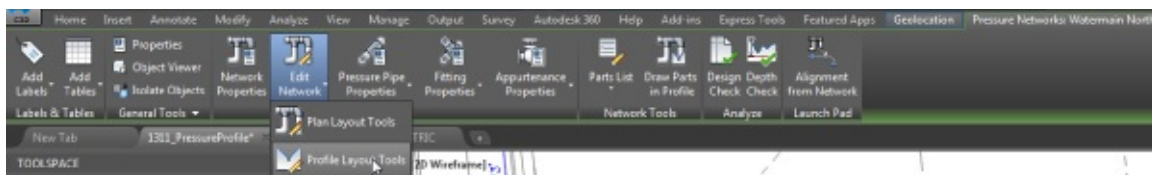


Figure 13.91 Locating the Profile Layout tools

In the following exercise, you will draw the pressure pipe network in profile view and modify the layout using the Follow Surface command:

1. Open the 1311_PressureProfile.dwg (1311_PressureProfile_METRIC.dwg) drawing, which you can download from this book's web page.
2. Select any pressure network part in the drawing.
3. From the Pressure Networks contextual tab ► Launch Pad panel, select Alignment From Network.
4. At the Select first Pressure Network Part (Pipe or Fitting or Appurtenance):

prompt, click the Gate Valve at the far right of the drawing.

- At the Select next Pressure Network Part or [Undo]: prompt, select the Gate Valve at the northwest part of the project.
- Press \leftarrow to continue.

The next few steps are exactly the same as when you created an alignment and profile from a gravity pipe network. You will be prompted to create an alignment, sample the surface, and create a profile view.

- In the Create Alignment - From Pressure Network dialog, change the name to **Syrah Water**.
- Verify that Create Profile And Profile View is checked. Leave all other styles and settings at their defaults and click OK.
- In the Create Profile From Surface dialog, highlight the Composite surface and click Add.
- Click Draw In Profile View.
- In the Create Profile View Wizard, set Profile View Style to Land Desktop Profile View, and leaving all other settings at their defaults click Create Profile View.
- Place the view by clicking a location in the drawing off to the side of the project.

You should see the profile view with your pressure pipe network present in all its glory. As you can see in [Figure 13.92](#), the pipe looks good, except it appears that the pipe cover is inadequate toward the end of the alignment. You can fix this in the steps that follow.

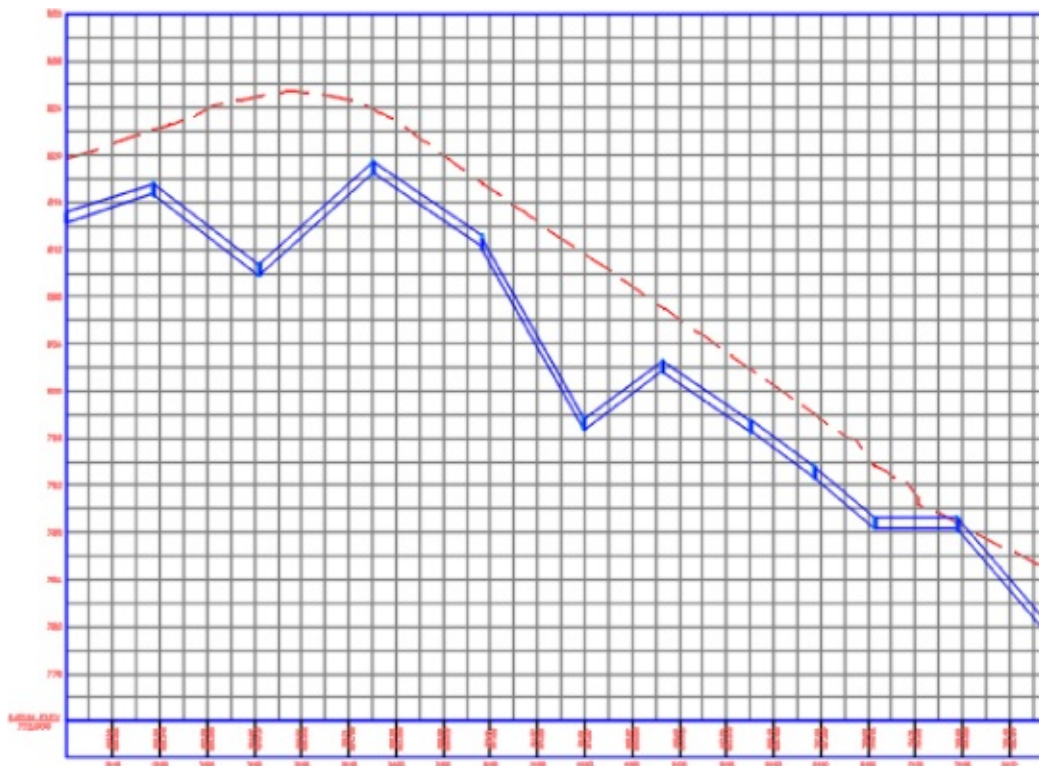


Figure 13.92 Pressure network in profile

- Select a part from the network if the Pressure Networks contextual tab is not already visible.
- From the Pressure Networks contextual tab > Modify panel, select Edit Network > Profile Layout Tools.

The Pressure Network Profile Layout contextual tab will appear, as shown in [Figure 13.93](#).

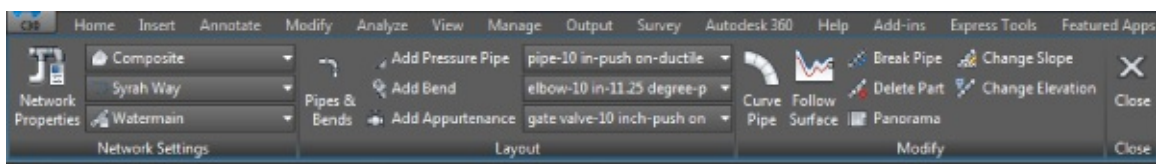


Figure 13.93 The Pressure Network Profile Layout contextual tab



15. From the Pressure Network Profile Layout contextual tab > Modify panel, select Follow Surface.
 16. At the Select first pressure part in profile: prompt, select the leftmost valve in the profile view.
 17. At the Select next pressure part in profile [Enter to finish]: prompt, click the rightmost valve in the profile view and then press \leftarrow to finish selecting parts. All connected parts in between will become selected.
 18. At the Enter depth below surface <0.0000>: prompt, enter **4.5** (1.5 for metric users).
- Your profile view will change to resemble [Figure 13.94](#).

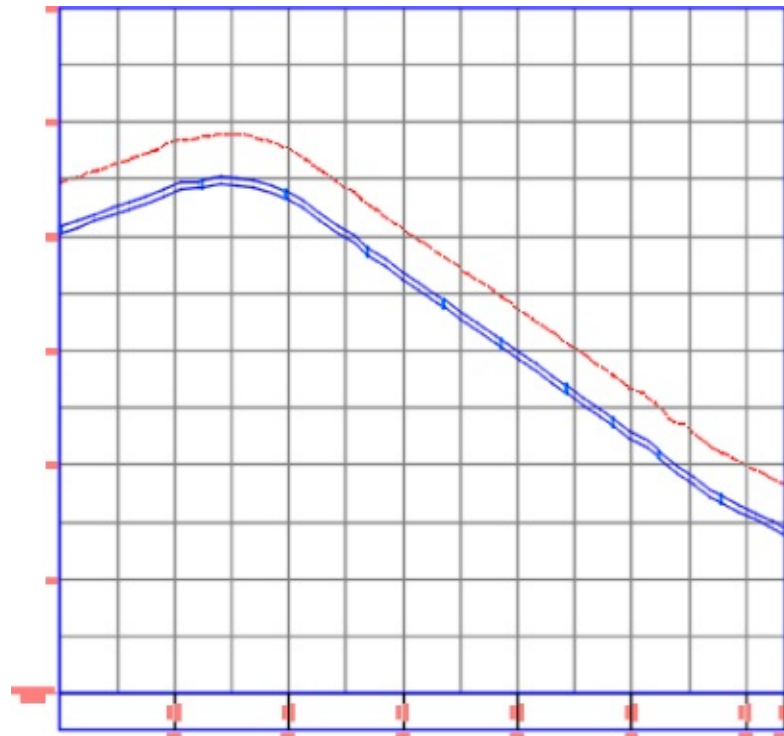


Figure 13.94 The pressure pipe follows the surface.

19. Save and close the drawing.
- Completed versions of the drawing (1311_PressureProfile_FINISHED.dwg and 1311_PressureProfile_METRIC_FINISHED.dwg) are available with the rest of this book's download.

Using Design Checks

Pressure networks differ from the networks you created earlier in this chapter. Because the fluid in a pressure network can go uphill, the rules you saw in gravity systems no longer apply. The main concerns for a pressure network are pressure loss and depth of cover.

You can locate the Depth Check values on the Settings tab of Toolspace. Locate and expand the Pressure

Network branch and expand the Commands branch. Double-click RunDepthCheck to edit the command settings. A dialog like the one in [Figure 13.95](#) will open.

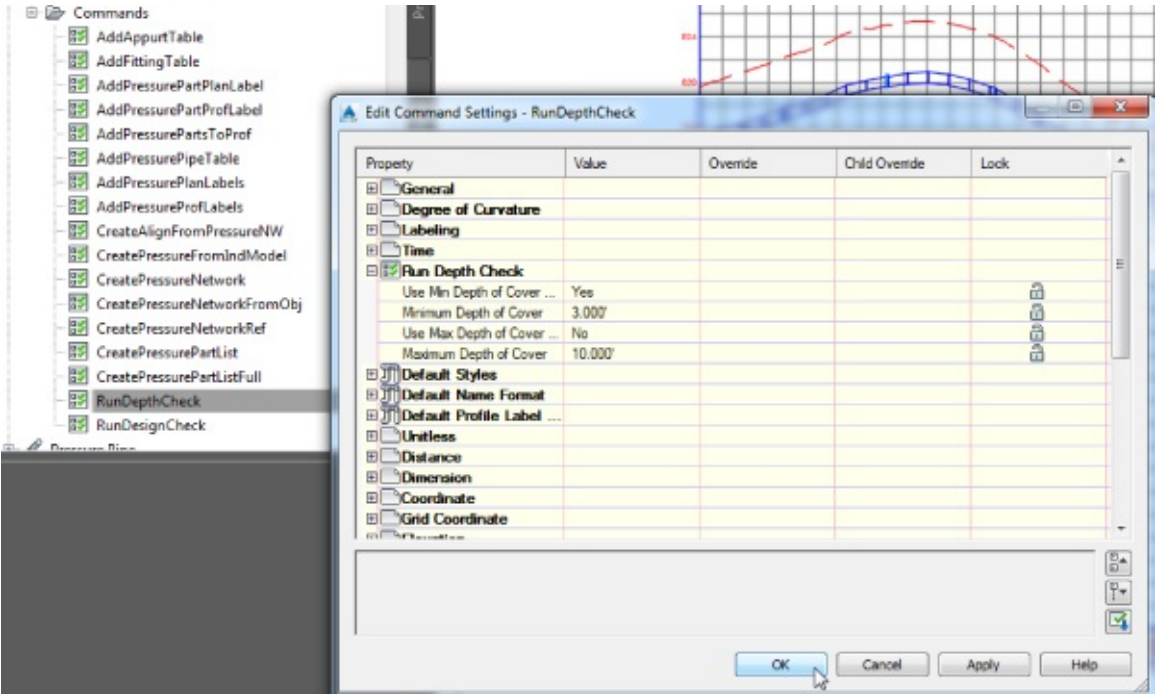


Figure 13.95 Edit the RunDepthCheck command settings to validate your design.

Also in the command settings you will find a separate listing for RunDesignCheck. Double-click (or right-click and click Edit) to enter these settings. You can set an acceptable range of values for pipe bends and radius of curvature for curved pipes. The Deflection Validation settings are found under RunDesignCheck, as shown in [Figure 13.96](#).

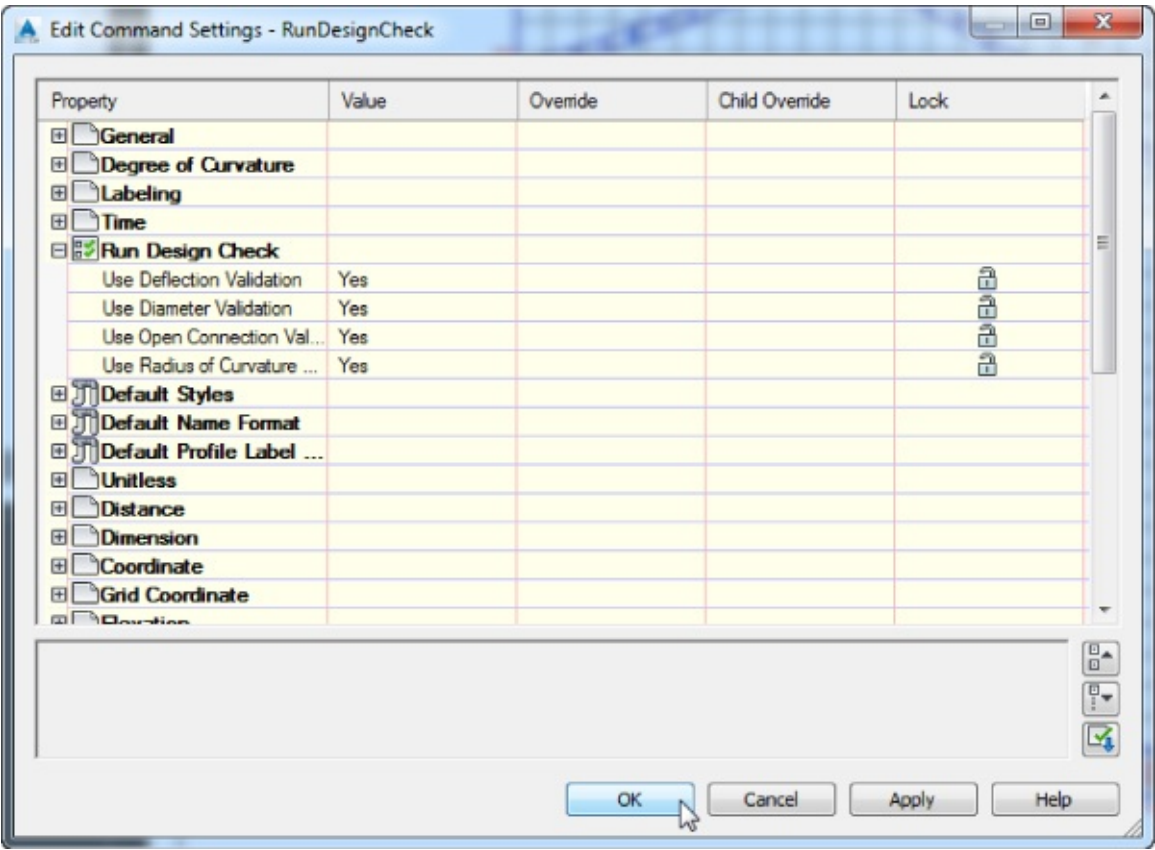


Figure 13.96 Turning on the Deflection Validation settings

Once you have created your pressure network, you should check your initial design for flaws. From the

Pressure Networks contextual tab, you can check your design to see if it meets the requirements you set up in the command settings.



Depth Check verifies that all pipes and fittings are within the acceptable range of values for depth.



Design Check will check for improperly terminating pipes, mismatched pipe and fitting diameters, any curved pipe whose radius has exceeded acceptable values, and pipes that have exceeded the maximum deflection you set up in the parts list.

In the following exercise, you will modify the command settings and run a depth check on the pipe network:

1. Open the `1312_DesignCheck.dwg` (`1312_DesignCheck_METRIC.dwg`) drawing, which you can download from this book's web page.
2. In the Settings tab of Toolspace, expand Pressure Network > Commands, right-click RunDepthCheck, and select Edit Command Settings (you could also double-click the command to access it).
3. Expand the Run Depth Check category and verify that Minimum Depth Of Cover is set to 6' (2 m).
4. Click in the Value column and change Use Max Depth Of Cover Validation to Yes.
5. Click OK.
6. Select a pressure network part if you do not already see the Pressure Networks contextual tab.
7. From the Pressure Networks contextual tab > Analyze panel, select Depth Check.
8. The Depth Check command will allow you to perform the analysis in either plan or profile view. Either way you choose to select your pressure pipe network, the result will be the same.
9. At the Select a path along a Pressure Network in plan or profile view: prompt, click the first pressure network object to the left in the profile view.
10. At the Select next point on path [Enter to finish]: prompt, select the Gate Valve to the far right in the profile view and press `↵`.
11. The Run Depth Check dialog will appear. The settings should be the same values as those in steps 3 and 4.
12. Click OK.
13. In both plan view ([Figure 13.97](#), top) and profile view ([Figure 13.97](#), bottom), warnings will appear if any Depth Check violations are found.

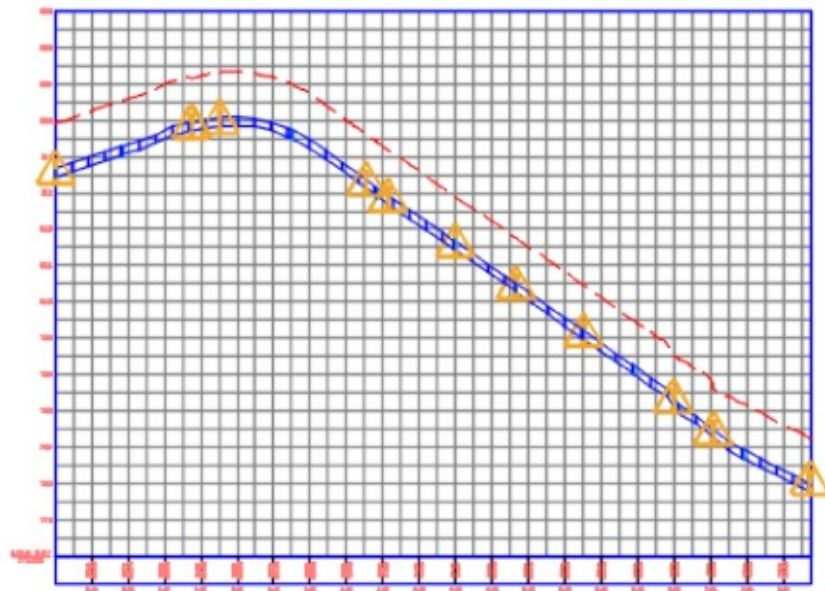


Figure 13.97 Depth Check result in plan (top) and profile : (bottom) views

 
4. Save and close the drawing.

For your reference, completed versions of the drawing (1312_DesignCheck_FINISHED.dwg and 1312_DesignCheck_METRIC_FINISHED.dwg) are available with the rest of this book's download.

Understanding Part Builder

Part Builder is an interface that allows you to build and modify pipe network parts for gravity systems. You access Part Builder by selecting the Create Design drop-down from the Home tab. At first, you may use Part Builder to add a few missing pipes or structure sizes. As you become more familiar with the environment, you can build your own custom parts from scratch.

Parts created by Part Builder will not be available for use in pressure networks, so this section applies only to parts needed for gravity systems.





A Word of Caution about Part Builder

Every time one of our clients asks about Part Builder, we cringe. Our advice is, “If all you need to do is add a size to an existing part, no problem. If you want to create new geometry from scratch? Run. Run, screaming.”

This is not a tool you can master by dabbling in it for a few hours. Even after you understand Part Builder, it can take days to build a complex part that functions correctly. Think of Part Builder as a half-step away from programming, and you will have more realistic expectations.

Before you buckle down to learn about Part Builder, ask yourself a few questions:

- Do I really understand pipes and structures well enough to tackle this?
- Is it worth taking extra time from a billable project to learn this feature?
- Is the part I need unique and not available from another source (such as colleagues or purchased from an Autodesk reseller)?

If you can answer yes to all these questions, you have our blessing. In many cases, the new pressure network tools eliminate the need for custom parts.

This section is intended to be an introduction to Part Builder and a primer in some basic skills required to navigate the interface. It isn't intended to be a robust “how-to” for creating custom parts. Civil 3D includes three detailed tutorials for creating three types of custom structures. The tutorials lead you through creating a cylindrical manhole structure, a drop inlet manhole structure, and a vault structure. You can find these tutorials by going to [Help > Tutorials](#) and then navigating to Part Builder Tutorials.

Back Up the Part Catalogs

Here's another warning: Before you explore Part Builder in any way, it's critical that you make a backup copy of the part catalogs. Doing so will protect you from accidentally removing or corrupting default parts as you're learning and will provide a means of restoring the original catalog.

The catalog (as discussed in the previous section) can be found by default at

```
C:\ProgramData\Autodesk\C3D 2015\enu\Pipes Catalog\
```

To make a backup, copy this entire directory and then save that copy to a safe location, such as another folder on your hard drive or network, or to a CD.

We recommend that you do this and use the backup file for the exercises here. To do this, you will have to point to the new location by clicking the drop-down in the Home tab > Create Design panel and selecting Set Pipe Catalog Location. Select the icon next to the Catalog folder and point it to your saved location. When you locate the backup folder, pick either Imperial or Metric and then click OK.

The parts in the Civil 3D pipe network catalogs are *parametric*. Parametric parts are dynamically sized according to a set of variables, or parameters. In practice, this means you can create one part and use it in multiple situations.

You can create one parametric model that understands how the different dimensions of the pipe are related to each other and what sizes are allowable. When a pipe is placed in a drawing, you can change its size. The pipe will understand how that change in size affects all the other pipe dimensions such as wall thickness, outer diameter, and more; you don't have to sort through a long list of individual pipe definitions.

Part Builder Orientation

Each drawing “remembers” which part catalog it is associated with. If you're in a metric drawing, you need to make sure the catalog is mapped to metric pipes and structures, whereas if you're in an Imperial drawing, you'll want the Imperial catalog. By default, the Civil 3D templates should be appropriately mapped, but it's worth the time to check. Set the catalog by changing to the Home tab and selecting the drop-down on the Create Design panel. Verify the appropriate folder and catalog for your drawing units in the Pipe Network Catalog Settings dialog (see [Figure 13.98](#)), and you're ready to go.

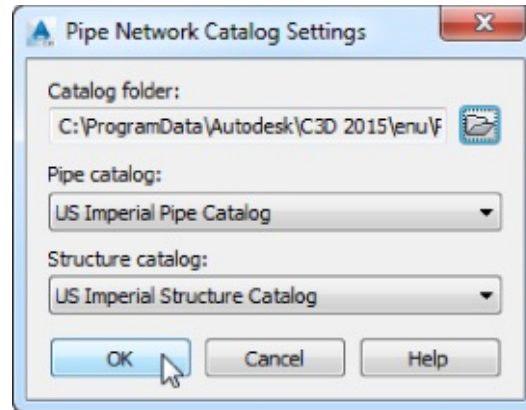


Figure 13.98 Choose the appropriate folder and catalog for your drawing units.

Understanding the Organization of Part Builder

The vocabulary used in the Part Builder interface is different from the rest of Civil 3D, so we will first examine the basics.



Open Part Builder by going to the Home tab ➤ Create Design panel and selecting the Part Builder icon from the drop-down.

The first screen that appears when you start Part Builder is Getting Started - Catalog Screen (see [Figure 13.99](#)).

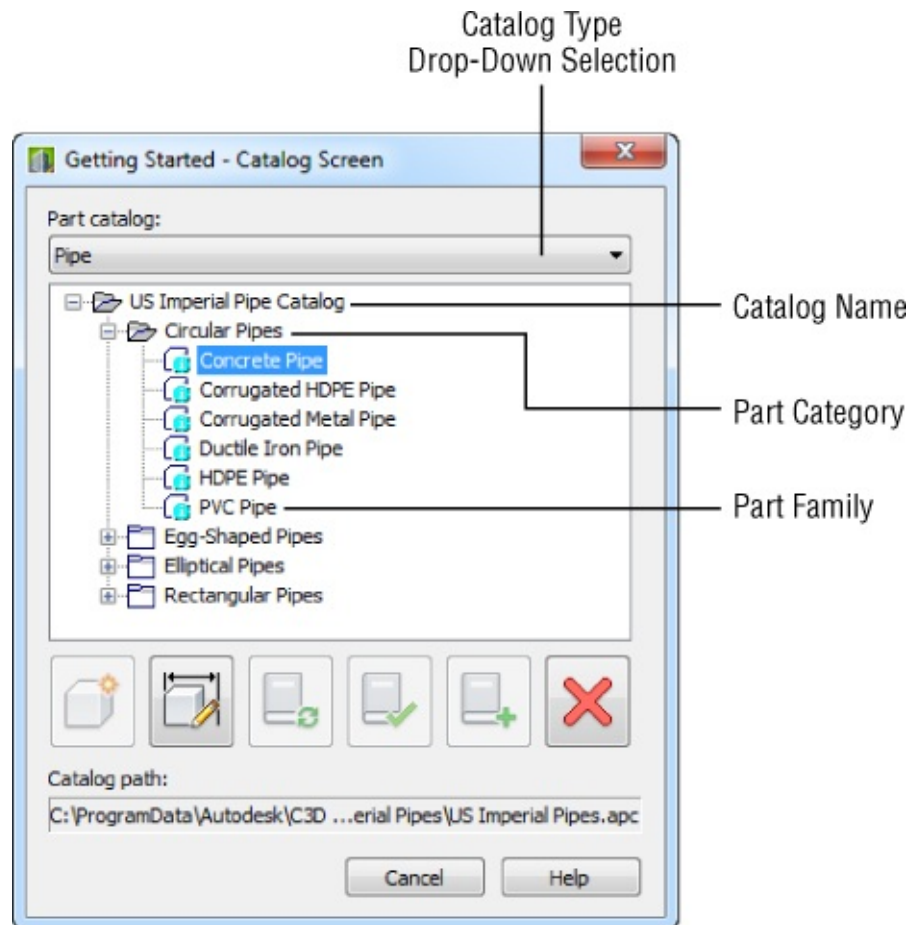


Figure 13.99 The Getting Started - Catalog Screen dialog

At the top of this window is a drop-down for selecting the part catalog type. Depending on what you need to modify, you can set this to either Pipe or Structure. Once you pick the catalog type, you will see the main catalog name. In [Figure 13.99](#), you see US Imperial Pipe Catalog.

Below the part catalog is a list of part categories. In Part Builder vocabulary, a part or structure *category* is a grouping based on the shape for pipes and function for structures. Inside the category, you will see the part families listed. The US Imperial Pipe Catalog has four default chapters:

- Circular Pipes
- Egg-Shaped Pipes
- Elliptical Pipes
- Rectangular Pipes

You can create new chapters for different-shaped pipes, such as Arch Pipes.

The US Imperial Structure Catalog also has four default chapters: Inlets-Outlets, Junction Structures With Frames, Junction Structures Without Frames, and Simple Shapes. You can create new chapters for custom structures. You can expand each chapter folder to reveal one or more part families. For example, the US Imperial Circular Pipes chapter has six default families:



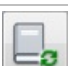



- Concrete Pipe
- Corrugated HDPE Pipe
- Corrugated Metal Pipe
- Ductile Iron Pipe

- HDPE Pipe
- PVC Pipe

Pipes that reside in the same family typically have the same parametric behavior, with differences only in size.


As [Table 13.1](#) shows, a series of buttons on the Getting Started - Catalog Screen dialog lets you perform various edits to chapters, families, and the catalog as a whole.

[Table 13.1](#) The Part Builder catalog tools

Icon	Function
	The New Parametric Part button creates a new part family.
	The Modify Part Sizes button allows you to edit the parameters for the selected part family.
	The Catalog Regen button refreshes all the supporting files in the catalog when you've finished making edits to the catalog.
	The Catalog Test button validates the parts in the catalog when you've finished making edits to the catalog.
	The New Chapter button creates a new chapter.
	The Delete button deletes a part family. Use this button with caution, and remember that if you accidentally delete a part family, you can restore your backup catalog as mentioned in the beginning of this section.

Exploring Part Families

The best way to become oriented to the Part Builder interface is to explore one of the standard part families:

- Open Part Builder, and then in the Getting Started - Catalog Screen dialog, click the Part Catalog drop-down and select Pipe.
-  Expanding the US Imperial Pipe Catalog ➤ Circular Pipe family, select Concrete Pipe (Concrete Pipe SI for metric users), and click the Modify Part Sizes button.
- It is not unusual to receive a message stating that the file contains previous version AEC objects. If you get such a message, click Close to continue.
- A Part Builder pane will appear with `AeccCircularConcretePipe_Imperial.dwg` (`AeccCircularConcretePipe_Metric.dwg` for metric users) on the screen, along with the Content Builder Toolspace, as shown in [Figure 13.100](#).

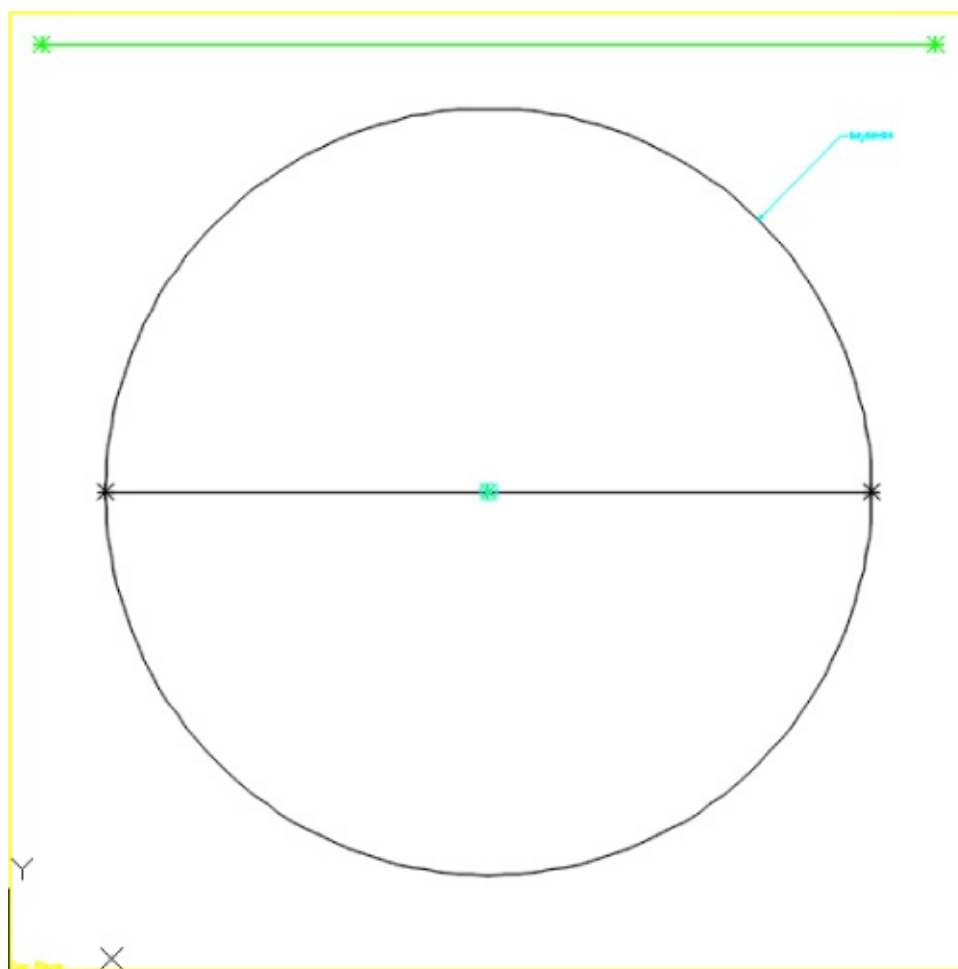


Figure 13.100 DWG file as shown in Content Builder

5. Close Part Builder by clicking the X on the Part Builder pane.
6. Click No when asked to save the changes to the concrete pipe.
7. Click No when asked to save the drawing.

The Part Builder pane, or Content Builder ([Figure 13.101](#)), is well documented through the Autodesk Knowledge Network available for the Autodesk AutoCAD Civil 3D.

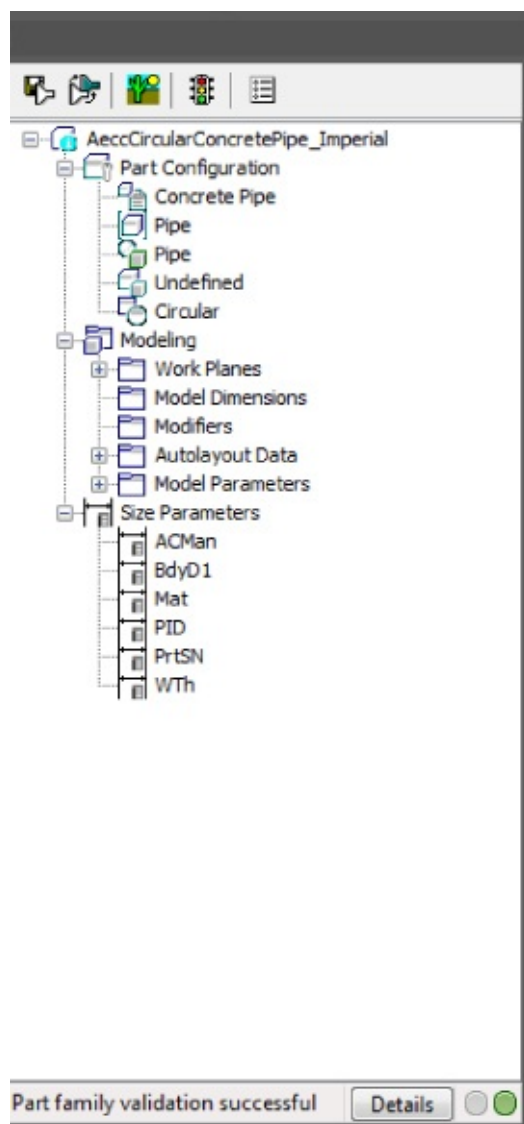


Figure 13.101 Content Builder

Adding a Part Size Using Part Builder

The hypothetical municipality requires a 12" (300 mm) waste water cleanout. After studying the catalog, you decide that Concentric Cylindrical Structure NF (SI for metric users) is the appropriate shape for your model, but the smallest inner diameter size in the catalog is 48" (1,200 mm). The following exercise gives you some practice in adding a structure size to the catalog—in this case, adding a 12" (300 mm) structure to the US Imperial Structures catalog (Metric Structures Catalog for metric users).

You can make changes to the US Imperial Structures catalog from any drawing that is mapped to that catalog, which is probably any Imperial drawing you have open, as follows:

1. For this exercise, start a new drawing from `_AutoCAD Civil 3D (Imperial) NCS.dwt` (`_AutoCAD Civil 3D (Metric) NCS.dwt`).
2. On the Home tab, select the drop-down on the Create Design panel and select Part Builder.
3. In the Getting Started - Catalog Screen dialog, choose Structure from the drop-down in the Part Catalog selection box.
4. Expand the Junction Structures Without Frames category.
5. Highlight the Concentric Cylindrical Structure NF (SI for metric users) part family.

6. Click the Modify Part Sizes button.

The Part Builder interface opens AeccStructConcentricCylinderNF_Imperial.dwg (AeccStructConcentricCylinderNF_Metric.dwg for metric users) along with the Content Builder pane.

7. Zoom extents if necessary.

8. In the Context Builder pane, expand the Size Parameters branch.

9. Right-click the SID (Structure Inner Diameter) parameter, and choose Edit.

The Edit Part Sizes dialog appears.

10. Locate the SID column (see [Figure 13.102](#)), and double-click inside the box.

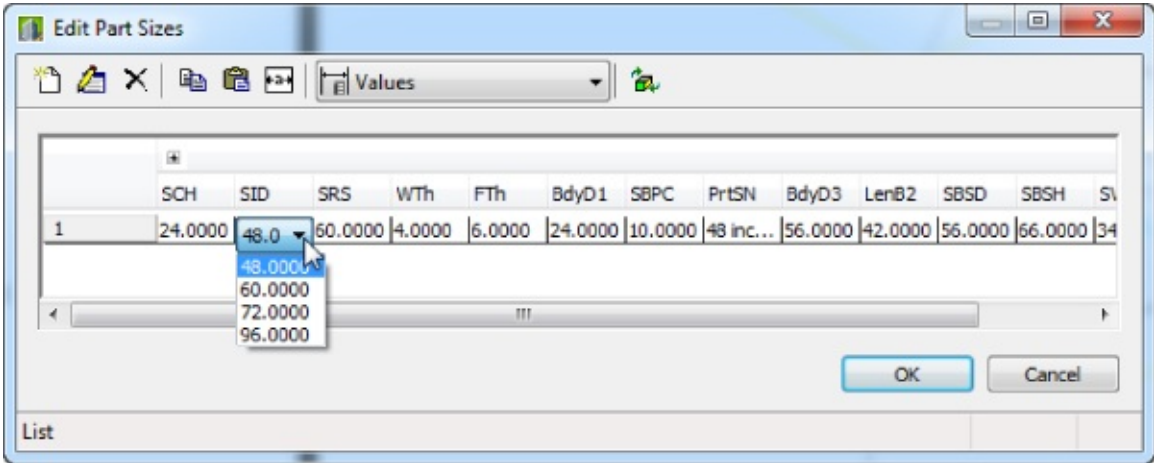


Figure 13.102 Examining the available part sizes

Note that a drop-down shows the available inner diameter sizes 48", 60", 72", and 96" (1,200 mm, 1,400 mm, 1,600 mm, and 1,800 mm).

11.  Locate the Edit button. Make sure you're still active in the SID column cell, and then click Edit.

The Edit Values dialog appears.

12. In the Edit Values dialog, click Add and type **12** (metric users type **300**), as shown in [Figure 13.103](#).

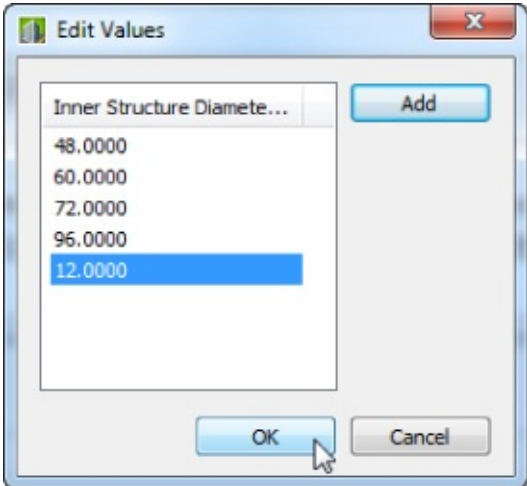


Figure 13.103 Add the 12" (300 mm) value to the Edit Values dialog.

13. Click OK to close the Edit Values dialog, and click OK again to close the Edit Part Sizes dialog.

14. Click the small X in the upper-right corner of the Content Builder pane to exit Part Builder. If you don't see it, hover over the window top bar and it should be available.
15. The message “Save Changes To Concentric Cylindrical Structure NF?” will appear. Click Yes.
You could also click Save in Content Builder to save the part and remain active in the Part Builder interface.

You're back in your original drawing. If you created a new parts list in any drawing that references the US Imperial Structures catalog (Metric Structures Catalog for metric users), the 12" (300 mm) structure will be available for selection.



Real World Scenario

I Thought I Took Care of That Sump?

Within the editing of pipe networks using Network Layout Tools exercise you were instructed to make the Sump Depth 0. So why isn't the bottom of the structure even with the pipe in the profile graphic? Structures are created using the outermost edges, and in the case of most structures, this includes a 6" (150 mm) sump defined as a part parameter.

Since you learned some about editing parts within Part Builder, you can now add a zero value to the Floor Thickness list, as follows:

1. From the Home tab > Create Design panel drop-down click Part Builder.
2. Change the active part catalog to Structure.
3. Expand the Junction Structures With Frames family.
4. Select the Concentric Cylindrical Structure (SI for metric users) part and click the Modify Part Sizes button.
5. In the Content Builder area on the left side of the screen, right-click Size Parameters and select Edit Values.
6. In the Edit Part Sizes dialog, click your cursor in the FTh field. This will enable the Edit button on the top-left corner.
7. Click the Edit button. In the Edit Values dialog, click Add.
8. Type **0** for the new value and click OK.
9. Click OK again to close the Edit Part Sizes dialog.
10. Move your cursor to the top of the Content Builder palette until you see the X appear. Click the X to close Part Builder.
11. When you are prompted with Save Changes To Concentric Cylindrical Structure, click Yes.
12. Run the **PartCatalogRegen** command and select structures from the selection. Hit Enter and then press Esc to exit the command.
13. Back in Toolspace, switch to the Settings tab and go to Pipe Network > Parts Lists > Storm

Sewer.

14. Right-click Storm Sewer and click Edit.
15. On the Structures tab of the Network Parts List dialog, expand Storm Sewer and the Concentric Cylindrical Structure (SI for metric users) part family.
16. Right-click any of the structures within that part family, and choose Edit.
17. Notice the row called Floor Thickness. Verify that the Floor Thickness value of 0 is available for selection and upon selecting it, finish by clicking OK. Click OK once more to close the Network Parts List dialog.

Note that this thickness will be applied only to parts going forward. You are stuck with the floor thickness at the time you placed the structure unless you use the Swap Part tool to force the parts to “refresh” from the parts list.

Sharing a Custom Part

You may need to go beyond adding pipe and structure sizes to your catalog and build custom part families or even whole custom chapters. Perhaps instead of building them yourself, you'll be able to acquire them from an outside source.

The following section can be used as a reference for adding a custom part to your catalog from an outside source, as well as sharing custom parts that you've created. The key to sharing a part is to locate three files that Civil 3D needs in order to use that part.

Adding a custom part size to your catalog requires these steps:

1. Locate the `partname.dwg`, `partname.xml`, and (optionally) `partname.bmp` files of the part you'd like to obtain.
2. Make a copy of the `partname.dwg`, `partname.xml`, and (optionally) `partname.bmp` files.
3. Insert the `partname.dwg`, `partname.xml`, and (optionally) `partname.bmp` files in the correct folder of your catalog.
4. Run the **PARTCATALOGREGEN** command in Civil 3D and select the specific catalog you need to regen.
5. If you added both structures and pipes, within the same command you can regen both pipes and structures. You may get errors on adding new parts from outside sources. Your best resources on this matter will be the Autodesk Knowledge Network for Civil 3D or the Autodesk Community forums.

Adding an Arch Pipe to Your Part Catalog

This exercise will teach you how to add a premade custom part to your catalog. You can make changes to the US Imperial Pipes (Metric Pipes for metric users) catalog from any drawing that is mapped to that catalog, which is probably any Imperial (metric) drawing you have open.

1. For this exercise, start a new drawing from the `_AutoCAD Civil 3D (Imperial) NCS.dwt` file (`_AutoCAD Civil 3D (Metric) NCS.dwt`).
2. In Windows Explorer, create a new folder called **Arch Pipes** in your Pipes Catalog directory.
3. For the purposes of the exercise, you should add the new pipe files into this directory. Remember, the

real path is located here:

```
C:\ProgramData\Autodesk\C3D 2015\enu\Pipes Catalog\US Imperial Pipes\  
(C:\ProgramData\Autodesk\C3D 2015\enu\Pipes Catalog\Metric Pipes\)
```

This directory should now include five folders: Arch Pipes, Circular Pipes, Egg-Shaped Pipes, Elliptical Pipes, and Rectangular Pipes.

4. Copy the Concrete Arch Pipe.dwg (Concrete Arch Pipe_METRIC.dwg), Concrete Arch Pipe.bmp (Concrete Arch Pipe_METRIC.bmp), and Concrete Arch Pipe.xml (Concrete Arch Pipe_METRIC.xml) files into the Arch Pipes folder.
5. Return to your drawing, and enter **PARTCATALOGREGEN** at the command line.
6. Type **P** and press ↵ to regenerate the Pipe catalog, and then press ↵ again to exit the command.

If you created a new parts list or edited an existing one at this point in any drawing that references the US Imperial Pipes catalog, the arch pipe would be available for selection.

7. To confirm the addition of the new pipe shape to the catalog, locate, open, and browse the catalog HTM file found at

```
C:\ProgramData\Autodesk\C3D 2015\enu\Pipes Catalog\US Imperial  
Pipes\Imperial Pipes.htm  
(C:\ProgramData\Autodesk\C3D 2015\enu\Pipes Catalog\Metric Pipes\Metric  
Pipes.htm)
```

The Bottom Line

Create a pipe network by layout. After you've created a parts list for your pipe network, the first step toward finalizing the design is to use Pipe Network By Layout.

Master It Open the MasterIt_1301.dwg or MasterIt_1301_METRIC.dwg file. Use Network Creation Tools to create a waste water pipe network named Mastering. Use the Composite surface, and name only structure and pipe label styles. Don't choose an alignment at this time. Create 8" (200 mm) PVC pipes and a manhole called SMH. There are blocks in the drawing to assist you in placing manholes. Begin at the START HERE marker, and place a manhole at each marker location. You can erase the markers when you've finished.

Create an alignment from network parts and draw parts in profile view. Once your pipe network has been created in plan view, you'll typically add the parts to a profile view based on either the road centerline or the pipe centerline.

Master It Continue working in the MasterIt_1301.dwg or MasterIt_1301_METRIC.dwg file. You need to have completed the previous exercise before beginning this one. Create an alignment named Mastering from your pipes so that station zero is located at the START HERE structure. Create a profile view from this alignment, and show the pipes and profiles for the EG and Corridor FG surfaces on the profile view. Use defaults for everything, except change the Corridor FG profile style to FG Profile on the profile view.

Label a pipe network in plan and profile. Designing your pipe network is only half of the process. Engineering plans must be properly annotated.

Master It Continue working in the MasterIt_1301.dwg or MasterIt_1301_METRIC.dwg file. You need to have completed the previous exercise before beginning this one. Add the Length Description And Slope pipe label style to profile pipes and the Data With Connected Pipes (Sanitary) structure label style to profile structures. Assign the alignment created in the previous “Master It” exercise to all pipes and structures.

Create a dynamic pipe table. It's common for municipalities and contractors to request a pipe or structure table for cost estimates or to make it easier to understand a busy plan.

Master It Continue working in the MasterIt_1301.dwg or MasterIt_1301_METRIC.dwg file. You need to have completed the previous exercise before beginning this one. Create a pipe table for all pipes in your network. Use the default table style.

Chapter 14

Grading

Beyond creating streets, sewers, cul-de-sacs, and inlets, much of what happens to the ground as a site still needs to be determined. Planning for the earthwork of a site is a crucial part of bringing a project together. This chapter examines feature lines and grading groups, which are the two primary tools of site design. Feature lines and grading groups work in tandem, providing the site designer with tools to completely model the land.

In this chapter, you will learn to

- Convert existing linework into feature lines
- Model a simple breakline with a feature line
- Model planar site features with grading groups

Working with Grading Feature Lines

There are two types of feature lines: corridor feature lines and grading feature lines. Corridor feature lines are discussed in Chapter 9, “Basic Corridors,” and grading feature lines are the focus of this chapter. It's important to note that grading feature lines can be extracted from corridor feature lines, and you can choose whether or not to dynamically link them to the corridor.

Terrain modeling can be defined as the manipulation of triangles created by connecting points and vertices to achieve Delaunay triangulation, as discussed in Chapter 4, “Surfaces.” In the Autodesk® AutoCAD® Civil 3D® platform, the creation of the Feature Line object adds a level of control and complexity not available to 3D polylines. In this section, you'll look at the feature line, various methods of creating feature lines, some simple elevation edits, planar grading and editing functionality, and labeling of the newly created feature lines.

Accessing Grading Feature Line Tools

The Feature Line creation tools can be accessed from the Home tab's Create Design panel, as shown in [Figure 14.2](#).

The Feature Line editing tools can be accessed via the Feature Line contextual tab (see [Figure 14.1](#)). To activate the Feature Line contextual tab, just select a feature line, or from the Modify tab ► Design panel, choose Feature Line.

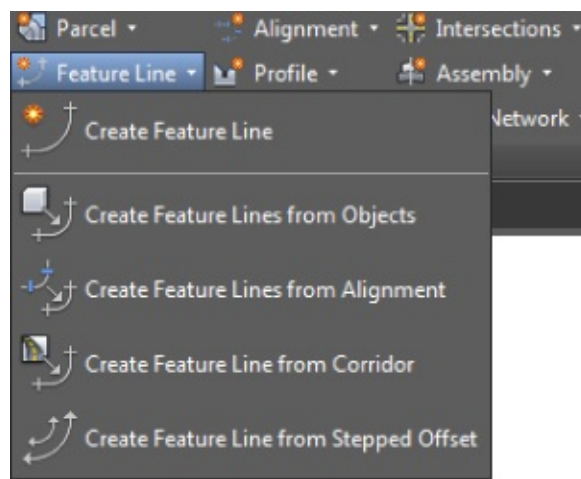


Figure 14.1 The Feature Line contextual tab can be accessed by selecting an existing feature line

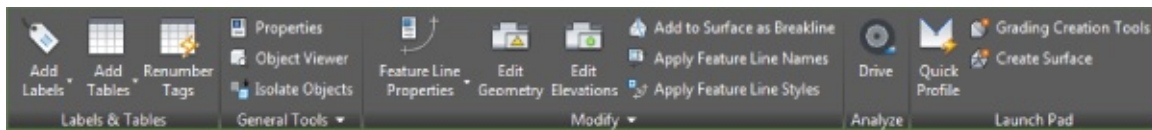


Figure 14.2 The Feature Line drop-down on the Create Design panel

When you're working with feature lines, one thing to remember is that they belong in a site, as shown in [Figure 14.3](#). Feature lines within the same site snap to each other vertically, which can cause some confusion when you're trying to build surfaces.

Understanding Parent Sites

If you notice some weird elevation data along your feature line, be sure to check out the parent site. If the concept of a site or sites in general doesn't make much sense to you, be sure to review Chapter 5, “Parcels,” before going too much further. Sites are a major part of the way feature lines interact with each other, and many users who have problems with grading are the same users who ignore sites.

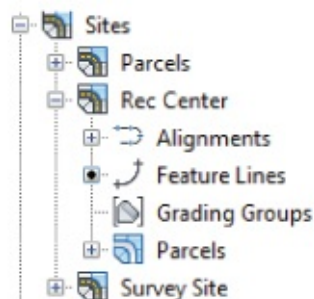


Figure 14.3 Feature lines are located in the Sites branch in Prospector

The next few sections break down the various tools in detail. You'll use almost all of them in this chapter, so in each section you'll spend some time getting familiar with these tools and the basic concepts behind them.

Creating Grading Feature Lines

There are five primary methods for creating feature lines, as shown previously in [Figure 14.2](#). They generate similar results but have some key differences:

Create Feature Line The Create Feature Line tool allows you to create a feature line from scratch, assigning elevations as you go. These elevations can be based on direct data input at the command line, slope information, elevation difference, or surface elevations.

Create Feature Lines From Objects The Create Feature Lines From Objects tool converts lines, arcs, polylines, and 3D polylines into feature lines. This process also allows you to assign elevations. You can assign a single elevation to all vertices on the feature line. You can also acquire elevations from grading groups and surfaces if the feature line has been drawn over either. You also have the option to delete the original object or weed the vertices of the new feature line.

Create Feature Lines From Alignment The Create Feature Lines From Alignment tool allows you to build a new feature line from an alignment, using a profile to assign elevations. This feature line can be dynamically tied to the alignment and the profile, which limits your ability to edit it directly, but makes it easy to generate feature lines based on horizontal and vertical controls of alignments and profiles. If the feature line created from an alignment is not dynamically linked, any of the feature-line editing commands can be used. This could be useful if you wanted to place a vertical curve in your feature line.

Create Feature Line From Corridor The Create Feature Line From Corridor tool is used to export a grading feature line from a corridor feature line. The feature line created from a corridor feature line can be dynamically linked to the corridor. If the feature line is dynamically linked, then it can't be edited with the feature line editing tools.

Create Feature Line From Stepped Offset The Create Feature Line From Stepped Offset tool is used to create an offset feature line, allowing you to specify a vertical offset value in terms of elevation difference, grade, slope, and actual elevation for the entire feature line or each vertex. You can also define variable stepped offsets at each feature line vertex. This tool can also be used on feature lines, survey figures, polylines, or 3D polylines. The feature line created from a stepped offset does not keep a dynamic link to the original feature line.

You'll explore some of these methods over the next few exercises. In this first exercise, you will create the edge of a tennis court with a feature line:

1. Open the 1401_CreatingFeatureLines.dwg or 1401_CreatingFeatureLines_METRIC.dwg file. (Remember, all data can be downloaded from www.sybex.com/go/masteringcivil3d2015.)

This drawing contains some AutoCAD entities and Civil 3D points representing basic geometry for a recreational center at the entrance of the subdivision.



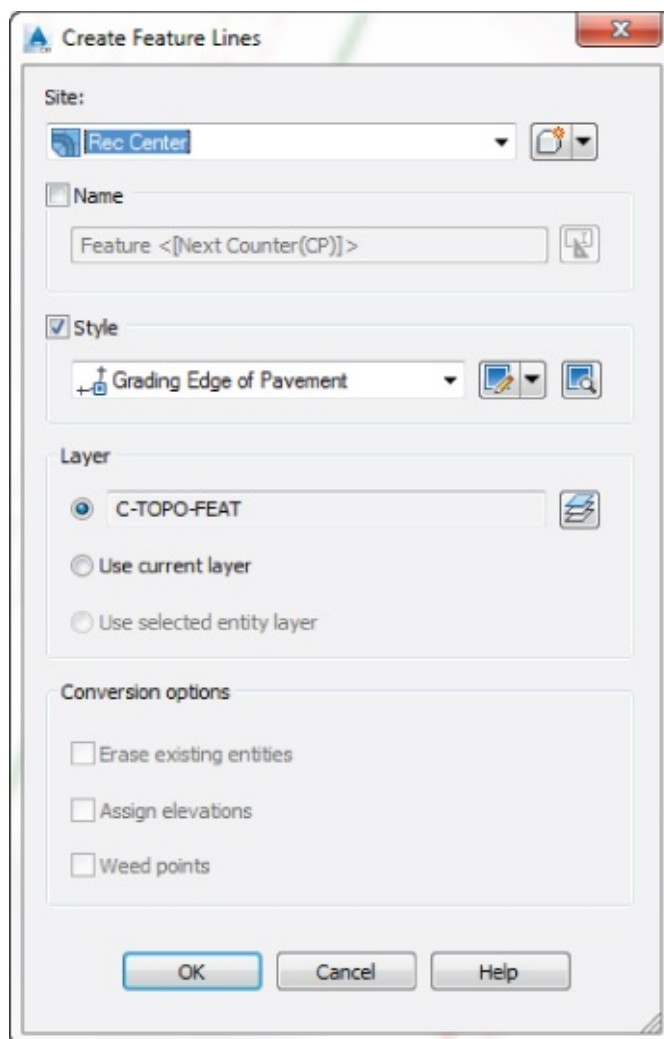
2. From the Home > Create Design panel, choose Feature Line > Create Feature Line to display the Create Feature Lines dialog.

You need to associate feature lines with a site. Just like parcels, grading objects will react with like objects in a site if they touch, horizontally in particular. So by isolating this feature line, you can ensure that everything will be drawn properly before committing it to a site.

3. Verify that Rec Center is the Site name.

4. Fill in the check box next to Style and select Grading Edge Of Pavement as the style name using the drop-down.

The Create Feature Lines dialog should now look like [Figure 14.4](#).



[Figure 14.4](#) The Create Feature Lines dialog

5. Click OK to dismiss the Create Feature Lines dialog.
6. At the Specify start point: prompt, use a Node Osnap to specify your start point as point #1.
7. At the Specify elevation or [Surface]: prompt, enter S ↵ to use a surface to set the elevation.
Since there are multiple surfaces in the drawing, the Select Surface dialog appears. If there were only one surface in this drawing, the surface would automatically be selected and you would not be prompted with this dialog.
8. In the Select Surface dialog, use the drop-down to choose Existing Surface and click OK.
9. At the Surface elevation: prompt, press the Enter key to accept the default surface elevation offered on the command line.
10. At the Specify the next point or [Arc]: prompt, use a Node Osnap to pick point #2.
11. At the Specify grade or [Slope Elevation Difference Surface Transition]: prompt, enter **-0.83** ↵ to set this grade between these two points.
12. At the Specify the next point or [Arc Length Undo]: prompt, use a Node Osnap to pick point #3.

13. At the Specify grade or [Slope Elevation Difference Surface Transition]: prompt, enter **0** ↵ to set this grade between these two points.
14. At the Specify the next point or [Arc Length Close Undo]: prompt, use a Node Osnap to pick point #4.
15. At the Specify grade or [Slope Elevation Difference Surface Transition]: prompt, enter **0.83** ↵ to set this grade between these two points.
16. At the Specify the next point or [Arc Length Close Undo]: prompt, type **C** ↵ to close the feature line.

The feature line command will end. Your screen should look like [Figure 14.5](#) with a red rectangular feature line drawn through the points.

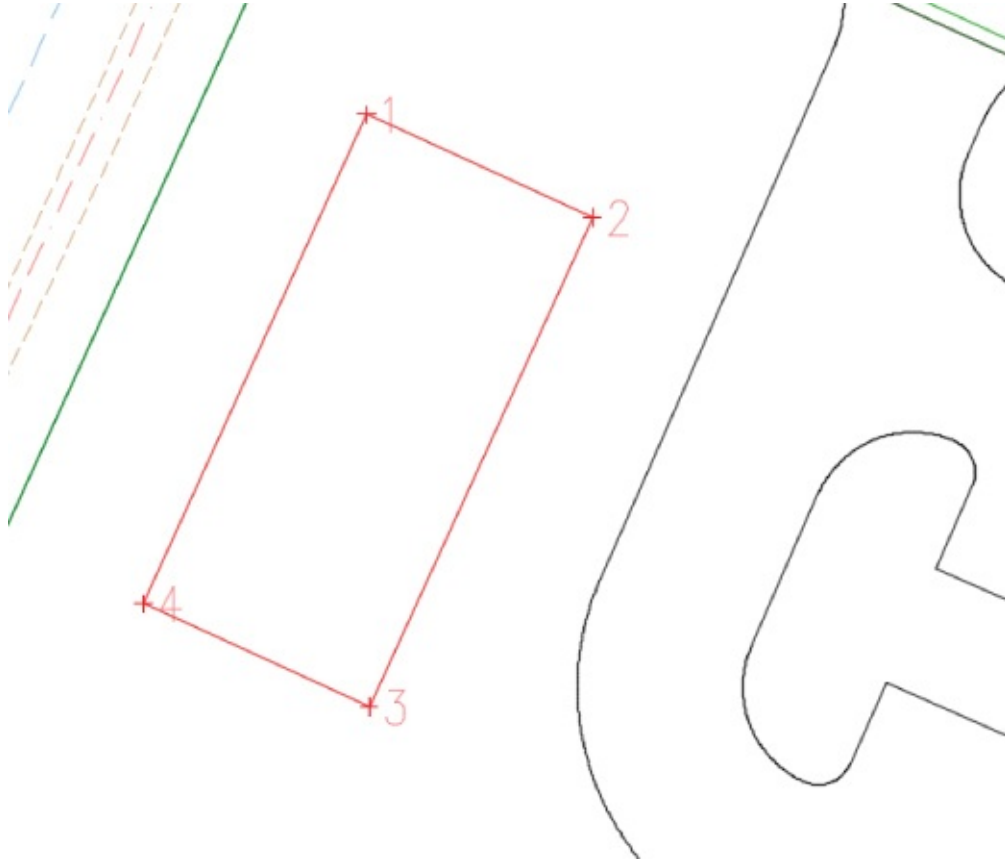


Figure 14.5 Setting the grade between points

This method of creating a feature line by picking each vertex and specifying its elevation or grade before picking the next may seem tedious to some users. In the next portion of the exercise, you will convert an existing polyline to a feature line and acquire elevations for the vertices from a surface.

Assigning Names

Looking back at [Figure 14.4](#), note that there is an unused option for assigning a Name value to each feature line. Using feature line names is not mandatory, but will make it easier to discern which feature line is which when inspecting the Feature Line collection in the Site branch on Prospector.



17. From the Home tab > Create Design panel, choose Feature Line > Create Feature Lines From Objects.
18. At the Select lines, arcs, polylines or 3d polylines to convert to feature lines or [Xref]: prompt, notice the options for selection and note that by typing **X** and then pressing the Enter key you may pick these types of entities from an external reference. This will save you the trouble of opening the external reference, copy clipping, closing the reference, and pasting to original coordinates. Select the green closed polyline, which represents the edge of the recreation center building.
19. Press the Enter key.

The Create Feature Lines dialog will appear.

20. Verify that Rec Center is the name of the site.
21. Verify that the Style check box is filled, and select Grading Building as the style for the feature line using the drop-down.

This Create Feature Lines dialog has some differences from that shown in [Figure 14.4](#). Notably, the Conversion Options near the bottom of the dialog are now active, so take a look at the options presented:

Erase Existing Entities This option deletes the object and replaces it with a Feature Line object. This avoids the creation of duplicate linework but could be harmful if you wanted to keep your linework for planimetric purposes.

Assign Elevations This option lets you set the feature line elevations from a surface or grading group, essentially draping the feature line on the selected object.

Weed Points Weed Points decreases the number of nodes along the object. This option is handy when you're converting digitized information into feature lines.

22. Check the Assign Elevations box.

The Erase Existing Entities option is checked by default, and you will not select the Weed Points option.

23. Click OK to dismiss the Create Feature Lines dialog.

The Assign Elevations dialog appears. Here you can assign a single elevation for the feature line, assign the elevations from a grading if one is present in the drawing, or select a surface to pull elevation data from.

24. Verify that Existing Surface is selected.
25. Verify that the Insert Intermediate Grade Break Points option is checked.

This setting inserts a vertical point of intersection (elevation point) at every point along the feature line where it crosses an underlying TIN line.

26. Click OK to dismiss the Assign Elevations dialog.
27. Select the feature line that was just created, and the grips will look like [Figure 14.6](#).

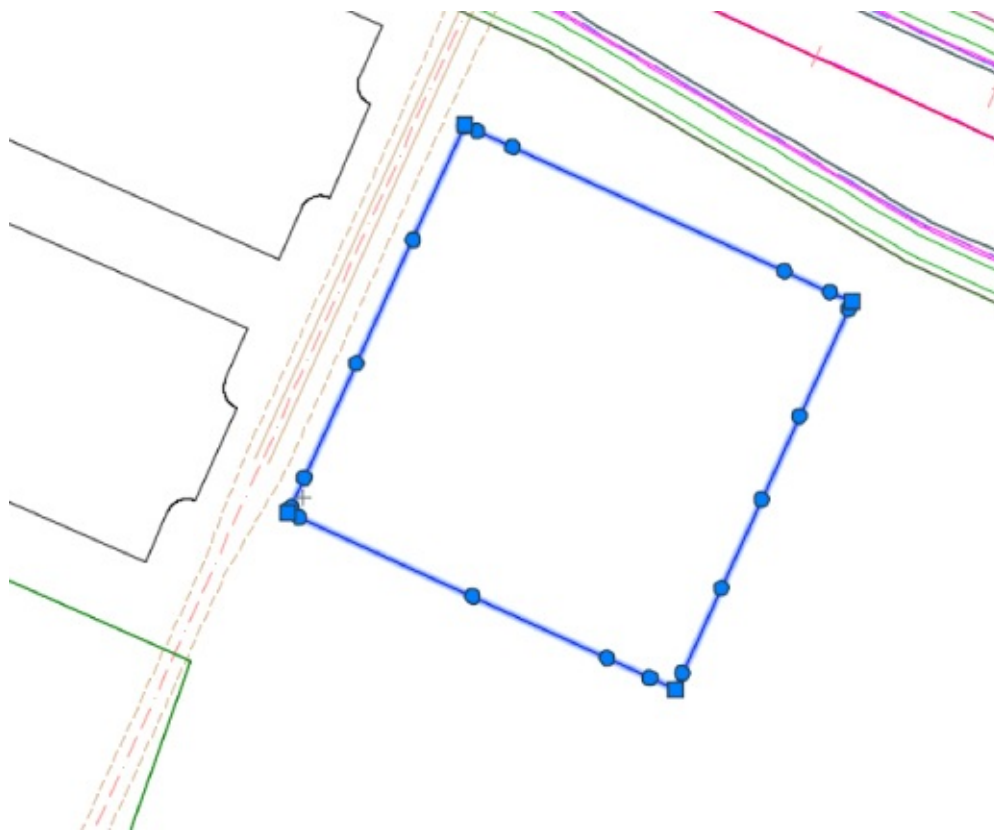


Figure 14.6 Conversion to a Feature Line object

Square Grips vs. Circular Grips

Note that [Figure 14.6](#) shows two types of grips: square and circular. Feature lines offer feedback via the grip shape:

Square Grips Square grips are PI points. They can be moved in the x, y, and z directions, manipulating both the horizontal and vertical design.

Circular Grips Circular grips are elevation points. Elevation points can be slid along a given feature line, adjusting the vertical design, but cannot be moved in the x or y direction. In this part of the exercise, the elevation points are located where the original polyline intersected the TIN lines of the EG surface representing the intermediate grade break points you created.

This combination of PIs and elevation points makes it easy to modify a feature line with a number of changes in design grade, enabling it to maintain its linear design intent if the endpoints are moved.

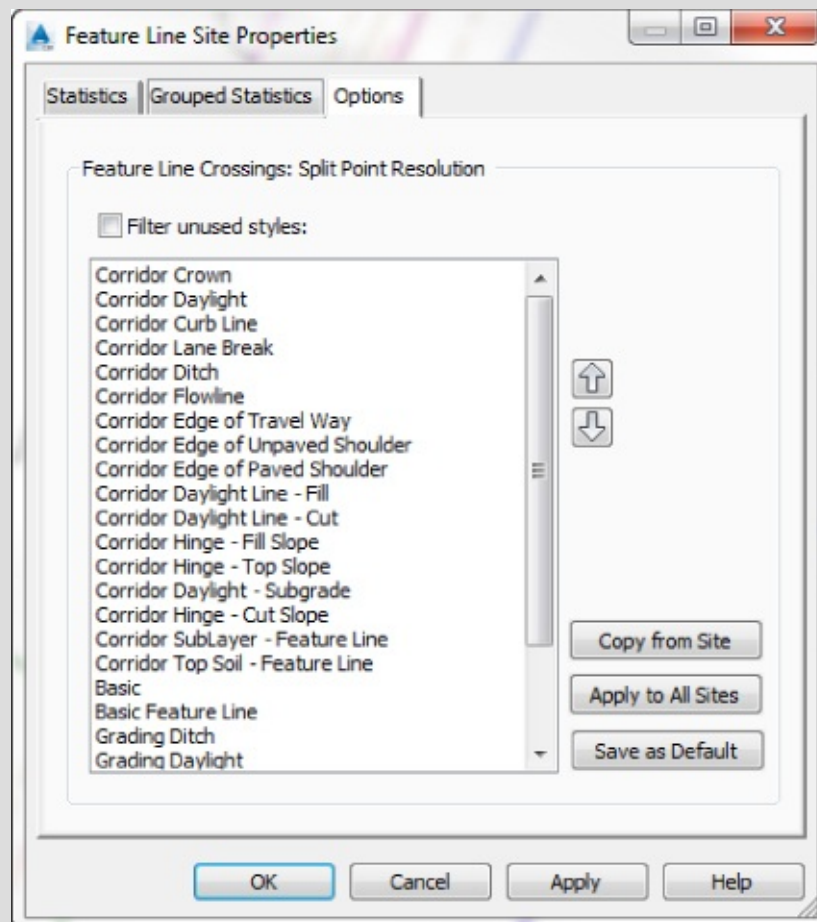
When this exercise is complete, you may close the drawing. A saved copy of this drawing (1401_CreatingFeatureLines_FINISHED.dwg or 1401_CreatingFeatureLines_METRIC_FINISHED.dwg) is available from the book's web page.

Using Styles with Feature Line Objects

Although using styles with feature lines is optional, doing so makes it easy to recognize the type of breaklines being represented (flowline, crown, etc.). Using styles with feature lines provides another advantage: Split Point Resolution.

When two feature lines in the same site cross, the point of intersection on both becomes a single split point because there cannot be more than one elevation at the same point when grading. The last feature line modified will have the winning elevation. The other feature line will spike up or down to match or join to the other's elevation at that point. One way to control this is by managing the Split Point Resolution hierarchy, which is simply a list of your feature line styles in the order of priority. The style at the top of the list will always have the winning elevation. The style at the bottom of the list will always lose.

Split Point Resolution can be managed on the Prospector by expanding Sites, expanding the Feature Line site, right-clicking the Feature Line branch, and clicking Properties. Split Point Resolution is managed on the Options tab.



Editing Feature Line Information

From the Feature Line contextual tab, you can examine several more commands on the Modify panel, as shown in [Figure 14.7](#), before you get into editing objects.


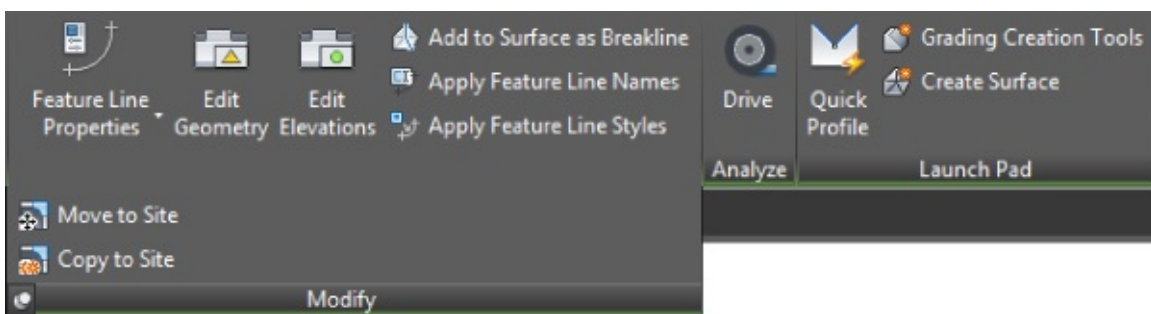


Figure 14.7 The Modify panel on the Feature Line contextual tab

The Modify panel of the Feature Line contextual tab provides commands for editing various properties of the feature line, the feature line style, the feature line geometry, and moving or copying to sites as follows:

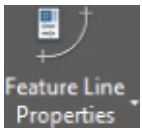
Feature Line Properties The top half of the Feature Line Properties tool is a button that will access the Feature Line Properties dialog. The Feature Line Properties dialog has two tabs: Information and Statistics. The Information tab of the Feature Line Properties dialog allows you to edit the name or feature line style and, if present, remove the dynamic link. The Statistics tab of the Feature Line Properties dialog allows you to view various physical properties such as minimum and maximum grade.



The bottom half of the Feature Line Properties tool is a drop-down containing two commands:

Feature Line Properties This command accesses the same Feature Line Properties dialog as discussed earlier when you click the button.

 Edit Feature Line Style This command is used to access various display characteristics of the feature line such as color and linetype. Feature line styles will be discussed further in Chapter 19, “Object Styles.”



Edit Geometry The Edit Geometry toggle opens and closes the Edit Geometry panel on the Feature Line contextual tab (see [Figure 14.8](#)). This panel will remain open until the Edit Geometry button is toggled off (it's highlighted when toggled on). The Edit Geometry panel will be discussed later in this chapter in the “Editing Feature Line Geometry” section.


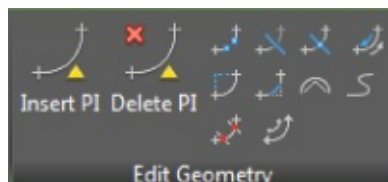


Figure 14.8 The Edit Geometry panel on the Feature Line contextual tab

 

Edit Elevations The Edit Elevations toggle opens the Edit Elevations panel on the Feature Line contextual tab (see [Figure 14.9](#)). This panel will remain open until the Edit Elevations button is toggled off (it's highlighted when toggled on). The Edit Elevations panel will be discussed later in this chapter in the “Editing Feature Line Elevations” section.

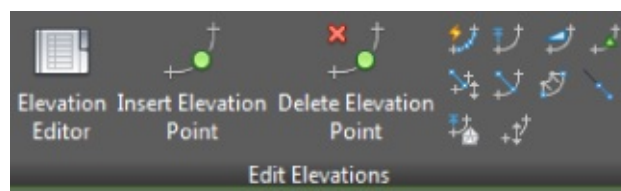


Figure 14.9 The Edit Elevations panel on the Feature Line contextual tab



Add To Surface As Breakline The Add To Surface As Breakline tool allows you to select a feature line or feature lines to add to a surface as breaklines. Once feature lines are added to the surface, they will be listed as a Breakline Set in Prospector > Surface > Definition > Breaklines.



Apply Feature Line Names The Apply Feature Line Names tool allows you to apply names to a selection of feature lines based on a new naming template. This tool can be helpful when you want to rename a group or just assign names to feature line objects. This tool cannot be used on a feature lines that are dynamically linked to an alignment and profile, or corridor.



Apply Feature Line Styles The Apply Feature Line Styles tool changes the styles of selected feature lines.



Move To Site If you expand the Modify panel, you will notice two additional commands. The first command is Move To Site. This command allows you to associate the selected feature line with a new site.



Copy To Site The other command in the expanded Modify panel is Copy To Site. This command allows you to duplicate the selected feature with a new site while leaving the original feature line in its current site. The two feature lines are not dynamically linked.



Once the Feature Line contextual tab has been activated, the Quick Profile tool is available on the Launch Pad panel. The Quick Profile tool generates a temporary profile of the feature line based on user parameters found in the Create Quick Profiles dialog ([Figure 14.10](#)).

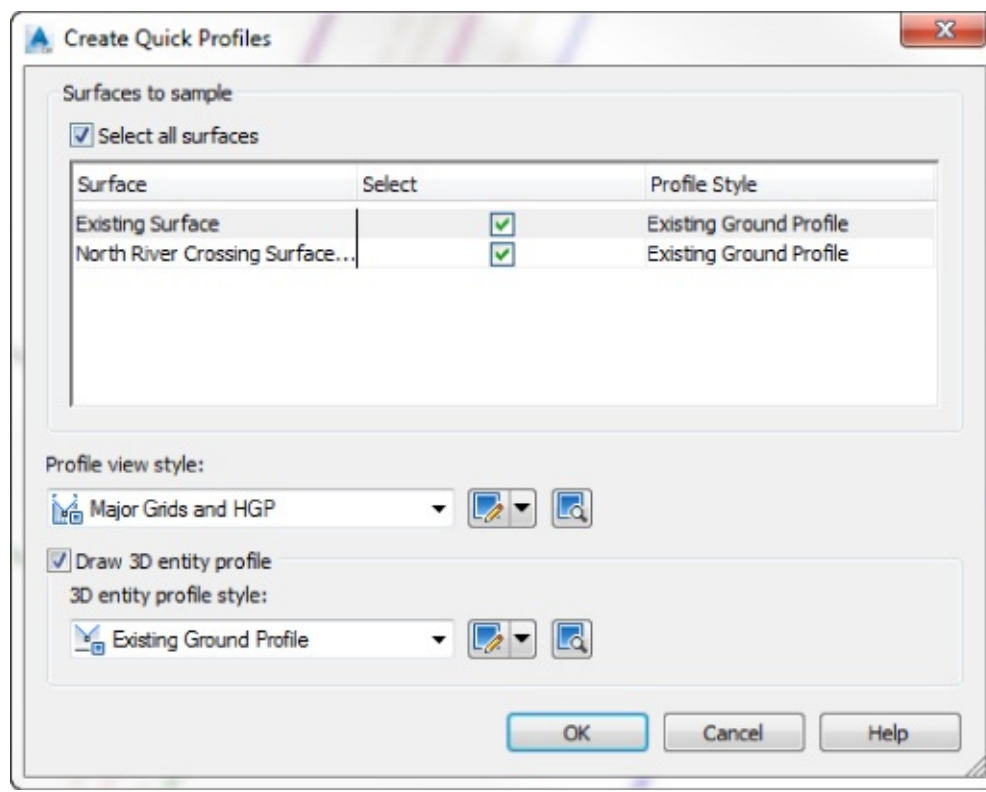


Figure 14.10 The Create Quick Profiles dialog

A few notes on this operation:

- Civil 3D creates a temporary phantom alignment that will not display in Prospector as the basis for a quick profile. A unique alignment number is assigned to this alignment.
- Panorama will display a message to tell you that a quick profile has been generated and to remind you that “this is a temporary object and will be deleted on save command or on exit from drawing.” You can close Panorama or move the Panorama palette out of the way if necessary.

Feature lines aren't the only things from which you can create a quick profile. You can also create a quick profile for 2D or 3D lines or polylines, lot lines, survey figures, or even a series of points. When a quick profile is created from 3D objects, there is an additional option to draw the 3D entity profile.

The Edit Geometry and Edit Elevations toggles provide even more commands, which make them considerably more powerful than standard 3D polylines. The Edit Geometry functions and the Edit Elevations functions are described in the next sections. While these sections reference the Edit Geometry and Edit Elevations panels of the Feature Line contextual tab, these panels are also available on the Modify tab. When used from the Modify tab, many of these commands can also be used to edit parcel lines, survey figures, 3D polylines, and 2D polylines, in addition to feature lines, as discussed in the sections that follow.

Editing Feature Line Geometry

Editing feature-line geometry grading revisions often requires adding PIs, breaking apart feature lines, trimming, and performing other horizontal operations without destroying the vertical information. To access the commands for editing feature-line horizontal information, select the feature line to access the Feature Line contextual tab and toggle on the Edit Geometry panel, as shown in [Figure 14.11](#).

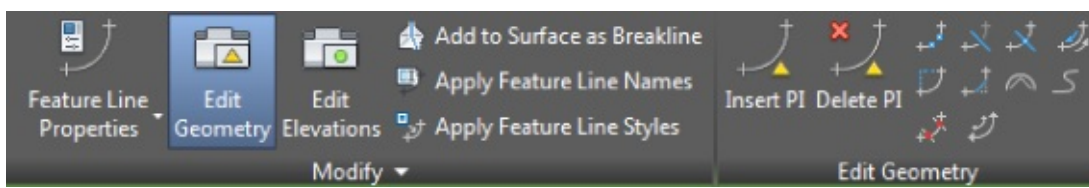





Figure 14.11 The Edit Geometry panel on the Feature Line contextual tab


The first two tools are designed to manipulate the PI points that make up a feature line:


 **Insert PI** The Insert PI tool allows you to insert a new PI, controlling both the horizontal and vertical design.

 **Delete PI** The Delete PI tool removes a PI. If the PI is located at the beginning or end of a feature line, the beginning or end segment is removed. If the PI is removed at a PC, the arc is removed and the segment leading into the arc gets stretched to the next PI. If the PI is removed at a PT the arc segment gets stretched to the next PI.

The next few tools act like their AutoCAD counterparts, but they are used specifically with feature lines because elevations are involved and they will add PIs accordingly:


 **Break** The Break tool allows two feature lines to be created from one. Additionally, if a feature line is part of a surface definition, both new feature lines are added to the surface definition to maintain integrity. Elevations at the new PIs are assigned on the basis of an interpolated elevation.

 **Trim** The Trim tool operates much like the AutoCAD Trim command, trimming a feature line and adding a new end PI on the basis of an interpolated elevation.

 **Join** The Join tool creates one feature line from two or more, making editing and control easier. You can set the tolerance distance from the settings associated with the Join tool on the Settings tab of Toolspace by doing the following:

1. Expand the Grading > Commands branch.
2. Right-click JoinFeatures and select Edit Command Settings.
3. In the Edit Command Settings - JoinFeatures dialog, expand the Feature Line Join property to change the tolerance.

 **Reverse** The Reverse tool changes the direction of a feature line and flips any labels applied to the feature line on the opposite side.

 **Edit Curve** The Edit Curve tool allows you to modify or delete the radius that has been applied to a Feature Line object. Once the feature line is selected, the Edit Feature Line Curve dialog will display. For each curve, you can modify the radius while viewing information on the curve length, chord length, and tangent length. There is also an option to maintain tangency if the curve is not already tangent to attached linework. After entering a value for the radius, a preview of the resulting curve will appear. Values that won't compute will not be accepted. In that case, a warning message will appear. There is also an option to pick two points to define a radius length. You can click the Apply button to continue making edits to other curves of the feature line or click the OK button to complete the command and dismiss the dialog.



Fillet The Fillet tool inserts a curve at PIs along a feature line and will join feature lines sharing a common PI that are not actually connected. You can apply a radius to a single PI or to all PIs on a feature line.

The last few tools refine feature lines, making them easier to manipulate and use in a surface:



Fit Curve The Fit Curve tool analyzes a number of elevation points and attempts to define a working arc through them all. This tool is often used when the corridor utilities are used to generate feature lines. These derived feature lines can have a large number of unnecessary PIs in curved areas. You can modify the tolerance and the minimum number of segments by entering O to select Options on the command line during the prompt, and display the Fit Curve Options dialog.

Alternatively, you can set the default values for these options from the settings associated with the Fit Curve tool on the Settings tab of Toolspace by doing the following:

1. Expand the Grading > Commands branch.
2. Right-click FitCurveFeature and select Edit Command Settings.
3. In the Edit Command Settings - FitCurveFeature dialog, expand the Feature Line Fit Curve property to change the tolerance and specify the minimum number of segments.



Smooth The Smooth tool takes a series of disjointed feature line segments and creates a best-fit curve. This tool is great for creating streamlines or other natural terrain features that are known to curve, but there's often not enough data to fully draw them that way. You can also straighten previously smoothed feature lines on the Modify tab > Edit Geometry panel by choosing the Smooth command and typing S for Straighten. Notice that the Smooth command accessed through the Feature Line contextual tab does not give you the Straighten option.



Weed The Weed tool allows the user to remove elevation points and PIs on the basis of various criteria. Once you select the feature line or multiple feature lines or a partial feature line, the Weed Vertices dialog will display. This dialog will allow you to weed based on any combination of angle, grade, or length; in addition, you can remove points based on their 3D distance between one another.

- Weeding by angle considers the horizontal angles at each bend of the feature line and will delete a vertex smaller than the value entered.
- Weeding by grade looks at three points, considering the middle point as a PVI. If the difference in grade is less than the entered amount, the PVI will be deleted.
- Weeding by length looks at three points and will delete the middle point if the distance between the outside points is less than the value entered.
- Weeding by 3D distance looks at the slope distance between two adjacent points and will delete the following vertex if the slope distance is less than the value entered.

At the bottom of the Weed Vertices dialog, it states how many of the total number of vertices will be weeded. This is great for cleaning up corridor-generated feature lines as well.

Similar to the Join and Fit Curve tools, you can set the default settings associated with the Weed command on the Settings tab of Toolspace by doing the following:

1. Expand the Grading > Commands branch.
2. Right-click WeedFeatures and select Edit Command Settings.

3. In the Edit Command Settings - WeedFeatures dialog, expand the Feature Line Weed property to change the various values.



Stepped Offset The Stepped Offset tool allows offsetting in a horizontal and vertical direction, making it easy to create stepped features such as stairs or curbs.

In this exercise, you'll manipulate some feature lines that were roughed in to define the pool area at the recreational center:

1. Open the 1402_FeatureLineGeometry.dwg or 1402_FeatureLineGeometry_METRIC.dwg file.
2. Zoom into the area where the sidewalk intersects the edge of the concrete at the southwest edge of the building, and select the edge of the concrete, as shown in [Figure 14.12](#).


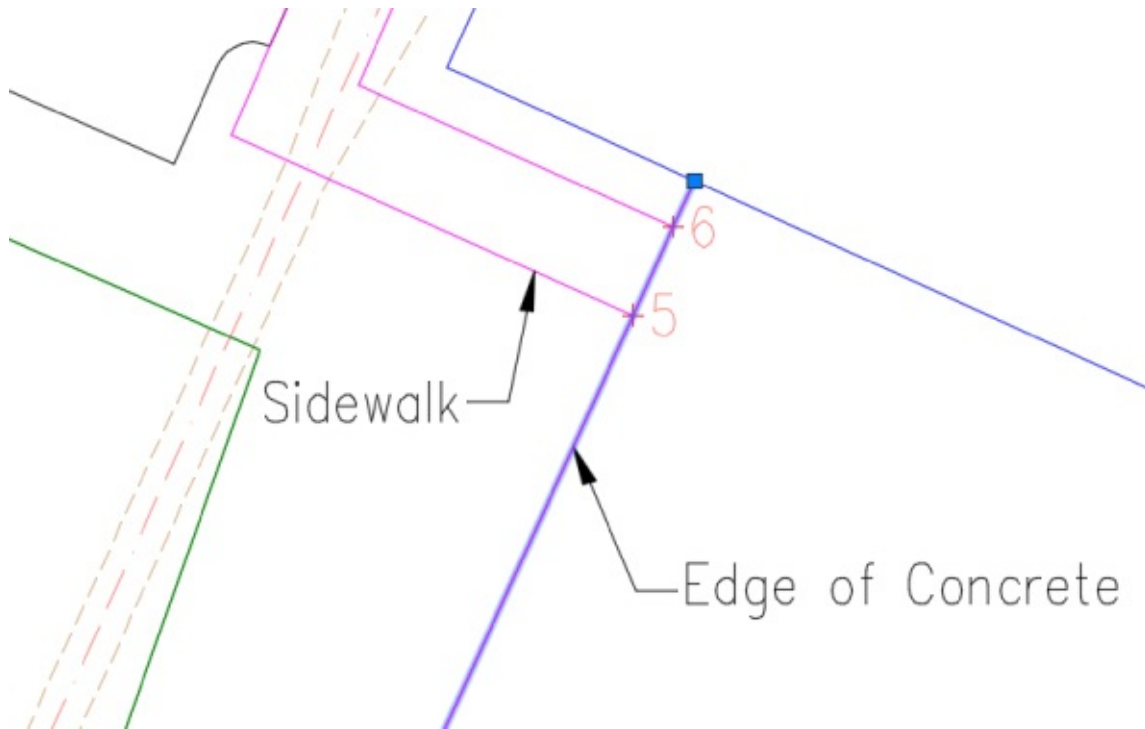


Figure 14.12 Picking the edge of concrete feature line at the southwest edge of the building

 

3. If the Edit Geometry panel isn't visible, from the Feature Line contextual tab > Modify panel, choose Edit Geometry to toggle on the Edit Geometry panel.
4. From the Feature Line contextual tab > Edit Geometry panel, choose the Break tool.
5. At the Select an object to break: prompt, select the edge of concrete feature line again.
6. At the Specify second break point or [First point]: prompt, enter **F** ↵ to pick the first point of the break.
7. At the Specify first break point: prompt, using a Node Osnap, select the node of point #5, as shown in [Figure 14.13](#).

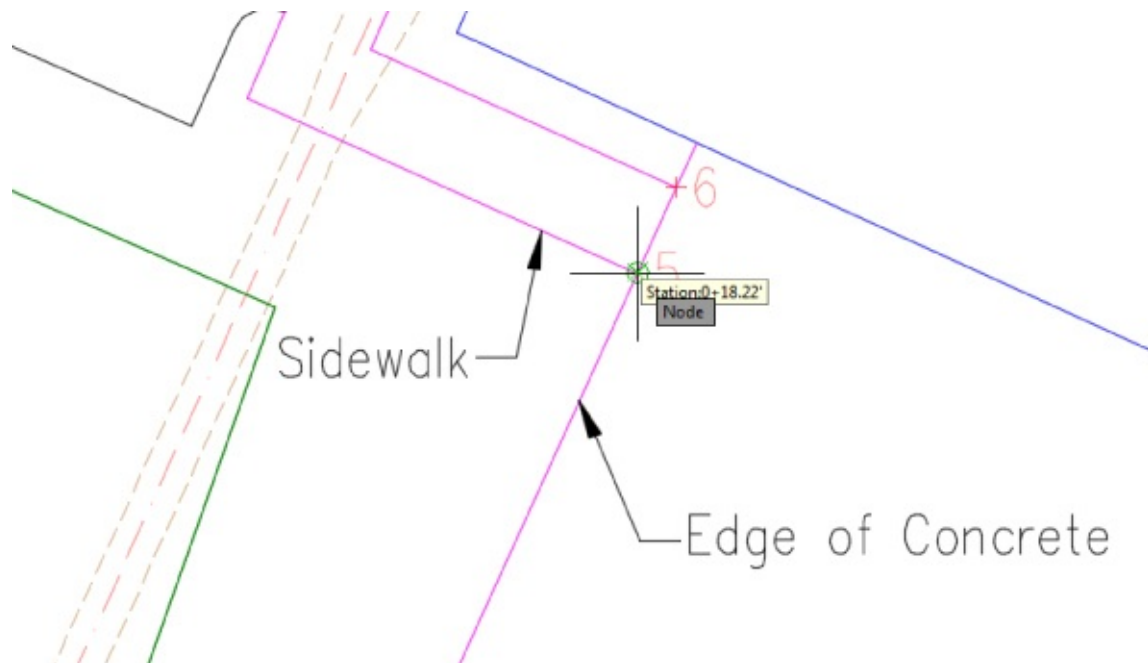


Figure 14.13 Using the node object snap to select a point

8. At the Specify second break point: prompt, using a Node Osnap, select the node of point #6, leaving a gap, as shown in [Figure 14.14](#).

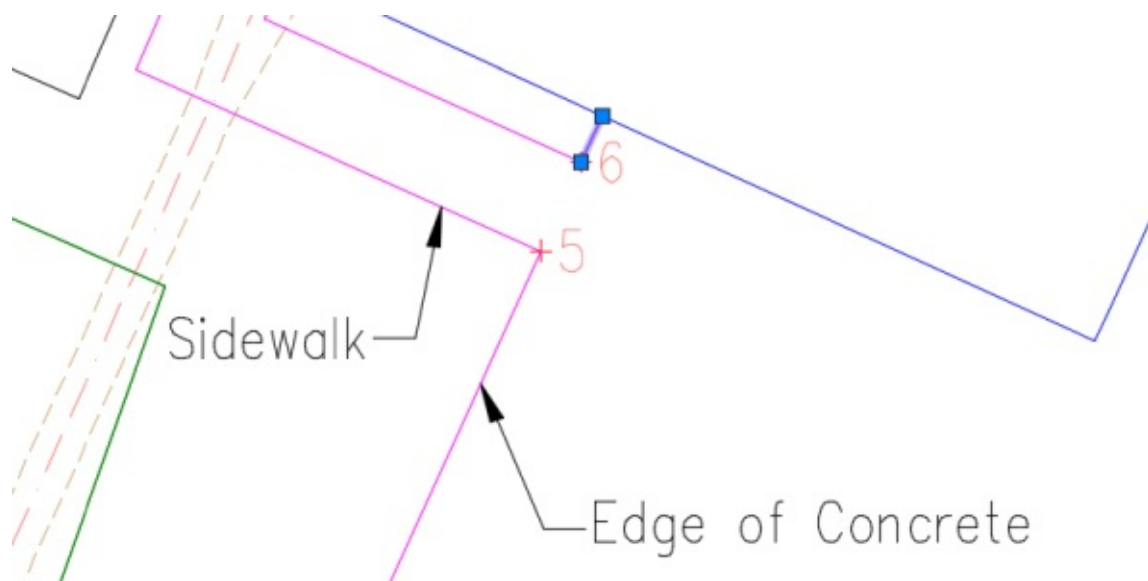


Figure 14.14 The feature line after executing the Break command

The feature lines representing the sidewalk and the edge of concrete at the pool area were roughed in and are not joined. Feature lines that represent continuous line work are much easier to manage when they are joined.


9.  With the small segment drawn from point #6 to the edge of the building still selected, from the contextual tab > Edit Geometry panel, click Join.
10. At the Select the connecting feature line, polyline or 3D polyline or [Multiple]: prompt, select all the magenta feature lines representing the sidewalk and the edge of concrete, as shown in [Figure 14.15](#).



Figure 14.15 Selecting the feature lines representing the sidewalk and edge of concrete

1. Press `↵` to end the command.
2. Press Esc to deselect.

If you zoom out slightly, you may notice the green feature line representing the edge of pavement that is wrapping around the back of the building. It needs to connect up with the magenta feature line you just joined. Although there is a special Trim command that you must use with feature lines, the AutoCAD Extend command is the tool to use when you need to lengthen feature lines to meet others.

3. Execute the AutoCAD Extend command (you can type **Ex** `↵` at the command line).
4. At the Select boundary edges ... Select objects or <select all>: prompt, select the magenta feature line as the boundary edge.
5. Press `↵` to advance to the next prompt.
6. At the Select object to extend or shift-select to trim or [Fence Crossing Project Edge Undo]: prompt, select the green feature line to the rear of the building close to the end of the segment that must be extended.
7. Press Esc to end the command.

The edge of pavement feature line should be extended to the joined feature line as shown in [Figure 14.16](#).






Figure 14.16 The extended edge of pavement feature line


18. Select the magenta feature line.
 19.  From the contextual tab > Edit Geometry panel, click the Trim tool.
 20. At the `Select cutting edges:` prompt, select the green feature line that was just extended.
 21. Press `↵` to advance to the next prompt.
 22. At the `Select objects to trim:` prompt, select the end of the joined feature line that extends south of the green one.
 23. Press Enter to end the command.
- Next you'll join the magenta feature line to the green one. Similar to the AutoCAD Join command, the entity selected first will pass its properties onto those selected after.
24. Select the magenta feature line if not already selected.
 25.  From the contextual tab > Edit Geometry panel, click the Join tool.
 26. At the `Select the connecting feature line, polyline or 3D polyline or [Multiple]:` prompt, select the green feature line.
 27. Press `↵` to end the command.
 28. Press Esc to deselect.

At this point in the exercise, your drawing should look like [Figure 14.17](#) containing one feature line representing the edges of the sidewalk joining the edge of concrete around the pool area.

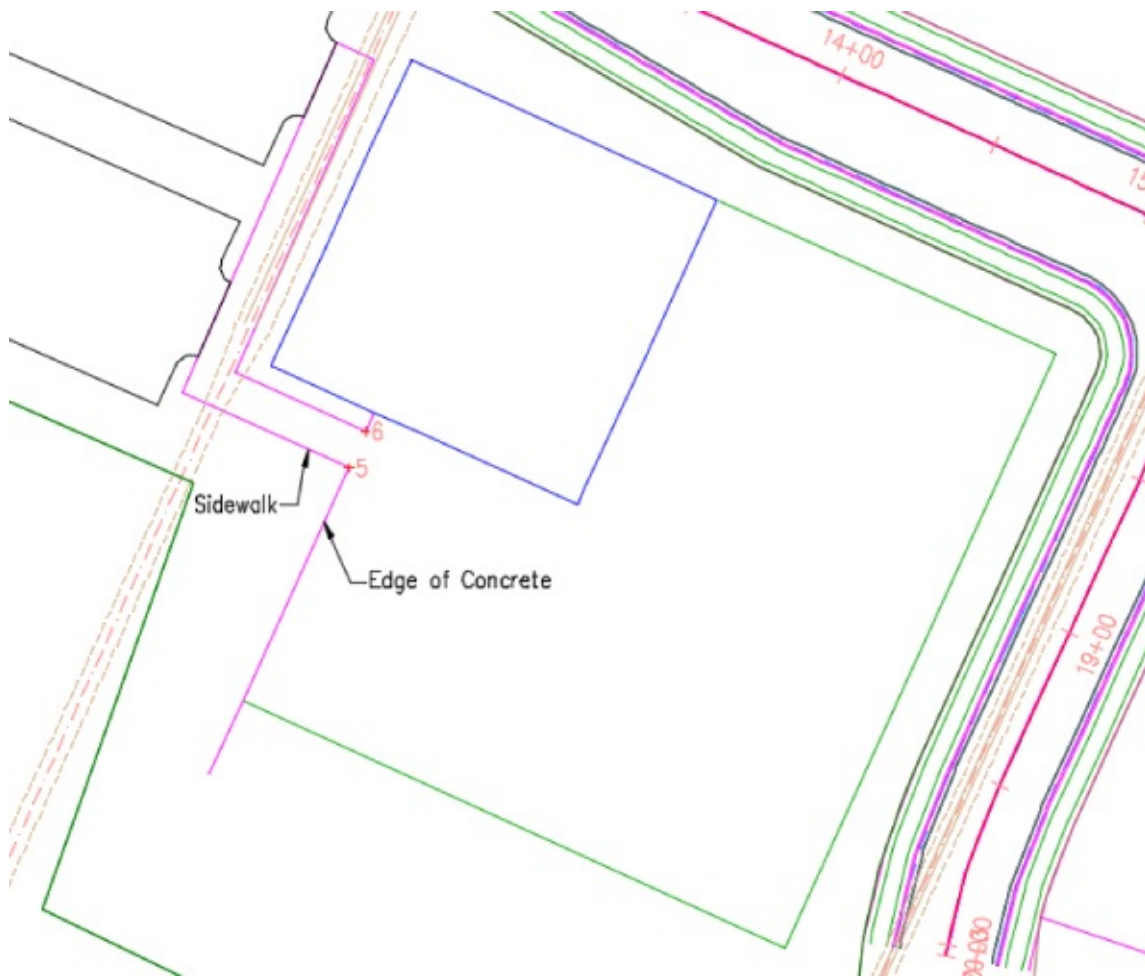

Figure 14.17 One feature line representing the edges of the sidewalk joining the edge of concrete around the pool area

Next, you will round one of the corners of the pool area to accommodate landscape.

29. Select the magenta feature line.
30.  From the contextual tab > Edit Geometry panel, click the Fillet tool.
31. Hover the cursor over the southwest corner of the magenta feature line, as shown in [Figure 14.18](#).

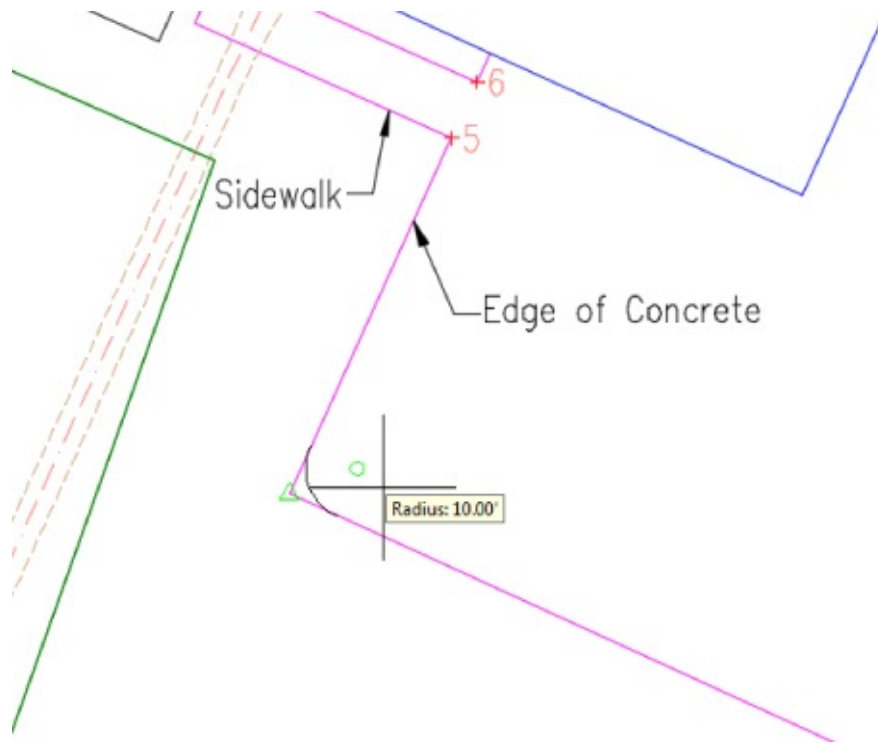


Figure 14.18 Filletting the southwest corner of the magenta feature line


As you hover near the corner, you will see a preview of the fillet with the current radius value following the cursor. Just as with the AutoCAD Fillet command, you could use the options at the command prompt to change the radius value.

32. Click near the corner to place the fillet using the default radius value.
33. Press Esc twice to end the command and deselect.

To adjust the radius value of the curve, do the following:

34. Select the magenta feature line.

To change the radius value of the curve, do the following:

35.  From the contextual tab > Edit Geometry panel, click the Edit Curve tool.
36. At the Select feature line curve to edit or [Delete]: prompt, select the magenta feature line on the curve.
37. In the Edit Feature Line Curve dialog, type **24' (8 m)** for a new radius value. If you press Tab after entering the radius value, then you can see a preview of the curve before clicking OK.
38. Click OK to close the dialog.
39. Press Esc to end the command.
40. With the feature line still selected, notice the labeled extra PI next to the parking lot.

Sometimes when you piece together your linework, you can end up with extra vertices. Before proceeding to applying elevations to your PIs, you should delete any extras you don't need.

41.  From the contextual tab > Edit Geometry panel, click the Delete PI tool.

You will see triangular glyphs appear at each vertex of the feature line. When your cursor nears a vertex, the glyph turns green indicating that it will be deleted if you click now.

12. At the Specify Point: prompt, hover your cursor over the extra PI and left-click.
13. Press Esc twice to end the command and deselect.

Your site should now look like [Figure 14.19](#).

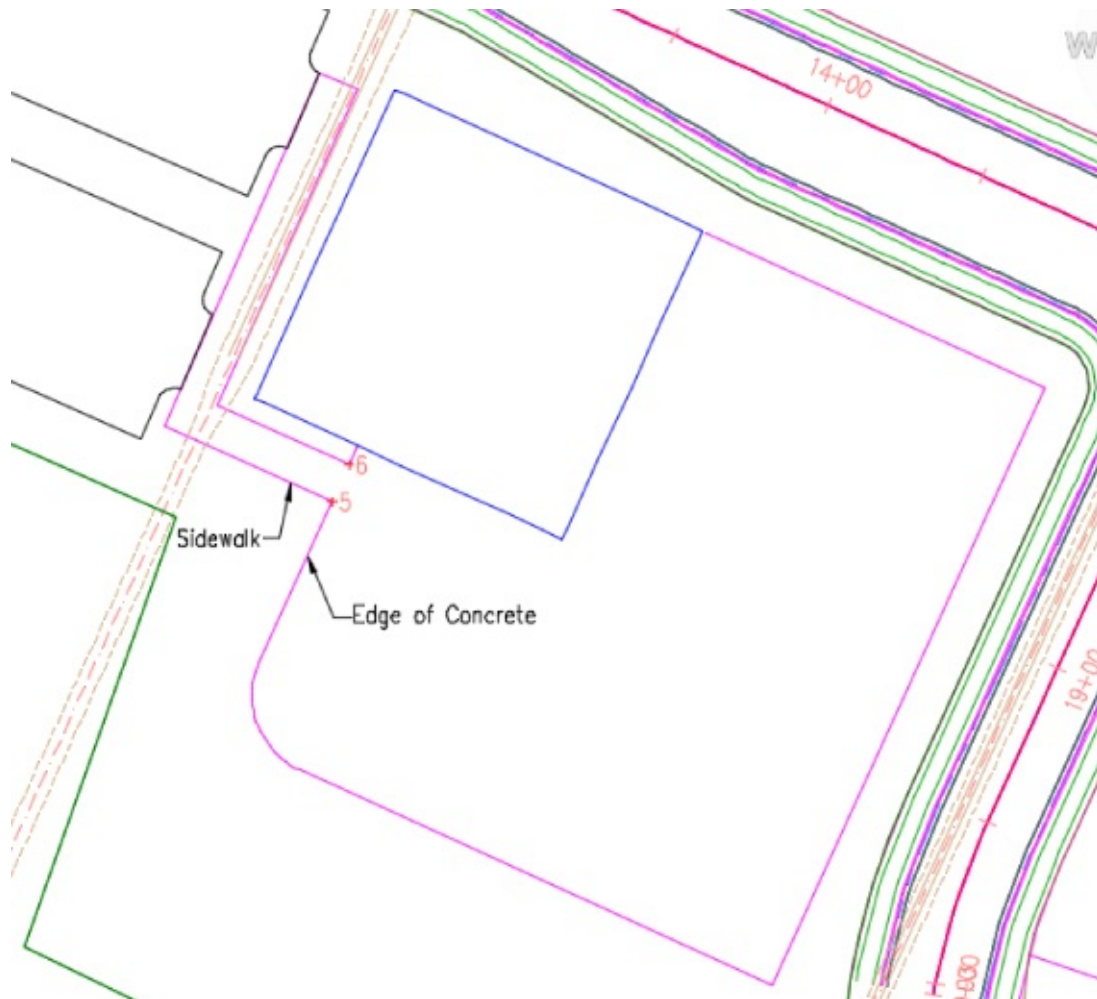


Figure 14.19 Site with completed geometry adjustments

 
When this exercise is complete, you may close the drawing. A saved copy of this drawing (1402_FeatureLineGeometry_FINISHED.dwg or 1402_FeatureLineGeometry_METRIC_FINISHED.dwg) is available from the book's web page.

Modifying Feature Lines

When you're modifying the radius of a feature line curve, it's important to remember that you must have enough tangent length on either side of the curve segment to make a curve fit; if you don't, the program will not make the change or it will create a nontangent curve. If this is the case, adjust the feature line's geometry on either side of the arc until there is a mathematical solution.

Sometimes you may need to use the Weed Vertices or Delete PI tool to remove vertices and create enough room to fillet feature lines. When you're creating feature lines, you may need to plan ahead to ensure that vertices will not be placed too closely together.

Editing Feature Line Elevations



To access the commands to edit feature line elevation, from the Feature Line contextual tab ➤ Modify panel, choose the Edit Elevations toggle to open the Edit Elevations panel.

The first tool in this panel is the Elevation Editor, which will activate a palette in Panorama where you can inspect station, elevation, length, and grade information about the feature line selected in a tabular grid format. You can edit elevation and grade in this interface. When you are working in a row in the Elevation Editor, the corresponding point will be shown with a temporary triangular glyph on the plan.

A number of tools are available for modifying and manipulating feature line elevations. You will be using a few of them in the upcoming exercises. In this first exercise, you'll take a brief look at the Grading Elevation Editor tools:

1. Open the 1403_EditingFeatureLineElevations.dwg or 1403_EditingFeatureLineElevations_METRIC.dwg file.
2. Select the red feature line representing the tennis court area to activate the Feature Line contextual tab.
3. On the Feature Line contextual tab ➤ Edit Elevations panel, choose the Elevation Editor tool. Then press Esc to deselect the feature so you can observe feature line glyphs while working in the Grading Elevation Editor.

The Grading Elevation Editor in Panorama will open, as shown in [Figure 14.20](#).

	Station	Elevation	Length	Grade Ahead	Grade Back
▲	0+00.00	5.76'	36.00'	-0.83%	0.83%
▲	0+36.00	5.46'	78.00'	0.00%	0.00%
▲	1+14.00	5.46'	36.00'	0.83%	-0.83%
▲	1+50.00	5.76'	78.00'	0.00%	0.00%
▲	2+28.00	5.76'			

Figure 14.20 The Grading Elevation Editor

A series of symbols appears in the far left column of the Grading Elevation Editor; these are the same glyph symbols used on the feature line grips. A triangular symbol denotes a PI, and a circular symbol denotes an elevation point. In this example, you don't have any elevation points.

4. Click in the Station column for the first PI at Station 0+00.00 (or 0+000.00).


As a row is selected in the Grading Elevation Editor, the PI or the elevation point that was selected will be highlighted on the graphic with a small glyph.


You can use the Grading Elevation Editor to make changes to the Station, Elevation, Length, Grade Ahead, and Grade Back settings. The exception is that you cannot edit stationing or length for PI points, as indicated by triangle glyphs in the Grading Elevation Editor.


Across the top of the Grading Elevation Editor are multiple tools that will be used as you edit the data in the table:




Select Clicking the Select tool allows you to select the feature line on the screen for editing in the Grading Elevation Editor.


 **Zoom To** The Zoom To tool will do exactly as it says. If a station is highlighted in the Panorama and you select the Zoom To tool, your plan view will be zoomed to that station on the feature line on the screen. When multiple stations are selected, the Zoom To tool will fit those multiple stations into your drawing window.


 **Quick Profile** The Quick Profile tool will generate a temporary profile based on the feature line selected. This is the same tool discussed earlier that was available on the Feature Line contextual tab > Launch Pad panel. The Create Quick Profiles dialog will open, allowing you to select which surface(s) you want to display, as well as what profile view style and 3D entity profile you want.


 **Raise/Lower** Clicking the Raise/Lower tool will activate the Set Increment text box. This will allow you to raise or lower selected station points, or if no station points are selected, it will raise or lower the entire feature line to the elevation displayed in the text box. This is an actual elevation, not an elevation difference.


 **Raise Incrementally and Lower Incrementally** The Raise Incrementally/Lower Incrementally tools will raise or lower the station point or points by the amount listed in the Set Increment text box. This is an elevation difference.


 **Set Increment** The Set Increment tool activates the text box used with the Raise Incrementally and Lower Incrementally tools. This text box must be activated and supplied a value before proceeding with these tools. Negative values are not accepted in the Set Increment text box.

 **Flatten Grade Or Elevations** The Flatten Grade Or Elevations tool enables you to assign either one elevation to selected station points or a constant slope between selected station points. If you want to flatten the elevations, the elevation of the first selected station point will be applied to the other selected points. If nothing is selected, the elevation of the first point on the list will be used. If you want to apply a constant grade across a selected group of station points, the elevation of the first and last points in the selection will be held and all points in between will be flattened to the grade calculated between the first and last points. When this tool is selected, the Flatten dialog will open asking if you want to flatten by constant elevation or by constant grade.

 **Insert Elevation Point** The Insert Elevation Point tool will let you select a spot on the feature line and will create an elevation point. The Insert PVI dialog will open, allowing you to fine-tune the station and elevation values.

 **Delete Elevation Point** The Delete Elevation Point will delete a point or points that are highlighted in the Grading Elevations Editor. Note that this tool will allow you to delete only elevation points.

 **Elevations From Surface** Clicking the Elevations From Surface tool will open the Select Surface dialog if there are multiple surfaces from which to choose. If you have selected a station point or points, it will assign elevations to only those points. If no station points are selected, the entire feature line will be draped over the surface, assigning elevations to all station points.

 **Reverse The Direction** The Reverse The Direction tool will do exactly as it says; it will reverse the direction of the feature line, thereby changing the direction of the stationing and the

grade ahead/grade back directions.



Show Grade Breaks Only The Show Grade Breaks Only tool is a toggle (click, it's on, and click, it's off) that will display only the rows where the grade breaks on the feature line. Therefore, if two adjacent segments share the same grade value, the station point that they share will be hidden because the grade doesn't break on that point.



Unselect All Rows The Unselect All Rows tool does exactly as it says; it will deselect any rows that have been highlighted for editing.

5. Click the green check mark in the upper-right corner to dismiss Panorama.

Using the Grading Elevation Editor is the most basic way to manipulate elevation information. Keep this drawing open for use in the next exercise.

Using Other Feature Line Elevation Editing Tools

To access the commands for editing feature line elevation information, select a feature line to access the Feature Line contextual tab and toggle on the Edit Elevations panel, as shown in [Figure 14.21](#). Many of the tools in the Elevation Editor may seem redundant from the Grading Elevation Editor tools discussed earlier, but they are placed here for ease of use.

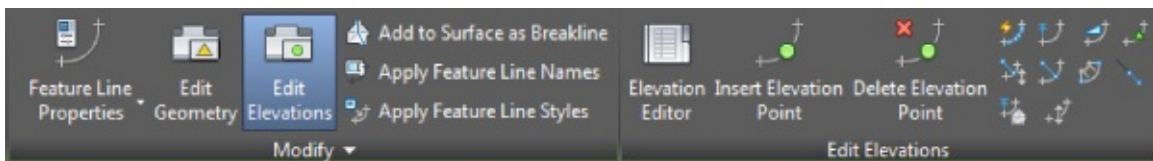


Figure 14.21 The Edit Elevations panel on the Feature Line contextual tab

Moving across the panel beyond the Elevation Editor tool, which was just discussed, you find the following tools for modifying or assigning elevations to feature lines:



Insert Elevation Point The Insert Elevation Point tool inserts an elevation point at the point selected or multiple elevation points at a specified increment. The elevation occurring on the feature line at the location inserted will be assigned to the elevation point. This elevation can be edited later. Note that elevation points can control only elevation information; an elevation point cannot be moved to alter the original orientation of the feature line.



Delete Elevation Point The Delete Elevation Point tool deletes the selected elevation point; the points on either side then become connected linearly on the basis of their current elevations. You can also delete all elevation points on a feature line with this command. When deleting an elevation point, the one that will be deleted is highlighted in green.



Quick Elevation Edit The Quick Elevation Edit tool allows you to use onscreen cues to set elevations and slopes quickly between PIs on any feature lines.

- Hover over a PI or an elevation point and a triangular glyph appears showing the elevation of that station point at the cursor. Click to trigger the prompt at the command line and type in a new elevation.
- Hover over a segment on the feature line and an arrowhead glyph appears showing the direction

and grade of the segment. Click to trigger the prompt at the command line and type in a new grade.



Edit Elevations The Edit Elevations tool steps through the selected feature line, much like working through a polyline edit at the command line, allowing you to change elevations and grades or insert, move, and delete elevation points. A triangular glyph shows up at the current vertex. To skip editing the vertex and move on to the next, press the Enter key to accept the current value.



Set Grade/Slope Between Points The Set Grade/Slope Between Points tool sets a continuous slope along the feature line between selected points. As you select the points, you will be asked to specify or verify the elevation at each point.



Insert High/Low Elevation Point The Insert High/Low Elevation Point tool places a new elevation point on the basis of two picked points: the grade ahead of the first point and the grade behind the second point. This calculated point is placed at the intersection of two vertical slopes.



Raise/Lower By Reference The Raise/Lower By Reference tool allows you to adjust a feature-line station point vertically based on a grade, slope, or elevation difference in relation to a point on another 3D object or point. This relationship isn't dynamic!



Set Elevation By Reference The Set Elevation By Reference tool at first looks like the same command as the Raise/Lower By Reference tool. The differences are that you can execute this tool on multiple points on the feature line without leaving the command and you can insert new elevation points. This relationship isn't dynamic!



Adjacent Elevations By Reference The Adjacent Elevations By Reference tool allows you to adjust the elevation of multiple vertices on a feature line by specifying grade, slope, or elevation difference from another 3D object. If the 3D object has length, elevations are projected to the feature-line station points perpendicularly from the 3D object. This relationship isn't dynamic!



Grade Extension By Reference The Grade Extension By Reference tool allows you to set the grade, slope, or elevation difference between feature line segments across a gap. For example, you might use this tool along the back of curbs at locations such as driveways or intersections. This relationship isn't dynamic!



Elevations From Surface The Elevations From Surface tool sets the elevation at each PI and elevation point on the basis of the selected surface. It will optionally add elevation points at any point where the feature line crosses a surface TIN line.



Raise/Lower The Raise/Lower tool simply moves the entire feature line in the z direction by an amount entered at the command line. A positive number raises and a negative number lowers.

Some of the tools can be difficult to understand, so you'll look at them in the next exercise and see how they function in some basic scenarios:

1. If not opened for the previous exercise, open the 1403_EditingFeatureLineElevations.dwg or 1403_EditingFeatureLineElevations_METRIC.dwg file. You do not need to have completed the previous exercise to proceed.
2. Zoom into the entrance to the parking lot of the site.

Notice that the corridor has been cleaned up at the entrance. A region was inserted and an assembly


was used that omitted the curb, gutter, and sidewalk in the entrance area. To review regions and the use of multiple assemblies in a corridor, see Chapter 10, “Advanced Corridors, Intersections, and Roundabouts.”

Also, two feature lines were extracted from the corridor representing the flowline at the curb and gutter on both sides of the region. They are dynamically linked to the corridor so they will update if the corridor is modified. To review the Feature Lines From Corridor command, see Chapter 9.

3. On the Prospector tab, expand the Sites > Parking Lot collection.
4. Right-click Feature Lines and select Properties from the context menu.
5. In the Feature Line Site Properties dialog on the Options tab, do the following:
 - a. Fill in the Filter Unused Styles check box.

Only the styles in use will display.

- b. Highlight the Corridor Grading style.

-  Click the up arrow button a number of times to move the Corridor Grading feature line style to the top of the list, as shown in [Figure 14.22](#).

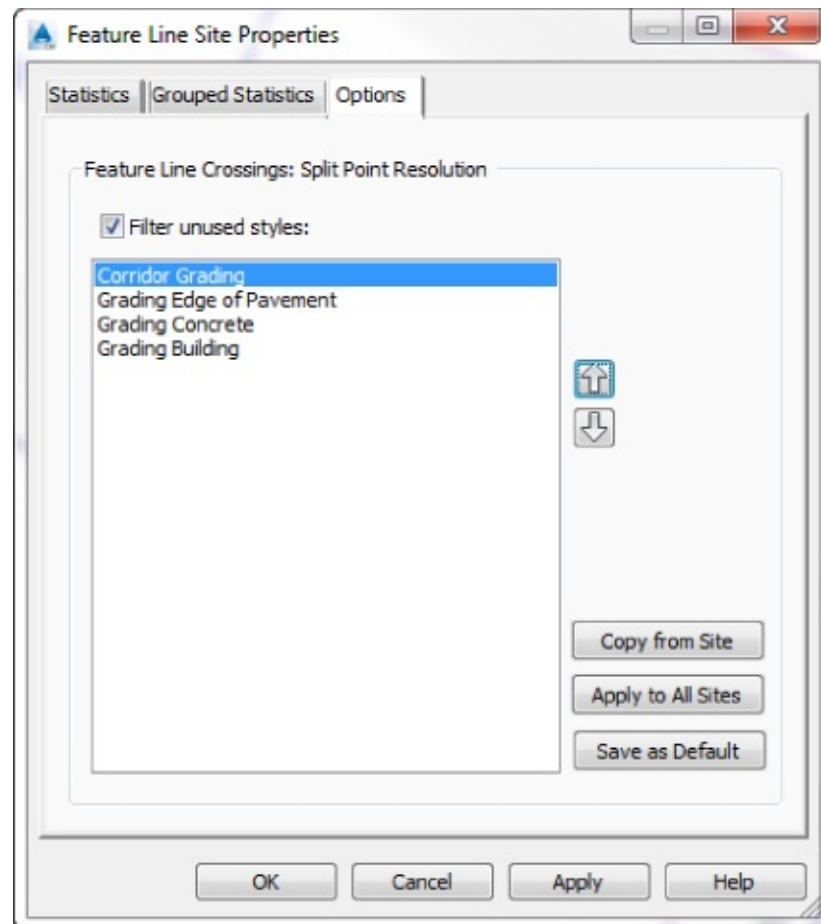



Figure 14.22 Assigning priority in the Feature Line Site Properties dialog

This will set the initial priority by style when feature lines cross where no PIs exist. This means that the feature line style that is higher on the list will set the elevation where it intersects another. If the feature lines have the same style applied, the one modified last will win.

- d. Click OK to close the dialog.

6. Select the white polyline representing the edge of pavement of the parking lot.
7. On the Home tab ► Create Design panel ► Feature Line drop-down, select Create Feature Lines From Objects.
8. In the Create Feature Lines dialog, do the following:
 - a. Set the Site to Parking Lot.
 - b. In the Style area, use the drop-down to set the Style to Grading Edge Of Pavement.
 - c. Under Conversion Options, clear the check box for Assign Elevations And Weed Points. The Erase Existing Entities check box should remain checked.
 - d. Click OK to close.
9. Select the newly created feature line.
10. On the contextual tab ► Edit Elevations panel, select the Elevation Editor tool.
11. Scroll through the Grading Elevation Editor to review it.

Notice that the elevations of the feature line at stations 0+00 and 9+21.75 (0+000 and 0+280.97 if metric) are already set because these stations were touching the extracted corridor feature lines when the polyline was converted. The feature line is matching grade with the road at the flowline on both sides of the entrance.

12. Leave the Grading Elevation Editor open. Either push it to the side or minimize it.
13.  With the feature line still selected, on the contextual ribbon ► Edit Elevations panel, click Quick Elevation Edit.
 - a. Hover over the middle of the left curb return. Use your scroll button to zoom in or out if necessary.

Notice the triangular glyph that appears on the segment, which changes directions depending on which end of the segment your cursor is nearest. The direction in which the triangle is pointing is the direction in which you will be applying the grade. Notice that the triangular glyph turns gray when it points to where the edge of pavement feature line touches the corridor's dynamically linked feature line. This glyph indicates that this elevation is being influenced by another feature line.
 - b. Position the cursor so that the triangular glyph is pointing toward the parking lot, as shown in [Figure 14.23](#), and left-click.

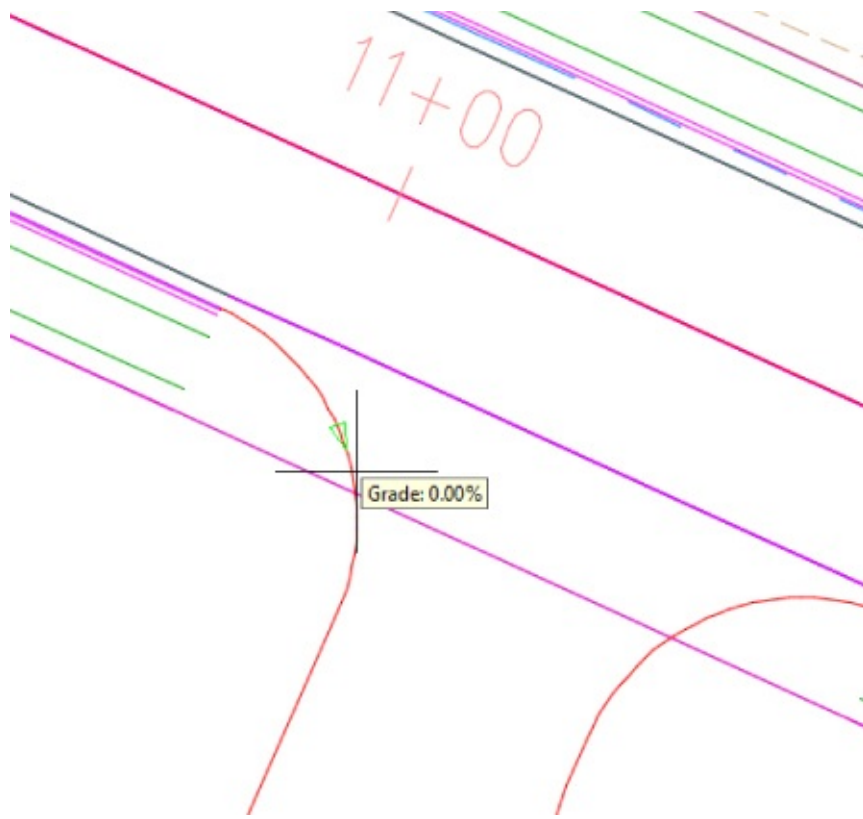


Figure 14.23 Editing the grade of a feature line with Quick Elevation Edit

- c. At the Specify grade or [Slope]: prompt, type **3 ↵** to specify a 3 percent grade.
- d. Go to the Grading Elevation Editor and scroll to the bottom of the list to look at the elevation assigned at station 8+90.59 (0+271.46 if metric).
- e. With the Quick Elevation Edit tool still running, hover over the PT of the right curb return of the entrance.

A tooltip showing elevation will appear with an equilateral triangular glyph, as shown in [Figure 14.24](#). With the Quick Elevation Edit tool, not only can you edit the grade or slope of a feature line segment, but you can also edit the elevation of a PI.

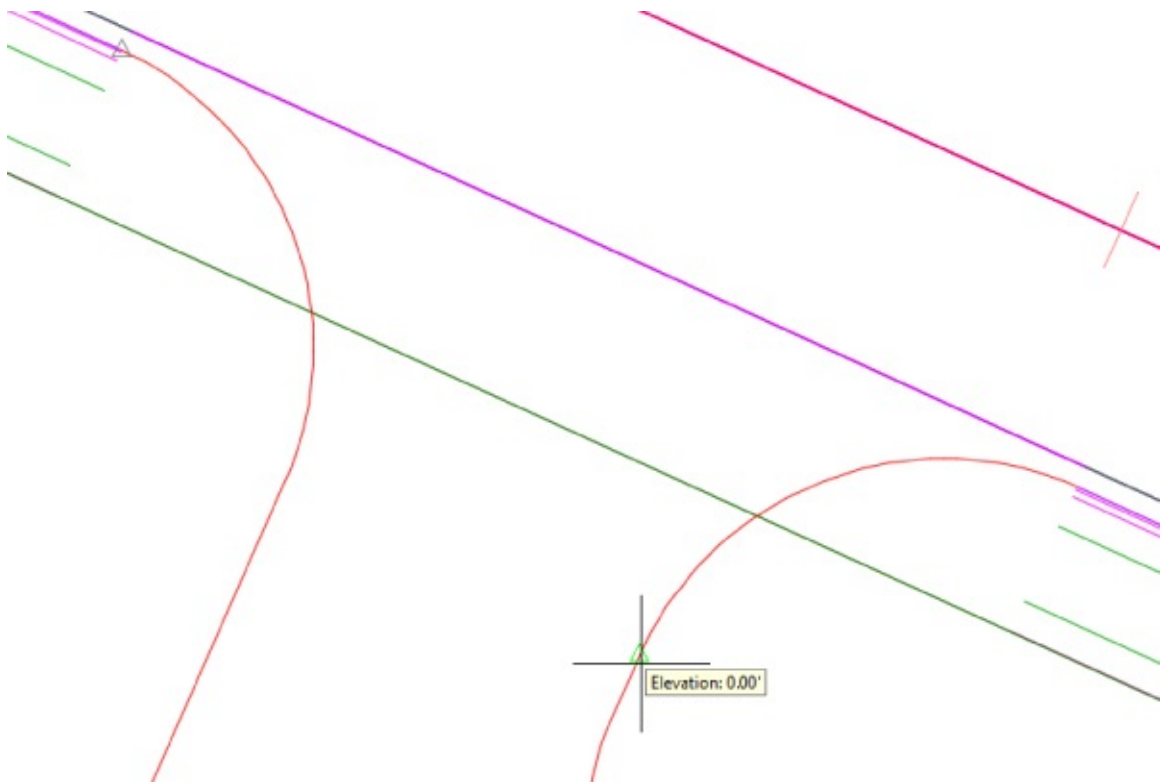


Figure 14.24 Editing the elevation of a feature line with Quick Elevation Edit

- f. Click over the PI.
- g. At the Specify elevation or [Surface]: prompt, type **7.07 (2.151 if metric)**.
- h. Check the Grading Elevation Editor at station 0+31.70 (0+009.67 if metric), and notice that the elevation you just typed in has been assigned to the second station on the list.
- i. Leave the Grading Elevation Editor open.
- j. Press Esc twice to end the command and deselect.

4. Pan over to the Building feature line and select.

Previously, you used the Elevations From Surface tool to assign elevations to the feature line. You also had the Insert Intermediate Grade Break Points check box filled. [Figure 14.25](#) displays how the Set Elevations From Surface dialog was configured in the previous exercise.

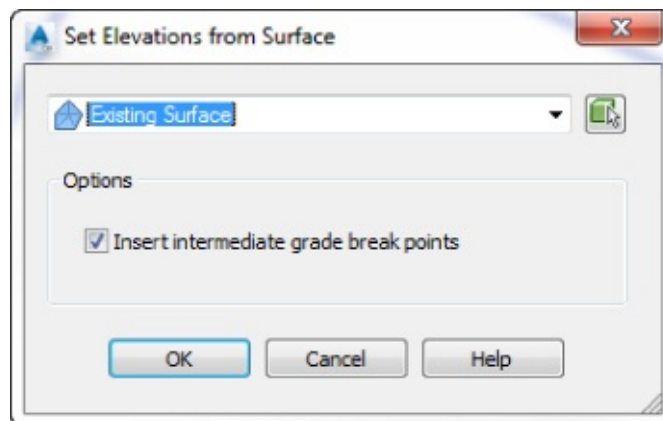



Figure 14.25 Set Elevations From Surface dialog

The circular grips called elevation points on the feature line are there because TIN lines from the surface crossed the feature lines at those locations. You will remove the elevation points from the

feature line so you can set elevations at just the four corners of the building for now.

15. With the feature line still selected, on the contextual tab ► Edit Elevation panel, select Delete Elevation Point.
16. As the cursor nears the feature line, circular glyphs appear where the circular grips are located and triangular glyphs appear at the four corners. This tool will remove only the circular glyphs (elevation points).
 - a. At the Specify point or [All]: prompt, type **A** ↵.
 - b. Press Esc to end the command.

If you take a look at the Grading Elevation Editor on Panorama, you may notice that it is still displaying the numerous stations associated with the parking lot feature line. The Grading Elevation Editor will not automatically change its contents based on the current selection.

17.  In the Grading Elevation Editor tab on Panorama, do the following:
 - a. Click the Select A Feature Line, Parcel Line, or Survey Figure tool, the green button in the upper-left corner of Panorama.

Since the feature line was still selected when you clicked the tool, the Grading Elevation Editor instantly updated.
 - b. Select all the PIs by selecting the first line, then holding the Shift key down, and selecting the last line.
 - c. Click into one of the elevation fields and enter **8** (2.5 for metric) to set the initial elevation of each PI outside the building.

18. In the Grading Elevation Editor tab on Panorama, click the Select A Feature Line, Parcel Line, or Survey Figure tool.

19. Using the pick box, select the magenta feature line representing the edge of the concrete around the pool area.

Notice that an elevation has been assigned to the beginning station of the feature line at point 1. Since the edge of concrete feature line intersects the building feature line, they are sharing the same elevation. The final station near the northeast corner of the building at point 8 should be set by the building feature line, but it is still at elevation 0. Zooming in closer to this area will reveal that the feature line doesn't quite intersect the building. Since you need the PI of the building and the PI of the edge of concrete to match elevations at this location, you will connect them.

20. Click the magenta feature line, click the grip of the PI near point 8, and Endpoint Osnap it to the northeast building corner.


The Grading Elevation Editor will update, as shown in [Figure 14.26](#). Notice the + sign near the bottom-right corner of the green triangle in the first and last rows? That shows that the feature lines touch.

Station	Elevation	Length	Grade Ahead	Grade Back
0+00.00	8.00'	6.22'	-128.65%	128.65%
0+06.22	0.00'	42.59'	0.00%	0.00%
0+48.81	0.00'	102.00'	0.00%	0.00%
1+50.81	0.00'	12.00'	0.00%	0.00%
1+62.81	0.00'	113.94'	0.00%	0.00%
2+76.75	0.00'	54.44'	0.00%	0.00%
3+31.19	0.00'	51.92'	0.00%	0.00%
3+83.10	0.00'	37.70'	0.00%	0.00%
4+20.80	0.00'	153.36'	0.00%	0.00%
5+74.16	0.00'	194.14'	0.00%	0.00%
7+68.30	0.00'	110.94'	7.21%	-7.21%
8+79.24	8.00'			

Figure 14.26 Updated Grading Elevation Editor after grip-editing the edge of concrete feature line

21. Close Panorama by clicking the green check mark in the upper-right corner.

Next, you'll set the grades on the edge of concrete feature line. The object is to get the runoff to flow away from the building toward the southern end of the site.

22.  Select the magenta feature line and on the contextual ribbon > Edit Elevation tab, select Set Elevation By Reference.

- a. At the Specify reference point: prompt, Endpoint Osnap to the northeast corner of the building at point 8.
- b. At the Specify point or [Insert]: prompt, hover over the northeast corner of the edge of concrete near point 7 and left-click (there is no need to use Osnaps), as shown in [Figure 14.27](#).

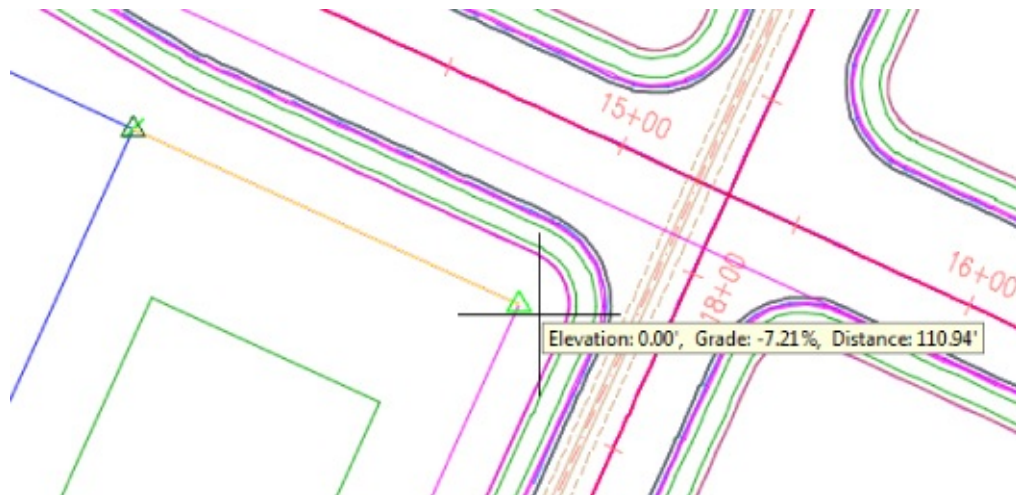


Figure 14.27 Using Set Elevation By Reference to grade the edge of concrete

- c. At the Specify grade or [Slope Difference]: prompt, type **-0.5** ↵ for grade.

The command will repeat itself so you can select another point to be graded relative the reference point selected when the command launched.

23. On the contextual ribbon > Edit Elevation tab, select Set Elevation By Reference to reset the command.

- a. At the Specify reference point: prompt, Endpoint Osnap on the northeast corner of the edge

of concrete at point 7 (the point you just assigned an elevation to).

- b. At the Specify point or [Insert]: prompt, click the southeast corner of the edge of concrete at point 6.
- c. At the Specify grade or [Slope Difference]: prompt, type **-0.5** ↵ for grade.

24. On the contextual ribbon > Edit Elevation tab, select Set Elevation By Reference to reset the command.

- a. At the Specify reference point: prompt, Endpoint Osnap on first PI of the magenta feature line at point 1 on the south side of the building, as shown in [Figure 14.28](#).

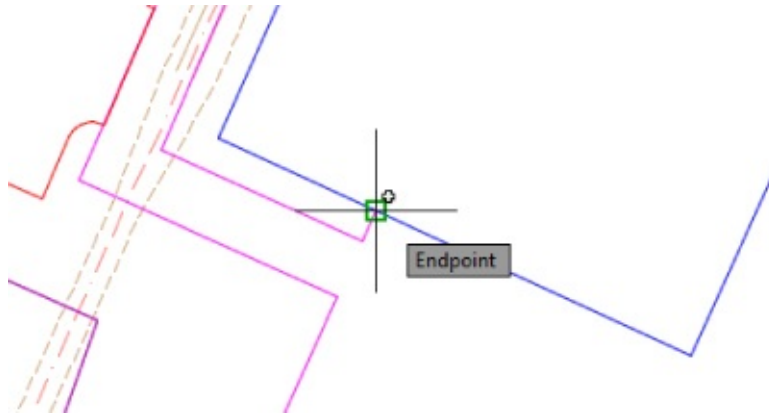


Figure 14.28 Using Set Elevation By Reference on the south side of the building

- b. At the Specify point or [Insert]: prompt, click the next PI on the magenta feature line at point 2.
- c. At the Specify grade or [Slope Difference]: prompt, type **-1** ↵ for grade.
- d. At the Specify point or [Insert]: prompt, click the PI on the magenta feature line at point 3.
- e. At the Specify grade or [Slope Difference]: prompt, type **-1** ↵ for grade.
- f. At the Specify point or [Insert]: prompt, click the PC on the magenta feature line at point 4.
- g. At the Specify grade or [Slope Difference]: prompt, type **-1** ↵ for grade.
- h. Press Esc to end the command.

25. On the contextual ribbon > Edit Elevation tab, select Elevation Editor.

In the Grading Elevation Editor, note that stations 0+48.81 through 2+76.75 (0+015.48 through 0+084.96 if metric) are still at elevation 0. These PIs occur in the sidewalk area and you'll grade them later. Station 4+20.80 (0+129.26 if metric) occurs at the PT at point 5. You'll apply a continuous grade between points 4 and 6.

- a. Select stations 3+83.10 through 5+74.16 (0+116.69 through 0+175.32 if metric) in the Grading Elevation Editor.



- b. Select the Flatten Grade Or Elevations tool at the top of the Grading Elevation Editor.
- c. In the Flatten dialog, select Constant Grade and click OK to assign.

According to the Grading Elevation Editor, a grade of **-0.43** has been assigned. Now you'll set a

lowpoint at the midpoint of the segment between points 5 and 6.

d. Close the Grading Elevation Editor. The magenta feature line should still be selected.

26. On the contextual ribbon ➤ Edit Elevation tab, select Insert High/Low Elevation Point.

a. At the Specify the start point: prompt, select the PI at point 6.

b. At the Specify the end point: prompt, select the next PI at point 5.

A triangular directional glyph appears near the last point picked, indicating the direction the grade will be applied.

c. At the Specify grade ahead or [Slope]: prompt, type **-1** ↵.

A triangular directional glyph appears now near the first point picked indicating the direction the next grade will be applied.

d. At the Specify grade back or [Slope]: prompt, type **-0.5** ↵.

The location of the lowpoint is calculated with the grades provided and a circular elevation point is inserted at that location, as shown in [Figure 14.29](#).

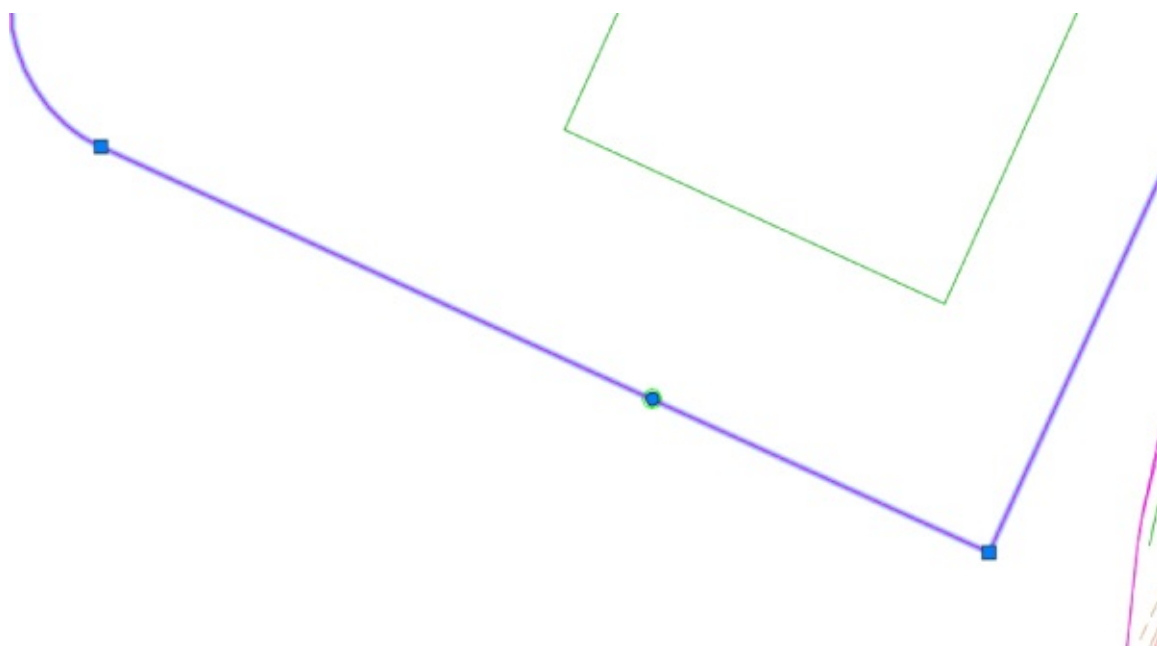


Figure 14.29 Location of elevation point calculated with the Insert High/Low Elevation Point tool

e. Press Esc twice to end the command and deselect.

To set the grades on the sidewalk, you will get a little crafty. You'll create a temporary surface that defines a grade of 2percent away from the building. Then you'll assign elevations to the sidewalk area with this surface. You will do something similar later in the next section using grading groups.

27. Select the building feature line and on the contextual ribbon ➤ Edit Geometry tab, select Stepped Offset.

a. At the Specify offset distance or [Through Layer]: prompt, type **25 (8 if metric)** ↵.

b. At the Specify side to offset or [Multiple]: prompt, pick a point outside the building area.

c. At the Specify elevation difference or [Grade Slope Elevation Variable]: prompt,

type **G** ↵ to specify grade.

- d. At the Specify grade or [Slope Elevation Difference Variable]: prompt, type **-2** ↵. Press Esc twice.


28. Select the new feature line, and on the contextual tab, expand the Modify panel to select Move To Site.

- a. In the Move To Site dialog under Destination Site, select Temp.
- b. Click OK to close.

Leaving the new feature line in the same site as the edge of concrete and building feature line would have caused an elevation point to have been inserted wherever it crossed over these feature lines. Moving it to another site keeps that from occurring.

29. Select the building feature line and the new offset feature line.

30. On the contextual tab ➤ Modify panel, click the Add To Surface As Breakline tool.

- a.  In the Select Surface dialog, click the plus sign button to create a new surface.
- b. In the Create Surface dialog, type **Temp** for the surface name.
- c. For Style, click into the Style value field. Then click the ellipsis button to open the Select Surface Style dialog.
- d. In the Select Surface Style dialog, select the style called Border Only and click OK to close.
- e. Click OK to close the Create Surface dialog.
- f. Click OK to close the Select Surface dialog, and the Add Breaklines dialog opens.
- g. Under Supplementing Factor, fill in the Distance check box.
- h. In the Distance field, type **25 (8 if metric)**.

Creating surface points at this frequency will produce a set of uniform triangles across the sidewalk area, which makes for a more accurate surface.

- i. Click OK to close, and press Esc to deselect the feature lines.

31. Select the magenta feature line, and on the contextual tab ➤ Edit Elevations panel, click Elevation Editor.

- a. In the Grading Elevation Editor, select all the PIs with an elevation value of 0 by holding down the Shift key during the selection.
- b. At the top of the Grading Elevation Editor, click the Elevations From Surface tool.
- c. In the Select Surface dialog, select the Temp surface using the drop-down and click OK.
- d. Click the green check mark in the Grading Elevation Editor to close it, and press Esc to deselect the feature line.

Last, you will make an adjustment to the red feature line on the west side of the site representing the tennis court. As you may recall, the northwest corner was set by acquiring its elevation from the existing surface, and then from that corner typical cross slopes were applied. You will now raise the tennis court to ensure that it will be higher than the surrounding ground.

32. Select the red feature line representing the tennis court and on the contextual tab ➤ Edit Elevations panel, click the Raise/Lower tool.
 - a. At the Specify Elevation Difference: prompt, type **0.5 (0.15 for metric)** ↵.
 - b. Press Esc to deselect.

When this exercise is complete, you may close the drawing. A saved copy of this drawing (1403_Editing FeatureLineElevations_FINISHED.dwg or 1403_Editing FeatureLineElevations_METRIC_FINISHED.dwg) is available from the book's web page.

You are halfway to completing the construction of your grading model. In an upcoming section, you will use another grading tool called Grading Groups to assign elevations in the parking lot. By using all the tools in the Feature Lines toolbar, you can quickly grade elements of your design and pull them together in a surface.

Labeling Feature Lines

Feature lines can be labeled with their overall length, segment length, vertex elevation, and segment grade or slope. This is helpful to the designer because as you change your design, you can monitor geometry values, grades, and elevations since the labels update as you go. In the next couple of exercises, you'll label a few critical points on your site design to help you better understand the drainage patterns.

Feature lines do not have their own unique label styles, but they do use Line and Curve labels under General styles. You can learn more about label styles in Chapter 18, "Label Styles." The templates that ship with Civil 3D contain styles for labeling segment slopes, so you'll label the grades of feature line segments in the following exercise:

1. Open the 1404_LabelingFeatureLines.dwg or 1404_LabelingFeatureLines_METRIC.dwg file.
2. From the Annotate tab ➤ Labels & Tables panel, click the Add Labels icon to display the Add Labels dialog.
3. In the Add Labels dialog, do the following:
 - a. Set the Feature drop-down to Line And Curve.
 - b. Set Label Type to Single Segment.
 - c. Set Line Label Style to Feature Line Info.
 - d. Set Curve Label Style to Feature Line Info.

When complete, the dialog should look like [Figure 14.30](#).

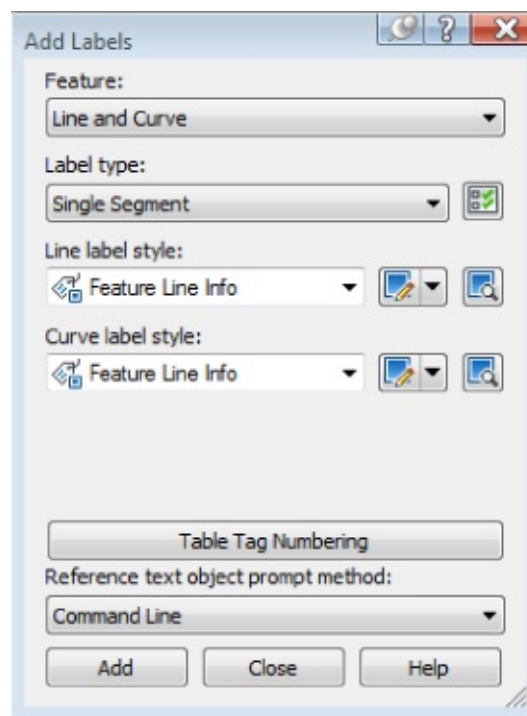


Figure 14.30 Adding feature line grade labels

4. Click the Add button.
5. At the `Select point on entity:` prompt, pick the several segments on the magenta feature line, as shown in [Figure 14.31](#).

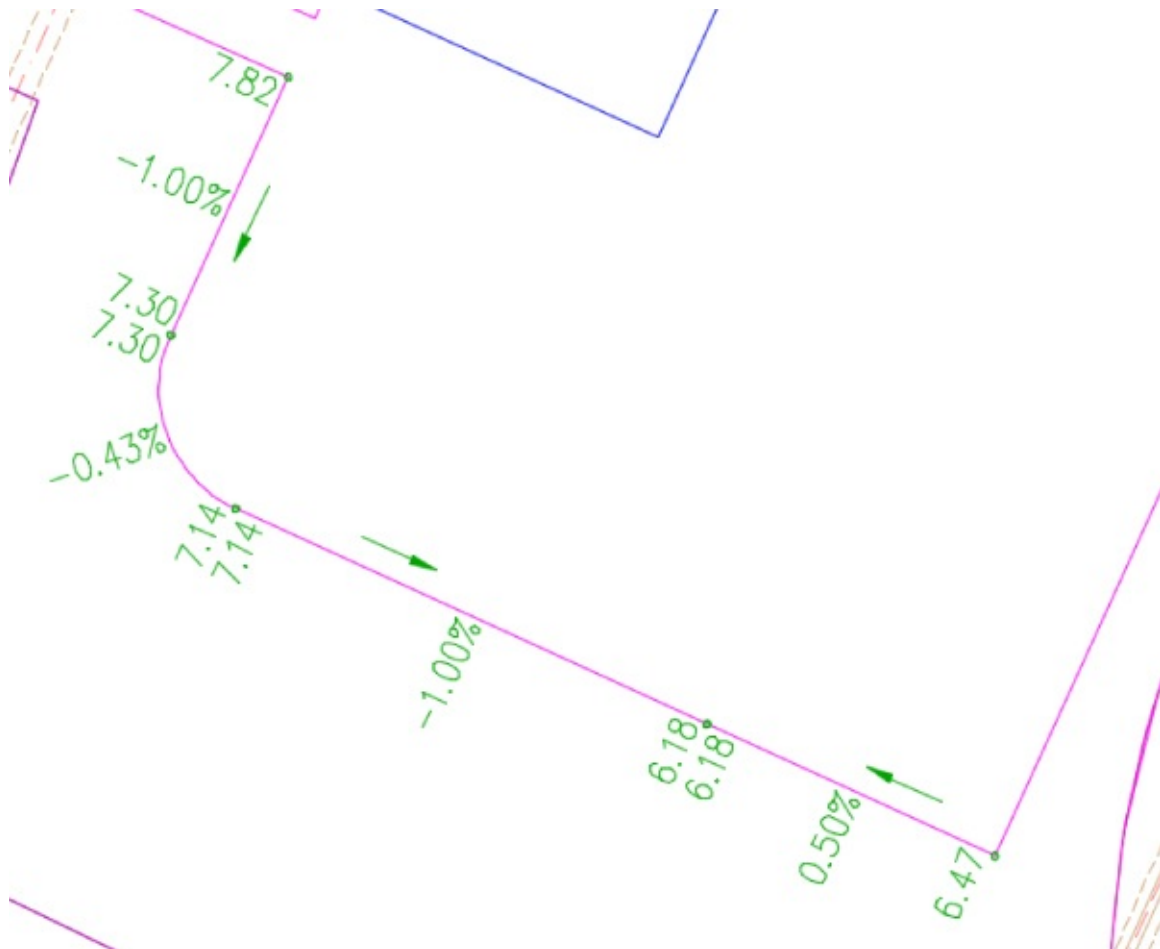


Figure 14.31 Feature line grade labels in the Imperial drawing

You can also try to change the slopes of some of the segments in Elevation Editor to see what happens to

the labels.

When this exercise is complete, you may close the drawing. A saved copy of this drawing (1404_LabelingFeatureLines_FINISHED.dwg or 1404_LabelingFeatureLines_METRIC_FINISHED.dwg) is available from the book's web page.


Grading Objects

Once a feature line is created for site grading, there are two main uses. One is to incorporate the feature line itself directly into a surface object as a breakline; the other is to create a grading object (referred to hereafter as simply a *grading* or *gradings*) using the feature line as a baseline. A grading consists of a baseline and grading criteria, which describes how a slope projects from the baseline feature line. This slope can be defined by two of the following: distance, slope or grade, relative elevation, or actual elevation. Surfaces can also be part of the criteria. Grading criteria can be defined and stored in grading criteria sets for ease of management. Styles can be applied to gradings for visual preferences or to convey information such as cut or fill.

Gradings are stored on Prospector within Sites in a branch called *Grading Groups*. They must be created in the same site as their originating feature lines. Gradings produce feature lines along the limits of each projected slope. These feature lines, like corridor feature lines, cannot be edited. They can be added to surfaces and also used to create other gradings. When these grading-dependent feature lines are used to create other gradings, the additional gradings become part of the grading group. These gradings are joined and will change when the baseline feature line or a parent grading is modified.

In this section, you'll use a number of methods to create gradings, edit those gradings, and finally convert the grading group into a surface.

Creating Gradings

 Let's look at grading a pond. In this section, you'll look at grading groups and then create the individual gradings within the group. Grading groups act as a collection mechanism for dependent gradings, and they let Civil 3D keep track of which gradings are to act in sync with each other.

One thing to be careful of when you're working with gradings is that they are part of a site. Any feature line within that same site will react with the feature lines created by the grading. For that reason, the exercise drawing has another site called Pond Grading to be used for just pond grading.

1. Open the 1405_GradingThePond.dwg or 1405_GradingThePond_METRIC.dwg file.
2. Select the feature line representing the edge of pond to activate the Feature Line contextual tab.
3. From the Feature line contextual tab expand the Modify panel, and choose Move To Site to display the Move To Site dialog.
4. Set the Destination Site drop-down to the site named Pond Grading and click OK.

This will avoid interaction between the pond gradings and any other feature lines in the drawing.


5.  With the feature line still selected, on the Feature Line contextual tab > Launch Pad panel, choose Grading Creation Tools.

The Grading Creation Tools toolbar, shown in [Figure 14.32](#), appears. The left section is focused on

settings, the middle on creation, and the right on editing.



Figure 14.32 The Grading Creation Tools toolbar

6.  On the Grading Creation Tools toolbar, click the Set The Grading Group tool to the far left of the toolbar to display the Site dialog.
7. Choose the Pond Grading site from the drop-down list and click OK.
The Create Grading Group dialog is displayed.
8. Enter **Pond Grading** in the Name text box, as shown in [Figure 14.33](#), and click OK.






Figure 14.33 Assign the name Pond Grading in the Create Grading Group dialog

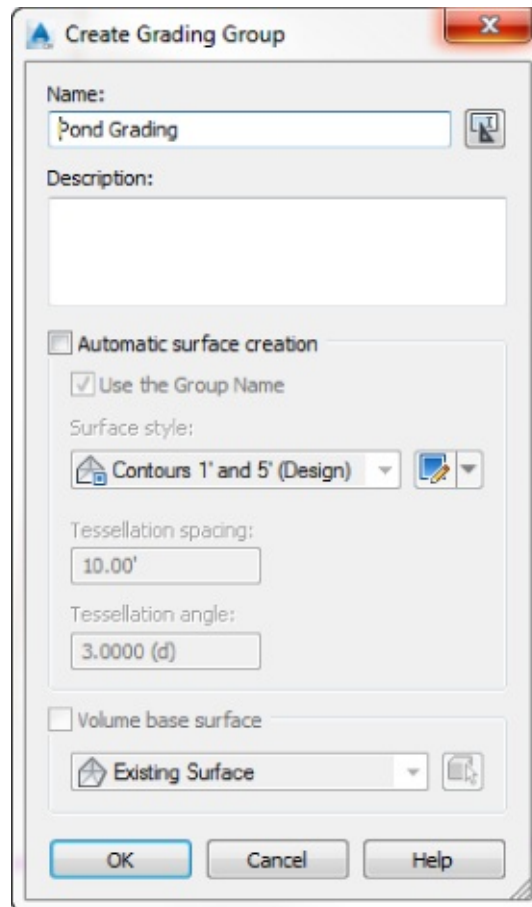You'll revisit the surface creation options in a bit.

9.  On the Grading Creation Tools toolbar, click the Select Target Surface tool located next to the Select Grading Group tool to display the Select Surface dialog.
10. Select Existing Surface and click OK.
11.  On the Grading Creation Tools toolbar, verify that Grading Criteria is set to Grade To Distance and click the Create Grading tool, or click the down arrow next to the Create Grading tool and select Create Grading, as shown in [Figure 14.34](#).

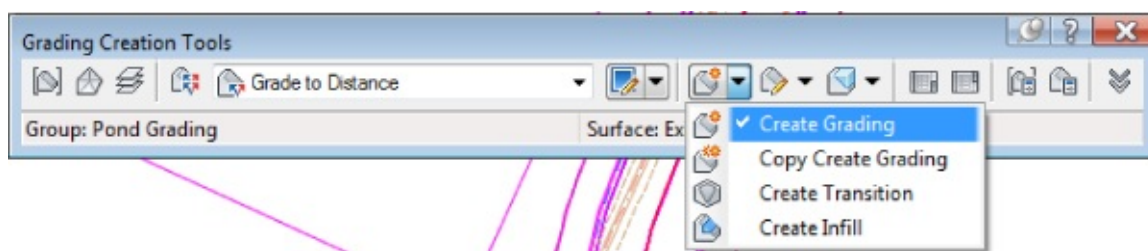


Figure 14.34 Creating a grading using the Grade To Distance criteria

12. At the **Select the feature:** prompt, select the pond feature line. If you get a dialog asking you to weed the feature line, select the **Continue Grading Without Feature Line Weeding** option.
13. At the **Select the grading side:** prompt, pick a point on the inside of the pond basin to indicate the direction of the grading projections.
14. At the **Apply to entire length? [Yes No]:** prompt, enter **Y** ↵ to apply the grading to the entire length of the pond outline.
15. At the **Specify distance:** prompt, enter **5** ↵ (or **1.5** ↵ for metric users) at the command line as the distance.
16. At the **Format [Grade Slope]:** prompt, enter **S** ↵.
17. At the **Slope:** prompt, enter **-10** ↵ for a 10 horizontal to 1 vertical slope.

The first grading has been created. The lines onscreen are part of the Grading style.

18. Press Esc to end the command.

Gradings can be modified with the Grading Editor. In the Grading Editor, you can edit any of the criteria you used to apply the grading slopes.

19. Click the diamond-shaped glyph located inside the grading you just created.

20.  On the contextual tab > **Modify** panel, click **Grading Editor**.

Panorama opens displaying the Grading Editor.

21. On the Grading Editor tab under the Grading Method parameter group, click in the **Distance Value** field and type in a new distance value of **10** (or **3** for metric users).
22. Click the green check mark to dismiss the vista.

Now you will attach more gradings to complete the pond design.

23. On the Grading Creation Tools toolbar, set Grading Criteria to **Grade To Elevation**, and click the **Create Grading** tool.
24. At the **Select the feature:** prompt, select the inner boundary of the grading made in step 17.
25. At the **Apply to entire length? [Yes/No]:** prompt, enter **Y** ↵ to apply to the whole length. Notice that you did not have to select a side, because there is already a grading object on one side of the selected feature line.
26. At the **Elevation:** prompt, enter **1** ↵ (**0.3** ↵ for metric users) for the target distance to build the safety ledge.
27. At the **Cut Format [Grade Slope]:** prompt, enter **S** ↵.

28. At the Slope: prompt, enter 3 ↵.
29. At the Fill Format [Grade Slope]: prompt, enter S ↵.
30. At the Slope: prompt, enter 3 ↵.
31. Press Esc to end the command. Your pond should look like [Figure 14.35](#).

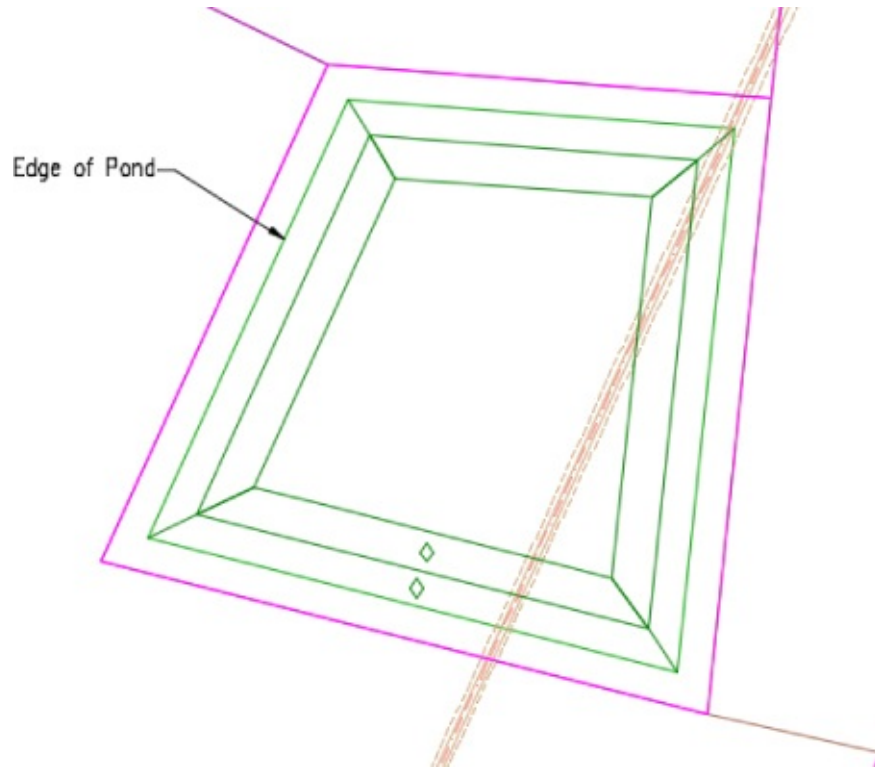


Figure 14.35 Creating a grading group

32. On the Grading Creation Tools toolbar, set Grading Criteria to Grade To Surface, and click the Create Grading tool.
33. At the Select the feature: prompt, select the edge of pond feature line.
34. At the Select the grading side: prompt, click outside the feature line.
35. At the Apply to entire length [Yes No]? prompt, enter Y ↵.
36. At the Cut Format [Grade Slope]: prompt, enter S ↵.
37. At the Cut Slope: prompt, enter 3 ↵ for a 3 horizontal to 1 vertical slope.
38. At the Fill Format [Grade Slope]: prompt, enter S ↵.
39. At the Fill Slope: prompt, enter 3 ↵ for a 3 horizontal to 1 vertical slope.
40. Press Esc to end the command.

Your drawing should look similar to [Figure 14.36](#).

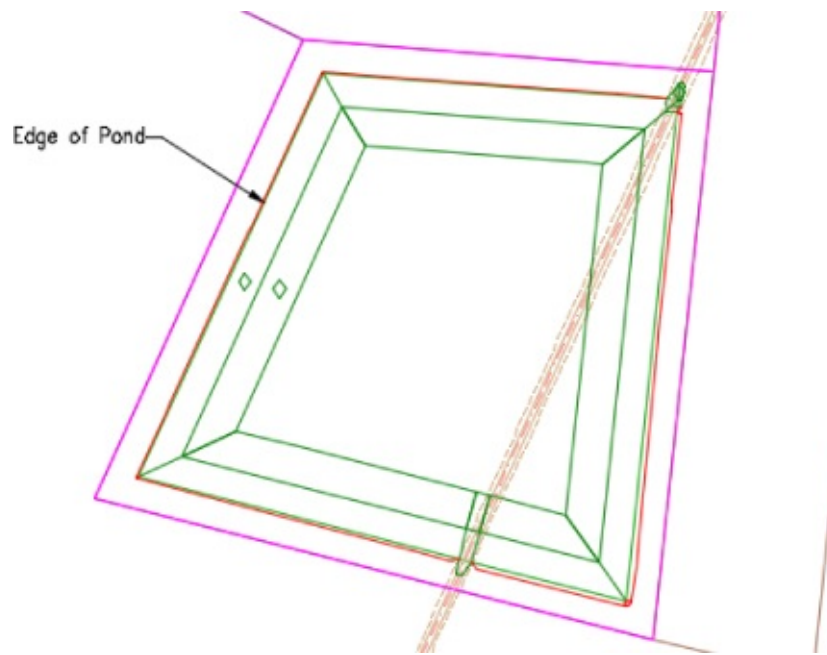


Figure 14.36 Feature line grading for the pond

11. On the Grading Creation Tools toolbar, click the down arrow next to the Create Grading tool and select Create Infill.
An infill is a grading that is used to fill in holes.
12. Click in the open area in the middle of the pond.
13. Press Esc to end the command. Next, you will check the pond volume to make sure it meets the capacity needed.
14. On Prospector, expand the Sites > Pond Grading > Grading Groups branches, select Pond Grading, right-click, and choose Properties.
15. In the Grading Group Properties dialog, fill in the check box for Automatic Surface Creation.
The Create Surface dialog opens.
16. Click OK to accept the defaults in the Create Surface dialog.
17. Back in the Grading Group Properties dialog, fill in the check box under Volume Base Surface and verify that Existing Surface is selected.

A surface was previously created using the edge of pond feature line for the purpose of running this analysis. The Grading Group Properties dialog should be set as shown in [Figure 14.37](#).

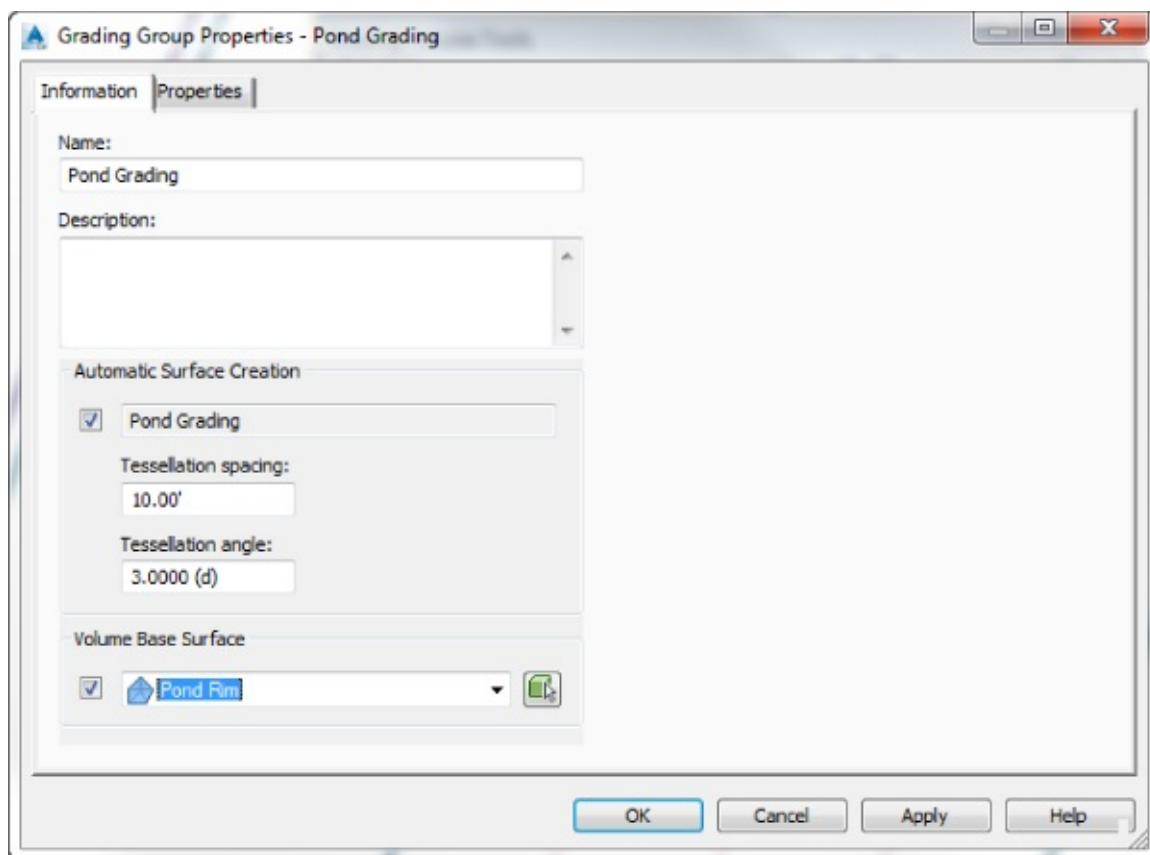


Figure 14.37 Configure the Grading Group Properties.

18. Click OK to close the dialog.
19. Up on the ribbon on the Analyze tab > Volumes And Materials panel, choose Grading Volume Tools.
The Grading Volume Tools toolbar opens. Note the value for Cut: 2657.30 cubic yards (3278.89 cubic meters). This represents the total volume that this pond can hold.

20.  Click the Lower The Grading Group button in the Grading Volume Tools.

This action just lowered the pond by the amount that is entered in the white field on the right side of the box. Notice that the Cut value has increased, which means the pond's capacity has increased: 3079.79 cubic yards (4866.26 cubic meters).

When this exercise is complete, you may close the drawing. A saved copy of this drawing (1405_GradingThePond_FINISHED.dwg or 1405_GradingThePond_METRIC_FINISHED.dwg) is available from the book's web page.




Each piece of this pond is tied to the next, creating a dynamic model of your pond design on the basis of the designer's intent. Next, you will learn how to use grading groups to help grade the parking lot.

Building Curb and Gutter

Gradings are great for modeling curbs and gutters. For a standard curb and gutter, you would need two types of criteria:





- Criteria defining the gutter pan
- Criteria defining the face of curb

The first step is to create and grade the feature line that represents the top of curb. Apply criteria that define the face of curb.



Parameter	Value	Lock
Grading Method		
Target	Distance	
Distance	0.10'	
Projection	Relative Elevation	
Relative Elevation Projection		
Relative Elevation	-0.50'	
Conflict Resolution		
Interior Corner Overlap	Use Average Slope	

Then apply criteria that represent the gutter pan. You can apply a mix of catch and spill criteria. Just make sure you leave enough space in between each for transition.


The catch criteria could look like this.

Parameter	Value	Lock
Grading Method		
Target	Distance	
Distance	2.00'	
Projection	Slope	
Slope Projection		
Format	Slope	
Slope	12.00:1	
Conflict Resolution		
Interior Corner Overlap	Use Average Slope	


The spill criteria could look like this.

Parameter	Value	Lock
Grading Method		
Target	Distance	
Distance	2.00'	
Projection	Slope	
Slope Projection		
Format	Slope	
Slope	-12.00:1	
Conflict Resolution		
Interior Corner Overlap	Use Average Slope	

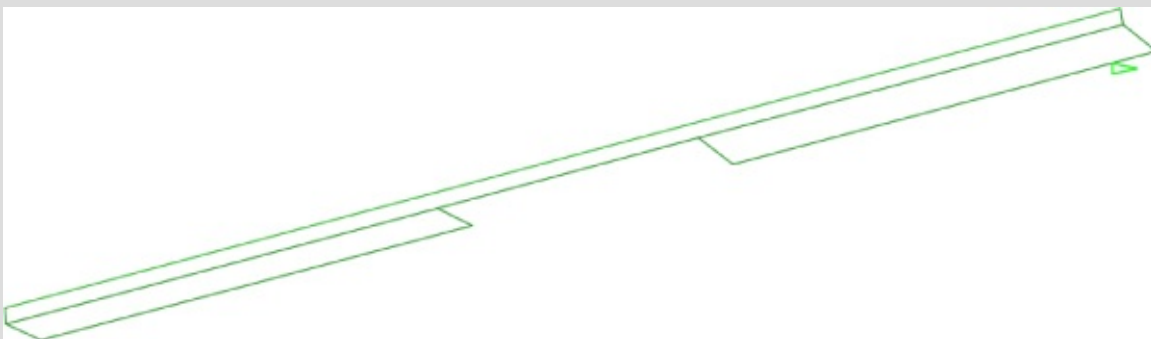
In the following example, catch criteria were applied to the left and spill criteria were applied to the right.



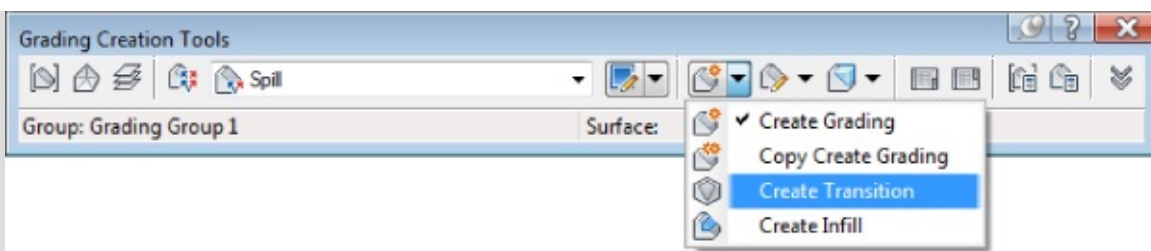Next, a transition was applied in between the gradings by expanding the Create Grading drop-down and selecting Create Transition from the Grading Creation Tools toolbar.



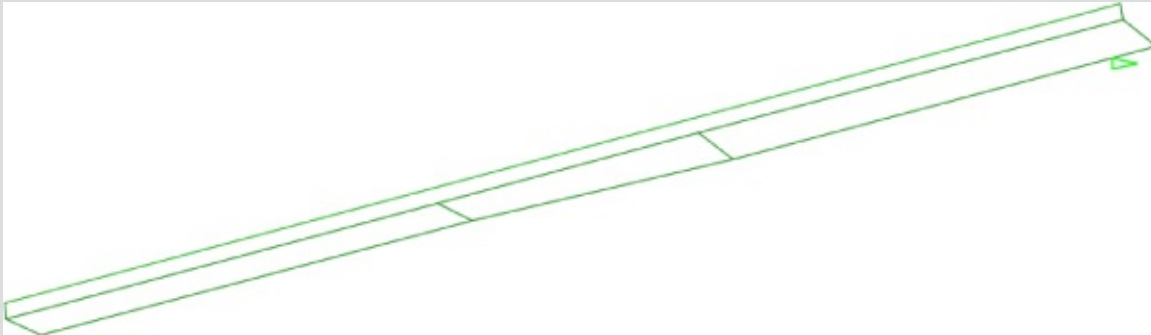The result is a transitional slope in between the two oppositely sloped gutter pans.




Using Gradings for Interim Surfaces

An interim surface is like a temporary surface in a way. It's a surface that is built for the purpose of extracting elevations. It's a stepping-stone to getting to the final solution. The Temp surface you built around the building a few exercises ago was an interim surface.


In this exercise, you will take a feature line and add a grading to both sides that projects outward at an upward slope of 1 percent. Then you will use the Elevations From Surface command to assign the elevations to portions of the parking lot feature line.

1. Open the 1406_GradingsAndInterimSurfaces.dwg or 1406_GradingsAndInterimSurfaces_METRIC.dwg file.

A bio-retention area will be placed between the two parking areas. The grading concept is to direct the flow toward the green feature line between the parking areas.

2. Select the green feature line between the parking areas.
3. On the contextual tab ► Launch Pad panel, select Grading Creation Tools.
4.  On the Grading Creation Tools toolbar, click Set The Grading Group.

- a. Set the Site Name to Temp2.

- b.  Click the Create A Grading Group button and in the Create Grading Group dialog under Name, enter **Temp2**.


- c. Fill the check box next to Automatic Surface Creation.

- d. Set the Surface Style to _No Display.

- e. Click OK to close.

- f. Click OK to accept the defaults in the Create Surface dialog.

- g. Click OK to close the Select Grading Group dialog.

5. On the Grading Creation Tools toolbar, set Grading Criteria to Grade To Distance.
 6.  On the Grading Creation Tools toolbar, click the Create Grading button.
 7. At the Select the feature: prompt, click the green feature line between the parking areas.
 8. At the Select the grading side: prompt, click to the north side of the feature line.
 9. At the Apply to entire length? [Yes No]: prompt, enter **Y** ↵.
 10. At the Specify distance: prompt, enter **80** (25 if metric) ↵.
 11. At the Format [Grade Slope]: prompt, enter **G** ↵.
 12. At the Grade: prompt, enter **1** ↵.
 13. Repeat steps 7 through 11 for the south side of the feature line.
 14. Press Esc to end the command and close the Grading Creation Tools.
- You now have an interim grading group surface built over the parking area, as shown in [Figure 14.38](#).

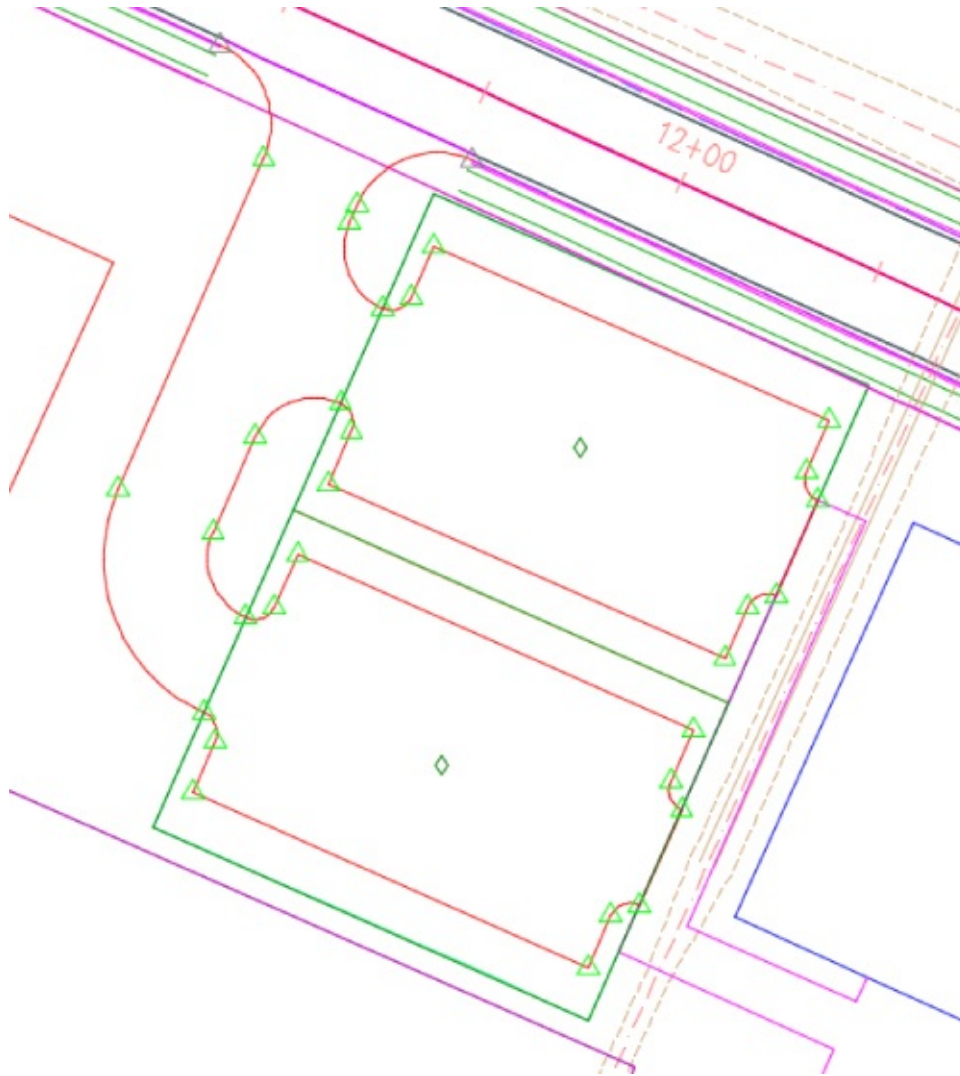


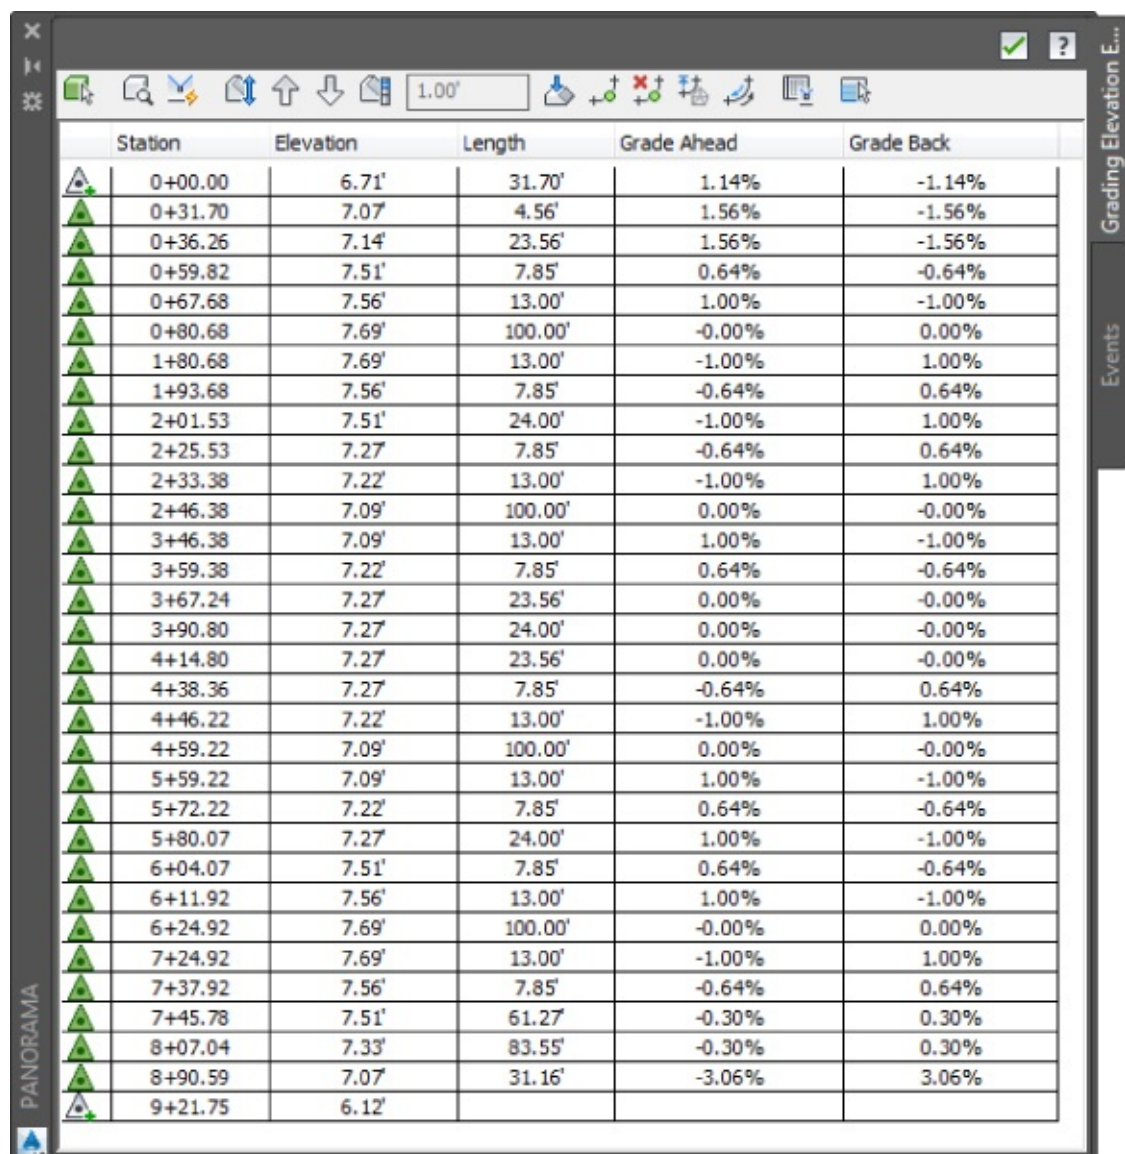


Figure 14.38 A grading group used as an interim surface built over the parking lot

15. Select the red feature line representing the edge of the parking lot.
16. On the contextual tab > Edit Elevations panel, select Elevation Editor.
17. Using the Shift key, select stations 0+59.82 through 3+67.24 (0+018.24 through 0+111.94 if metric).

18.  At the top of the Grading Elevation Editor, click the Elevations From Surface tool.
19. In the Select Surface dialog, choose Temp2.
20. Click OK to close.
21. Repeat steps 17 through 20 for stations 4+38.36 through 7+45.78 (0+133.62 through 0+227.32 if metric).
22. In the Grading Elevation Editor, select stations 0+31.70 through 0+59.82 (0+009.67 through 0+018.24 if metric).
23.  Click the Flatten Grades Or Elevations button.
24. In the Flatten dialog, select Constant Grade.
25. Click OK to close.
26. Repeat steps 22 through 25 for the following station ranges:
 - a. 3+67.24 through 4+38.36 (0+111.94 through 0+133.62 if metric)
 - b. 7+45.78 through 8+90.59 (0+227.32 through 0+271.46 if metric)

The Grading Elevation Editor should look something like [Figure 14.39](#).



	Station	Elevation	Length	Grade Ahead	Grade Back
▲	0+00.00	6.71'	31.70'	1.14%	-1.14%
▲	0+31.70	7.07'	4.56'	1.56%	-1.56%
▲	0+36.26	7.14'	23.56'	1.56%	-1.56%
▲	0+59.82	7.51'	7.85'	0.64%	-0.64%
▲	0+67.68	7.56'	13.00'	1.00%	-1.00%
▲	0+80.68	7.69'	100.00'	-0.00%	0.00%
▲	1+80.68	7.69'	13.00'	-1.00%	1.00%
▲	1+93.68	7.56'	7.85'	-0.64%	0.64%
▲	2+01.53	7.51'	24.00'	-1.00%	1.00%
▲	2+25.53	7.27'	7.85'	-0.64%	0.64%
▲	2+33.38	7.22'	13.00'	-1.00%	1.00%
▲	2+46.38	7.09'	100.00'	0.00%	-0.00%
▲	3+46.38	7.09'	13.00'	1.00%	-1.00%
▲	3+59.38	7.22'	7.85'	0.64%	-0.64%
▲	3+67.24	7.27'	23.56'	0.00%	-0.00%
▲	3+90.80	7.27'	24.00'	0.00%	-0.00%
▲	4+14.80	7.27'	23.56'	0.00%	-0.00%
▲	4+38.36	7.27'	7.85'	-0.64%	0.64%
▲	4+46.22	7.22'	13.00'	-1.00%	1.00%
▲	4+59.22	7.09'	100.00'	0.00%	-0.00%
▲	5+59.22	7.09'	13.00'	1.00%	-1.00%
▲	5+72.22	7.22'	7.85'	0.64%	-0.64%
▲	5+80.07	7.27'	24.00'	1.00%	-1.00%
▲	6+04.07	7.51'	7.85'	0.64%	-0.64%
▲	6+11.92	7.56'	13.00'	1.00%	-1.00%
▲	6+24.92	7.69'	100.00'	-0.00%	0.00%
▲	7+24.92	7.69'	13.00'	-1.00%	1.00%
▲	7+37.92	7.56'	7.85'	-0.64%	0.64%
▲	7+45.78	7.51'	61.27'	-0.30%	0.30%
▲	8+07.04	7.33'	83.55'	-0.30%	0.30%
▲	8+90.59	7.07'	31.16'	-3.06%	3.06%
▲	9+21.75	6.12'			

Figure 14.39 Grading Elevation Editor after applying elevations from interim surface

When this exercise is complete, you may close the drawing. A saved copy of this drawing (1406_GradingsAndInterimSurfaces_FINISHED.dwg or 1406_GradingsAndInterimSurfaces_METRIC_FINISHED.dwg) is available from the book's web page.


Finishing Touches

You've just completed some basic grading tasks focusing on the tennis courts, building and pool area, pond, and parking area as separate components. Now it is time to bring the components together in a finished grade surface model. Once the surface model is created, you'll be able to see which areas will need further attention.

1. Open the 1407_FinishingTouches.dwg or 1407_FinishingTouches_METRIC.dwg file.

The sidewalk grades were set from a surface (Temp) that was created by projecting a slope of 2 percent downward and away from the building. The parking lot elevations at the four PIs that coincide with the edge of sidewalk were set by another method. You want these elevations to match. So you will apply the elevations from the surface called Temp to these PIs.

2. Select the parking lot feature line.
3. On the contextual tab ► Edit Elevations panel, select Elevation Editor.

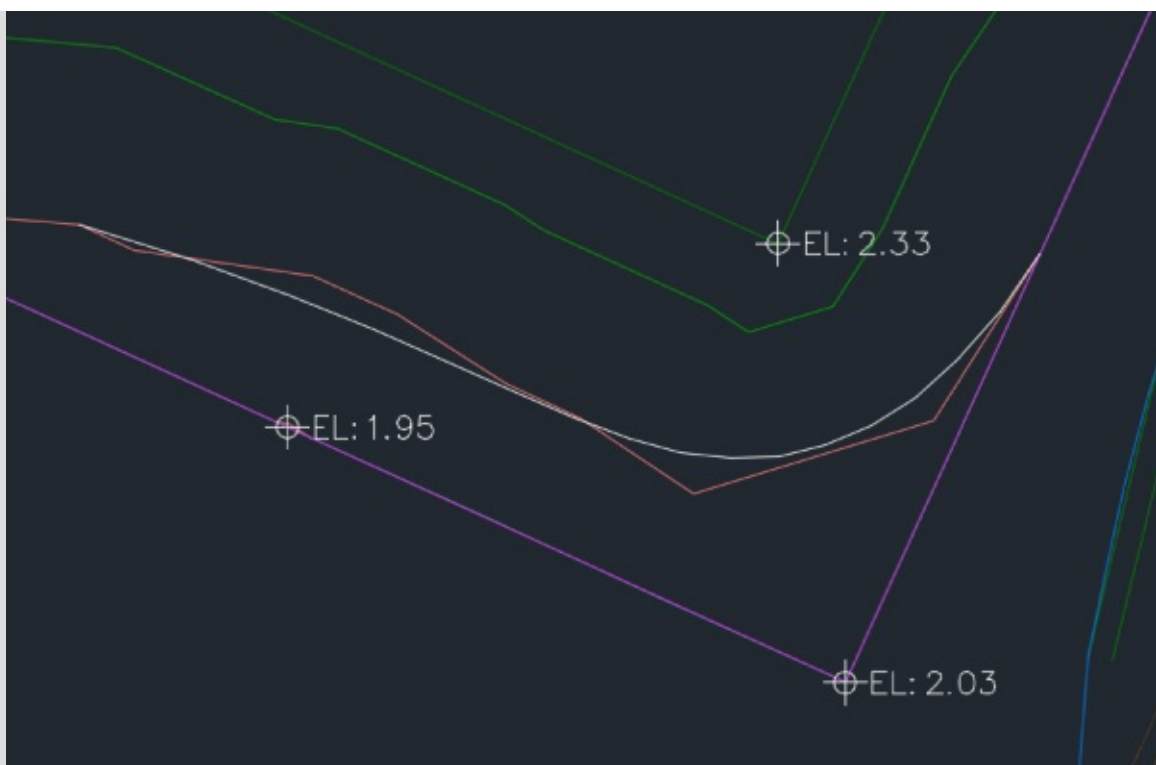
4. With the Shift key, select stations 2+01.53 through 2+25.53 (0+061.43 through 0+068.75 if metric).
5. At the top of the Grading Elevation Editor, click the Elevations From Surface tool.
6. In the Select Surface dialog, choose Temp.
7. Click OK to close.
8. Repeat steps 4 through 7 for stations 5+80.07 through 6+04.07 (0+176.81 through 0+184.13 if metric).
9. Close the Grading Elevation Editor.
10. Select the feature lines representing the tennis court (red), the parking lot (red), the edge of concrete (magenta), the building (blue), and the pool (green).
11. On the contextual tab ► Modify panel, select Add To Surface As Breakline.
12.  In the Select Surface dialog, click the plus sign to add a surface.
13. In the Create Surface dialog, enter **Finished Grade** for the surface name.
14. Click OK to close the Create Surface dialog.
15. Click OK to close the Select Surface dialog.
16. In the Add Breaklines dialog, do the following:
 - a. Enter **Site Features** for Description.
 - b. Under Supplementing Factors, fill the Distance check box and configure a supplementing distance of **25'** (**8 m** if metric).
 - c. Under Mid-ordinate Distance, enter **0.1'** (**0.03 m** if metric).
 - d. Click OK to close the Panorama Event Viewer.
17. Press Esc to deselect.

Overcoming Crooked Contours


Sometimes, no matter how hard you try, the finished grade contours generated from your grading will not be picture perfect. Here is a trick to overcome that when other methods of smoothing are not working in your favor:

1. Draw a polyline in the shape of the contour you want. Be sure to assign it the correct elevation.
2. Add it to the surface as a contour.

Before:



After:

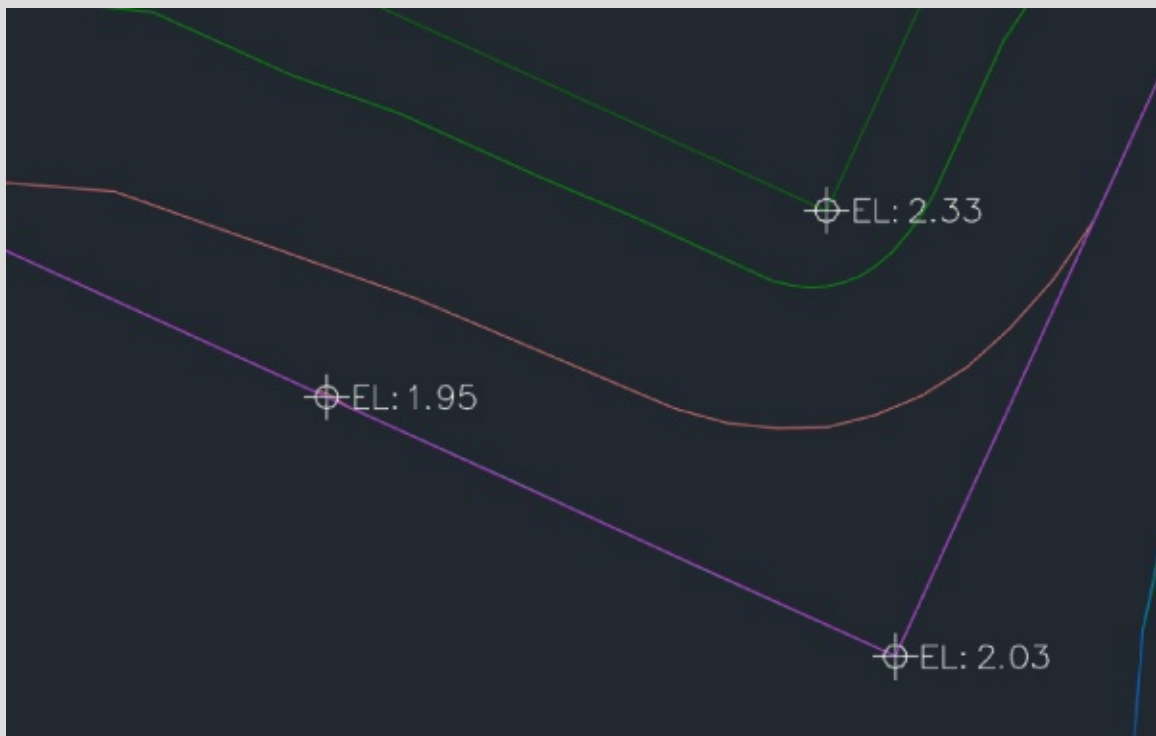

You have just set up your finished grade surface model. To make it even more user friendly, add some surface labels.

18. Select the surface by clicking the green surface border.
 19. On the contextual tab > Labels & Tables panel, select Add Labels > Spot Elevations.
 20. Click the building corners, pavement corners, sidewalk corners, and any other location where you'd like a reading on the elevation value. Press Esc twice when you have finished placing spot elevations.
- Your drawing should look something like [Figure 14.40](#).

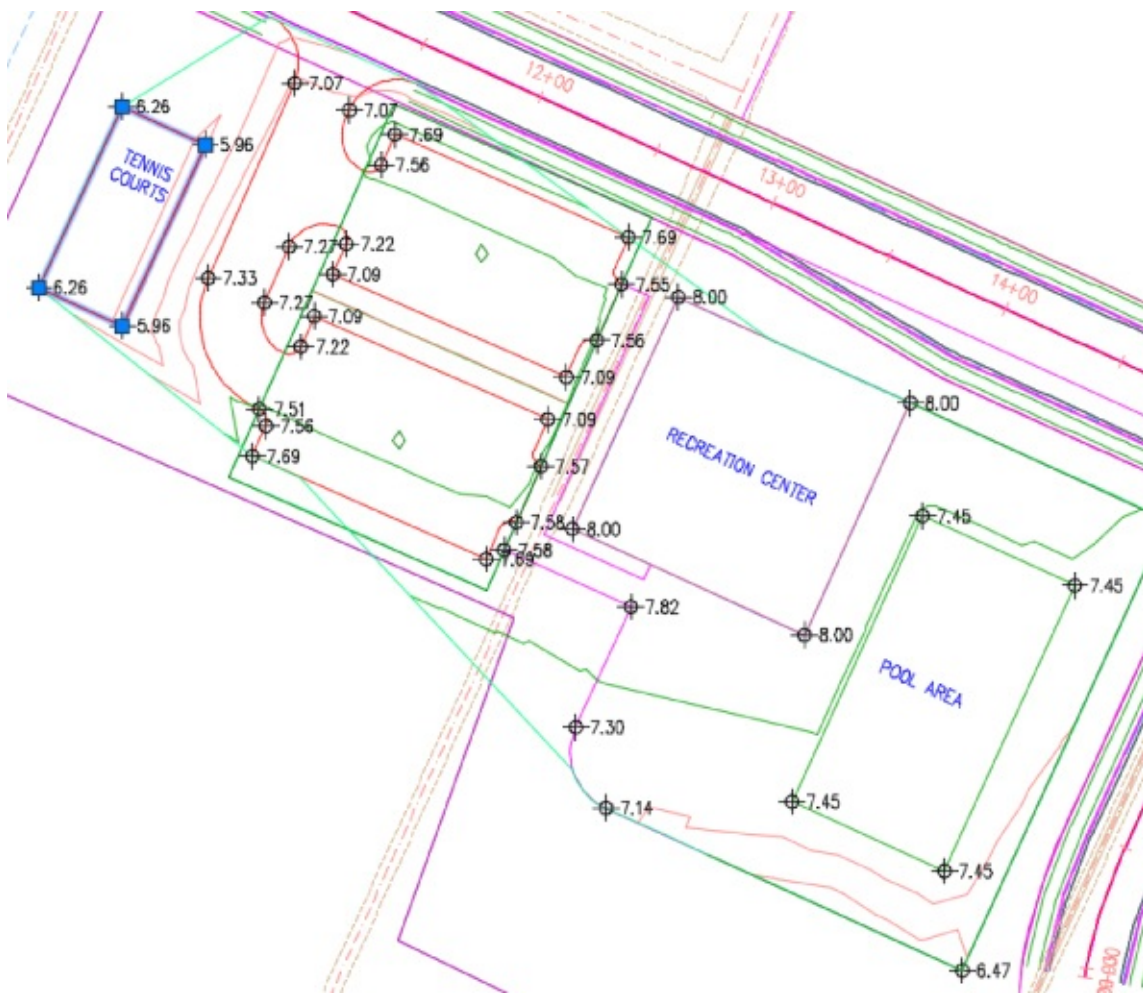


Figure 14.40 Finished grade surface model with dynamic elevation labels

Now that the model is built, you can see how the different feature lines are contributing to the surface grades and can make some adjustments.

1. On Prospector, expand the Surfaces branch.
2. Right-click Finished Grade and select Rebuild - Automatic.
- It appears that the grade for the tennis courts was set too low.
3. Select the red feature line representing the tennis courts.
4. On the contextual tab > Edit Elevations tab, select Raise/Lower.
5. At the Specify elevation difference: prompt, enter **1.5 (0.5 if metric)** ↵.

The surface updates, as shown in [Figure 14.41](#).

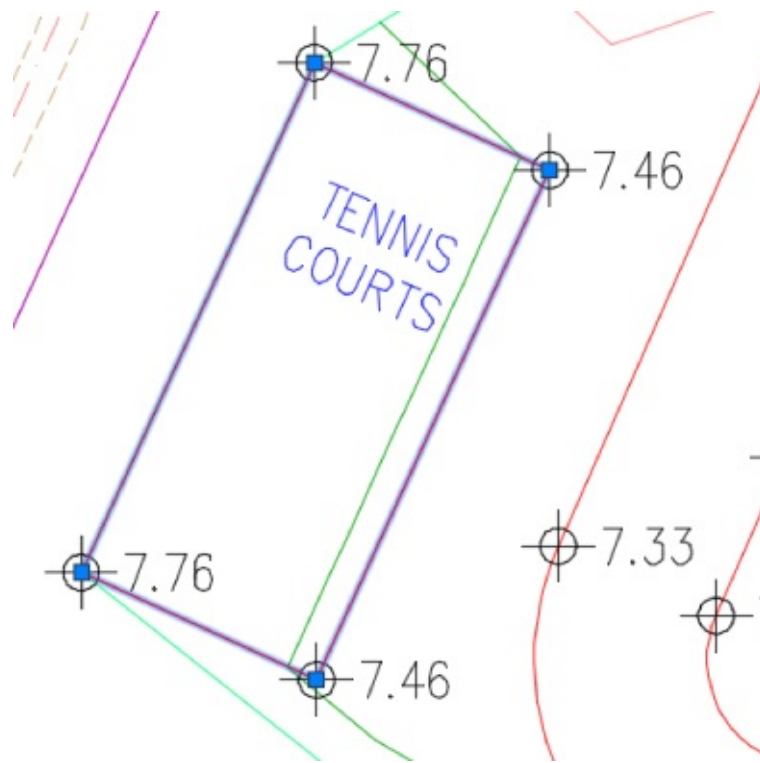


Figure 14.41 Updated surface after raising the tennis courts feature line

You can use any of the tools that were introduced to you in the chapter on the feature lines for this site to add high/low points or adjust elevations and grades. Feel free to experiment further with this file.

When this exercise is complete, you may close the drawing. A saved copy of this drawing (1407_GradingFinishingTouches_FINISHED.dwg or 1407_GradingFinishingTouches_METRIC_FINISHED.dwg) is available from the book's web page.

The Bottom Line

Convert existing linework into feature lines. Many site features are drawn initially as simple linework for the 2D plan. By converting this linework to feature line information, you avoid a large amount of rework. Additionally, the conversion process offers the ability to drape feature lines along a surface, making further grading use easier.

Master It Open the MasterIt_1401.dwg or MasterIt_1401_METRIC.dwg file from the book's web page. Convert the magenta polyline, describing a proposed temporary swale, into a feature line and drape it across the EG surface to set elevations, and set intermediate grade break points.

Model a simple breakline with a feature line. Feature lines define linear slope connections or, in other words, breaklines. This can be the flow of a drainage channel, the outline of a building pad, or the back of a street curb. These linear relationships can help define grading in a model or simply enhance understanding of design intent.

Master It Edit the radius of the curve on the feature line you just created to be 100' (30 m). Set the grade from the west end of the feature line to the next PI to 4 percent, and set the remainder to a constant slope to be determined in the drawing. Draw a temporary profile view to verify that the channel is below grade for most of its length.

Model planar site features with grading groups. Once a feature line defines a linear feature, gradings collected in grading groups model the slope projections from that line to other points in

space. These projections can be combined to model a site much like a TIN surface, producing a dynamic design tool.

Master It Use grading criteria to define the pilot channel, with grading on both sides of the sketched centerline. Define the channel using a Grading To Distance of 5' (1.5 m) with a slope of 3:1, and connect the channel to the EG surface using a grading with slopes that are 4:1. Generate a surface from the grading group. If prompted, do not weed the feature line.

Chapter 15

Plan Production

So you've toiled for days, weeks, or maybe months creating your design in the Autodesk® AutoCAD® Civil 3D® program, and now it's time to share it with the world—or at least your corner of it. Even in this digital age, paper plan sets still play an important role. You generate these sheets in Civil 3D using the Plan Production feature. This chapter takes you through the steps necessary to create a sheet set, including viewport planning, generating sheets, data management, and publishing.

In this chapter, you will learn to

- Create view frames
- Edit view frames
- Generate sheets and review Sheet Set Manager
- Create section views

Preparing for Plan Sets

Plan Production tools enable you to quickly create sheet files by automating a process you have been doing manually for years. Creating layouts, creating and orienting your viewports, inserting and filling in title blocks, establishing external and data references, creating match lines, inserting north arrows, and setting up Sheet Set Manager are all menial but necessary tasks you must undergo in order to publish your design to paper. Before you can put Plan Production tools into action, you need to address some prerequisites. Let's examine those components first.

Prerequisite Components

The Plan Production feature uses several components to create a sheet set. This chapter will explore these elements in detail, but for now, we'll take a brief look at what the components are.

Drawing Template Plan Production creates new layouts for each sheet in a plan set. To do this, the feature uses drawing templates with predefined layout tabs. These layout tabs contain a suitable border and up to two scaled viewports with configured types of plan, profile, or section.

For the exercises in this chapter, the default location for the final sheets will be C:\Mastering\Ch15\FinishedSheets. It is recommended that you download all of the files (www.sybex.com/go/masteringcivil3d2015) and place them in the C:\Mastering\Ch15 folder.

Object and Display Styles Plan Production generates the following objects: view frames, view frame groups, match lines, and section sheets. Before creating plan sheets, you'll want to make sure you have styles set up for each of these objects. Section view group plot styles are associated with section sheet objects.

Alignments and Profiles The Plan Production feature is used primarily for creating plan and profile views. For this to happen, your drawing must contain (or data reference) at least one alignment and profile. You must also have a sheet template ready with associated plan and profile viewports. You can produce plan-only or profile-only sheets if desired as long as you prepare a sheet template layout

that supports single-plan or -profile viewports. Plan Production tools cannot produce sheet files with two or more viewports of the same type.

Sample Lines and Sections Creating section sheets requires an alignment, a sample line group, cross sections, a group plot style, and a sheet template with associated section viewports.

With these elements in place, you're ready to dive in and create some sheets. The general steps in creating a plan set are as follows:

1. Meet the prerequisites listed previously.
2. Create view frames.
3. Create plan or plan-profile sheets.
4. (Optional) Create section view groups.
5. (Optional) Create section sheets.
6. Manage the sheets using Sheet Set Manager.
7. Plot or publish (hard copy or digitally).

The next sections describe this process in detail and the tools used in Plan Production. Sheet Set Manager, which is found in basic AutoCAD, is an integral part of this process.

Using View Frames and Match Lines

When you create sheets using the Plan Production tools, Civil 3D first automatically helps you divide your alignment into areas that will fit on your plotted sheet and display at the desired scale. To do this, Civil 3D creates a series of rectangular frames placed end to end (or slightly overlapping) along the length of alignment, like those in [Figure 15.1](#). These rectangles are referred to as *view frames* and are automatically sized and positioned to meet your plan sheet requirements. This collection of view frames is referred to as a *view frame group*. Where the view frames overlap one another, Civil 3D creates *match lines* that establish continuity from frame to frame by referring to the previous or next sheet in the completed plan set. View frames and match lines are created in Model Space, using the prerequisite elements described in the previous section.

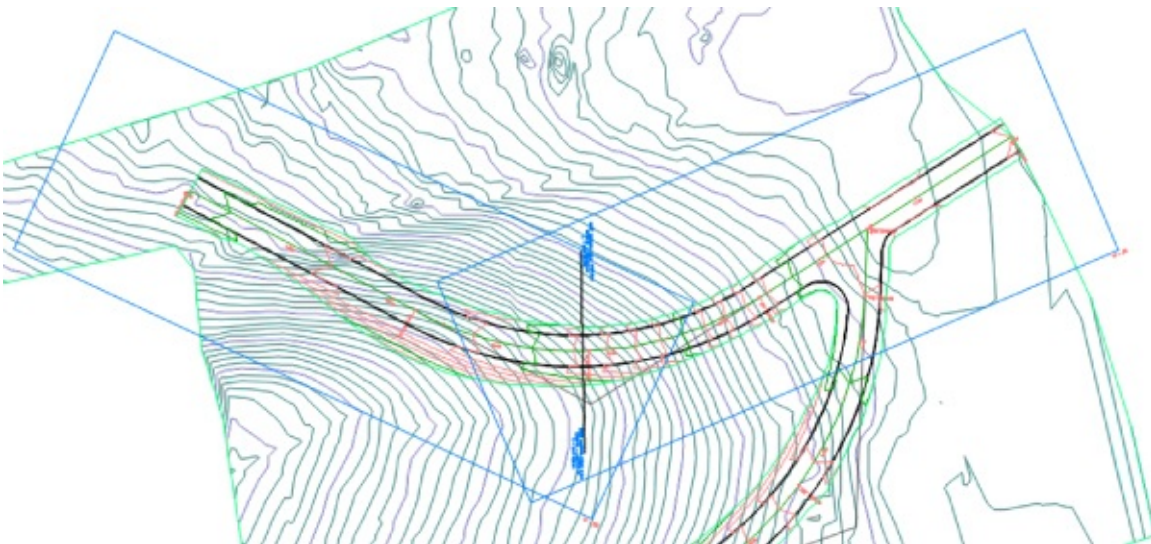


Figure 15.1 View frames and match lines

The Create View Frames Wizard

Certification Objective

The first step in the process of creating plan sets is to generate view frames. Civil 3D provides an intuitive wizard that walks you through each step of the view frame creation process. Let's look at the Create View Frames Wizard and the various page options. After you've seen each page, you'll have a chance to put what you've learned into practice in an example.



From the Output tab > Plan Production panel, choose Create View Frames to launch the Create View Frames Wizard ([Figure 15.2](#)). The wizard consists of several pages. A list of these pages is shown along the left sidebar of the wizard, and an arrow indicates which page you're currently viewing. You move among the pages using the Next and Back navigation buttons along the bottom of each page. Alternatively, as with all wizards, you can jump directly to any page by clicking its name in the list on the left. The following sections walk you through the pages of the wizard and explain their features.

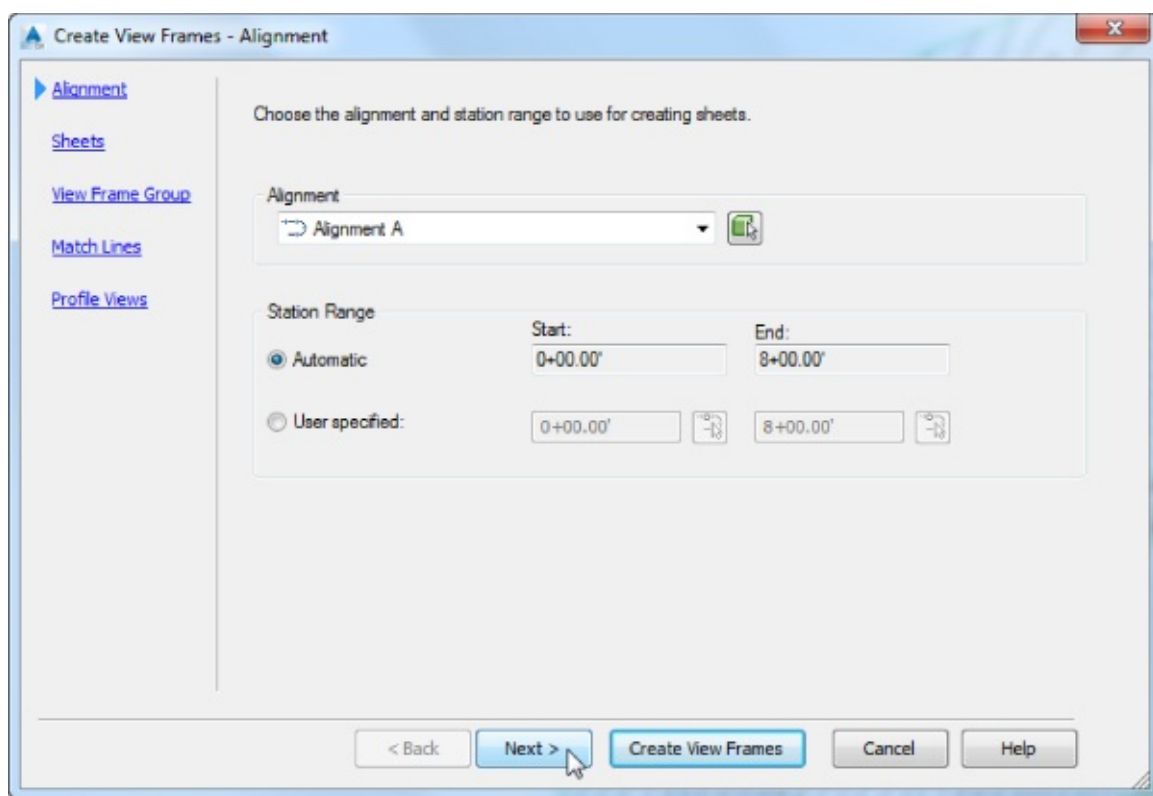


Figure 15.2 The Create View Frames – Alignment wizard page

Create View Frames – Alignment Page

You use the first page of the Create View Frames Wizard (shown previously in [Figure 15.2](#)) to select the alignment and station range along which the view frames will be created.



Alignment In the top area of this page, you select the alignment along which you want to create view frames. You can either select it from the drop-down list or click the Select From The Drawing button to select the alignment on screen.



Station Range In the Station Range area of the page, you define the station range over which the frames will be created. Selecting Automatic creates frames from the alignment start to the alignment end. Selecting User Specified lets you define a custom range, either by keying start and end station

values in the appropriate box or by clicking the button to the right of the station value fields and graphically selecting the station from the drawing.

An example of when you would want to select specific stations is if you have a subdivision that will be constructed in phases. You have designed an entire roadway but need to only create specific sheets for a specific phase.

Create View Frames – Sheets Page

You use the second page of the Create View Frames Wizard ([Figure 15.3](#)) to establish the sheet type and the orientation of the view frames along the alignment. A plan production *sheet* is a layout tab in a drawing file. To create the sheets, Civil 3D references a predefined drawing template (with the filename extension .dwt). As mentioned earlier, the template must contain layout tabs, and in each layout tab the viewport's Viewport Properties options must be set to either Plan or Profile. Each viewport must have an appropriate scale assigned. Later in this chapter, you'll learn about editing and modifying templates for use in Plan Production.

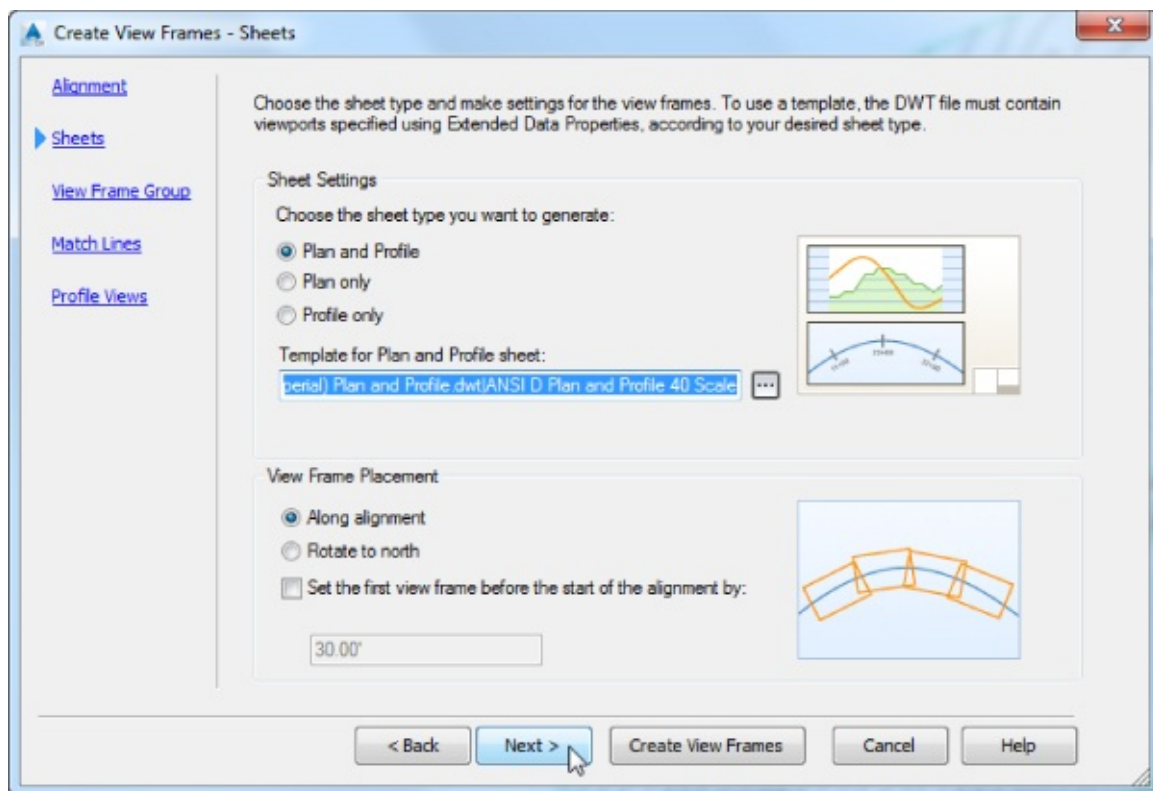


Figure 15.3 Create View Frames – Sheets wizard page

Sheet Settings

The Plan Production feature provides options for creating three types of sheets:

Plan And Profile This option generates a sheet with two viewports; one viewport shows a plan view and the other shows a profile view of the section of the selected alignment segment.

Plan Only As the name implies, this option creates a sheet with a single viewport showing only the plan view of the selected alignment segment.

Profile Only Similar to Plan Only, this option creates a sheet with a single viewport, showing only the profile view of the selected alignment segment.

Informational Graphics

Did you notice the nifty graphic to the right of the sheet-type options in [Figure 15.3](#)? This image changes depending on the type of sheet you've selected. It provides a schematic representation of the sheet layout to further assist you in selecting the appropriate sheet type. You'll see this type of graphic image throughout the Create View Frame Wizard and in other wizards used in Civil 3D.

After choosing the sheet type, you must define the template file and the layout tab within the selected template that Civil 3D will use to generate your sheets. Several predefined templates ship with Civil 3D and are part of the default installation. Be sure to choose the sheet type before selecting the template so that layouts associated with that sheet type will be displayed and selectable. Follow these steps:

1.  Click the ellipsis button on this page to display the Select Layout As Sheet Template dialog, shown in [Figure 15.4](#).

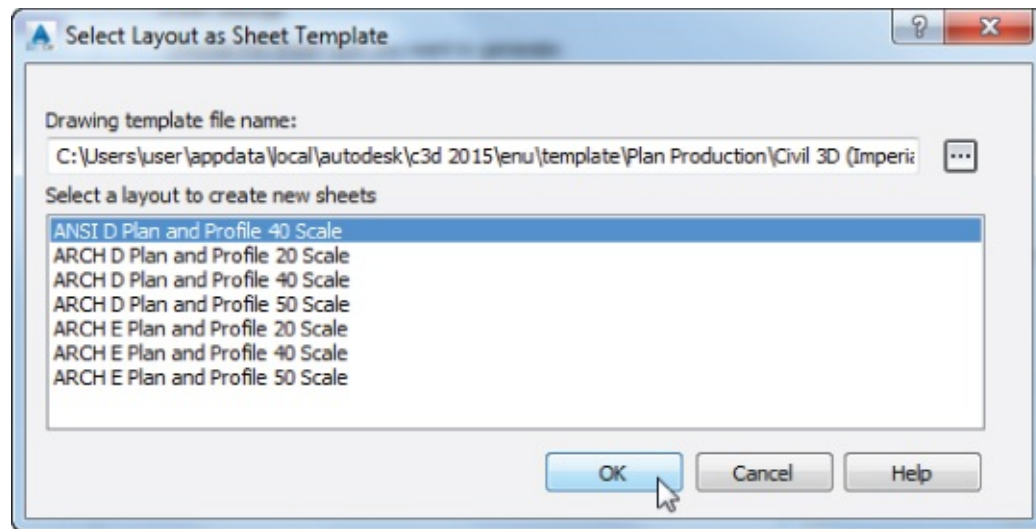


Figure 15.4 Use the Select Layout As Sheet Template dialog to choose which layout you would like to apply to your newly created sheets.

This dialog provides the option to select the DWT file and the layout tab within the template.

2. Click the ellipsis button in the Select Layout As Sheet Template dialog to browse to the desired template location.

Typically the default template location is

C:\Users\<username>\AppData\Local\Autodesk\C3D 2015\enu\Template\Plan Production\

3. Alternatively, if you are working in a network environment, your templates can be kept in a common folder on the network.

After you select the template you want to use, a list of the layouts that contain the appropriate viewports contained in the DWT file appears in the Select Layout As Sheet Template dialog.

4. Choose the appropriate layout.

Notice that in the template selected (see [Figure 15.4](#)) there are layouts for various sheet sizes as well

as various scales that are included in the Plan Production templates that ship with Civil 3D.

View Frame Placement

Your view frames can be placed in one of two ways: either along the alignment or rotated to north. Use the bottom area of the Sheets page of the wizard to establish the placement.

Along Alignment This option aligns the long axes of the view frames parallel to the alignment. Refer to the graphic to the right of the radio buttons in the dialog for a visual representation. This graphic is shown at the left in [Figure 15.5](#).

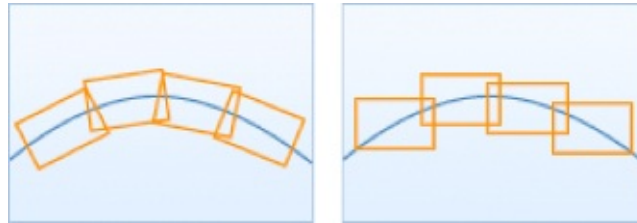


Figure 15.5 View Frame Placement shown using the Along Alignment option (left) and the Rotate To North option (right)

Rotate To North As the name implies, this option aligns the view frames so they're all rotated to the north direction, regardless of the changing rotation of the alignment centerline. *North* here is synonymous with the True North according to the world coordinate system. This graphic is shown at the right in [Figure 15.5](#).

Twisted North

If you want the north arrow to rotate according to the view twist of the viewports that are created, the block that is being used for the north arrow must be included in the template and must be located in the layout. You will have a place to select this block within the creation of sheets.

Set The First View Frame Before The Start Of The Alignment By

Regardless of the view frame placement you choose, you have the option to place the first view frame some distance before the start of the alignment. This option is useful if you want to show a portion of the site, such as an existing offsite road, in the plan view. When this option is selected, the text box becomes active, letting you enter the desired distance.

Create View Frames – View Frame Group Page

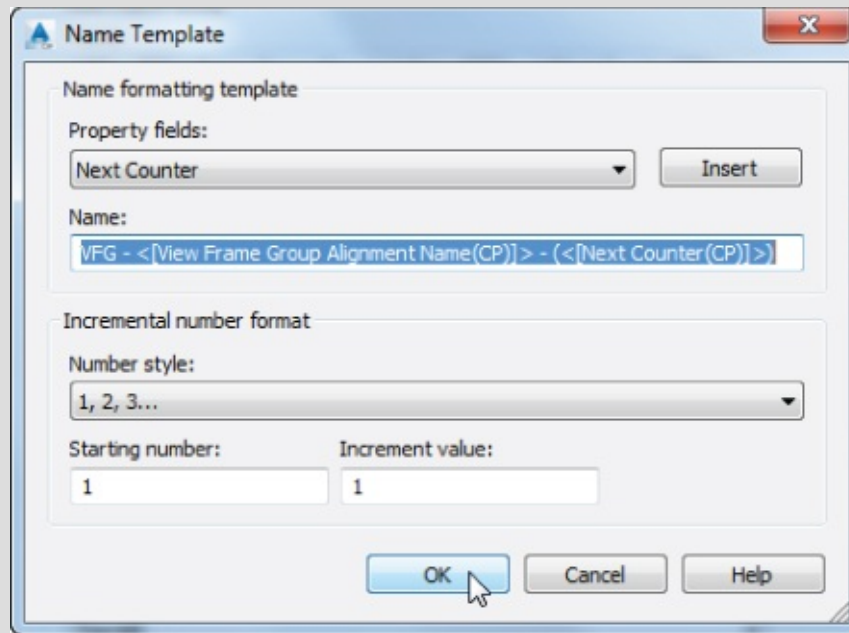
You use the third page of the Create View Frames Wizard ([Figure 15.6](#)) to define creation parameters for your view frames and the view frame group to which they'll belong. The page is divided into two areas: the top for the view frame group and the bottom for the view frames themselves.



View Frame Group Use this area of the View Frame Group page to set the name and an optional description for the view frame group. The name can consist of manually entered text, text automatically generated based on the Name template settings, or a combination of both.

Name Template

To adjust the Name template settings, in the Create View Frames - View Frame Group dialog, click the Edit View Frame Group Name button to open the Name Template dialog, shown here.



With the settings shown previously in [Figure 15.6](#), the name will include manually defined prefix text (VFG -) followed by automatically generated text, which inserts the view frame group alignment name and a sequential counter number. This will result in a view frame group name of, for example, VFG - Frontenac Drive - 1.

The Name Template dialog box isn't unique to the Plan Production feature. However, the property fields available vary depending on the features to be named. If you need to reset the incremental number counter, use the text box in the lower area of the Name Template dialog box. You can change the increment value in the Name Template dialog box as well.



View Frame Use this area of the View Frame Group page to set various parameters for the view frames, including the layer for the frames, view frame names, view frame object and label styles, and the label location. Each view frame can have a unique name (using an incremental counter), but the other parameters are the same for all view frames.

Layer This option defines the layer on which the view frames are created. This layer is defined in the Drawing Settings dialog, but you can override it by clicking the Layer button and selecting a different layer. Setting the view frame layer to No-Plot will ensure that your drawing does not end up plotting with unwanted rectangles.

Name The Name setting is nearly identical in function to that of the View Frame Group Name setting discussed earlier. With the settings shown previously in [Figure 15.6](#), the default naming results would be VF - 1, VF - 2, and so on.

Style Like nearly all objects in Civil 3D, view frames have styles associated with them. The view frame style is simple, with only one component: the view frame border. You use the drop-down list to select a predefined style.

Label Style Also like most other Civil 3D objects, view frames have label styles associated with them. And like other label styles, the view frame labels are created using the Label Style Composer and can contain a variety of components.

Label Location The last option on this page lets you set the label location. The default feature setting places the label at the top left of the view frame.

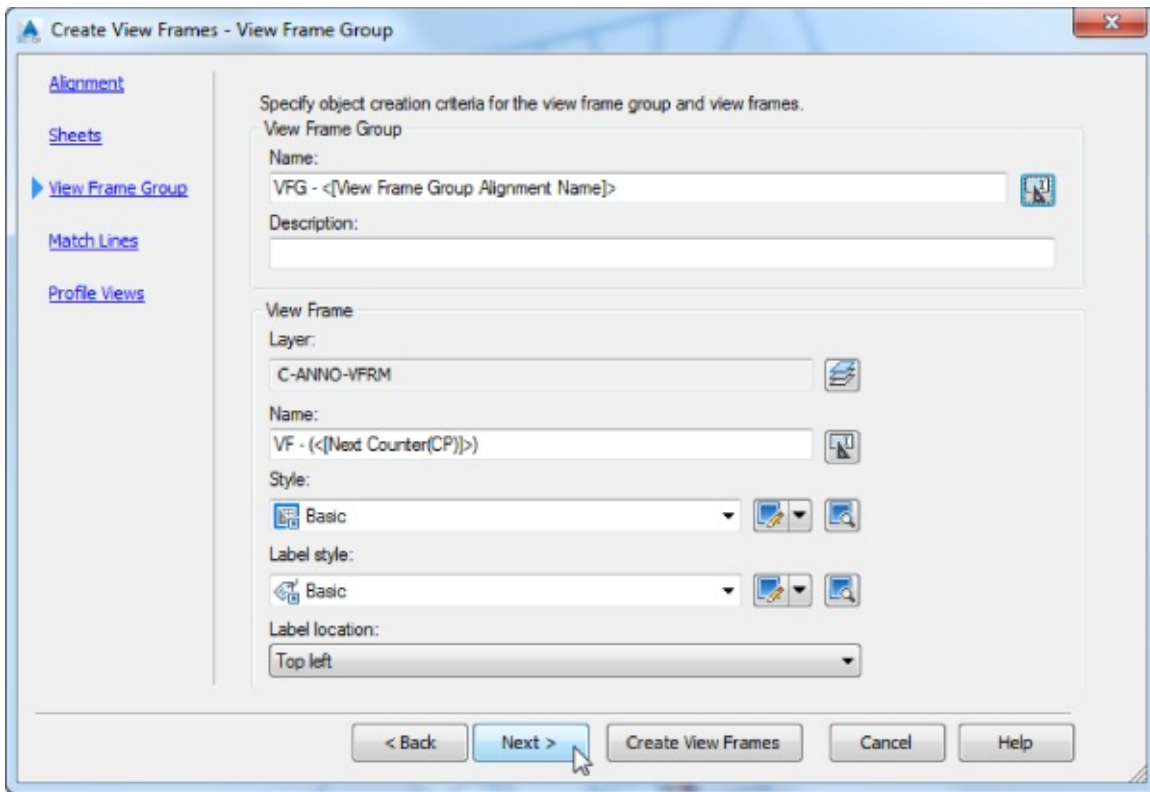


Figure 15.6 Create View Frames – View Frame Group wizard page

For view frame labels placed at the top of the frame, the term *top* is relative to the frame's orientation. For alignments that run left to right across the page, the top of the frame points toward the top of the screen. For alignments that run right to left, the top of the frame points toward the bottom of the screen.

Create View Frames – Match Lines Page

You use the fourth page of the Create View Frames Wizard ([Figure 15.8](#)) to establish settings for match lines. Match lines are used to maintain continuity from one sheet to the next. They're typically placed at or near the edge of a sheet, with instructions like “See Sheet XX” for continuation.

Insert Match Lines You have the option to automatically insert match lines. Match lines are used only for plan views, so if you're creating Plan And Profile or Plan Only sheets, the option is automatically selected and can't be deselected.

Positioning Use this area of the Match Lines page to define the initial location of the match lines and provide the ability to later move or reposition the match lines.

Snap Station Value Down To The Nearest By selecting this option, you override the drawing station settings and define a rounding value specific to match line placement. With the settings shown previously in [Figure 15.8](#), a value of 1 is entered, resulting in the match lines being placed at the nearest whole station. For example, if the station was 8+14.83 and the value was 1, it would round down to 8+14, but for the same station, if the value was set to either 50 or 100, it would round down to 8+00.

This feature always rounds down (snap station down as opposed to snap station up). The exception to this is that if the rounding would put the match line at an undesirable location (such as before the previous match line or before the beginning of the alignment), then no rounding would be performed and the calculated station would be used.

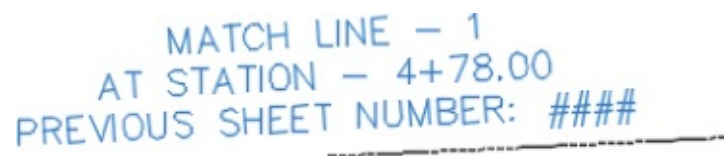
Allow Additional Distance For Repositioning (Increases View Overlap) Selecting this option activates the text box, allowing you to enter a distance by which the views on adjacent sheets will overlap and the maximum distance that you can move a match line from its original position within the overlap area. While the match line locations are originally created automatically, there are going to be instances when you will want to move the match line if it bisects a critical location. Any value entered will decrease the station range between match lines.

Match Line Use this area of the Match Lines page to provide the settings for the match line. This area is similar to those for view frames on the previous page of the wizard. You can define the layer, the name, and the style.

With the settings shown previously in [Figure 15.8](#), the match lines will be named using a predefined text (ML -) and a next counter: ML - 1, ML - 2, ML - 3, and so on.

Labels The options in this area of the Match Line page are also similar to those for view frames. Different label styles are used to annotate match lines located at the left and right sides of a frame. This lets you define match-line label styles that reference either the previous or next station adjacent to the current frame. You can also set the location of each label independently using the Left and Right Label Location drop-down lists. You have options for placing the labels at the start, end, or middle of the match line or at the point where the match line intersects the alignment.

With the settings shown previously in [Figure 15.8](#), the label style for use at the left match line is shown in [Figure 15.7](#). This Basic Left label style uses the Match Line Number, Match Line Station value, and Previous Sheet Number.



MATCH LINE - 1
AT STATION - 4+78.00
PREVIOUS SHEET NUMBER: ####

[Figure 15.7](#) An example match line label style

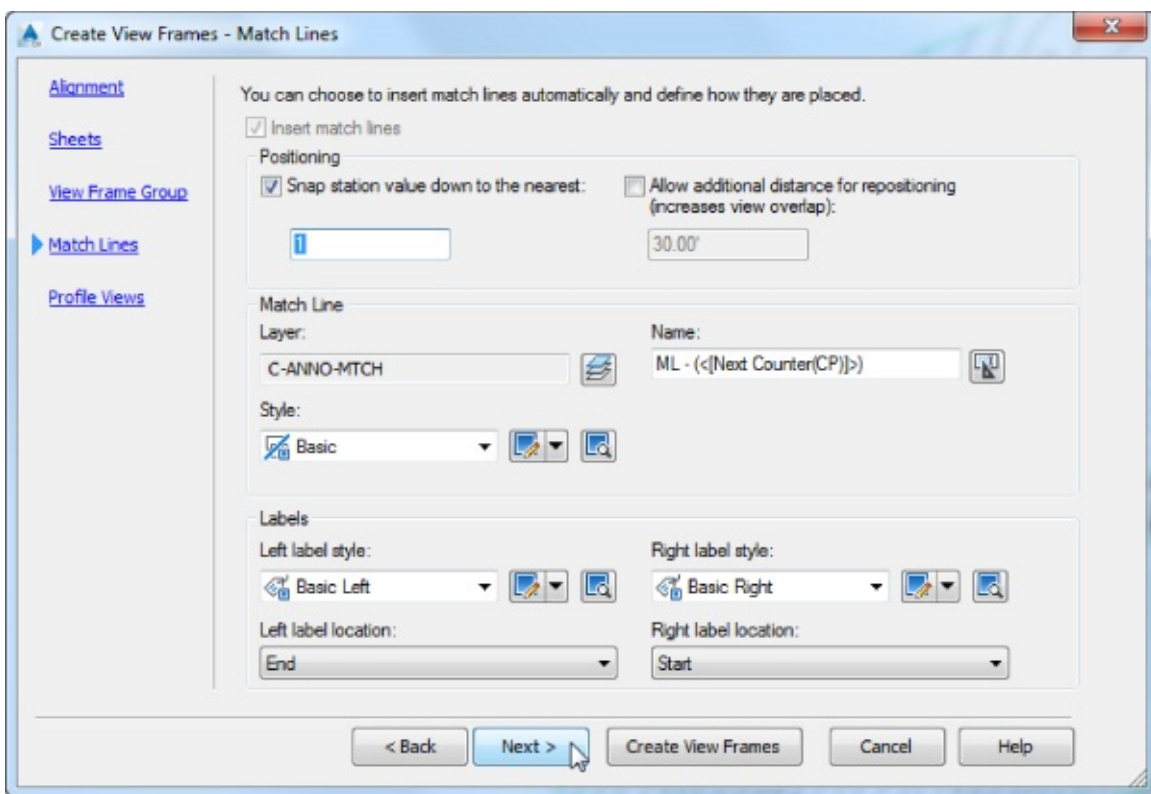


Figure 15.8 Create View Frames – Match Lines : wizard page

Create View Frames – Profile Views Page

The final page of the Create View Frames Wizard ([Figure 15.9](#)) is optional and will be disabled and skipped if you chose to create Plan Only sheets on the Sheets page of the wizard. Use the drop-down lists to select both the profile view style and the band set style. These styles will be discussed in Chapter 19, “Object Styles.”

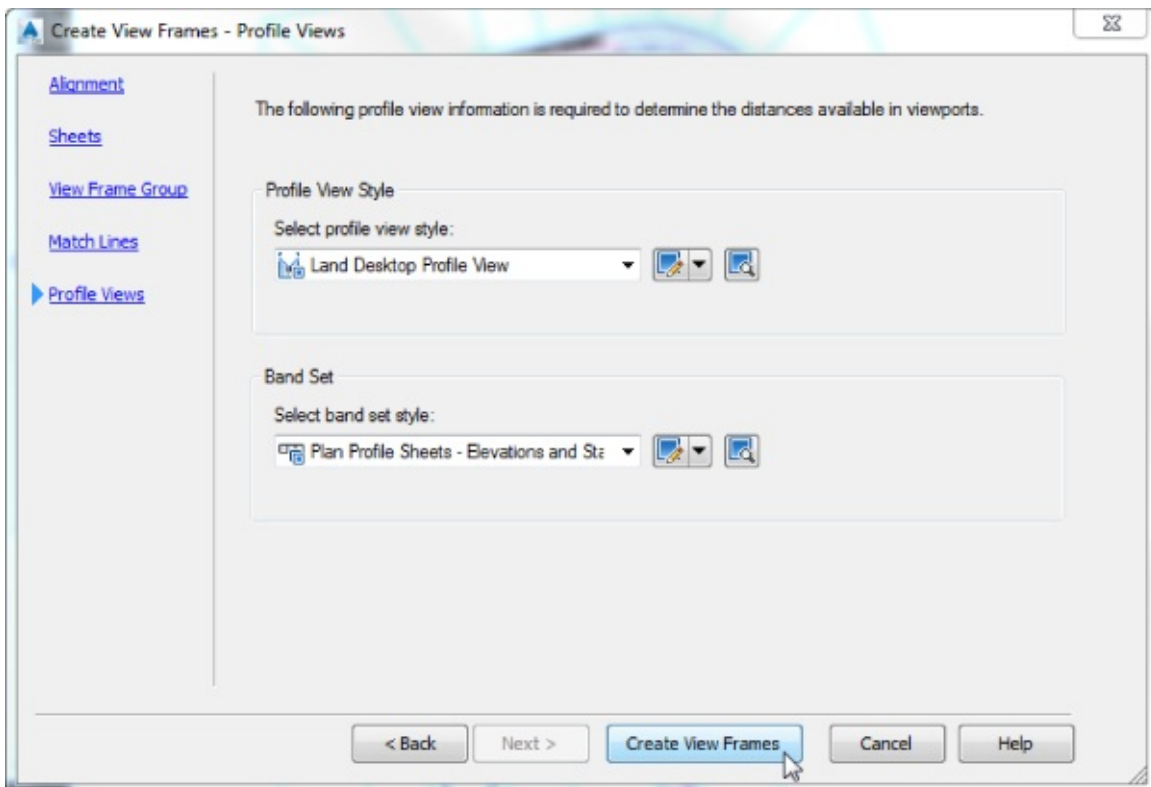


Figure 15.9 Create View Frames – Profile Views wizard page

Civil 3D Plan Production tools use the settings in the profile view style and band styles to determine

placement of the profile view in the viewport, sometimes disregarding station labels below the profiles. For that reason often it is necessary to force the program to boost the profile view higher in the viewport by adding a “white space” band. This would be an invisible band of a certain height. Even though you can't see the band, Civil 3D provides space for it in the viewport.

This last page of the wizard has no active Next button since this is the last page. Complete the creation of the view frames, by clicking the Create View Frames button.

Creating View Frames

Now that you understand the wizard pages and available options, you'll try them out in this exercise:

1. Open the 1501_ViewFrameWizard.dwg (1501_ViewFrameWizard_METRIC.dwg) file. (Remember, all data can be downloaded from www.sybex.com/go/masteringcivil3d2015.)

This drawing contains several alignments and profiles as well as styles for view frames, view frame groups, and match lines.

2. To launch the Create View Frames Wizard, from the Output tab ➤ Plan Production panel, choose Create View Frames.
3. On the Alignment page, do the following:
 - a. Select Frontenac Drive from the Alignment drop-down list.
 - b. For Station Range, verify that Automatic is selected.
 - c. Click Next to advance to the next page.
4. On the Sheets page, do the following:
 - a. In the Sheet Settings area, select the Plan And Profile option.
 - b. Under Template For Plan And Profile Sheet, click the ellipsis button to display the Select Layout As Sheet Template dialog.
 - c. In the Select Layout As Sheet Template dialog, click the ellipsis button and browse to the templates in the chapter folder: C:\Mastering\Ch15\.
 - d. Select the template named MasteringPandPTemplate.dwt (or MasteringPandPTemplate_Metric.dwt), and click Open.

A list of the layouts in the DWT file appears in the Select Layout As Sheet Template dialog.
 - e. Select the layout named ARCH D Plan And Profile 20 Scale (or ISO A1 Plan and Profile 1 to 500 for metric users), and click OK to dismiss the Select Layout As Sheet Template dialog.
 - f. In the View Frame Placement area, select the Along Alignment option.
 - g. Select the Set The First View Frame Before The Start Of The Alignment By option.

Note that the default value for this particular drawing is 30' (or 10 m for metric users).
 - h. Click Next to advance to the next page.
5. On the View Frame Group page, confirm that all settings are as follows (these are the same settings shown previously in [Figure 15.6](#)), and then click Next to advance to the next page:

Setting	Value
View Frame Group Name	VFG - <[View Frame Group Alignment Name(CP)]> - (<[Next Counter(CP)]>)
View Frame Name	VF - (<[Next Counter(CP)]>)
Style	Basic
Label Style	Basic
Label Location	Top Left

6. On the Match Lines page, confirm that all settings are as follows (these are the same settings shown previously in [Figure 15.8](#)), and then click Next to advance to the next page.

Setting	Value
Snap Station Value Down To The Nearest	1
Layer	C-ANNO-MTCH
Name	ML - (<[Next Counter(CP)]>)
Style	Basic
Left Label Style	Basic Left
Left Label Location	End
Right Label Style	Basic Right
Right Label Location	Start

7. On the Profile Views page, confirm that the settings are as follows (these are the same settings shown previously in [Figure 15.9](#)), and then click Create View Frames:

Setting	Value
Select Profile View Style	Land Desktop Profile View
Select Band Set Style	Plan Profile Sheets - Elevations And Stations

The view frames and match lines are created as shown in [Figure 15.10](#).

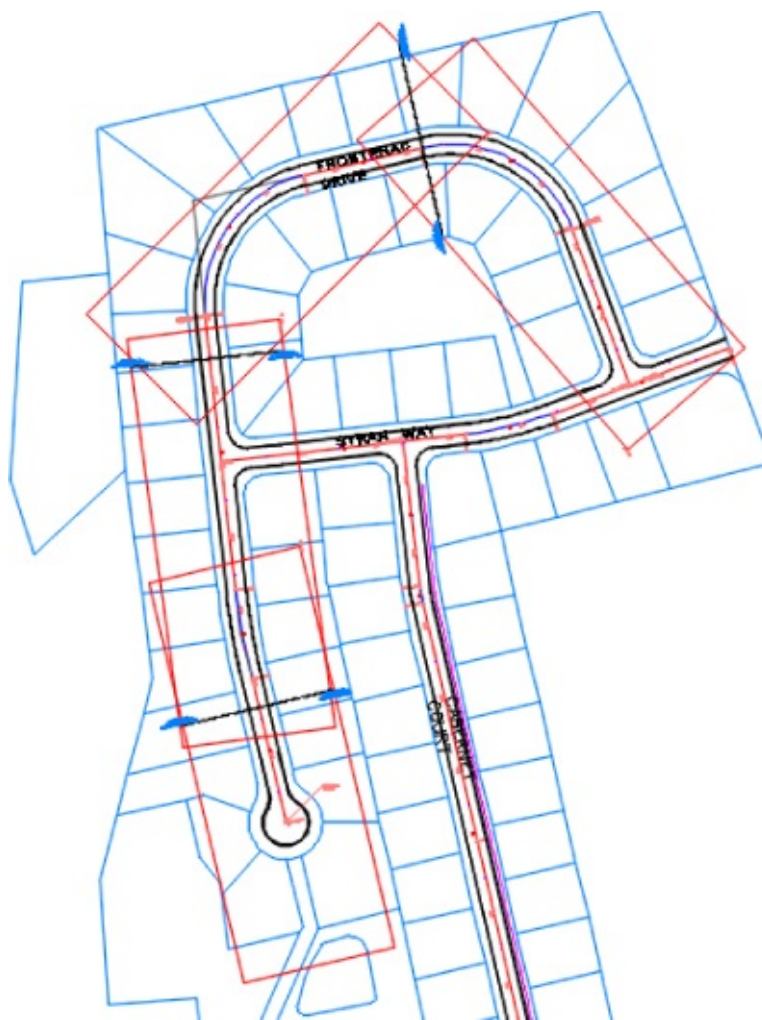


Figure 15.10 Finished view frames and match lines in the drawing

Due to the sheet sizes and scales, the Imperial drawing in this example generates four view frames while the metric drawing generates only two view frames.

The Effects of Incremental Counting

The numbering for your view frames, view frame groups, and match lines may not identically match that shown in the images. This is due to the incremental counting Civil 3D performs in the background. As previously mentioned, each time you create one of these objects, the counter increments. You can reset the counter by modifying the Name template.

When this exercise is complete, you may close the drawing. A saved copy of this drawing is available from the book's web page with the filename 1501_ViewFrameWizard_FINISHED.dwg (1501_ViewFrameWizard_METRIC_FINISHED.dwg).

Editing View Frames and Match Lines

After you've created view frames and match lines, you may need to edit them. Edits to some view frame and match line properties can be made via the Prospector tab in the Toolspace palette by expanding the View Frame Groups branch, as shown in [Figure 15.11](#).

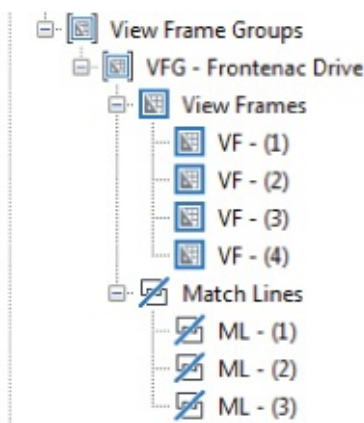


Figure 15.11 View Frame Groups in Prospector

You can change some information in the Preview area of Prospector when you highlight either the View Frames branch or the Match Lines branch. Alternatively, you can make further edits from the View Frame Properties dialog or the Match Line Properties dialog. One way of accessing these dialogs is through the View Frame contextual tab or the Match Line contextual tab. Another method is by right-clicking the desired object in Prospector and selecting Properties. For both view frames and match lines, you can change the object's name and/or style only via the Information tab in their Properties dialog. All other information displayed on the other tabs is read-only.

You make changes to geometry and location graphically using special grip edits ([Figure 15.12](#)). Like many other Civil 3D objects with special editing grips (such as profiles and pipe network objects), view frames and match lines have editing grips you use to modify the objects' location, rotation, and geometry. Let's look at each separately.

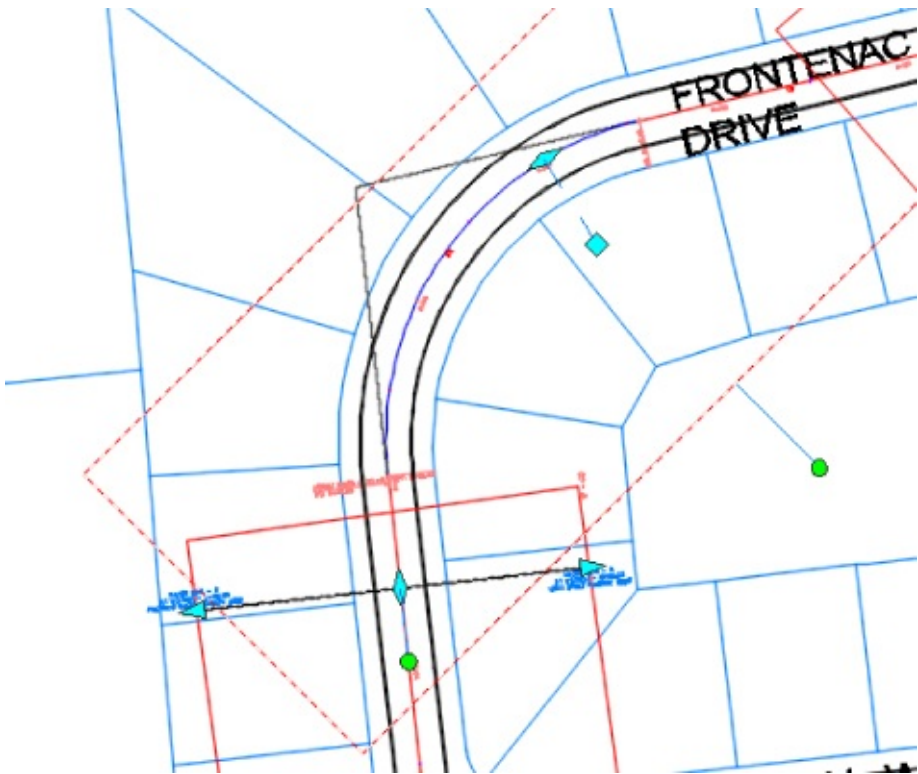


Figure 15.12 View frame and match line grips

View frames can be graphically edited in three ways. Once you select a view frame object (the rectangular object selected at the top portion of the image in [Figure 15.12](#)), you can move it, slide it along the alignment, and rotate it as follows:

To Move a View Frame The standard square grip is used for most typical edits, including moving the object.

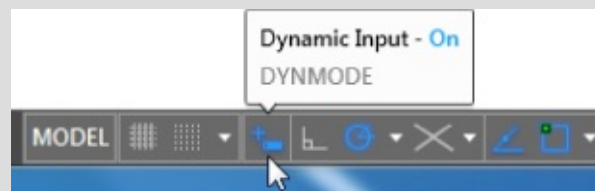
To Slide a View Frame The diamond-shaped grip at the center of the frame lets you move the view frame in either direction along the alignment while maintaining the orientation (Along Alignment or Rotated North) you originally established for the view frame when it was created.

To Rotate a View Frame The circular handle grip works like the one on pipe-network structures. Using this grip, you can rotate the frame about its center.

Don't Forget Your AutoCAD Functions!

While you're getting wrapped up in learning all about Civil 3D and its great design tools, it can be easy to forget you're sitting on an incredibly powerful AutoCAD application.

AutoCAD features add functionality beyond what you can do with Civil 3D commands alone. First, make sure the Dynamic Input option is enabled by either clicking the button at the bottom left of your screen as shown here or by pressing F12. By default the button is not available, but it can be added by clicking the customization button at the right end of the taskbar and checking Dynamic Input from the list.



This gives you additional functionality when you're moving a view frame. With Dynamic Input enabled, you can enter an exact station value to precisely locate the frame where you want it. Similar to moving a view frame, with Dynamic Input active you can enter an exact rotation angle. Note that this rotation angle is relative to your drawing settings (for example, 0 degrees is to the left, 90 degrees is straight up, and so on).

Also, selecting multiple objects and then selecting their grips while holding Shift makes each grip “hot” (usually a red color). This allows you to grip-edit one object and all of the “hot” objects will also experience the same grip edit, like sliding a group of view frames along the alignment. You can edit a match line's location and length using special grips. As with view frames, you can slide them along the alignment and rotate them. They can also be lengthened or shortened. Unlike view frames, they can't be moved to an arbitrary location. Once you select a match line object (the object selected on the lower side of [Figure 15.12](#)), you can edit it as follows:

To Slide a Match Line The diamond-shaped grip at the center of the match line lets you move the match line in either direction along the alignment while maintaining the orientation (Along Alignment or Rotated North) that you originally established for the view frame.

Note that the match line can be moved in either direction only a distance equal to or less than that entered on the Match Line page of the wizard at the time the view frames were created. For example, if you entered a value of 50' (15 m) for the Allow Additional Distance For Repositioning option, your view frames are overlapped 50' (15 m) to each side of the match line, and you can slide the match line only 50' (15 m) in either direction from its original location. Unless you move the view frame, then those extents will be the new maximum move distance.

To Rotate a Match Line The circular handle grip enables you to rotate the match line just as you can with the circular handle grip on a view frame.

To Change a Match Line's Length When you select a match line, a triangular grip is displayed at each end. You can use these grips to increase or decrease the length of each half of the match line. For example, moving the grip on the top end of the match line changes the length of only the top half of the match line; the other half of the match line remains unchanged. See the sidebar “Don't Forget Your AutoCAD Functions!” for tips on using AutoCAD features. If you select a match line, click one of the triangular grips, and then hold Shift and select the other triangular grip, the match line will shorten on one end as you lengthen the other end, and vice versa.

The following exercise lets you put what you've learned into practice as you change the location and rotation of a view frame and change the location and length of a match line:

1. Open the `1502_EditViewFramesAndMatchLines.dwg` (`1502_EditViewFramesAndMatchLines_METRIC.dwg`) file from this book's web page. This drawing contains view frames and match lines already created.
2. Confirm that Dynamic Input is enabled; if it is not, press F12.
3. Select the view frame, which consists of stations 9+56 to 14+34 (or 0+267 to the end for metric users), and select its diamond-shaped sliding grip.
4. Slide this diamond grip so the overlap with the lower view frame isn't so large. Either graphically slide it to station 11+00 (or 0+360 for metric users) or enter **1100** ↵ (**360** ↵ for metric users) in the Dynamic Input text box.
5. Press Esc to clear your selection.
6. Select the view frame, which consists of stations 14+34 to the end (or 0+267 to the end for metric users), and select the circular rotation grip.
7. Rotate the view frame slightly to better encompass the road. Enter **8** ↵ (**268** ↵ for metric users).
8. Press Esc to clear your selection of the view frame.
9. Next, you will adjust the match line's location.
10. Select the match line, which is presently at station 14+34 (or 0+267 for metric users), and then select its diamond sliding grip.
11. Either graphically slide it to station 13+25 (or 0+250 for metric users) or enter **1325** ↵ (**250** ↵ for metric users) in the Dynamic Input text box.
12. Notice that the match line label is updated with the revised station.
13. Next, you'll adjust the length of the match line to fit within the view frame extents.
14. Select the triangular lengthen grip at the west end of the match line, and either graphically shorten it to 75' (or 50 m for metric users) or enter **75** ↵ (or **50** ↵ for metric users) in the Dynamic Input text box.
15. Select the triangular lengthen grip at the east end of the same match line, and either graphically shorten it to 75' (or 50 m for metric users) or enter **75** ↵ (or **50** ↵ for metric users) in the Dynamic Input text box.
16. Press Esc to clear your selection.

When this exercise is complete, you may close the drawing. A saved copy of this drawing is available

from the book's web page with the filename 1502_EditViewFramesAndMatchLines_FINISHED.dwg (1502_EditViewFramesAndMatchLines_METRIC_FINISHED.dwg).


Now that you have generated the view frames and match lines in the drawing and you have placed them where you want them, let's look at using these objects to generate sheets.

Creating Plan and Profile Sheets

The Plan Production feature uses the concept of *sheets* to generate the pages that make up a set of plans. Simply put, *sheets* are layout tabs with viewports showing a given portion of your design model, based on the view frames previously created. The viewports have special viewport properties set that define them as either plan or profile viewports. These viewports must be predefined in a drawing template (DWT) file to be used with the Plan Production feature. You manage the sheets using the standard AutoCAD Sheet Set Manager feature.


The Create Sheets Wizard

Certification Objective After you've created view frames and match lines, you can proceed to the next step of creating sheets. Like view frames, sheets are created using a wizard. Let's look at the Create Sheets Wizard and the various page options. After you've seen each page, you'll have a chance to put what you've learned into practice in an example.

 From the Output tab > Plan Production panel, you launch the Create Sheets Wizard by choosing Create Sheets. As with the Create View Frames Wizard, a list of the Create Sheets Wizard's pages is shown along the left sidebar, and an arrow indicates which page you're currently viewing. You move among the pages using the Next and Back navigation buttons along the bottom of each page. Alternatively, you can jump directly to any page by clicking its name in the list on the left. The following sections walk you through the pages of the wizard and explain their features.

Create Sheets – View Frame Group And Layouts Page

You will use the first page of the Create Sheets Wizard ([Figure 15.13](#)) to select the view frame group for which the sheets will be created. It's also used to define how the layouts for these sheets will be generated and which sheets will be created (all or a range).

 **View Frame Group** In the top area of this page, you select the view frame group. You : can either select it from the drop-down list or click the Select From The Drawing button to select the view frame group onscreen. After you've selected the group, you use the View Frame Range option to create sheets for all frames in the group or only for specific frames of your choosing.

All Select this option when you want sheets to be created for all view frames in the view frame group.

Selection Select this option to activate the Choose View Frames button. Click this button to display the Select View Frames dialog, where you can select specific view frames from a list. You can select a range of view frames by using the standard Windows selection technique of clicking the first view frame in the range and then holding Shift while you select the last view frame in the range. You can also select individual view frames in nonsequential order by holding

Ctrl while you make your view frame selections. [Figure 15.14](#) shows two of the four view frames selected in the Select View Frames dialog.

Layout Creation In this area, you define where and how the new layouts for each sheet are created as well as the name format for these sheets and information about the alignment of the north arrow block.

There are three options for creating layout sheets: the layouts are created in multiple new drawing files (with a limit to the maximum number of layout sheets created in each file), all the new layouts are created in a new drawing file, or all the layout tabs are created in the current drawing (the drawing you're in while executing the Create Sheets Wizard).

Number Of Layouts Per New Drawing This option creates layouts in new drawing files and limits the maximum number of layouts per drawing file to the value you enter in the text box. For best performance, Autodesk recommends that a drawing file contain no more than 10 layouts. On the last page of this wizard you're given the option to select the objects for which data references will be made. These data references are then created in the new drawings.

All Layouts In One New Drawing As the name implies, this option creates all layouts for each view frame in a single new drawing. Use this option if you have fewer than 10 view frames, to ensure best performance. If you have more than 10 view frames, the previous option is recommended. On the last page of this wizard you're given the option to select the objects for which data references will be made. These data references are then created in the new drawing.

All Layouts In The Current Drawing When you choose this option, all layouts are created in the current drawing. You need to be aware of two scenarios when working with this option. (As explained later in Chapter 16, “Advanced Workflows,” you can share a view frame group via data shortcuts and link it to other drawings as a data reference.)

- When creating sheets, it's possible that your drawing references the view frame group from another drawing (rather than having the original view frame group in your current drawing). In this case, you're given the option to select the additional objects for which data references will be made (such as alignments, profiles, pipes, and so on). These data references are then created in the current drawing. You select these objects on the last page of the wizard.
- If you're working in a drawing where the view frames were created (therefore, you're in the drawing in which the view frame group exists), the last page of this wizard is disabled. This is because in order for you to create view frames (and view frame groups), the alignment (and possibly the profile) must either exist in the current drawing or be referenced as a data reference (recall the prerequisites for creating view frames, mentioned earlier).

Layout Name Use this text box to enter a name for each new layout. As with other named objects in Civil 3D, you can use the Name template to create a name format that includes information about the object being named. With the settings shown previously in [Figure 15.13](#), the layouts will be named using a predefined text (Sheet -) and the next counter: Sheet - 1, Sheet - 2, Sheet - 3, and so on. Using the Name template, you could alternatively use the Parent Drawing Name, View Frame Start/End Raw Station, View Frame Start/End Station Value, View Frame Group Alignment Name, and View Frame Group Name options.



Real World Scenario

Where Am I?

We strongly recommend that you set up the Name template for the layouts so that it includes the View Frame Group Alignment Name option and the station range (View Frame Start Station Value and View Frame End Station Value). This conforms to the way many organizations create sheets, helps automate the creation of a sheet index, and generally makes it easier to navigate a DWG file with several layout tabs.

This would result in a name that is listed as follows:

```
<[View Frame Group Alignment Name]> <[View Frame Start Station Value]>  
to <[View Frame End Station Value]>
```

This will generate a layout named similar to Frontenac Drive 0 + 00.00 to 4 + 78.00.

Choose The North Arrow Block To Align In Layouts If the template file you've selected contains a north arrow block, it can be aligned so that it points north on each layout sheet. The block must exist in the template and be located in the layout. If there are multiple blocks, select the one you want to use from the drop-down list.

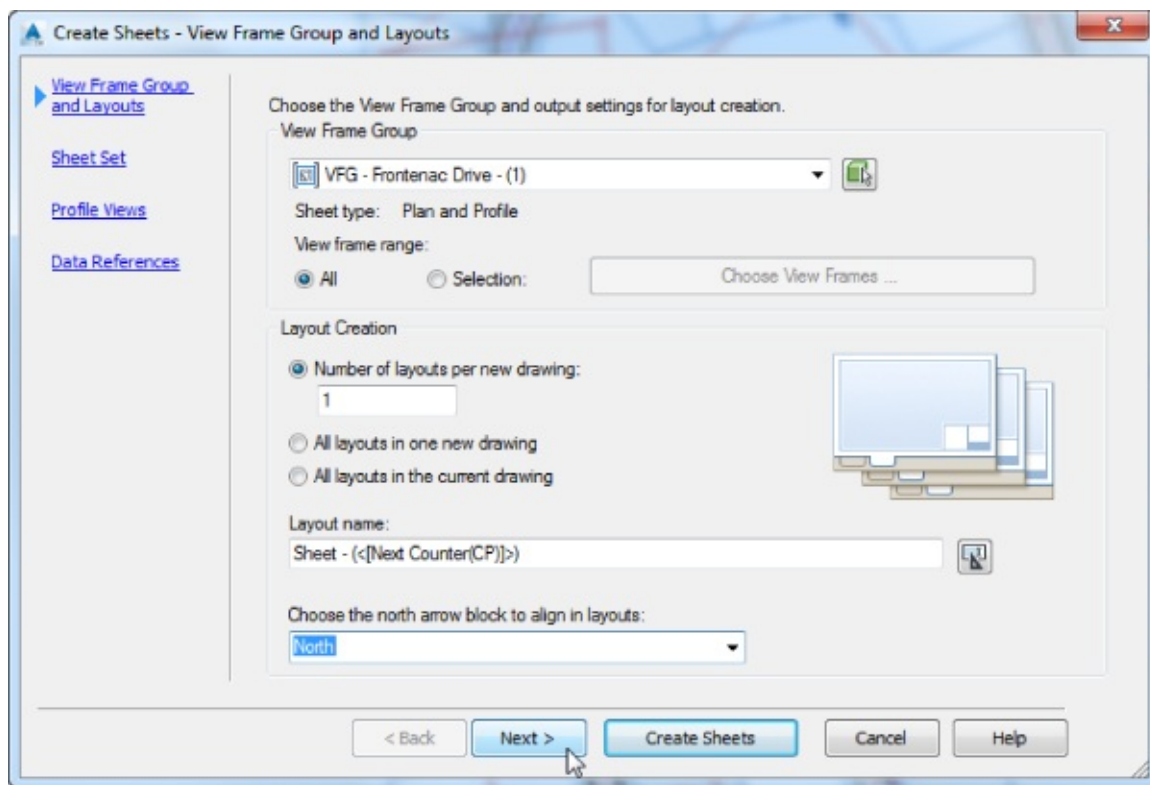


Figure 15.13 Create Sheets – View Frame Group And Layouts wizard page

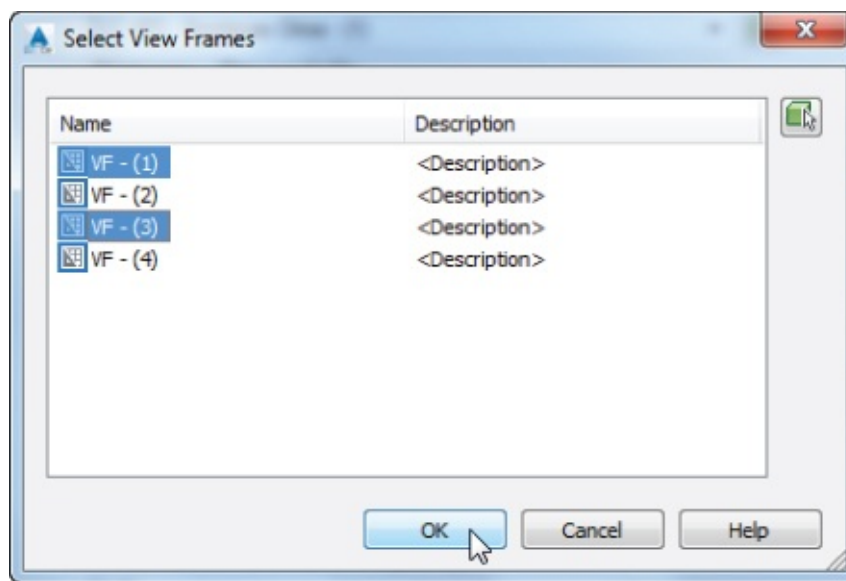


Figure 15.14 Select view frames by using standard Windows selection techniques.

Create Sheets – Sheet Set Page

You use the second page of the Create Sheets Wizard ([Figure 15.15](#)) to determine whether a new or existing sheet set (with the filename extension .dst) is used and the location of the DST file. The sheet file storage location and sheet file name are also defined here. Additionally, on this page you decide whether to add the sheet set file (with the filename extension .dst) and the sheet files (with the filename extension .dwg) to the Autodesk® Vault project if this platform is used for data management.

Sheet Set In the Sheet Set area of the page, you select whether to create a new DST file or add the sheets created by this wizard to an existing DST file.

New Sheet Set Selecting this option allows you to generate a new sheet set. In the text box, you can enter a name for the sheet set or accept the name that is generated for you.

Add To Existing Sheet Set Selecting this option enables you to add to a sheet set that has already been generated. Click the ellipsis button to browse to the location of the DST file. If you are working in a Vault project, you can click the Vault button to browse to the file in the vault project. If Autodesk Vault is not installed, the Vault button will be inactive.

Sheet Set Storage Location This text box is active only if you have selected New Sheet Set. When it's active, you can type the path to the folder where the DST file will be created or you can use the ellipsis to browse to the storage location. If you are working in a vault project, you can click the Vault button to browse to the storage location in the vault project. If Autodesk Vault is not installed, the Vault button will be inactive.

Sheets This area is active only if you are creating layouts in new drawings. If you choose to create layouts in the current drawing, the area will be inactive.

Sheet Files Storage Location Type the path to the folder where the sheet files will be created, or you can use the ellipsis to browse to the storage location. If you are working in a vault project, you can click the Vault button to browse to the storage location in the vault project. If Autodesk Vault is not installed, the Vault button will be inactive.

Sheet File Name As with many of the previous names, you can use a Name template to specify how the sheet-file name is generated. With the settings shown previously in [Figure 15.15](#), the sheet files will be named using the View Frame Group Name entry and the next counter. Using the Name

template, you could alternatively use the Parent Drawing Name, View Frame Start/End Raw Station, View Frame Start/End Station Value, and View Frame Group Alignment Name options.

What Is a Sheet?

The Create Sheets – Sheet Set page can be a little confusing due to the way the word *sheets* is used. In some places, *sheets* refers to layout tabs in a given drawing (DWG) file. On this page, the word *sheet* is being paired with the word *file(s)* and refers to DWG files that contain a collection of *sheet* layouts.

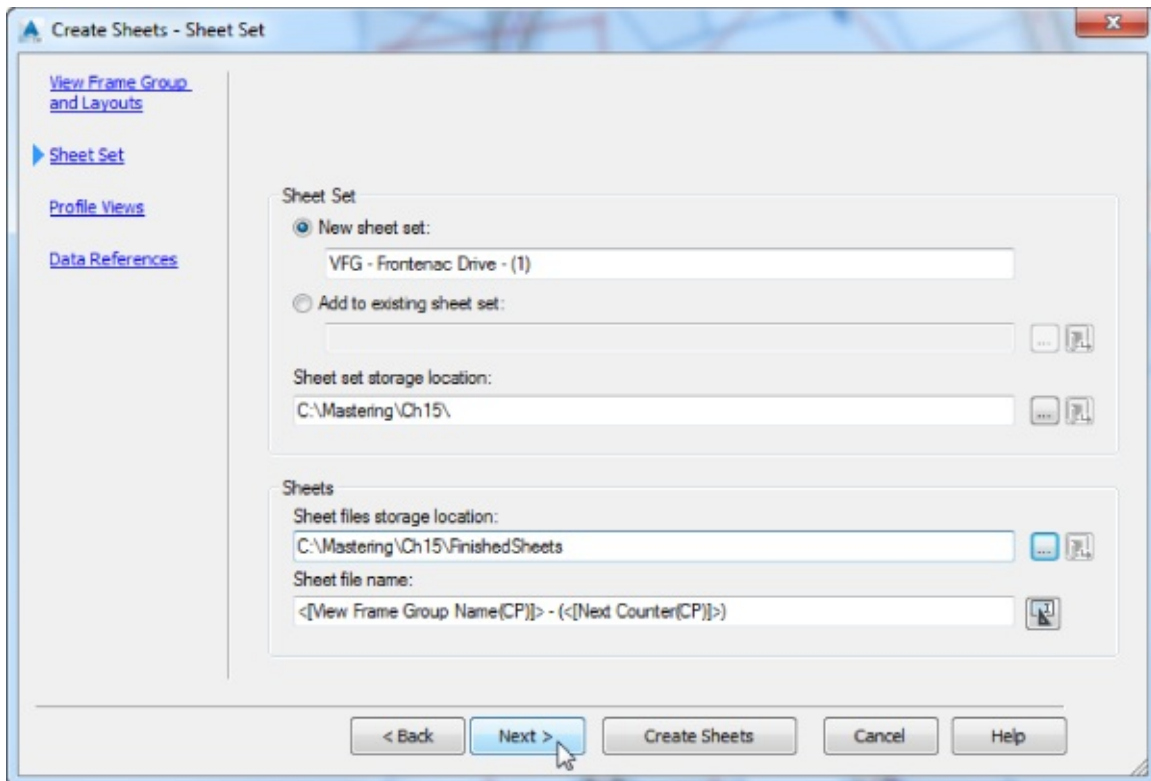


Figure 15.15 Create Sheets – Sheet Set wizard page

Create Sheets – Profile Views Page

The third page of the Create Sheets Wizard ([Figure 15.16](#)) lists the profile view style and the band set selected in the Create View Frames Wizard. You can't change these selections. You can, however, make adjustments to other profile settings.

Other Profile View Options The Other Profile View Options area lets you modify certain profile view options either by using an existing profile view in your drawing as an example or by running the Profile View Wizard. Regardless of what option you choose, the “other options” you can change are limited to the following in the Profile View Wizard:

- Profile View Datum By Minimum Elevation or Mean Elevation on the Profile View Height page
- Split Profile View options from the Profile View Height page
- All options on the Profile Display Options page
- If available, all options on the Pipe Network Display page

- Most of the settings on the Data Bands page
- All options on the Profile Hatch Options page
- All settings on the Multiple Plot Options page

See Chapter 7, “Profiles and Profile Views,” for details on each of these settings. The inactive settings are ones that were previously set when you were going through the settings of the Create View Frames Wizard. If you need to change these settings, you will have to delete your current view frame group and regenerate the view frames with the desired settings.

Align Views In the Align Views area of the page, you can choose Align Profile And Plan View At Start, Align Profile And Plan View At Center, or Align Profile And Plan View At End.

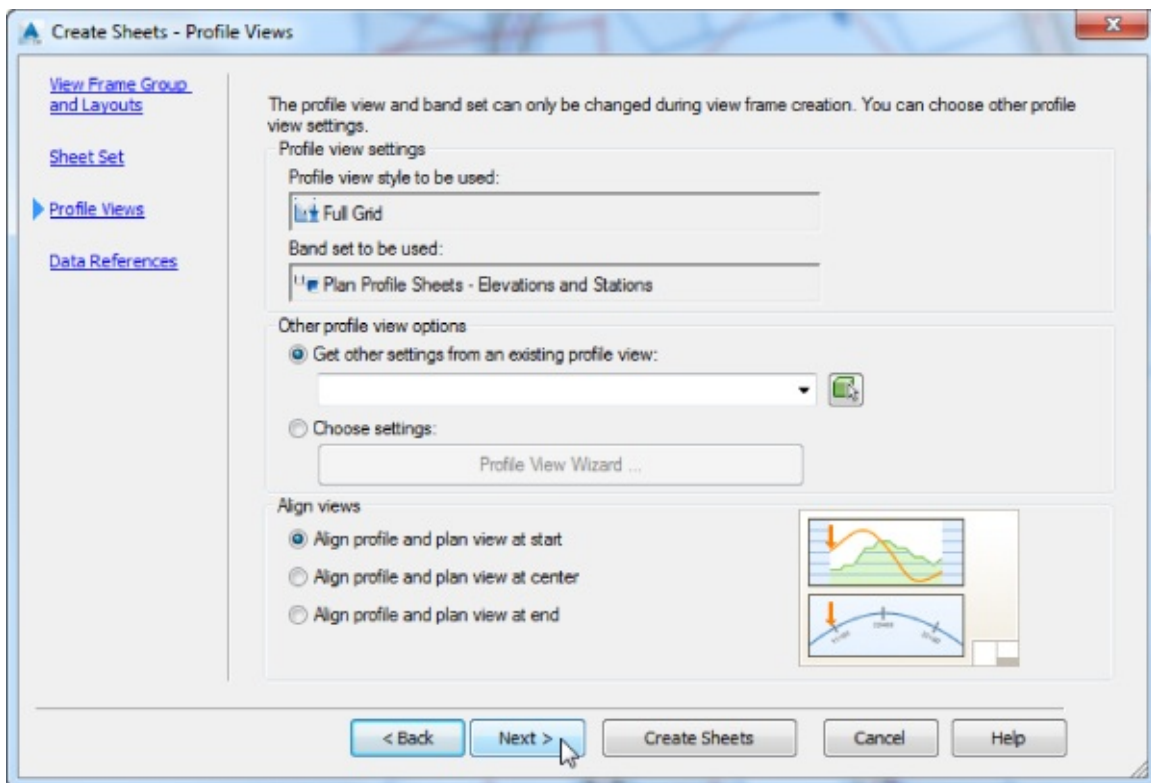


Figure 15.16 Create Sheets – Profile Views : wizard page

Create Sheets – Data References Page

The final page of the Create Sheets Wizard ([Figure 15.17](#)) is used to create data references in the drawing files that contain your layout sheets.

Select The Data You Want Referenced In Your Sheets This area contains a list of objects in the current drawing that can be data referenced into the sheet files. Depending on the way sheet settings were configured in the Create View Frames Wizard (Plan And Profile, Plan Only, or Profile Only), certain objects will be selected for you. If there are other data references you want referenced into the drawing, you may use the check boxes here to select them.



Pick From Drawing Use the Pick From Drawing button to select those objects you want to data reference from the drawing area.

Copy Pipe Network Labels To Destination Drawings It's common to create references to pipe networks that are to be shown in plan and/or profile views. If you choose to create references for pipe network objects, you can also copy the labels for those network objects into the sheet file. This saves

you from having to relabel your pipe networks.

Copy Pressure Network Labels To Destination Drawings When this check box is selected, pressure network labels will be copied to the sheet file.

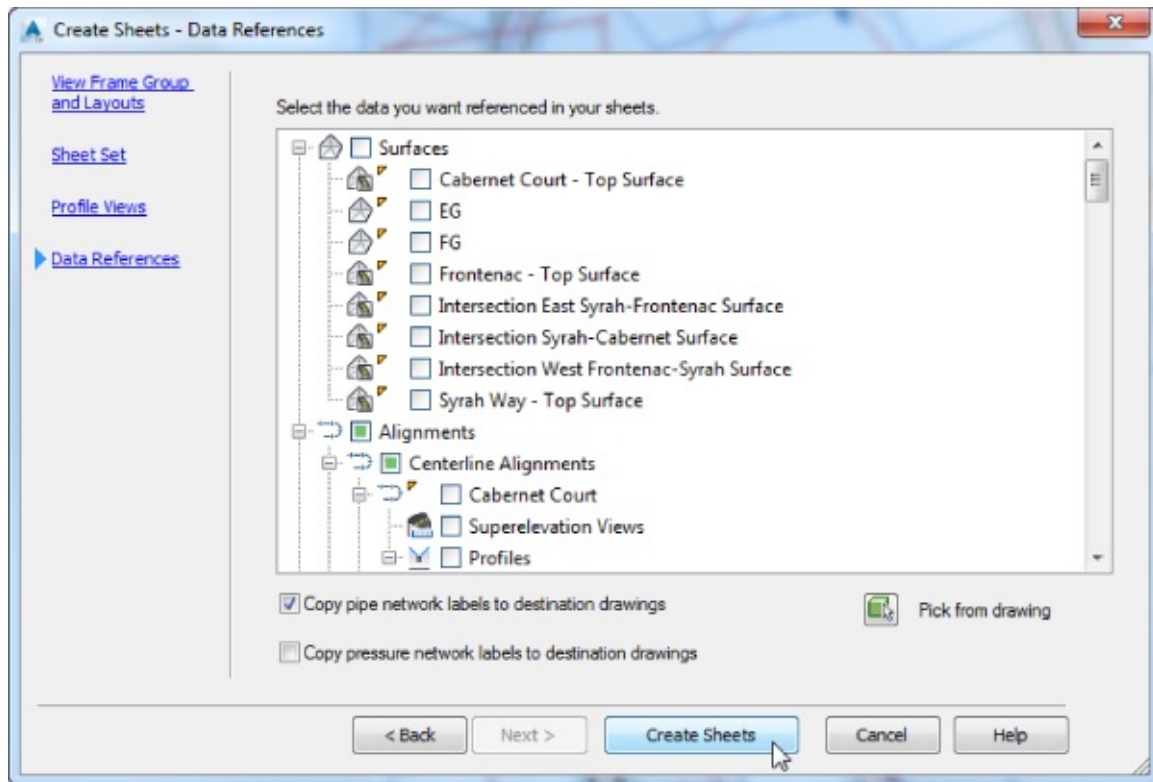


Figure 15.17 Create Sheets – Data References wizard page

Managing Sheets

After you've completed all pages of the Create Sheets Wizard, you create the sheets by clicking the Create Sheets button. Doing so completes the wizard and starts the creation process. If you're creating sheets with profile views, you're prompted to select a profile view origin. Civil 3D then displays several dialogs, indicating the process status for the various tasks, such as creating the new sheet drawings and creating the DST file. Once that's complete, the Panorama Event Viewer vista will list two new events, in this example one stating “Sheets created were added to the sheet set file C:\Mastering\Ch15\FinishedSheets\VFG - Frontenac Drive - (1).dst” and one stating “4 layout(s) created in path C:\Mastering\Ch15\FinishedSheets.” For the case of the metric data files, the statement will refer only to two layouts.

If Sheet Set Manager isn't currently open, it opens with the newly created DST file loaded. The sheets are listed, and the details of the drawing files for each sheet appear ([Figure 15.18](#)).

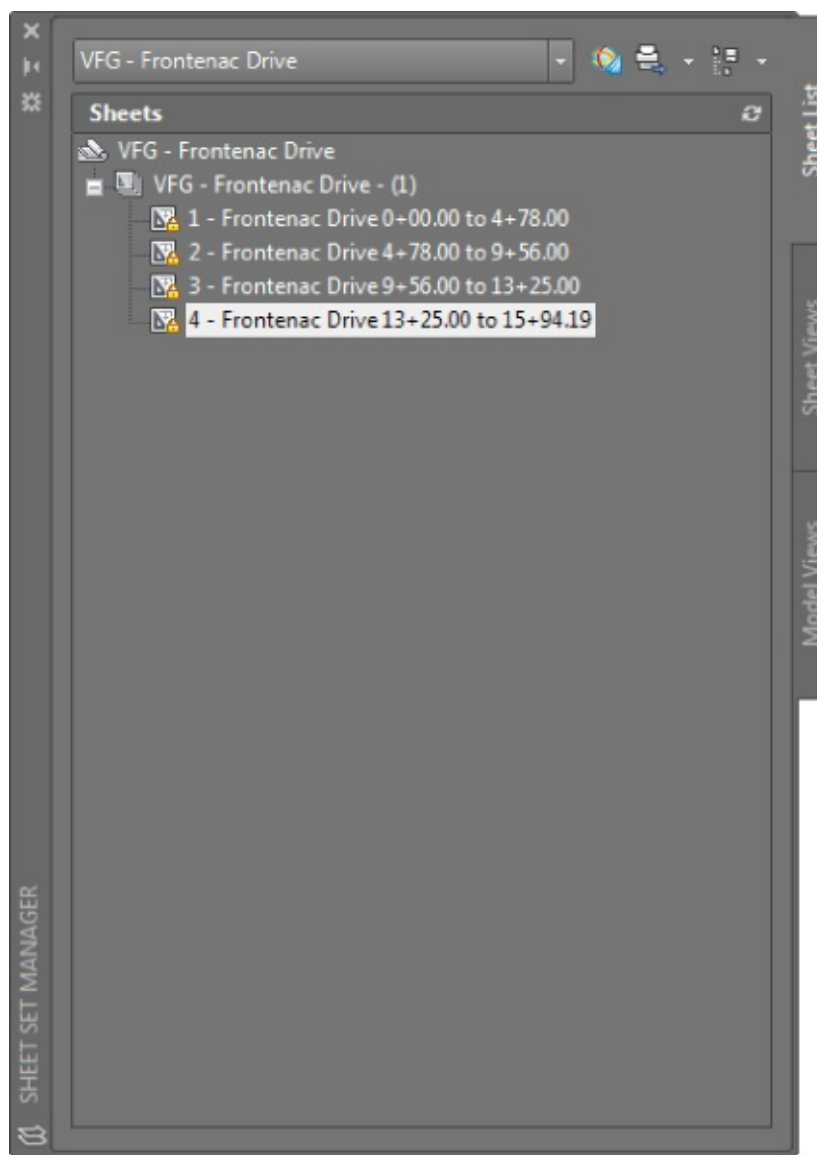


Figure 15.18 New sheets in Sheet Set Manager

If you double-click to open the new drawing file that contains the newly created sheets, you'll see layout sheet tabs created for each of the view frames as selected in the Create Sheets Wizard. The sheets are named using the Name template as defined in the Create Sheets Wizard. [Figure 15.19](#) shows the names that result from the following template:

```
<[View Frame Group Alignment Name]> <[View Frame Start Station Value]>  
to <[View Frame End Station Value]>
```

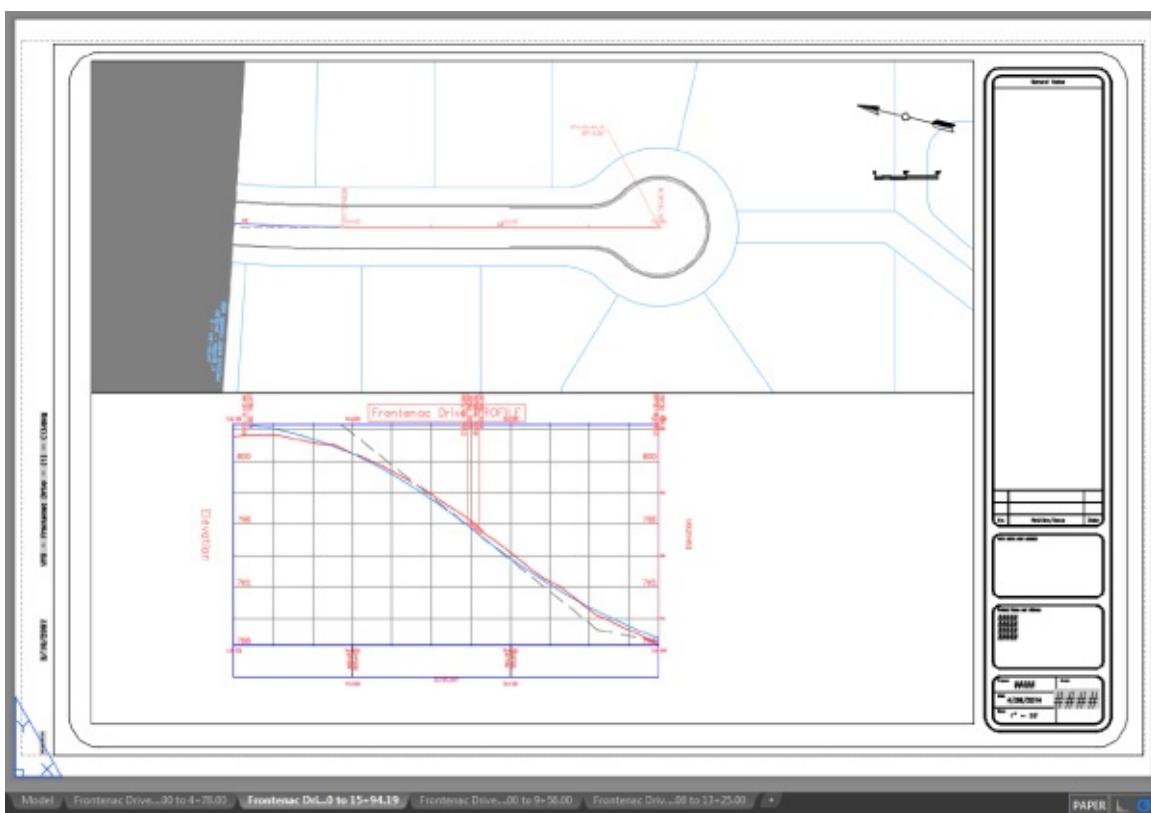


Figure 15.19 The template produces the Frontenac Drive tab names shown here assigned to each sheet.

To create the final sheets in this new drawing, Civil 3D creates external references (XRefs) to the drawing containing the view frames; creates direct data references (DRefs) for the alignments, profiles, and any additional objects you selected in the Create Sheets Wizard; and, if profile sheet types were selected in the Create View Frames Wizard, creates profile views in the final sheet drawing.

The following exercise pulls all these concepts together:

1. Open the 1503_SheetsWizard.dwg (1503_SheetsWizard_METRIC.dwg) file.

This drawing contains the view frame group, alignment, and profile for Frontenac Drive. Note that the drawing doesn't have profile views.

2. To launch the Create Sheets Wizard, from the Output tab > Plan Production panel, choose Create Sheets.
3. On the View Frame Group And Layouts page, do the following:
4.
 1. Verify that View Frame Range is set to All.
 2. Verify that Number Of Layouts Per New Drawing is set to 10.

Since this view frame group has fewer than 10 view frames, only one drawing will be generated, but it is good practice to set this value to 10 nonetheless.

3. Set Layout Name to <[View Frame Group Alignment Name]> <[View Frame Start Station Value]> to <[View Frame End Station Value]>.
4. From the Choose The North Arrow Block To Align In Layouts drop-down list, select North.
5. Click Next to advance to the next page.

Use a Name Template



To set the layout name in step 3 or any of the other steps that require the use of the Name template, don't type all that text into the text box. Instead, follow these simple steps:

1. Click the Edit Layout Name button to the right of the Layout Name text box to display the Name Template dialog.
2. Delete all of the text in the Name text box that you do not want.
3. Using the Property Fields drop-down list, select the first piece of text that you want. In this example it will be View Frame Group Alignment Name.
4. Click Insert.
5. Repeat steps 3 and 4 for each of the property fields that you want to use. If using start or end stations, use Start Station Value or End Station Value properties instead of their raw station counterparts.
6. Once complete, click OK to dismiss the Name Template dialog.

The Layout Name option is now filled in based on the Name template.

5. On the Sheet Set page, do the following:

- a. Select the New Sheet Set option and set Name to **VFG - Frontenac Drive** (or **VFG - Frontenac Drive_METRIC** for metric users).
- b. For the Sheet Set File Storage Location option, use the ellipsis to browse to `C:\Mastering\Ch15\FinishedSheets`, and click Open to dismiss the Browse For Sheet Set Folder dialog.

Notice that by changing this location, the Sheet Files Storage Location entry automatically changes to match.

- c. Verify that Sheet File Name is set to

`<[View Frame Group Name(CP)]> - (<[Next Counter(CP)]>)`

for Imperial users or

`<[View Frame Group Name(CP)]> - (<[Next Counter(CP)]>)_METRIC`

for metric users.

- d. Click Next to advance to the next page.

6. On the Profile Views page, do the following:

- a. For Other Profile View Options, select Choose Settings and then click the Profile View Wizard button.

The Create Multiple Profile Views dialog opens.

- b. On the left side of the Create Multiple Profile Views dialog, click Profile Display Options to jump to that page.
 - c. On the Create Multiple Profile Views – Profile Display Options page, verify that the Draw option is selected for only the EG - Frontenac Drive profile and the Frontenac Drive FG profile.
 - d. Scroll to the right and verify that the Labels setting for the EG - Frontenac Drive profile is set to No Labels and that the Frontenac Drive FG Profile is set to Complete Label Set.
 - e. On the left side of the Create Multiple Profile Views dialog, click Data Bands to jump to that page.
 - f. On the Create Multiple Profile Views – Data Bands page, change Profile2 to Frontenac Drive FG for both bands.
 - g. Click Finish to dismiss the Create Multiple Profile Views Wizard and return to the Create Sheets Wizard.
 - h. Verify that Align Views is set to Align Profile And Plan View At Start.
 - i. Click Next to advance to the next page.
7. On the Data References page, confirm that at minimum, the Frontenac Drive alignment and both the EG - Frontenac Drive and Frontenac Drive FG profiles are selected, and then click Create Sheets to complete the wizard.

Before creating the sheets, Civil 3D must save your current drawing.

8. Click OK when prompted to save.

The drawing is saved, and you're prompted for an insertion point for the profile view. The location you pick represents the lower-left corner of the profile view grid.

9. Select an open area in the drawing, above the right side of the site plan.

Civil 3D displays a progress dialog box, and then the Panorama palette is displayed with information about the results of the sheet-creation process.

10. Close the Panorama palette.

Invisible Profile Views

Note that the profile views are created in the current drawing only if you selected the option to create all layouts in the current drawing. Because you didn't do that in this exercise, the profile views aren't created in the current drawing. Rather, they're created in the sheet files in modelspace in a location relative to the point you selected in this step.

After the sheet-creation process is complete, the Sheet Set Manager window opens.

11. Click the first sheet of the sheet set shown in [Figure 15.20](#), named Frontenac Drive 0+00.00 to 4+78.00 (or Frontenac Drive 0+000.00 to 0+250.00 for metric users).

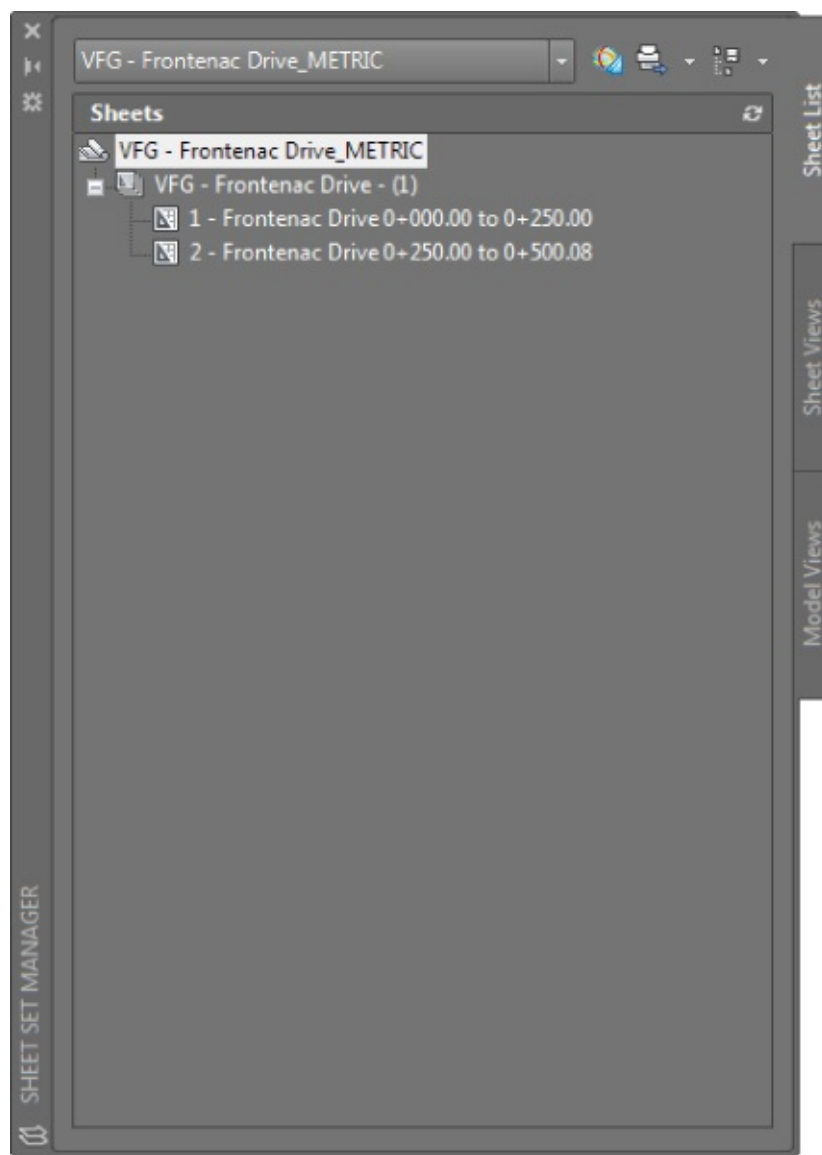


Figure 15.20 Sheet Set Manager once the sheet-creation process is complete

Notice that the name conforms to the Name template and includes the alignment name and the station range for the sheet.

2. Review the details listed for the sheet by hovering over the sheet on the Sheet List tab of Sheet Set Manager or by right-clicking in the white space of the dialog and selecting Preview/Details Pane. In particular, note the filename and storage location.
3. Double-click this sheet to open the new sheets drawing and display the layout tab for Frontenac Drive 0+00.00 to 4+78.00 (or Frontenac Drive 0+000.00 to 0+250.00 for metric users). Dismiss the Panorama of any warnings.
4. Review the multiple tabs created in this drawing file as previously shown in [Figure 15.19](#). If layout tabs are not displayed, then you may turn them on in the Options dialog, by going to the Display tab ➤ Layout Elements area, and filling the Display Layout And Model Tabs check box.

The template used also takes advantage of AutoCAD fields, some of which don't currently have values assigned.

When this exercise is complete, you may close the drawing. A saved copy of this drawing is available from the book's web page with the filename 1503_SheetsWizard_FINISHED.dwg (1503_SheetsWizard_METRIC_FINISHED.dwg).

Now that you have the plan and profile sheets generated, let's look at generating some section sheets using the Plan Production feature.

Creating Section Sheets

Creating section sheets is a two-step process; it's just like creating plan and profile sheets but with one difference: there are no view frames to tweak. Instead you will have section sheets, which are objects. Section sheets have group plot styles assigned to them that control the arrangement of section arrays per sheet. These section sheets are created when you run the Create Multiple Section Views command using the Production option. If you have already created multiple section views using the Draft option, you will have to re-create your section views using the Production option. This is a prerequisite for running the Create Section Sheets command. So here is the two-step process:

1. Generate multiple section views with the Placement option set to Production. You will have the opportunity to select styles to use for section view, section, and group plot styles as you work through the wizard. All section views created with this command become part of a section view group that can be managed from Prospector.
2. Generate section sheets, which will create your layouts and your sheet set. Section sheet layouts are created in the same drawing as your production section views; there is no option to create them in new drawings.

Creating Multiple Section Views

Before creating multiple section views for the purpose of sheet creation, be sure you have section, section view, and group plot styles in place. If you have any questions about these styles, refer to Chapter 19, “Object Styles.”

In this exercise, you'll walk through creating multiple section views for the main road of our sample set:

1. Open `1504_MultipleSectionViews.dwg` (`1504_MultipleSectionViews_METRIC.dwg`) file from the provided dataset.

In this drawing, sample lines have been added along the Frontenac Drive alignment. These lines are sampling the existing and proposed surfaces.



2. From the Home tab ► Profile & Section Views panel, choose Section Views ► Create Multiple Views to display the Create Multiple Section Views Wizard, shown in [Figure 15.21](#).

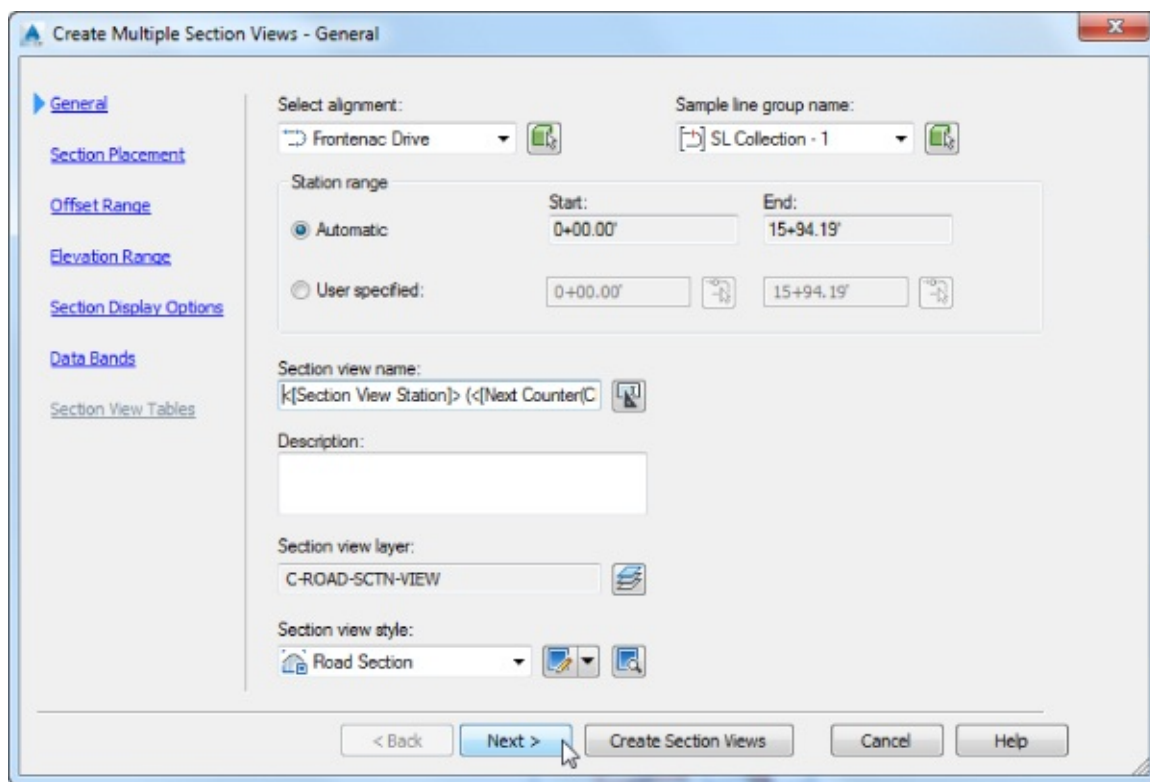


Figure 15.21 Create Multiple Section Views – General wizard page

3. On the General page, do the following:
 - a. Verify that Section View Style is set to Road Section.
 - b. Click Next to advance to the next page.

The Section Placement page ([Figure 15.22](#)) is where you configure your placement options. If you select Production, you must use the ellipsis to browse to the DWT file containing your section layouts and choose the layout desired based on sheet border and viewport scale. If you select Draft, section views will be laid out in a single grid format.

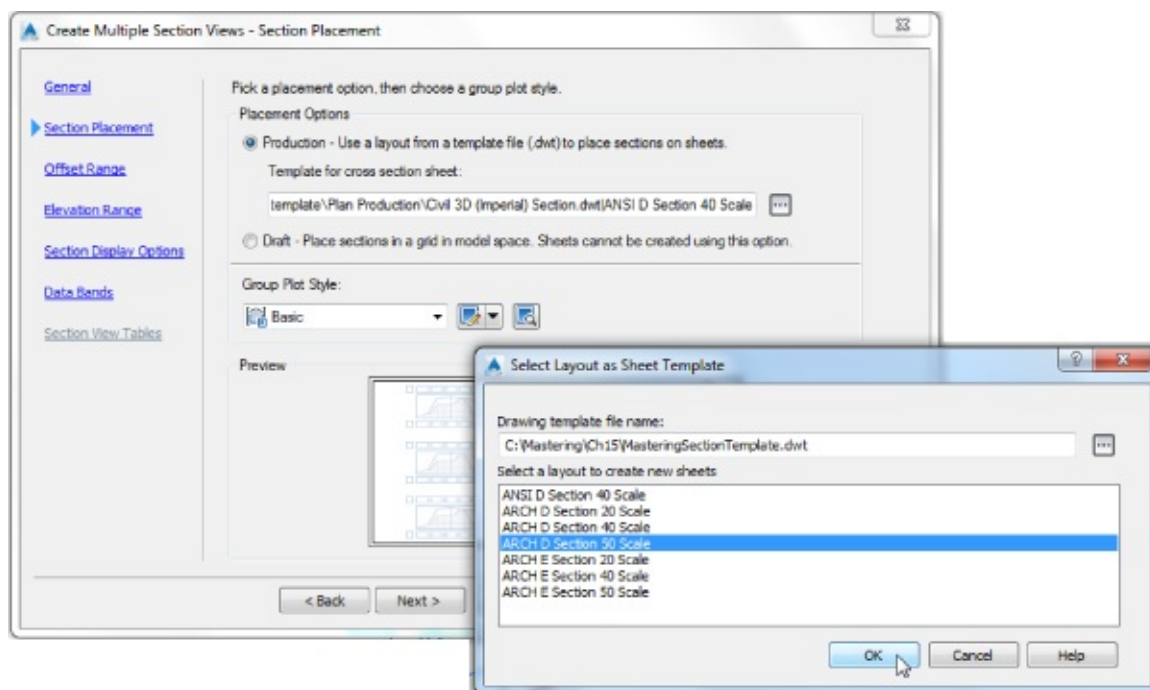


Figure 15.22 Create Multiple Section Views – Section Placement wizard page and Select Layout As Sheet Template dialog

4. On the Section Placement page, do the following:
 - a. In the Placement Options area, verify that Production is selected.
 - b. For Template For Cross Section Sheet, use the ellipsis to browse to C:\Mastering\CH 15 and select MasteringSectionTemplate.dwt (or MasteringSectionTemplate_METRIC.dwt for metric users). Click Open, and under Select A Layout To Create New Sheets, choose ARCH D Section 50 Scale (or ISO A1 Section 1 to 500 for metric users). Click OK.
 - c. Verify that Group Plot Style is set to Basic.
 - d. Click Next to advance to the next page.

The Offset Range page ([Figure 15.23](#)) determines the width of the section views.

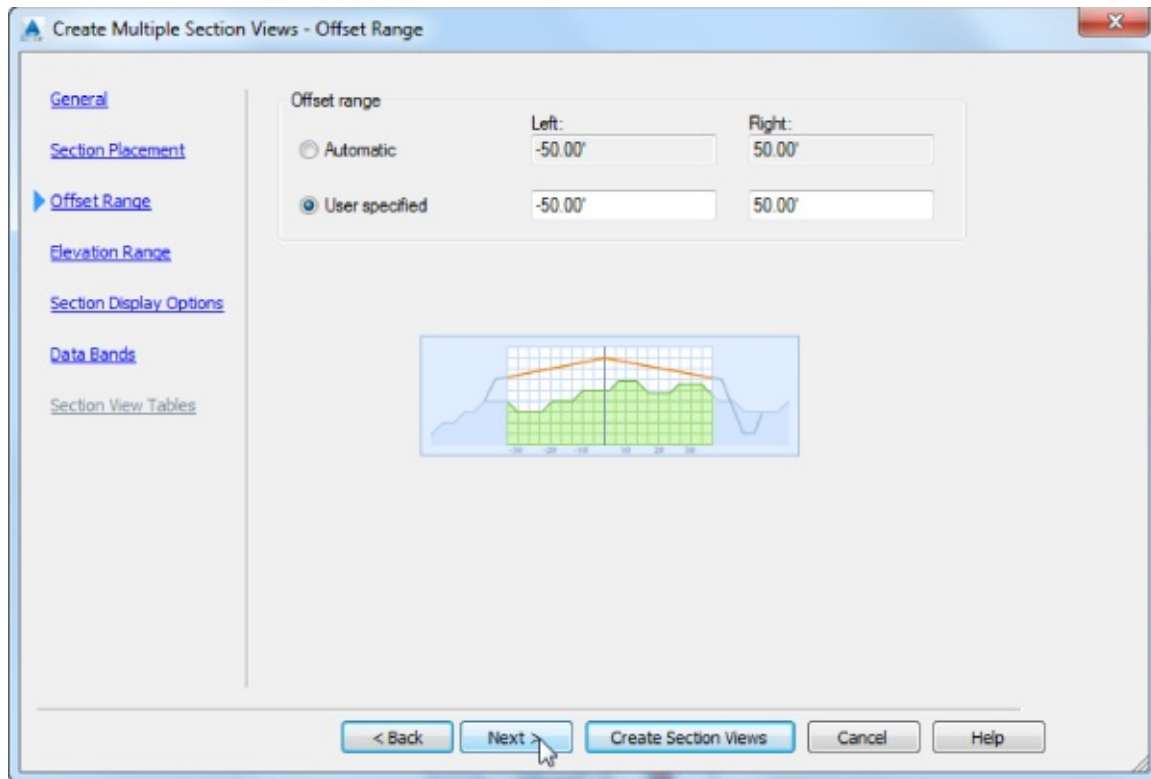


Figure 15.23 Create Multiple Section Views – Offset Range : wizard page

5. On the Offset Range page, do the following:
 - a. Using the User Specified option, set the left offset range to **-50'** (or **-20 m** for metric users).
 - b. Set the right offset range to **50'** (or **20 m** for metric users).
 - c. Click Next to advance to the next page.

The Elevation Range page ([Figure 15.24](#)) determines the height of the section views. The options on the Elevation Range page help if you have extra-tall sections, allowing you to set some limits manually.

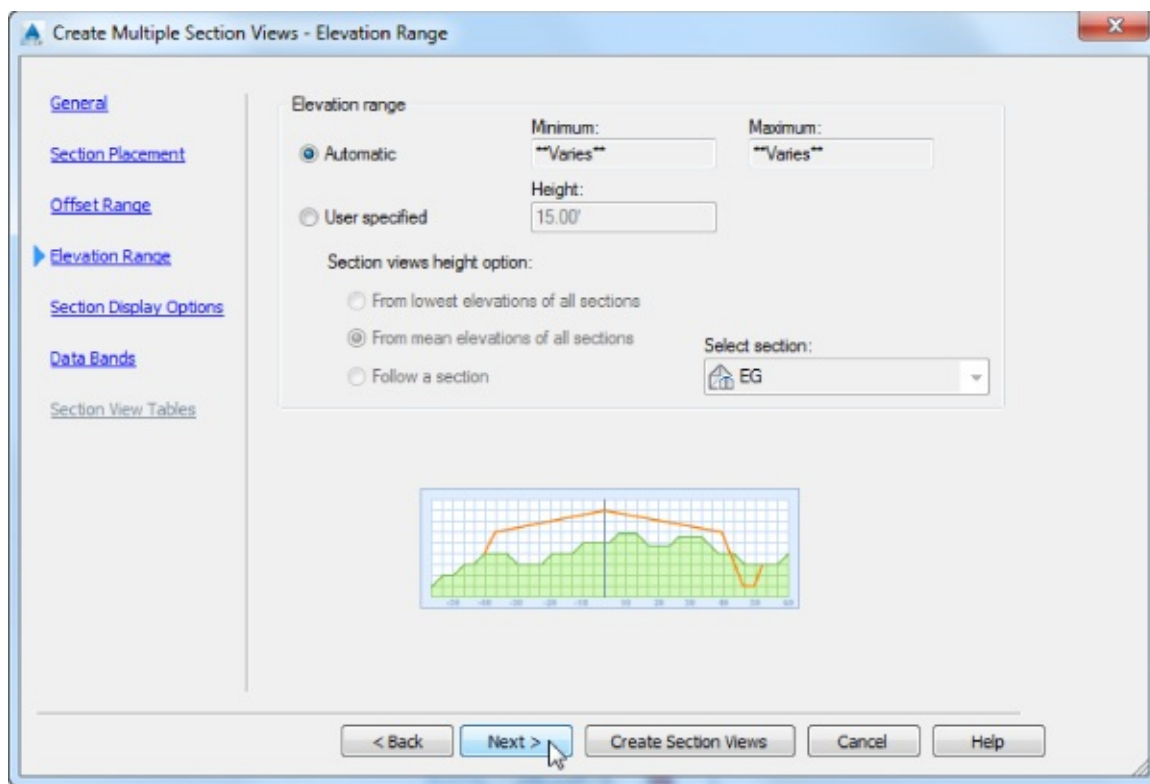


Figure 15.24 Create Multiple Section Views – Elevation Range wizard page

6. On the Elevation Range page, click Next to advance to the next page.
7. On the Section Display Options page, do the following:
 - a. Verify that in the Label Set column the EG surface labels are set to _No Labels and the FG surface labels are set to _No Labels. Leave all the other settings as default.
 - b. Verify that in the Style column the style for EG is set to Existing Ground, the style for FG is set to Finished Ground, and each of the corridor surface styles is set to Basic, as shown in [Figure 15.25](#).

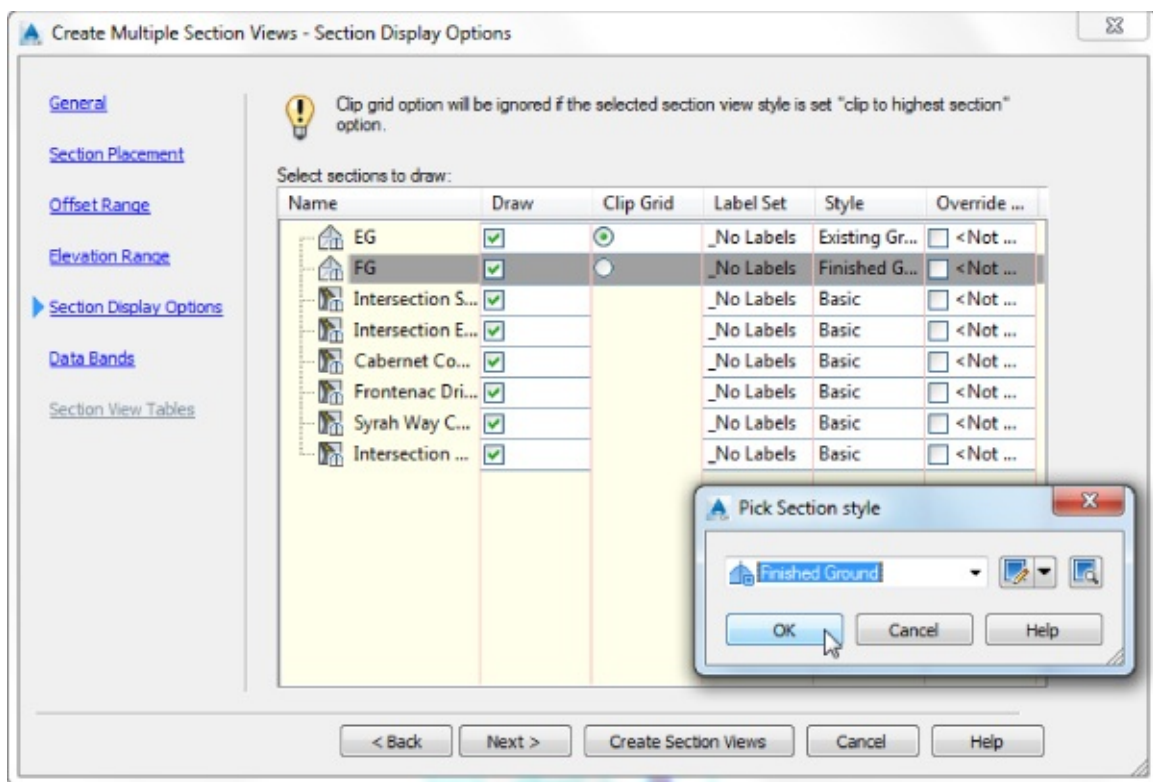


Figure 15.25 Changing styles in the Create Multiple Section Views – Section Display Options wizard page

c. Click Next to advance to the next page.

8. On the Data Bands page, do the following:

a. Verify that the Select Band Set drop-down list is set to Offsets Only.

b. Under Set Band Properties, verify that Surface1 is set to EG and Surface2 is set to FG, as shown in [Figure 15.26](#).

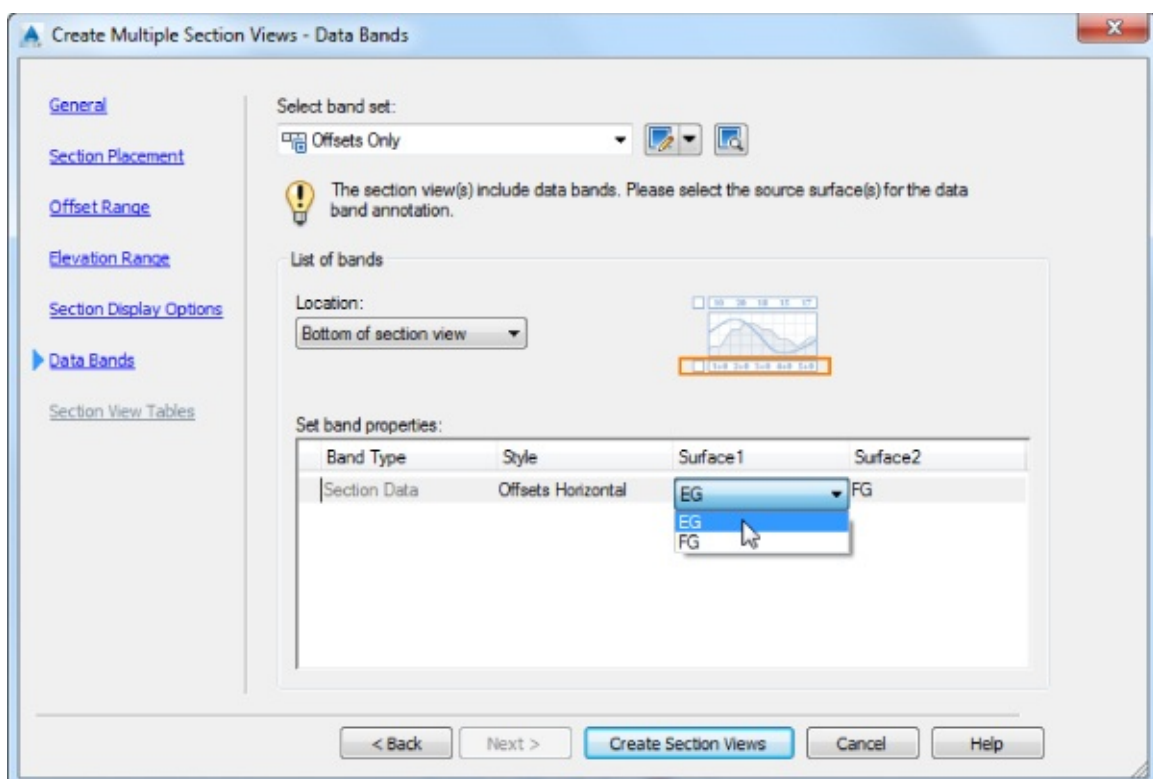


Figure 15.26 Create Multiple Section Views – Data Bands wizard page

c. Click Create Section Views to dismiss the wizard and place your section views in the drawing.

9. Click a point to the east of the plan view to draw the section views and sheet outlines.

Your drawing should look something like [Figure 15.27](#).

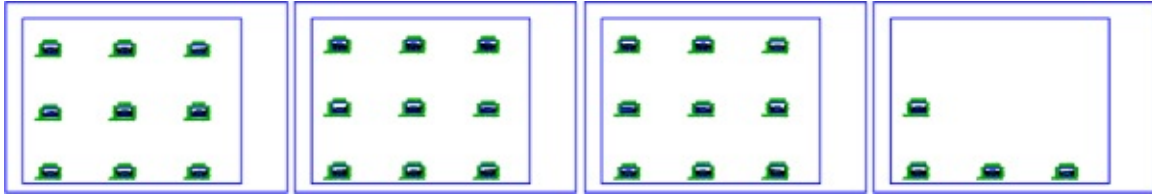


Figure 15.27 The finished multiple section views operation

When this exercise is complete, you may close the drawing. A saved copy of this drawing is available from the book's web page with the filename `1504_MultipleSectionViews_FINISHED.dwg` (`1504_MultipleSectionViews_METRIC_FINISHED.dwg`).

 
Now that you have your production section views, you can begin the process of creating section sheets for plotting.

Creating Section Sheets

Many long transportation projects such as highways, light-rail, or canals require the production of many section sheets. In this exercise, you'll convert a section view group into a collection of sheets and place them in a new sheet set.

1. Open the `1505_CreatingSectionSheets.dwg` (`1505_CreatingSectionSheets_METRIC.dwg`) file.

This file contains the section view group for the Frontenac Drive alignment.



2. From the Output tab > Plan Production panel, choose Create Section Sheets to display the Create Section Sheets dialog.

3. In the Create Section Sheets dialog, do the following:

4.

1. Verify that New Sheet Set name is set to FrontenacSections (`FrontenacSections_METRIC`).

2. Click the ellipsis to set Sheet Set Storage Location to `C:\Mastering\Ch15\FinishedSheets`.

The Create Section Sheets dialog should now look similar to [Figure 15.28](#).

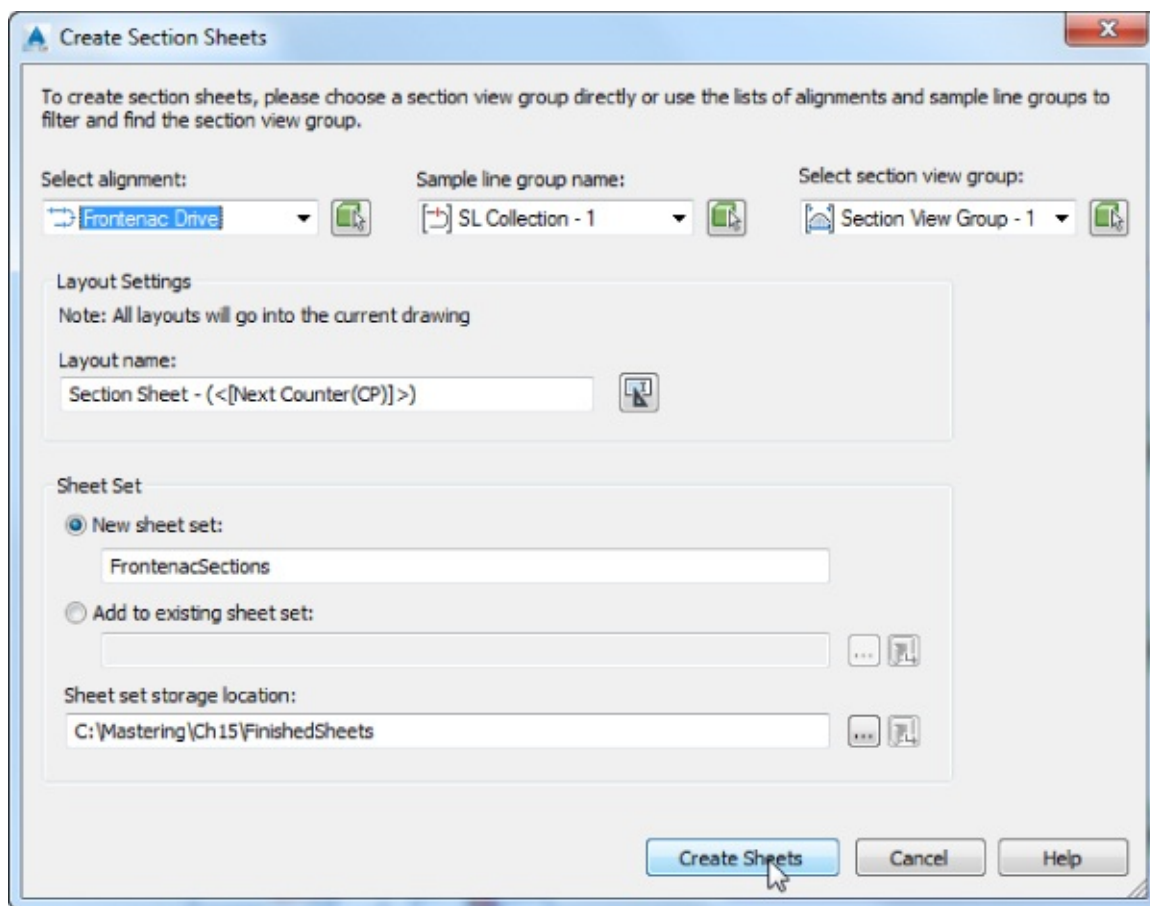


Figure 15.28 The Create Section Sheets dialog

Note that when you are creating section sheets in a drawing where there is more than one section view group, you will have to repeat this command for each section view group.

5. Click Create Sheets to dismiss the dialog and generate sheets.

Before creating the sheets, Civil 3D must save your current drawing.

6. Click OK when prompted to save.

The drawing is saved and Civil 3D will generate new layouts in the drawing and sheets in a sheet set. Sheet Set Manager will appear.

7. Switch to the Section Sheet - (2) layout tab.

Your layout should look something like [Figure 15.29](#).



Figure 15.29 A completed section sheet

8. Close the Sheet Set Manager palette.

When this exercise is complete, you may close the drawing. A saved copy of this drawing is available from the book's web page with the filename `1505_CreatingSectionSheets_FINISHED.dwg` (`1505_CreatingSectionSheets_METRIC_FINISHED.dwg`).

While there are still some tweaks to be made to any sheet, large portions of the mundane details are handled by the wizards and tools. There are some elements that you can modify to customize these details for your organization, and you'll look at those in the next section.

Drawing Templates

The beginning of this chapter mentioned that there are several prerequisites to using the Plan Production tools in Civil 3D. The list includes drawing templates (DWT) set up to work with the Plan Production feature and styles for the objects generated by this feature. In this section of the chapter, you'll learn how to prepare drawing templates for use in creating your finished sheets.

Civil 3D ships with several predefined template files for various types of sheets that Plan Production can create. By default, these templates are installed in a subfolder called `Plan Production`, which is located in the standard `Template` folder. You can see the `Template` folder location by opening the `Files` tab of the `Options` dialog, as shown in [Figure 15.30](#).

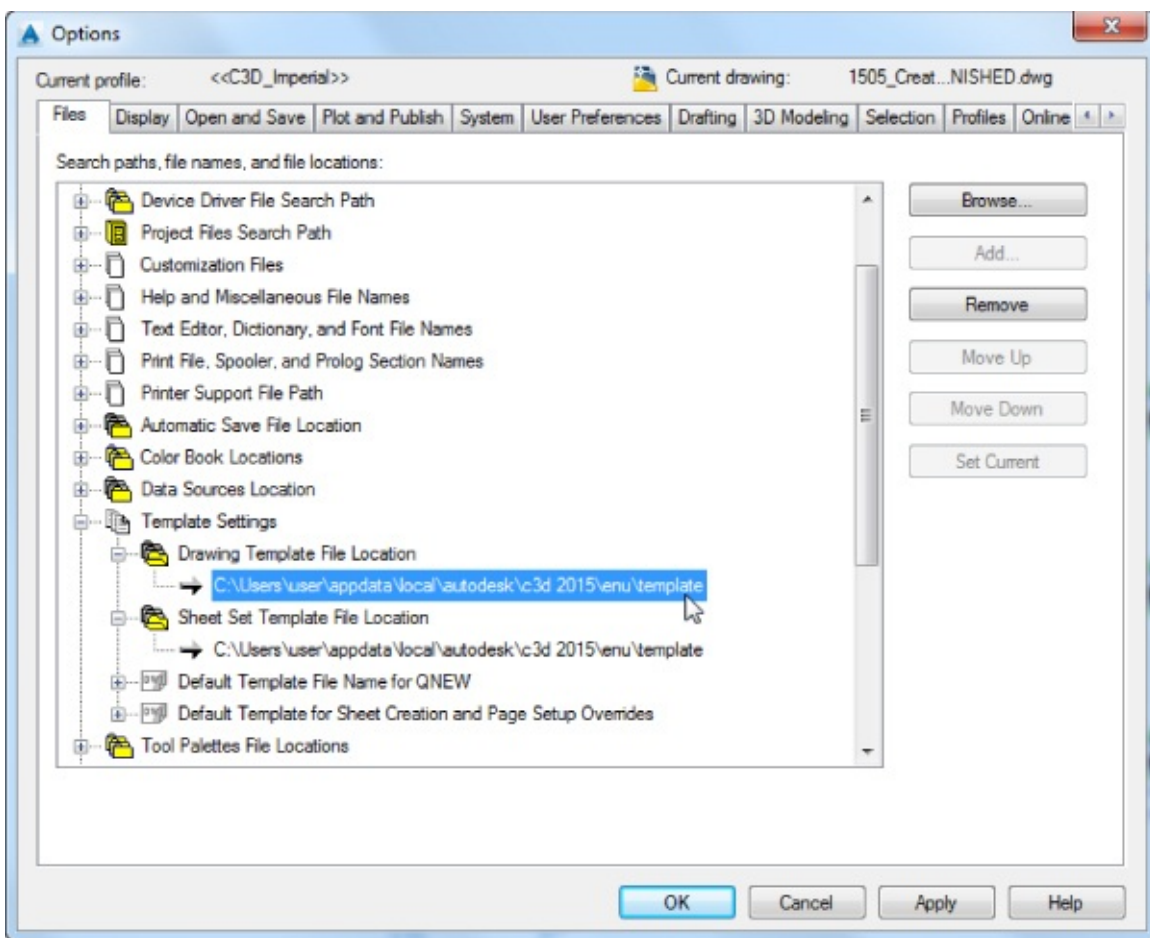


Figure 15.30 Template files location

[Figure 15.31](#) shows the default contents of the Plan Production subfolder. Notice the templates for Plan, Profile, and Plan And Profile sheet types. There are Imperial and metric versions of each.

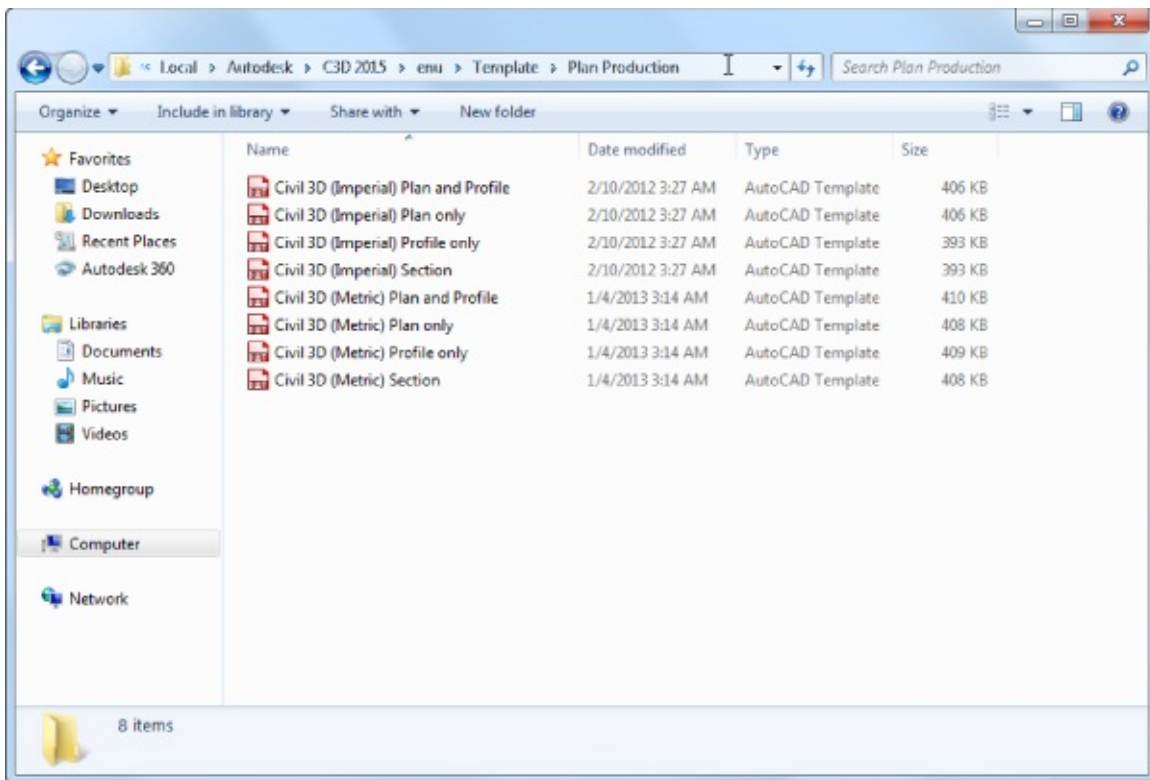


Figure 15.31 Plan Production DWT files

As previously discussed, each template contains layout tabs with pages set to various sheet sizes and plan

scales. For example, the `Civil 3D (Imperial) Plan and Profile.dwt` template has layouts created at various ANSI and ARCH sheets sizes and scales, as shown in [Figure 15.32](#).



Figure 15.32 Various predefined layouts in standard DWT

If you decide to make your own Plan Production templates, it is good practice to provide multiple drawing sizes and scales so that you have them available when you go to make your sheets. But beyond just having them available, make sure that the layout names that you provide in your Plan Production template are descriptive enough that you know which one to select. You may also insert a border on each layout tab or opt to externally reference the border later, after sheets are created.

The viewports in these templates must be rectangular in shape and must have Viewport Type set to Plan, Profile, or Section, depending on the intended use. You set Viewport Type on the Design tab of the Properties dialog, as shown in [Figure 15.33](#).

Irregular Viewport Shapes

Just because the viewports must start out rectangular doesn't mean they have to stay that way. Experiment with creating viewports from rectangular polylines that have vertices at the midpoint of each side of the viewport (not just at the corners). After you've created your sheets using the Plan Production tool, you can stretch your viewport into irregular shapes. You can also convert a rectangular viewport into an irregular viewport by selecting the viewport, right-clicking, selecting Viewport Clip, and following the prompts (you could also type **vpclip** at the command prompt and follow the prompts).

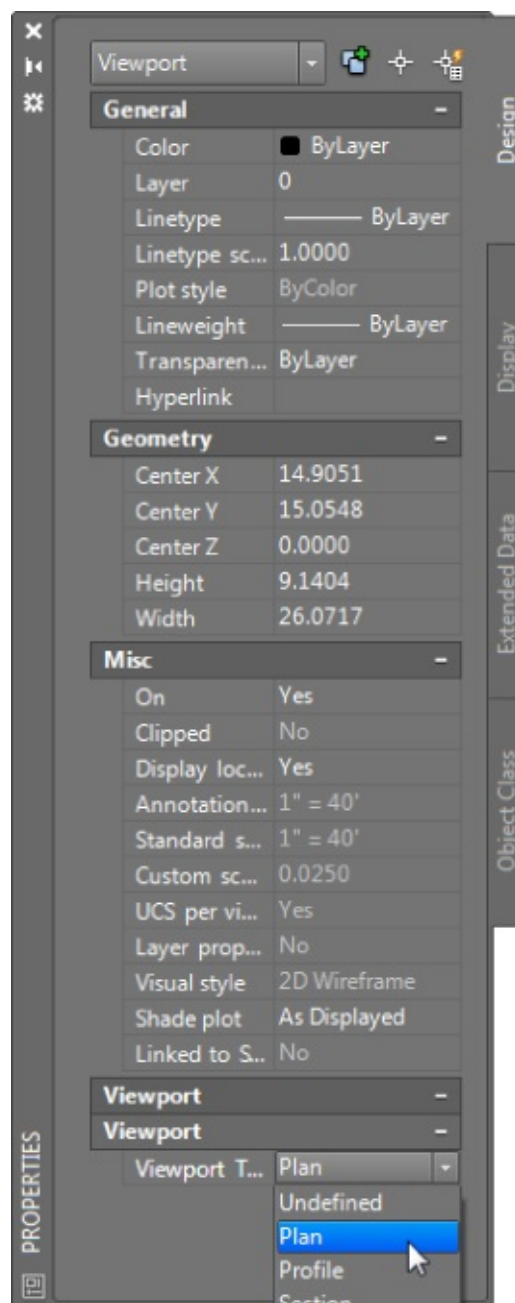


Figure 15.33 Viewport Properties – Viewport Type

The Bottom Line

Create view frames. When you create view frames, you must select the template file that contains the layout tabs that will be used as the basis for your sheets. This template must contain predefined viewports. You can define these viewports with extra vertices so you can change their shape after the sheets have been created.

Master It Open the MasterIt_1501.dwg (MasterIt_1501_METRIC.dwg) file. Run the Create View Frames Wizard to create view frames for Alignment A in the current drawing. (Accept the defaults for all other values.) These view frames will be used to generate Plan and Profile sheets on ARCH D (ISO A1 for metric users) sheets at 20 scale (1:200 scale for metric users) using the plan and profile template MasteringPandPTemplate.dwt or MasteringPandPTemplate_METRIC.dwt. All files should be saved in C:\Mastering\Ch15\.

Edit view frames. The grips available to edit view frames allow the user some freedom on how the frames will appear.

Master It Continue working in the previous exercise file or open the MasterIt_1501_FINISHED.dwg (MasterIt_1501_METRIC_FINISHED.dwg) file, and move the VF- (1) view frame to Sta. 2+20 (or Sta. 0+050 for metric users) to lessen the overlap. Then adjust Match Line 1 (or Match Line 2 for metric users) so that it is now at Sta. 4+25 (or Sta. 0+200 for metric users) and shorten it so that the labels are completely within the view frames.

Generate sheets and review Sheet Set Manager. You can create sheets in new drawing files or in the current drawing. The resulting sheets are based on the template you chose when you created the view frames. If the template contains customized viewports, you can modify the shape of the viewport to better fit your sheet needs.

Master It Open MasterIt_1503.dwg (MasterIt_1503_METRIC.dwg) file. Run the Create Sheets Wizard to create plan and profile sheets in the current drawing for Alignment A using the plan and profile template MasteringPandPTemplate.dwt or MasteringPandPTemplate_METRIC.dwt. Make sure to choose a north arrow and add the sheets to a new sheet set named Alignment A (Alignment A_METRIC for metric users). (Accept the defaults for all other values.)

Create section views. More and more municipalities are requiring section views. Whether this is a mile-long road or a meandering stream, Civil 3D can handle it nicely via Plan Production.

Master It Open the MasterIt_1504.dwg (MasterIt_1504_METRIC.dwg) file. Create section views and Plan Production section sheets in a new sheet set for Alignment A using the using the Road Section section view style and the section sheet template MasteringSectionTemplate.dwt or MasteringSectionTemplate_METRIC.dwt. Make sure the sections are set to be generated on ARCH D (ISO A1 for metric users) sheets at 20-scale (1:200 scale for metric users). Also, make sure to provide as Sheet Set name Alignment A_XC (Alignment A_XC_METRIC for metric users). (Accept the defaults for all other values.) All files should be saved in C:\Mastering\Ch15\FinishedSheets.

Chapter 16

Advanced Workflows

The Autodesk® AutoCAD® Civil 3D® program is unique in that with a few exceptions, the data you create is stored in the DWG file. Using data shortcuts will allow you to divide the work among your co-workers and keep your drawing size down. Using data shortcuts will also enable you to keep your existing surface in your topographic survey file and reference it into your design files.

In this chapter you will also look at LandXML as a tool to share data. Using this file format, you can transfer “intelligent” data without a DWG file.

In this chapter, you will learn to

- Create a data shortcut folder
- Create data shortcuts
- Export to earlier releases of AutoCAD
- Export to LandXML

Data Shortcuts

Certification Objective A *data shortcut* is a link between drawings that allows specific types of Civil 3D data to be shared. The shortcut itself does not contain data, but it is a pointer, directing Civil 3D to read information from a common pool of data. A *data shortcut* is created in the source drawing, and a *data reference* is the manifestation of the data in a recipient drawing.

There are many situations in which you need data or information to link between drawings. Connections between drawings can be in the form of external references (XRefs), data references, or a combination of the two. These two options are similar but not the same. Let's compare ([Table 16.1](#)).

Table 16.1 XRef vs. data reference

XRef	Data Reference
For most objects, XRef is a graphic-only representation of objects created in another drawing.	This is an information/graphic-only link to Civil 3D data created in another DWG file.
Any objects (base AutoCAD or Civil 3D) are displayed in XRefs.	Only specific types of Civil 3D data can be used as data references.
Visibility of objects is controlled by original drawing styles and layers.	Visibility of data is controlled by host drawing styles and layers.
With the exception of Catchment and Intersection objects, you can use the Civil 3D Add Labels commands on items in an XRef. All other objects (e.g., Surfaces, Alignments, Pipes, Profile Views, etc.) can be labeled through an XRef.	To use Civil 3D object data in design (i.e., using a surface to create an existing ground profile, or using an alignment as a corridor baseline) the object must be data referenced.
A drawing containing a Civil 3D corridor can be XRef'ed into a host drawing. Sample lines can pull corridor data from the XRef.	A data reference to an alignment in conjunction with an XRef to the corridor enables sample lines to be created in a separate drawing.

A feature introduced in Civil 3D 2014 brought another important exception to the general rule that external references are “graphics only.” Users now have the ability to use figures, lines, polylines, and feature lines as corridor targets through an external reference.

As noted, only Civil 3D objects can be used with data shortcuts. Not all object types are available through shortcuts. The following objects are available for use through data shortcuts:

- Alignments
- Surfaces
- Profiles
- Pipe networks
- Pressure networks
- View frame groups

A Note about the Exercises in This Chapter

This chapter is about workflow—therefore, it is difficult to jump in partway through the chapter. In order to get the most out of the exercises, you should work from the beginning to end, because all of the exercises build on the previous ones. If you skip any exercises (including the Real World Scenario, “Creating Cross-Section Sheets in Their Own Drawing”), the subsequent steps will not work.

Use the recommended names for objects and drawings you create on your own. Doing so will make things go much smoother for you.

Remember that you can always get the original files from the chapter folder that you can download from www.sybex.com/go/masteringcivil3d2015.

Getting Started

When you first create a data shortcut project, you have the option of using a *project template*. A project template is simply a set of folders, subfolders, and files that is created to help you keep your file store organized.

In the following exercise, you will create folders for use when creating a data shortcut project:

1. Open Windows Explorer and navigate to C:\Civil 3D Project Templates.
2. Create a new folder titled **MasteringCivil3D2015**.
3. Inside MasteringCivil3D2015, create subfolders called **Design**, **Documents**, **Sheets**, and **Survey**, as shown in [Figure 16.1](#).

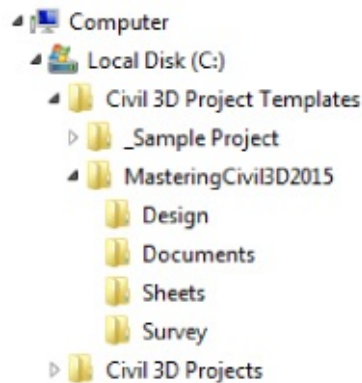


Figure 16.1 Folder structure and standard project files should be included in the project template.

4. Locate the file 1601_Project Checklist.doc from this chapter's files that you downloaded from www.sybex.com/go/masteringcivil3d2015.
5. Place the file in the Documents folder you created in step 3.
6. Locate the file 1601_SheetSetTemplate.dst from this chapter's files.
7. Place the file in the Sheets folder you created in step 3.

This directory structure will appear when a data shortcut project is created. A Documents folder is included as an example of other, non-Civil 3D–related folders you might need in your project. The 1601_Project Checklist.docx and 1601_SheetSetTemplate.dst files will be copied automatically to each project you create from this template.

A completed version of this set of folders is in the dataset for your reference and is called 1601_MasteringC3D2015_FINISHED.

Setting a Working Folder and Data Shortcut Folder

You can think of the working folder as a project drive. The working folder can contain a number of projects, each with a data shortcut folder where the shortcut files reside.

In this exercise, you'll set the working folder and create a new project:

1. Create a new blank drawing using the template of your choice. You won't save this file, but you do need to have a file open to see the Prospector tab of Toolspace.
2. From the Manage tab > Data Shortcuts panel, click Set Working Folder to display the Browse For Folder dialog, as shown in [Figure 16.2](#).

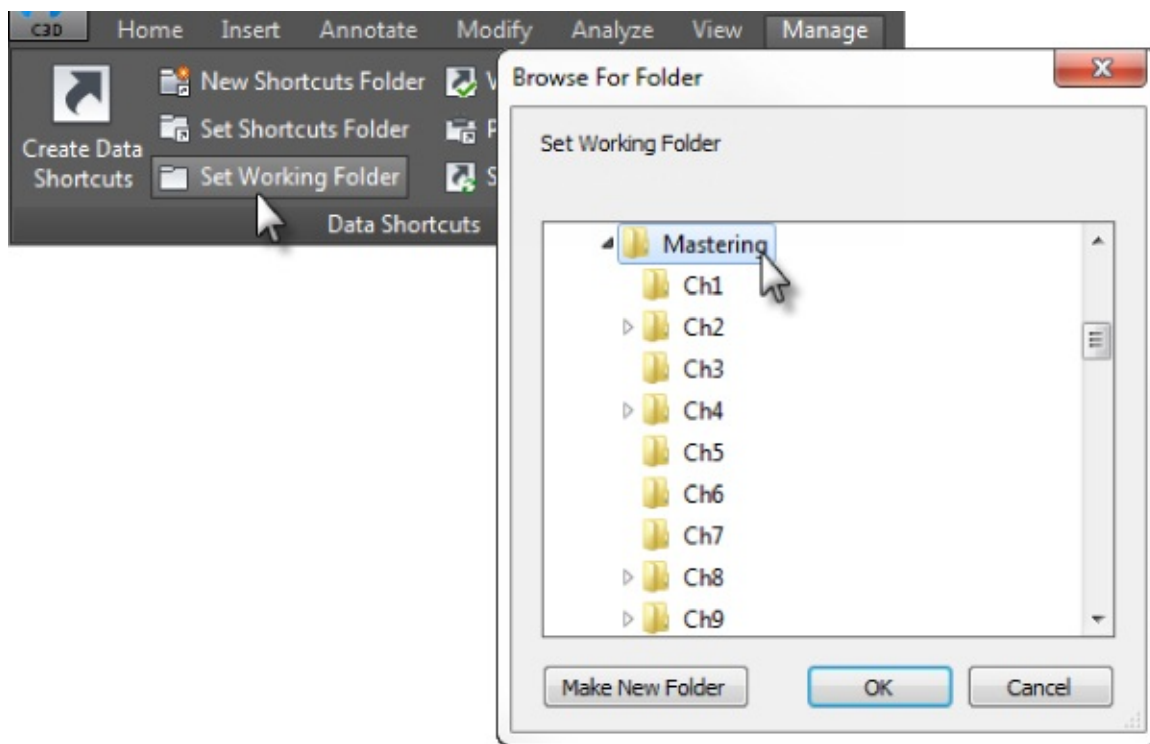


Figure 16.2 Creating a new working folder

3. In the Browse For Folder dialog, on Local Disk (C:), browse to the Mastering folder you created for your course files.
4. With the Mastering folder highlighted (as shown in [Figure 16.2](#)), click OK.
5. From the Manage tab > Data Shortcuts panel, click New Shortcuts Folder to display the New Data Shortcut Folder dialog, shown in [Figure 16.3](#).

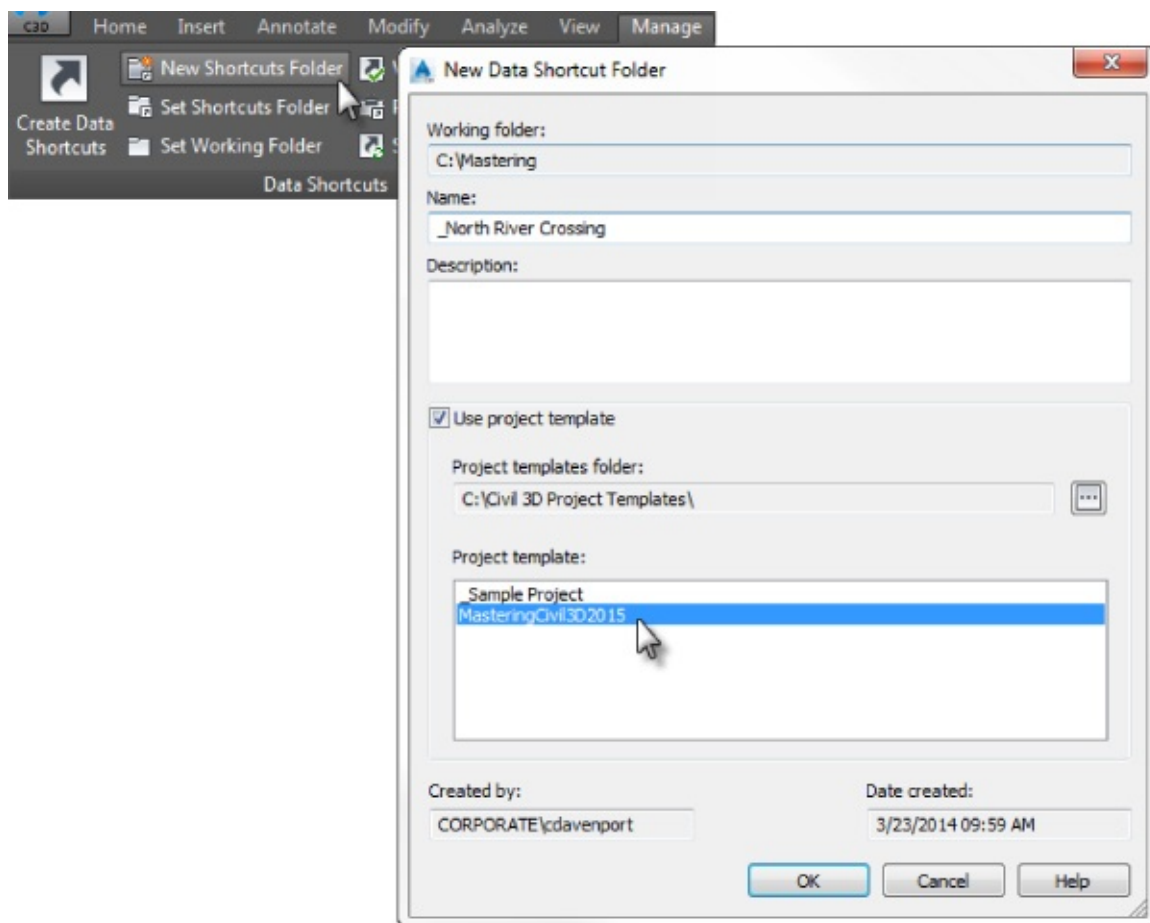


Figure 16.3 Creating a new shortcut folder

6. In the New Data Shortcut Folder dialog, type **_North River Crossing** for the Name field and click the check box for Use Project Template.
7. Select the **MasteringCivil3D2015** folder from the list, as shown in [Figure 16.3](#), and click OK to dismiss the dialog.
8. Notice that the Data Shortcuts branch in Prospector now reflects the path of the project you just created, as shown in [Figure 16.4](#).



Figure 16.4 The Data Shortcuts area listed in Prospector

If you open Windows Explorer and navigate to **C:\Mastering_North River Crossing**, you'll see the folders from the **MasteringCivil3D2015** project template plus a special folder named **_Shortcuts**, as shown in [Figure 16.5](#). This folder is created for the data shortcut XML files. When a data shortcut is defined, an XML file containing the path, drawing name, and originating object name is placed in this folder.






Figure 16.5 Your new project shown in Windows Explorer; Mastering is the working folder. _North River Crossing is the data shortcut folder.

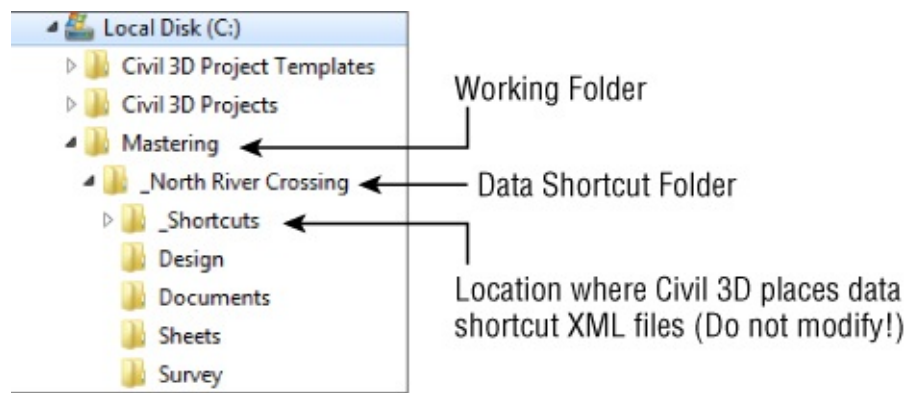In business, your working folder and data shortcuts folder should be on a network drive. If you have an established workflow for creating project folders and don't really need to use the Civil 3D project template, you can do the following:

1. Manually create a folder named **_Shortcuts** in your preferred location in your project folder structure. This folder must at least be two levels deep in your directory structure.
2.  On the Manage tab > Data Shortcuts panel, click Set Working Folder and select a folder two levels above the _Shortcuts folder.
3.  On the Manage tab > Data Shortcuts panel, click Set Shortcuts Folder and select the folder that is displayed in the Set Data Shortcut Folder dialog, as shown in [Figure 16.6](#). This dialog will display only folders that contain a _Shortcuts subfolder.

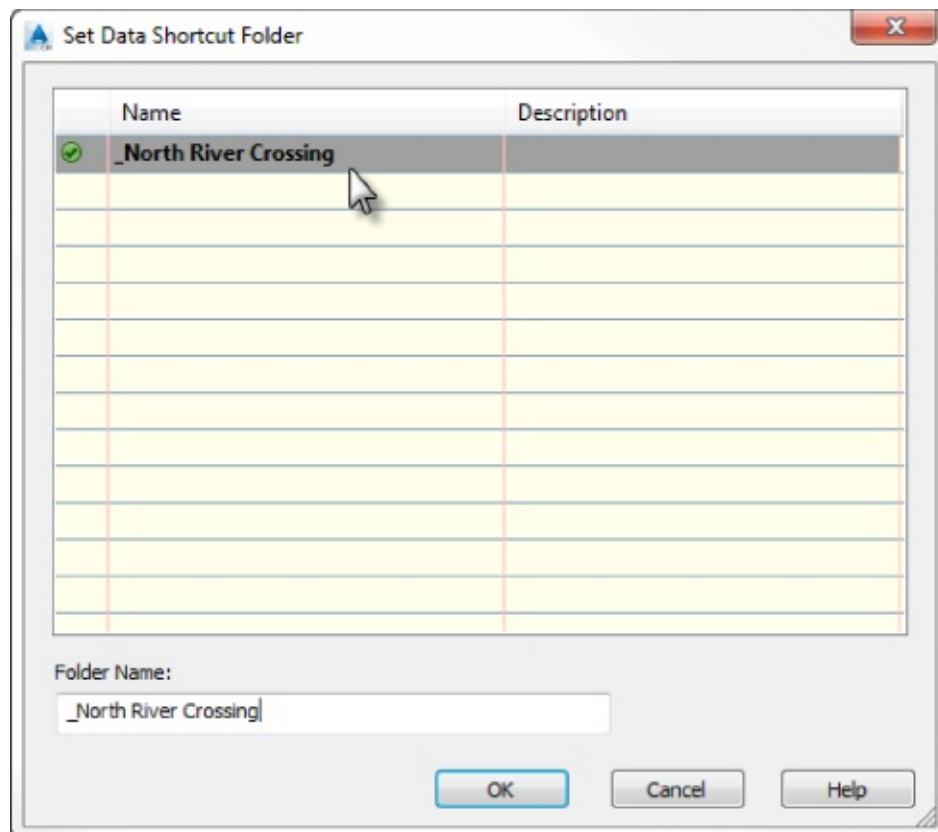


Figure 16.6 Select the folder that contains your manually created _Shortcuts folder in the Set Data Shortcut Folder dialog.

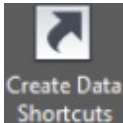
Creating Data Shortcuts

With a shortcut folder in place, it's time to use it. In this exercise, you'll publish data shortcuts for the alignments and layout profiles in your project:

1. Open the `1602_ExistingSurface.dwg` (`1602_ExistingSurface_METRIC.dwg`) file, which you can download from this book's web page.
2. This drawing contains points and an existing ground surface.
3. From the Application menu, click **Save As**, and save a copy of this drawing to `C:\Mastering_North River Crossing\Survey`.

Locating Your Drawing Files

When you're working with data shortcuts, the location of your drawing files containing your data is very important. If you create a data shortcut to a surface and then later move the drawing file containing the surface, you will cause a broken reference in every file containing a reference to the surface. Plus, the data shortcut to the surface in the Prospector will no longer work. Later in this chapter, the “Fixing Broken References and Drawing Associations” section will explain what to do if relocating or renaming a project is unavoidable.



4. From the Manage tab ➤ Data Shortcuts panel, click **Create Data Shortcuts**.
5. In the Create Data Shortcuts dialog, place a check mark next to Existing Surface, as shown in [Figure 16.7](#), and click OK.

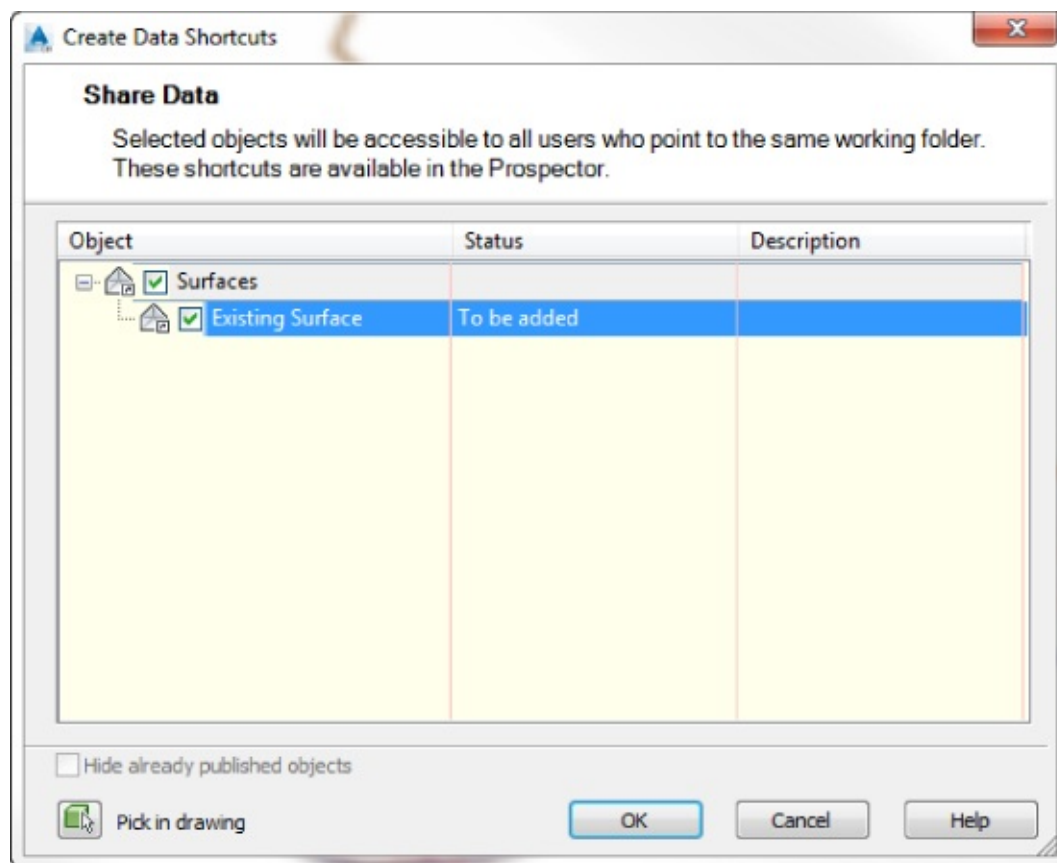


Figure 16.7 Adding surface data to data shortcuts

6. Save and close the current drawing file.
7. Open the 1602_Alignments-Profiles.dwg (1602_Alignments-Profiles_METRIC.dwg) file from your class data.
8. This file contains five alignments that you will add to the data shortcut project.
9. From the Application menu, click Save As, and save a copy of this file to C:\Mastering_North River Crossing\Design.
10. From the Manage tab > Data Shortcuts panel, click Create Data Shortcuts.
11. In the Create Data Shortcuts dialog, place a check mark next to the Alignments collection, which will select all the alignments and profiles if any exist (as shown in [Figure 16.8](#)), and click OK.

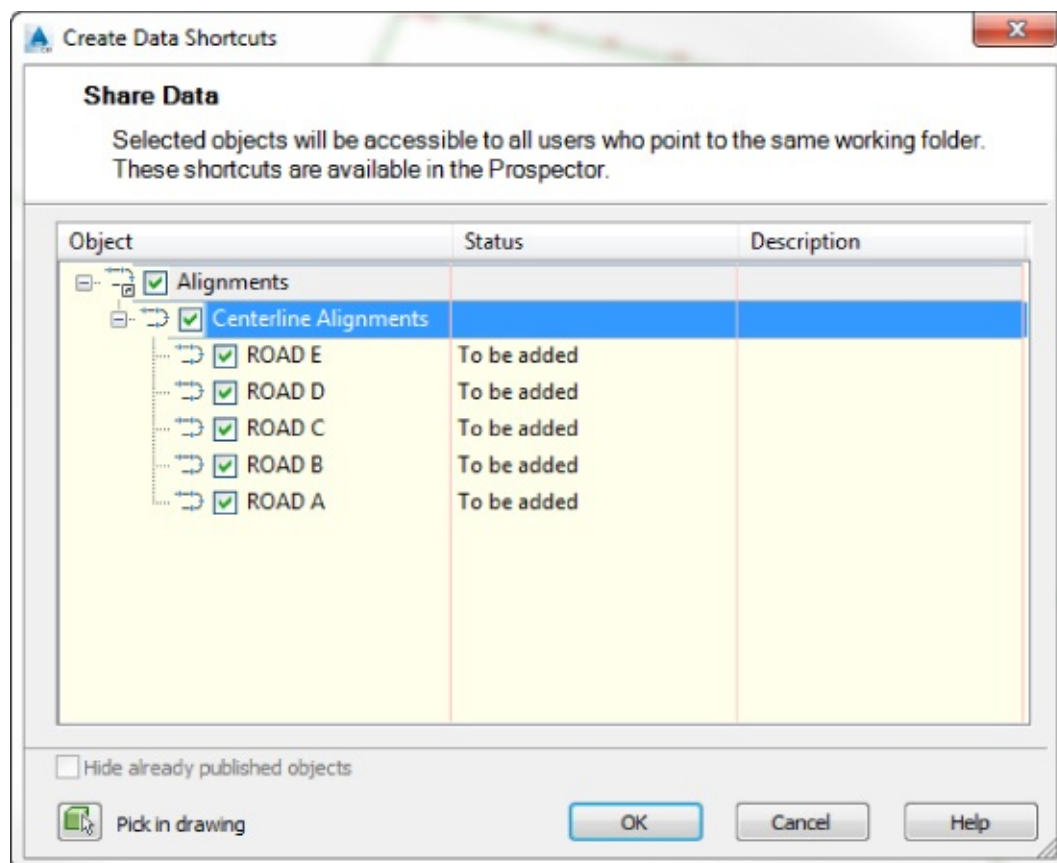


Figure 16.8 Adding alignment data to the pool : of data shortcuts

You should now have surfaces and alignments available for use in the data shortcuts list in Prospector, as shown in [Figure 16.9](#). Notice in [Figure 16.9](#) how highlighting the data shortcut in the list reveals the Source Location at the bottom of Toolspace.

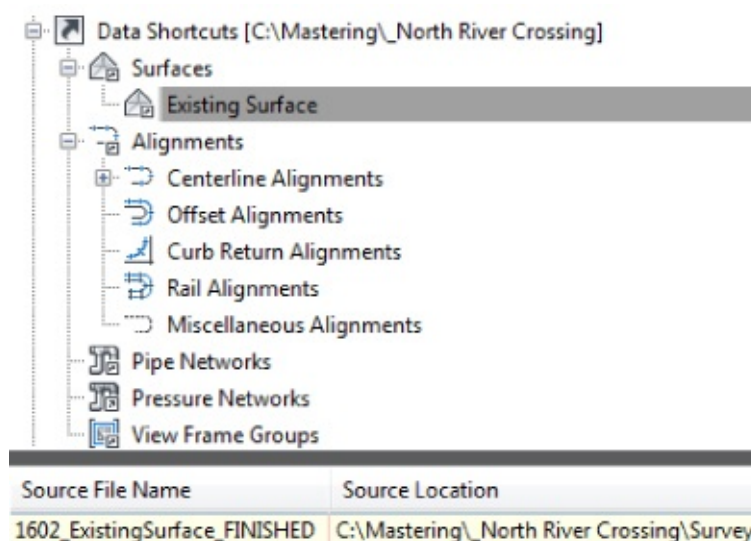


Figure 16.9 List of Civil 3D data shortcuts available to the current project

Keep 1602_Alignments-Profiles.dwg (1602_Alignments-Profiles_METRIC.dwg) open for the next exercise.

Creating a Data Reference

Now that you've created the shortcut files to act as pointers back to the original drawing, you'll use them in other drawings. In this section, you will create and use data references.

Data references are made using the Data Shortcuts branch within Prospector. In this exercise, you'll create a reference to the surface you previously shared to the project.

You need to have completed the previous exercises to continue.

1. Keep working in 1602_Alignments-Profiles.dwg (1602_Alignments-Profiles_METRIC.dwg).
2. Expand the Prospector > Data Shortcuts > Surfaces collection, right-click Existing Surface, and select Create Reference, as shown in [Figure 16.10](#).

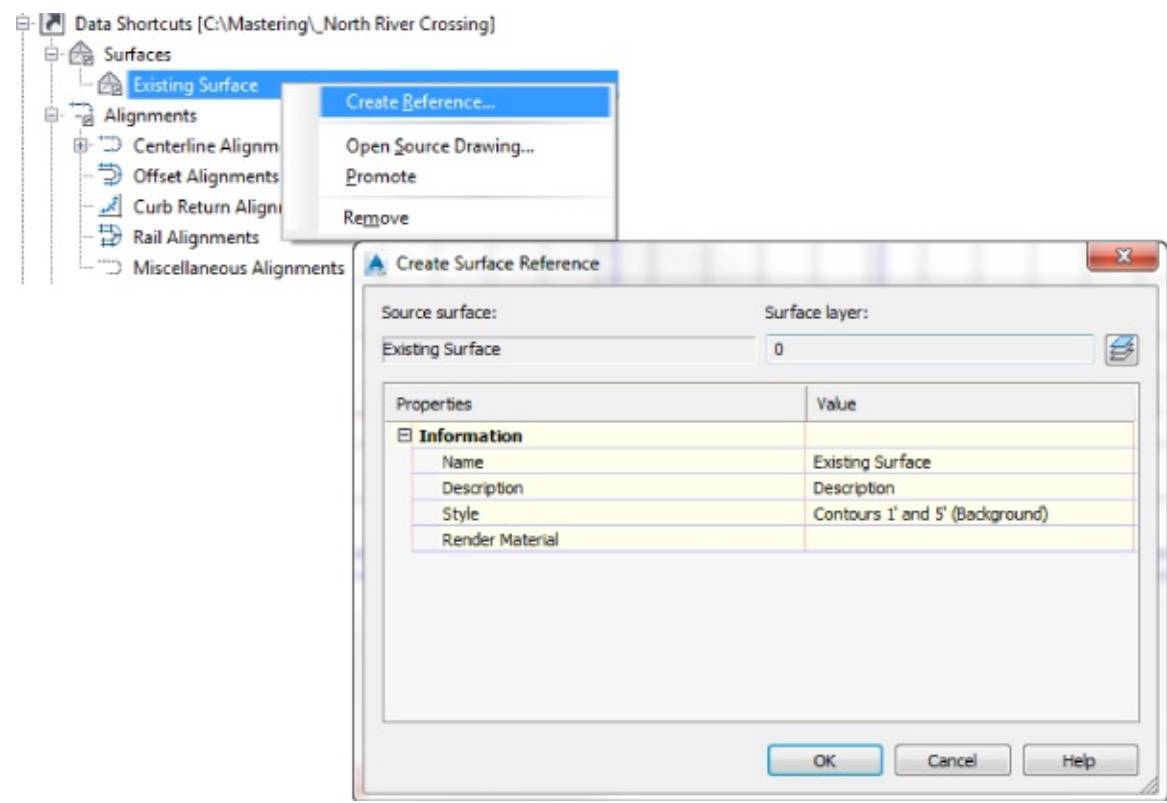


Figure 16.10 The Create Surface Reference dialog

3. In the Create Surface Reference dialog, leave all surface options at their defaults, and click OK. Zoom extents to view the surface.
4. Save the current drawing and keep it open for the next exercise.

You should now see the surface in the drawing. At first glance, it does not look different from other surfaces you've worked with within Civil 3D. If you examine the Surfaces branch of Prospector, however, you'll see that there is no Definition collection (as shown in [Figure 16.11](#)). You cannot edit a surface or any other object that is data referenced. If a change needs to be made to Existing Surface, you would need to open the drawing file where it was originally created.

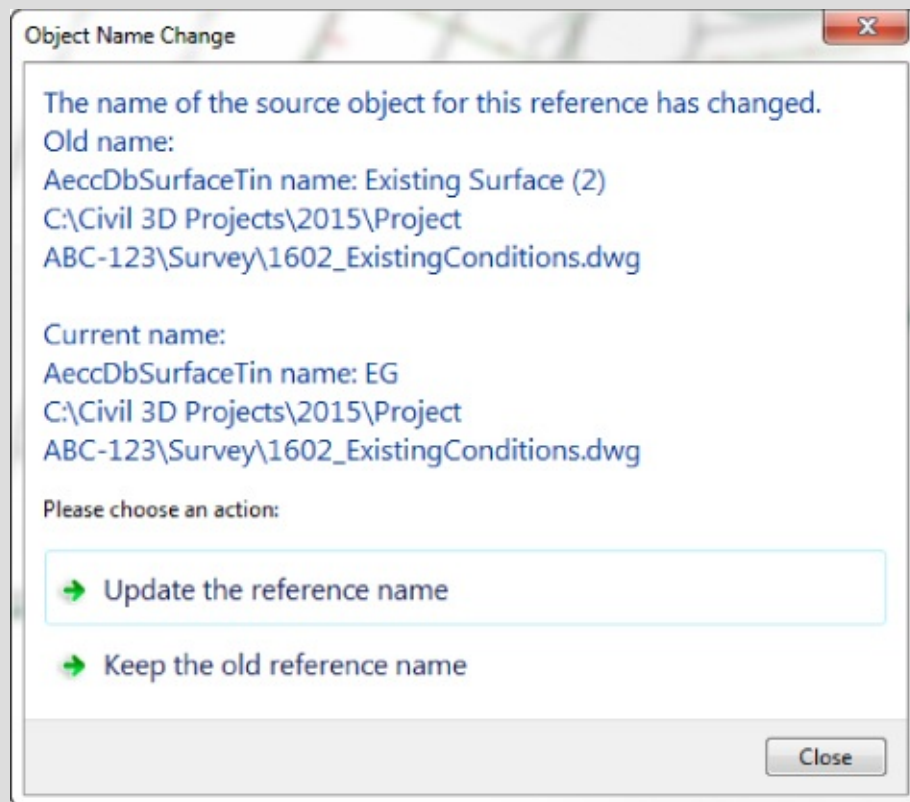


Figure 16.11 You can see and use the surface, but you cannot add to or edit the surface definition.

Any changes to the surface will be communicated through the data shortcut to the drawings where it is referenced. If the drawing is open when a data-referenced source file has been changed, a bubble message will pop up to inform the user that the item must be synchronized to view the most up-to-date information. If a recipient drawing is closed at the time the change takes place, all data references will automatically be synchronized as the file opens.


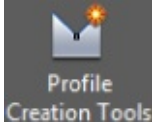
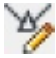
Renaming Objects after Reference Creation

If the objects in the source drawing are renamed, the new name is communicated through the data shortcut upon synchronization. The Object Name Change dialog will open to inform you of the change and give you the choice of accepting the new name or keeping the old.



In the next part of the exercise, you will use the skills you learned in Chapter 7, “Profiles and Profile Views,” to create an existing ground profile and a design profile. After you have all the information, you will use skills from Chapter 9, “Basic Corridors,” to put the information together. You need to have completed the previous exercises to continue.

5. Keep working in 1602_Alignments-Profiles.dwg (1602_Alignments-Profiles_METRIC.dwg).

- 6. Select the ROAD A alignment.
- 7.  In the Alignment contextual tab > Launch Pad panel, click Surface Profile.
- 8. In the Create Profile From Surface dialog, do the following:
 - a. Click Add.
 - b. Click Draw In Profile View.
- 9. In the Create Profile View dialog, click Create Profile View, and click to place the profile view anywhere in the drawing.
- 10.  Select the profile view. From the Profile View contextual tab > Launch Pad panel, click Profile Creation Tools.
- 11. In the Create Profile - Draw New dialog, name the new profile **FG-ROAD A**.
- 12. Set Profile Style to Design Profile and click OK.
- 13.  From the Profile Layout Tools, click Insert PVIs Tabular.
- 14. Enter the data for your unit system, as shown in [Figure 16.12](#); then click OK.

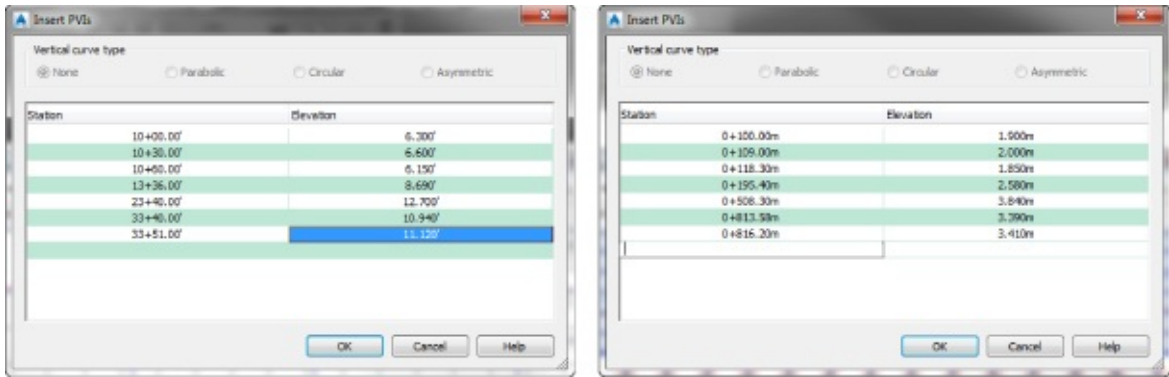



Figure 16.12 Profile data Imperial (left) and metric (right)

- 15. You can close the Profile Layout Tools toolbar when finished.
- 16. Save the drawing.
- 17.  From the Manage tab > Data Shortcuts panel, click Create Data Shortcuts.
- 18. Place a check mark next to Profiles, as shown in [Figure 16.13](#), and click OK.

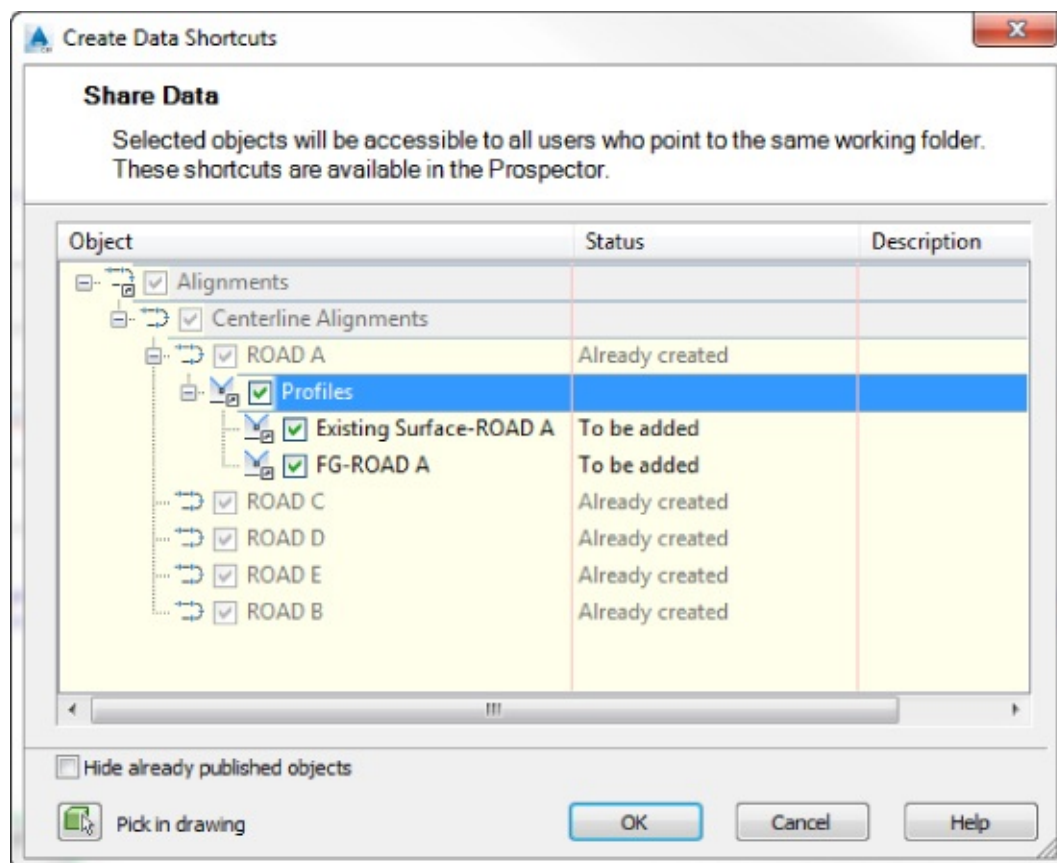


Figure 16.13 Adding additional drawing data to the data shortcut project

The alignments that you added earlier are listed but are grayed out. Once you add an item to the Data Shortcut list, you do not need to add it again. Only new data will be added to the list of data shortcuts. Shown in gray will be the list of items that are already published as data shortcuts. If you find the list of already published items distracting, you can hide all of the published items by clicking the Hide Already Published Objects check box at the bottom of the dialog.

19. Save and close 1602_Alignments-Profiles.dwg (1602_Alignments-Profiles_METRIC.dwg).
20. From your class files, open 1603_Corridor.dwg (1603_Corridor_Metric.dwg).
21. From the Application menu, click Save As, and save the drawing to C:\Mastering_North River Crossing\Design.
22. From the Prospector tab of Toolspace, expand the Data Shortcuts branch, and then expand Surfaces.
23. Right-click Existing Surface, and click Create Reference.
24. In the Create Surface Reference dialog, leave all default settings, and click OK.
25. From the Prospector tab of the toolbar, Data Shortcuts branch, expand Alignments > Centerline Alignments > ROAD A > Profiles.
26. Right-click FG-ROAD A and select Create Reference, as shown in [Figure 16.14](#).

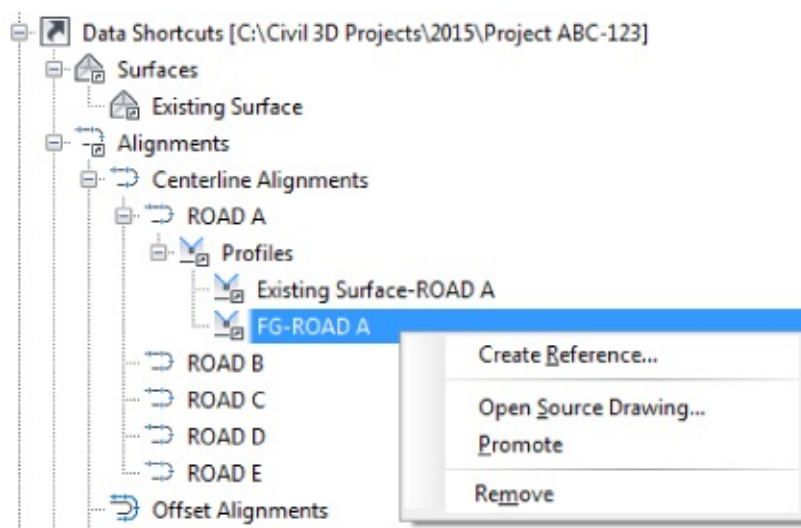


Figure 16.14 Creating a data reference to a profile will automatically create a data reference for its alignment.

27. In the Create Profile Reference dialog, change the Profile Style to Design Profile, and click OK.

If you zoom extents in the drawing, you should see the alignment and existing surface.

The profile data is referenced but is not currently visible. If you wanted to, you could create a profile view. However, you do not need the profile to be visible to create a corridor.

28. From the Home tab > Create Design panel, click Corridor. In the Create Corridor dialog, do the following:

- a. Name the corridor **ROAD A**.
- b. Verify that the alignment is set to ROAD A.
- c. Verify that the profile is set to FG-ROAD A.
- d. Set the assembly to Basic Assembly.
- e. Set Target Surface to Existing Surface.
- f. Clear the check box for Set Baseline And Region Parameters.
- g. Click OK.

29. After the corridor builds successfully, save and close the drawing; you will come back to it later.



Creating Cross-Section Sheets in Their Own Drawing

Unlike plan and profile sheets, cross-section sheets do not give you any options for automatically creating layouts in new sheets.

It is a great idea to create section views in their own drawing for the following reasons:

- The scale used for plotting sections is usually different than for what is used for other parts of the design. You can set your annotation scale to match your plot scale in your section view drawing.
- Corridor drawings already contain lots of data; create section views in their own drawing to keep file size down.

The following exercise builds from what you have already created in this chapter. You will step through the procedure of creating cross-section sheets using a combination of external reference and data shortcut functionality. You may want to review Chapter 12, “Cross Sections and Mass Haul,” if you have trouble completing the steps in this exercise.

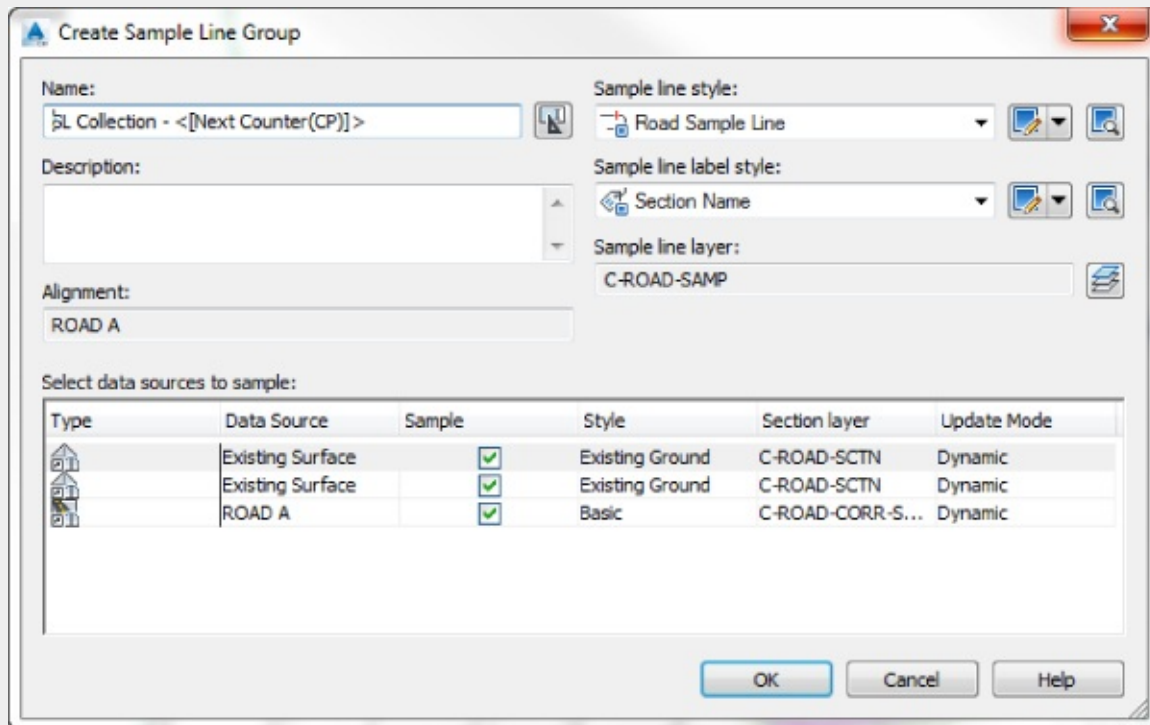
1. Start a new drawing with the Civil 3D template of your choice.
2. Verify that the correct data shortcut project folder is selected, and then save the drawing to the folder C:\Mastering_North River Crossing\Sheets as **1604_Sections.dwg** or if metric, **1604_Section_METRIC.dwg**.
3. From the Prospector tab of Toolspace expand Data Shortcuts > Alignments > Centerline Alignments, right-click ROAD A, and click Create Reference.
4. In the Create Alignment Reference dialog, leave all the defaults and click OK.
5. From the Insert tab > Reference panel, click Attach.
6. At the bottom of the Select Reference File dialog, set Files Of Type to Drawing (*.dwg).
7. Browse to C:\Mastering_North River Crossing\Design, select 1603_Corridor.dwg (1603_Corridor_METRIC.dwg), and click Open. In the Attach Reference dialog, do the following:
 1. Set Reference Type to Overlay.
 2. Set Path Type to Relative Path.
 3. Clear any check boxes under Specify On Screen for Insertion Point, Rotation, or Scale.
 4. Click OK.

You may receive an Unreconciled New Layers message, which you can dismiss by clicking the X.

Zoom extents to get a look at your drawing so far. You now have everything you need to create sample lines in this new drawing, the alignment, and the externally referenced corridor.

8. From the Home tab > Profile & Section Views panel, click Sample Lines.

9. At the Select an alignment <or press enter key to select from list>: prompt, press Enter to pick ROAD A from a list in the Select Alignment dialog, and click OK.
10. In the Create Sample Line Group dialog, keep all default options and styles.



Pause here and take note of a few interesting things. The Existing Surface is appearing even though it is not data referenced. Additionally, you should see the corridor listed. You cannot data reference a corridor, but you can use sample lines to reach through an external reference to sample your corridor model. If you had created corridor surfaces, those too would appear in this dialog.

11. Click OK.
12. From the Sample Line Tools toolbar > Sample Line Creation Methods drop-down, click the By Range Of Stations tool.
13. Set the left and right swath widths to **100'** (30 m).
14. Keep the default sampling increments, and click OK.
15. Press Esc to complete the command.
16. From the Home tab > Profile & Section Views panel > Section Views, click Create Multiple Views.
17. In the Create Multiple Section Views dialog, leave all the defaults, and click Create Section Views.
18. Click to place the sheets in the drawing.
19. Save the drawing and keep it open for the next exercise.

After you have successfully created sample lines, the procedure for creating section sheets is the same as you learned in previous chapters.

Updating References

When you need to make a change, you can use the tools in the Data Shortcut menu to jump back to that file, make the changes, and refresh the reference:

1. If it is not open from the exercise in the Real World Scenario “Creating Cross-Section Sheets in Their Own Drawing,” open the file 1604_Sections.dwg.

Hopefully, you saved it to C:\Mastering_North River Crossing\Sheets.

2. Keep this drawing open and also open the file 1603_Corridor.dwg.
3. In Prospector, expand Data Shortcuts > Surfaces.
4. Right-click Existing Surface and select Open Source Drawing, as shown in [Figure 16.15](#).

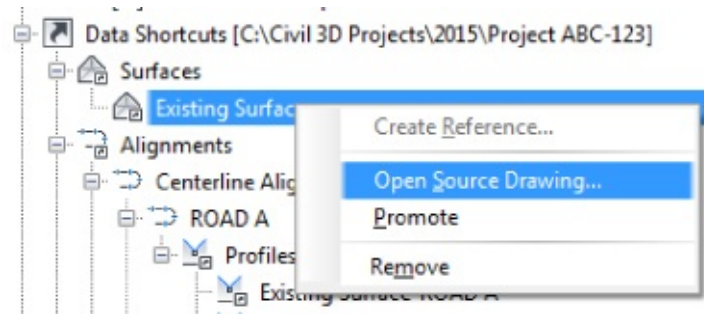


Figure 16.15 Open Source Drawing is a fast way to jump to the drawing you want.

At this point, you should have three drawings open (1602_ExistingSurface, 1603_Corridor, and 1604_Sections; or 1602_ExistingSurface_METRIC, 1603_Corridor_METRIC, and 1604_Sections_METRIC if metric). You can use the tabs across the top of the screen to switch drawings. You can also use the Quick View Drawings button at the bottom of the AutoCAD window to switch between open drawings.

The 1602_ExistingSurface.dwg (1602_ExistingSurface_METRIC.dwg) file should be active and ready to make updates. Remember that the surface is read-only in all other project files; this is the only drawing in which changes can be made to the surface.

In this drawing, you will add polyline contours to the surface definition. The change to the surface will affect all drawings where the surface is used as a data reference. The dynamic communication between drawings shows the power of the Data Shortcut tool.

5. Select the surface in the drawing window.



6. On the contextual ribbon > Modify panel > Add Data tool, select Contours.
 - a. In the Add Contour Data dialog, under Description, enter **Mound** and click OK.
 - b. In the drawing window, select the green polyline contours with a crossing selection box.
 - c. Press Enter when finished.
7. Save and close 1602_ExistingSurface.dwg (or 1602_ExistingSurface_METRIC.dwg).
8. Switch drawings so that 1603_Corridor.dwg (1603_Corridor_METRIC.dwg) is the active drawing.

Shortly after bringing this drawing to the forefront, you should see a bubble message appear indicating that data shortcut definitions may have changed, as shown in [Figure 16.16](#).

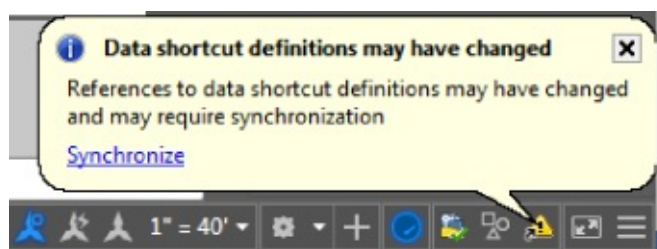



Figure 16.16 Civil 3D will send the user a message when a data-referenced object has changed.

9. Click the Synchronize link in the message.

 In some situations, you may not see the large bubble message. You may just see a warning symbol in the reference indicator at the bottom of the screen. In that case, you can always synchronize directly from the context menu of the referenced object, as shown in [Figure 16.17](#).

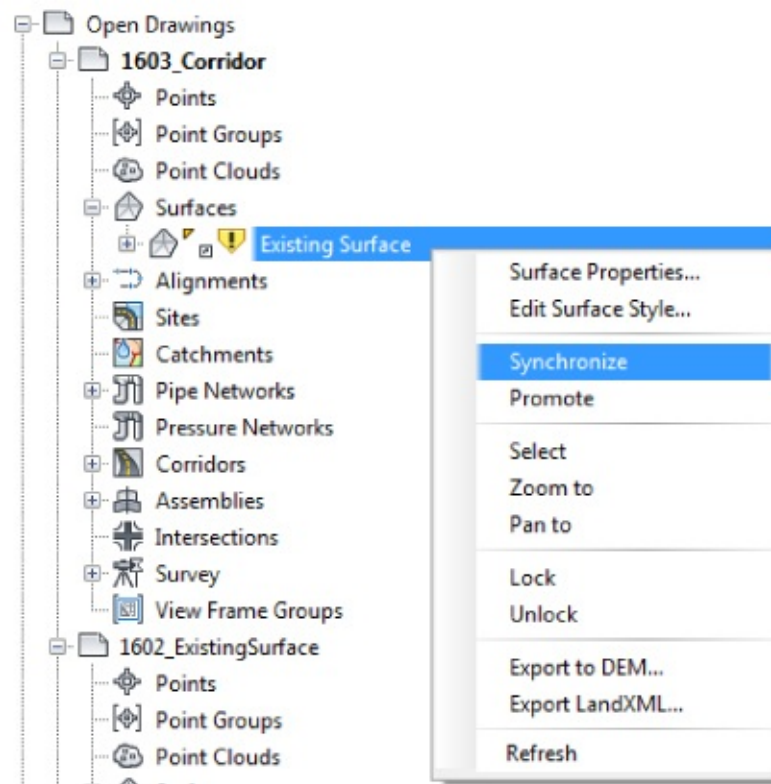


Figure 16.17 Synchronizing from the object's context menu

You may receive a message in Panorama indicating that the item was synchronized.

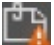
10. Dismiss this message by clicking the green check box.

The surface that changed is used as a target in the corridor; therefore, the corridor needs to be rebuilt.

11. Expand Prospector > Corridors, right-click the ROAD A corridor, and select Rebuild.

12. Save and close 1603_Corridor.dwg (1603_Corridor_METRIC.dwg).

13. Switch to 1604_Sections.dwg if it is not already current.

 This time, you will receive a message that your external reference file has changed, as shown in [Figure 16.18](#). If you accidentally dismiss this message without updating, a warning symbol will remain in the tray area at the bottom of your screen. You can always right-click to reload the reference from this icon.

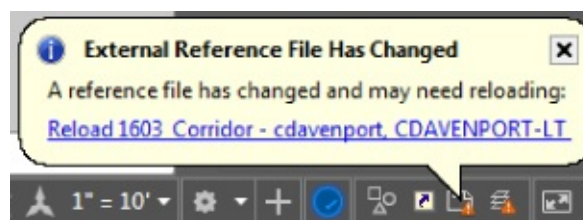


Figure 16.18 Reload the external reference to ensure your cross sections reflect the design update.

4. Zoom to the section view at station 16+00 (0+300 if metric) and take a look at the section line representing Existing Surface.
5. Click Reload 1603_Corridor or 1603_Corridor_METRIC if metric.

Your sections should now reflect all the design changes. If you receive a message regarding unreconciled layers, click the X to dismiss it.

6. Save and close all drawings.

A completed version of the project folder with updates can be found with this chapter's dataset. The folder is called `_North River Crossing`.

Best Practices for Employing Data Shortcuts

When people first add data shortcuts into their workflow, they often have the following questions:

I only work on small sites by myself. Do I need to use data shortcuts? Even if you work on very small projects, you should use data shortcuts for cross-section sheets.

How should I break up my project? Every project is different, of course, but use these guidelines:

Existing Survey and Surface The first drawing you create is usually the existing conditions. Keep survey points, figures, and the existing surface together in the first drawing. Create a data shortcut to the existing surface. Points can't be shared via data shortcuts, but you can always use a point query to pull specific points between drawings if you have access to the survey database.

Alignments and Profiles While the existing surface is being fine-tuned, you can get to work on developing the alignments and profiles right away. Alignments and profiles are fairly lightweight in terms of how much data they consume. You can usually store all of your project's alignment and profile data in the same DWG file.

Corridors If you're working with intersections, alignments and profiles must live in the corridor drawing since the intersection tool needs to override elevations on secondary profiles.

Use multiple corridor drawings when dealing with a large network of roads. This way several designers can work on different segments of the project at the same time. Be mindful not to put too much data in one file—you may want to keep interchanges and roundabouts in their own drawings. At the end of the process, data shortcuts will allow you to piece in the proposed surface.

Pipe Networks and Pressure Networks Pipe networks and pressure pipe networks can be

used with data shortcuts. It is okay to put a large network in one file, but you may want to split the type of pipe network (storm versus sanitary, for example) if different designers are working on portions concurrently. Interference checks work between gravity pipe networks even if they are data references.

Site Grading Surfaces made from grading groups like ponds are good candidates for data shortcuts. So are any other site component that can be represented by a surface like a building pad, berm, or even a parking lot.

Where is the data stored? The data for a data shortcut is stored in the source DWG file. The data shortcut file itself is simply a pointer that keeps track of filenames and paths. No object data is stored with the data shortcut.

Can I store my working folder and data shortcut folder on a network? Yes! This is an excellent way to work. You will want to keep your working folder, data shortcut folder, and project drawings on a local network drive, however (i.e., within your building).

What if I need to share the project data with another office? This question is where data shortcuts get a little tricky. How to handle multiple offices depends on the scenario:

Example 1 Your Houston office is working on the road design while the Chicago office is working on grading. You want a live, remote workflow with frequent syncing between offices. For this type of scenario, you would be better served by Autodesk® Vault Collaboration: www.autodesk.com/products/autodesk-vault-family/overview.

Example 2 Your Houston office has completed this stage of the road design, and the next phase will be done in the Chicago office. In other words, no live data exchange needs to take place. You can use eTransmit (discussed later in this chapter), or you can move the entirety of the project's data shortcut folder to the new location.

Fixing Broken References and Drawing Associations

A broken reference is fairly easy to fix, but you will not be able to continue working in your design until broken references are resolved.

Actions that will cause broken references include the following:

- Renaming a source file
- Moving a source file
- Missing a source file
- Renaming project folders

In the following exercise, you will associate drawings that have been renamed to a project that has been renamed and fix the broken data references that you find. You *do not* need to have completed the previous exercises to continue.

1. Using Windows Explorer, locate the folder called `_Broken Reference`.
2. This is part of the download for this chapter at the book's web page.
3. Copy this folder and its contents to `C:\Mastering`.
4. Open the `1605_Corridors.dwg` file, located in `C:\Mastering_Broken Reference\Design`.

This file contains a number of references pointing to files that have been renamed. Panorama may appear with the messages regarding the problems that it found.

5. If it's open, close the Panorama window by clicking the green check mark.
6. On the Manage tab > Data Shortcuts panel, click Set Working Folder:
 - a. Set the working folder to C:\Mastering. Even if this is already the current working folder, the data shortcuts list will update by selecting the folder again.
 - b. Click OK to close.
7. On the Manage tab > Data Shortcuts panel, click Set Shortcuts Folder:
 - a. Select _Broken Reference.
 - b. Click OK to close.
8. In Prospector, locate the Data Shortcuts branch and expand Surfaces.

Because the Shortcuts project folder was renamed, the shortcuts in the project need repairing.
9. Under the Data Shortcuts branch in the Prospector, right-click Existing Surface and click Repair Broken Shortcut.
10. In the Choose The File Containing The Referenced Object dialog, browse to the 1605_ExistingSurface.dwg file in the C:\Mastering_Broken Reference\Survey folder, and click Open.
11. In Prospector, expand Data Shortcuts branch > Alignments > Centerline Alignments.
12. For ROAD A, right-click and click Repair Broken Shortcut.
13. In the Choose The File Containing The Referenced Object dialog, browse to 1605_Alignments-Profiles.dwg file in the C:\Mastering_Broken Reference\Design folder, and click Open.
14. In the Additional Broken Shortcuts dialog, click Repair All Broken Shortcuts.
15. Back up in the drawing collection in Prospector, expand Alignments > Centerline Alignments. You will see that next to ROAD A is a warning chevron.
16. Right-click ROAD A and select Repair Broken References, as shown in [Figure 16.19](#).

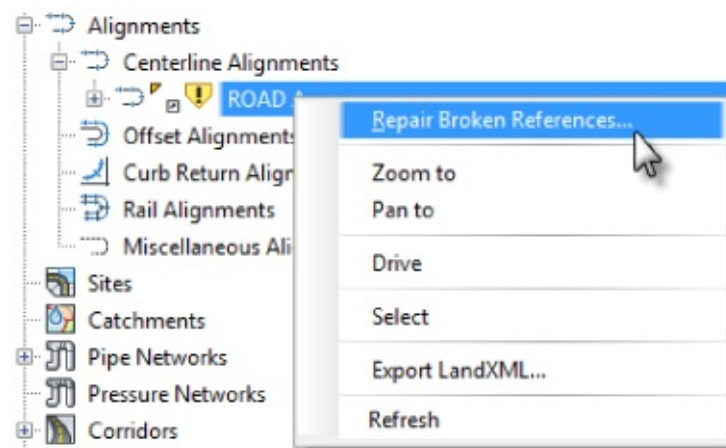


Figure 16.19 Choosing Repair Broken References

After fixing the first broken reference, if more broken references exist, you will be prompted to fix them in the Additional Broken References dialog, shown in [Figure 16.20](#).

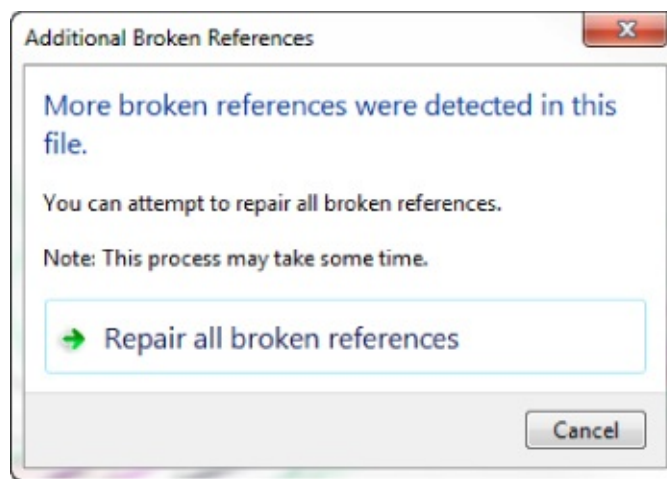


Figure 16.20 The Additional Broken References message

7. Click Repair All Broken References.
8. Close the current drawing. You may save, but you will not need it for additional exercises.

The ability to repair broken links helps make file management a bit easier, but there will be times when you need to completely change the path of a shortcut to point to the correct file. To do so, you must use the Data Shortcuts Editor.

The Data Shortcuts Editor

A Civil 3D drawing stores links to the information it uses in its database. The Data Shortcuts Editor is used to update or change the file to which a shortcut points. You may want to do this when preparing a deliverable.

In the following exercise, you'll copy the current chapter project to another folder and update the data shortcut paths with the Data Shortcuts Editor (the procedure is the same for both metric and Imperial units):

1. Using Windows Explorer, locate the folder called `_Deliverable`.
This is part of the download for this chapter at the book's web page.
2. Copy this folder and its contents to `C:\Mastering`, as shown in [Figure 16.21](#).

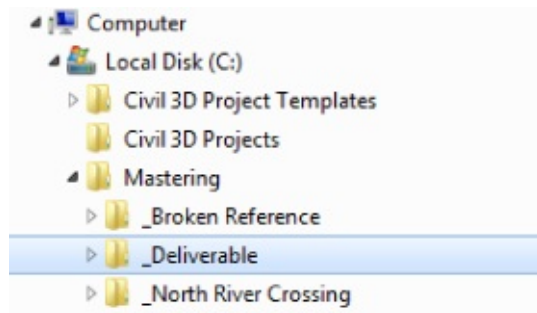



Figure 16.21 Simulating a new project phase by copying the example project to a new folder

- Next, you will open the Data Shortcuts Editor to correct the file paths in the `_Deliverable` version.
3.  In Windows, choose `Start > All Programs > Autodesk > Autodesk AutoCAD Civil 3D 2015`, and click the Data Shortcuts Editor to load it.
 4. Select `File > Open Data Shortcuts Folder` to display the Browse For Folder dialog.

5. Browse to C:\Mastering and with the _Deliverable folder highlighted, click OK.

Your Data Shortcuts Editor should resemble [Figure 16.22](#).

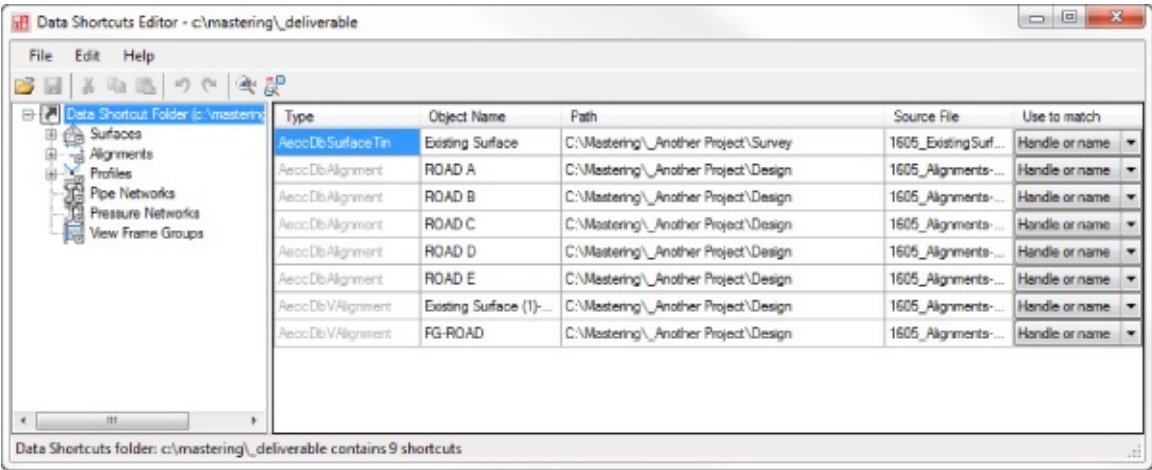


Figure 16.22 Inside the Data Shortcuts Editor

Several things need to be changed before the new phase of the project can begin. Some of the data references are looking for the incorrect file.

Notice that the Path column of the table still refers to the old path. In order to make a clean break from the old project to move forward into the Submitted version, you need to change all these.

6. Click to set your cursor into the Path field for Existing Surface.

7. Choose Edit > Find And Replace.

Unfortunately, there is no browse option here, but you can use the basic Windows Copy and Paste tools to make this a little easier.

8. Delete **Survey** from the Find field and then copy the path to the clipboard.

9. Paste the path into the Replace With field.

10. In the Replace With field, replace the text _Another Project with **_Deliverable**, as shown in [Figure 16.23](#).

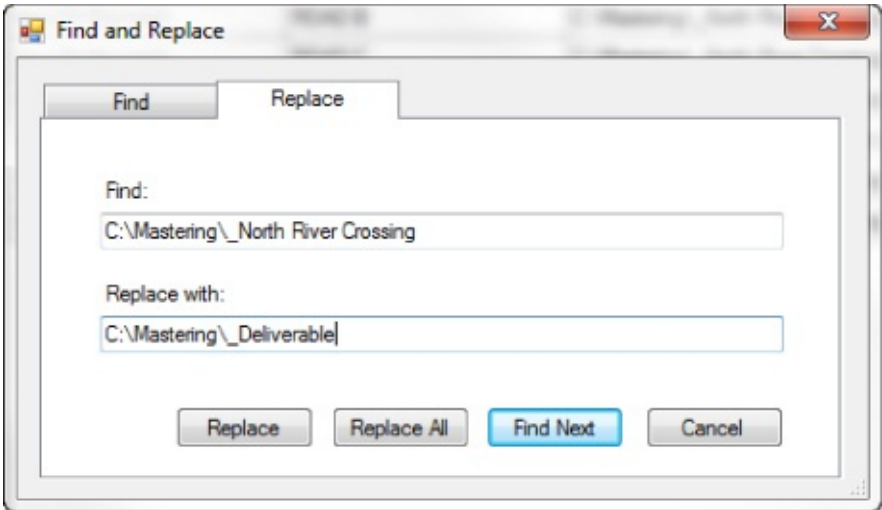


Figure 16.23 Updating the paths to the new project

11. Click Replace All.

Your data shortcut paths are now correct (as shown in [Figure 16.24](#)) and ready for more action. Click Cancel to close the Find And Replace tool.

Object Name	Path
Existing Surface	C:\Mastering_Deliverable\Survey
ROAD A	C:\Mastering_Deliverable\Design
ROAD B	C:\Mastering_Deliverable\Design
ROAD C	C:\Mastering_Deliverable\Design
ROAD D	C:\Mastering_Deliverable\Design
ROAD E	C:\Mastering_Deliverable\Design
Existing Surface (1)-ROAD A	C:\Mastering_Deliverable\Design
FG-ROAD	C:\Mastering_Deliverable\Design


Figure 16.24 Updated paths

- 2. Click Cancel to close the dialog.
- 3. Click the Save icon to commit your changes.
- 4. You can now close the Data Shortcuts Editor and return to Civil 3D.

eTransmit + Data Shortcuts

If you need to pass a project on to another designer with all the information they need, use the eTransmit command.

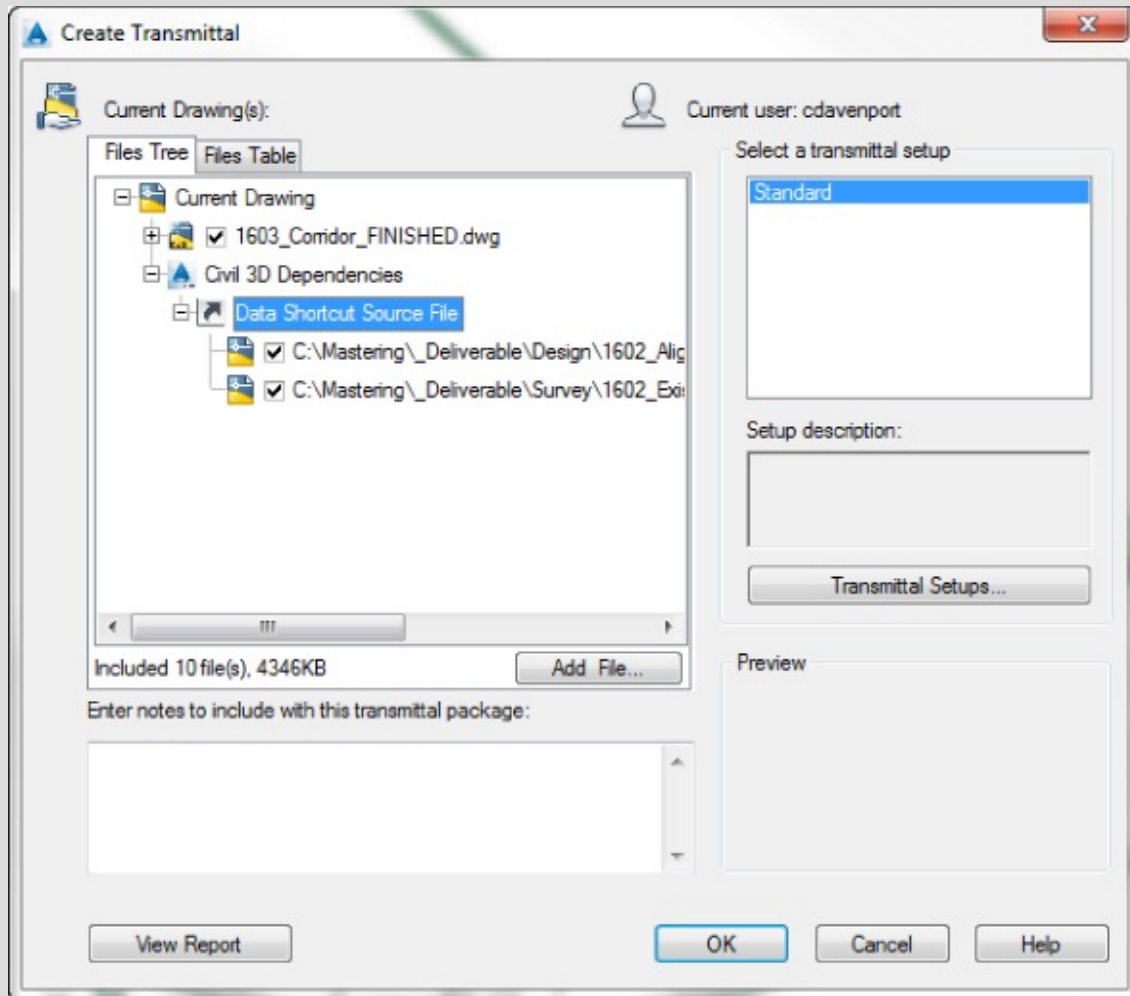To find the eTransmit command, select the Application menu > Publish > eTransmit. If a file contains a data shortcut, the eTransmit command will recognize the link and include the necessary drawings. You can even include non-AutoCAD files such as Word or Excel documents by clicking the Add File button.



AutoCAD will generate a zip file that contains any external reference files (including DWF, DGN, PDF, or TIF references), plot configurations, images, and templates used in sheet creation. When your recipient unzips the file, the connections between drawings are maintained.

Sharing Data with a Non-Civil 3D World

Not everybody uses Civil 3D 2015, so you need to know how to convert your drawing files and extract your design data for those people who are using previous versions of AutoCAD or different land development software.

Delivering DWG Formats

Files created in Civil 3D 2015 are backward compatible to Civil 3D 2014. Currently, these are the only

two versions that will work together without losing significant amounts of data. Even though Civil 3D 2014 was said to be backward compatible with Civil 3D 2013, it is not advisable to use them together.

The Save As command can be very misleading for Civil 3D users. Keep in mind that the Save As command works only on AutoCAD objects such as lines, arcs, and circles—*not* Civil 3D objects. To save to a version of Civil 3D 2012 or prior, you will need to use the Application menu > Export > Export Civil 3D Drawing. This is a new command in Civil 3D 2015. The result will be exploded Civil 3D objects.

In the following exercise, you will export a Civil 3D 2015 corridor model to an AutoCAD 2010 file format.

1. Open C:\Mastering_North River Crossing\Design\1603_Corridor.DWG. For this exercise, you need to have completed the _Deliverable data shortcut project earlier in the chapter.
2. From the Application menu, click Export > Export Civil 3D Drawing.
3. In the Export AutoCAD Civil 3D Drawing dialog, click the Export Settings button.
 - a. Under DWG File Version, select 2010 from drop-down menu.
 - b. Click OK to close.

Note the settings for treatment of external references.

4. Under Files To Export, click Selected Drawings In Source Folder and select the check box next to Include Drawings In Subfolders.
5. On the right side of the dialog under Source Folder, click the ellipsis button next to the field.
 - a. In the Browse For Folder dialog, select the _Deliverable folder.
 - b. Click OK to close the dialog.
6. Under Destination Folder, click the ellipsis button next to the field.
 - a. In the Browse For Folder dialog, select the _Deliverable folder.
 - b. Click the Make New Folder button at the bottom of the dialog.
 - c. For the new folder name, type **2010 DWG Files**.
 - d. Click OK to close the dialog.
7. Uncheck the check box next to Include Sheets. Leaving it filled will export the layouts as separate drawing files.
8. The Export AutoCAD Civil 3D Drawing dialog should look like [Figure 16.25](#).

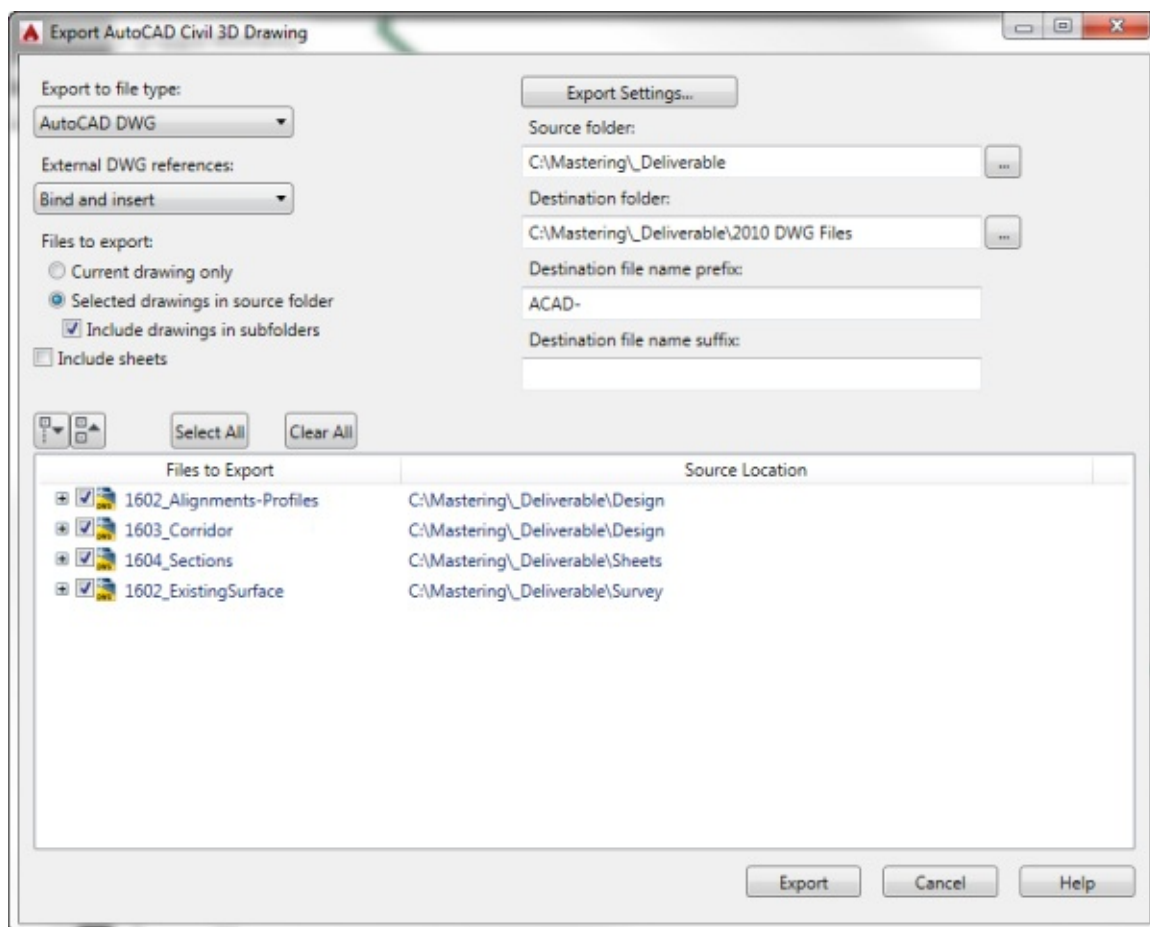


Figure 16.25 Export AutoCAD Civil 3D Drawing dialog, a new feature in Civil 3D 2015

9. Click Export.
10. The export may take a few minutes.
11. When the Export Status dialog reads 4 Of 4 Files Exported, click OK to close even though the green progress bar is still animated.
12. Click Cancel to close the Export AutoCAD Civil 3D Drawing dialog.
13. Open C:\Mastering\Deliverable\2010 DWG Files\survey\ACAD-1602_ExistingSurface-Model.dwg (ACAD-1602_ExistingSurface_METRIC.dwg if metric).
14. As the file opens, the command line will echo Opening An AutoCAD 2010/LT 2010 Format File.
15. Click on a contour.
16. This export command will explode all objects to AutoCAD entities. The contour is now a polyline and has taken on the layer assigned to it through the style once assigned to it. It also forces color, linestyle, lineweight, and any properties overrides in the styles to the resulting entities.
17. Press Esc to deselect the contour.
18. Close the drawing without saving. You don't want to upgrade the file format.
19. Close all the drawings.

Compare the content of your 2010 DWG Files folder with the contents of 2010 DWG Files_FINISHED folder, which can be downloaded from the book's website.

Using LandXML

LandXML is not specific to Civil 3D. It is a file format that allows users to share data in a nonproprietary format. You can use LandXML to archive projects and to send information to non-Civil 3D users or users of Civil 3D using 2012 or earlier.

A drop-down in the Import LandXML dialog lets you select the version of LandXML. This is a result of that consortium. The latest, as of this writing, is the 1.2 schema. Most CAD programs have methods of importing and exporting LandXML files, and this is one way to tackle that barrier.

Alas, the need to send data to older versions of Civil 3D is not always avoidable. In the following exercise, you will step through an example of what needs to happen to force Civil 3D to previous versions:

1. Open 1606_LandXML-OUT.dwg (1606_LandXML-OUT_METRIC.dwg), which can be found at this book's web page.



2. From the Output tab > Export panel, select Export To LandXML.

The Export To LandXML dialog, shown in [Figure 16.26](#), opens.

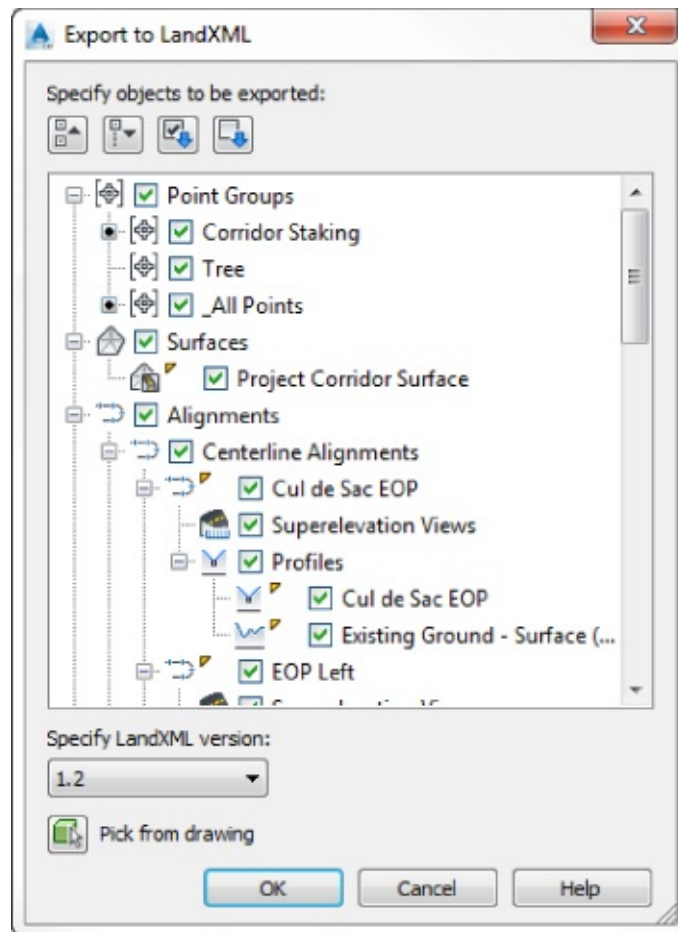


Figure 16.26 The Export To LandXML dialog

3. Click OK.
4. In the Export LandXML dialog, browse to the same folder as the source drawing.
5. Keep the default name (the dialog will pick up the name of the drawing you are exporting from), and click Save.


You now have as much Civil 3D as possible packed up into the LandXML file. This file contains

- Alignments
- Point groups and points
- Surfaces
- Profiles
- Pipe data

If you are ever sent a LandXML file, you will need to import the contents into a file created from your Civil 3D template.

6. Create a new drawing using the template of your choice.
7. On the Insert tab > Import panel, click LandXML.
8. In the Import LandXML dialog, browse for and select the XML file you created in steps 4 and 5, and click Open.

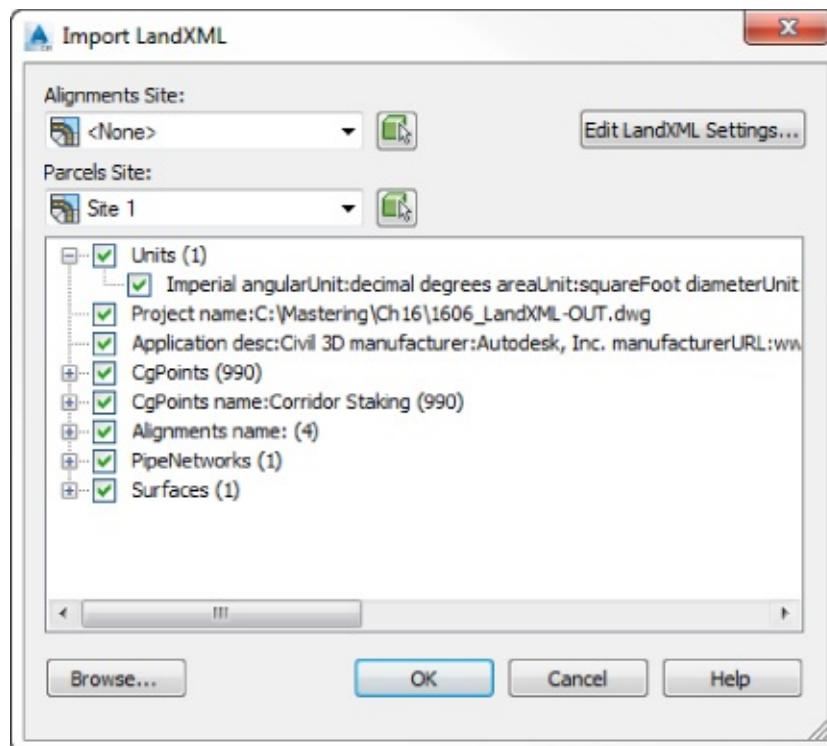[Figure 16.27](#) shows the Import LandXML dialog.



[Figure 16.27](#) Importing LandXML data

9. Click OK.
10. Dismiss Panorama if it's open.
11. Browse Prospector for the data that was imported.

At this point you could change styles and apply label styles to certain objects.

12. Save and close the drawing.

Completed versions of the resulting file after LandXML import can be found with this book's dataset. Compare your work with 1606_LandXML - IN_FINISHED.dwg or 1606_LandXML - IN_METRIC_FINISHED.dwg.

The Bottom Line

Create a data shortcut folder. The ability to load design information into a project environment is an important part of creating an efficient team. The main design elements of the project are available to the data shortcut mechanism via the working folder and data shortcut folder.

Master It Using the MasterIt1601.dwg (MasterIt1601_METRIC.dwg) drawing, create a new data shortcut folder called Master Data Shortcuts. Use the _Sample Project project template.

Create data shortcuts. To allow sharing of the data, shortcuts must be made before the information can be used in other drawings.

Master It Save the drawing to the Source Drawings folder in the Master Data Shortcuts project you created in the previous exercise. Create data shortcuts to all the available data in the MasterIt1601.dwg (MasterIt1601_METRIC.dwg) file.

Export to earlier releases of AutoCAD. Being able to export to earlier base AutoCAD versions is sometimes necessary.

Master It Using MasterIt1601.dwg (MasterIt1601_METRIC.dwg), export the Civil 3D file so it can be used by a user working in base AutoCAD 2010.

Export to LandXML. Being able to work with outside clients or even other departments within your firm that do not have Civil 3D is an important part of collaboration.

Master It Using MasterIt1601.dwg (MasterIt1601_METRIC.dwg), create a LandXML file with all of the exportable information.

Chapter 17

Quantity Takeoff

The goal of every project is eventually construction. Before the first bulldozer can be fired up and the first pile of dirt moved, the owner, city, or developer has to know how much all of this paving, pipe, and dirt are going to cost. Although contractors and construction managers are typically responsible for creating their own estimates for contracts, the engineers often perform an estimate of cost to help judge and award the eventual contract. To that end, many firms have entire departments that spend their days counting manholes, running planimeters around paving areas, and measuring street lengths to figure out how much striping will be required.

The Autodesk® AutoCAD® Civil 3D® software includes a Quantity Takeoff (QTO) feature to help relieve that tedious burden. You can use the model you've built as part of your design to measure and quantify the pieces needed to turn your project from paper to reality. You can export this data to a number of formats and even to other applications for further analysis.

In this chapter, you will learn to

- Open and review a list of pay items along with their categorization
- Assign pay items to AutoCAD objects, pipe networks, and corridors
- Use QTO tools to review what items have been tagged for analysis
- Generate QTO output to a variety of formats for review or analysis

Employing Pay Item Files

Before you can begin running any sort of analysis or quantity, you have to know what items you are trying to quantify. Various municipalities, states, and review agencies have their own lists of items and methods of breaking down the quantities involved in a typical development project.

There are three main files associated with quantity takeoff in Civil 3D: the pay item list, the pay item categorization file, and the formula file. Each file serves a different purpose and is stored externally to the project. Once a file has been associated to a DWG, the path to these files is stored with the DWG.

Pay Item List When preparing quantities, different types of measurements are used based on the items being counted. Some are simple individual objects such as light posts, fire hydrants, and manholes. Only slightly more complicated are linear objects such as road striping and area items such as grass cover. These measurements are also part of the pay item list. At minimum, the pay item list will provide you with three main pieces of information for each item:

- The pay item number
- The pay item description
- The pay item unit of measure

There are three file types allowable for the pay item list file:

- CSV (Comma Delimited)

- AASHTO TransXML
- Florida DOT

Pay Item Categorization File In any project, there can be thousands of items to tabulate. To make this process easier, most organizations have built pay categories, and Civil 3D makes use of this system in a categorization file. Civil 3D includes an option to create favorite items that are used most frequently. This file, which is always formatted as an XML file, is optional.

Formula File The formula file is used when the unit of measure for the pay item needs to be converted or calculated based on another value. For example, bituminous concrete for a parking lot is usually paid for by the ton, but you will generally be obtaining an area from CAD. You can set up a formula that converts square feet into tons, taking into account an assumed depth and density. Later in this chapter, you will create a formula that relates length to light poles along the road.

A command is available if you need to disconnect your pay item and formula files from the drawing. At the command line you can type **DETACHQTOFILES**. The Undo command will not reconnect them if you type this in accidentally.

In the next section, you will learn how to connect the needed pay item files and create favorites.

Pay Item Favorites

Your Civil 3D file will “remember” which files it needs to correctly assess quantities. The Favorites list is a separate category that can be populated for quick access to commonly used pay items. This list is saved inside the DWG.

In this exercise, you'll look at how to open a pay item and categorization files and add a few items to the Favorites list for later use:

1. Create a new drawing using the `_AutoCAD Civil 3D (Imperial) NCS` template. Metric users should use the `_AutoCAD Civil 3D (Metric) NCS` template.
2. From the Analyze tab ➤ QTO panel, choose QTO Manager (see [Figure 17.1](#)) to display the QTO Manager.

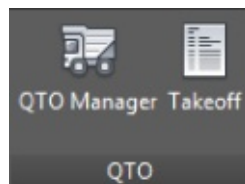




Figure 17.1 The QTO tools on the Analyze tab

3.  Click the Open button at the top left of the QTO Manager to display the Open Pay Item File dialog.
4. In the Open Pay Item File dialog, verify that the Pay Item File Format drop-down list is set to CSV (Comma Delimited).
5.  Click the Open button next to the Pay Item File text box to browse for the file.

In Windows 7 and Windows 8, this file is found in `C:\ProgramData\Autodesk\C3D 2015\enu\Data\Pay Item Data\Getting Started\`.

C:\ProgramData

If you do not see the ProgramData folder listed in c:\, follow these simple steps:

1. Open Windows Explorer.
2. Click the Organize button at the upper left.
3. Select Folder And Search Options to display the Folder Options dialog.
4. On the View tab, in Advanced Settings, select the radio button Show Hidden Files, Folders, And Drives.
5. Click OK to accept the settings in the Folder Options dialog.

Metric users should copy the Getting Started_METRIC.csv file to C:\ProgramData\Autodesk\C3D 2015\enu\Data\Pay Item Data\Getting Started\, downloadable from the book's web page (www.sybex.com/go/masteringcivil3d2015).

6. Select the Getting Started.CSV file or Getting Started_METRIC.csv.
 7. Click Open to select this CSV pay item file.
 8. Click the Open button next to the Pay Item Categorization File text box to browse for the file.
 9. Navigate back to the Getting Started folder and select the Getting Started Categories.xml file.
- This file can be used by both Imperial and metric users.
10. Click Open to select the file.
 11. Your display should look similar to [Figure 17.2](#).

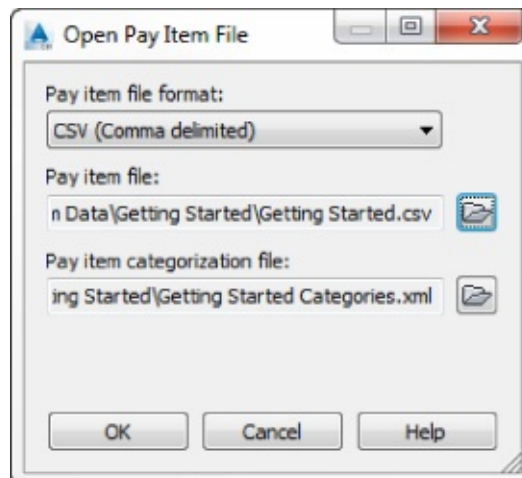


Figure 17.2 Open Pay Item File dialog

12. Click OK to accept the settings in the Open Pay Item File dialog.

The QTO Manager will now be populated with a collection of divisions, as shown in [Figure 17.3](#). These divisions came from the Getting Started Categories.xml file.

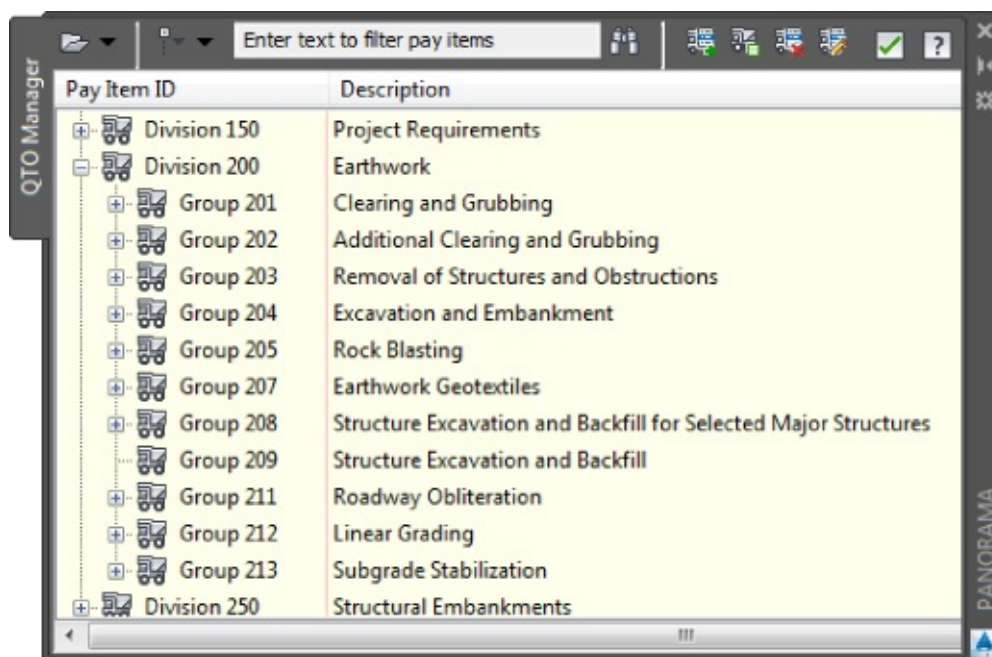


Figure 17.3 The QTO Manager in Panorama populated within categories (Divisions and Groups)

13. Expand the Division 200 > Group 201 > Section 20101 branches, and select the item 20101-0000 CLEARING AND GRUBBING. You may need to widen the Pay Item ID column.
14. Right-click and select Add To Favorites List, as shown in [Figure 17.4](#).

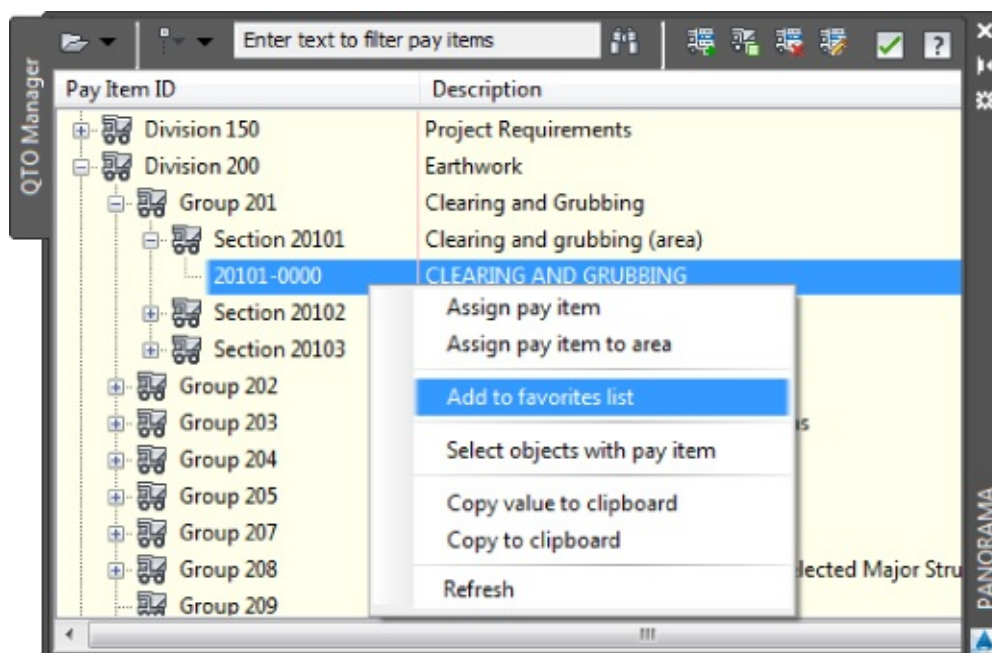


Figure 17.4 Selecting a pay item to add as a favorite

15. Expand a few other branches to familiarize yourself with these pay items.
16. Add the following to your Favorites list in preparation for the next exercise:
 - 60404-2000 CATCH BASIN, TYPE 2
 - 61106-0000 FIRE HYDRANT
 - 61203-0000 MANHOLE, SANITARY SEWER
 - 63401-0600 PAVEMENT MARKDINGS, TYPE C, BROKEN

17. Save the drawing as **1701_QTOPractice.dwg** or **1701_QTOPractice_METRIC.dwg** and keep it open for the next exercise.

When finished, scroll to the top of the Pay Item ID list and expand the Favorites category. Your QTO Manager should look similar to [Figure 17.5](#).

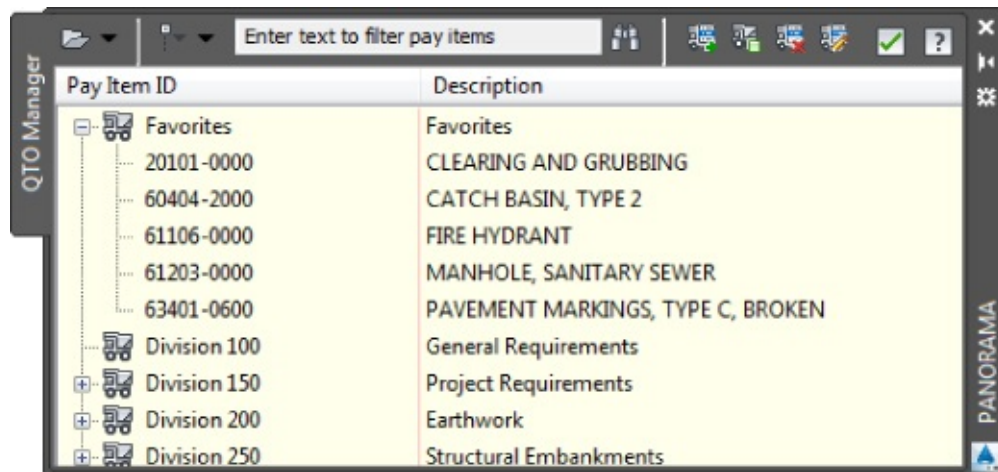



Figure 17.5 A list of favorites within the QTO Manager

Civil 3D ships with a number of pay item list categorization files but only one actual pay item list. This avoids any issue with out-of-date data. One commonly used categorization type found in the C:\ProgramData\Autodesk\C3D 2015\enu\Data\Pay Item Data\CSI\ folder is MasterFormat2004. In the United States folder, you can also find categorization files for AASHTO and Federal Highway Administration. The pay item files that install with the software are intended to be examples. Contact your reviewing agency for access to its pay item list and categorization files if they're not already part of the Civil 3D product.

Once you have pay items to choose from, it's time to assign them to your model for analysis.

Searching for Pay Items

 In the top of the QTO Manager is an extremely handy filter tool. If you don't know what category an item is listed under, you can type it in the field to the left of the binoculars icon.

When you first click the binoculars icon to execute the filter, it will appear as if nothing happened. That's because the category headings are in the way of the listing. To see an uncategorized version of the list your filter produced, select Turn Off Categorization from the drop-down to the left of the filter field, as shown in [Figure 17.6](#).

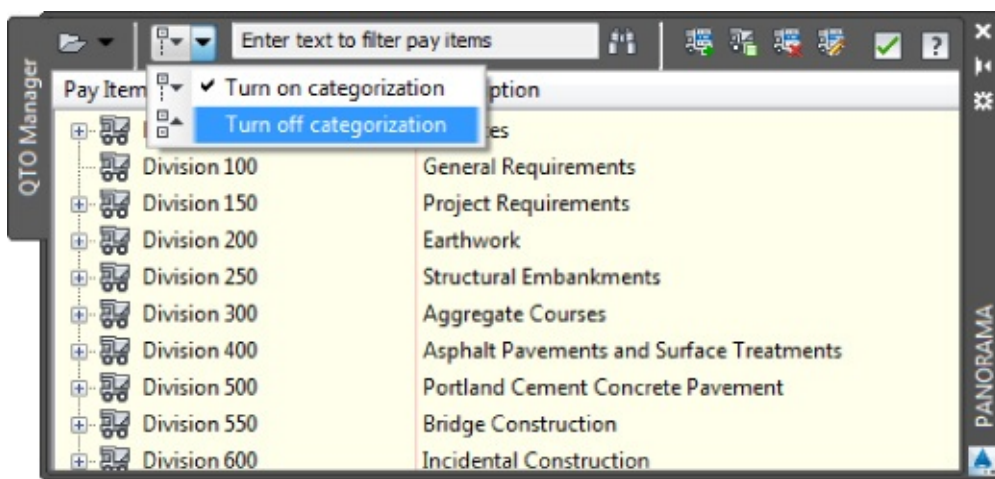



Figure 17.6 Choose Turn Off Categorization to see the results of your filter.

In the following exercise, you will use the filter functionality to add items to your Favorites list:

1. If it's not still open from the previous exercise, open the 1701_QTOPractice.dwg or the 1701_QTOPractice_METRIC.dwg file. You must complete the previous exercise before proceeding.
2. If the QTO Manager is not already open, from the Analyze tab > QTO panel, choose QTO Manager to open it.
3.  To the left of the filter field, click the drop-down to select Turn Off Categorization.
4. In the filter field of the QTO Manager, type **grandi** and then click the binoculars icon. You can alternatively press ↵ instead of clicking the binoculars icon.
5. Your filter should result in three types of trees.
6. Right-click the first item, Fagus Grandiflora, and select Add To Favorites List.
7. In the filter field of the QTO Manager, type **Washington**, and then click the binoculars icon.
8. Add 63620-0500 Pole, Type Washington Globe No. 16 Light Standard to the Favorites List.

You will find that by adding your most frequently used items to the Favorites list, they will be at your fingertips instead of you having to dig through branch after branch of pay items.

When this exercise is complete, you may close the drawing. A saved copy of this drawing is available from the book's web page with the filename QTOPractice_FINISHED.dwg or QTOPractice_METRIC_FINISHED.dwg.



Real World Scenario

Creating Your Own Categorization File

One of the challenges in automating any quantity takeoff analysis is getting the pay item list and categories to match up with your local requirements. Getting a pay item list is pretty straightforward—many reviewing agencies provide their own list for public use to keep all bidding on an equal footing.

Creating the category file can be slightly more difficult, and it will probably require experimentation to get it just right. In this example, you'll walk through creating a couple of categories to be used

with a provided pay item list.

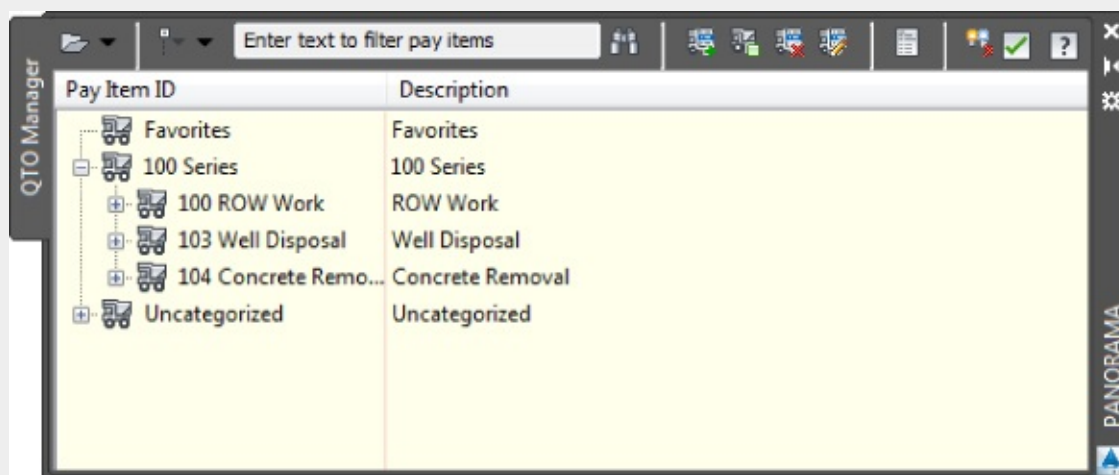
Note that modifying the QTO Manager affects all open drawings. You might want to finish the other exercises and come back to this when you need to make your own file in the real world.

1. Create a new drawing using the `_AutoCAD Civil 3D (Imperial) NCS` or `_AutoCAD Civil 3D (Metric) NCS` template.
2. From the Analyze tab > QTO panel, choose QTO Manager to display the QTO Manager.
3. Click the Open button at the top left of the QTO Manager to display the Open Pay Item File dialog.
4. Verify that Pay Item File Format is set to CSV (Comma Delimited).
5. Click the Open button next to the Pay Item File text box and navigate to open the `Mastering.csv` or `Mastering_METRIC.csv` file.


Remember, all files can be downloaded from www.sybex.com/go/masteringcivil3d2015.

6. Click the Open button next to the Pay Item Categorization File text box to display the Open Pay Item Categorization File dialog.
7. Browse to open the `MasteringCategories.xml` file (the same file is acceptable for both Imperial and metric users), and then click OK to accept the settings in the dialog.

Your QTO Manager should look like this after expanding the 100 Series category:




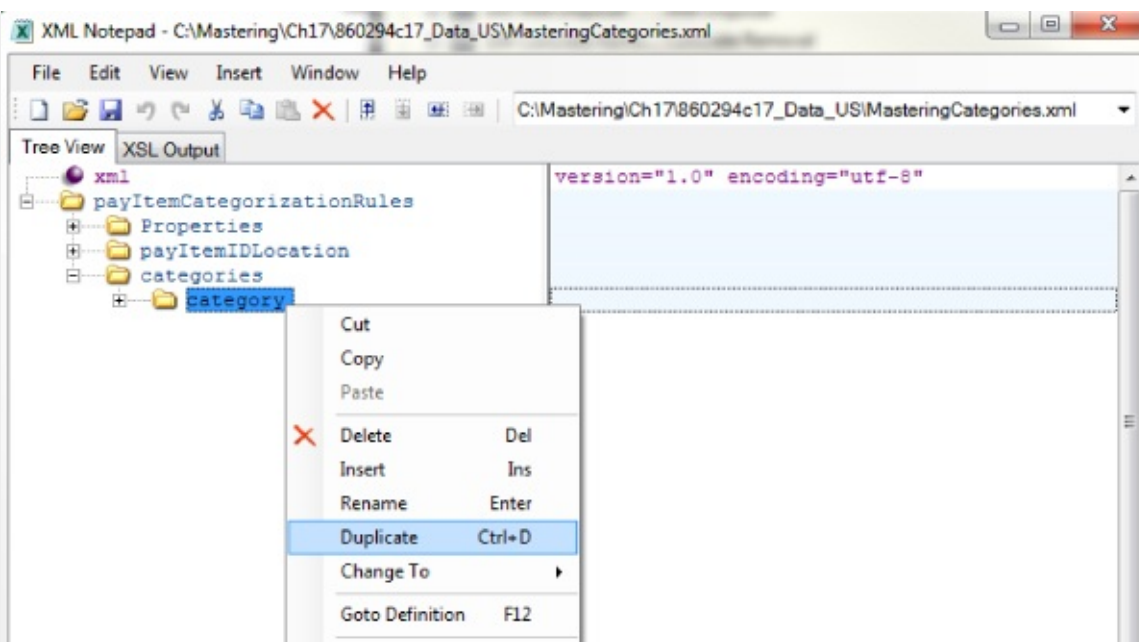8. Launch XML Notepad. (This is a simple XML editor that you can download for free from Microsoft.)
9. Browse to and open the `MasteringCategories.xml` file from within XML Notepad.
10. Expand the `PayItemCategorizationRules > Categories` branch, right-click the `Category` branch, and select Duplicate, as shown here.



Note that the duplicated category branch is made current.

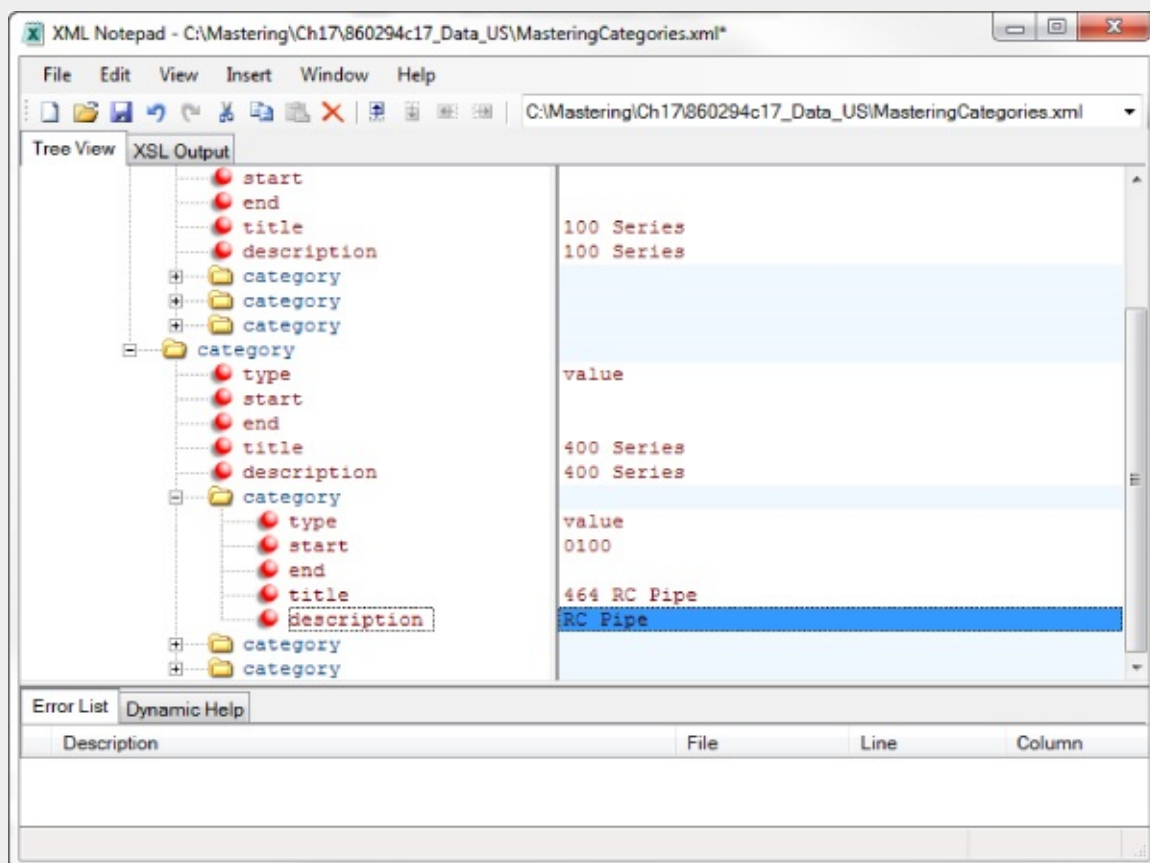11. Expand the new category branch; then modify the values on the right side of the dialog for the duplicate category to match the following graphic.



12. Delete the extra category branches under the new branch by right-clicking the two extra category listings and choosing Delete.
13. Save and close the modified MasteringCategories.xml file.
14. Switch back to the Civil 3D QTO Manager.

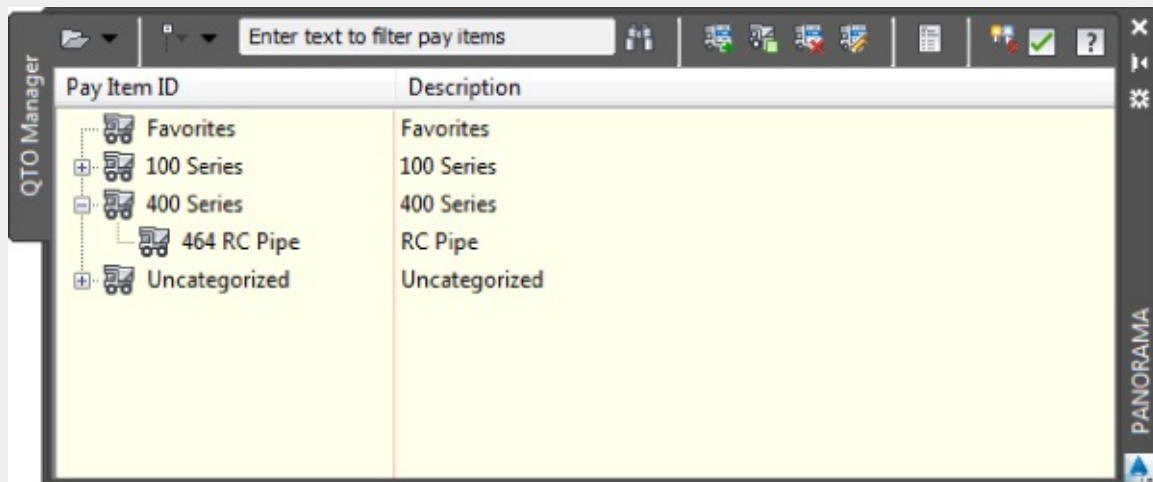
Next, you will need to reload the categorization file to view the changes.

15. Click the Open drop-down menu in the top left of the QTO Manager, and select Open ➤

Categorization File.

16. Browse to the `MasteringCategories.xml` file again and open it.

Once Civil 3D processes your XML file, your QTO Manager should look similar to this:



When this exercise is complete, you may close the drawing. A saved copy of this drawing is available from the book's web page with the filename `1702_QTOCategories_FINISHED.dwg` or `1702_QTOCategories_METRIC_FINISHED.dwg`. In addition, a saved copy of the modified XML file is available with the filename `MasteringCategories_modified.xml`.

Creating a fully developed category list is a bit time consuming, but once it's done, the list can be shared with your entire office so everyone has the same data to use.

Keeping Tabs on the Model

Once you have a list of pay items that must be quantified in your project, you have to assign these pay items to items in your drawing file. You can do so in any of the following ways:

- Assign pay items to simple AutoCAD objects such as blocks and lines.
- Assign pay items to corridor components.
- Assign pay items to pipes and structures in pipe networks.
- Assign pay items to pressure network pipes, fittings, and appurtenances.

In the next few sections, you'll explore each of these methods, along with some formula tools that can be used to convert things such as linear items to individual quantity counts.

AutoCAD Objects as Pay Items

The most basic use of the QTO tools is to assign pay items to things like blocks and linework within your drawing file. The QTO tools can be used to quantify any number of things, including tree plantings, signposts, and area items such as clearing and grubbing. In the following exercise, you'll assign pay items to blocks as well as to some closed polylines. Be sure the `Getting Started.csv` (or `Getting Started_METRIC.csv`) and `Getting Started Categories.xml` files are loaded as described in the first exercise.

1. Open the `1703_AcadObjectsInQTO.dwg` or `1703_AcadObjectsInQTO_METRIC.dwg` file.

- 2. From the Analyze tab > QTO panel, choose QTO Manager to display the QTO Manager.
- 3. Expand the Favorites branch, right-click CLEARING AND GRUBBING, and select Assign Pay Item To Area, as shown in [Figure 17.7](#).

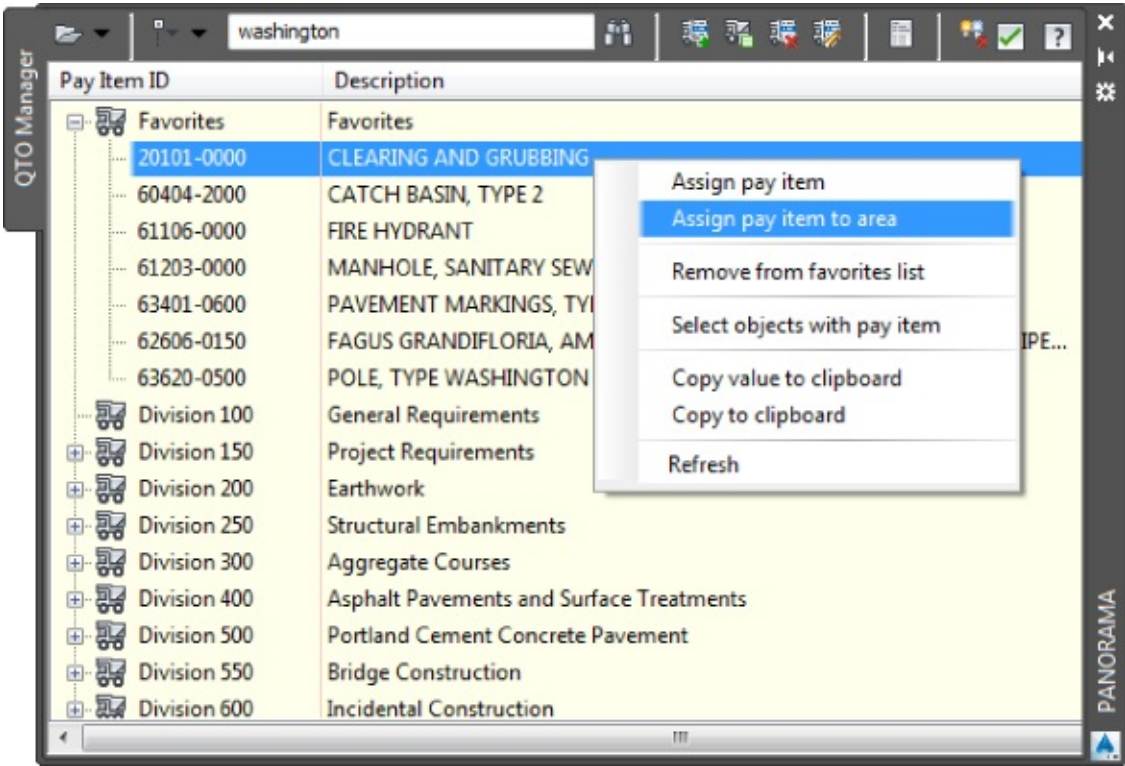


Figure 17.7 Assigning an area-based pay item

- 4. At the select Point or [select Object]: prompt, type **O** ↵ to activate the Object option for assignment.
- 5. Click the closed polyline around the outer edge of the site, as shown in [Figure 17.8](#).



Figure 17.8 Selecting a closed polyline for an area-based quantity

Notice that the closed polyline fills with a solid hatch pattern indicating what area is being used. The command line should also echo `Pay item 20101-0000` assigned to area when you pick the polyline.

6. Press `↵` again to end the command.
7. Select the hatch to activate the Hatch Editor contextual tab.
8. From the Hatch Editor contextual tab > Properties panel, change Hatch Transparency to **90**.
9. Right-click the hatch and select Display Order > Send To Back.
10. Move the QTO Manager to the side and zoom in to the intersection of ROAD A and ROAD B where you can see one or more of the blocks representing trees.
11. Select one of the tree blocks and then right-click and choose Select Similar. All of the tree blocks are selected.
12. Back in the QTO Manager, under the Favorites branch select 62606-0150 Fagus Grandiflora, American Beech.



13. Near the top of the panel, click the Assign The Selected Pay Items To Object(s) In The Drawing button.

Notice the great tooltips on these buttons.

14. Move your cursor over the graphics area of the drawing and press `↵` to end the assigning command.
15. Repeat steps 11 through 14 to assign the pay item 61106-0000 Fire Hydrant to all of the fire hydrant blocks on the site.

When this exercise is complete, you may close the drawing. A saved copy of this drawing is available

from the book's web page with the filename AcadObjectsInQTO_FINISHED.dwg or AcadObjectsInQTO_METRIC_FINISHED.dwg.

Assigning Pay Items

The two assignment methods described in this section, by object or by area, are essentially interchangeable. Pay items can be assigned to any number of AutoCAD objects, meaning you don't have to redraw the planners' or landscape architects' work in Civil 3D to use the QTO tools.

Keep in mind that the pay item tag is saved with the block. This is a good thing if you assign a pay item to a block and copy the block because the copies will be automatically tagged. If you assign a pay item to an object and use the **WBLOCK** command to copy that object out of your current drawing and into another, the pay item assignment goes along as well.

You'll find out how to unassign pay items after we discuss all the ways to assign them.

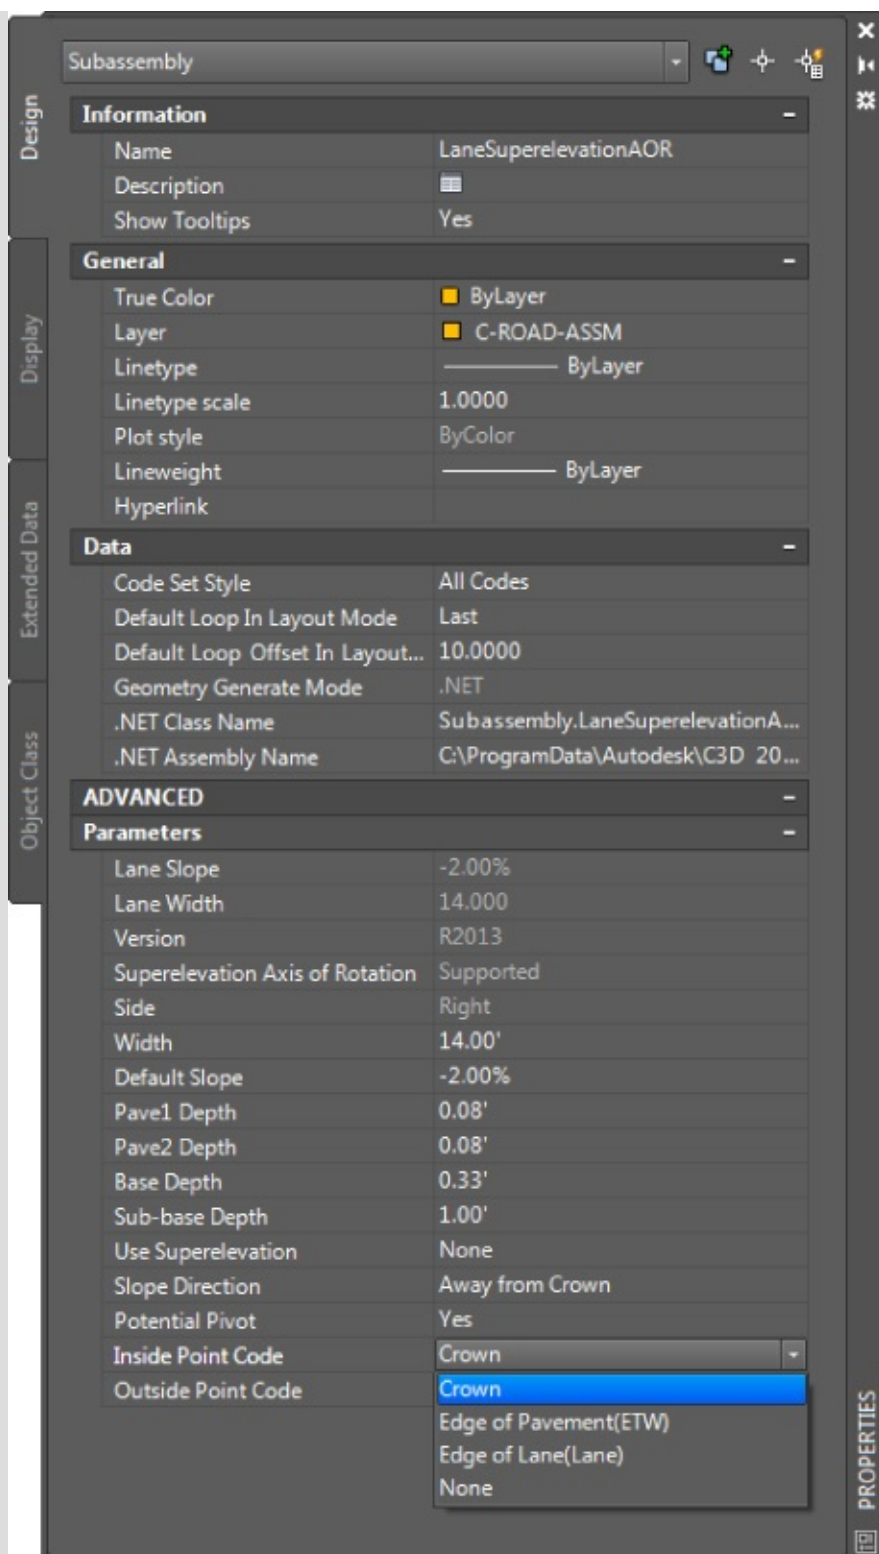
Pricing Your Corridor

The corridor functionality of Civil 3D is invaluable. You can use it to model everything from roads to streams to parking lots. With the QTO tools, you can also use the corridor object to quantify much of the project construction costs.

Assemblies and QTO Are Related

Be mindful of what parts of an assembly are available when creating quantity takeoff assignments in the code set style.

If you plan to price an item based on the centerline of your road, make sure you have set a crown point code in your assembly properties. If you used the LaneSuperelevationAOR subassembly, this is defined by the Inside Point Code value if your slope direction is set to Away From Crown.



Changes to QTO information will not cause your corridor to flag itself as out of date. Before you run a takeoff report, it is a good idea to rebuild your corridors to ensure that the most up-to-date information is accounted for.

In this example, you'll use the pay item list along with a formula to convert the linear curb measurement to an incremental count of light poles required for the project:

1. Open the 1704_QTOCorridors.dwg or 1704_QTOCorridors_METRIC.dwg file.
2. From the Analyze tab ➤ QTO panel, choose QTO Manager.
3. Expand the Favorites branch to display your 63620-0500 light standard pay item.

4. Widen Panorama to reveal the Formula column, and click in the Formula cell in the 63620-0500 light standard row.

When you do, Civil 3D will display the alert box shown in [Figure 17.9](#), which warns you that formulas must be written to an external file.

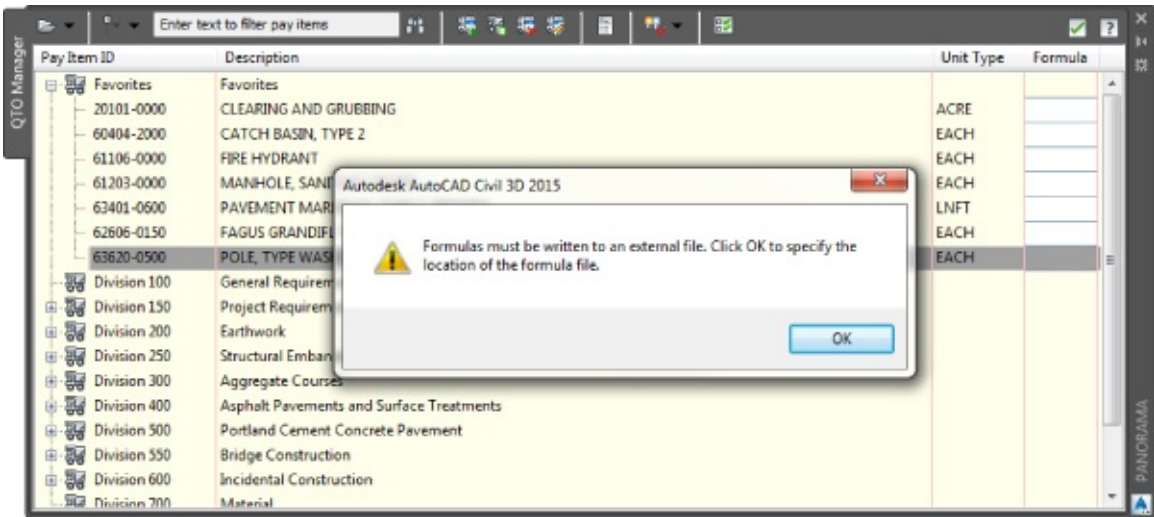


Figure 17.9 Click in the Formula cell to display this warning dialog.

- 5. Click OK to dismiss the warning, and Civil 3D will present the Select A Quantity Takeoff Formula File dialog.
- 6. Navigate to C:\Mastering\Ch17, save the file as **Mastering** (or **Mastering_METRIC**), and click Save.

Civil 3D will display the Pay Item Formula: 63620-0500 dialog, as shown in [Figure 17.10](#). (The Expression box will be empty when you first open it, but you'll take care of that in the next steps.)

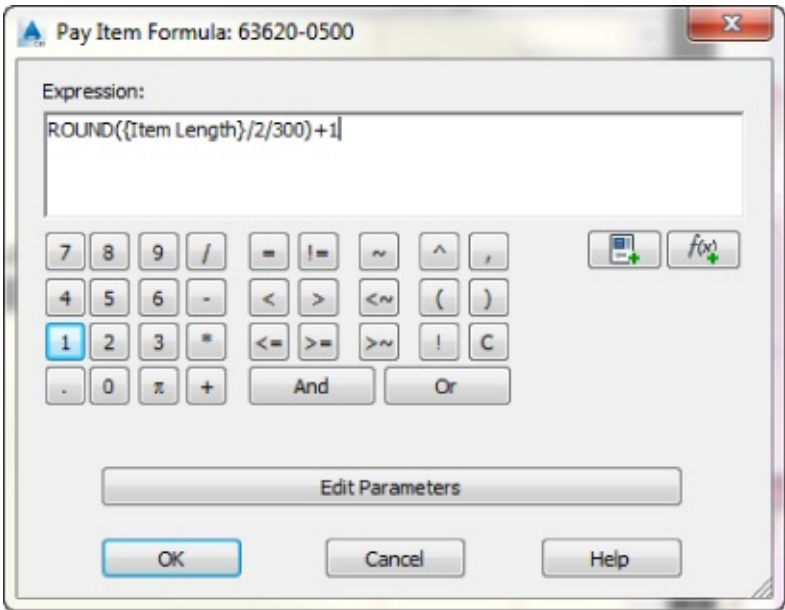

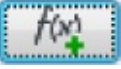


Figure 17.10 The completed pay item expression

Assume that you need a street light every 300 feet (or 100 m for metric) but only on one side of the street. To do this, you add up all the lengths of curb and then divide by 2 because you want only one half of the street to have lights. You then divide by 300 (or 100 for metric) because you are running lights in an interval. Finally, you round to the nearest integer and add 1 to make the number conservative.

7. Enter the formula using the following steps:

- a.  Click the Property button and select Item Length from the drop-down list.
- b. Use the buttons in the dialog or your keyboard to divide this value by 2 to get half of the curb length.
- c. Use the buttons in the dialog or your keyboard to divide this value by 300 (or 100), which is the spacing of the light standards.
- d.  To round this value, move your cursor to the beginning of the expression, click the Function button, and select ROUND.

Note that there are also ROUNDUP and ROUNDDOWN expressions available if these are better suited for your calculations.

- e. Move your cursor to the end of the expression and add the closing parenthesis for the ROUND command.
- f. Use the buttons in the dialog or your keyboard to add 1 to the calculation to be conservative.

The formula should now match the one shown previously in [Figure 17.10](#).

8. Click OK.

Note that the pay item list now shows a small calculator icon on that row to indicate a formula is in use.

Now that you've modified the way the light poles will be quantified from your model, you can assign the pay items for light poles and road striping to your corridor object. This is done by modifying the code set, as you'll see in the next steps.

9. In the Toolspace Settings tab, expand General > Multipurpose Styles > Code Set Styles, right-click All Codes, and select Edit to display the Code Set Style - All Codes dialog.
10. On the Codes tab, expand the Point branch and find the row for Crown, as shown in [Figure 17.11](#).

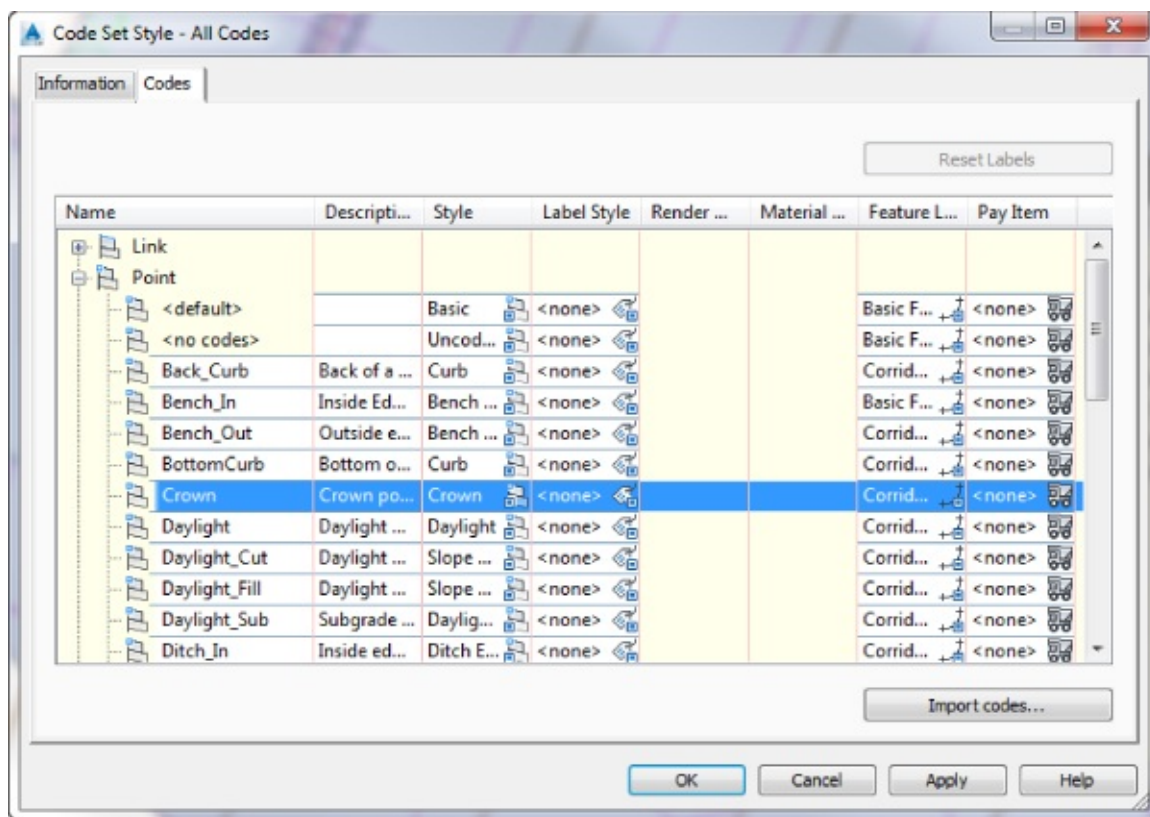


Figure 17.11 Select the Crown row in the Point branch in the Code Set Style - All Codes dialog.

As always, you may need to widen some of the columns to view the necessary text.

1. Click the truck icon in the Pay Item column, shown in [Figure 17.11](#), to open the Pay Item List dialog.
2. Expand the Favorites branch, and select Pavement Markings, Type C, Broken.
3. Click OK to return to the Code Set Style - All Codes dialog.

You should see the pay item number of 63401-0600 in the Pay Item column of your dialog.

4. Again in the Point branch, find the row for Back_Curb, and repeat steps 10 through 12 to assign 63620-0500 to the Back_Curb code.

Remember, this is your light-standard pay item with the formula from the previous steps. Your Code Set Style - All Codes dialog should look like [Figure 17.12](#), which lists a pay item for both of these point codes.

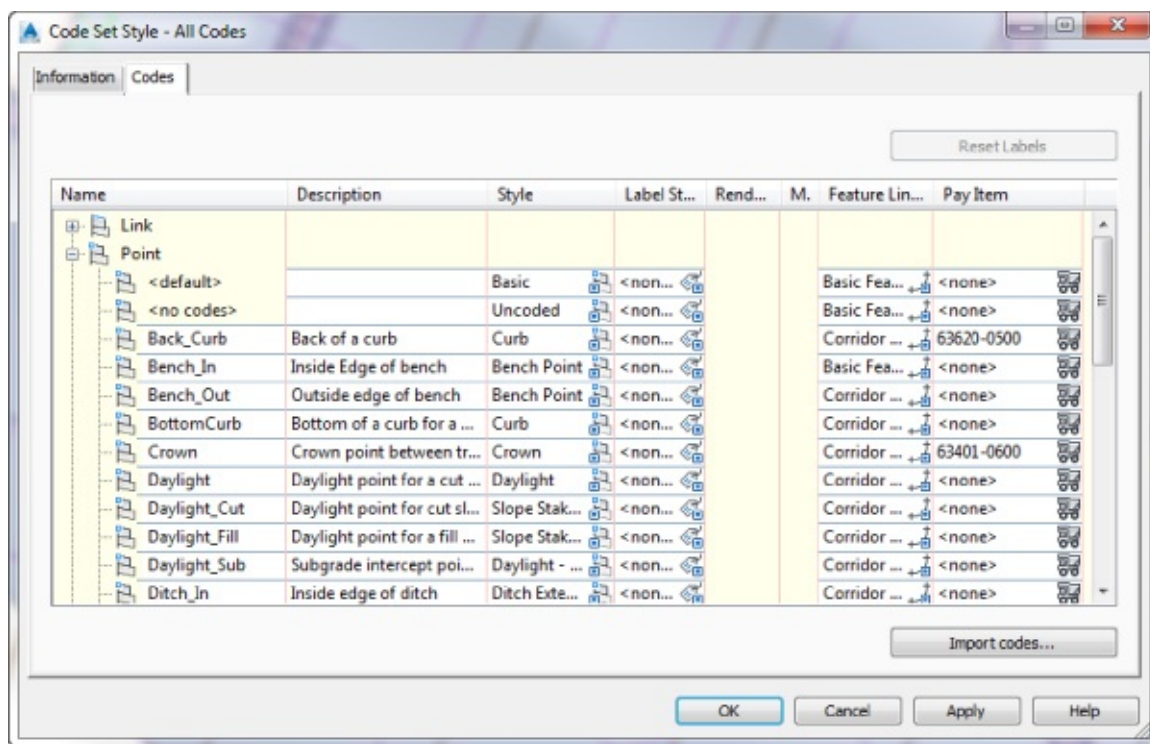


Figure 17.12 Completed code set editing for pay items

15. Click OK to accept the settings in this dialog.
16. Switch to Prospector, and expand the Corridor branch.
17. Right-click North River Crossing and select Properties to open the Corridor Properties dialog.
18. On the Codes tab, expand the Point branch.

Notice that the Back_Curb and Crown codes reflect pay items in the far-right column.

19. Click Cancel to exit the dialog.

When this exercise is complete, you may close the drawing. A saved copy of this drawing is available from the book's web page with the filename 1704_QTOCorridors_FINISHED.dwg or 1704_QTOCorridors_METRIC_FINISHED.dwg.

Best Practice: Storing a Formula File with the Project Files

Every drawing in which you utilize QTO tools is intended to have its own, unique formula file. We recommend that when you create a new formula file, you store it in the same folder as the rest of the project.

If you need to send a drawing to another firm and you want them to have your quantity takeoff formulas, use eTransmit to export everything they need to work with the drawing. You can access the eTransmit command by clicking the Application menu in the upper-left corner and selecting Publish > eTransmit. The eTransmit command will attach the pay item file, the categorization file, and the formula file as part of the transmission.

Corridors can be used to measure a large number of items. You've always been able to manage pure quantities of material, but now you can add to that the ability to measure linear and incremental items as well. Although we didn't explore every option, you can also use link codes to assign pay items to your

corridor models. Point codes measure the length of the associated feature line. Link codes measure cumulative area between assemblies.

Now that you've looked at AutoCAD objects and corridors, it's time to examine the pipe network objects in Civil 3D as they relate to pay items.


Pipes and Structures as Pay Items

One of the easiest items to quantify in Civil 3D is the pipe network. There are numerous reports that will generate pipe and structure quantities. This part of the model has always been fairly easy to account for; however, with the ability to include it in the overall QTO reports, it's important to understand how parts get pay items assigned. There are two methods: via the parts lists and via the part properties. These methods can also be applied to pressure network pipes, fittings, and appurtenances.

Assigning Pay Items in the Parts List

Ideally, you'll build your model using standard Civil 3D parts lists that you've set up as part of your template. These parts lists contain information about pipe sizes, structure thicknesses, and so on. They can also contain pay item assignments. This means that the pay item property will be assigned as each part is created in the model, skipping the assignment step later.

In this exercise, you'll see how easy it is to modify parts lists to include pay items:

1. Open the `1705_QTOPipeNetworks.dwg` or `1705_QTOPipeNetworks_METRIC.dwg` file.
2. On the Settings tab of Toolspace, expand the Pipe Network > Parts Lists branch.
3. Highlight and right-click Sanitary Sewer and select Edit to display the Network Parts List - Sanitary Sewer dialog.
4. On the Pipes tab, expand the Sanitary Sewer > PVC Pipe (PVC Pipe SI for metric) part family.
Notice that the far-right column is the Pay Item assignment column.
5.  Click the truck icon in the 8-inch PVC (or 200 mm PVC Pipe) row to display the Pay Item List dialog.
6. Turn off categorization and enter **PVC** in the text box, as shown in [Figure 17.13](#), and press **↵** to filter the dialog.

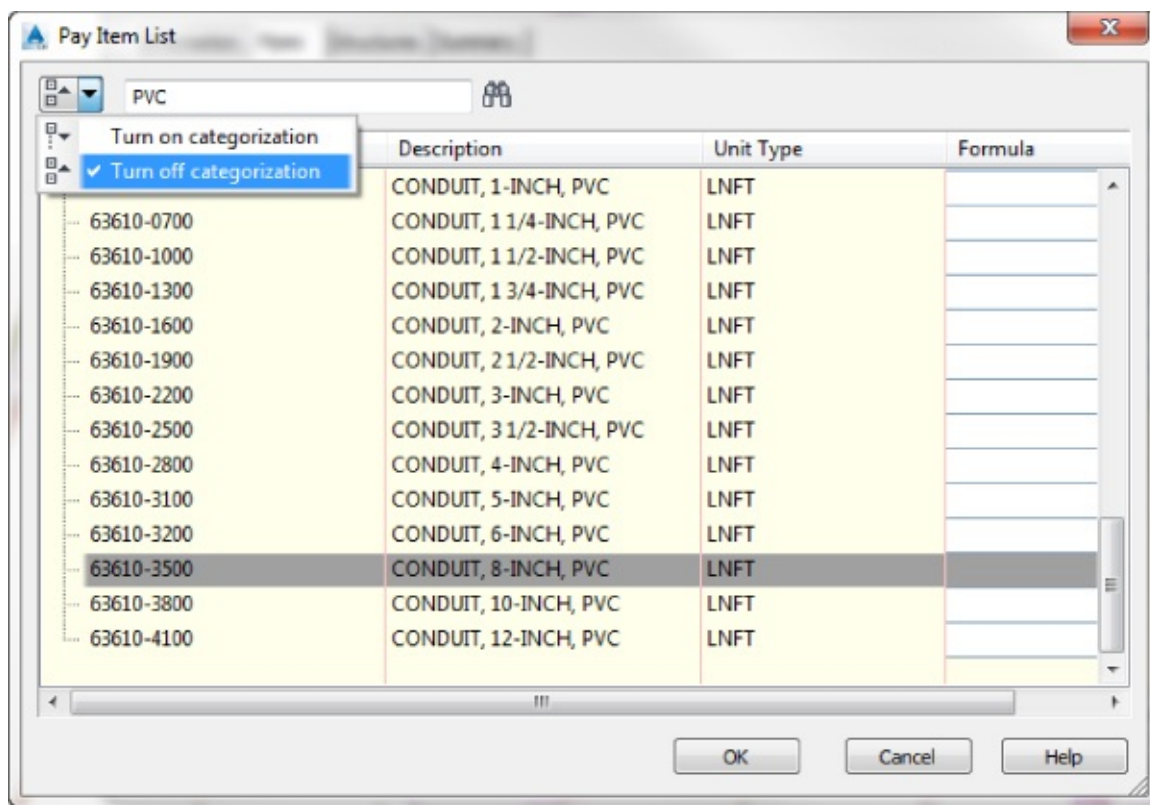


Figure 17.13 Filtering and selecting the 8-inch PVC conduit as a pay item

7. Select the CONDUIT, 8-INCH, PVC item (CONDUIT, 200 MM PVC) as shown, and click OK to assign this pay item to the applicable pipe part.
8. Repeat steps 4 through 7 to assign pay items to 10- and 12-inch (250 mm and 300 mm) PVC conduits. Your dialog should look like [Figure 17.14](#).

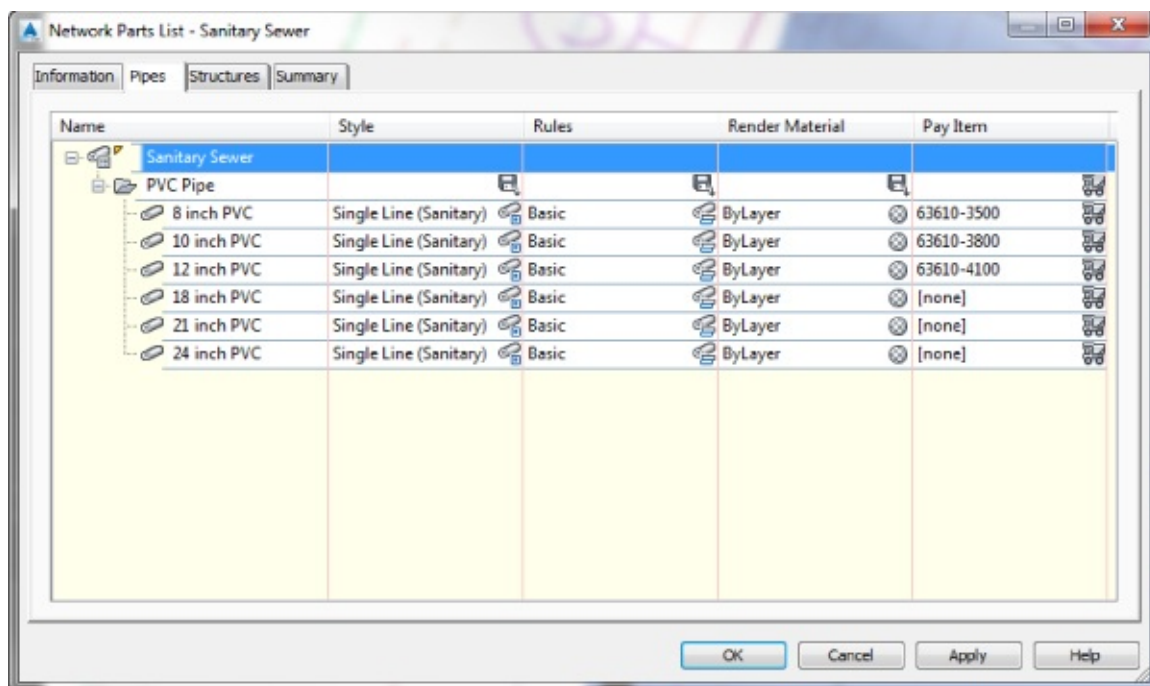


Figure 17.14 Completed pipe parts pay item assignments

9. On the Structures tab of the Networks Parts List dialog, expand the Sanitary Sewer > Concentric Cylindrical Structure branch or Concentric Cylindrical Structure SI if metric).
10. Click the truck icon on the Concentric Structure row to display the Pay Item List dialog.

1. In the Pay Item List dialog under Favorites, select MANHOLE, SANITARY SEWER, and click OK. The Network Parts List should now look similar to [Figure 17.15](#).

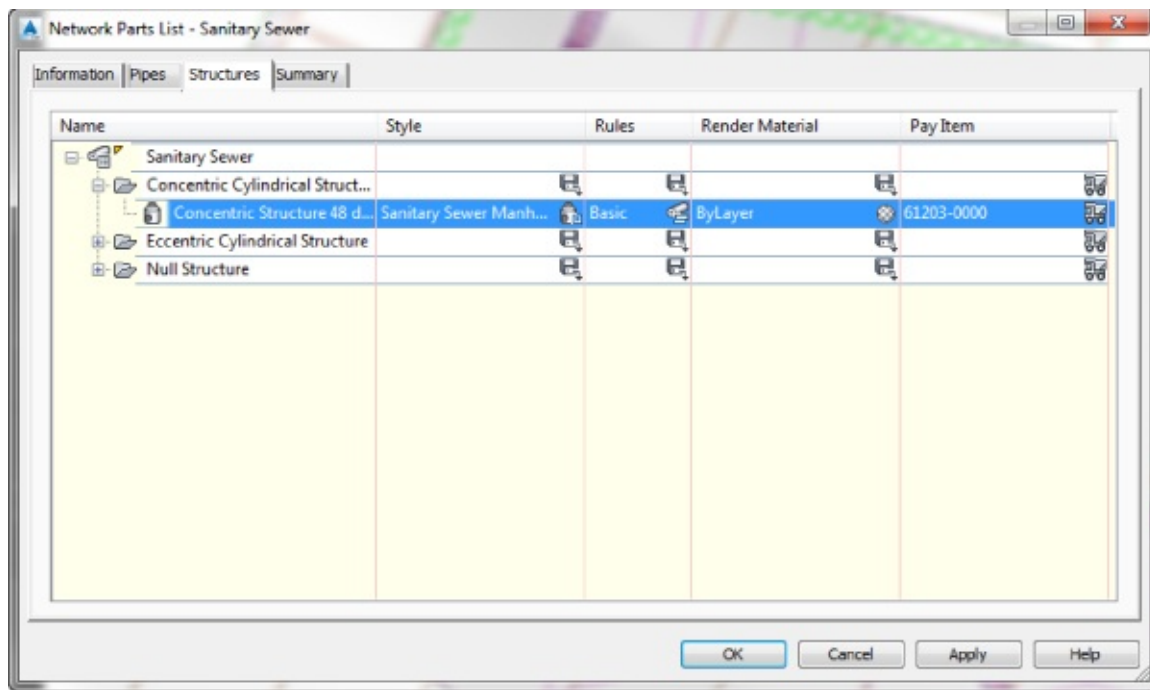


Figure 17.15 Completed structure parts pay item assignments

2. Click OK to accept the settings in the Network Parts List.

When this exercise is complete, you may save the drawing and keep it open to continue on to the next exercise. Or you may use the saved copy of this drawing available from the book's web page (1705_QTOPipeNetworks_FINISHED.dwg or 1705_QTOPipeNetworks_METRIC_FINISHED.dwg).

Pay Items as Part Properties

If you have existing Civil 3D pipe networks that were built before your parts list had pay items assigned or if you change out a part during your design, you need a way to review and modify the pay items associated with your network. Unfortunately, doing so isn't as simple as just telling Civil 3D to reprocess some data, but it's not too complicated either. You simply remove the pay item associations and then add new ones.

In this exercise, you'll add pay item assignments to a number of parts already in place in the drawing:

1. Continue working in your file, or open the 1705_PipeNetworks_FINISHED.dwg or 1705_QTOPipeNetworks_METRIC_FINISHED.dwg file.
2. If the QTO Manager is not already open, from the Analyze tab > QTO panel choose QTO Manager to open it.
3. Slide the QTO Manager to one side, and then select one of the manholes in the Sanitary Network (they have an S symbol on them).
4. Right-click and choose Select Similar. Fourteen manholes should highlight, as shown in [Figure 17.16](#).



Figure 17.16 Use Select Similar to find all sanitary manhole structures.

5. In the QTO Manager, expand Favorites and select MANHOLE, SANITARY SEWER.
6. Click the Assign The Selected Pay Items To Object(s) In The Drawing button.
7. At the command line, press \leftarrow to complete the assignment.
8. You can pause your cursor over one of the manholes and the tooltip will reflect a pay item now, in addition to the typical information found on a manhole.

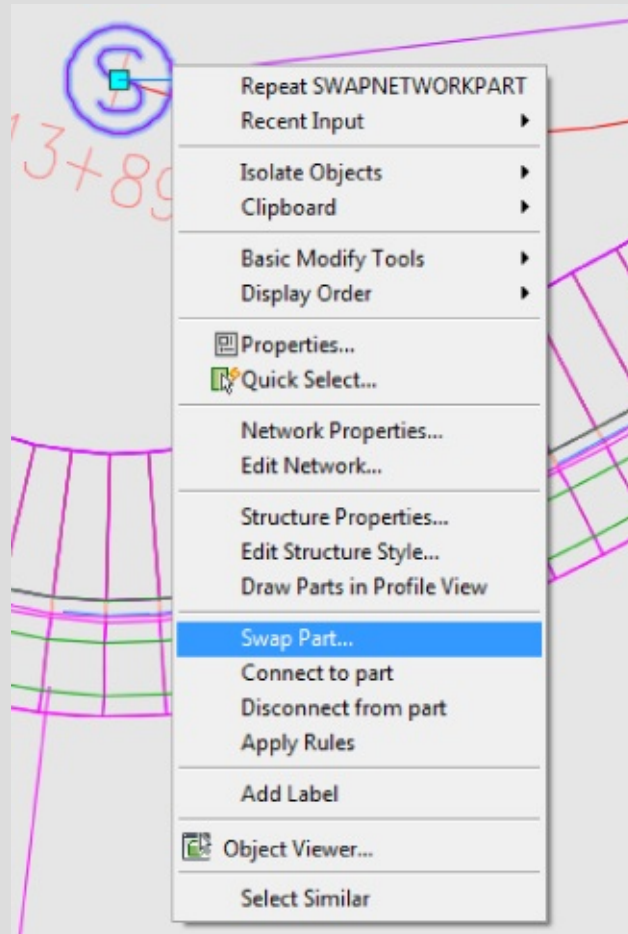
When this exercise is complete, you may save the drawing and keep it open to continue on to the next exercise. Or you may use the saved copy of this drawing available from the book's web page (1706_QTOPipeNetworks_FINISHED.dwg or 1706_QTOPipeNetworks_METRIC_FINISHED.dwg).

Heads Up on Pipe Network and Pressure Network QTO Assignments

Pay items change when network parts change if the new part has a pay item assigned in the parts list. However, if you swap to a part that does not have a pay item assigned, Civil 3D drops the QTO tag.

The best way to keep a proper count of your pipe network or pressure network parts is to make sure every part in your network parts list has an appropriate pay item.

If you graphically change a pipe property (such as its diameter), this will not cause a change in the pay item assignment. You should always use Swap Part to change sizes, as you learned in Chapter 13, “Pipe Networks.”



This is something you definitely want to keep an eye on. So, if you do need to change a pay item assignment to a part that's already in the network, how do you do it? You'll find that out in the next section.

Assigning pay items to existing structures and pipes is similar to adding data to standard AutoCAD objects. As mentioned before, the pay item assignments sometimes get confused in the process of changing parts and pipe properties, and they should be manually updated. To do so, you'll need to remove pay item data and then add it back in, as demonstrated in this exercise:

1. Continue working with your file or open the 1706_QTOPipeNetworks_FINISHED.dwg or 1706_QTOPipeNetworks_METRIC_FINISHED.dwg file.
2. Pan to the west end of ROAD A where the sanitary sewer network terminates.

3. Pause your cursor over the pipe connected to the structure at the termination of the sewer network.
4. The tooltip will appear indicating the pipe information but no pay item, as shown in [Figure 17.17](#).

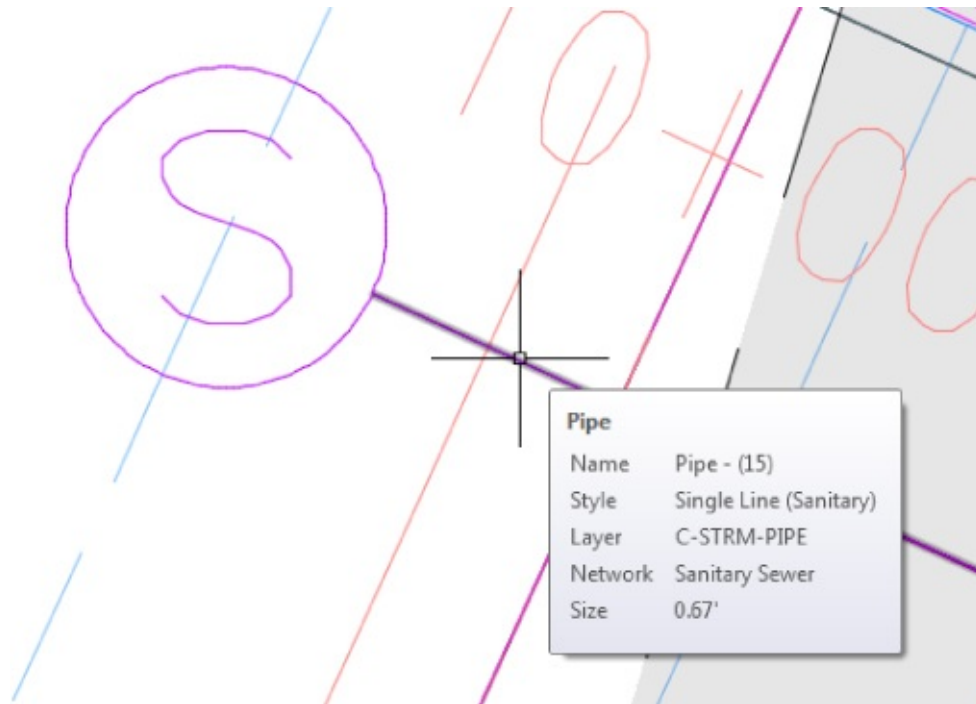


Figure 17.17 Tooltip for a pipe without an assigned pay item

5. Select the pipe, right-click, and select Swap Part.
6. This will display the Swap Part Size dialog.
7. Select 12 Inch PVC (or 300 mm PVC Pipe) from the list of sizes (the original size of pipe—you are not changing the diameter), and then click OK.
8. Pause near the newly sized pipe and notice that the tooltip now shows the pay item, as shown in [Figure 17.18](#).

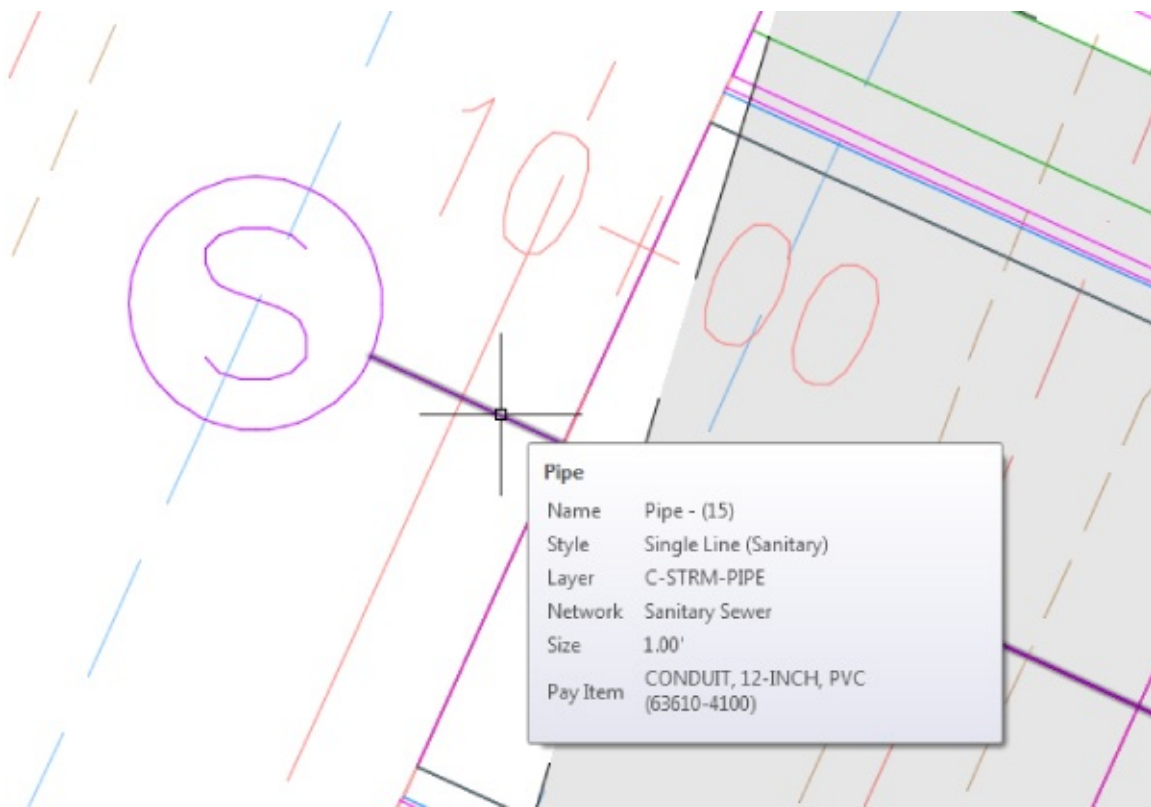


Figure 17.18 Tooltip after the pipe part has been swapped to a part with an assigned pay item


When this exercise is complete, you may close the drawing. A saved copy of this drawing is available from the book's web page with the filename `1707_QTOPipeNetworks_FINISHED.dwg` or `1707_QTOPipeNetworks_METRIC_FINISHED.dwg`.

You might wonder why Civil 3D allows you to have multiple pay items on a single object. For example, linear feet of striping and tree counts can both be derived from street lengths; bedding and pipe material can both be calculated from pipe objects. You can also add related tasks to an item. For instance, a tree is usually a pay item by itself, but the labor to install the tree may be treated as a separate pay item.

You've now built up a list of pay items, tagged your drawing a number of ways, updated and modified pay item data, and looked at formulas in pay items. In the next section, you'll make a final check of your assignments before running reports.

Highlighting Pay Items

Before you run any reports, it's a good idea to make a cursory pass through your drawing and look at what items have had pay items assigned and what items have not. This review will allow you to hopefully catch missing items (such as hydrants added after the pay item assignment was done) as well as see any items that perhaps were blocked in with unnecessary pay items already assigned. In this exercise, you'll look at tools for highlighting objects with and without pay item assignments:

1. Open the `1708_QTOHighlighting.dwg` or the `1708_QTOHighlighting_METRIC.dwg` file.
2. From the Analyze tab > QTO panel, choose QTO Manager to display the QTO Manager.
3.  In the QTO Manager, select Highlight Objects With Pay Items, as shown in [Figure 17.19](#).

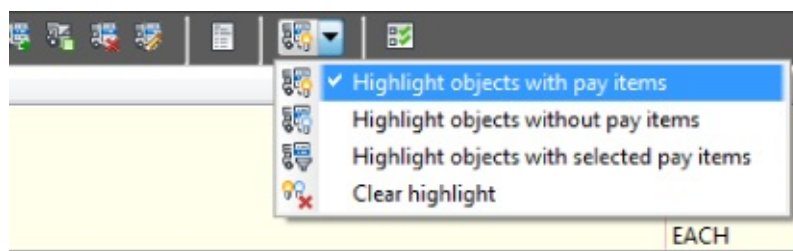


Figure 17.19 Turning on highlighting for objects with pay items assigned

Notice that from this same drop-down menu you can also choose Highlight Objects Without Pay Items, Highlight Objects With Selected Pay Items, or Clear Highlight.

4. Pan around the drawing and zoom in on the trees at the intersection of ROAD A and ROAD B.



5. In the QTO Manager, select Highlight Objects Without Pay Items.

Notice that the trees turn from green to muted. This means they have a pay item assigned.

6. In the QTO Manager, switch back to Highlight Objects With Pay Items.

Next, you will change the pay item assignment for the trees at the intersection of ROAD A and ROAD B since the planner has decided to use a different tree type.



7. In the QTO Manager, click the Remove Pay Item(s) From Specified Objects button.

8. At the Select object(s): prompt, select five of the trees near the intersection and press `↵` to end the command.

Notice that the trees go from green to a muted gray, indicating that they no longer have a pay item associated since the highlighting is enabled.

9. In the QTO Manager, enter **Maple** in the text box to filter.

10. Turn the categorization option off to more easily see the filtered results.

11. Select item 62601-0100.



12. Click the Assign The Selected Pay Items To Objects In The Drawing button.

13. At the Select pay item(s) from master pay item list or [Enter]: prompt, press `↵`.

14. At the Select object(s): prompt, select the same five trees that you just unassigned pay items from, and press `↵` to end the command.

Notice that the trees go from a muted gray to green, indicating that they once again have pay items associated with them since the highlighting is enabled.

Unassigning and then reassigning a pay item may seem cumbersome. Instead, you may find it simpler to edit the pay item.



15. In the QTO Manager, click the Edit Pay Items On Specified Object button.

16. At the Select object(s): prompt, select the remaining tree near the intersection to display the Edit Pay Items dialog.

17. Select the FAGUS GRANDIFLORIA row, and then click the red X in the upper right to remove this pay item from the tree, as shown in [Figure 17.20](#).

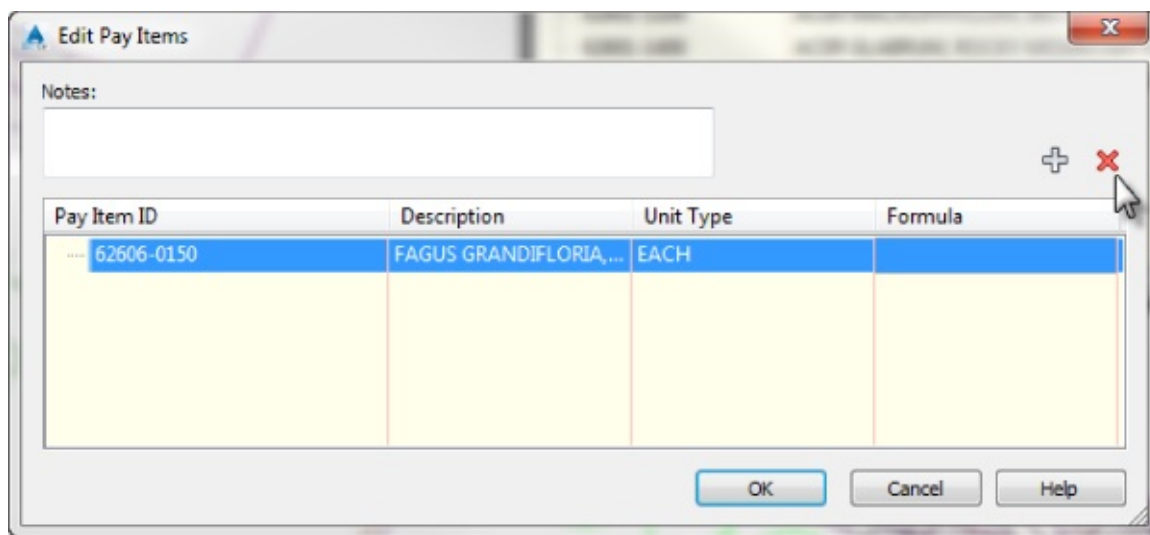


Figure 17.20 Editing pay item assignments: deleting the tree pay item

18. Click the plus sign in the upper right to display the Pay Item List dialog in order to add a new pay item to the tree.
19. Enter **Maple** in the text box to filter.
20. Select item 62601-0100 and click OK.
21. Click OK to accept the new pay item designation shown in the Edit Pay Items dialog.
22. In the QTO Manager, select Highlight Objects Without Pay Items from the drop-down menu shown previously in [Figure 17.19](#).

This switches the highlighting from objects that do have pay items to objects that do not have pay items.

23.  In the QTO Manager, select Clear Highlight to return the drawing view to normal.

When this exercise is complete, you may close the drawing. A saved copy of this drawing is available from the book's web page with the filename 1708_QTOHighlighting_FINISHED.dwg or 1708_QTOHighlighting_METRIC_FINISHED.dwg.

While highlighting objects with QTO manager, you can add, remove, or edit pay items using the tools at the top of the QTO Manager. You can leave the objects highlighted while performing any other AutoCAD command. This makes it easier to correct any mistakes made during the assignment phase of the process. Finally, always be sure to clear highlighting before exiting the drawing or your peers might wind up awfully confused when they open the file!

Inventorying Your Pay Items

At the end of the process, you need to generate some sort of report that shows the pay items in the model, the quantities of each item, and the units of measurement. This data can be used as part of the plan set in some cases, but it's often requested in other formats to make further analysis possible. In this exercise, you'll look at the Quantity Takeoff tool that works in conjunction with the QTO Manager to create reports:

1. Open the 1709_QTOReporting.dwg or 1709_QTOReporting_METRIC.dwg file.
2. From the Analyze tab > QTO panel, choose Takeoff to display the Compute Quantity Takeoff dialog, shown in [Figure 17.21](#).

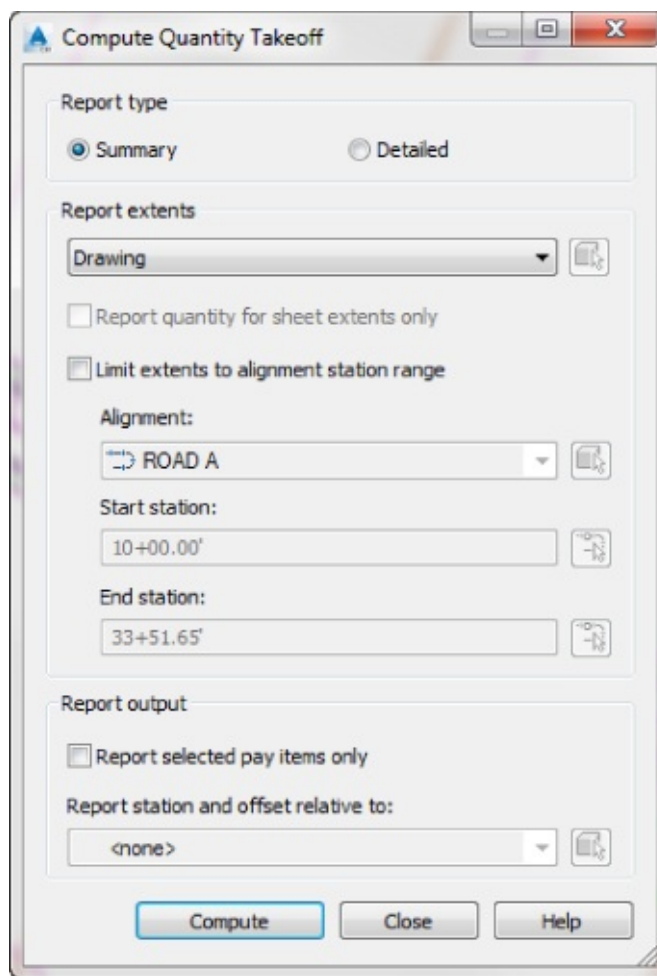


Figure 17.21 The Compute Quantity Takeoff dialog with default settings

Limiting the Report Extents

Note that you can limit the report extents by drawing, by sheets if done from paperspace, by selection set, or by alignment station ranges. Most of the time, you'll want to run the full drawing. You can set the report output for only selected pay items if, for instance, you just want a table of pipe and structures.

3. Click Compute to open the Quantity Takeoff Report dialog, as shown in [Figure 17.22](#).

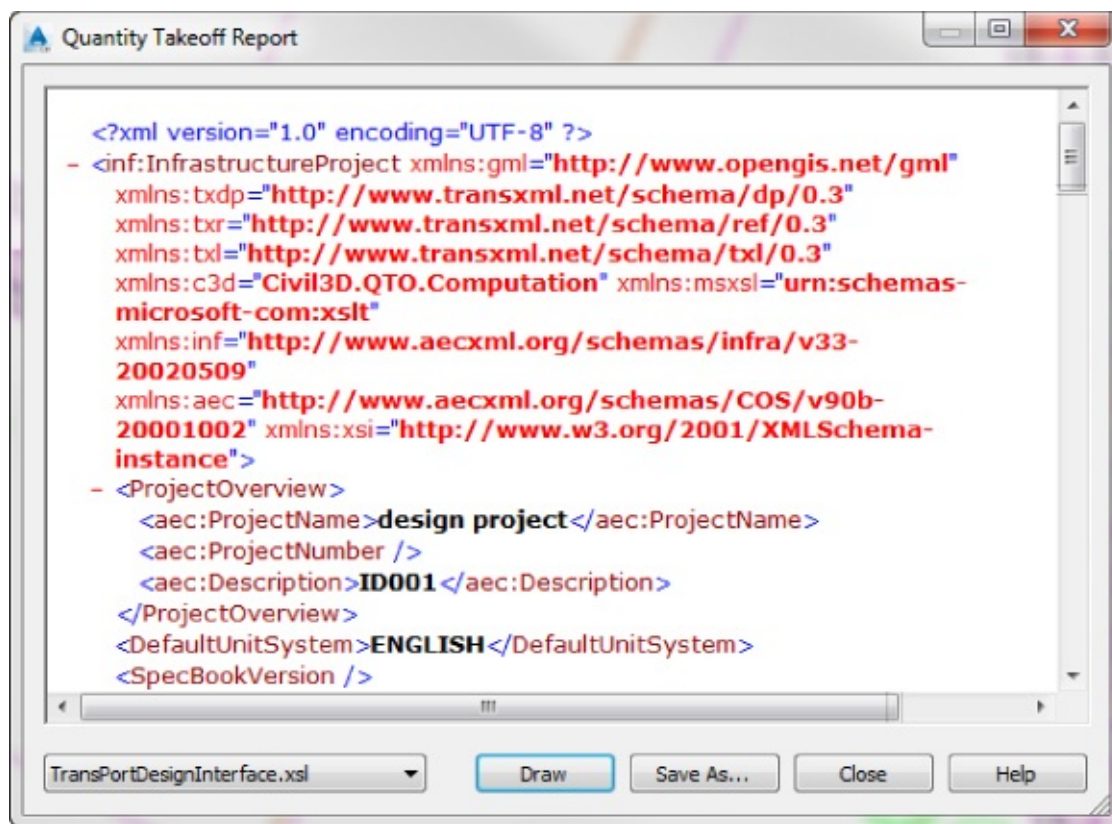


Figure 17.22 Quantity Takeoff Report in the default XSL format

The report is shown in the default Extensible Stylesheet Language (XSL) format.

4. From the drop-down menu on the lower left of the dialog, select Summary (TXT).xsl to change the format to something more understandable, as shown in [Figure 17.23](#).

The dialog box titled "Quantity Takeoff Report" displays a table titled "Summary Takeoff Report". The table has four columns: Pay Item ID, Description, Quantity, and Unit. The data is as follows:

Pay Item ID	Description	Quantity	Unit
20101-0000	CLEARING AND GRUBBING	60.50	ACRE
61106-0000	FIRE HYDRANT	4	EACH
61203-0000	MANHOLE, SANITARY SENER	14	EACH
62601-0100	ACER RUBRUM, RED MAPLE, 1 1/2-INCH TO 2-INCH CALIPER, BALLED AND BURLAPPED	6	EACH
62606-0150	FAGUS GRANDIFLORIA, AMERICAN BEECH, 1 1/2-INCH TO 2-INCH CALIPER, BALLED AND BURLAPPED	58	EACH
63610-3500	CONDUIT, 8-INCH, PVC	544.09	LNFT

At the bottom, there is a dropdown menu showing "Summary (TXT).xsl" and buttons for "Draw", "Save As...", "Close", and "Help".

Figure 17.23 Quantity Takeoff Report in the Summary TXT format

At this point, you can export this data as a text file, but for the purpose of this exercise, you'll simply insert it into the drawing.

5. Click the Draw button at bottom of the dialog.
6. At the Select report table origin: prompt, click near some clear space, and you'll be returned to the Quantity Takeoff Report dialog.
7. Click Close to dismiss this dialog, and then click Close again to dismiss the Compute Quantity Takeoff dialog.
8. The program zooms into where you clicked in step 6, and you should see something like [Figure 17.24](#).

Summary Takeoff Report				
Pay Item ID	Description	Quantity	Unit	
20101-0000	CLEARING AND GRUBBING	60.50	ACRE	
61106-0000	FIRE HYDRANT	4	EACH	
61203-0000	MANHOLE, SANITARY SEWER	14	EACH	
62601-0100	ACER RUBRUM, RED MAPLE, 1 1/2-INCH TO 2-INCH CALIPER, BALLED AND BURLAPPED	5	EACH	
62606-0150	FAGUS GRANDIFLORA, AMERICAN BEECH, 1 1/2-INCH TO 2-INCH CALIPER, BALLED AND BURLAPPED	58	EACH	
63610-3500	CONDUIT, 8-INCH, PVC	544.09	LINEFT	

Figure 17.24 Summary takeoff data inserted into the drawing

When this exercise is complete, you may close the drawing. A saved copy of this drawing is available from the book's web page with the filename 1709_QTOReporting_FINISHED.dwg or 1709_QTOReporting_METRIC_FINISHED.dwg.

That's it! The hard work in preparing QTO data is in assigning the pay items. The reports can be saved to HTML, TXT, or XLS format for use in almost any analysis program.

The Bottom Line

Open and review a list of pay items along with their categorization. The pay item list is the cornerstone of quantity takeoffs. You should download and review your pay item list and compare it against the current reviewing agency list regularly to avoid any missed items.

Master It Using the template of your choice, open the Getting Started.csv (or Getting Started_Metric.csv) pay item file that you have been working with in the previous exercises and add the 12-, 18-, and 24-Inch Pipe Culvert (or 300 mm, 450 mm, and 600 mm Pipe Culvert) pay items to your Favorites list in the QTO Manager.

Assign pay items to AutoCAD objects, pipe networks, and corridors. The majority of the work in preparing quantity takeoffs is in assigning pay items accurately. By using the linework, blocks, and Civil 3D objects in your drawing as part of the process, you reduce the effort involved in generating accurate quantities.

Master It Open the MasteringQTO.dwg or MasteringQTO_Metric.dwg file and assign the CLEARING AND GRUBBING pay item to the polyline that was originally extracted from the border of the corridor. Change the hatch to have a transparency of 80.

Use QTO tools to review what items have been tagged for analysis. By using the built-in highlighting tools to verify pay item assignments, you can avoid costly errors when running your QTO reports.

Master It Verify that the area in the previous exercise has been assigned a pay item.

Generate QTO output to a variety of formats for review or analysis. The quantity takeoff reports give you a quick understanding of what items have been tagged in the drawing, and they can generate text in the drawing or external reports for uses in other applications.

Master It Display the length of Type C Broken markings in a Quantity Takeoff Report with the Summary (TXT) report style using the MasteringQTOReporting.dwg or MasteringQTOReporting_Metric.dwg file.

Chapter 18

Label Styles

The creation of proper styles and settings can make or break your experience with Autodesk® AutoCAD® Civil 3D® software. Styles control the display properties of Civil 3D objects and labels. Understanding and applying styles correctly can mean the difference between getting a job out in several hours and fighting with your project drawing for days.

This chapter is organized by style type. First, read the chapter to be introduced to the style concepts in a logical manner. Later, when you use this chapter as a reference to build styles, you will likely jump around to the examples that meet your needs.

In this chapter, you will learn to


- Override individual labels with other styles
- Create a new label set for alignments
- Create and use expressions
- Apply a standard label set to profiles

Label Styles

The best design in the universe is not worth anything unless it is labeled properly. Civil 3D labels are smart objects that are dynamically linked to the object they are labeling. Civil 3D labeling is customizable to fit your design needs and local requirements.

When talking about labels in Civil 3D, keep in mind that you are not just talking about text. Labels can contain lines and blocks if desired. Label styles control the plotted height, contents, and precision of text. They also control how leaders are applied when the label is dragged away from its initial position. You will even work with some labels that contain no text at all!

General Labels

 On the Settings tab, you'll see a complete list of objects that Civil 3D uses to build its design model. Each of them has special features unique to the object being described, but there are some common features as well. The General collection contains settings and styles that are applied to various objects across the entire product.

The General collection serves as the catchall for styles that apply to multiple objects and for settings that apply to *no* objects. For instance, the Civil 3D General Note object doesn't really belong with the Surface or Pipe collections. It can be used to relate information about those objects, but because it can also relate to something like “Don't Dig Here!” or a northing-easting of an arbitrary location, it falls into the General category.

The Label Styles collection allows Civil 3D users to place general text notes or label single entities while still taking advantage of the flexibility and scaling properties. The various label styles shown in [Figure 18.1](#) can give you some idea of their uses.

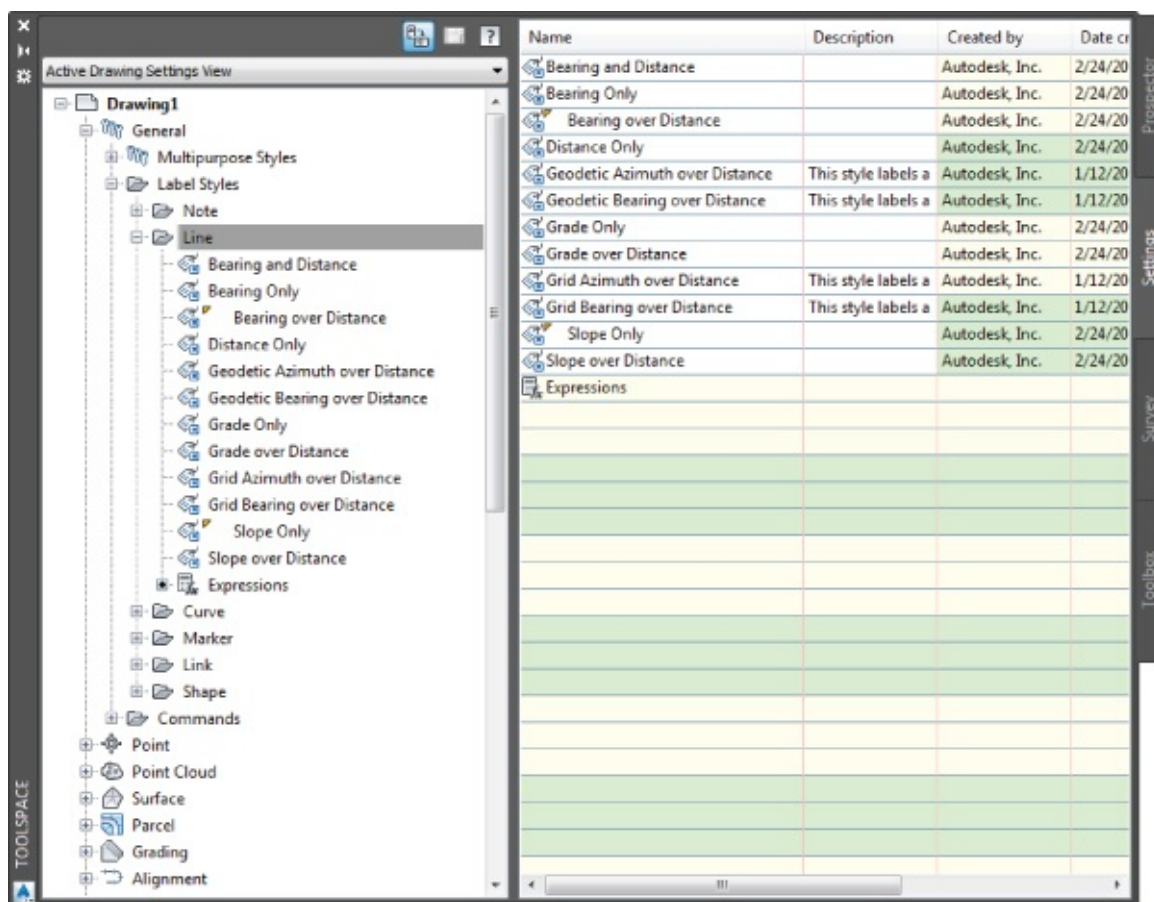


Figure 18.1 Line label styles

Label styles are a critical part of producing plans with Civil 3D. In this chapter, you'll learn how to build a new basic label and explore some of the common components that appear in every label style throughout the product.

Frequently Seen Tabs

To get into a label style, find the appropriate label type in the Settings tab of Toolspace. The Settings tab is organized into object collections. For each of the objects that can be labeled, the Label Styles branch will organize its labels based on their function, which makes it very easy to find the label style you need to edit. When you locate the desired label style, right-click the style to display Label Style menu options:

- Edit** Opens the label style for modification.
- New** Copies the label style as a child style, a style that inherits its settings from a parent.
- Copy** Creates a duplicate label style.
- Delete** Erases the label style. Visible only if the style is not in use.
- Find References** Visible only if label style is in use. Searches settings and objects and lists where label styles are in use. The result of the search is displayed in a References dialog box.
- Replace With** Visible only if label style is in use. Finds a label style in use in the drawing and replaces it with another.

All styles, regardless of type, have a few things in common:

Information Tab The Information tab, shown in [Figure 18.2](#), controls the name of the style.

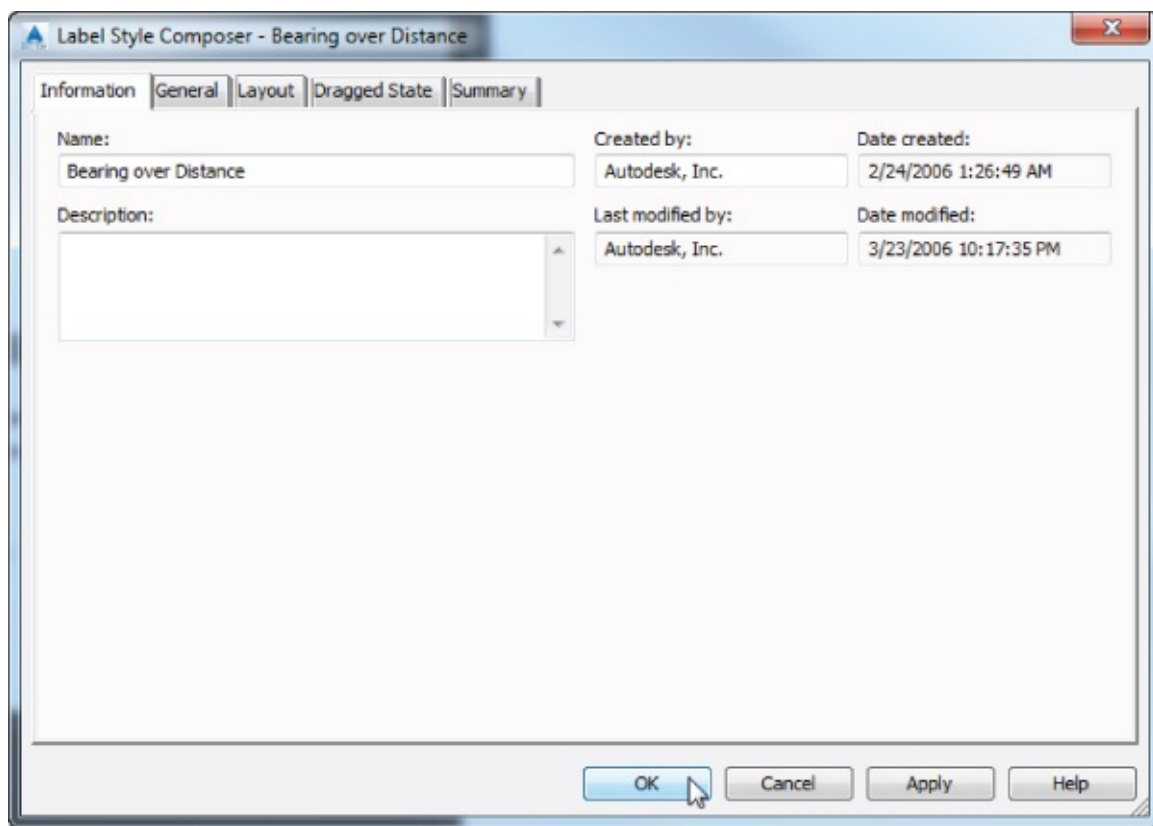


Figure 18.2 The Information tab exists for all object and label styles.

If desired, you can create a description. This information will appear as a tooltip as you browse through the Settings tab.

On the right side of the dialog, you will see the name of the person who originally created the style, the date when it was created, and the last person who modified the style. These names are initially pulled from the Windows login information, and only the Created By field can be edited.

1. **General Tab** The General tab ([Figure 18.13](#)) contains basic settings for the label style and consists of the following:

Text Style This option refers to the AutoCAD text style used in the label. Text styles must already be created in the drawing.

Label Visibility This option allows the label to be not shown even if applied.

Display Mode Allows a label to be displayed either in a Label mode or Tag mode. This setting is available only for specific object types including lines, curves, parcels, and alignments.

Layer In Chapter 1, “The Basics,” you learned that the Object Layer tab in the Drawing Settings dialog is where you configure insertion layers for object types, labels, and tables. Freezing an object layer will, of course, make any object contained on that layer disappear. The Layer setting here on the General tab allows you to specify a layer that will override the layer properties of the object layer and also add another layer for controlling visibility of specific label types. For example, the object layer for alignment labels could be set to C-ALIGN-LABL. However, Major Station label styles could be configured to place the label on C-ROAD-STAN-MAJR. When C-ALIGN-LABL is frozen, all alignment labels disappear. When C-ROAD-STAN-MAJR is frozen, only Major Station labels disappear. If this setting is left set to layer 0, then the label using this style will default to the object layer display properties.

Orientation Reference This option controls how text rotation is controlled. [Figure 18.3a](#) shows

the label aligned with the object. [Figure 18.3b](#) shows the text rotated to the view. Even though the view has been rotated, the text still appears parallel with the bottom of the screen. The last, and least used, option for orientation reference is the World Coordinate System option, which is shown in [Figure 18.3c](#). The view is rotated, and the direction of the text rotates with the World Coordinate System.

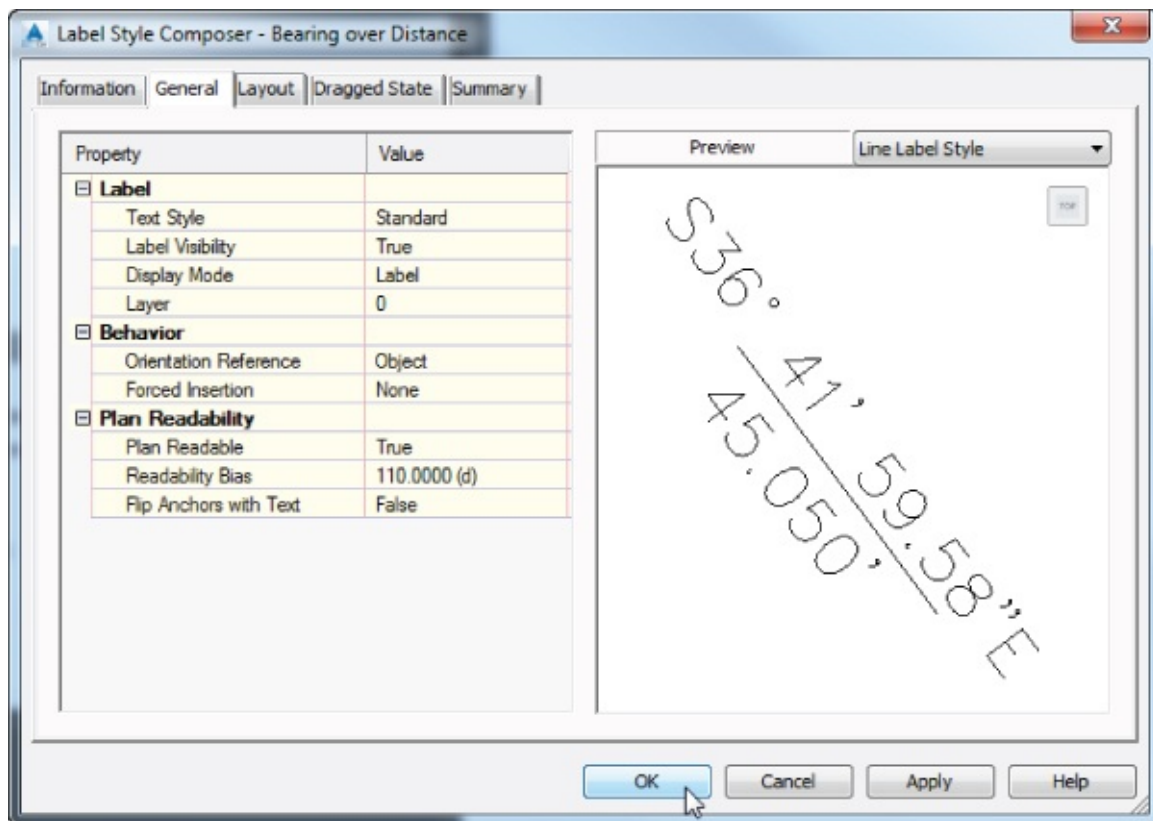


Figure 18.3 Orientation reference options set to Object (a), View (b), and World Coordinate System (c)

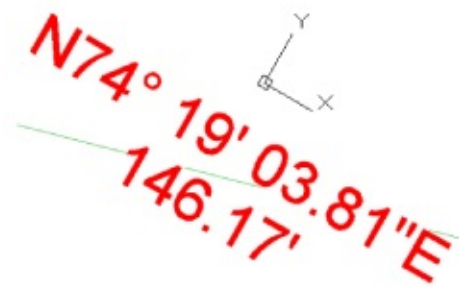
Forced Insertion This option makes more sense in other objects and will be explored further. The Forced Insertion feature allows you to dictate the insertion point of a label on the basis of the object being labeled. [Figure 18.4](#) shows the effects of the various options on a bearing and distance label.



(a)



(b)



(c)

Figure 18.4 Forced Insertion options for parcel segments

Plan Readable When this option is enabled, text maintains the up direction in spite of view rotation. Rotating 100 labels is a tedious, thankless task, and this option handles it automatically.

Readability Bias This option specifies the angle at which readability kicks in. This angle is measured from the 0 degree of the x-axis that is common to AutoCAD angle measurements. When a piece of text goes past the readable bias angle, the text flips 180 degrees to maintain vertical orientation, as shown in [Figure 18.5](#). The default Readability angle is 110. A common desired default is 90.1, which would flip any text just after passing a vertical direction.

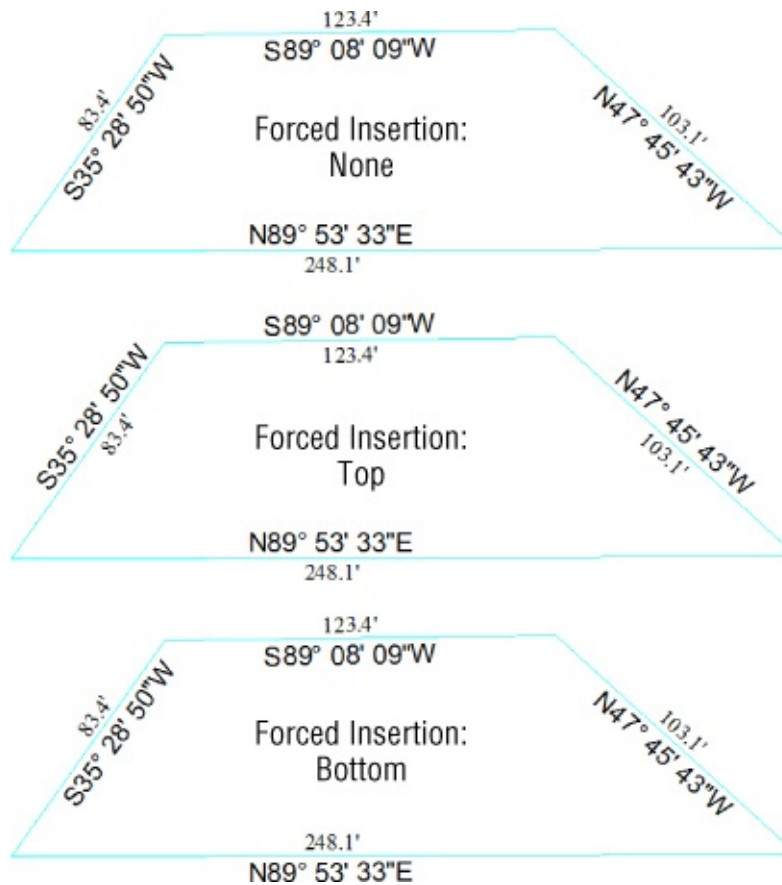


Figure 18.5 Plan-readable text shown on contours; note the difference in direction for the true and false settings (PR = Plan Readable).

Flip Anchors With Text Most users leave this setting at its default, False, and never give it another thought. [Figure 18.6a](#) shows what happens to the text insertion points when this option is set to False and readability kicks in. The SW bearing is followed by its distance as originally configured. Readability has been applied to the NW bearing because it was configured to be oriented to the object it is labeling. Without readability, the label would be upside down. Distance and bearing have been flipped individually so it appears the two values are out of order. When this setting is set to True, the distance text flips to the other side of the bearing, as shown in [Figure 18.6b](#). You'll have the opportunity to work with this setting in a later exercise.



Figure 18.6 Flip Anchors With Text when readability kicks in: set to False (a); set to True (b)

Layout Tab Each label can be made up of several components. A Label component can be text, a block, or a line. Depending on the type of label style, other options can include Reference Text, Ticks (station labels), Direction Arrow (line labels), or Text For Each (structure styles only). The top row of buttons controls the selection, creation, and deletion of these components, as shown in [Figure 18.7](#).


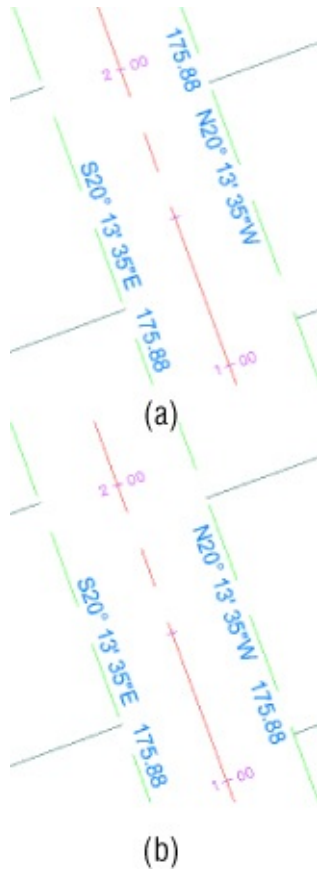


Figure 18.7 The Layout tab

Bearing **Component Name** From the Component Name drop-down, choose the component you want to modify. The components are listed in the order in which they were created. When you make changes to properties on the Layout tab, pay attention to which component is active.

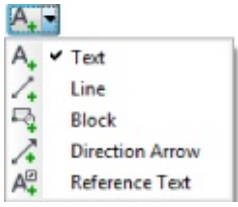Any changes you make to the properties will apply only to the active : component. It is important to note that in the label's dragged state the displayed order reflects the order in which the components were created.



Create Component The Create Component button lets you add new components to : enhance your labels. A component can be Text, Line, Block, Tick, Direction Arrow, Reference Text, or Text For Each. The options will vary depending on the object you are labeling. Not every option is available in every label. For example, Text For Each is available only in structure labels.

The ability to label one object while referencing another (reference text) is one of the most powerful labeling features of Civil 3D. This is what allows you to label a spot elevation for both an existing and a proposed surface at the same time, using the same label. Alignments, COGO points, parcels, profiles, surfaces, and survey figures can all be used as reference text. Text For Each is a type of component that can label properties of connected pipes in a structure label.



Copy Component The Copy Component button copies the component currently selected in the Component Name drop-down. This will be helpful when you're creating label styles that contain multiple pieces of similar information.



Delete Component The Delete Component button deletes components. Components that are configured as anchors for other components can be deleted, but you will receive a warning. Table tag components, found in curve, line, alignment segment, and parcel segment labels, cannot be deleted.



Component Draw Order The Component Draw Order button lets you shuffle components up and down within the label. This feature is especially important when you're using masks or borders as part of the label.

Once a component is added, the component properties can be addressed one by one by starting at the top and working your way down to the bottom of the dialog. There are three groups of property types: General, Text, and Border.

The General properties consist of the following:

1. **Name** This option defines the name used in the Component Name drop-down and when selecting other components for anchor components. Once a component is configured as an anchor component, the name cannot be changed until the reference is removed. When you're building complicated labels, a descriptive name goes a long way.
2. **Visibility** When this option is set to True, the component can be seen onscreen. When a component can't be seen, you can do some cool tricks with styles, as you'll see in the "Pipe Labels" section later in this chapter.
3. **Used In** Available for labels of specific elements such as lines, curves, parcels, and alignments. The component can be assigned to be displayed in either Label or Tag mode.
4. **Anchor Component** This setting allows you to position the component relative to the feature being labeled or to another component.

5. **Anchor Point** The options here may vary depending on the Anchor Component setting. When the feature is being used as an Anchor component, the anchor point can be a location relative to the feature offering combinations of middle, top, and bottom vertical positions with left, right, and center horizontal positions. Line components offer start, middle, and end anchor points. Also note that for specific elements like points, pipes, and structures, there is an option to set the anchor point to the element's dimension (see the Attachment property on the Layout tab for more on anchor points).

The settings available for label layout under the Layout tab of the Label Style Composer dialog are displayed in [Figure 18.8](#).

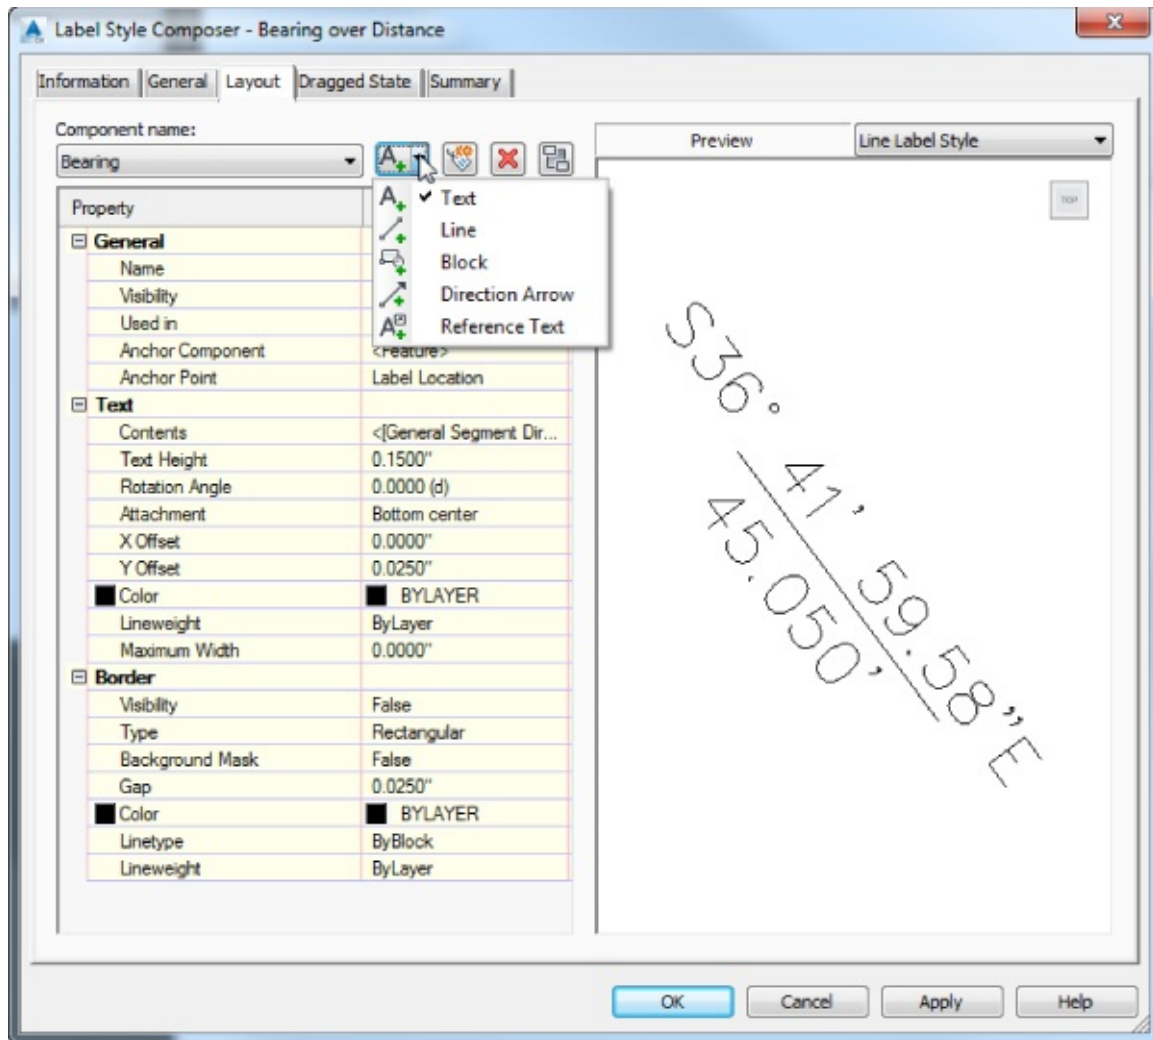


Figure 18.8 The circle and square indicate the places where the anchor point and attachment point are defined.

The Text properties consist of the following:

1. **Contents** This is where the information contained in the label is composed. Click the Value field to reveal an ellipsis. If the ellipsis is clicked, the Label Style Composer dialog opens to where property fields and text can be configured. Also under Contents you can find a Format tab that allows you to apply text justification and override the font used in the style among others.
2. **Text Height** This option determines the plotted height of the label. This setting overrides the height configured in the text style. Regardless of how the text style is configured in the label, text placed by Civil 3D is always annotative. The two viewports in [Figure 18.9](#) show some COGO points along a road. Even when the viewport scales differ, the text is the same size. For a block component this setting will be called Block Height, while for a line component this will be the Line Length.

Property	Value
General	
Name	Distance
Visibility	True
Used in	Label Mode
Anchor Component	Bearing
Anchor Point	Top Left
Text	
Contents	<[General Segment Le...
Text Height	0.1500"
Rotation Angle	0.0000 (d)
Attachment	Top center
X Offset	0.0000"
Y Offset	-0.0250"
Color	BYLAYER
Lineweight	ByLayer
Maximum Width	0.0000"
Border	
Visibility	False
Type	Rectangular
Background Mask	True
Gap	0.0250"
Color	BYLAYER
Linetype	ByBlock
Lineweight	ByLayer

Figure 18.9 Annotative text shown at multiple scales

Rotation Angle, X Offset, and Y Offset These options give you the ability to adjust the placement of the component by rotating or displacing the text in an x or y direction. Set your text as close as possible using the anchors and attachments, and use the offsets as additional spacing. If border gap is used, this will affect spacing as well.

Attachment This option determines which of the nine points on the Label Components bounding box are attached to the anchor point. [Figure 18.8](#) defines the place where this setting can be changed, while [Figure 18.10](#) illustrates the relationship between the anchor points and attachments.

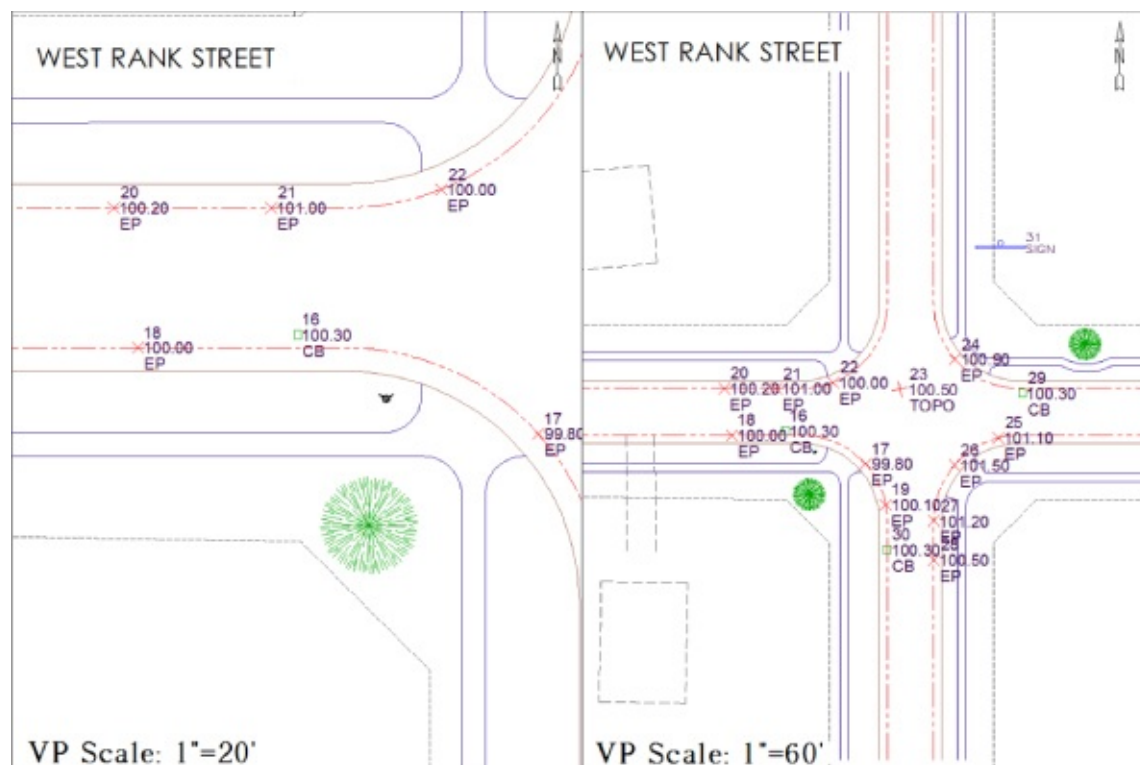


Figure 18.10 Schematic showing the relationship between anchor points (circles) and attachments (squares)

Color and Lineweight These options allow you to override the color and lineweight assigned by the layer configured on the General tab.

Maximum Width Some labels can be rather lengthy. Instead of letting the Label component continue indefinitely across the page, you can use Maximum Width to force word wrap after a specified plotted length. The default setting of 0.00 will not force word wrap.

The Border properties consist of the following:

1. **Visibility** Use this option to turn the border on and off for the component. Remember that component borders shrink to the individual component; if you're using multiple components in a label, each will have its own Border component.
2. **Type** This option allows you to select a rectangle, a rounded rectangle (slot), or a circle border. [Figure 18.11](#) shows examples of the three types of borders.

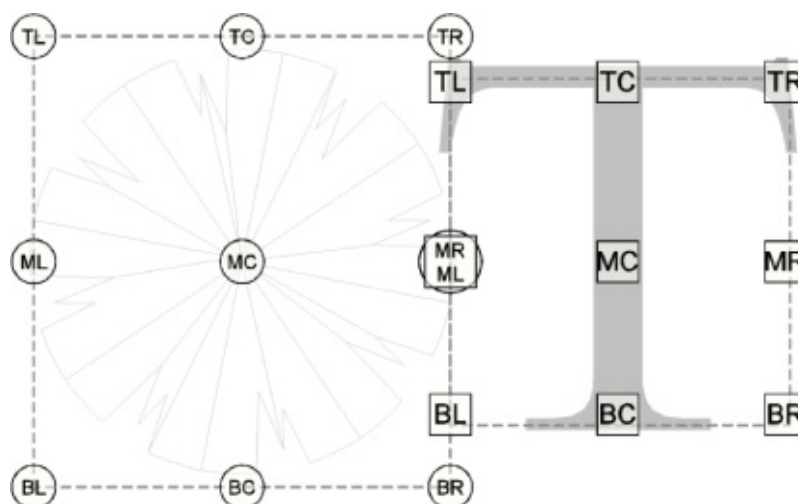


Figure 18.11 Border types shown on various surface label styles

Background Mask This option lets you determine whether linework and text behind this component are masked. This option can be handy for construction notes in place of the usual wipeout tools. The surface labels in [Figure 18.11](#) show the background mask in action.

Gap This option determines the offset from the Component bounding box to the outer points on the border. Setting this to half of the text size usually creates a visually pleasing border.

Color, Linetype, and Lineweight These options allow you to override the display properties assigned by the layer configured on the General tab.

Dragged State Tab Typically, dragging a label in Civil 3D creates a leader and rearranges the text. The settings that control these two actions appear on this tab (see [Figure 18.12](#)).

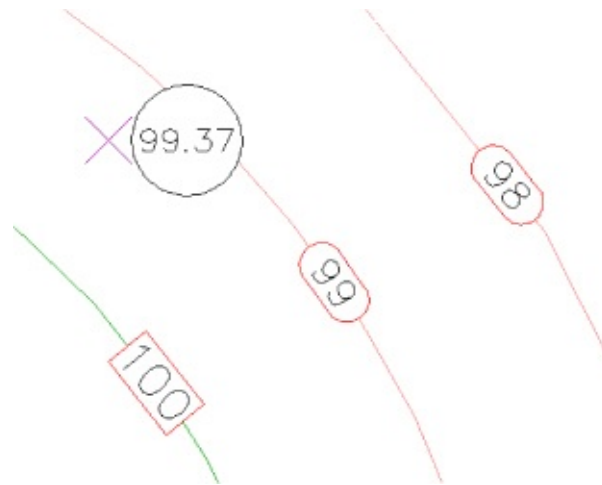


Figure 18.12 The Dragged State tab

Many of the property types found on this tab appeared on the Layout tab, so they don't need to be defined again. There are two groups of property types: Leader and Dragged State Components.

Settings found in the Leader properties sections include the following:

Arrow Head Style This allows you to set the appearance of the leader. The same Arrow Head styles that appear in Dimension styles are available in Dragged State.

Arrow Head Size This setting controls the length of the arrow head as well as the length of the landing leading to the text object.

Type This option specifies the leader type. The options are Straight Leader and Spline Leader. Civil 3D labels can have only one leader.

Settings found in the Dragged State Component properties include the following:

Display In this option, you can choose Stacked Text or As Composed. The Stacked Text option will remove any blocks, ticks, lines, dimensions, or borders that are components of the label, and it will stack the Text components as a list in the order in which they were created, realign the text to horizontal, and justify based on the direction you drag. The As Composed option leaves blocks, ticks, lines, text, dimensions, or borders intact, and it adds a leader next to the attached component that is anchored to the feature.

Text Height Text Height was mentioned for the previous setting. However, there is a separate setting for Text Height when in dragged state and the label style Display property is configured to Stacked Text.

Leader Attachment When the label style Display property is configured to Stacked Text, this

property sets the location of the landing relative to the top line, bottom line, or middle of the stacked text.

Leader Justification When the label style Display property is configured to Stacked Text, this property determines if and how text is justified. When set to True and the leader is to the left of the text, the text will be left justified; when set to True and the leader is to the right of the text, the text will be right justified. When set to False, the leader is always left justified.

Maximum Text Width This property works in the same way as Maximum Width on the Layout tab.

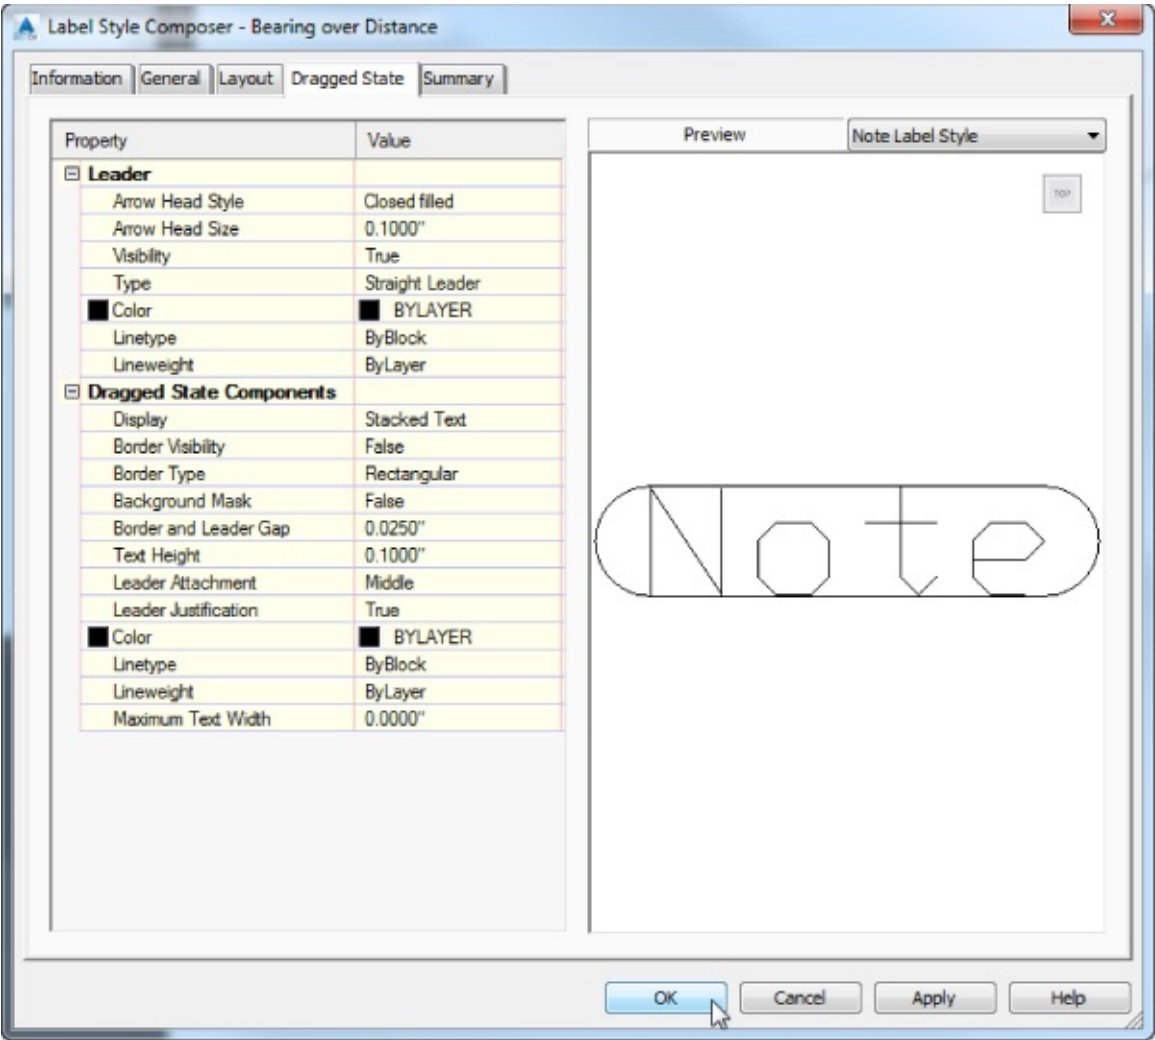


Figure 18.13 The General tab

[Figure 18.15a](#) shows an alignment label as it was originally placed. [Figure 18.15b](#) shows the same label in a dragged state with the Stacked Text option set. [Figure 18.15c](#) shows the label in a dragged state with the As Composed option set.

Summary Tab The Summary tab is exactly what it sounds like—that is, a summary of all other settings that exist in the style. The information from other tabs in list form, as well as their override status, is shown in [Figure 18.14](#).

ALIGNMENT=BOURBON STREET
STATION=2+70.18
OFFSET=90.68L
NORTHING=2006.37
EASTING=889.94



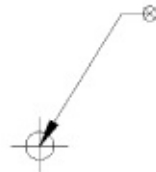
(a)

ALIGNMENT=BOURBON STREET
STATION=2+70.18
OFFSET=90.68L
NORTHING=2006.37
EASTING=889.94



(b)

ALIGNMENT=BOURBON STREET
STATION=2+70.18
OFFSET=90.68L
NORTHING=2006.37
EASTING=889.94



(c)

Figure 18.14 The Summary tab of a label style

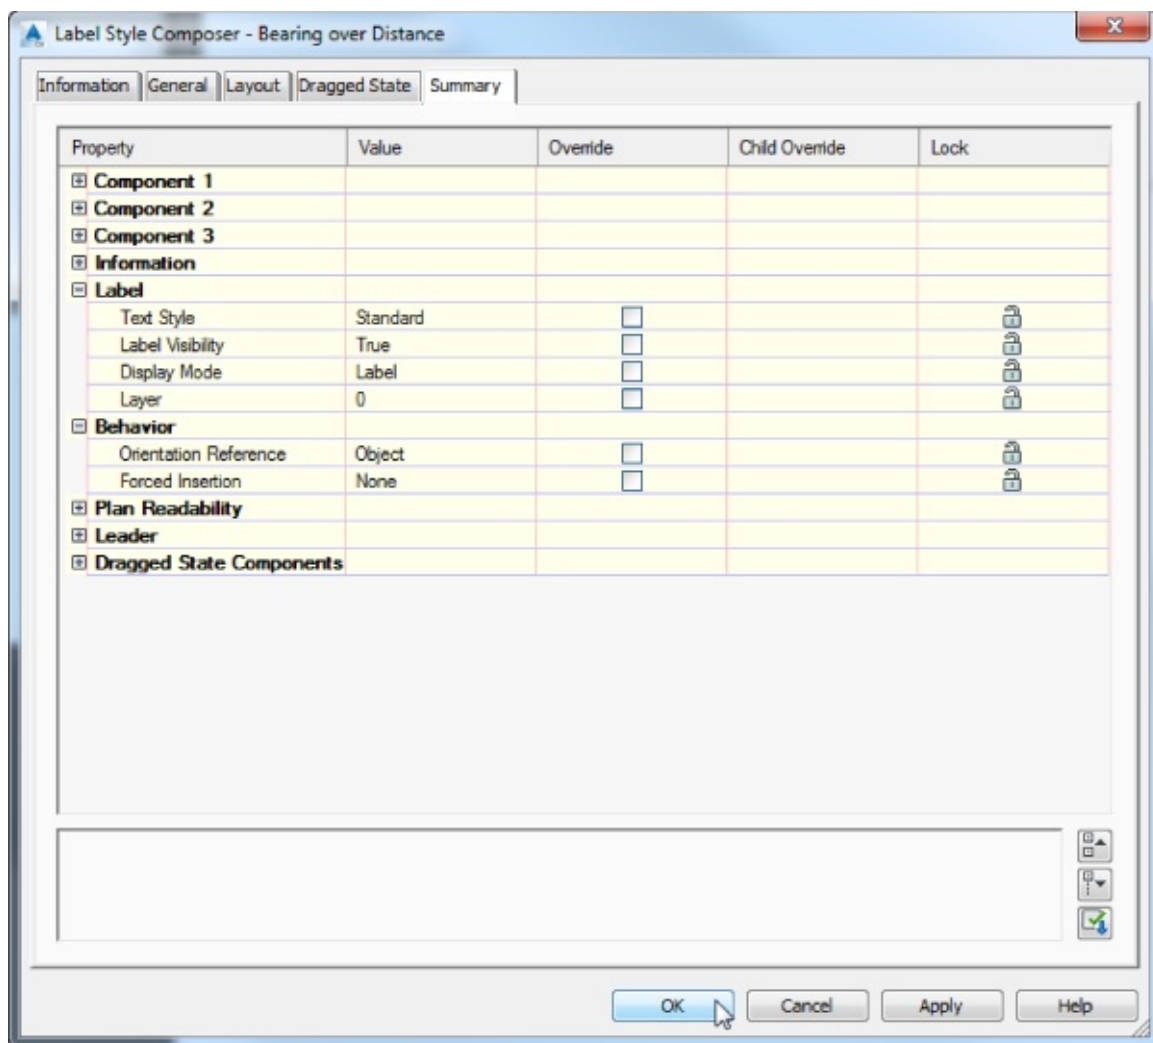


Figure 18.15 An alignment label as originally placed (a); dragged state, Stacked Text (b); and dragged state, As Composed (c)

Certification Objective As with other settings in Civil 3D, a hierarchy helps determine which styles take precedence over other styles. There are also defaults that can be set or changed at a drawing-wide level and overridden at an object level. Make sure to put some thought into using these hierarchical settings and relationships. By using them efficiently, you can save a lot of time because you won't need to tweak every setting in each label you create—and you will be creating many labels.

In this first exercise, you will set all the labels to use the same initial text style:

1. Open the drawing `1801_LabelBasics.dwg` (`1801_LabelBasics_METRIC.dwg`), which you can download from this book's web page at www.sybex.com/go/masteringcivil3d2015.
2. From the Settings tab of Toolspace, right-click the name of the drawing and select Edit Label Style Defaults, as shown in [Figure 18.16](#).

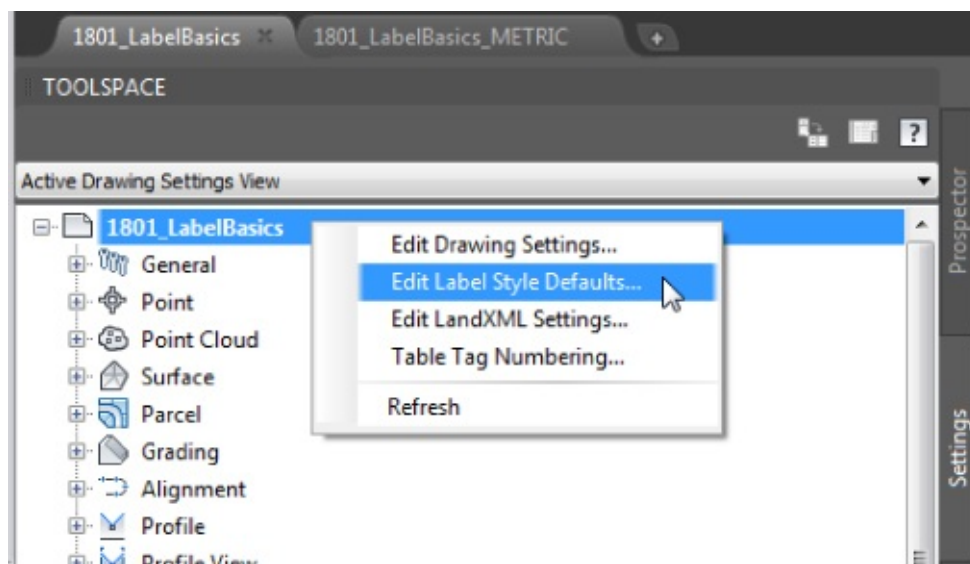


Figure 18.16 Accessing the global label settings

3. Expand the Label category and, clicking within the cell and the ellipsis button, change Text Style to Arial. Click OK.
4. Click the arrow in the Child Override column to force all the label styles in this drawing to use the same text style, as shown in [Figure 18.17](#).

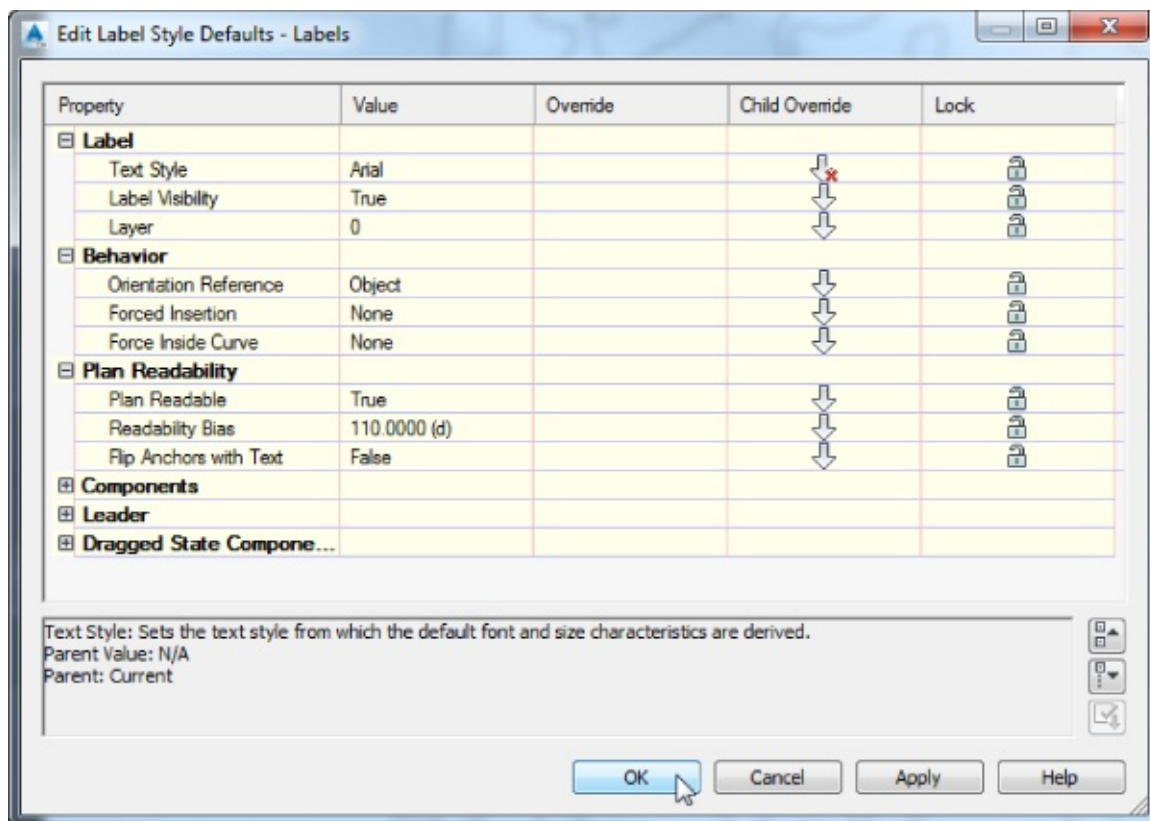



Figure 18.17 The label placement options at the drawing level. Note the Child Override arrow with a red X, which means that this change will be applied to all existing styles in the drawing.

5. Do not make any more changes to this dialog. Examine the various options and settings, and click OK.
6. Keep the drawing open for the next exercise.

Getting to Know the Text Component Editor

The Text Component Editor dialog is where you can combine property fields from objects with static text to create dynamic object labels. The interface is very logical and will do exactly what you tell it to do—but not necessarily what you *want* it to do. However, after you see the reasoning behind its behavior, you will soon master it!

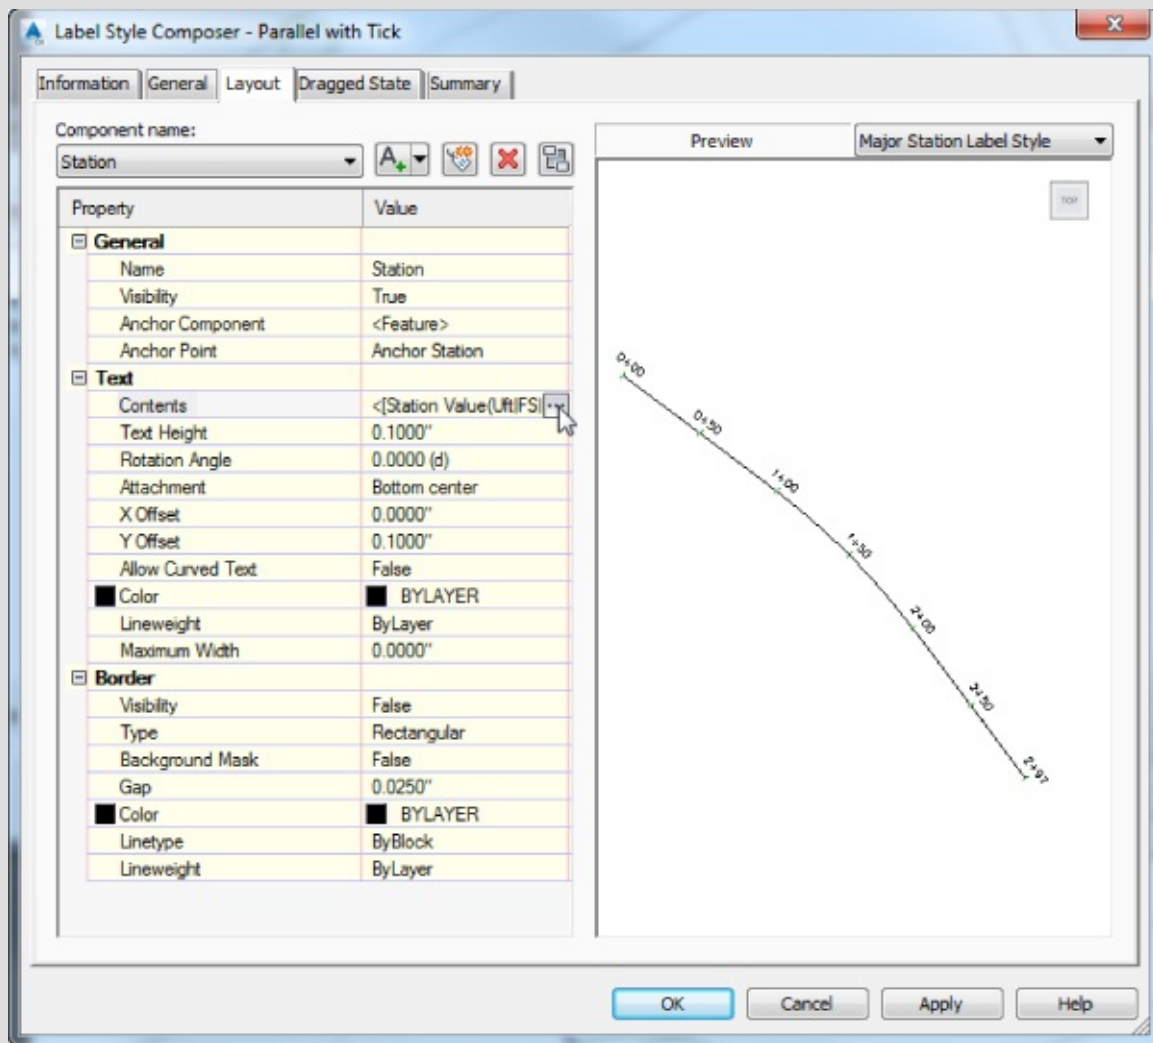To enter the Text Component Editor dialog, from the Layout tab of any text style, click the ellipsis that pops up when you click the Value column of the Text Contents area.




Within the Text Component Editor dialog, the Properties tab has two main areas:

- The left side is where you select the Property field of the Civil 3D object you want to pull into your label.
- The right side indicates the fields and static text already in the label.

To modify an existing Property field, highlight the field on the right side of the dialog. Property values will always highlight as a unit. Each code in the label represents a setting for units, precision, or other format the text can display. What appears on the left is a decoded list of what is currently highlighted on the right. After you make any changes, don't forget to click the arrow to update the information on the right.

Before adding new text to a label, make sure that no existing text is highlighted on the right, so you won't overwrite it.

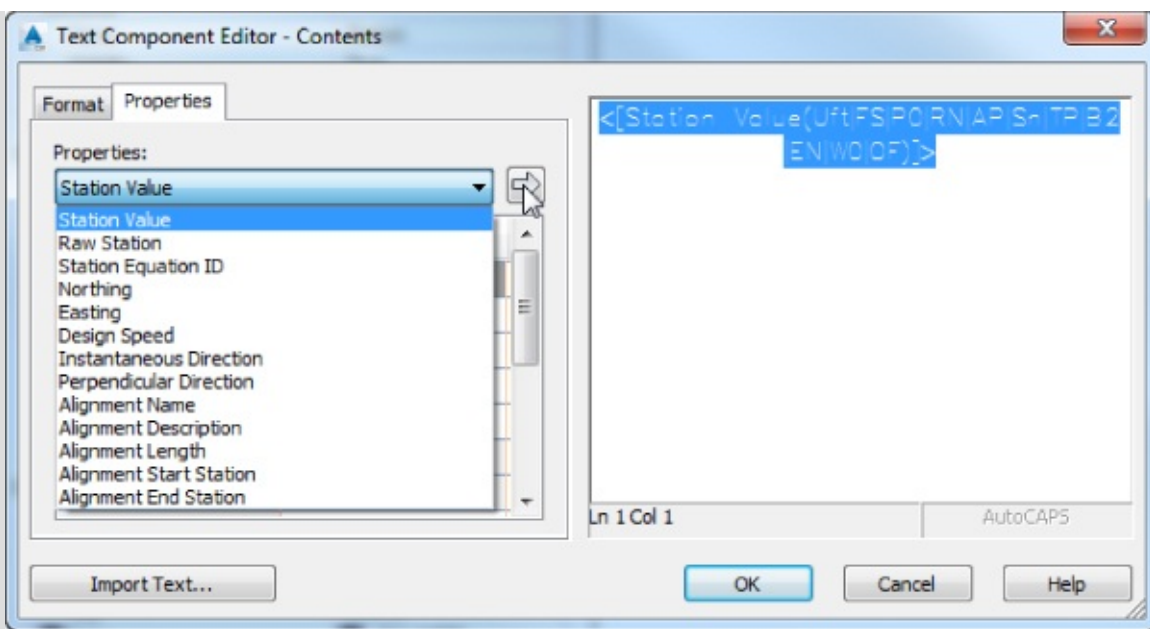
The Properties list shows everything that can be included in the label; therefore, depending on the object and label type you are working with, the contents of the list will vary. Here you see the available properties for an alignment major station label.



Once you select a Property field, you can configure the units, precision, and any other special rounding or formatting you would like to see.

When everything is set, click the arrow next to the Properties list.

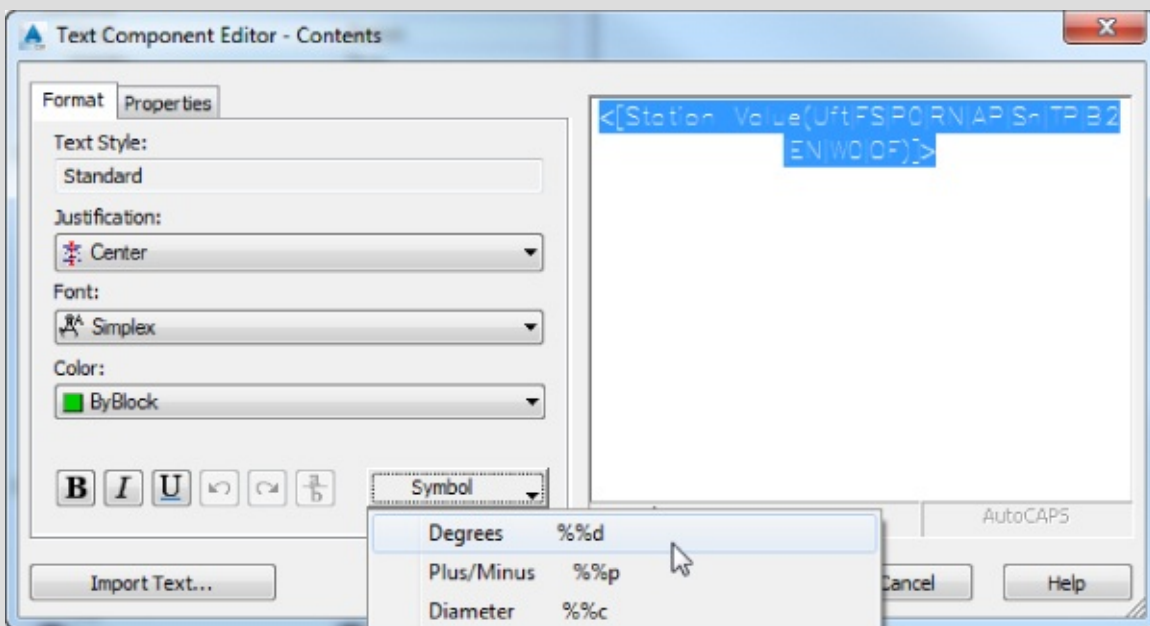The Format tab is used to add special symbols or override the color, justification, or font.



Inevitably, you will forget to click the arrow that adds or updates the text. You may even click it twice and end up with duplicates! Now that you've been given the heads-up, you'll be able to laugh it off, knowing that it happens to even the most seasoned users.

General Note Labels

General Note labels are versatile, non-object-specific labels that can be placed anywhere in the drawing. There are several advantages to using these instead of base AutoCAD Mtext. Notes will leader and scale the same as the rest of your Civil 3D labels—and best of all, they can contain reference text.

Continuing with the previous exercise, you'll create an alternative parcel label that contains reference text.

- 1. Continue working in 1801_LabelBasics.dwg (1801_LabelBasics_METRIC.dwg).
- 2. From the Settings tab of Toolspace, choose General > Label Styles > Note.
- 3. Right-click Note and select New (as shown in [Figure 18.18](#)).

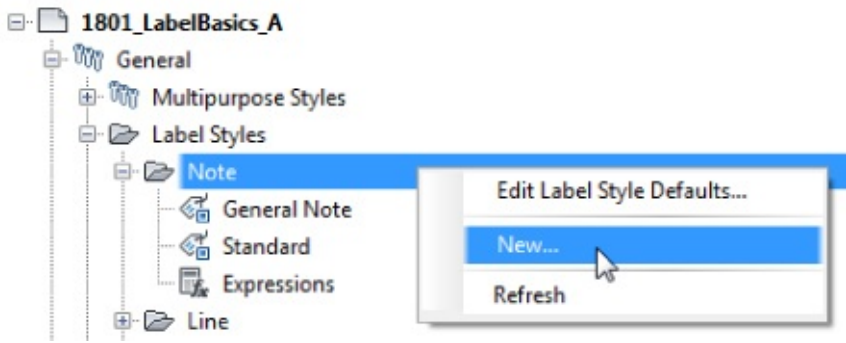


Figure 18.18 Creating your first new label style from the Settings tab

- 4. On the Information tab, name the style **Easement Parcel Text**.
- 5. On the General tab, set Layer to C-PROP-TEXT and set Orientation Reference to View.
- 6. On the Layout tab, click the Value field next to Contents under the Text category.
Clicking this will cause an ellipsis button to appear.
- 7. Click the ellipsis button to enter the Text Component Editor dialog.
- 8. On the right side of the Text Component Editor dialog, delete the existing text and replace it with **Drainage Easement**, as shown in [Figure 18.19](#). Click OK.

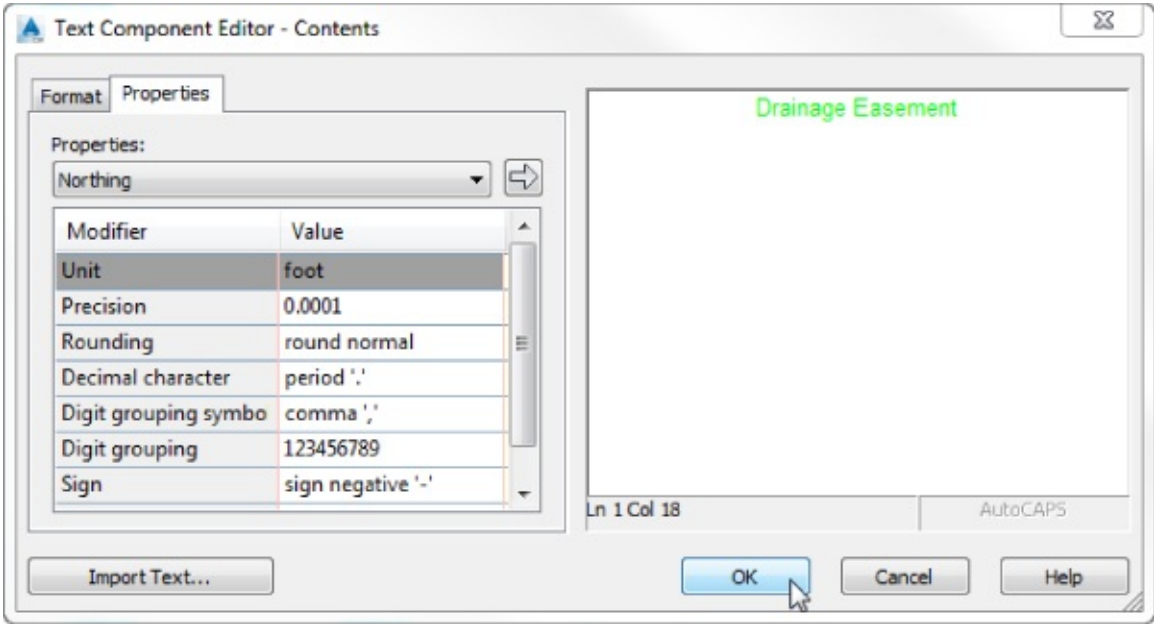



Figure 18.19 Entering the Text Component Editor dialog for basic text

- 9. Back in the Layout tab, set Border Visibility to False.
- 10.  Click the flyout next to Create Text Component and select Reference Text.
You will be prompted to select the type of reference text, as shown in [Figure 18.20](#).

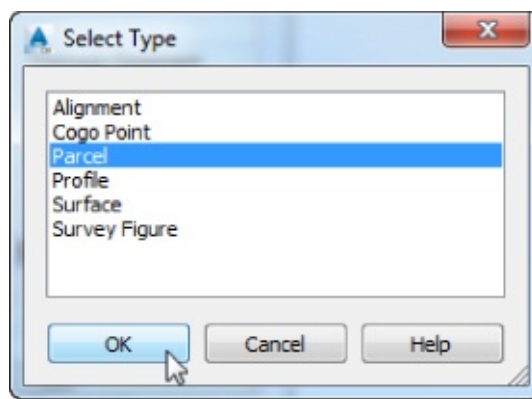



Figure 18.20 Picking the reference type

1. In the Select Type dialog, select Parcel and click OK.
2. Click in the Value field next to Name under the General category, rename Reference Text.1 to **Parcel Area**, and make the following changes.
 - a. Set Anchor Component to Text.
 - b. Set Anchor Point to Bottom Center.
 - c. Set Attachment to Top Center.
 - d. To enter the Text Component Editor dialog, click the Value field next to Contents and click the ellipsis.
3. In the Text Component Editor dialog, delete the default label text.
4. On the left side of the Text Component Editor dialog, do the following:
 - a. Set the Properties drop-down to Parcel Area.
 - b. Set Unit to Acre (Hectares for metric users).
 - c. Set Precision to 0.01.
5.  When you have set the properties, click the arrow to place the text in the right side of the editor.
6. Click to place your cursor after the previously inserted text and add a space. Type **ACRES** (or **HECTARES** for metric users) after the coding.

The Text Component Editor dialog will resemble [Figure 18.21](#).

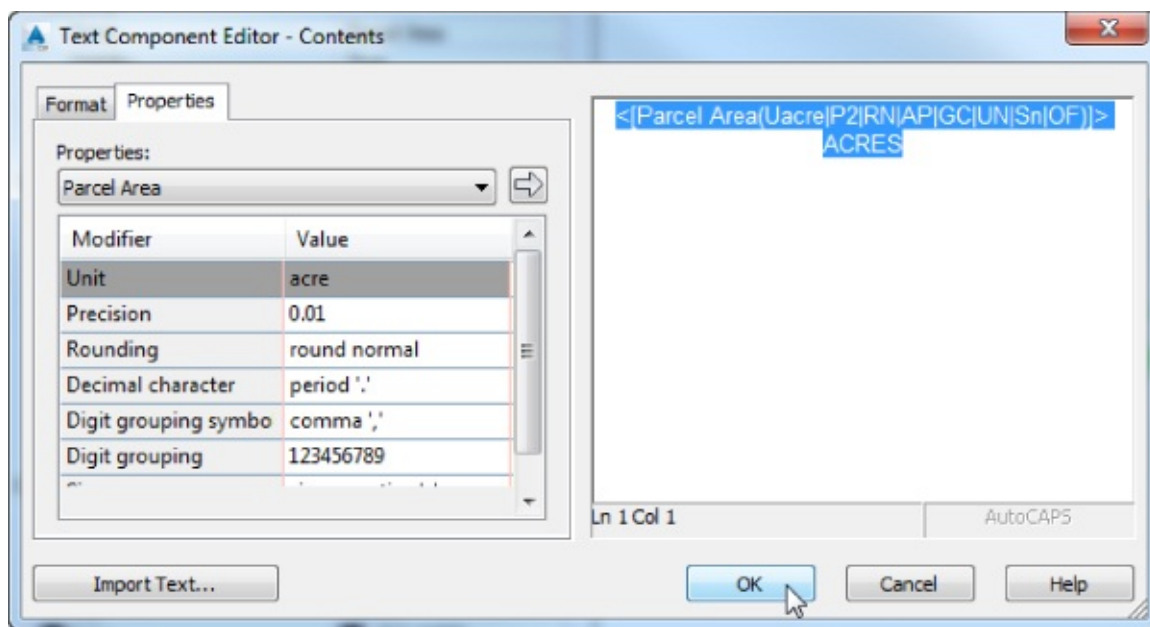


Figure 18.21 Adding “smart” text to the Text Component Editor dialog

17. Click OK.

You will still have question marks in the preview, but this is completely as expected.

18. Set the gap under the border to **0.05” (2.00 mm for metric users)**. Click OK to complete the command.

19. On the Annotate tab > Labels & Tables panel, click the top half of the Add Labels button.

20. With Feature and Label Type both set to Note, change Note Label Style to Easement Parcel Text, and click Add.

21. At the Pick Label Location: prompt, click anywhere in the example parcel.

22. At the Select parcel for label style component Parcel Area: prompt, click the label on Property : 1.

23. Press Esc to finish placing the labels.

Your completed and placed label should resemble [Figure 18.22](#).

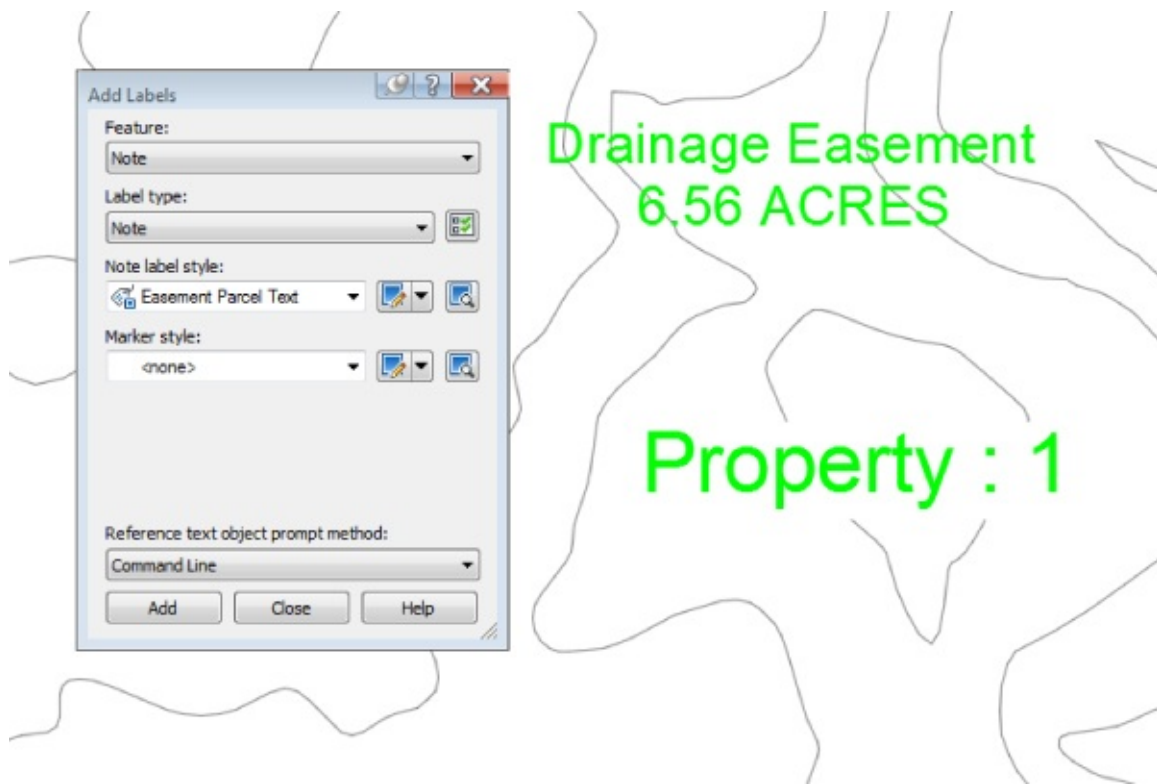


Figure 18.22 Your first label! Referencing a parcel area.

Save and close the drawing. A saved copy of this drawing, with the filename 1801_LabelBasics_FINISHED.dwg (1801_LabelBasics_METRIC_FINISHED.dwg), is available from the book's web page.

Point Label Styles

Certification Objective If you have used other software packages for surveying work, odds are that you controlled the display of point label text with layers, but Civil 3D is different. In Civil 3D, you can control what information is showing next to a point by swapping the label style applied to a group of points.

In the following exercise, you will create a new point label style. Your first point label style will show only Point Number and Description, so you will need to delete the default Elevation component.

1. Open the drawing 1802_PointLabels.dwg (1802_PointLabels_METRIC.dwg), which you can download from this book's web page.
2. From the Settings tab of Toolspace, expand Point > Label Styles.
3. Right-click Label Styles and select New.
4. On the Information tab, name the style **Point Number & Description**.
5. On the General tab, set the layer to V-NODE-TEXT, and leave all other General tab options at their defaults.
6. On the Layout tab, do the following:
 - a. Set the Active Component to Point Number.
 - b. Change the Anchor Component to <Feature>.
 - c. Set Anchor Point to Middle Right.

- d. Set Attachment to Middle Left.
- e. Change the Active Component to Point Elevation.
- f. Click the red X to delete this component.

You will receive a warning that reads “This label component is used as an anchor in this style or in a child style. Do you want to delete it?”

- g. Click Yes.
- h. Change the Active Component to Point Description.
- i. Change the Anchor Component to Point Number.
- j. Change the Anchor Point to Middle Right.
- k. Change the Attachment to Middle Left.
- l. Change the X Offset to **0.05”** (1 mm for metric users).

7. Click OK to complete the label style.
8. On the Prospector tab of Toolspace, locate the point group named TOPO; right-click TOPO and select Properties.
9. On the Information tab, set the Point Label Style to **Point Number & Description**.
10. Click OK to close the Point Group.

All the points in the group will change to resemble [Figure 18.23](#).



X 1 TOPO

[Figure 18.23](#) Completed point label style

In the previous exercise, you created a simple new label style and made some modifications to the default components. In the following exercise, you will remove all the default components and add Northing and Easting values to the label using the Text Component Editor dialog.

1. Continue working in the drawing 1802_PointLabels.dwg (1802_PointLabels_METRIC.dwg). You need to have completed the previous exercise.
2. From the Settings tab of Toolspace, choose Point > Label Styles.
3. Right-click Label Styles, and select New.
4. On the Information tab, name the style **Northing & Easting**.
5. On the General tab, set the layer to V-NODE-TEXT, set the Orientation Reference to View, and leave all other General tab options at their defaults.
6. On the Layout tab, do the following:
 - a. Click the red X until all three default components are gone.

For the second component being deleted, you will receive a warning that reads “This label component is used as an anchor in this style or in a child style. Do you want to delete it?”

- b. Click Yes and delete the last component.
 - c. Click the Create Text Component button to create a new Text component, and rename the component to **N-E**.
 - d. Set the Anchor Point to Bottom Center.
 - e. Set the Attachment to Top Center.
 - f. Click the Value field next to Contents and click the ellipsis to enter the Text Component Editor dialog.
7. In the Text Component Editor dialog, do the following:
- a. Highlight the default label text and delete it by pressing the Delete key on your keyboard.
 - b. From the Properties list, select Northing.
 - c. Set the Precision to **0.01** (two decimal places).
 - d. Click the arrow to place the text to the right.
 - e. Before the label text, place an **N:** as a static text. Move to the end of the line. Press the Enter key to move to the next line.
 - f. From the Properties list, select Easting, and set the Precision to **0.01** (two decimal places).
 - g. Click the arrow to place the text to the right.
 - h. Before label text, place an **E:** as static text.

The Text Component Editor dialog will now resemble [Figure 18.24](#).

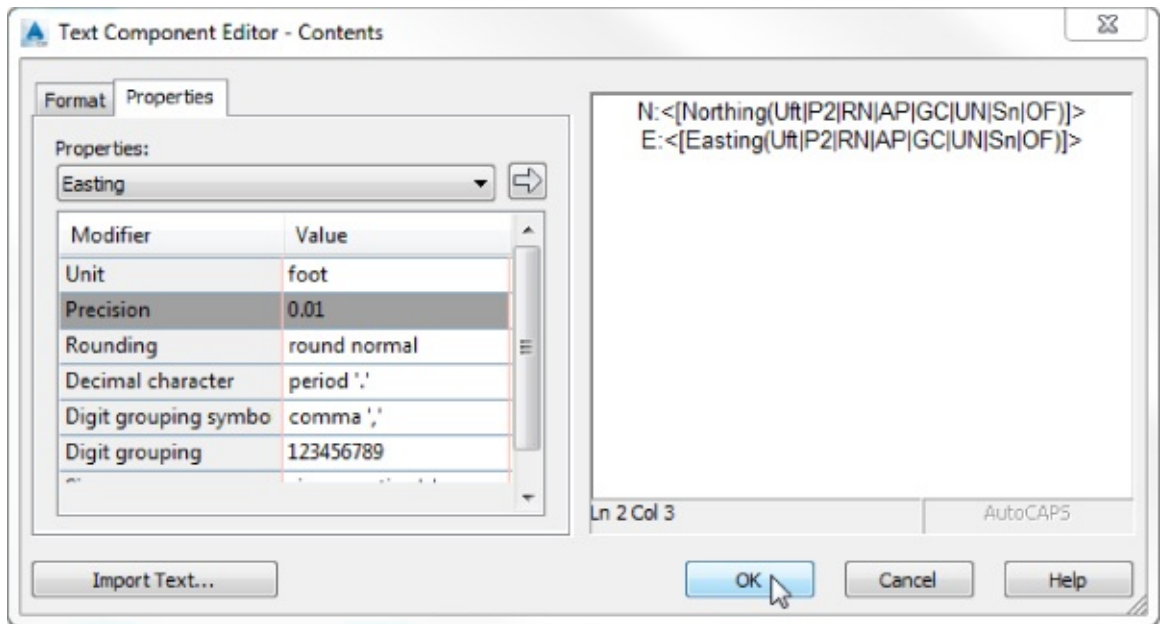


Figure 18.24 The Northing & Easting label in progress

- i. Click OK to dismiss the Text Component Editor dialog, and click OK to complete the style.
8. On the Prospector tab of Toolspace, locate the point group named Group2; right-click it and select Properties.
9. Set the Point Label Style to **Northing & Easting**, and then click OK.

The labels will resemble [Figure 18.25](#).



Figure 18.25 Northing & Easting in the completed exercise

Save and close the drawing. A saved copy of this drawing, 1802_PointLabels_FINISHED.dwg (1802_PointLabels_METRIC_FINISHED.dwg), is available from the book's web page.

Sanity-Saving Settings

The Civil 3D template has AutoCAD styles, linetypes, layers, Civil 3D styles, and a plethora of helpful goodies that make doing your job easier. There are a few drawing-specific AutoCAD variables you may not have thought of that will improve your relationship with Civil 3D:

MSLTSCALE This variable stands for modelspace linetype scale. We strongly recommend that you have this set to 1 in your template. This setting makes linetypes react to your annotation scale. All your other Civil 3D objects are doing it, so having your linetypes follow suit will help! A general rule of thumb is that MSLTSCALE, PSLTSCALE, and LTSCALE should be set to 1. For more information on what these control, check out the Help system.

LAYEREVALCTL Set this to 0 to avoid the annoying pop-up that flags users when there are new layers in a drawing. Civil drafters are constantly using XRefs and inserting blocks, both of which cause the pop-up to occur.

AUNITS This variable defines the angular units for the base AutoCAD part of the world. Keep this set at 0 (decimal degrees) to help differentiate base AutoCAD angular entry from Civil 3D angular entry.

Line and Curve Labels

You can add bearing and distance labels to many Civil 3D objects. Anything from plain lines and

polylines to parcels and alignment tangent segments can use nearly identical label types.

The examples in the following exercises will use parcels for labeling, but the tools can be applied to all other types of line labels.

Single Segment Labels

In the following exercise, you will create a new line label style that uses default components. You will remove the direction arrow and change the display precision of the direction component.

1. Open the `1803_LineandCurveLabels.dwg` (`1803_LineandCurveLabels_METRIC.dwg`) drawing file, which you can download from this book's web page.
2. From the Settings tab of Toolspace, expand Parcel ► Label Styles ► Line; right-click Line and select New.
3. On the Information tab, name the style **Parcel Segment**.
4. On the General tab, set the layer to C-PROP-LINE-TEXT.
Leave all other General tab options at their defaults.
5. On the Layout tab, do the following:
 - a. Change the Active Component to Direction Arrow, and click the red X to delete this component.
 - b. Change the Active Component to Distance.
 - c. Click the Value field next to Contents, and click the ellipsis to enter the Text Component Editor dialog.
6. In the Text Component Editor dialog, do the following:
 - a. Click the text to highlight the Segment Length contents on the right.
All of the text should highlight as a unit.
 - b. On the left side of the Text Component Editor dialog, change the Precision value to **0.01**.
 - c. Click the arrow to update the text.
 - d. Click OK to dismiss the Text Component Editor dialog, and click OK to complete the style.
7. Select the Annotate tab ► Labels & Tables panel and click the top of the Add Labels button to add labels to the parcels. In the Add Labels dialog, do the following:
 - a. Set Feature to Parcel.
 - b. Set Label Type to Single Segment.
 - c. Set Line Label Style to Parcel Segment.
 - d. Click Add and select for labeling the segments from Parcels 2 and 3.
 - e. Close the Add Labels dialog and press Esc.

The completed labels will resemble [Figure 18.26](#).

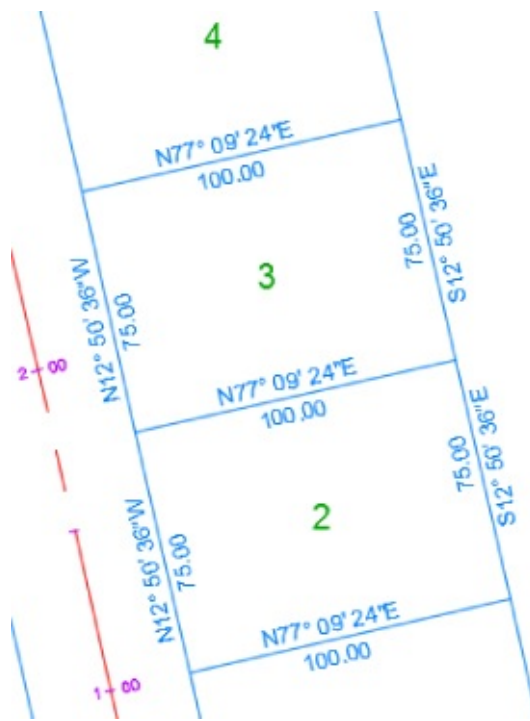


Figure 18.26 Your new bearing and distance line label style in action on parcel segments

Compare your drawing at this point against 1803_LineandCurveLabels_A.dwg (1803_LineandCurveLabels_A_METRIC.dwg) if needed.

Spanning Segment Labels

When you look at the labels you created in the previous exercise, you may notice that they stop at each parcel vertex. If there is a series of back lot lines that share the same bearing, most plats show this using a single label outside the overall property line displaying the bearing and the combined distance of these lot lines. To label this in Civil 3D, a separate label style is needed.

Spanning labels can be used in both line and curve parcel labels. In the following exercise, you will create line labels that span multiple parcel segments:

1. Continue working in the finished drawing from the previous exercise or open 1803_LineandCurveLabels_A.dwg (1803_LineandCurveLabels_A_METRIC.dwg).
2. From the Settings tab of Toolspace, expand Parcel > Label Styles > Line, right-click Parcel Segment, and select Copy.
3. On the Information tab, name the style **Parcel Spanning Segment**.
4. On the General tab, under Plan Readability, change Readability Bias to **90.1** and change Flip Anchors With Text to True.
5. On the Layout tab, do the following:
 - a. Change the Active Component to Table Tag.
 - b. Change the Span Outside Segments setting to True.
 - c. Change the Active Component to Bearing.
 - d. Change the Span Outside Segments setting to True.
 - e. Change the Active Component name to Distance.

- f. Change the Anchor Component to Bearing.
- g. Change the Anchor Point to Bottom Right.
- h. Change the Span Outside Segments setting to True.
- i. Change Attachment Point to Bottom Left.
- j. Change X Offset to 0.2" (3 mm for metric users) and make sure that Y Offset is set to 0.

6. Click OK to complete the style.

7. Using a technique similar to the one you used in the previous exercise, add a spanning label to the parcels along the east side of the right-of-way just north of Parcel 3. This time use Spanning Segment as the line label style. Your completed label will resemble [Figure 18.27](#).



Figure 18.27 Spanning label shown on the outside of parcel segments

Compare your drawing at this point against 1803_LineandCurveLabels_B.dwg (1803_LineandCurveLabels_B_METRIC.dwg) if needed.



When you place spanning labels on segments, the Distance component must be forced to the outside of the parcel line. You may need to use the Flip Label command on occasion to move the Distance component to the right location. To access the Flip Label command, select the label and then click the contextual tab ► Modify panel.

Curve Labels

In base AutoCAD, creating curve labels is a chore. If you want text to align to curved objects, you won't be able to use it as traditional Mtext. Luckily, Civil 3D gives you the ability to add curved text without compromising its usability.

In the following exercise, you will create a curve label style with a delta symbol (Δ) and text that curves with the parcel segment:

1. Continue working in the finished drawing from the previous exercise or open 1803_LineandCurveLabels_B.dwg (1803_LineandCurveLabels_B_METRIC.dwg). You need to have completed the previous exercise to continue.
2. From the Settings tab of Toolspace, expand Parcels ► Label Styles ► Curve, right-click Curve, and select New.

3. On the Information tab, rename the style to **Delta Length & Radius**.
4. On the General tab, set Layer to C-PROP-LINE-TEXT.
5. On the Layout tab, do the following:
 - a. Change the Active Component to Distance And Radius.
 - b. Click the Value field next to Contents and click the ellipsis to enter the Text Component Editor dialog.
 - c. Highlight the segment length property on the right and change the precision to **0.01**.
 - d. Click the arrow to update the style.
 - e. Highlight the Segment Radius property and change the precision to **0.01**.
 - f. Click the arrow to update the text.
 - g. Delete the comma that appears as static text in the Text Component Editor dialog, and click OK.
6. Click the Create Text Component button and do the following:
 - a. Rename the new text component to **Delta**.
 - b. Change Attachment to Bottom Center.
 - c. Change the Y Offset to **0.025"** (1 mm for metric users).
 - d. Set Allow Curved Text to True.
7. In the Contents field, click the ellipsis button to bring up the Text Component Editor dialog and do the following:
 - a. Remove the default label text.
 - b. Switch to the Format tab, click the Symbol button, and select Other.

You should now see the Character Map dialog ([Figure 18.28](#)).

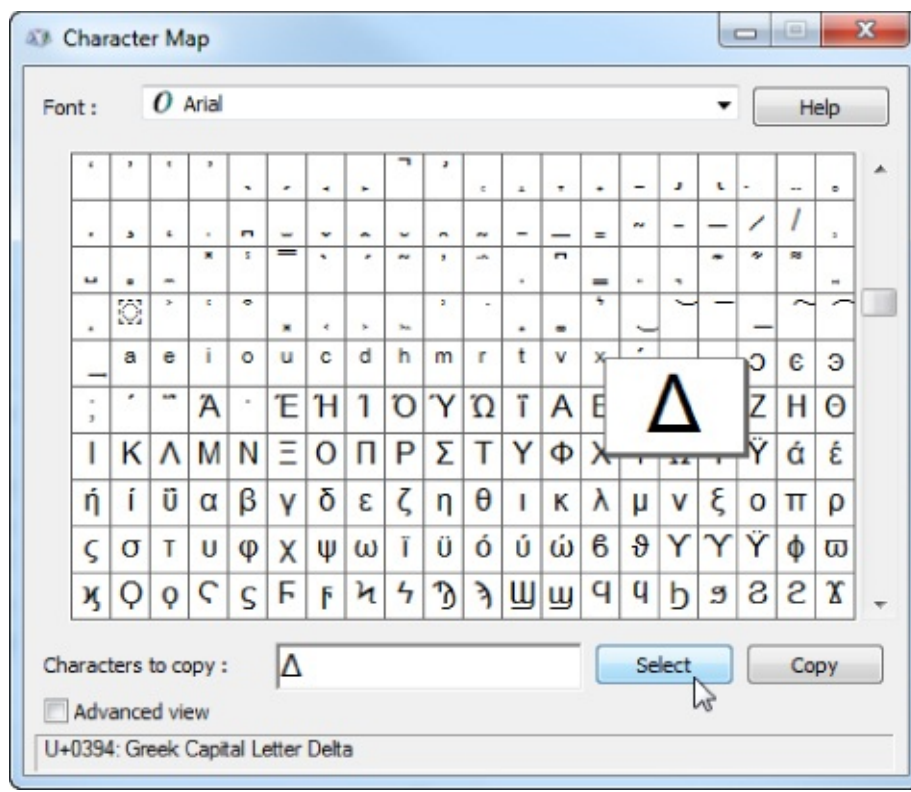


Figure 18.28 Browse for special symbols using the Windows character map.

- c. Browse through the symbols of the dialog to find the delta symbol; when you locate it, click the symbol, click the Select button, and then click Copy. Click the red X to close the Character Map dialog.
- d. Back in the Text Component Editor dialog, click the right side of the dialog, right-click, and select Paste.
- e. Press the Backspace key if the cursor jumps to the next line of text.
You should see the delta symbol appear in the Text Component Editor dialog.
- f. Enter the equal sign (=) as static text after the delta.
- g. Switch back to the Properties tab.
- h. From the Properties drop-down, select Segment Delta Angle, and do the following:
 - Set the Format to DD°MM'SS.SS”.
 - Set the Precision value to **1 Second**.
 - Click the arrow to place the text in the right side.
 - Click OK to exit the Text Component Editor dialog.

8. Click OK to complete the style.

9. Add labels to Parcel 1 using the same technique you used in the previous exercise.

Remember to make sure that your style selection is set correctly for both the curve and line before adding labels.

10. Set the active curve label style to Delta Length & Radius and add labels to some curves. If labels overlap, drag one of the labels by selecting it, and then pick the square-shaped grip and drag it to a new location.

When it is applied to the design, your completed label should resemble [Figure 18.29](#).

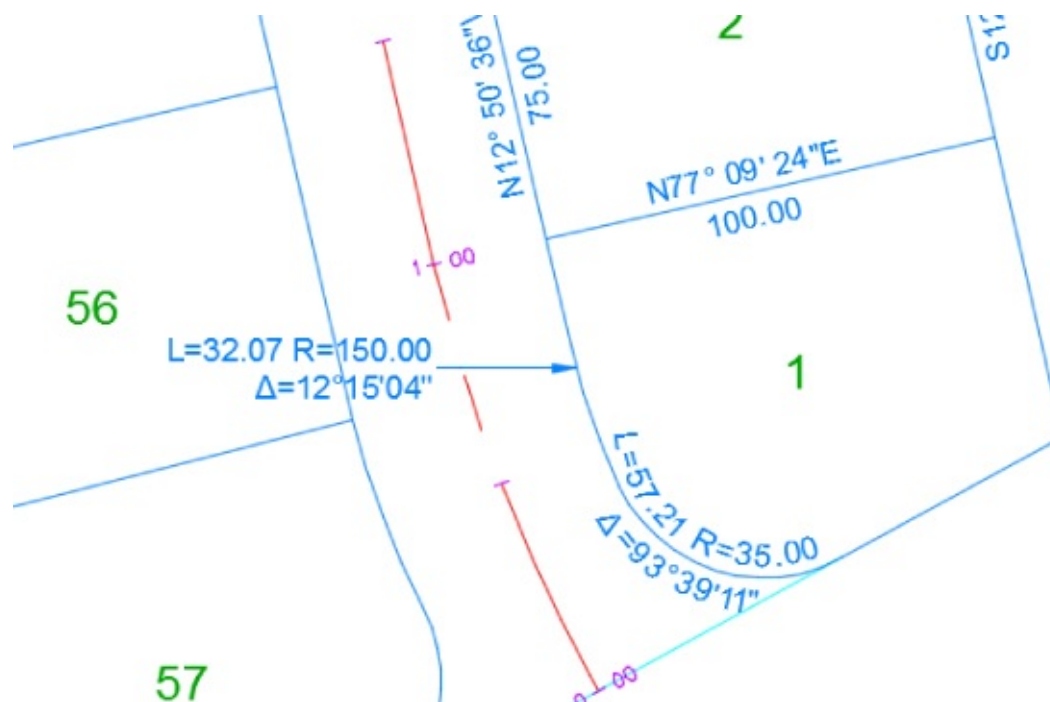


Figure 18.29 Completed curve labels with delta symbol and curved text

Save and close the drawing. A saved copy of this drawing, 1803_LineandCurveLabels_FINISHED.dwg (1803_LineandCurveLabels_METRIC_FINISHED.dwg), is available from the book's web page.


Pipe and Structure Labels

No two municipalities seem to label their pipes and sewer structures exactly the same way. Fortunately, Civil 3D offers a lot of flexibility in how you label these items.

Pipe Labels

Pipe labels have two separate label types: Plan Profile and Crossing Section. Both label types have many of the same options, but those options are used in different view directions.

In the following exercise, you will use a common trick. When a nonvisible component acts as an anchor to visible objects, you can use the flow direction arrow to force text to be placed at the ends and middle of the pipe regardless of the pipe length.

1. Open the 1804_PipeandStructureLabels.dwg (1804_PipeandStructureLabels_METRIC.dwg) drawing file, which you can download from this book's web page.
2. From the Settings tab of Toolspace, choose Pipe > Label Styles > Plan Profile, and then right-click Plan Profile and select New.
3. On the Information tab, name the style **Length Diameter Slope**.
4. On the General tab, set the layer to C-STRM-TEXT.
5. On the Layout tab, delete the existing Pipe Text component by clicking the red X.
6.  Expand the Create New Component drop-down and select Flow Direction Arrow; then adjust these settings:

- a. Set Visibility to False.
- b. Set Anchor Point to Top Outer Diameter.
- c. Set a Y offset of **0.1” (0.3 mm)**.

7. Expand the Create New Component drop-down and select Text. Change these settings:

- a. Rename the Text Component to **Length**.
- b. Set Anchor Component to Flow Direction Arrow.1.
- c. Set Anchor Point to Start.
- d. Set Attachment to Bottom Left.

8. In the Contents field, click the ellipsis button to bring up the Text Component Editor dialog and do the following:

- a. Delete the default label text.
- b. From the Properties list, set 2D Length – Center to Center current.
- c. Set Precision to **1** and Rounding to round up. This causes the pipe length value to round to the next-highest whole unit.
- d. Click the arrow to place the text in the editor.
- e. Add a foot symbol (or **m** for meters) after the text component.
- f. Click OK.



9. With Length as the current component, click Copy Component. Then change these settings:

- a. Rename the component to **Diameter**.
- b. Change Anchor Point to Middle.
- c. Change Attachment to Bottom Center.

10. Enter the Text Component Editor dialog and do the following:

- a. Delete all of the text.
- b. From the Properties list, select Inner Pipe Diameter.
- c. Set the Precision to **1** and click the arrow to add the text.
- d. Add the inch symbol (or **mm** for millimeters) after the Text component.
- e. Click OK to exit the Text Component Editor dialog.

11. With Diameter as the current component, click Copy Component. Then change these settings:

- a. Rename the component to **Slope**.
- b. Set Anchor Point to End.
- c. Set Attachment to Bottom Right.

12. Enter the Text Component Editor dialog and do the following:

- a. Delete all of the text.

- b. Set Pipe Slope as the current property.
- c. Click the arrow to add the text.
- d. Click OK to exit the Text Component Editor dialog.

13. Click OK to complete the style.

14. Add the label to the pipe by doing the following:

15.

1. On the Annotate tab > Labels & Tables panel, click the top half of the Add Labels button.
2. Set the Feature option to Pipe Network and Label Type to Single Part Plan.
3. Set Pipe Label Style to Length Diameter Slope.
4. Click Add. Select any pipe in plan view.

Your labeled pipe will resemble [Figure 18.30](#).

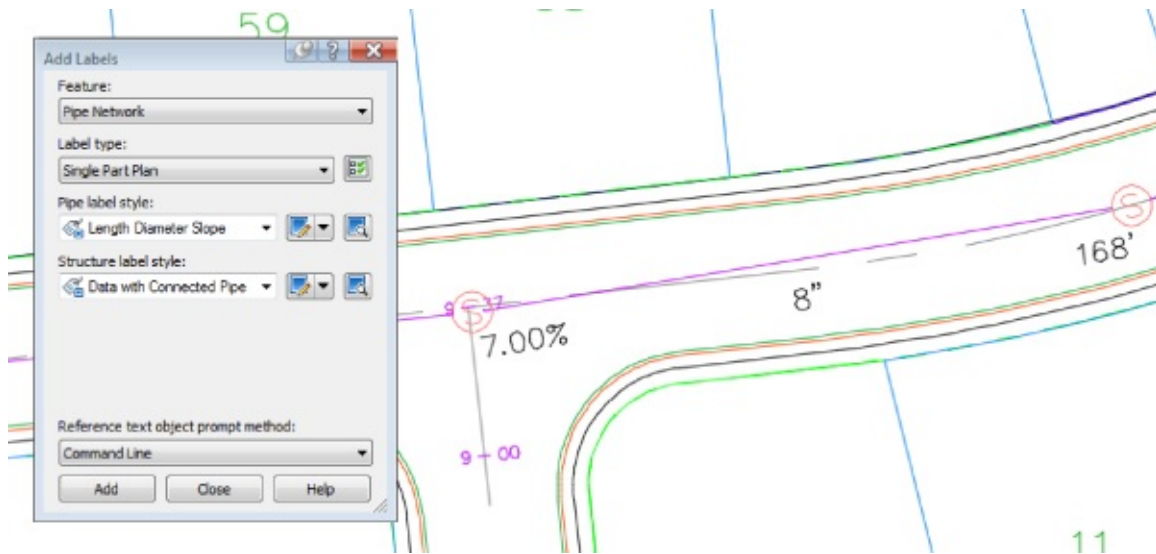


Figure 18.30 Use the invisible arrow trick to label pipe.

Compare your drawing at this point against 1804_PipeandStructureLabels_A.dwg (1804_PipeandStructureLabels_A_METRIC.dwg) if needed.

Structure Labels

Structure labels are unique because they possess a special component that references information from each connected pipe, allowing you to place pipe properties in structure labels. Examples would be pipe invert, pipe direction (NE, SW, etc.), and flow direction (in or out).



Real World Scenario

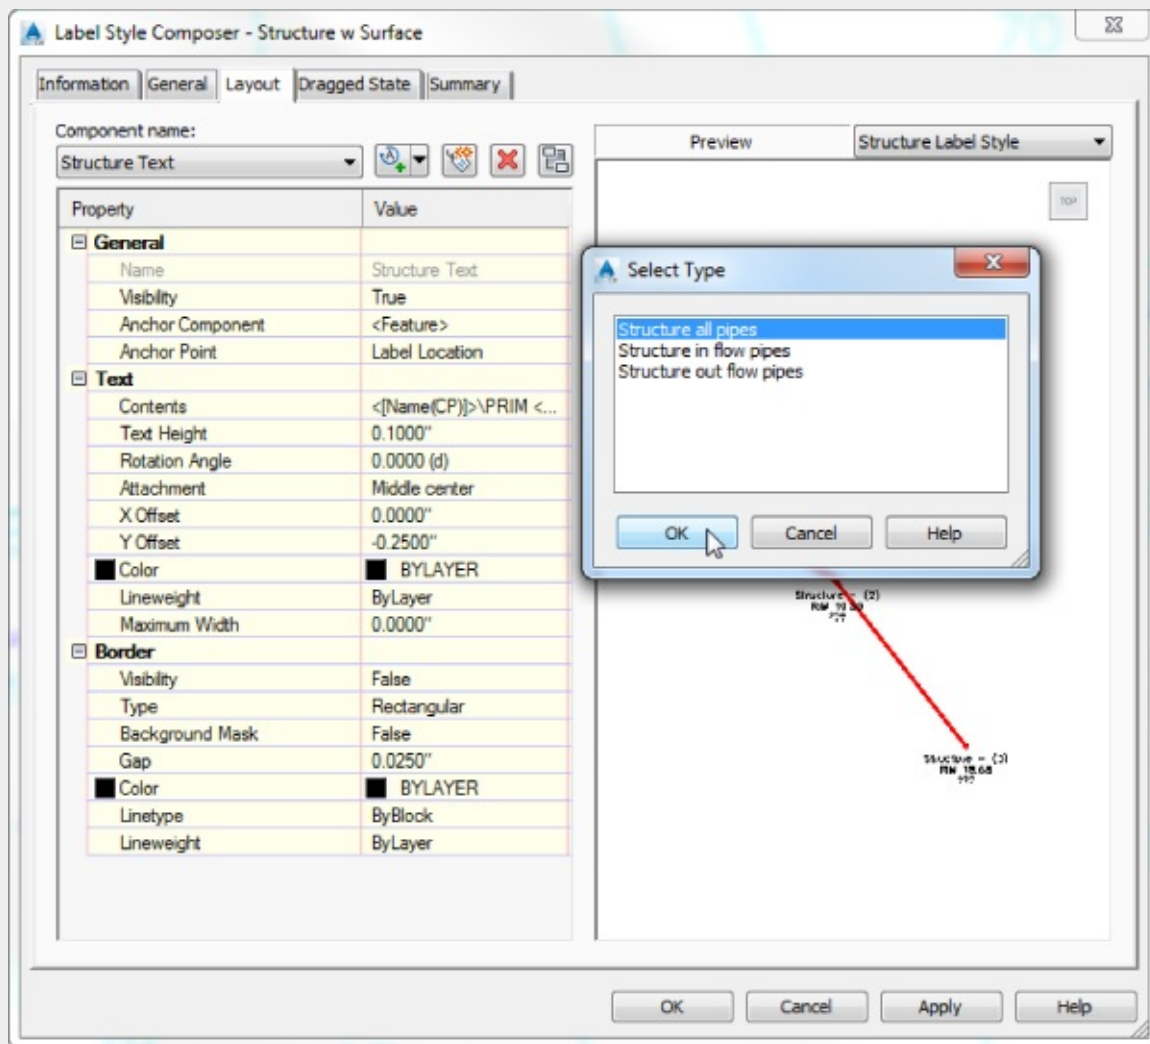
Adding Existing Ground Elevation to Structure Labels

In design situations, it's often desirable to track not only the structure rim elevation at finished grade but also the elevation at existing ground. This gives the designer an additional tool for optimizing the earthwork balance.

This exercise will lead you through creating a structure label that includes surface-reference text. It assumes you're familiar with Civil 3D label composition in general:

1. Continue working in the finished drawing from the previous exercise since you need to have it completed for this exercise or open 1804_PipeandStructureLabels_A.dwg (1804_PipeandStructureLabels_A_METRIC.dwg).
2. From the Settings tab of Toolspace, choose Structure > Label Styles, and then right-click Label Styles and select New.
3. In the Label Style Composer dialog, do the following:
 - a. On the Information tab, name the label **Structure w Surface**.
 - b. On the General tab, set the layer to C-STRM-TEXT.
 - c. On the Layout tab is a default Text component called Structure Text. Set the Y offset to **-0.25"** (-1 mm).
4. Click in the Contents value box; then click the ellipsis to bring up the Text Component Editor dialog and do the following:
 - a. Delete the <[Description(CP)]> text string.
 - b. Set the Properties drop-down to Name and click the arrow.
 - c. Place the cursor after the new Property field. Press the Enter key to move to the next line and then type **RIM** with a space after it.
 - d. Set the Properties drop-down to Insertion Rim Elevation, set Precision to two decimal places, and click the arrow.
 - e. Click OK to dismiss the Text Component Editor dialog.
5. In the Label Style Composer, choose Reference Text from the Add Component drop-down.
6. In the Select Type dialog, choose Surface, and then click OK.
7. Rename the component from Reference Text.1 to **Existing Ground**.
8. Enter the Text Component Editor dialog and do the following:
 - a. Delete the Label Text string.
 - b. Type **EG** and a space in the text window.
 - c. Use the Properties drop-down to select Surface Elevation.
 - d. Set Precision to **0.01**.
 - e. Click the arrow.
 - f. Click OK to dismiss the Text Component Editor dialog.
9. In the Label Style Composer, do the following:
 - a. Change Anchor Component For Existing Ground to Structure Text.
 - b. Change Anchor Point to Bottom Center.
 - c. Change Attachment to Top Center.


10. Choose the Text For Each option from the Add Component drop-down.
11. In the Select Type dialog, choose Structure All Pipes, and then click OK.



12. Enter the Text Component Editor dialog and do the following:
 - a. Delete the default Label Text string.
 - b. Type **INV** and a space in the text window.
 - c. Use the Properties drop-down to select Connected Pipe Invert Elevation.
 - d. Set Precision to **0.01**.
 - e. Click the arrow.
 - f. Click OK to dismiss the Text Component Editor dialog.
13. In the Label Style Composer, do the following:
 - a. Change Anchor Component For Text for Each.1 to Existing Ground.
 - b. Change Anchor Point to Bottom Center.
 - c. Change Attachment to Top Center.
14. Click OK to dismiss the Label Style Composer.
15. Select the Annotate tab > Labels & Tables panel and click the top half of the Add Labels button.
 - a. In the Add Labels dialog, set the Feature option to Pipe Network.

- b. Set the Label Type to Single Part Plan.
 - c. Set the Structure Label Style to Structure w Surface.
 - d. Verify that the Reference Text Object Prompt Method at the bottom of the Add Labels dialog is set to Command Line.
 - e. Click Add.
16. At the `Select structure or pipe:` prompt, click the structure you want to label.
- You will immediately see a prompt at the command line that reads `Select surface for label style component Existing Ground:.`
17. Press the Enter key to select EG from the surface listing and then click OK. Press the Enter key to end the labeling and close the Add Labels dialog.

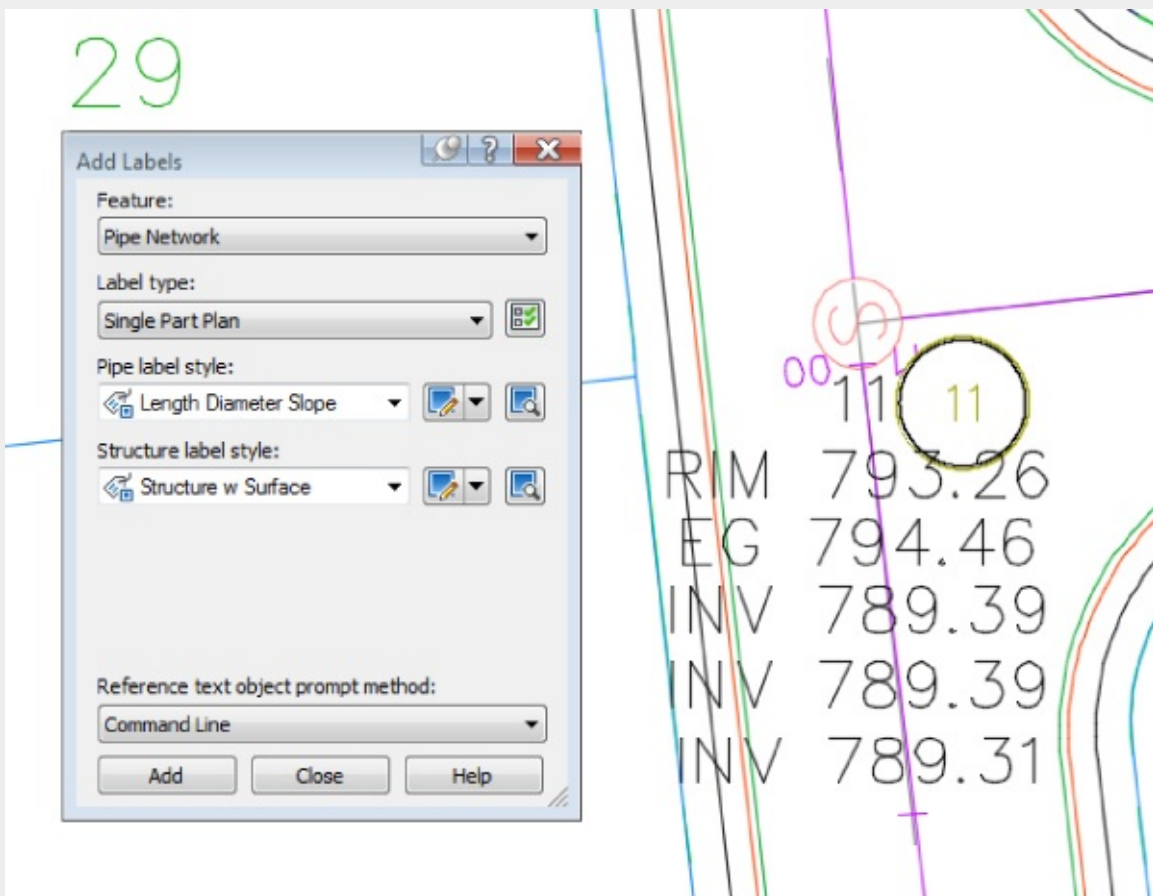Your label is now complete. Close the Add Labels dialog and press Esc to clear any object selection.



Save and close the drawing. A saved copy of this drawing,

1804_PipeandStructureLabels_FINISHED.dwg

(1804_PipeandStructureLabels_METRIC_FINISHED.dwg), is available from the book's web page.

Profile and Alignment Labels

Profile and alignment labels can take on many forms. On an alignment you may want to show station labels every 100' (25 m) in addition to PC, PT, and PI information. On a profile, you will want tangent grades, curve information, and grade breaks.

Many types of label styles can be applied to an alignment and profile. Each type has a unique set of properties. Fortunately, these styles can be applied in sets to expedite labeling.

Label Sets

A *label set* is a grouping of labels that apply to the same object. In lieu of having one big style that accounts for multiple aspects of an object, the labels are broken out into specific types to allow you more control.

Label sets come into play with alignments and design profiles. When you look at an alignment or profile and see labels, you are usually seeing multiple label styles in action.

Consider the alignment shown in [Figure 18.31](#). How many labels are on this alignment? The geometry points, the major stations, the minor ticks, superelevation critical points, and design speed are all different label types.



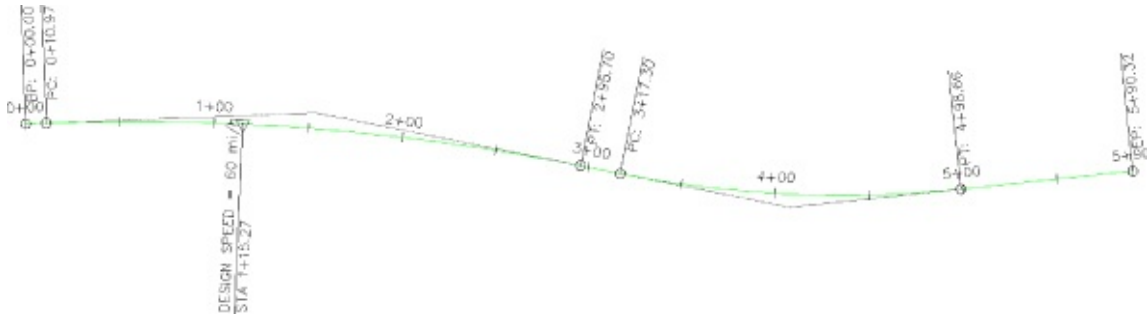


Figure 18.31 One alignment, five label styles in play

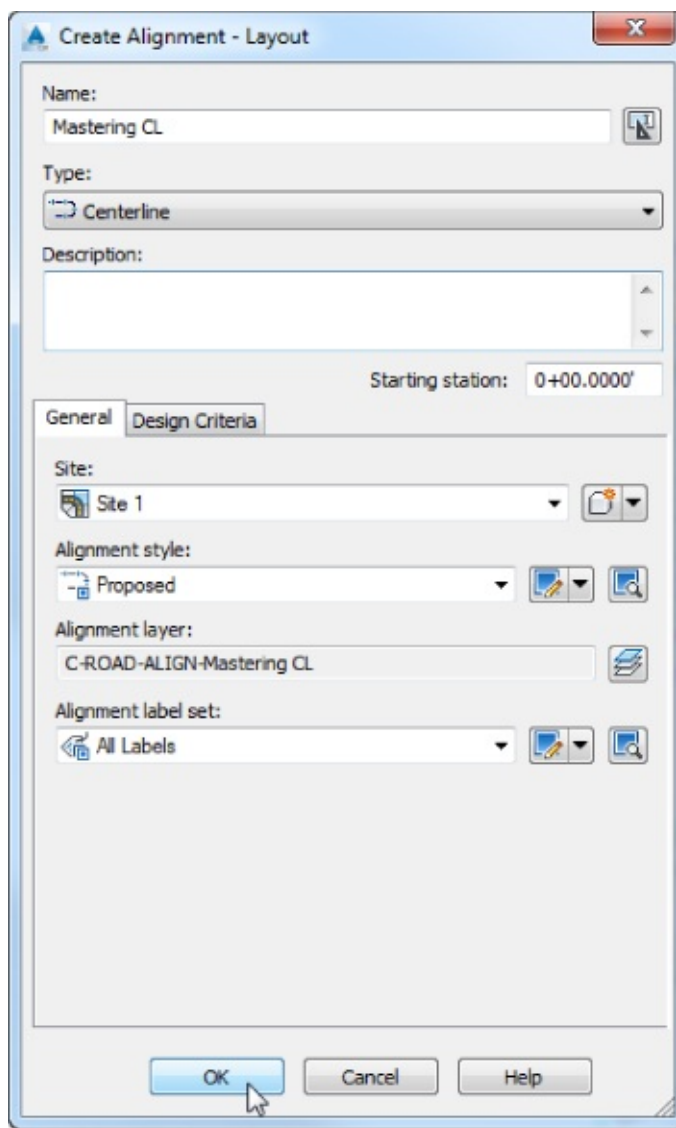How did those labels get there? When you first created the alignment or profile, one of the options was to specify a label set (as shown in [Figure 18.32a](#)). All label types included in the label set by default are placed on the alignment at all locations where they can be applied with their associated style. Also after the creation you can select the alignment, and from the contextual tab you can add specific labels, as shown in [Figure 18.32b](#).



(a)

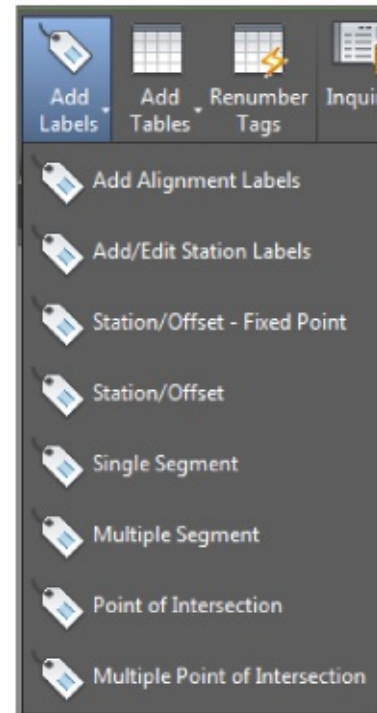

(b)

Figure 18.32 Specifying an alignment label set upon creation (a) and adding specific labels after alignment creation (b)

To edit which labels are applied to an alignment or profile, click one of the alignment labels, and from the Labels - Alignment Geometry Point Label Group contextual tab ➤ Modify panel, select Edit Label Group. Note that the contextual tab name will be different depending on which alignment label you choose.

Label sets also control some aspects of the location of the annotation. An alignment label set controls the major and minor station labeling increment and the type of geometry points that are labeled. A profile label set can control whether labels are positioned with respect to the graph top or bottom edge or to the profile. [Figure 18.33](#) shows the two columns, Dim Anchor Opt and Dim Anchor Val, where this positioning is configured.

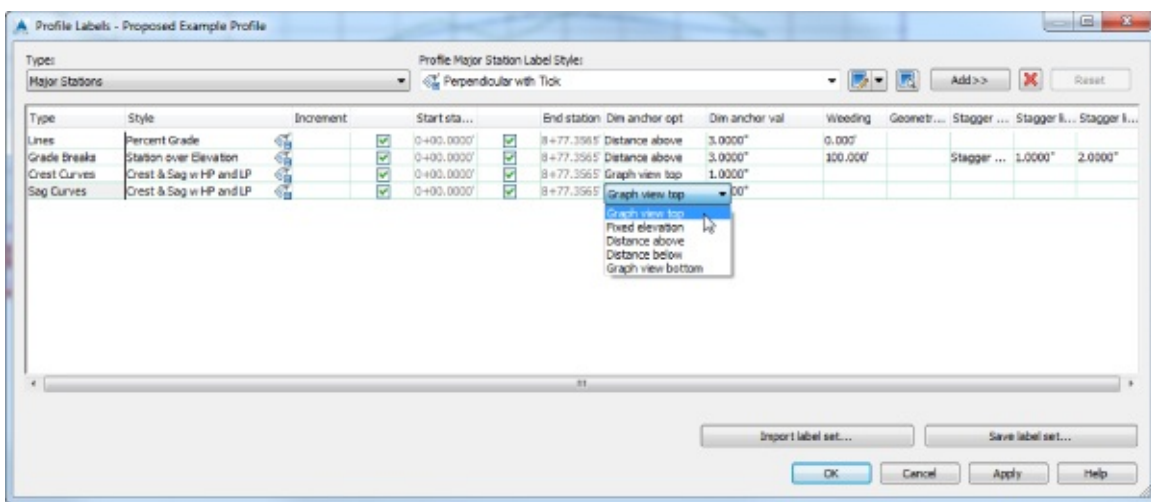


Figure 18.33 Profile labels and placement options

Alignment Labels

You'll create individual label styles over the next couple of exercises and then pull them together with a label set. At the end of this section, you'll apply your new label set to the alignments.

Major Station

Major station labels typically include a tick mark and a station callout. In this exercise, you'll build a style to show only the station increment and run it parallel to the alignment:

1. Open the 1805_Alignment&ProfileLabels.dwg (1805_Alignment&ProfileLabels_METRIC.dwg) file, which you can download from this book's web page.
2. Switch to the Settings tab, and expand the Alignment > Label Styles > Station > Major Station branch.
3. Right-click Parallel With Tick and select Copy.

The Label Style Composer dialog appears.

4. On the Information tab, type **Index Station** in the Name field.
5. Switch to the Layout tab.
6. Click in the Value field next to Contents, and click the ellipsis button to enter the Text Component Editor dialog.
7. Click in the preview area, and delete the text that's already there.
8. With Station Value as the active property, click the Output Value field, and click the down arrow to open the drop-down.

You will need to scroll down to see the Output option.

9. Select the Left Of Station Character option, as shown in [Figure 18.34](#), and click the arrow. (Metric users, the resulting label will be more interesting if you use the Right Of Station Character option instead. Because this alignment is less than 300 m, the left option will give you all 0s!)

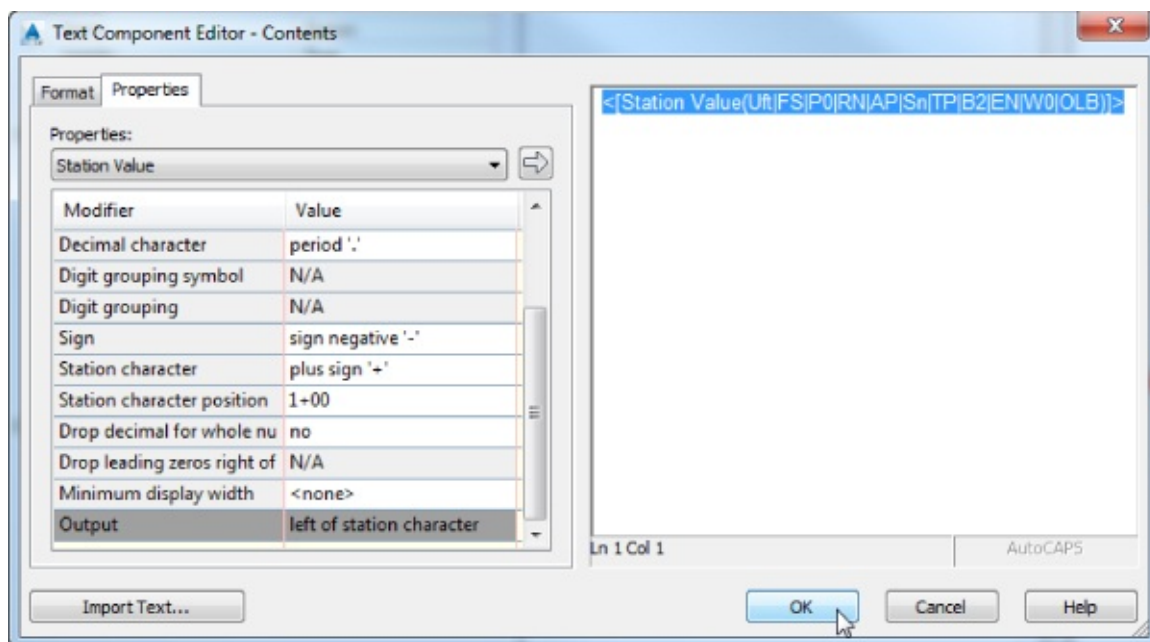



Figure 18.34 Modifying the Station Value Output value in the Text Component Editor dialog

10. Click OK to close the Text Component Editor dialog.
11. Click OK to close the Label Style Composer dialog.
12. Keep the drawing open for the next part of the exercise.

The label style now shows in your label styles, but it hasn't been applied to any alignments yet.

Geometry Points

Geometry points reflect the PC, PT, and other points along the alignment that define the geometric properties. The existing label style was not configured to be plan-readable, so you'll copy it and make a minor change in this exercise. You need to have completed the previous exercise to begin working on the following exercise.

1. Continue working in the 1805_Alignment&ProfileLabels.dwg (1805_Alignment&ProfileLabels_METRIC.dwg) file.
2. Expand the Alignment > Label Styles > Station > Geometry Point branch.
3. Right-click Perpendicular With Tick, and select Copy to open the Label Style Composer.
4. On the Information tab, change the name to **Perpendicular with Line**.
5. Switch to the General tab.
6. Change the Readability Bias setting to **90**.
This value will force the labels to flip at a much earlier point.
7. Switch to the Layout tab and make these changes:
 - a. Change the active component selection to the one named Tick.
 - b. Click the Delete Component button (the red X).
 - c.  Choose Line from the Create Component drop-down.
 - d. Change Angle to **90**.

- e. Change back to the Geometry Point & Station component.
- f. Change the Anchor Component to Line.1.
- g. Change the Anchor Point to End.
- h. Change Rotation Angle to **0**.

8. Click OK to close the Label Style Composer dialog.

This new style flips the plan-readable labels sooner and includes a line with the label. Next, you will put the styles together in a set.

Alignment Label Set

Once you have several labels you want to use on an alignment, it is time to save them as an alignment label set. You need to have completed the previous exercise in order to begin working on the following exercise.

1. Continue working in 1805_Alignment&ProfileLabels.dwg (1805_Alignment&ProfileLabels_METRIC.dwg). You must have completed the previous exercises to continue. On the Settings tab of Toolspace, expand the Alignment > Label Styles > Label Sets branch.
2. Right-click Label Sets, and select New to open the Alignment Label Set dialog.
3. On the Information tab, change the name to **Paving**.
4. Switch to the Labels tab.
5. Set the Type drop-down to the Major Stations option and the Major Station Label Style drop-down to the Index Station style you just created; then click the Add button.
6. Set the Type drop-down to the Minor Stations option and the Minor Station Label Style drop-down to the Tick option; then click the Add button.
7. Set the Type drop-down to Geometry Points and the Geometry Point Label Style drop-down to Perpendicular With Line. Then click the Add button to open the Geometry Points dialog, as shown [Figure 18.35](#).

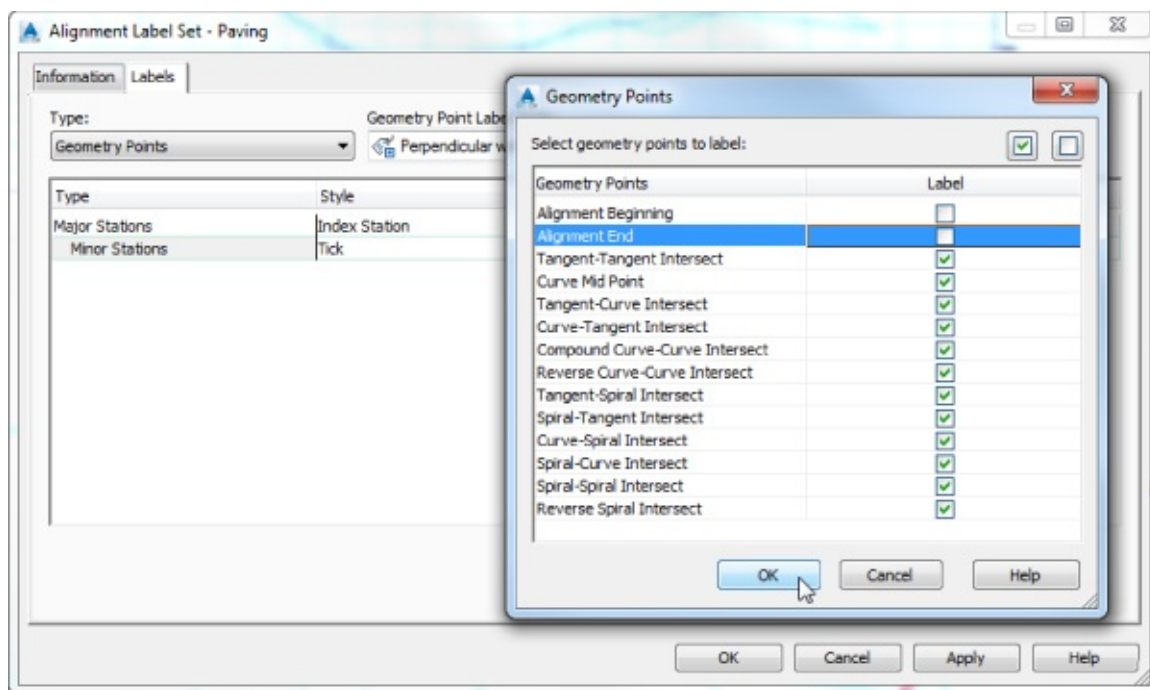


Figure 18.35 Deselecting the Alignment Beginning and Alignment End geometry point check boxes

8. Deselect the Alignment Beginning and Alignment End check boxes as shown, and then click OK to dismiss the dialog.

Three label types will appear in the Alignment Label Set dialog.

9. Click OK to dismiss this dialog.

In the next exercise, you'll apply your label set to the example alignment and then see how an individual label can be changed from the set. You need to have completed the previous exercise in order to begin working on the following exercise.

1. Continue working in the 1805_Alignment&ProfileLabels.dwg (1805_Alignment&ProfileLabels_METRIC.dwg) file. Select the Example alignment on screen.
2. On the alignment's contextual tab, click to expand the Add Labels button under the Labels & Tables panel and choose Add/Edit Station Labels to display the Alignment Labels dialog.

This dialog shows which labels are currently applied to the alignment. Initially, it will be empty.

3. Click the Import Label Set button near the bottom of this dialog.

Any labels appearing in this listing will be replaced by the labels in the set that is imported.

4. In the Select Label Set dialog, use the drop-down to select the Paving label set and click OK.

The Alignment Labels list populates with the option you selected.

5. Click OK to dismiss the dialog.

6. When you finish, press Esc to be sure you have deselected your alignment, and zoom in on any of the major station labels.

7. Hold down the Ctrl key, and select one of the major station labels.

Notice that a single label is selected, not the label set group.

8. Now that the single label is selected, drag the grip to place it into dragged state. Then click the circular grip to reset the label to its original position.

9. While the label is still selected, access the AutoCAD properties palette by pressing the Ctrl+1 key combination. You can access the same tool palette by using the button found in the General Tools panel of the contextual tab.

The Properties palette appears, allowing you to pick another label style from the Major Station Label Style drop-down.

10. Change the Label Style value to Parallel With Tick, and change the Flipped value to True, as shown in [Figure 18.36](#).

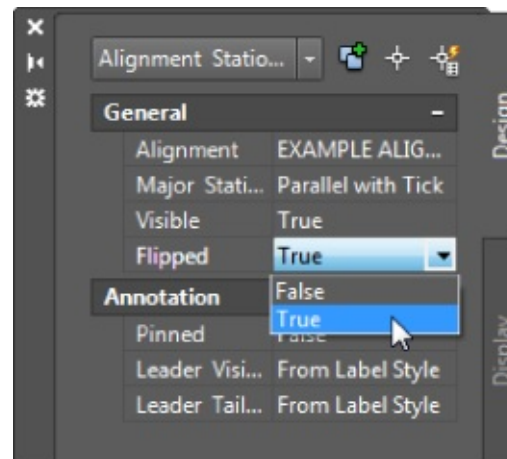


Figure 18.36 Modifying a single label's properties through the base AutoCAD properties palette

11. Press Esc to deselect the label item.

If you add labels to an alignment and like the look of the set, use the Save Label Set option. By using alignment label sets, you'll find it easy to standardize the appearance of labeling and stationing across alignments. Building label sets can take some time, but it's an easy, effective way to enforce standards.

Compare your drawing at this point against the 1805_Alignment&ProfileLabels_A.dwg (1805_Alignment&ProfileLabels_A_METRIC.dwg) file if needed.

Station Offset Labeling

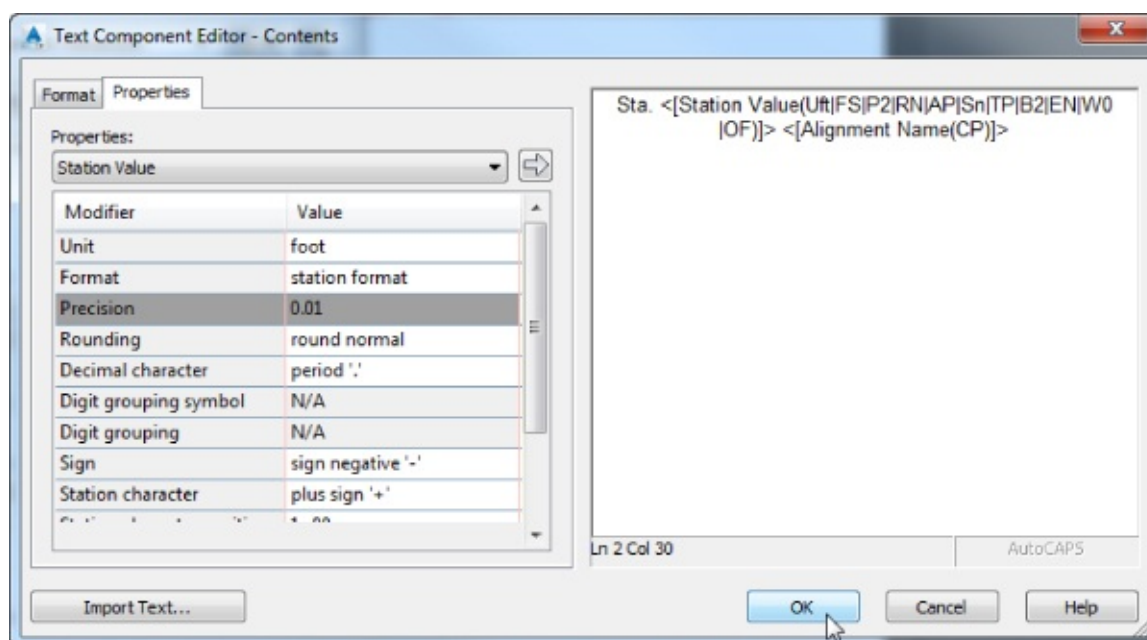
Beyond labeling an alignment's basic stationing and geometry points, you may want to label points of interest in reference to the alignment. Station offset labeling is designed to do just that. In addition to labeling the alignment's properties, you can include references to other object types in your station-offset labels. The objects available for referencing are as follows:

- Other alignments
- COGO points
- Parcels
- Profiles
- Surfaces
- Survey figures

In Chapter 10, “Advanced Corridors, Intersections, and Roundabouts,” you used special alignment labels that referenced other alignments to make adjusting your design easier. In this exercise, you will make a similar type of label. The label you create in the following exercise finds the intersection of two alignments. You need to have completed the previous exercise in order to begin working on the following

exercise:

1. Continue working with the finished version of your previous exercise; otherwise use the 1805_Alignment&ProfileLabels_A.dwg (1805_Alignment&ProfileLabels_A_METRIC.dwg) drawing file.
2. On the Settings tab, expand Alignment > Label Styles > Station Offset.
3. Right-click the Station And Offset style, and select Copy to open the Label Style Composer dialog.
4. On the Information tab, change the name of your new style to **Alignment Intersection**.
Make it a habit to update the description of the new label to reflect the intent of that label every time you copy or define a new label style.
5. Switch to the Layout tab. In the Component Name drop-down, select Marker, and click the red X to delete the component.
6. Change the name of the Station Offset component to **Main Alignment**.
7. In the Contents field, click the ellipsis button to bring up the Text Component Editor dialog.
8. Select the text in the preview area and delete it all.
9. Type **Sta.** in the preview area; be sure to leave a space after the period.
10. In the Properties drop-down field, select Station Value, and set Precision to **0.01**.
11. Click the arrow in the Text Component Editor dialog; add a space after the inserted text.
12. In the Properties drop-down field, select Alignment Name.
13. Click the arrow to add this bit of code to the preview.
14. Click your mouse in the preview area, and add a space after the inserted text and an equal sign (=).
Your Text Component Editor dialog should look like [Figure 18.37](#).



[Figure 18.37](#) The start of the alignment label style

15. Click OK to return to the Label Style Composer dialog.

16. Under the Border property, set the Visibility field to False.
 17. Click the Create Component drop-down and select Reference Text.
 18. In the Select Type dialog that appears, select Alignment and click OK.
 19. Change the name to **Intersecting Alignment**.
 20. In the Anchor Component field, select Main Alignment.
 21. In the Anchor Point field, select Bottom Left.
 22. In the Attachment field, select Top Left.
- When you choose the anchor point and attachment point in this fashion, the bottom left of the Main Alignment text is linked to the top left of the Intersection Alignment text.
23. Click in the Contents field, and click the ellipsis button to open the Text Component Editor dialog.
 24. Delete the default label text that currently appears in the preview area.
 25. Type **Sta.** in the preview area; be sure to leave a space after the period.
 26. In the Properties drop-down, select Station Value, and set Precision to **0.01**.
 27. Click the insert arrow in the Text Component Editor dialog and add a space after the inserted text.
 28. In the Properties drop-down, select Alignment Name.
 29. Click the insert arrow.
 30. Click OK to exit the Text Component Editor dialog, and click OK again to exit the Label Style Composer dialog.
 31. Add the label to the drawing by selecting the Annotate tab > Labels & Tables panel and clicking the top half of the Add Labels button.
 32. Change the label settings to match those shown in [Figure 18.38](#), and click Add.

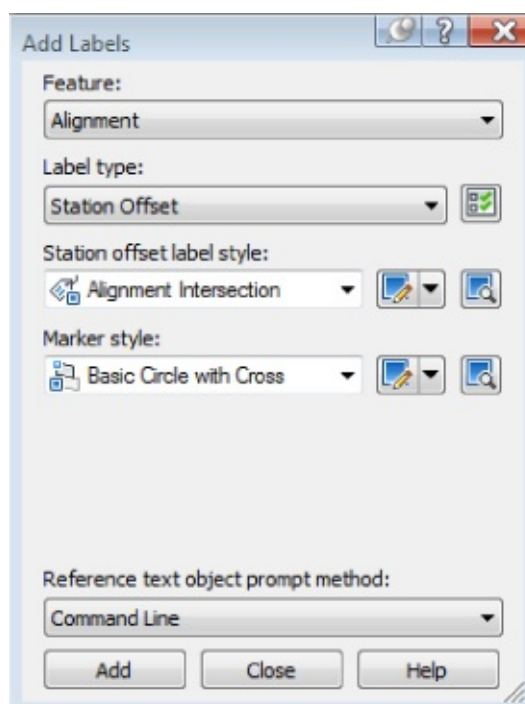


Figure 18.38 Adding the new alignment label

The same label could have been added using the Station Offset - Fixed Point option. This option is more likely to be used if the point of intersection between the alignments does not change. Therefore, consider your intent when using either of the labeling options.

33. Watch the command line for placement instructions. You will be prompted to select the main alignment, the station along the alignment, which is the intersection point of both alignments, and the offset. You will then be prompted to select the intersecting alignment.
34. Press Esc to complete the labeling command.
35. Click the label to select it and reveal the grips. Select the square grip and drag it away from the current location to form a leader.

Your completed label should look like [Figure 18.39](#).

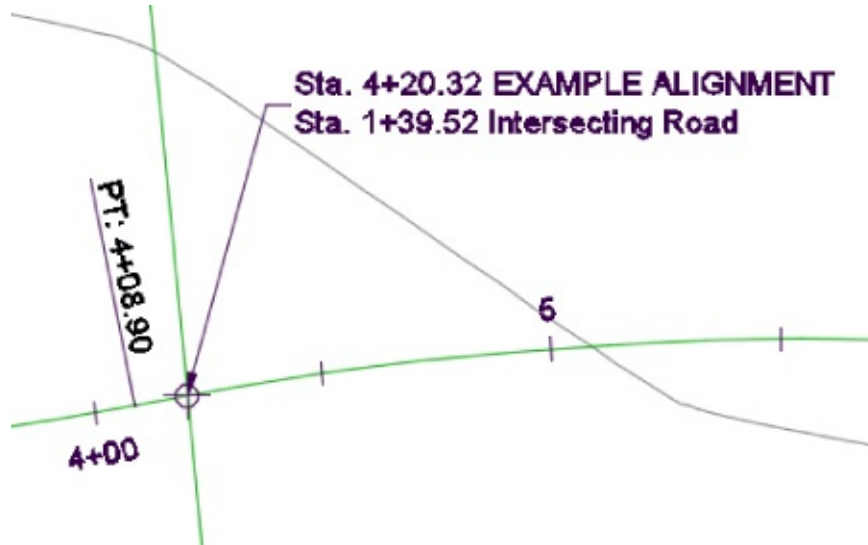


Figure 18.39 The completed alignment label with reference text

Compare your drawing at this point against the file 1805_Alignment&ProfileLabels_B.dwg (1805_Alignment&ProfileLabels_B_METRIC.dwg) if needed.


Profile Labels

It's important to remember that the profile and the profile view aren't the same thing. The labels discussed in this section are those that relate directly to the profile. This usually means station-based labels, individual tangent and curve labels, or grade breaks. You'll look at individual label styles for these components and then at the concept of the label set.

Horizontal Alignment Profile Labels

As with alignments, you apply labels to profiles in the form of profile label sets. For now, though, in this exercise you'll learn how to add alignment labels that describe the horizontal data along a profile object. You will need to have completed the previous exercise in order to begin working on the following exercise:

1. Continue working with the finished version of your previous exercise; otherwise use the 1805_Alignment&ProfileLabels_B.dwg (1805_Alignment&ProfileLabels_B_METRIC.dwg) file.
2. Pick the blue layout profile (the profile with two vertical curves) to activate the profile object.

3.  From the Profile contextual tab > Labels panel, select Edit Profile Labels to display the Profile Labels dialog (see [Figure 18.40](#)).

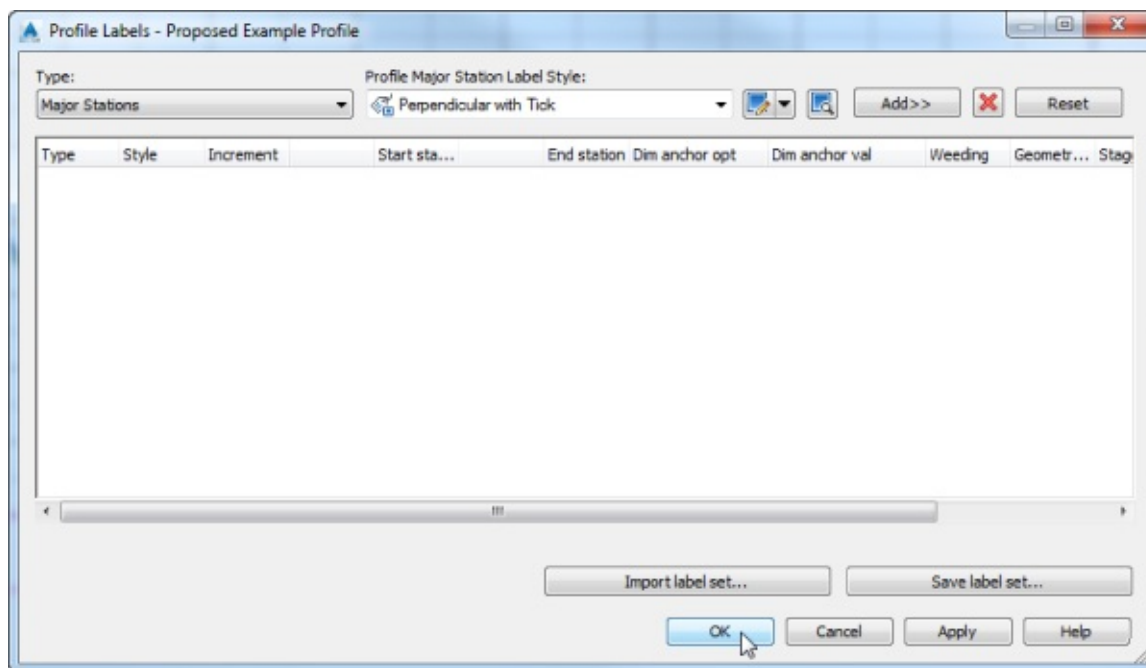


Figure 18.40 An empty Profile Labels dialog

Selecting the type of label from the Type drop-down changes the Style drop-down to include styles that are available for that label type. Next to the Style drop-down are the usual Style Edit/Copy button and a preview button. Once you've selected a style from the Style drop-down, clicking the Add button places it on the profile. The middle portion of this dialog displays information about the labels that are being applied to the profile selected; you'll look at that in a moment.

4. Choose the Major Stations option from the Type drop-down.
- The name of the second drop-down changes to Profile Major Station Label Style to reflect this option.
5. Set the style to Perpendicular With Tick in this drop-down.
6. Click Add to apply this label to the profile.
7. Choose Horizontal Geometry Points from the Type drop-down.
- The name of the Style drop-down changes to Profile Horizontal Geometry Point.
8. Select the Horizontal Geometry Station style, and click Add again to display the Geometry Points dialog shown in [Figure 18.41](#).

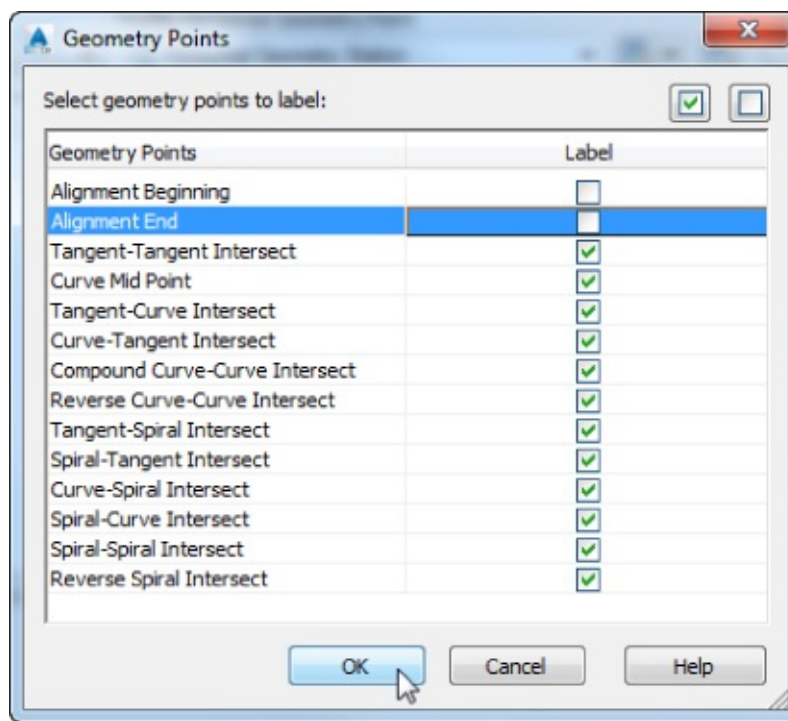


Figure 18.41 The Geometry Points dialog appears when you add labels to horizontal geometry points.

This dialog lets you apply different label styles to different geometry points if necessary.

9. Deselect the Alignment Beginning and Alignment End rows, as shown in [Figure 18.41](#), and click OK to close the dialog.
10. Click the Apply button, and then drag the dialog out of the way to view the changes to the profile (see [Figure 18.42](#)).

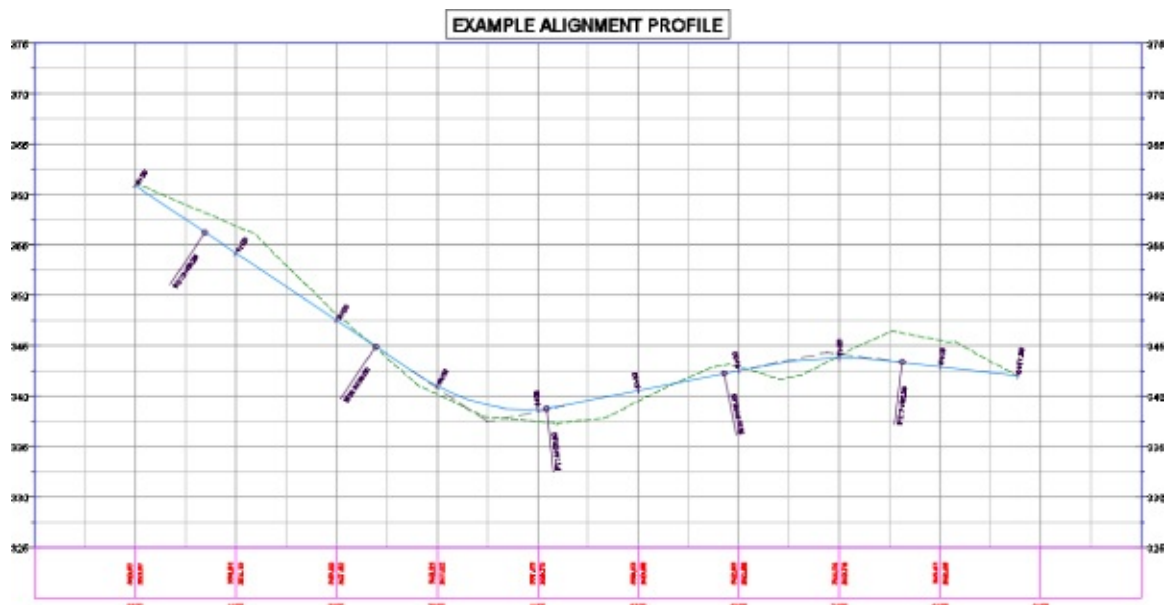


Figure 18.42 Labels applied to major stations and alignment geometry points

11. In the middle of the Profile Labels dialog, change the Increment value in the Major Stations row to 50' (10 m), as shown in [Figure 18.43](#).

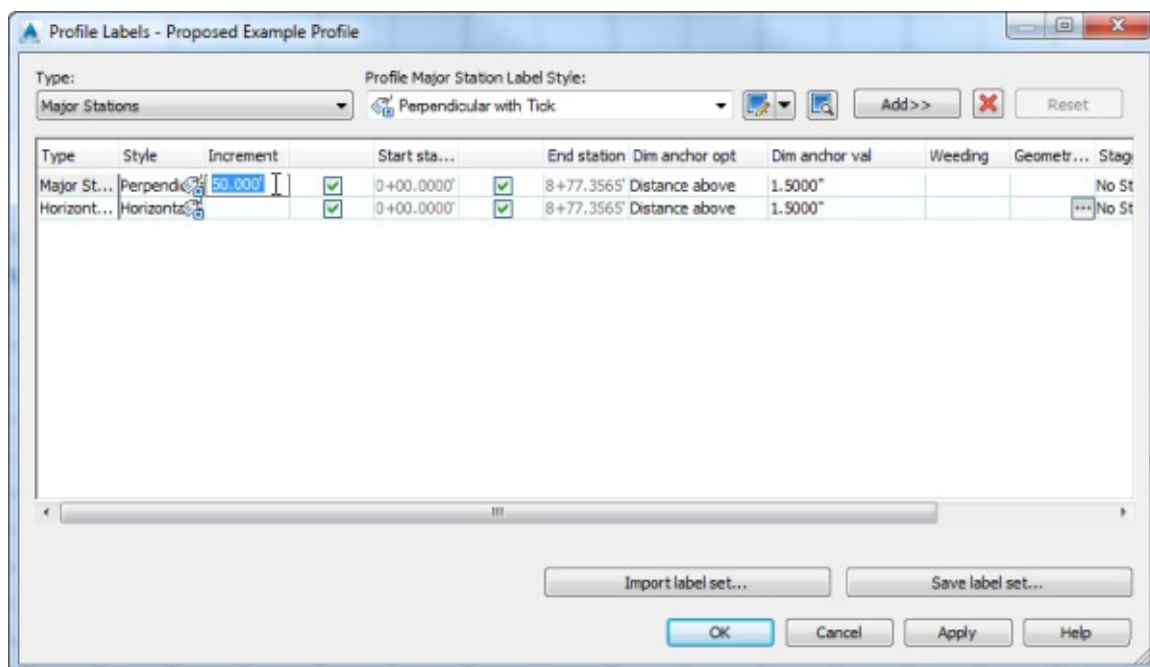


Figure 18.43 Modifying the Major Stations labeling increment

This modifies the labeling increment only, not the grid or other values.

2. Click OK to close the Profile Labels dialog.
3. Press Esc to deselect the layout profile.

As you can see, applying labels one at a time could turn into a tedious task. After you learn about the types of labels available, you'll revisit this dialog and look at the two buttons at the bottom for dealing with label sets.

Line Labels

Line labels in profiles are typically used to convey the slope or length of a tangent segment. In this exercise, you'll add a length and slope to the layout profile. You will need to have completed the previous exercise in order to begin working on the following exercise:

1. Continue working in the 1805_Alignment&ProfileLabels.dwg (1805_Alignment&ProfileLabels_METRIC.dwg) file.
2. Switch to the Settings tab of Toolspace.
3. Expand the Profile > Label Styles > Line branch.
4. Right-click Percent Grade, and select the Copy option to open the Label Style Composer dialog and create a duplicate style.
5. On the Information tab, change the name to **Length and Percent Grade**.
6. Switch to the Layout tab and make these changes:
 - a. Change Attachment to Top Center.
 - b. Set the Y-offset to **-0.025"** (-1 mm).
 - c. Set Background Mask to True and Border Visibility to False.
7. Click the Value field next to Contents and click the ellipsis to enter the Text Component Editor dialog.

- Change the Properties drop-down to the Tangent Slope Length option and the Precision value to **0.01**, as shown in [Figure 18.44](#).

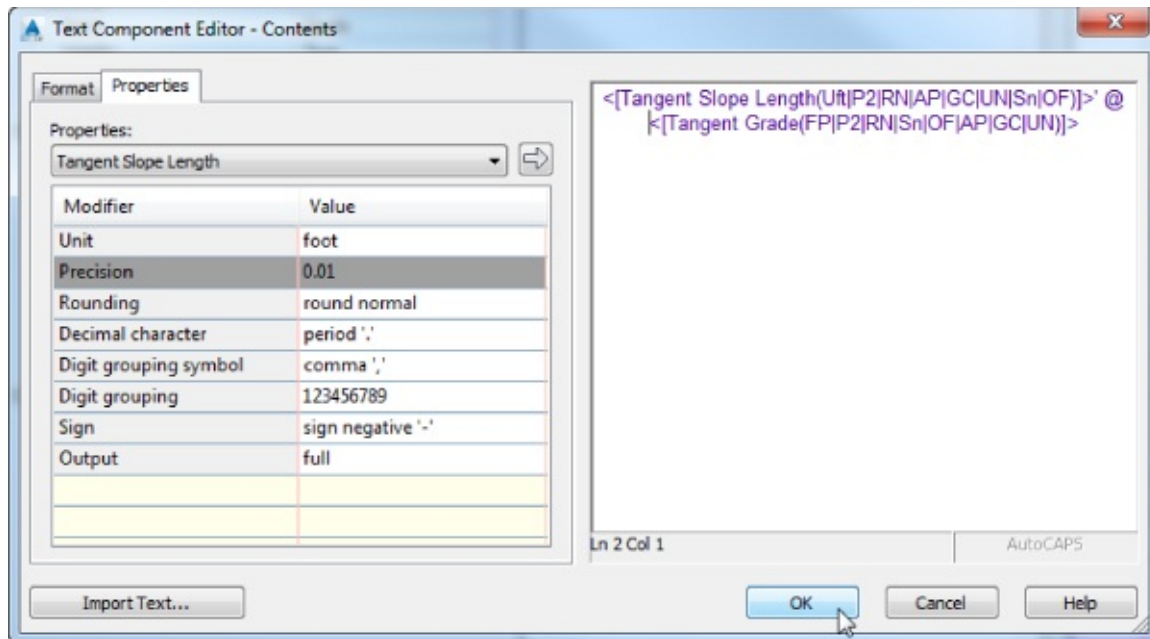


Figure 18.44 The Text Component Editor dialog with the values for the Tangent Slope Length entered

- Put your cursor at the beginning of the existing text in the preview window, click the arrow, and then add a foot symbol (or **m** for meter), a space, an **@** symbol, and another space in the editor's preview pane so that it looks like [Figure 18.44](#).
- Click OK to close the Text Component Editor dialog, and click OK again to close the Label Style Composer.
- Pick the layout profile. From the Profile contextual tab > Labels panel, select Edit Profile Labels to display the Profile Labels dialog.
- Change the Type drop-down to the Lines option. The name of the Style drop-down changes to Profile Tangent Label Style. Select the Length And Percent Grade option.
- Click the Add button, and then click OK to exit the dialog.
- Press Esc to deselect the layout profile.

The profile view should look like [Figure 18.45](#).

Where Is That Distance Being Measured?

The *tangent slope length* is the distance along the vertical geometry between vertical curves. This value doesn't include the tangent extensions. There are a number of ways to label this length; be sure to look in the Text Component Editor if you want a different measurement.

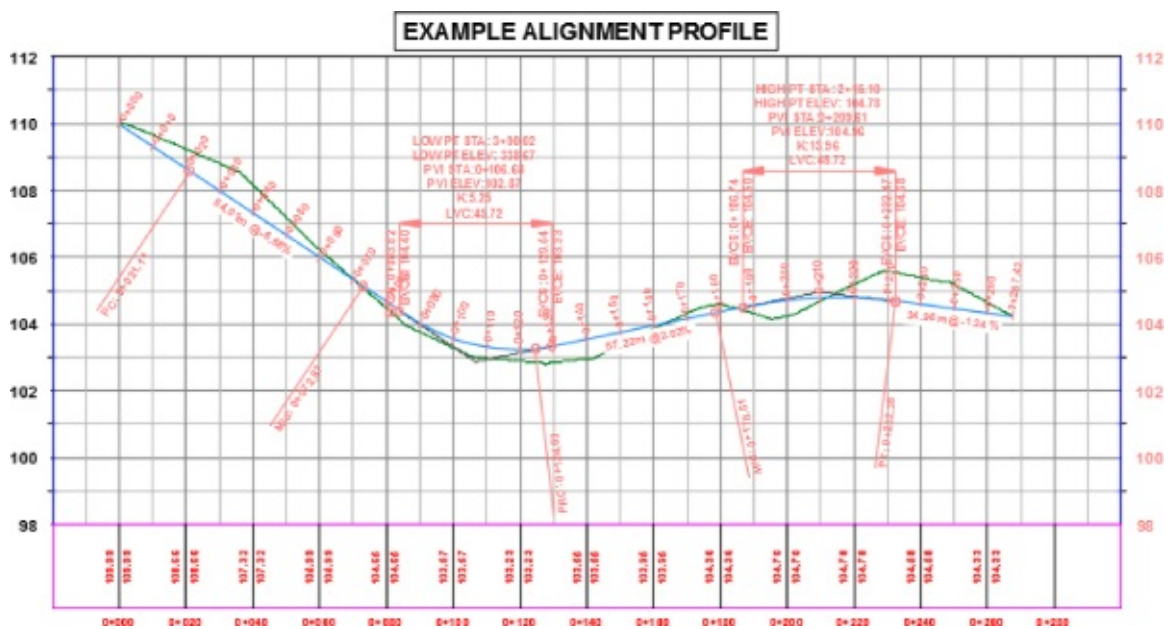


Figure 18.46 Curve labels applied with default Dim Anchor values

Most labels are applied directly on top of the object being referenced. Because typical curve labels contain a large amount of information, putting the label right on the object can yield undesired results. In the following exercise, you'll modify the label settings to review the options available for curve labels. You will need to have completed the previous exercise in order to begin working on the following exercise:

1. Continue working in the 1805_Alignment&ProfileLabels.dwg (1805_Alignment&ProfileLabels_METRIC.dwg) file.
2. Pick the layout profile. From the Profile contextual tab > Labels panel, select Edit Profile Labels to display the Profile Labels dialog.
3. Scroll to the right, and change both Dim Anchor Opt values for Crest Curves and Sag Curves to Graph View Top. You may need to make the columns wider to view the names.
4. Change the Dim Anchor Val for both curves to -2.25" (-40 mm), and click OK to close the dialog.
5. Press Esc to deselect the layout profile.

Your drawing should look like [Figure 18.47](#).


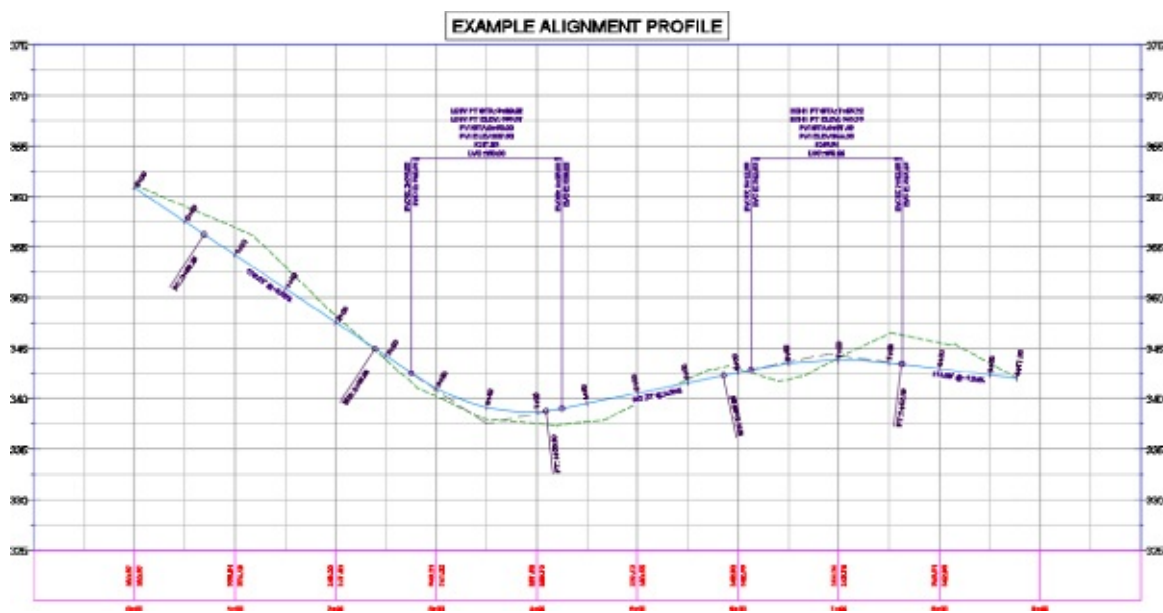


Figure 18.47 Curve labels anchored to the top of the graph

The labels can also be grip-modified to move higher or lower as needed. By using the top or bottom of the graph as the anchor point, you can apply consistent and easy labeling to the curve, regardless of the curve location or size.

Those Crazy Curve Labels!

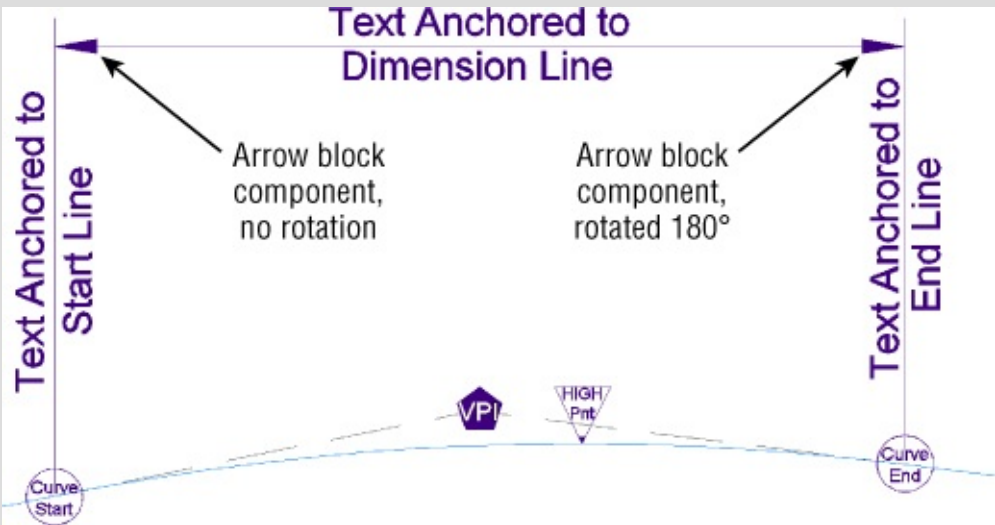A profile curve label can be as intricate or simple as you desire. Civil 3D gives you many options for where along the curve feature you want your Label component to appear. The following illustration shows where some of the commonly used curve locations are in a label:



Grade Breaks

The last label style typically involved in a profile is a grade-break label at PVI points that don't fall inside a vertical curve, such as the beginning or end of the layout profile. Additional uses include things like water-level profiling, where vertical curves aren't part of the profile information or existing surface labeling. In this exercise, you'll add a grade-break label and look at another option for controlling how often labels are applied to profile data. You will need to have completed the previous exercise in order to begin working on the following exercise:

1. Continue working in the 1805_Alignment&ProfileLabels.dwg (1805_Alignment&ProfileLabels_METRIC.dwg) file.
2. Pick the green surface profile (the irregular profile). From the Profile contextual tab > Labels panel, select Edit Profile Labels to display the Profile Labels dialog.
3. Choose Grade Breaks from the Type drop-down.
The name of the Style drop-down changes to Grade Breaks.
4. Select the Station Over Elevation style and click the Add button.
5. Click Apply, and drag the dialog out of the way to review the change.
A sampled surface profile has grade breaks everywhere the alignment crosses a surface TIN line. Why wasn't your view coated with labels?
6. Scroll to the right, and change the Weeding value to **150'** (45 m). Click OK.
7. Select one of the new grade-break labels. Use the square grip at the location where the label touches the profile to form a leader and clean up any labels that overlap.

The profile labels should appear as shown in [Figure 18.48](#).

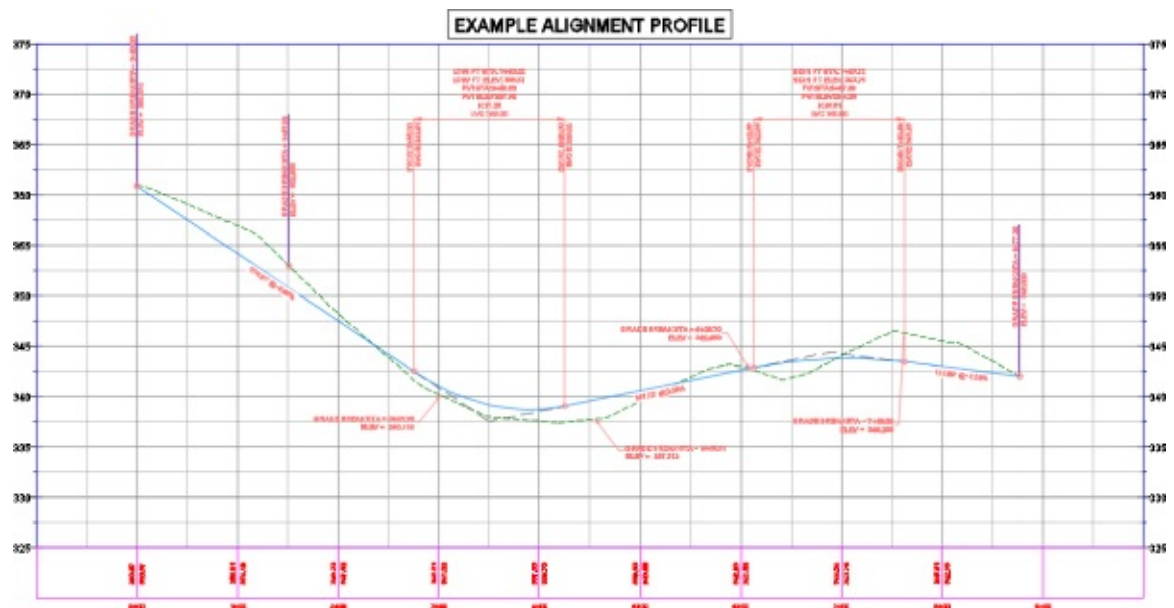


Figure 18.48 The grade-break labels on a sampled surface are starting to get crowded, so weeding combined with dragged labels can bring some clarity to the profile view.

8. Click OK to dismiss the dialog.
9. Press Esc to deselect the layout profile.

Weeding lets you control how frequently grade-break labels are applied. This makes it possible to label profiles with frequent grade breaks, such as a surface profile, at even increments instead of at every PVI.

As you've seen, there are many ways to apply labeling to profiles, and applying these labels to each profile individually could be tedious. In the next section, you'll build a label set to make this process more efficient.

Profile Label Sets

Applying labels to both crest and sag curves, tangents, grade breaks, and geometry with the label style

selection and various options can be monotonous. Thankfully, Civil 3D gives you the ability to use label sets, as in alignments, to make the process quick and easy. In this exercise, you'll apply a label set, make a few changes, and export a new label set that can be shared with team members or imported to the Civil 3D template. You will need to have completed the previous exercise in order to begin working on the following exercise:

1. Continue working in the `1805_Alignment&ProfileLabels.dwg` (`1805_Alignment&ProfileLabels_METRIC.dwg`) file.
2. To tidy things up, you can select one of the grade-break labels from the previous exercise. Press Delete on your keyboard to remove the label.
3. Pick the layout profile. From the Profile contextual tab > Labels panel, select Edit Profile Labels to display the Profile Labels dialog.
4. Click the Import Label Set button near the bottom of the dialog to display the Select Label Style Set dialog.
5. Select the Complete Label Set option from the drop-down, and click OK.
6. Click OK again to close the Profile Labels dialog and see the profile view. Press Esc to clear any selection.

The label set you chose contains curve labels, grade-break labels, and line labels.

7. Pick the layout profile. From the Profile contextual tab > Labels panel, select Edit Profile Labels to display the Profile Labels dialog.
8. Click Import Label Set to display the Select Label Style Set dialog.
9. Select the No_Labels option from the drop-down, and click OK.

All the labels from the listing will be removed.

In the next steps, you will add labels to the listing and save the listing as its own label set for future use.

10. Set Active Type to Lines. Set Profile Tangent Label Style to Length And Percent Grade, and click Add.
11. Set Active Type to Grade Breaks. Set Profile Grade Break Label Style to Station Over Elevation, and click Add.
12. Set Type to Crest Curves. Set Profile Crest Curve Label Style to Crest Only, and click Add.
13. Set Type to Sag Curves. Set Profile Sag Curve Label Style to Sag Only, and click Add.
14. Set the Crest Curves and Sag Curves label types to use Graph View Top as the Dim Anchor Opt.
15. Set both Dim Anchor Val fields to **-1.5"** (**-40 mm**), as shown in [Figure 18.49](#).

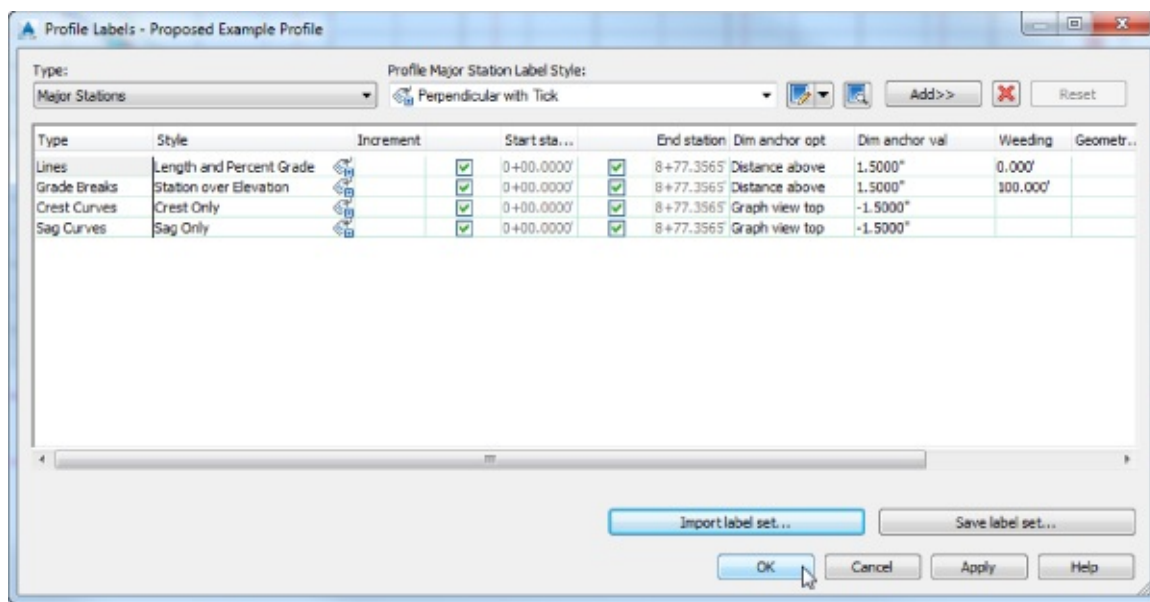


Figure 18.49 Four label types and dimension anchor settings in the label set to be saved

16. Click the Save Label Set button to open the Profile Label Set dialog and create a new profile label set.
17. On the Information tab, change the name to **Road Profile Labels**.
18. Click OK to close the Profile Label Set dialog.
19. Click OK to close the Profile Labels dialog.
20. Press Esc to deselect the layout profile if it's still selected.
21. On the Settings tab of Toolspace, select Profile > Label Styles > Label Sets.

Note that the Road Profile Labels set is now available for sharing or importing to other profile label dialogs.

Save and close the drawing. A saved copy of this drawing, 1805_Alignment&ProfileLabels_FINISHED.dwg (1805_Alignment&ProfileLabels_METRIC_FINISHED.dwg), is available from the book's web page.

Label sets are the only way to apply profile labeling uniformly. When you're working with a well-developed set of styles and label sets, going from sketched profile layout to plan-ready output is quick and easy.

Advanced Style Types

Now that you are familiar with the basics of label styles, you are ready to take your skills to the next level. The styles in the following section combine aspects of label styles and object styles. You will cover object styles more in depth in Chapter 19, “Object Styles.”

You have a great deal of control over every detail, even ones that may seem trivial. Instead of being bogged down trying to understand every option, don't be afraid to try a “trial and error” approach. If you make a change you don't like, you can always edit the style until you get it right.

Table Styles

Civil 3D does a beautiful job of placing dynamically linked data tables that relate to your objects. The

tables use the Text Component Editor to grab dynamic information from your data. You also have control over fill colors, table headings, and how the data is sorted.

For the table style, the Data Properties tab contains all the column information. You can add columns by clicking the plus sign. You can remove columns by highlighting the column you want to remove and clicking the Delete button. You change column order by dragging them around and dropping them where you want them to go, as shown in [Figure 18.50](#).

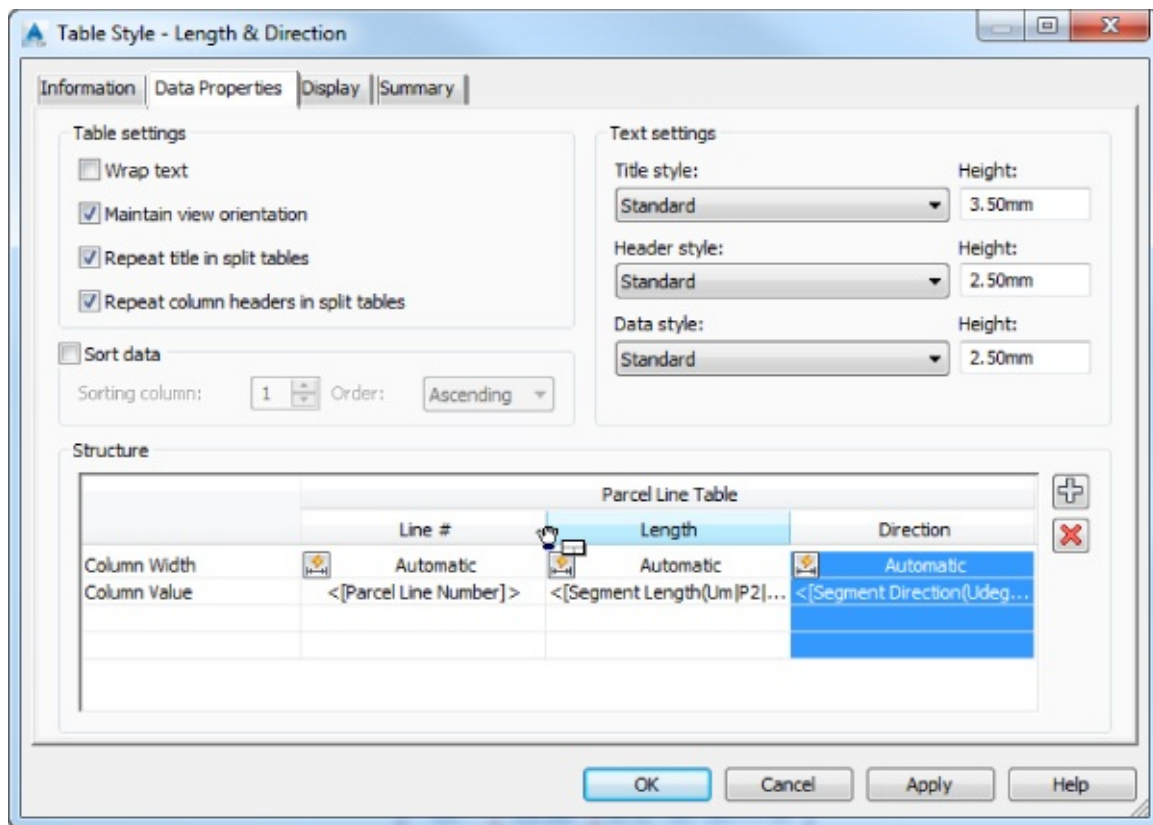


Figure 18.50 Modifying table column positions. Selecting one column and dragging it to change its position in the list.

In the following exercise, you will see the basic steps of modifying a table style. Now that you understand the ins and outs of the Label Style Composer, this procedure should be a breeze:

1. Open the 1806_Tables.dwg (1806_Tables_METRIC.dwg) file, which you can download from this book's web page.

This file contains a parcel line table whose style you will modify.

2. Zoom into the parcel line table.

Notice that there are several things you will want to change:

- The line numbers are out of order.
- The directions have far too much precision.
- The length does not display units.

All that is about to change.



3. Click the table to select it. From the Table contextual tab > Modify panel, select the Table Properties drop-down and choose Edit Table Style.

4. Switch to the Data Properties tab.

The Data Properties tab ([Figure 18.51](#)) is the main control area for all table styles. This is where you set behavior, text styles, and sizes for fields.

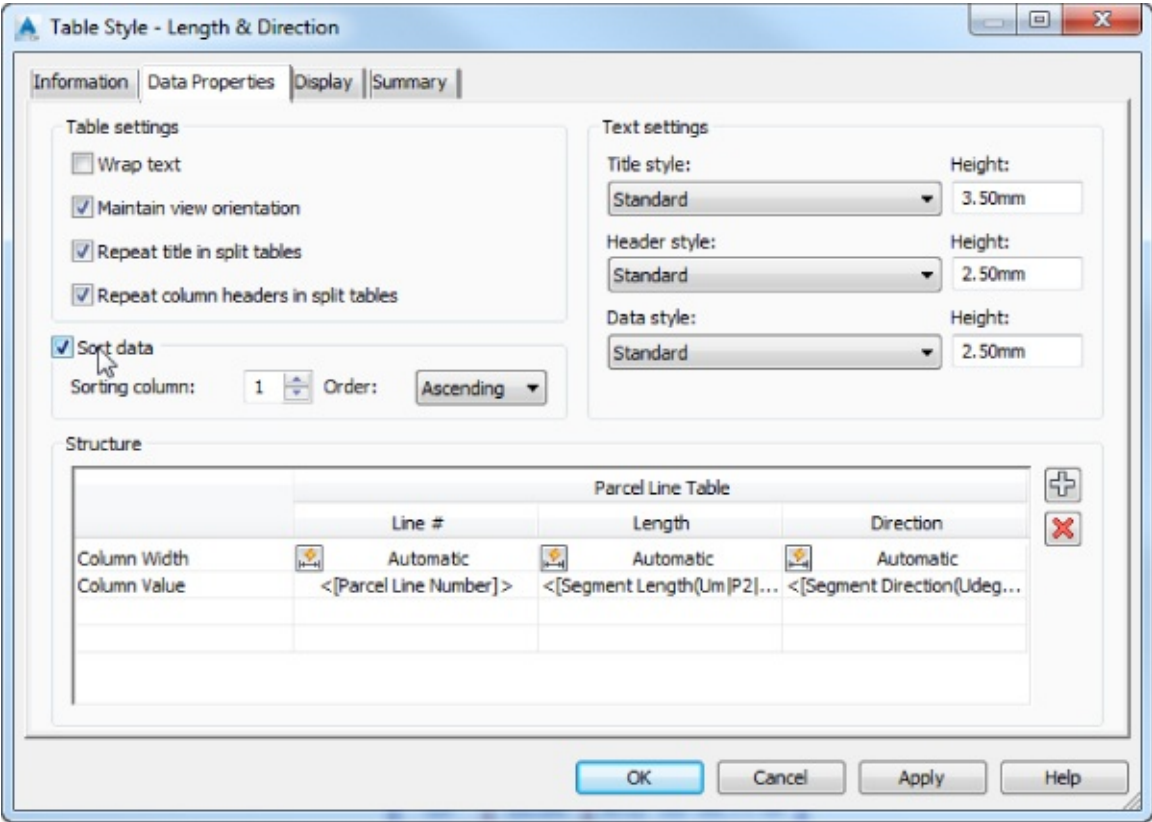


Figure 18.51 The Data Properties tab for table styles. Sorting of the data can be enabled with a simple toggle.

5. Place a check mark next to Sort Data, and set the Sorting column to 1.

Column 1 corresponds to the Column Value containing the Parcel Line Number. Set the Order option to Ascending. The Ascending option will ensure that the parcel numbers are listed in the table from the lowest to highest value.

6. Double-click the column heading field for Length.

Doing so opens a stripped-down version of the Text Component Editor dialog. Headings and table titles are static text only; therefore, only the text formatting tools are shown.

7. Add **(feet)** or **(meters)** after the column heading to add a proper units heading to the column, as shown in [Figure 18.52](#), and click OK.

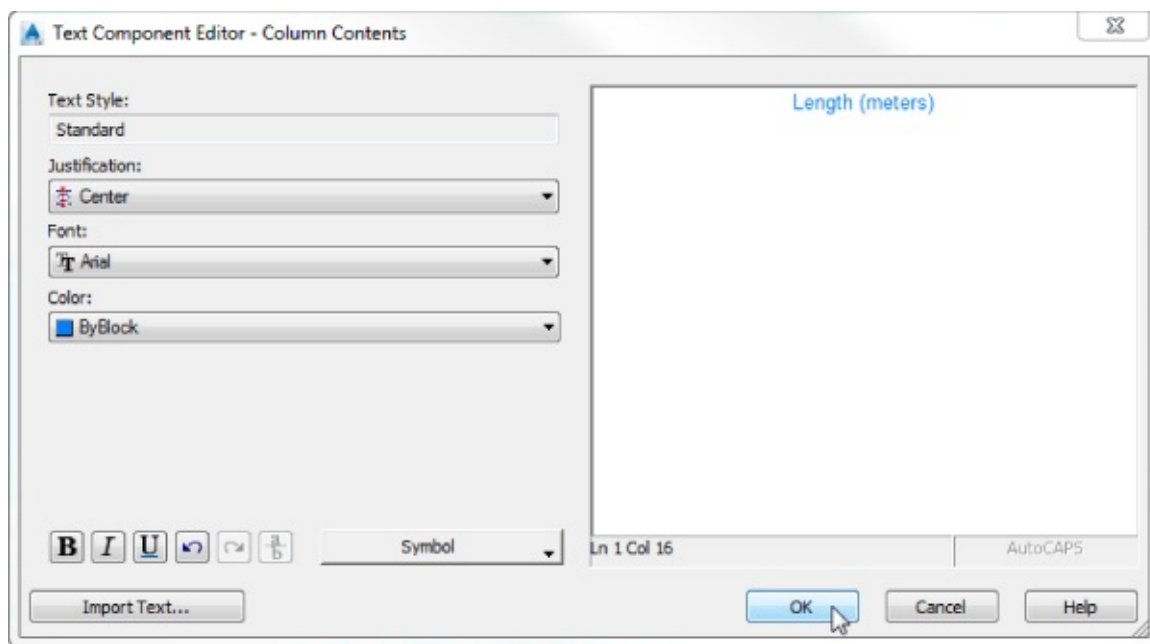


Figure 18.52 Adding static text to a table column heading

8. Double-click the Direction Column Value field below the column heading.

Doing so opens the Text Component Editor dialog, similar to what you've used in earlier exercises.

9. Click the text in the preview area so that it becomes highlighted.

10. Change Precision to **1 Second**.

11. Click the arrow to update the text. Click OK.

12. Click OK to complete the table style modifications.

Save and close the drawing. A saved copy of this drawing, 1806_Tables_FINISHED.dwg (1806_Tables_METRIC_FINISHED.dwg), is available from the book's web page.

Code Set Styles

Code set styles determine how your assembly design will appear, and they are used in many places. A code set style is in play when you first create your assembly. One is used in corridor creation and in the Section Editor. The most apparent use of a code set style is in section views.

A code set style is a collection of many other styles. In a code set style you will find the following:

- Link styles and link label styles
- Points styles, point label styles, and feature line styles
- Shapes styles and shape label styles
- Quantity takeoff pay items
- Render materials for visualization tasks

When naming your code set style, you'll find it helpful to have the name of the set reflect its use. Multiple code set styles are needed because of different applications of their use. When you are designing an assembly, you may want to see more labels than when you are getting ready to plot the assembly in a cross-section sheet. Labeling that is useful in a cross-section sheet may obstruct your view of the design when working with it in the corridor cross-section editor.

The hardest part of working with code set styles is figuring out the name of the link or point you want to label. Luckily, it is unusual for users to label shapes, so you won't need to worry about those. The names of each point or link can be found in the subassembly properties. Most of the links and points are logically named, but there's no harm in a little trial and error if you are not sure.

Shapes

Shapes are the areas that define materials. Because people don't usually label these materials in a section view, you won't be experiencing these in an exercise.

One heads-up, however: Resist the temptation to use a hatch pattern on shapes where multiple cross-section views will be created. Solid fills and no patterns are your best bet to avoid performance issues and the annoying “Hatch pattern is too dense” warning.

Links and Link Labels

You learned in Chapter 8, “Assemblies and Subassemblies,” that a link is the linear part of a subassembly. The object style for the link itself is very simple—just a single linear component. The label for a link is usually expressed as a percent grade or as a slope ratio.

In the following exercise, you will modify a code set style to apply link labels to an assembly:

1. Open the `1807_CodeSetStyles.dwg` (`1807_CodeSetStyles_METRIC.dwg`) file, which you can download from this book's web page.

This file contains corridor and cross-section views. Zoom into one of the cross-section views so you can observe the changes as you apply them to the code set style.

2. From the Settings tab of Toolspace, expand General > Multipurpose Styles > Code Set Styles; right-click All Codes, and select Edit.
3. On the Codes tab under the Link category, select Pave, and click the Label Tag icon in the Label Style column, as shown in [Figure 18.53](#).

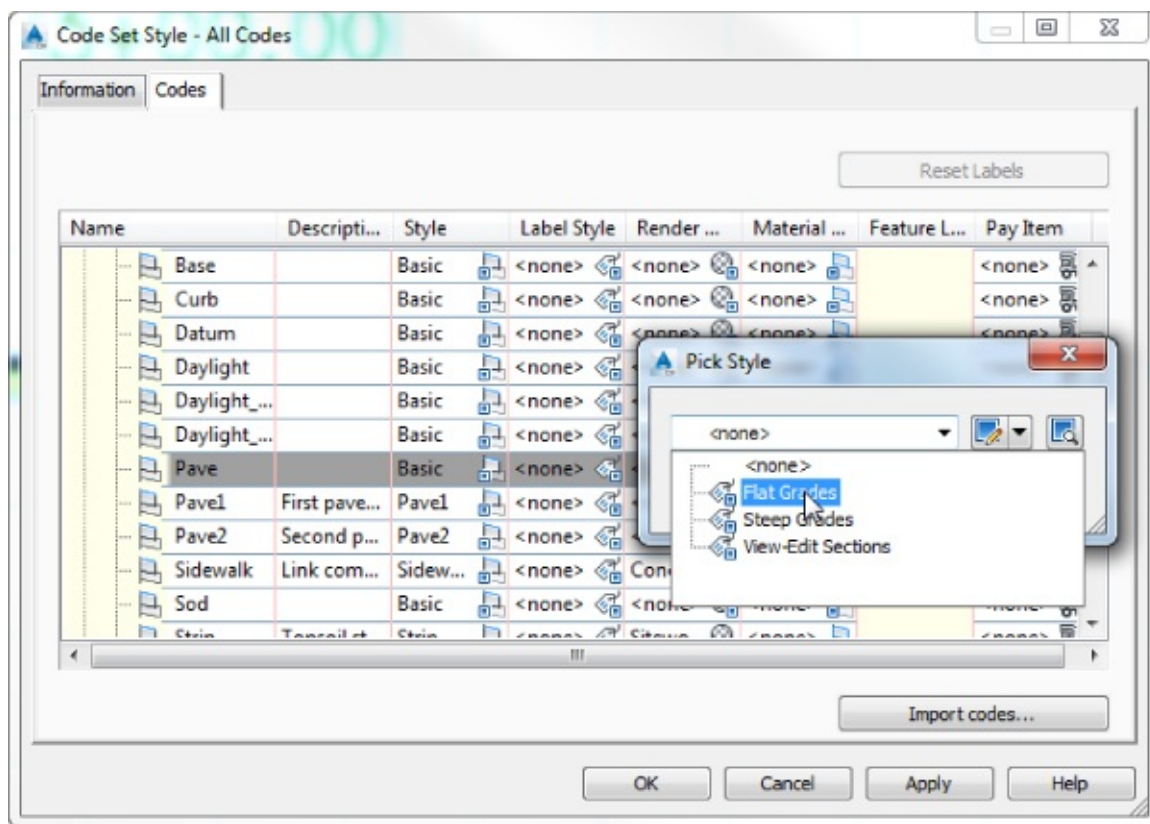


Figure 18.53 Adding labels to the link codes in the code set style

4. In the Pick Style dialog, select the Flat Grades label style and click OK; then click Apply to examine the change on the cross sections.

You should see that the lanes now have slope information labeled.

5. Under the Link category, locate Daylight; click the Label Tag icon in the Label Style column, and select Steep Grades as the label style.
6. Click OK, and then click OK to dismiss the All Codes label style and see what is happening with the cross section.

The cross sections should resemble [Figure 18.54](#).

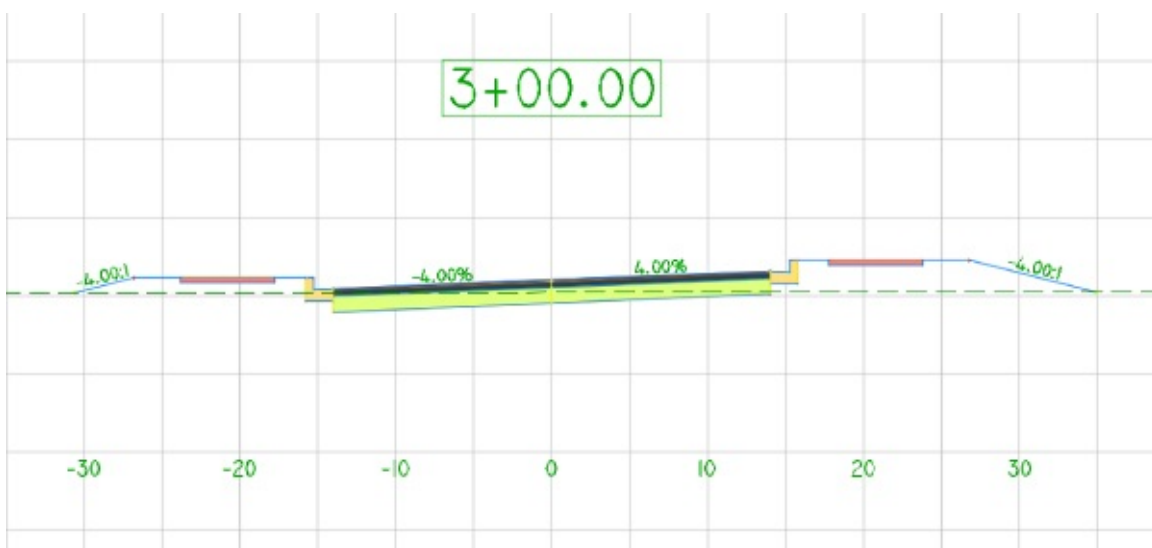



Figure 18.54 Cross section with link labels applied to pave and daylight links

Points and Point Labels

A common frustration for new users of Civil 3D is the marker styles and their labels. For cross-section views, you may not want points to display at all. In the following exercise, you will create a new code set style, modify point codes, and add more labels to the sections. You need to have completed the previous exercise in order to begin working on the following exercise:

1. Continue working in 1807_CodeSetStyles.dwg (1807_CodeSetStyles_METRIC.dwg).
2. From the Settings tab of Toolspace, expand General > Multipurpose Styles > Code Set Styles. Right-click All Codes and select Copy.
3. On the Information tab, rename the style to **All Codes-Plotting**.
4. On the Codes tab, locate and expand the Point category. Locate the Back_Curb point and click the Label Tag icon in the Label Style column. In the Pick Style dialog, set the style to Offset Elevation. Click OK.
5. Repeat step 4 to set the label style for Sidewalk_Out to Offset Elevation.
6. Click the first point name, <default>. While holding down the Shift key on your keyboard, scroll down to the last point listing, Top_Curb. With all of the points selected, click the Tag icon in the Style column and change the style to _No Markers. Click OK.

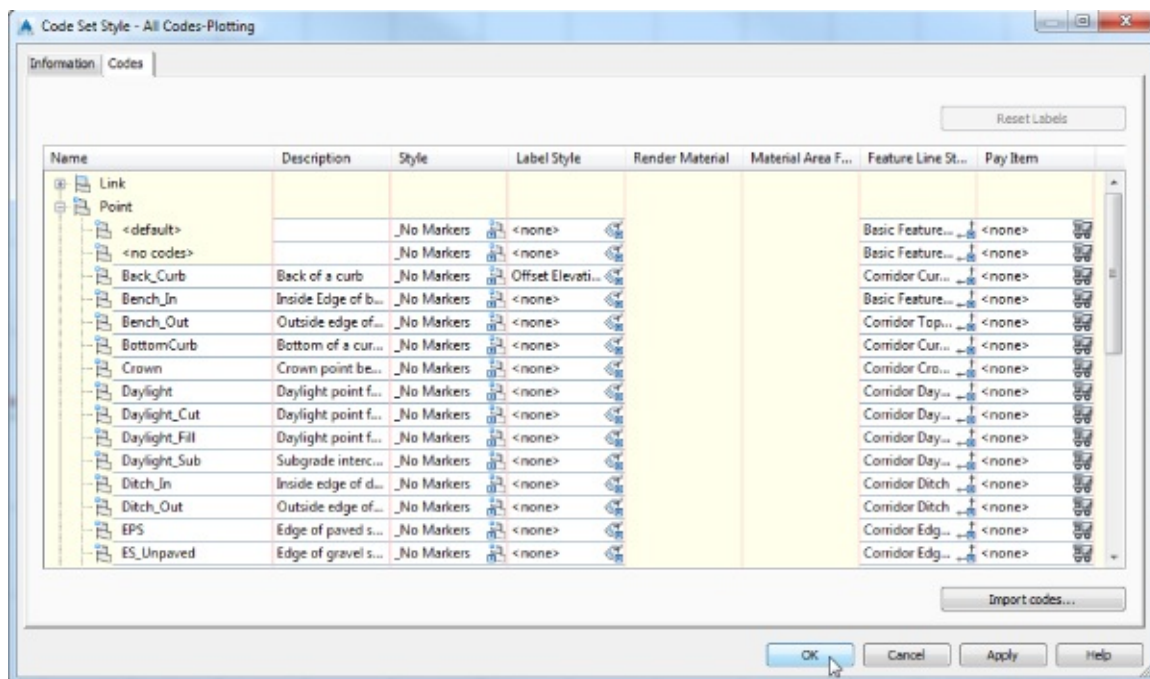The Code Set Style dialog should resemble [Figure 18.55](#).



[Figure 18.55](#) Points set to _No Markers and labels set to Offset Elevation

7. Click OK.
- You can't see any changes to your cross sections yet because the style is not active.
8. Select a section view by selecting its corresponding section view station label. From the Section Views contextual tab > Modify View panel, select the top half of the View Group Properties icon.
 9. On the Sections tab, change the style of Example Corridor to the All Codes-Plotting style you created, as shown in [Figure 18.56](#), and click OK.

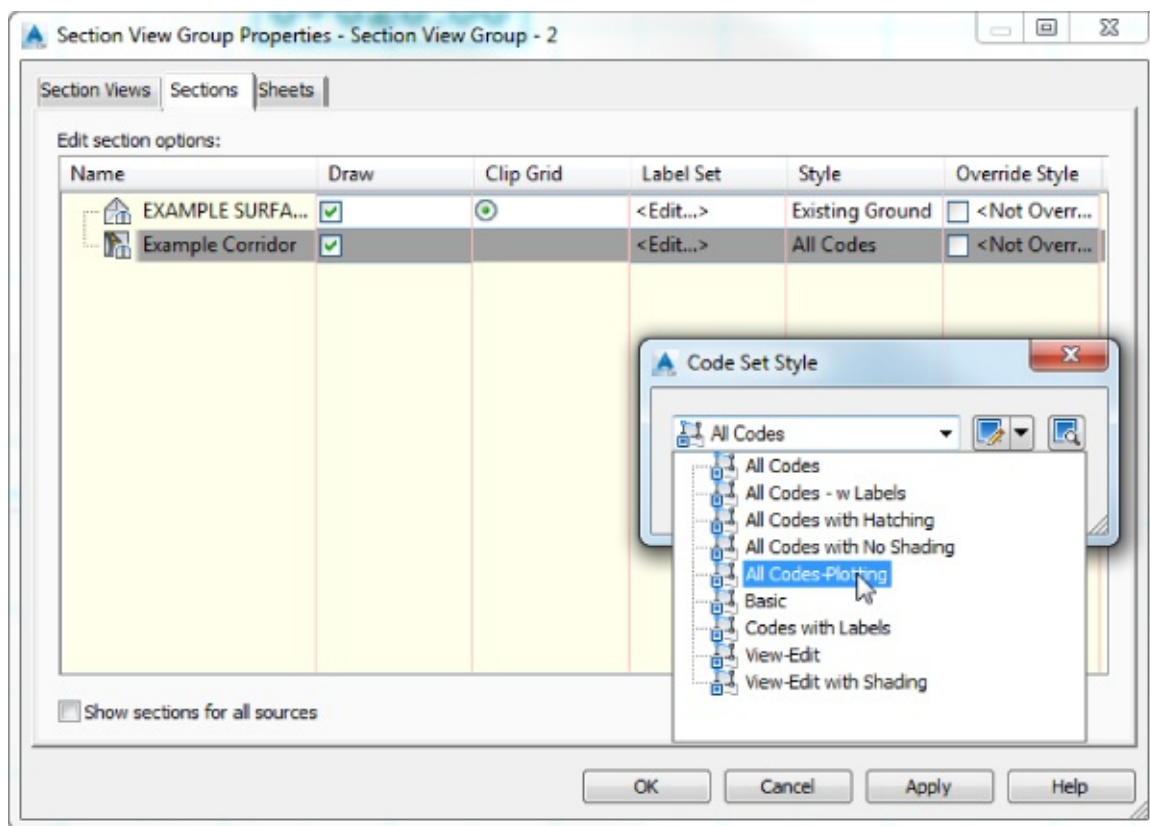


Figure 18.56 Setting the code set style current on the section views

10. Click OK again to complete the changes to the Section View Group Properties dialog. Your section view should resemble [Figure 18.57](#).

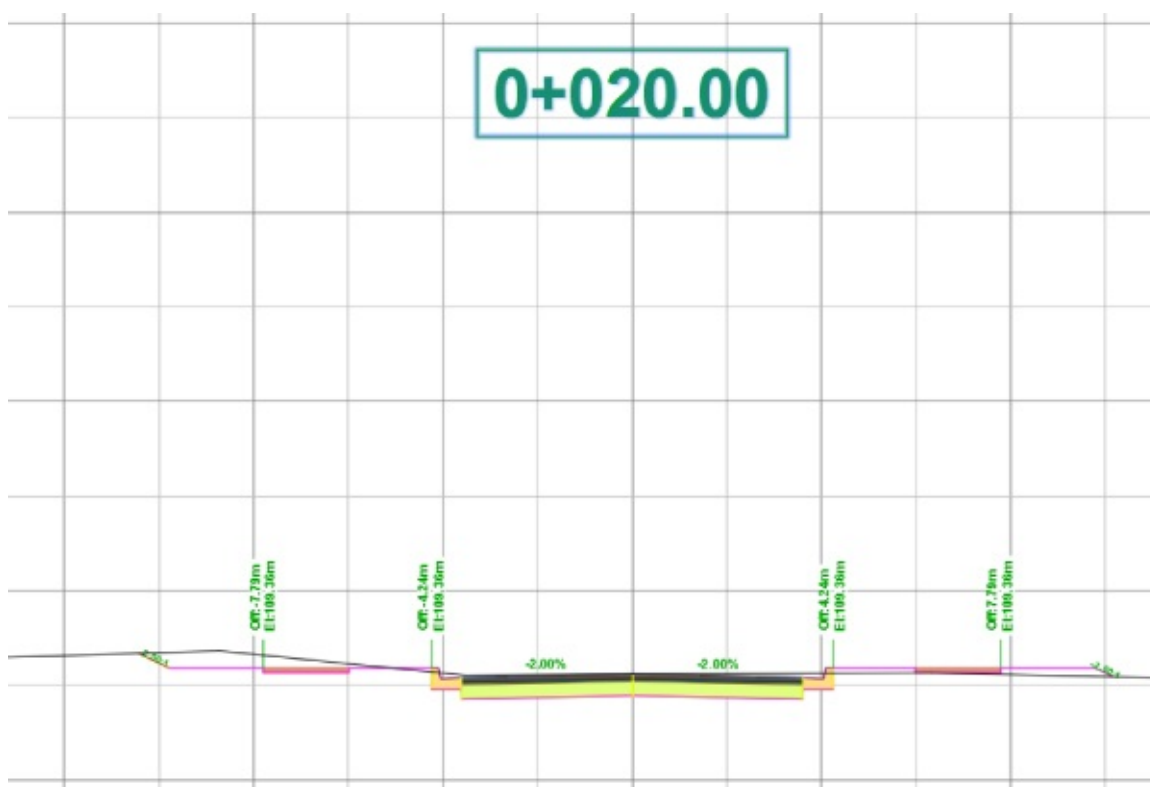


Figure 18.57 New code set style applied to the : section view

The created section views use the legacy labeling for points. We will now use the newly introduced feature of labeling corridor sections using section labels for corridor points, instead of code sets.

11. From the Settings tab of Toolspace, expand Section > Label Styles > Corridor Points. Right-click the

branch and choose New.

12. In the Information tab name this new style **Corridor Points**.
13. In the Layout tab, for the Line component set Fixed Length to **2** (**40** mm for metric users).
14. Still in the Layout tab, change the active Component Name to the one named Point Code. Then set the following:
 - Anchor Component to Line
 - Anchor Point to End
 - Attachment to Bottom Right
 - Y Offset to **0.025** (**0.50** mm for metric users).
15. Still in the Layout tab, change the active Component Name to the one named Offset And Elevation. Then set the following:
 - Anchor Component to Point Code
 - Anchor Point to Bottom Right
 - Attachment to Top Right
 - Y offset to **-0.05** (**-1.00** mm for metric users).
16. In the Contents editor set the precision for both the Subassembly Point Offset and the Subassembly Point Elevation coding to **0.01** using the same steps that we followed through this chapter.
17. In the right pane of the Contents editor, modify the text before the Subassembly Point Offset to show **OS:** and a space and the text before the Subassembly Point Elevation to **EL:** and a space. Also eliminate the comma in between the two components. (See [Figure 18.58](#) for the layout of items needed in the contents.)

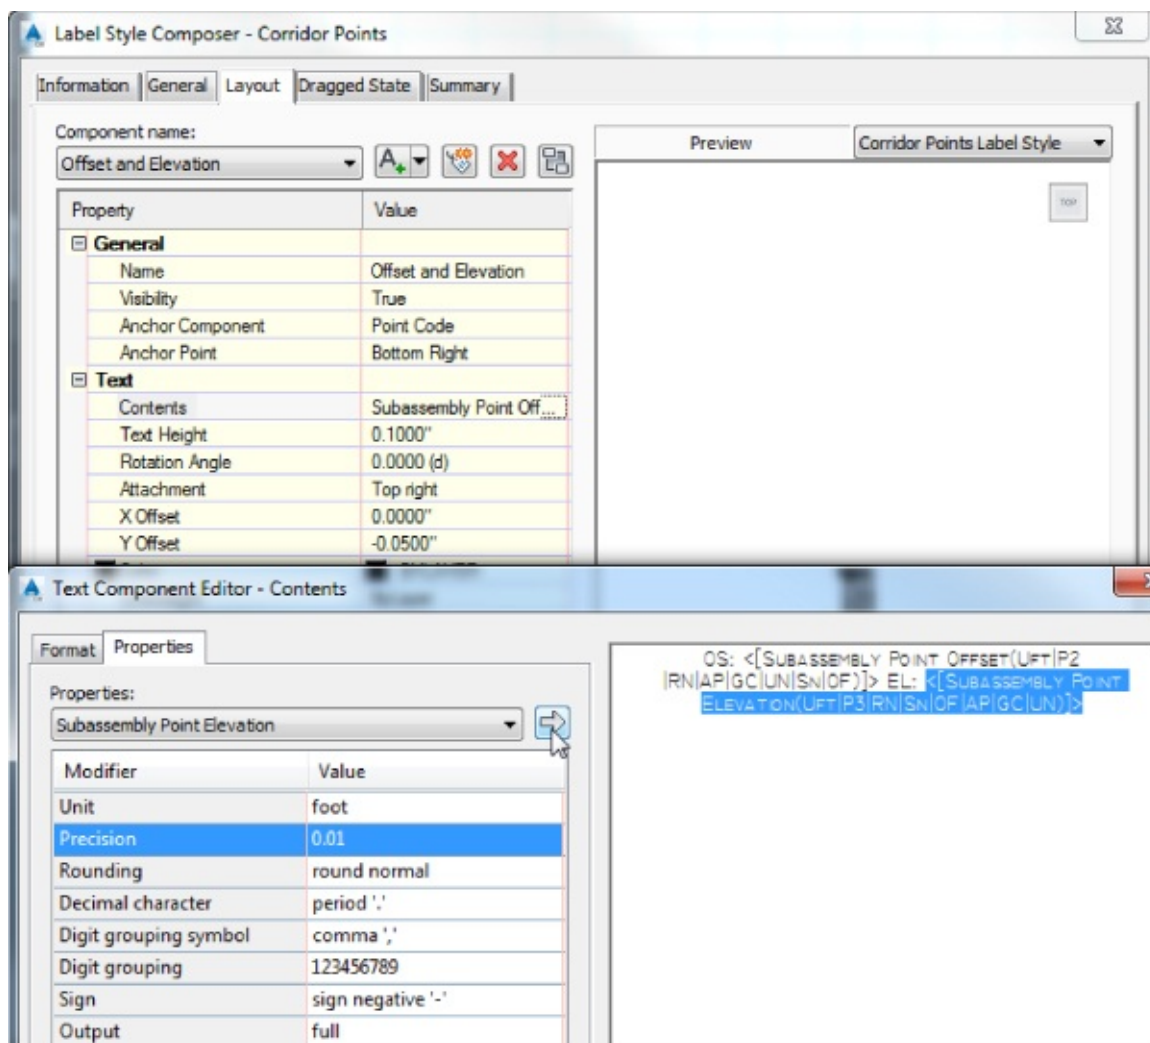


Figure 18.58 Content Editor for the Corridor Points label

18. Click OK to finish creating the style.
19. At the command line type in **CORRIDORSECTIONLABELSCONV** and hit Enter, and at the Select Section view you want to convert: prompt select one of the section views by picking the section view label. Press Enter, and from the next prompt select Corridor Points Style Labels. You will not notice any labels assigned yet.
20. Select the corridor section, and from the contextual tab, within the Labels panel, choose Edit Section Labels for the Section Labels dialog to show up.
21. In the Section Labels dialog, change the Type to Corridor Points, and from Section Corridor Points Label Style, select the Corridor Points and click the Add button. Click OK to dismiss the dialog box. Now you will not notice the new labels applied to the section view. You can convert the labels back and forth by issuing the same command and picking the desired output. Your converted section view will look like [Figure 18.59](#).

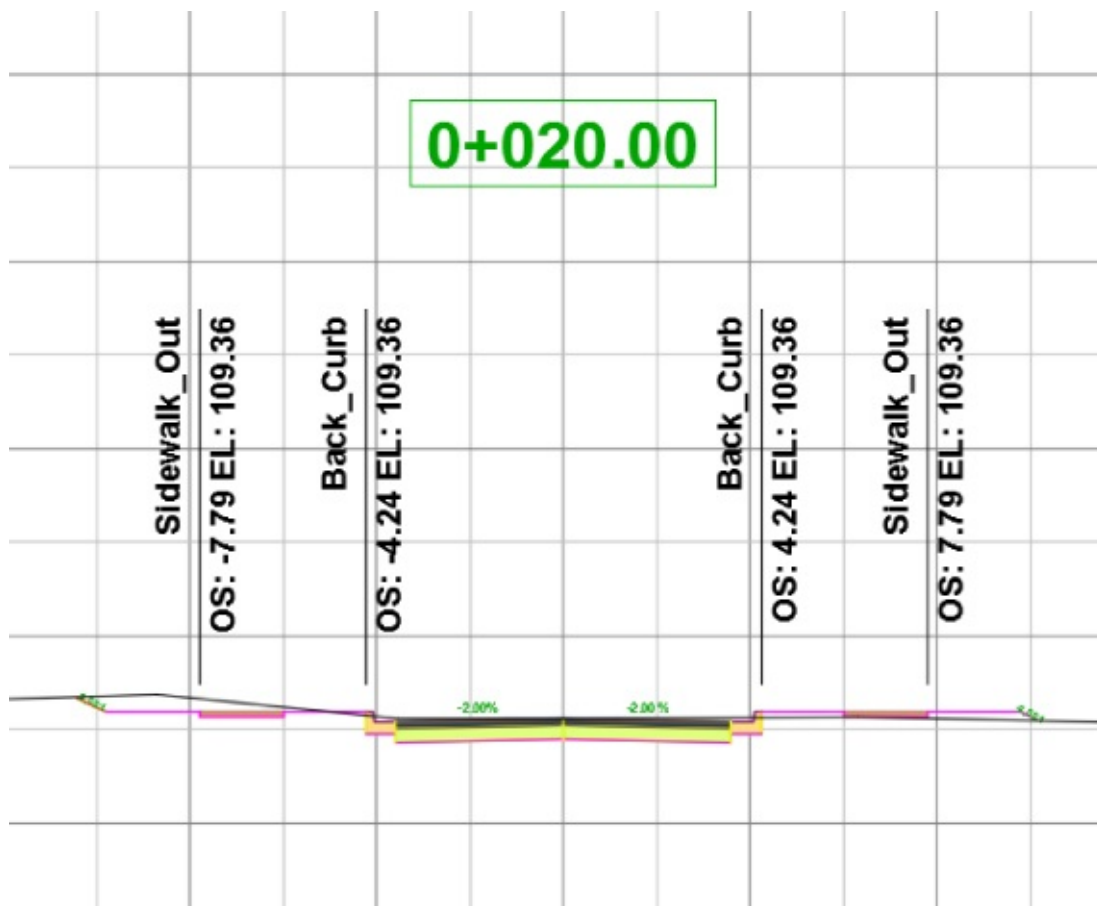


Figure 18.59 Section view using the newly introduced Corridor Points Labels feature

Save and close the drawing. A saved copy of this drawing, 1807_CodeSetStyles_FINISHED.dwg (1807_CodeSetStyles_METRIC_FINISHED.dwg), is available from the book's web page.

It's Just an Expression

Expressions allow you to use properties available in a label and perform calculations. The resulting expression can be used as part of a displayed label or as any of the numerical text settings such as text height, rotation angle, or width.

A frequently seen use of expressions is with surface spot elevations for the display of cut and fill volumes across a volume surface.

1. Open the 1808_Expressions.dwg (1808_Expressions_METRIC.dwg) drawing.
Within the drawing you will notice the outline of a surface that represents the volume comparison in between an existing ground surface and a design surface. You will build the expressions and label style to represent the cut and fill values.
2. From the Settings tab of Toolspace, expand Surface > Label Styles > Spot Elevations. Right-click the Expressions branch and choose New.
3. In the New Expression dialog enter **Surface Negative Value** under Name.

New Expression

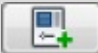
Name: Surface Block Plus Scale

Description:

Expression: IF({Surface Elevation}>0,0.006,.0001^10)

Format result as: Double

OK Cancel Help

4.  In the Expression area, click the left button on the right side of the window. From the drop-down list, select Surface Elevation. The value is added to the Expression field. Next, complete the expression to match the following: {Surface Elevation}* -1.

5. Click OK to complete the creation of the expression.

This expression converts a negative surface value to a positive one.

6. Create a new expression with the name **Surface Block Plus Scale**. Use the same workflow to complete an expression that matches the following (metric users use 0.002): **IF** ({Surface Elevation}>0,0.006,.0001^10). Click OK.

New Expression

Name: Surface Block Minus Scale

Description:

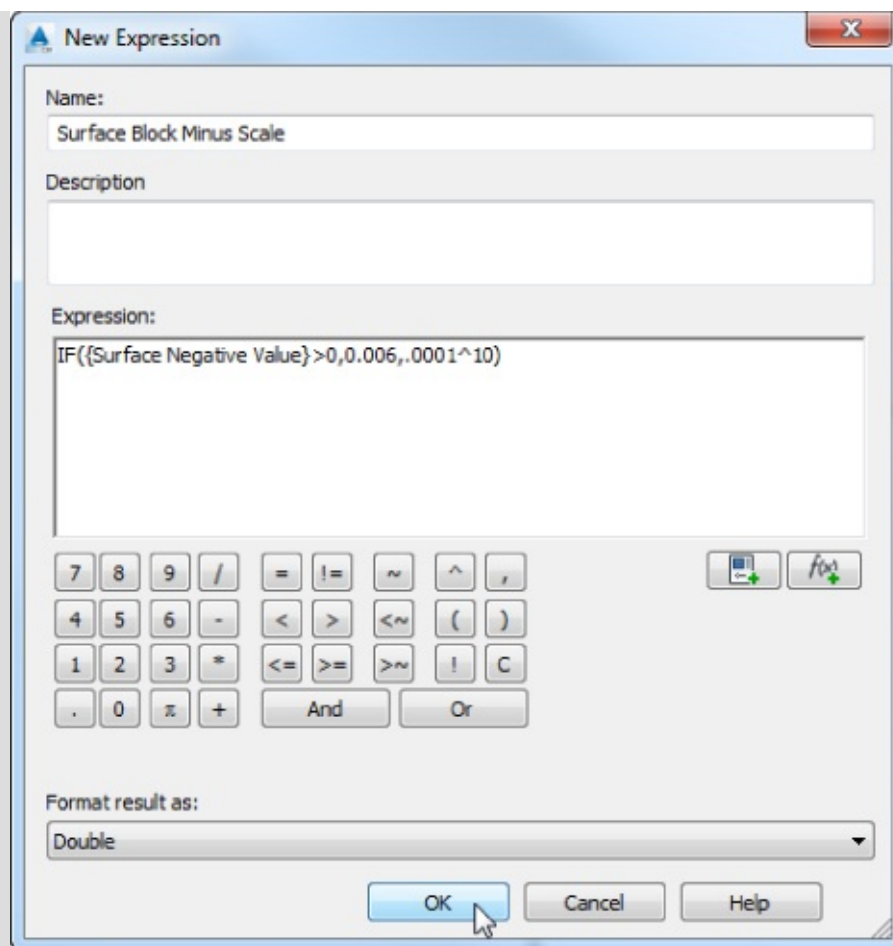
Expression: IF({Surface Negative Value}>0,0.006,.0001^10)

Format result as: Double

OK Cancel Help

This expression represents a logical IF statement that checks if the Surface Elevation value is larger than 0, and for the true value it assigns a value of 0.006 (0.002 for metric users); otherwise, it assigns a very large micro value not visible to the eye. This statement will be used in the definition of the Fill Values for the label.

7. Create a new expression and name it **Surface Block Minus Scale**. Use the same workflow to complete an expression to match the following (metric users use 0.002): **IF({Surface Negative Value}>0,0.006,.0001^10)**.



This expression represents a logical IF statement that checks if the Surface Negative Value is larger than 0, and for the true value it assigns a value of 0.006 (0.002 for metric users); otherwise, it assigns a very large micro value not visible to the eye. This statement will be used in the definition of the Cut Values for the label.

8. From the Settings tab of Toolspace, expand Surface > Label Styles and right-click Spot Elevation to choose New.
9. In the Information tab enter as name **Spot Cut Fill**. Switch to the Layout tab.
10. Delete all components in the list and click the Component button to create the following components: a text component with the Name of **Cut Value**, a text component with the name of **Fill Value**, a block component with the name of **Cut_Block**, and a block component with the name of **Fill_Block**.
11. For the Fill_Block component set the following:
 - Anchor Component to Feature
 - Anchor Point to Middle Center
 - Block Name to Fill_Block (Browse to find it by clicking within the cell and then select it from the Select Block dialog.)
 - Block Height to Surface Block Plus Scale (Click in the cell and from the drop-down arrow select the expression value mentioned previously.)
 - Color to Green
12. For the Cut_Block component set the following:

- Anchor Component to Feature
- Anchor Point to Middle Center
- Block Name to Cut_Block (Browse to find it by clicking within the cell and then select it from the Select Block dialog.)
- Block Height to Surface Block Minus Scale (Click in the cell and from the drop-down arrow select the expression value mentioned previously.)
- Color to Red

13. For the Fill Value component set the following:

- Anchor Component to Fill_Block
- Anchor Point to Middle Right
- Contents to Surface Elevation with two decimals
- Text Height to Surface Block Plus Scale (Click in the cell and from the drop-down arrow select the expression value mentioned previously.)
- Attachment to Middle Left
- Color to Green

14. For the Cut Value component set the following:

- Anchor Component to Cut_Block
- Anchor Point to Middle Right
- Contents to Surface Negative Value with two decimals
- Text Height to Surface Block Minus Scale (Click in the cell and from the drop-down arrow select the expression value mentioned previously.)
- Attachment to Middle Left
- Color to Red.

Click OK to complete the definition of the style.

15. Select the surface by selecting the boundary, and from the contextual tab, Labels & Tables panel, expand the Add Labels button and choose Add Surface Labels to bring up the Add Labels dialog.

16. In the Add Labels dialog Feature will be set to Surface. Set the Label type to Spot Elevations On Grid, and from the Spot Elevation Label Style choose Spot Cut Fill label and set the Marker style to _No Markers. Click the Add button.

17. At the Select a surface <or press enter key to select from the list>: prompt, click the green outline of the displayed surface. Otherwise press Enter, and from the Select A Surface dialog select EGvsFG surface and click OK.

18. At the Specify a grid basepoint: prompt, using your Endpoint Osnap (F3 key enables Osnap), select the lower-left corner of the displayed rectangle.

19. At the Grid Rotation prompt, press Enter to accept the default value of 0.

20. At the Grid X spacing, enter **10** (**3** for metric users) and press the Enter key.

21. At the Grid Y spacing, enter **10** (3 for metric users) and press the Enter key.
22. At the Specify the upper right location of the grid: prompt, using again the Endpoint Osnap, select the top-right corner of the displayed rectangle.
23. At the Change the size or rotation of the grid/grid squares [Yes No] <No>: prompt, accept the default No entry by pressing the Enter key.

The following figure shows the result of the surface labeling.



The following happens in the background: for each of the spot elevations in the drawing, for the positive (fill) values, the fill block and label are displayed, while the cut block and label are resized by a scale that makes them “invisible.” At the same time, for a negative value, the opposite happens. Expressions made this possible.

Save and close the drawing. A saved copy of this drawing, 1808_Expressions_FINISHED.dwg (1808_Expressions_METRIC_FINISHED.dwg), is available from the book's web page.

The Bottom Line

Override individual labels with other styles. In spite of the desire to have uniform labeling styles and appearances between alignments within a single drawing, project, or firm, there are always exceptions. Using the Ctrl+click method for element selection, you can access commands that let you modify labels and even change their styles.

Master It Open the drawing MasterIt_1801.dwg (MasterIt_1801_METRIC.dwg). Create a copy of the Perpendicular With Tick Major Station style called **Major With Marker**. Change Tick Block Name to **Marker Pnt**. Replace some (but not all) of your major station labels with this new style.

Create a new label set for alignments. Label sets let you determine the appearance of an alignment's

labels and quickly standardize that appearance across all objects of the same nature. By creating sets that reflect their intended use, you can make it easy for a designer to quickly label alignments according to specifications with little understanding of the requirement.

Master It Continue working in the MasterIt_1801.dwg (MasterIt_1801_METRIC.dwg) file if you completed the previous exercise, or open the MasterIt_1801_FINISHED.dwg (MasterIt_1801_METRIC_FINISHED.dwg) file. Create a new label set containing only the new major station label defined in the previous exercise, and apply it to all the alignments in that drawing.

Create and use expressions. Expressions give you the ability to add calculated information to labels or add logic to label creation.

Master It Continue working in the MasterIt_1801.dwg (MasterIt_1801_METRIC.dwg) file or open the MasterIt_1802_FINISHED.dwg (MasterIt_1802_METRIC_FINISHED.dwg) file, and create an expression called Top of Curb that adds 0.5' (0.15 m) to a surface elevation. Use the expression in a spot elevation label that shows both the surface elevation and the expression-based elevation to two decimal precision.

Apply a standard label set to profiles. Standardization of appearance is one of the major benefits of using Civil 3D styles in labeling. By applying label sets, you can quickly create plot-ready profile views that have the required information for review.

Master It Continue working in the MasterIt_1801.dwg (MasterIt_1801_METRIC.dwg) file or open the MasterIt_1803_FINISHED.dwg (MasterIt_1803_METRIC_FINISHED.dwg) file, and apply the Road Profile Labels label set to all layout profiles.

Chapter 19

Object Styles

As you learned in the previous chapter, styles control the display properties of labels, but they also control the display properties of Autodesk® AutoCAD® Civil 3D® objects such as points, surfaces, alignments, profile views, pipes, sections, and so on.

Alignments are composed of components such as lines, curves, and spirals. Surfaces contain contours, triangles, and points. A point has a very important marker component. Object styles enable you to control which components are displayed and how they are displayed. Traditionally, you control the display of such items with layers and AutoCAD properties. Styles offer a quick way to change an object's display state for the purpose of plotting, editing, or analysis.

In this chapter, you will learn to

- Override object styles with other styles
- Create a new surface style
- Create a new profile view style

Getting Started with Object Styles

Before you get your hands on specific object styles and begin working with them, you should understand some general things all styles have in common.

Certification Objective

There are several ways to enter the various dialogs used for editing styles. The easiest, most direct way to access any Style dialog is from the Settings tab. Right-click any style you see listed and select Edit, as shown in [Figure 19.1](#).

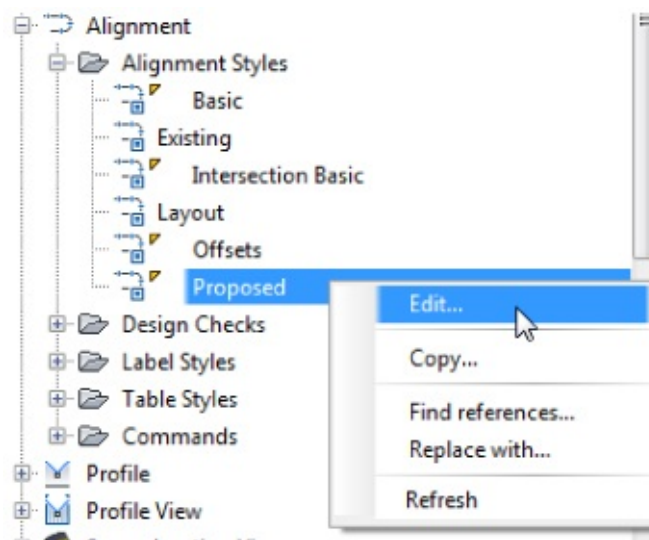



Figure 19.1 Every style can be edited by right-clicking the style name from the Settings tab of Toolspace.

 You can also enter a Style dialog from the Information tab of the Object Properties dialog of any object by clicking the Edit button. [Figure 19.2](#) shows the active style on a surface, with the Edit button to

the right. Editing at this level affects all objects that use the style, the same as it would if you had entered the style from the Settings tab. The downside to editing a style in this manner is that you will not immediately be able to click Apply to see your change because the Object Properties dialog is open beneath it. You'll need to exit the Style dialog and click Apply at the object level before you'll see your style update.

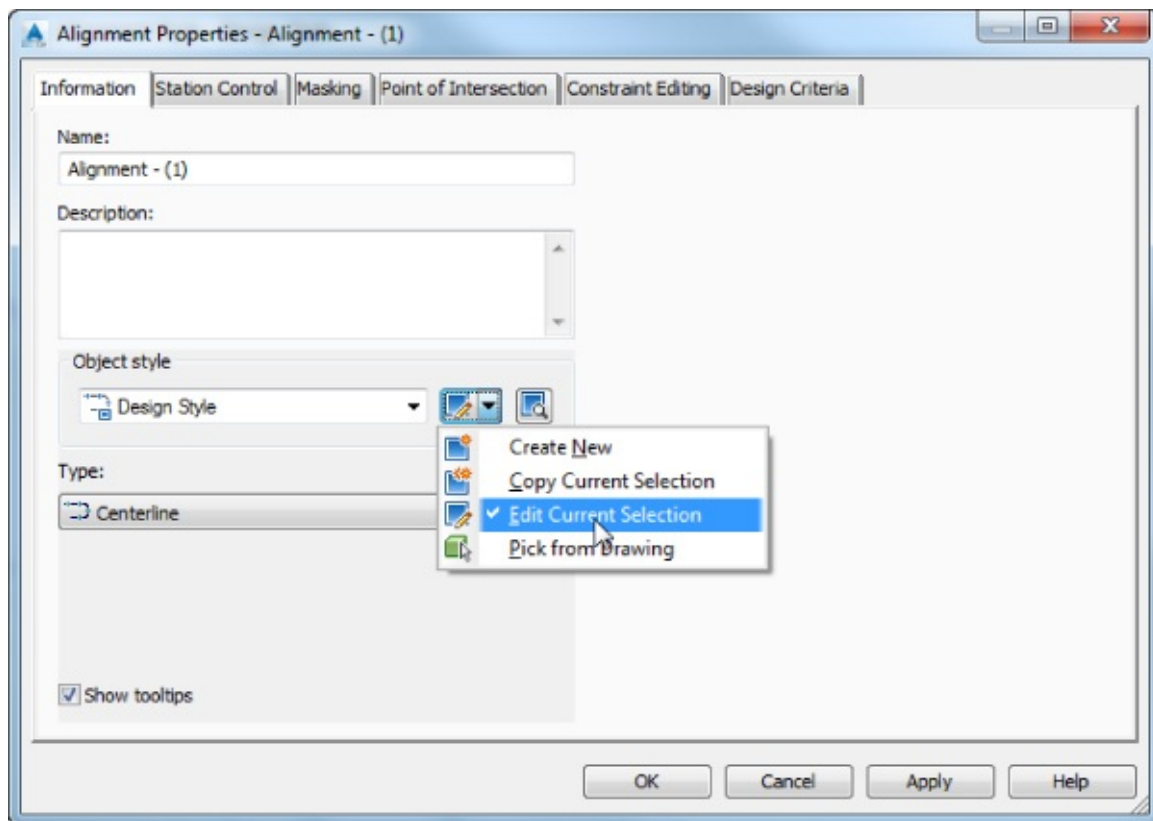



Figure 19.2 An object's properties reveal the current style, which can be edited, as in this Alignment Properties dialog.




Real World Scenario

Making Sense of Child Styles and Overrides

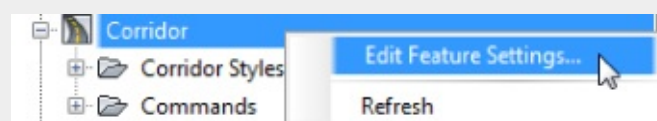Civil 3D styles are configurable at several levels. In Chapter 1, “The Basics,” you learned that the Drawing Settings dialog was where you make adjustments to the overall settings that affect all styles, such as setting precision values and object layers. On the object level in the Settings tab, you will find Feature Settings, which you can use to override any settings being applied by Drawing Settings. The Feature Settings dialog is also used to assign default styles. Finally, inside the object level you will find Command Settings, where you can override settings applied by Drawing or Feature Settings at the command level. For example, when using the `CreateProfileFromSurface` command, you are usually creating an existing profile so you could configure the settings of that command to use an existing surface style. These layers of parent-child settings are often referred to as hierarchical settings.



Styles themselves can be used to override other styles. These other styles are referred to as child styles. For example, a precision of two decimal places (0.00) may be adequate for station labels. However, when creating corridors, you may find it advantageous to see more decimal places of precision. Set the station precision to 0.00 in Drawing Settings. Then farther down on the Settings tab, right-click Corridor and select Edit Feature Settings.

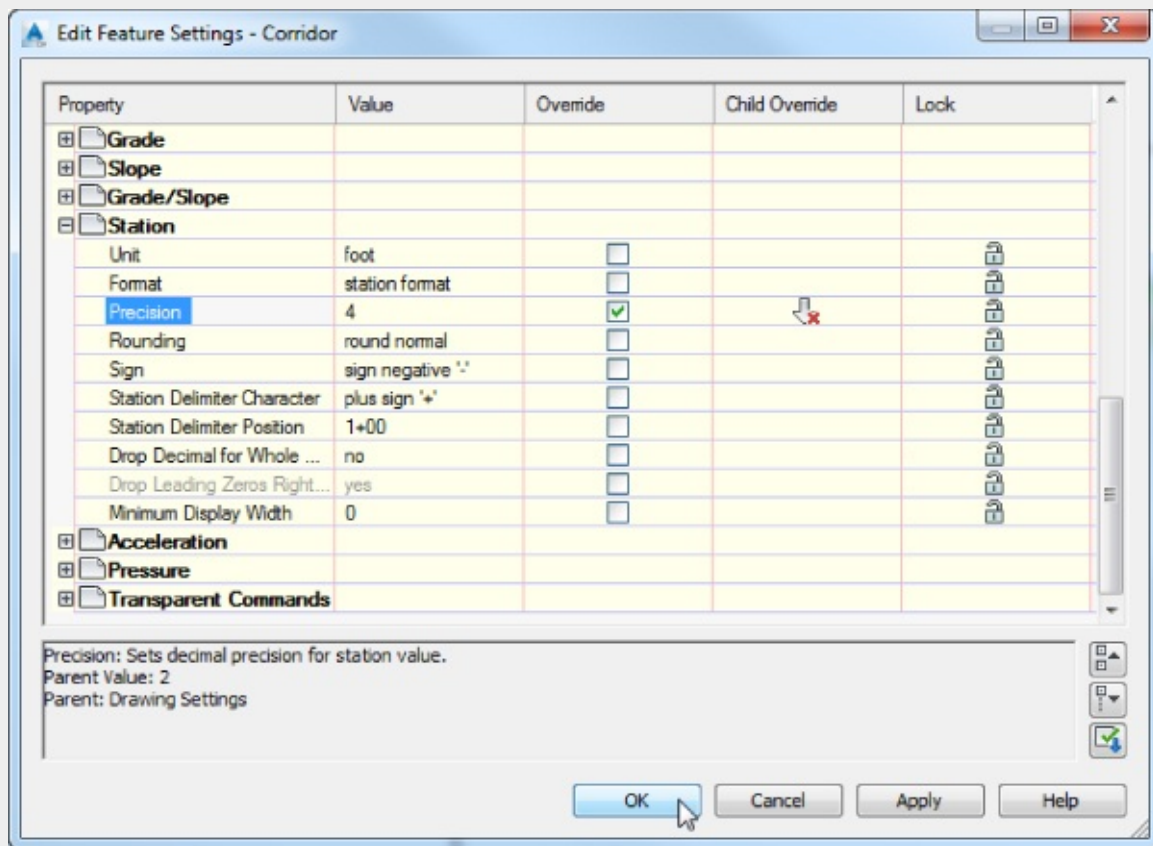

Inside the Edit Feature Settings – Corridor dialog, you might experience déjà vu from when you edited the Ambient Settings tab in the Drawing Settings dialog. All the same settings (and a few more object-specific ones) are here. The difference is that changing the setting here will affect only corridors.

The check mark in the Override column indicates that this setting differs from settings higher up in Drawing Settings. At the bottom of the dialog further information is provided regarding the parent setting and its value.

An arrow in the Child Override column indicates that farther down the chain of command a style or setting differs. To force these subordinate styles or Command Settings to match the style of the parent, click the arrow so that a red X appears. The red X indicates that the change you make, in the dialog you are looking at, will be pushed to its child styles or Command Settings.

The Lock column allows you to lock a setting, which prevents it from being changed from Command Settings.

As you are designing the styles for use in your office, be sure to keep an eye on the overrides that are set. Any override styles applied can be removed by unchecking the Override column in the Edit Feature Settings dialog.

Frequently Seen Tabs

When creating or editing an object style, you will be opening a Style dialog containing several tabs. Some

of the tabs contain settings that are unique to the object. Some tabs are common to all or several types of objects. In this section, you will learn about those tabs.

Information Tab

The Information tab ([Figure 19.3](#)) contains the field where the name of the style is entered or changed.

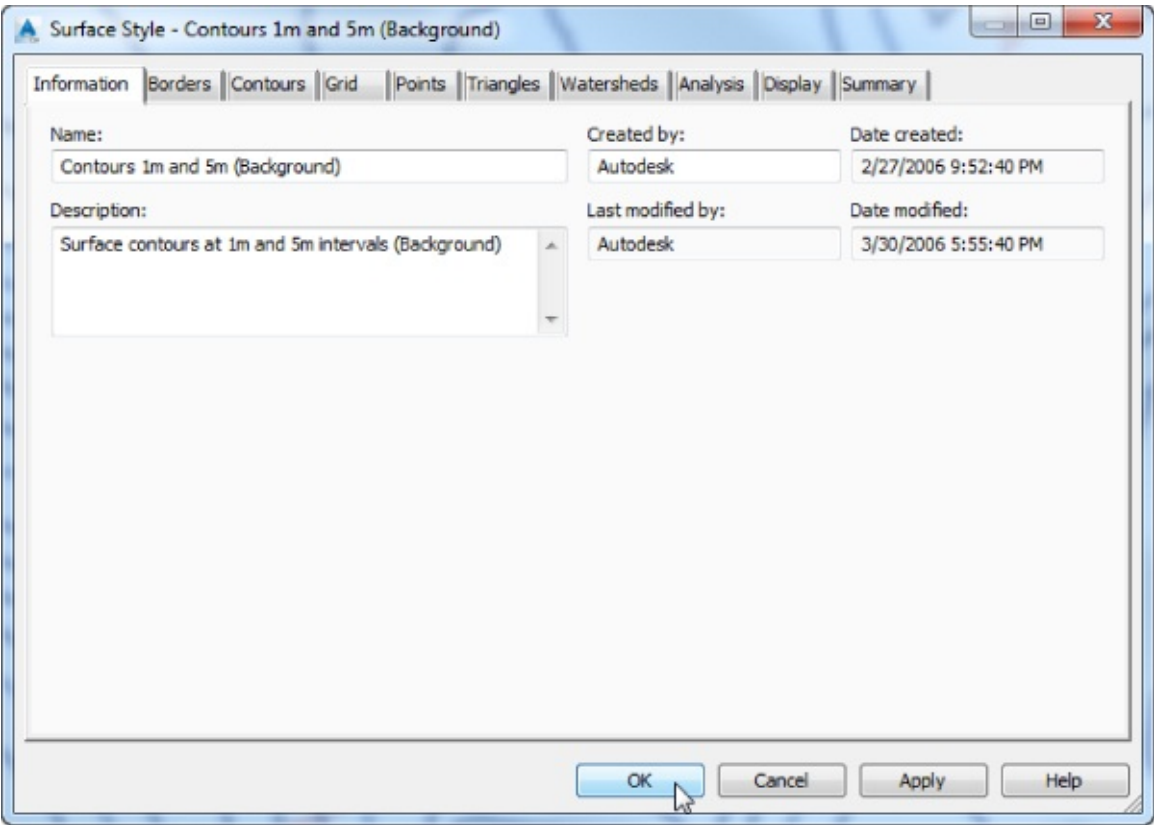


Figure 19.3 The Information tab exists for all object styles.

The description is optional. However, a description may be helpful to others who will be using your template. If you do use descriptions, be sure to revise them when you copy your styles for other purposes to avoid confusing your users. The description can be seen in tooltip form as you search through the Settings tab, as shown in [Figure 19.4](#).

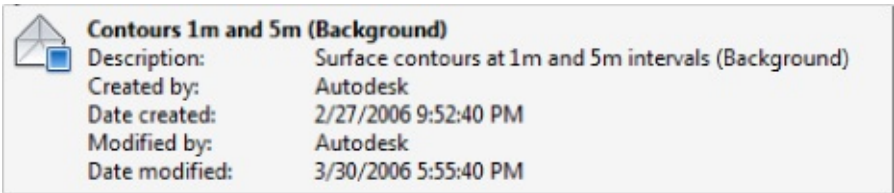


Figure 19.4 Tooltip showing style information, including the description

On the right side of the dialog, you will see the name of the user who created the style, the date when it was created, the last person who modified the style, and the date it was modified. These names are initially pulled from the Windows login information and only the Created By field can be edited.

Display Tab

On the Display tab, you will find a list of components available for display within the object. You will see this tab in every Object Style dialog. The Display tab controls the look of the object in Plan, Model, Profile, and Section view directions. Not every style type will have all of these view directions available. In [Figure 19.5](#), you can see that a surface style has Plan, Model, and Section view directions

with multiple components, a point style has an extra view direction for Profile but with only two components, while a view frame style has only one view direction and one component.

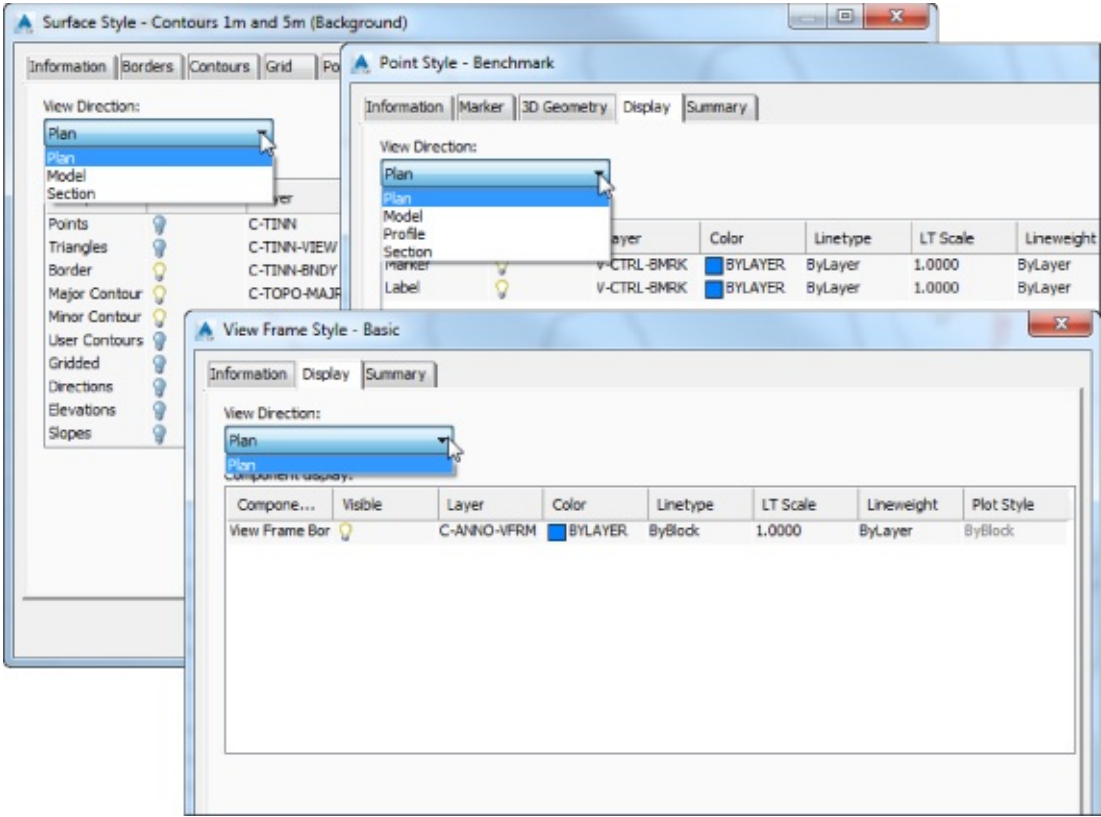


Figure 19.5 The View Direction options and their components for a surface style, a point style, and a view frame style

This is 3D software, so objects exist in three dimensions. View Direction controls the display of an object depending on how you are looking at it. Certain items, such as a profile view, are intended to be seen only in plan, so they do not have multiple view directions listed. Alignments can be seen in plan, model, and section views. Profiles can be seen in profile, model, and section views, as shown in [Figure 19.6](#).

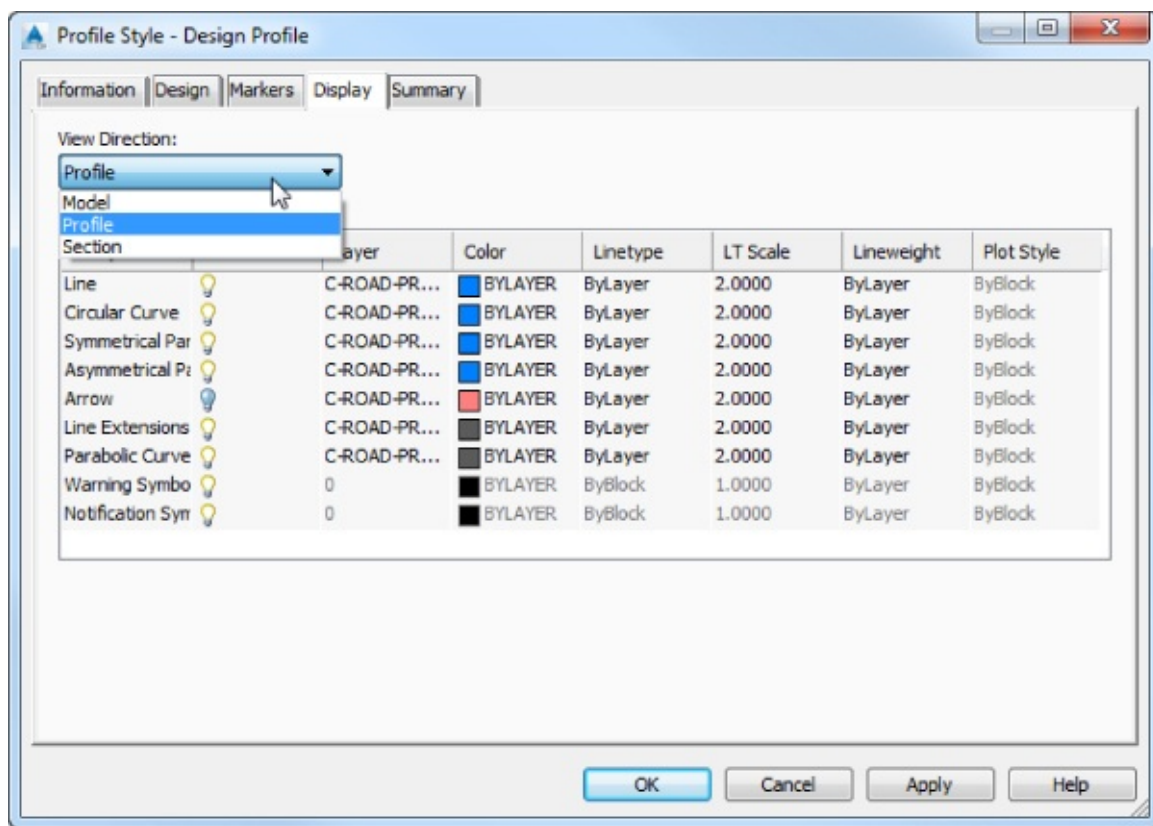


Figure 19.6 The View Direction options for a profile style

While other tabs in an object style control the specifics of *how* certain components look or behave, the Display tab controls *if* the component displays at all. The Visibility lightbulb indicates whether or not the component will be displayed when the style is applied to the object. In the Surface Style dialog shown in [Figure 19.5](#), you can see that borders, major contours, and minor contours will all display for the surface object style, but the other components will not be displayed in plan view. In the Profile Style dialog shown in [Figure 19.6](#), all components will be displayed, except the Arrow component.

Each component can have a layer designation. The component layer will override the display properties of the object layer, which was set initially in the Drawing Settings > Object Layer tab. When the component is set to layer 0, it will display using the display properties of the object layer as long as all other properties on the style's Display tab are set to ByLayer. This is another example of the parent-child settings. A setting of ByBlock will allow you to manage its display settings through the AutoCAD object Properties palette.

Summary Tab

The Summary tab contains a list of all the settings configured on the other tabs of the style's dialog. Settings are editable on the Summary tab. [Figure 19.7](#) shows the Summary tab of a profile style.

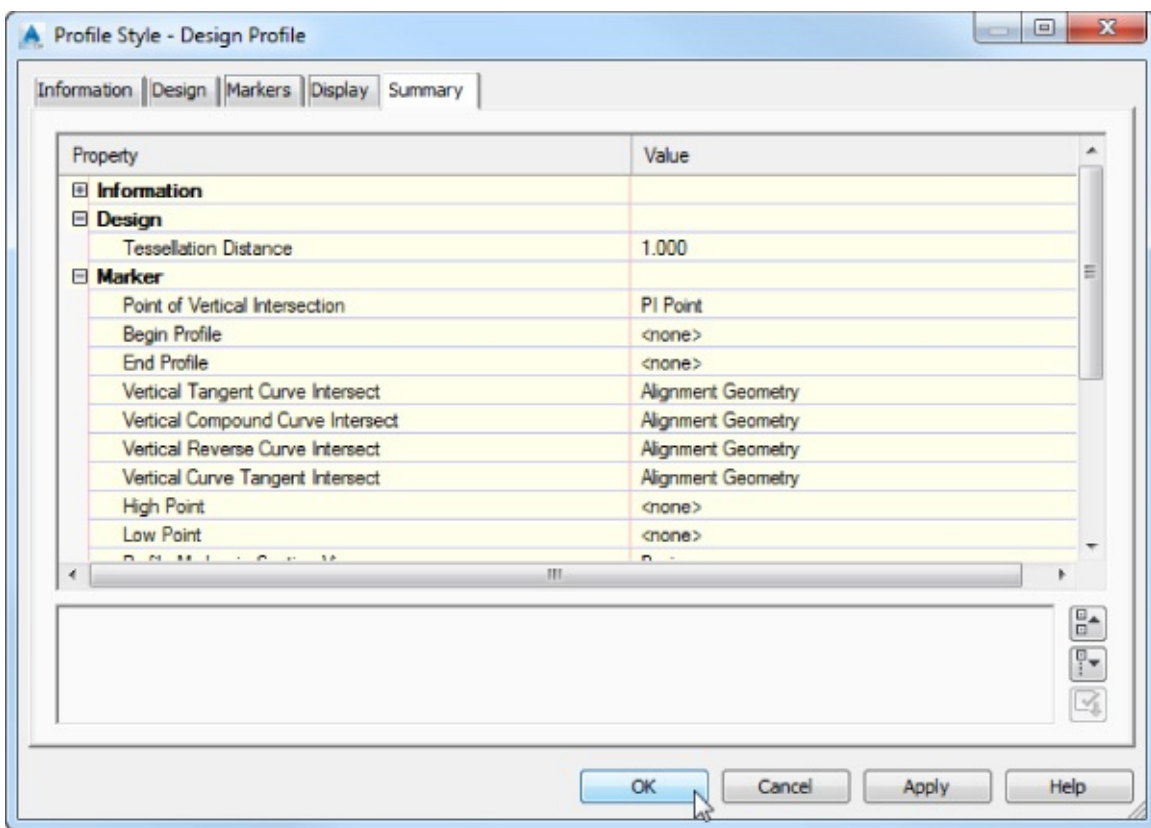


Figure 19.7 The Summary tab of a profile style



You can click the plus (+) or minus (–) button next to each category branch to expand to see further settings. At the bottom-right corner of the dialog are three buttons. The top button collapses all of the category branches, and the middle button expands all of the category branches. The bottom Override All Dependencies button can also be found on a Label Style Summary tab, but it is inactive for object styles. At the bottom of this dialog, additional information will be shown for the property selected.

General Settings

On the Settings tab of Toolspace, the General collection (or branch) contains settings and styles that can be applied to multiple object types in various scenarios. The General branch has three collections:

- Multipurpose Styles
- Label Styles
- Commands

You learned about the Label Styles collection in Chapter 18, “Label Styles,” and now you will look at the Multipurpose Styles and Commands collections.

Multipurpose Styles

If you expand the Multipurpose Styles collection, you will see seven folders, as shown in [Figure 19.8](#).

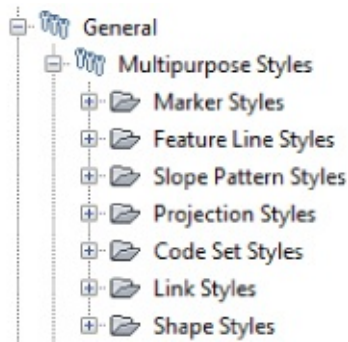



Figure 19.8 General > Multipurpose Styles

These style types are used to control the display of components in various objects. For example, Marker Styles, Link Styles, and Shape Styles are typically used in section views containing corridors and assemblies; whereas Feature Line Styles, shown in [Figure 19.9](#), are used when grading linear features and displaying corridors in plan.

Toggle Toolspace Orientation



Toolspace is shown horizontally in [Figure 19.9](#) and in other figures throughout this chapter for illustration purposes. If you like the way this looks, you can set your Toolspace like this by clicking the Orientation toggle at the top of Toolspace when it is floating (not docked). This will bring the item view to the right side of Toolspace instead of the default location at the bottom.

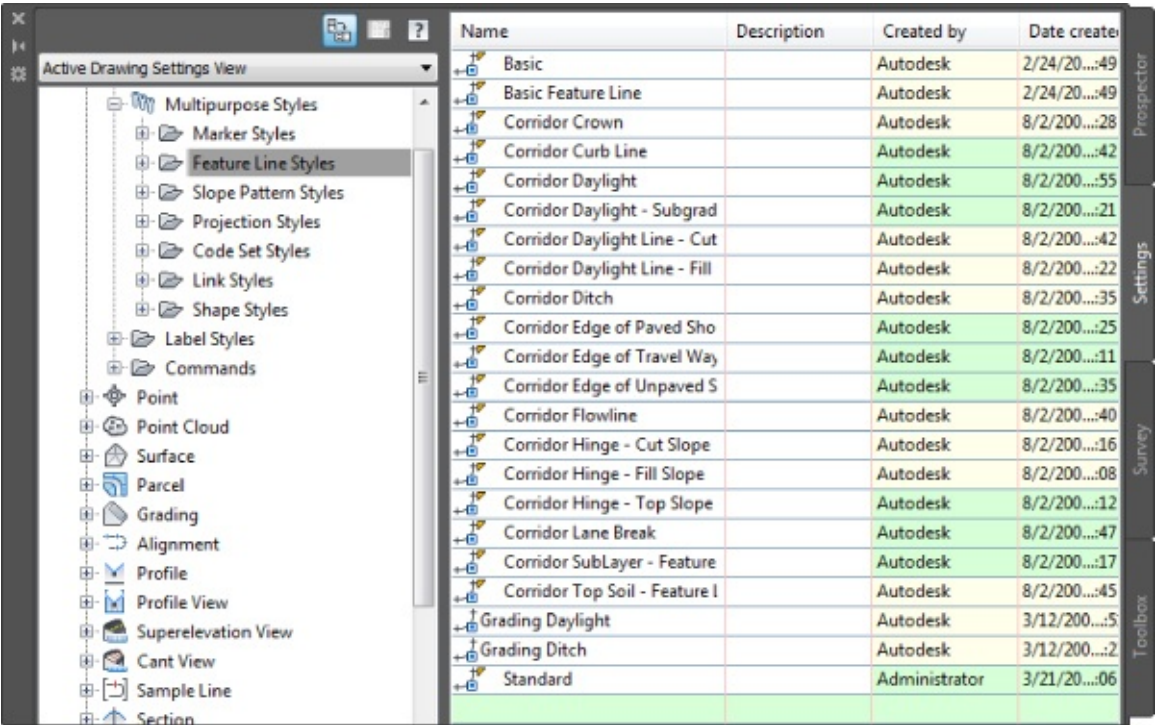


Figure 19.9 The Feature Line Styles collection

Commands

A Commands folder will reside in almost every object branch of the Settings tree. Each item listed in this folder represents a command in that object category and is named after the keystrokes necessary to execute that command at the command line, as shown in [Figure 19.10](#).

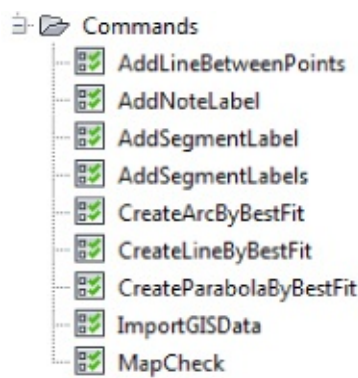


Figure 19.10 The Commands folder

Point and Marker Object Styles

Markers are used in many places throughout Civil 3D. They are called from other styles to show vertices on Civil 3D objects such as feature lines, alignments, profiles, and figures. They can also be attached to the origination point on labels such as alignment station offset labels or surface spot elevations. Markers can even be used to indicate the start of a flow path.

Marker Tab

Marker styles and point styles both contain a Marker tab ([Figure 19.11](#)). The Marker tab controls what symbol or block is used, its rotation, and how it should be sized when it is placed in the drawing.

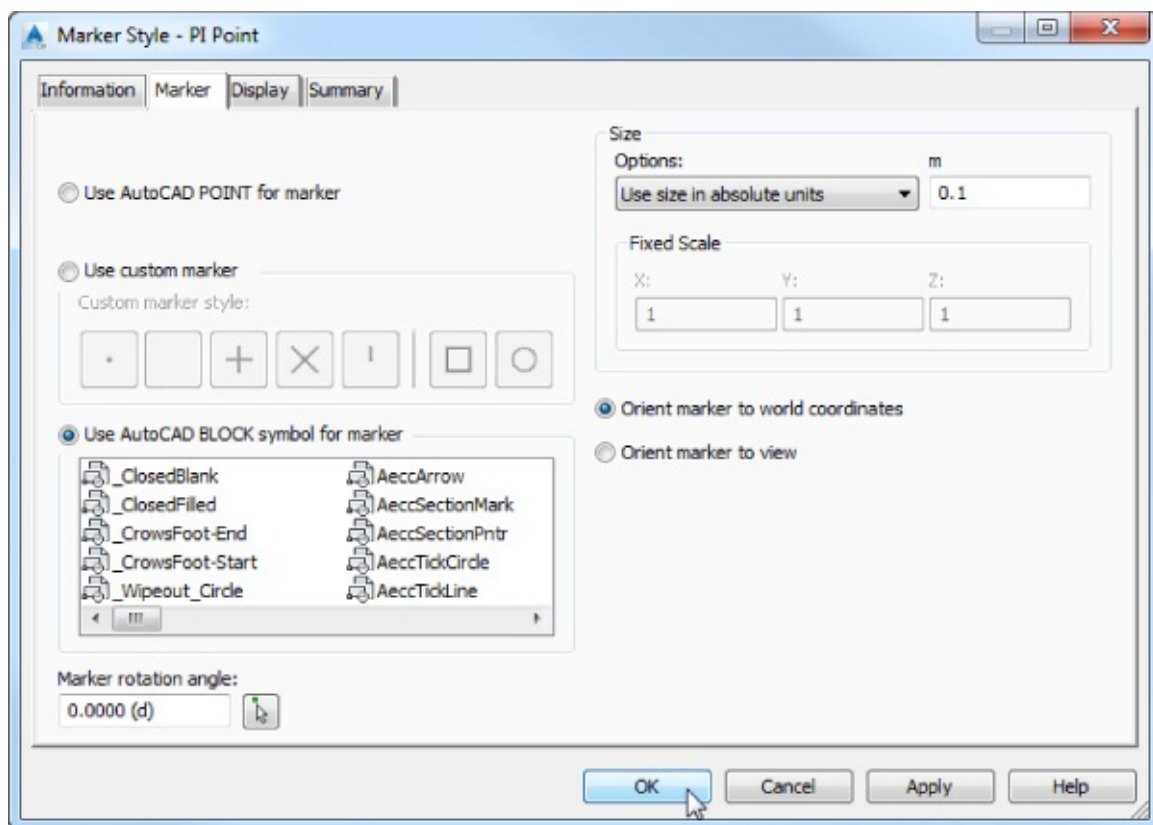


Figure 19.11 The Marker tab for the PI Point Marker style

Three symbol types can be used. Use Custom Marker and Use AutoCAD BLOCK Symbol For Marker are the most popular options. Use AutoCAD POINT For Marker doesn't actually produce an AutoCAD point but uses the AutoCAD point style and size specified by the DDPTYPE dialog. When you choose the Use Custom Marker option, you can produce a marker similar in appearance to an AutoCAD point but it will use the size options on the right side of this tab instead of the DDPTYPE dialog.

When you choose the Use AutoCAD BLOCK Symbol For Marker option, you will be able to access a list of blocks in your drawing. If the block you want to use does not yet exist in the drawing, you can right-click the block list and choose Browse, as shown in [Figure 19.12](#).

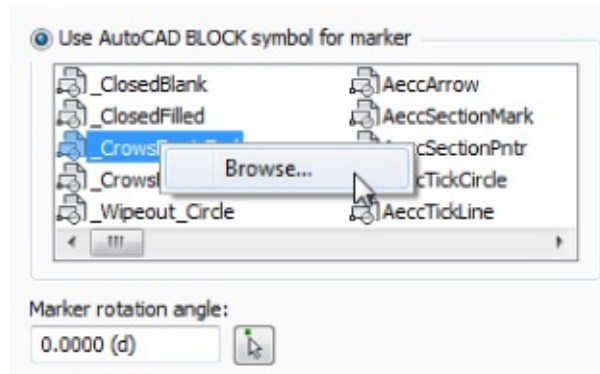


Figure 19.12 Right-click to browse for a block if it is not already defined in your drawing.

The Size options control how the marker is scaled when inserted in the drawing ([Figure 19.13](#)).

Use Drawing Scale Use Drawing Scale allows you to specify the plotted size of the symbol. The modelspace size of the symbol will be the size specified in the style multiplied by your annotation scale.

Use Fixed Scale Use Fixed Scale will scale the symbol based on the X, Y, and Z scale entered in the Fixed Scale area, just like a block. This option will also apply the Fixed Scale factor in the description key set when configured to a point.

Use Size In Absolute Units Use Size In Absolute Units is the option you will use to specify a real-world size for the symbol regardless of scale. For example, if you want a manhole to always show as 5 feet in diameter, you could use this option. In the case of survey points used with description keys, if this option is set to .0833 (1 inch) and a size parameter is included in the point description, the symbol will be scaled to the value measured in the field.

Use Size Relative To Screen Use Size Relative To Screen allows you to specify the size of the symbol as a percentage of your screen. The marker will change size as you zoom in or out similar to how points resize in GIS applications.

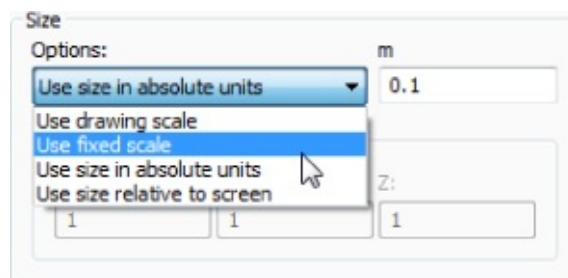


Figure 19.13 The Size options for marker display

Two orientation buttons (as shown on the right side of the dialog in [Figure 19.11](#)) control whether the symbol stays rotated to the world coordinate system or the view.

Create a Marker Style

Now it's time to get your hands on some object styles. You will start with simple styles and work your way up in complexity as this chapter progresses. In this first exercise, you will create a marker style:

1. Start a new blank drawing from the `_AutoCAD Civil 3D (Imperial) NCS` template that ships with Civil 3D. For metric users, use the `_AutoCAD Civil 3D (Metric) NCS` template.
2. From the Settings tab of Toolspace, expand General > Multipurpose Styles > Marker Styles.
3. Right-click Marker Styles and select New.
4. On the Information tab, do the following:
 - a. Set Name to **PI Marker**.
 - b. Add the description **Use to indicate PI in alignments**.

Your login name will be listed in the Created By and Last Modified By fields.
5. On the Marker tab, do the following:
 - a. Click the Use AutoCAD BLOCK Symbol For Marker radio button.
 - b. In the block listing, highlight STA by clicking it.
 - c. Verify that Size Options is set to Use Drawing Scale.
 - d. Set the size to **0.2"** (or 5 mm).
 - e. Leave all other Marker settings at their defaults.
6. On the Display tab with View Direction set to Plan, do the following:
 - a. Click in the Layer column for the Marker component to display the Layer Selection dialog.
 - b. In the Layer Selection dialog, set the layer to C-ROAD-STAN and click OK.

Note that you may need to widen the column to view the full layer name.
 - c. Click in the Color column for the Marker component to display the Select Color dialog.
 - d. In the Select Color dialog, click the ByLayer button and click OK.
7. Repeat step 6 for View Direction set to Model, Profile, and Section.
8. Click OK to complete the creation of a new marker style.
9. From the Application menu, select Save As > Drawing Template.
10. Set File Name to **1901_PointObject.dwg (1901_PointObject_METRIC.dwg)** and click Save.

Your PI marker will now be listed in the General > Multipurpose Styles > Marker Styles branch. Remember that you can import this style into any other drawing by using the Import Styles button found in the Styles panel of the Manage tab, and if you create this marker in a drawing template, it is accessible for any future projects that use start with this template. Keep this drawing file open for the next portion of the exercise.

Create a Survey Point Style

Survey point styles contain many of the same options as marker styles. As you work through the following example, you will perform many of the same steps as you did in the previous exercise:

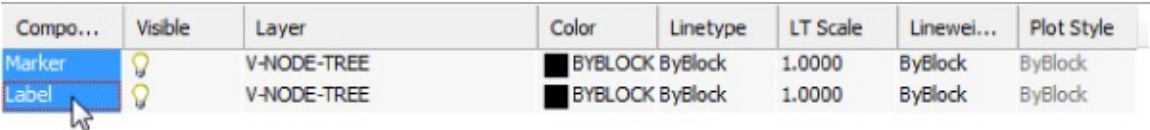
1. Continue working in the drawing file from the previous exercise. You need to have completed the previous exercise.
2. From the Settings tab of Toolspace, expand Point > Point Styles.

- 3. Right-click Point Styles and select New.
- 4. On the Information tab, do the following:
 - a. Set Name to **TRUNK**.
 - b. Add the description **Simple circle representing trunk diameter in inches** (or **Simple circle representing trunk diameter in mm**).
- 5. On the Marker tab, do the following:
 - a. Click the Use Custom Marker radio button.
 - b. Click the Blank Marker option from the group of symbols on the left.
 - c. Click to add the Circle option on the right.
 - d. Verify that Size Options is set to Use Size In Absolute Units, and set the size to **0.0833** (or **0.001** for metric).

This value will scale down the symbol so the trunk diameter represents inches (or millimeters). Leave all other Marker settings at their defaults.

- 6. On the Display tab with View Direction set to Plan, do the following:
 - a. Click in the Layer column for the Marker component to display the Layer Selection dialog.
 - b. In the Layer Selection dialog, set the Marker layer to V-NODE-TREE and click OK.
 - c. Use steps a and b to set the Layer for the Label component to V-NODE-TREE. Leave the other settings at their defaults.

Hint! To save time in this step, you could alternatively use the Shift key to multiselect the Marker and Label components, as shown in [Figure 19.14](#). By selecting both first, when you select the layer for one component, it will apply to both components.



The screenshot shows a table with columns: Compo..., Visible, Layer, Color, Linetype, LT Scale, Linewei..., and Plot Style. The 'Marker' and 'Label' rows are highlighted in blue, indicating they are selected. A mouse cursor is pointing at the 'Label' row. Both rows have a lightbulb icon in the 'Visible' column, indicating visibility is on. The 'Layer' column for both rows shows 'V-NODE-TREE'. The 'Color' column shows a black square icon followed by 'BYBLOCK ByBlock'. The 'LT Scale' column shows '1.0000'. The 'Linewei...' column shows 'ByBlock'. The 'Plot Style' column shows 'ByBlock'.

Compo...	Visible	Layer	Color	Linetype	LT Scale	Linewei...	Plot Style
Marker		V-NODE-TREE	BYBLOCK ByBlock		1.0000	ByBlock	ByBlock
Label		V-NODE-TREE	BYBLOCK ByBlock		1.0000	ByBlock	ByBlock

Figure 19.14 Use the Shift key on your keyboard as you click the components to multiselect.

- 7. Repeat step 6 for View Direction set to Model, Profile, and Section, turning on the Visibility lightbulb for all components.
- 8. Click OK to complete the creation of a new point style.

You can save and keep this drawing file open to continue to the next exercise, or use the saved copy of this drawing file, 1901_PointObject_FINISHED.dwg (1901_PointObject_METRIC_FINISHED.dwg), available from the book's web page at www.sybex.com/go/masteringcivil3d2015.

Creating Linear Object Styles

In this section, you will see some linear styles such as alignments, profiles, and parcels. Hopefully, you are already seeing that concepts from one type of style often apply to other types of styles. For alignment styles and profile styles, this is especially true.

Both alignment styles and profile styles have a Design tab, as shown in [Figure 19.15](#). In the case of alignment styles, the Enable Radius Snap option restricts the grip-edit behavior of alignment curves. If you enable this option and set a value of 0.5', the resulting radius value of curves will be rounded to the nearest 0.5'. In the case of profiles, the curve tessellation distance is a little more abstract. *Curve tessellation* refers to the smoothing factor applied to the profile when viewing it in 3D. Most users leave these settings at their default values.

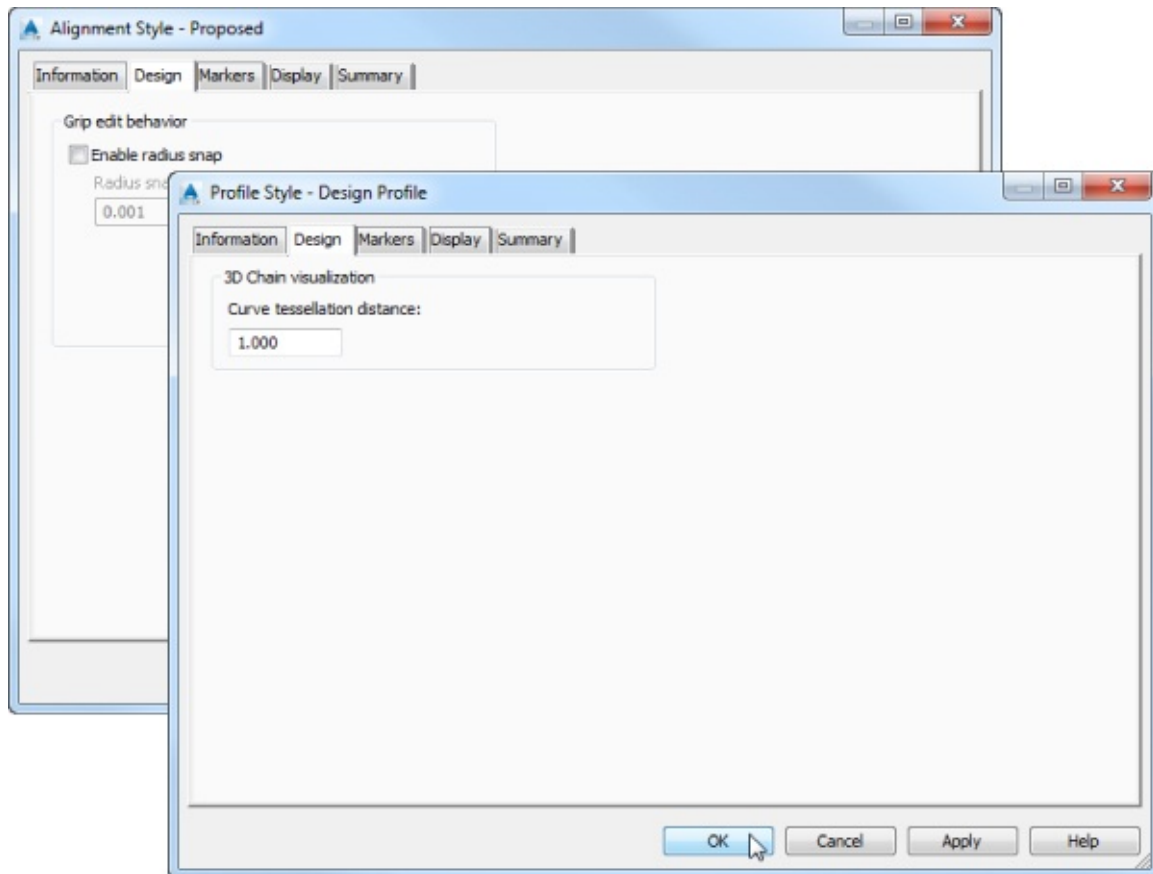


Figure 19.15 Design tabs exist in both alignment and profile object styles.

Alignment styles and profile styles have very similar Markers tabs. This tab is where you can place markers (like the one you created in the first exercise of the chapter) at specific geometry points. [Figure 19.16](#) shows the markers assigned to various locations along an alignment.

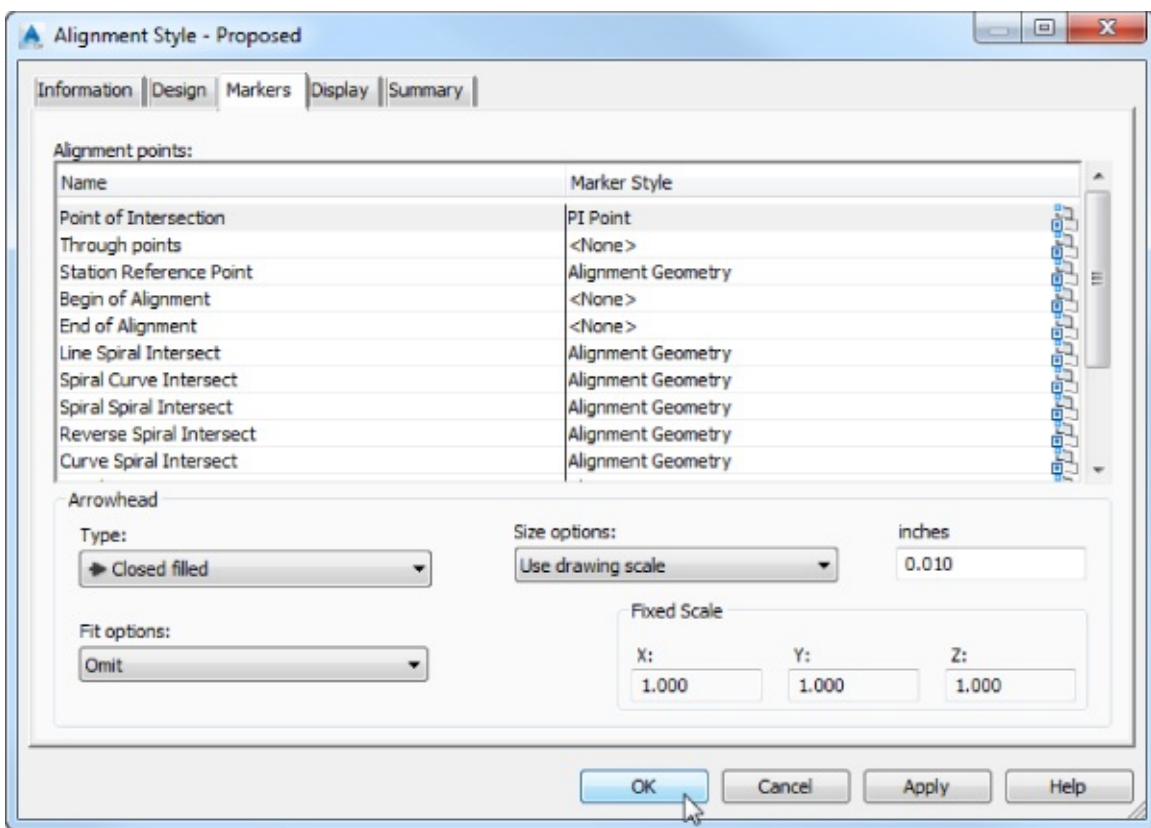


Figure 19.16 Markers for an alignment style

At the bottom of [Figure 19.16](#), you see Arrowhead information. Both alignment styles and profile styles have the option of showing a direction arrow on each segment. You may omit this by turning the Arrow component off in the Display tab or by setting the component to a layer that is set to No Plot. When designing roundabouts, consider the latter because knowing the direction of an alignment comes in handy, as you saw in Chapter 10, “Advanced Corridors, Intersections, and Roundabouts.”

[Figure 19.17](#) shows some commonly highlighted horizontal geometry points and components in an alignment.

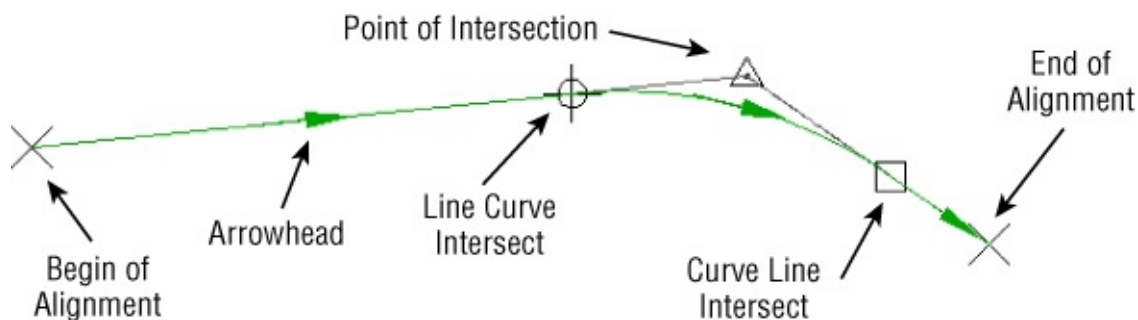


Figure 19.17 Example alignment with alignment marker points labeled

[Figure 19.18](#) shows the Markers tab for the profile style. It looks pretty similar to the alignment Markers tab.

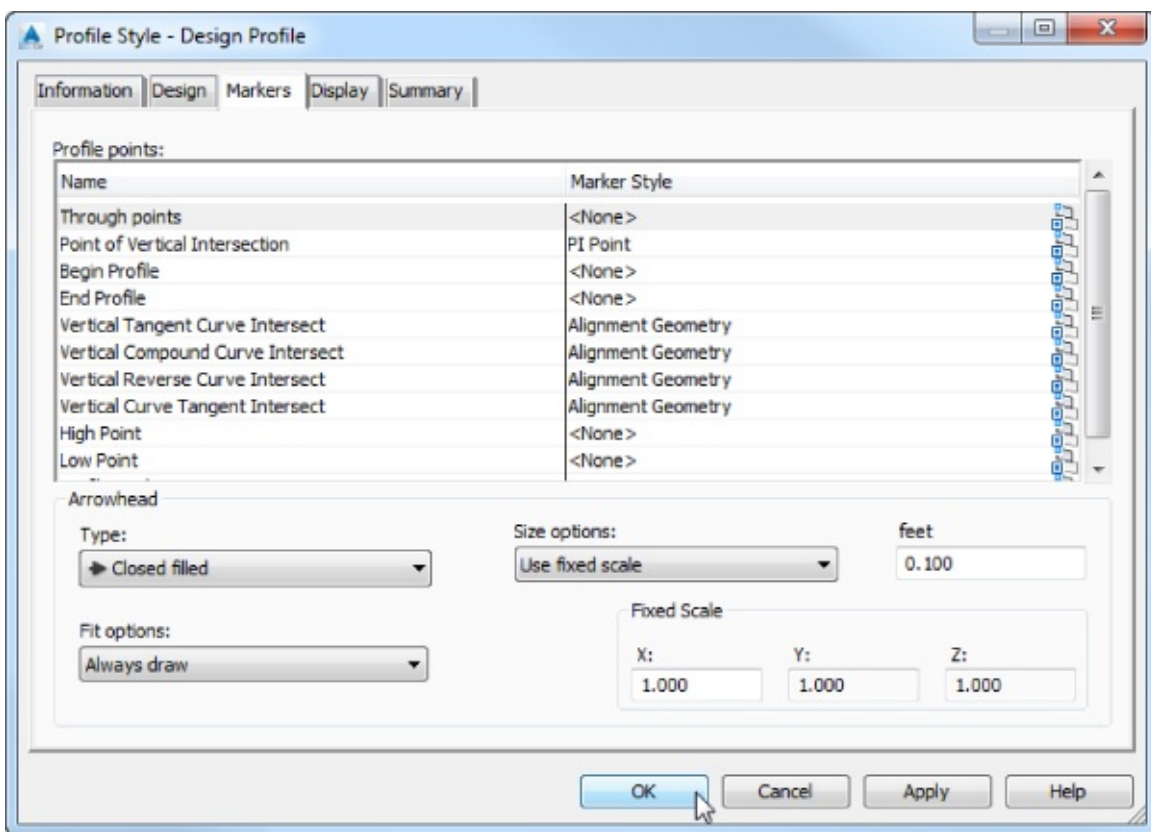


Figure 19.18 Markers for a profile style

Figure 19.19 shows some commonly highlighted vertical geometry points in a profile.

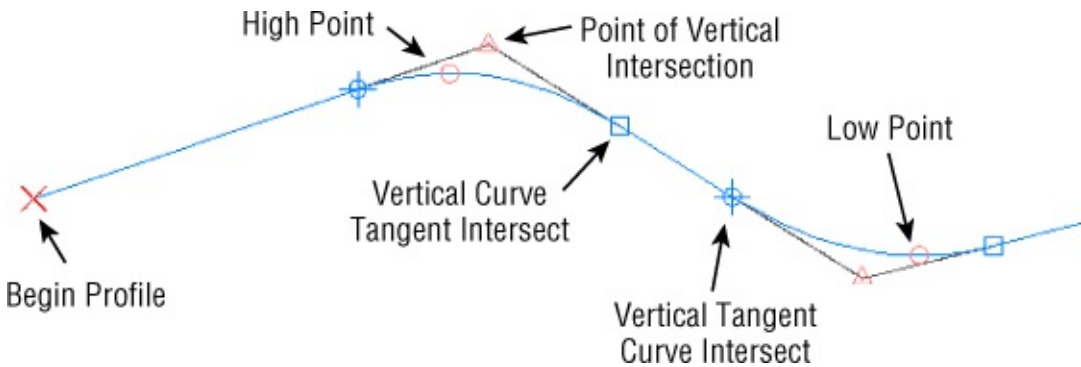


Figure 19.19 Example profile with profile marker points labeled

Alignment Styles

Alignment styles can be helpful in identifying key design components, as well as showing the stationing direction. Use multiple alignment styles to visually differentiate centerline alignments from supplemental alignments such as offset alignments and curb return alignments.

In the following exercise, you will create a style that restricts radius grip edits to five-foot increments and displays basic alignment components:

1. Open the 1901_PointObject_FINISHED.dwg (1901_PointObject_METRIC_FINISHED.dwg) file.
You can download either file from this book's web page.
2. From the Settings tab of Toolspace, expand Alignment > Alignment Styles.
3. Right-click Alignment Styles and select New.
4. On the Information tab, set Name to **Centerline**.

5. On the Design tab, do the following:
 - a. Verify that Enable Radius Snap is selected.
 - b. Verify that Radius Snap is set to 5 (or 1 for metric).

To see the Help document about any dialog, press F1 on your keyboard to be taken directly to the help section for that topic or click the Help button on the tab when you have a question regarding a specific tab on a dialog.

6. On the Markers tab, do the following:
 - a. Set the Point Of Intersection marker by double-clicking the current value of <None>.
 - b. In the Pick Marker Style dialog, select PI Marker from the marker listing, and click OK.
 - c. Using the same procedure, set the Through Points marker and the Station Reference Point marker both to <None>.

Note that <None> is located near the top of the list.

7. On the Display tab with the View Direction set to Plan, do the following:
 - a. Using the Shift key to select Arrow, Line Extensions, and Curve Extensions together, click one of their lightbulb icons to turn off the display of these three components.
 - b. Using the Shift key to select Line, Curve, and Spiral, click in the Layer column to display the Layer Selection dialog.
 - c. In the Layer Selection dialog, set the layer to C-ROAD-CNTR and click OK. This will set the layer for all three of the selected components.

The Warning Symbol displays when design criteria or design checks are violated only if its display is turned on in this dialog. Design criteria and design checks were covered in Chapter 6, “Alignments.” Leave its default display setting at On.

Leave the Model and Section view directions at their defaults.

8. Click OK to finish creating a new alignment style.

This alignment will display the line, curve, and spiral on layer C-ROAD-CNTR, and a marker will be shown at the Point Of Intersection, as shown in [Figure 19.20](#).



Figure 19.20 Centerline alignment style

When this exercise is complete, you can save and close the drawing. A saved copy of this drawing file, 1902_AlignmentObject_FINISHED.dwg (1902_AlignmentObject_METRIC_FINISHED.dwg), is available from the book's web page.

Parcel Styles

The parcel styles have several unique features that make them different from other styles.

In the Design tab of a parcel (shown in [Figure 19.21](#)), you see parcel-specific options. A fill distance can be specified to place a hatch pattern along the perimeter of the parcel. This setting is used to help differentiate special parcels such as parks, limits of disturbance, or environmentally sensitive areas.

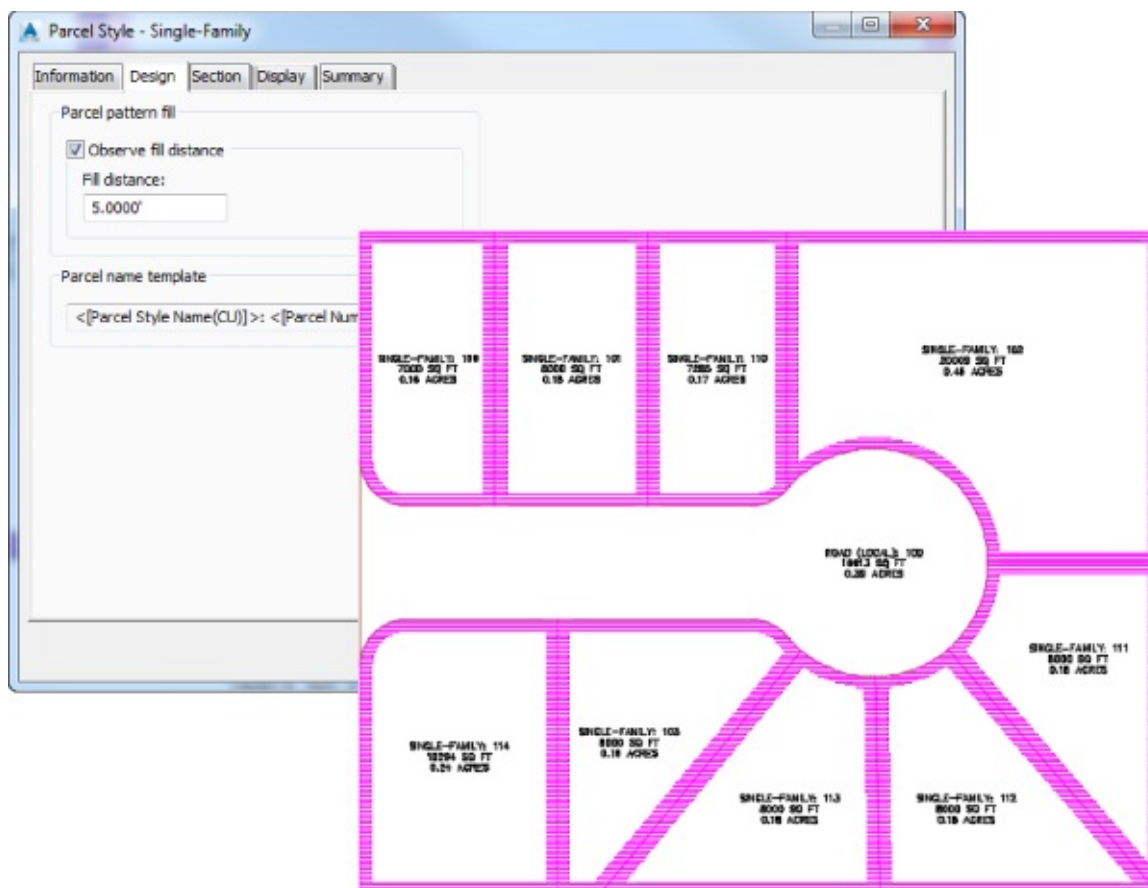


Figure 19.21 Parcel style options and the resulting parcel graphic

The *fill distance* indicates the width of the hatch pattern. The Component Hatch Display characteristics, including the pattern, angle, and scale, are specified at the bottom of the Display tab. Be sure to turn on Parcel Area Fill and configure a layer for it so it can be turned off independently from the parcel itself, since hatches tend to slow down the graphics. [Figure 19.21](#) also shows the parcel graphic resulting from the design settings shown.

Feature Line Styles

Feature lines are found in quite a few different places. They are created automatically as part of corridors, created as a result of generating a grading group, or can be created independently by the user. Because their scope crosses functionality, you will find feature line styles in the General > Multipurpose Styles collection in Settings tab.

By definition, a feature line is a 3D object; therefore, its style can be controlled in plan, model, profile, and section. As shown in [Figure 19.22](#), a feature line can use markers at geometry points.

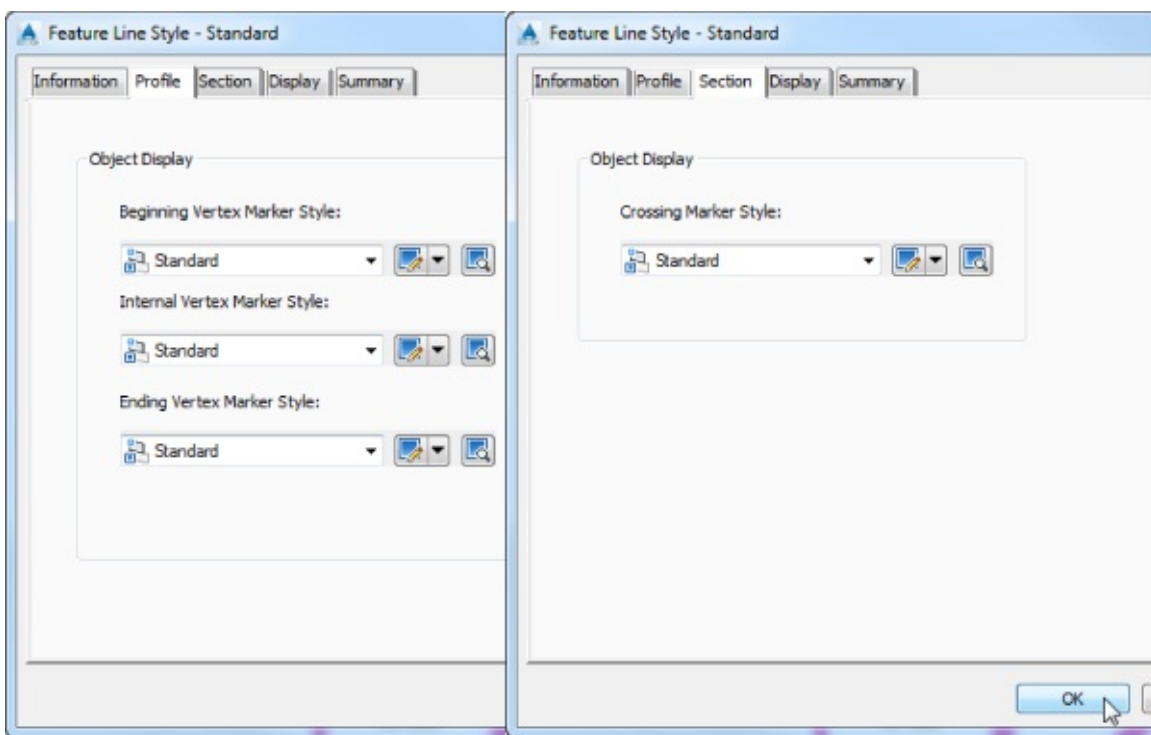


Figure 19.22 Feature-line profile marker options (left) and section marker option (right)

Creating Surface Styles

Certification Objective

Surface styles are the most widely used styles in any Civil 3D project. Depending on what objects are visible in the style that is active, certain editing options may be restricted. For example, points need to be visible before the Civil 3D software will let you use the Delete Point command on a surface.

There are seven tabs in the Surface Style dialog. Each tab corresponds to components listed in the Display tab. However, the Analysis tab covers the following components: Directions, Elevations, Slope, and Slope Arrows. Note that while some display components of these analyses are covered under this tab, they are also controlled by settings in the surface properties as well. While the Display tab is where the basic AutoCAD properties of each component are set, these other tabs allow you to configure in detail how each component is displayed. Some of these settings include applying marker styles to watersheds, setting 3D parameter borders, configuring contour intervals and depression ticks, and configuring color ranges for the different analysis tools.

Once a surface is created, you can display information in many ways. The most common so far have been contours and triangles, but these are the basics. By using varying styles, you can show a large amount of data with one single surface. Not only can you do simple things such as adjust the contour interval, but the Civil 3D program can apply a number of analysis tools to any surface:

Contours Allows the user to apply to multiple ranges a color scheme or linetype as opposed to the typical minor-major scheme. Commonly used in cut-fill maps to color negative contours one way, positive contours another, and the balance or zero contours yet another.

Directions Draws arrows showing the normal direction of the surface face. This tool is typically used for aspect analysis, helping site planners review the way a site slopes with regard to cardinal directions and the sun.

Elevations Creates bands of color to differentiate various ranges of elevations. You can use this tool

to create a simple weighted distribution to help create marketing materials, hard-coded elevations to differentiate a floodplain and other elevation-driven site concerns, or ranges to help a designer understand the earthwork involved in creating a finished surface.

Slopes Colors the face of each triangle on the basis of the assigned slope values. While a distributed method is the normal setup, a common use is to check site slopes for compliance with the Americans with Disabilities Act (ADA) of 1990 requirements or other site slope limitations, including vertical faces (where slopes are abnormally high).

Slope Arrows Displays the same information as a slope analysis, but instead of coloring the entire face of the TIN, this option places an arrow pointing in the downhill direction and colors that arrow on the basis of the specified slope ranges. This is useful in confirming surface flow direction for site drainage.

User-Defined Contours Refers to contours that typically fall outside the normal intervals. These user-defined contours are useful for drawing lines on a surface that are especially relevant but don't fall on one of the standard levels. A typical use is to show the normal water surface elevation on a site containing a pond or lake.

Watersheds Used for watershed analysis, this style allows you to examine how water flows along and off of a surface. Using the surface TIN, the drain targets and watersheds are defined. An example of creating a watersheds surface style is provided later in this section.

In the following exercises, you will walk through the steps of creating and modifying surface styles.

Contour Styles

Contouring is the standard surface representation on which land development plans are built. In this example, you'll create a new surface contouring style and modify the interval to a setting more suitable for commercial site design review:

1. Open the `1903_SurfaceStylesContours.dwg` (`1903_SurfaceStylesContours_METRIC.dwg`) file, which you can download from this book's web page.
2. From the Settings tab of Toolspace, expand Surface ► Surface Styles.
3. Right-click Surface Styles and select New.
4. On the Information tab, do the following:
 - a. Set Name to **Exaggerated Existing Contours**.
 - b. Add the description **2' minor contours with a 5× exaggeration when viewed in 3D** (or **1m minor contours with a 5× exaggeration when viewed in 3D** for metric).
5. On the Contours tab, do the following:
6.
 1. Expand the Contour Intervals category.
 2. Set the Minor Interval to **2'** (or **1 m**).

Notice that the Major Interval automatically adjusts to **10'** (or **5 m**) or to whatever the minor interval is set times five.

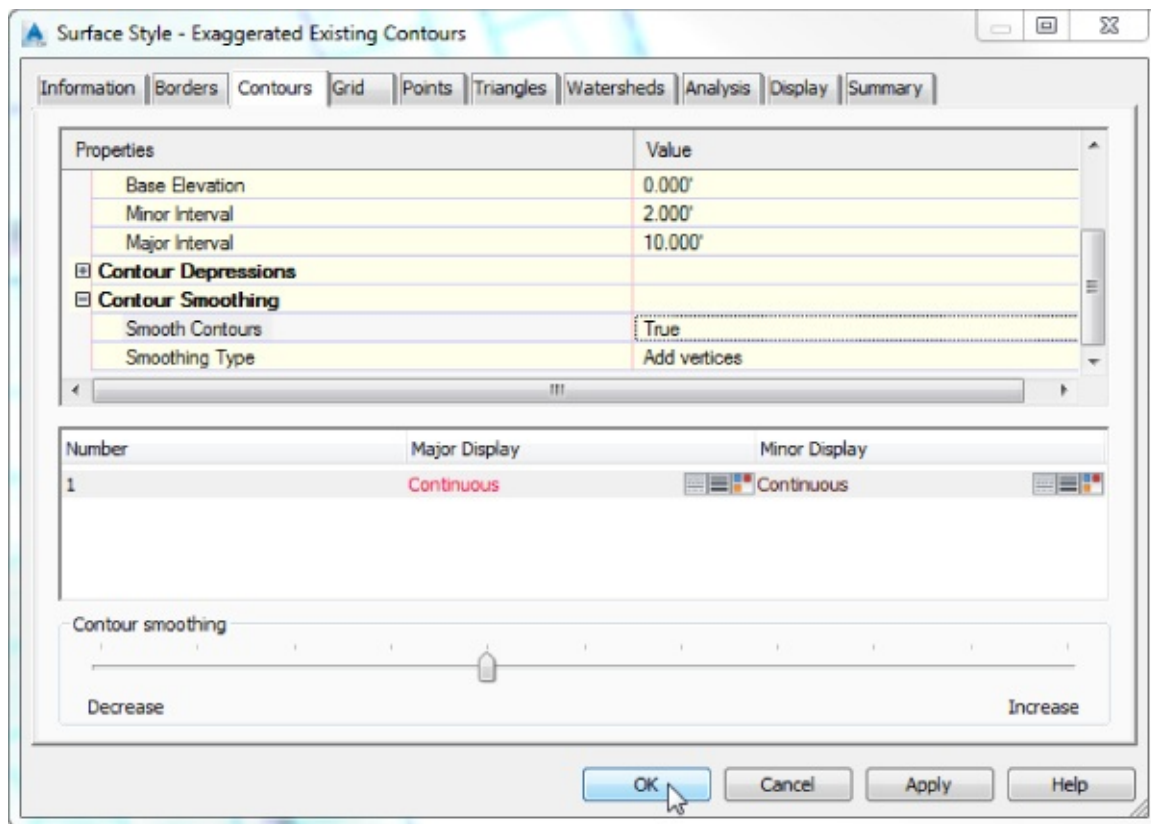
 3. Expand the Contour Smoothing category (you may have to scroll down).

4. Set Smooth Contours to True, which activates the Contour Smoothing slider bar near the bottom. Don't change this Smoothing value, but keep in mind that this gives you a level of control over how much Civil 3D modifies the contours it draws.

Surface vs. Contour Smoothing

Remember, contour smoothing is not surface smoothing. *Contour smoothing* applies smoothing at the individual contour level but not at the surface level. If you want to make your surface contouring look fluid, you should be smoothing the surface.

The Contours tab will now look similar to [Figure 19.23](#).



[Figure 19.23](#) The Contours tab in the Surface Style dialog

7. On the Triangles tab, do the following:
 - a. Change Triangle Display Mode to Exaggerate Elevation.
 - b. Set Exaggerate Triangles By Scale Factor to 5 (see [Figure 19.24](#)).

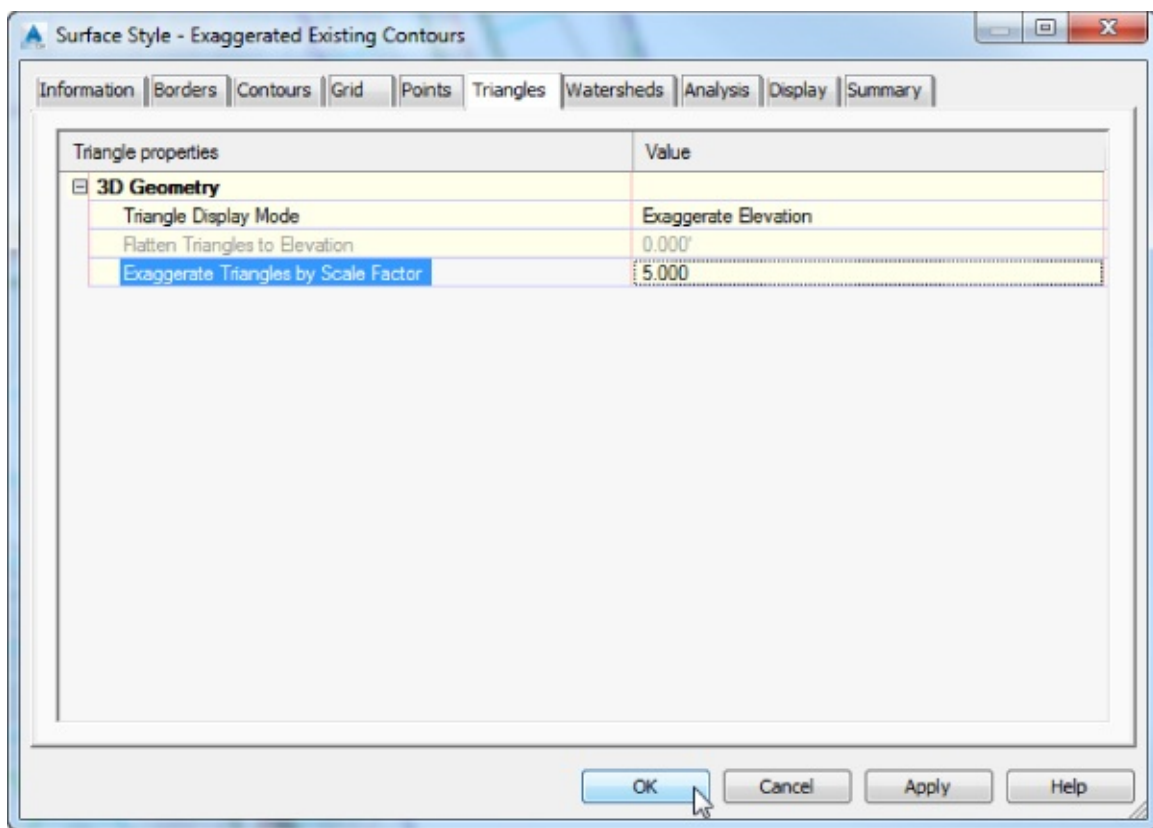


Figure 19.24 Exaggerate the elevations shown in the Object Viewer.

8. On the Display tab with the View Direction set to Plan, do the following:
 - a. Shift+click to highlight all the components.
 - b. Click in the Color column of one of the components to display the Select Color dialog.
 - c. In the Select Color dialog, click the ByLayer button and then click OK.
 - d. While all the components are still highlighted, set Linetype to ByLayer using a similar procedure to steps b and c.

ByLayer or ByStyle

If you are a true CAD stickler, you will try to set as many items as possible to ByLayer. This approach greatly simplifies things if you need to change color or linetype using the Layer Manager. Alternatively, you can define the color and linetype independently through the style. Don't forget that you can also set the items to ByBlock, where their display will be controlled by the properties assigned to the object through the AutoCAD Properties Palette.

You will be using only the Minor Contour in this style, but later on you will copy this style and your efforts will be carried forward.

- e. With all the components still selected, click one of the lightbulbs that are on to turn off all components. Then select only the Minor Contour component and turn on its lightbulb.
- f. Set the Minor Contour layer to C-TOPO-MINR.

Your Display tab should now resemble [Figure 19.25](#).

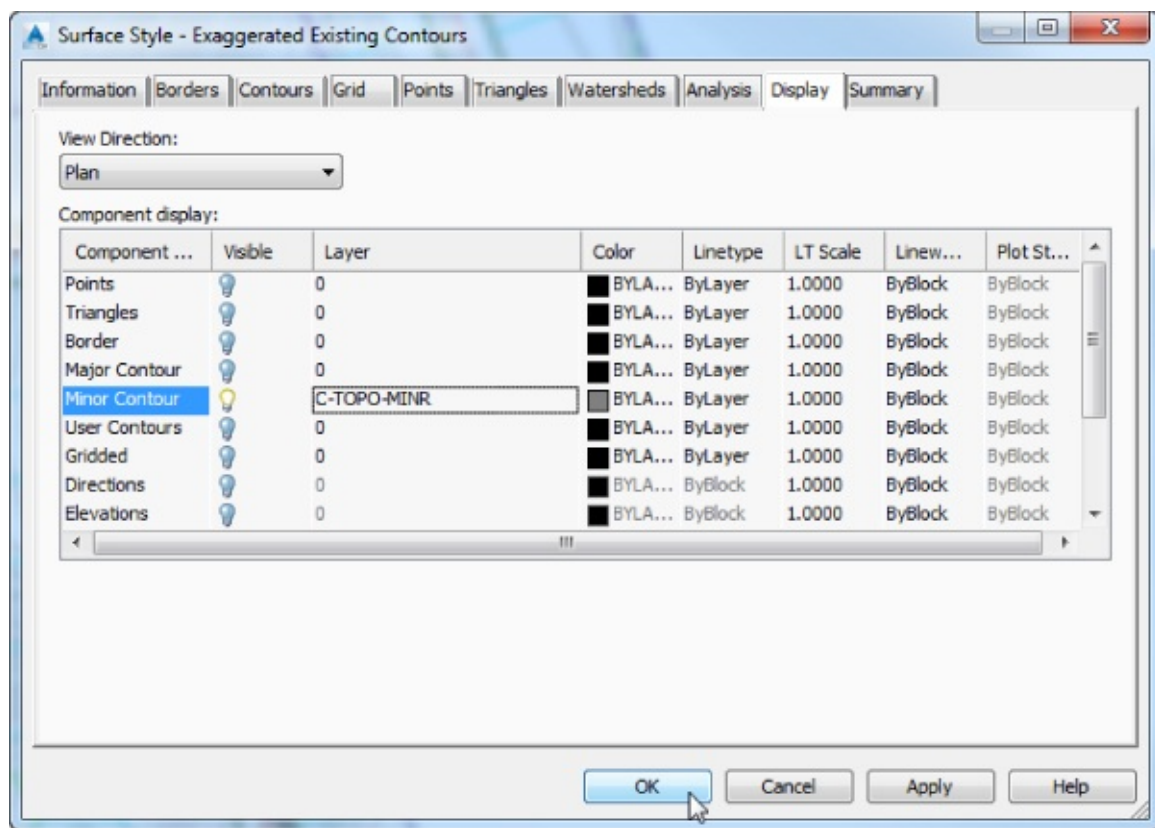


Figure 19.25 Setting Minor Contour component to be the only one displayed for this surface style in plan

9. On the Display tab, change View Direction to Model and do the following:
 - a. Shift+click to highlight all the components.
 - b. Using the same procedure previously used, set all the Colors and Linetypes to ByLayer.
 - c. Verify that Triangles is the only component displayed.
 - d. Set only the Triangles layer to C-TINN-VIEW.

To see the surface in the Object Viewer or in any other 3D view, you must have triangles set to display in the Model View Direction.

10. Click OK to complete the style. Save the drawing.
11. From the Prospector tab of Toolspace, expand Surfaces, right-click the EG surface, and select Surface Properties.
12. On the Information tab, set Surface Style to Exaggerated Existing Contours, and click OK.

The surface should be rendered faster than you can read this sentence, even with the contour interval you've selected with only the minor contours displayed. After the style is applied to the surface model, you should see simple contours in plan view (the left image in [Figure 19.26](#)) and an exaggerated surface model in the Object Viewer (the right image in [Figure 19.26](#)).

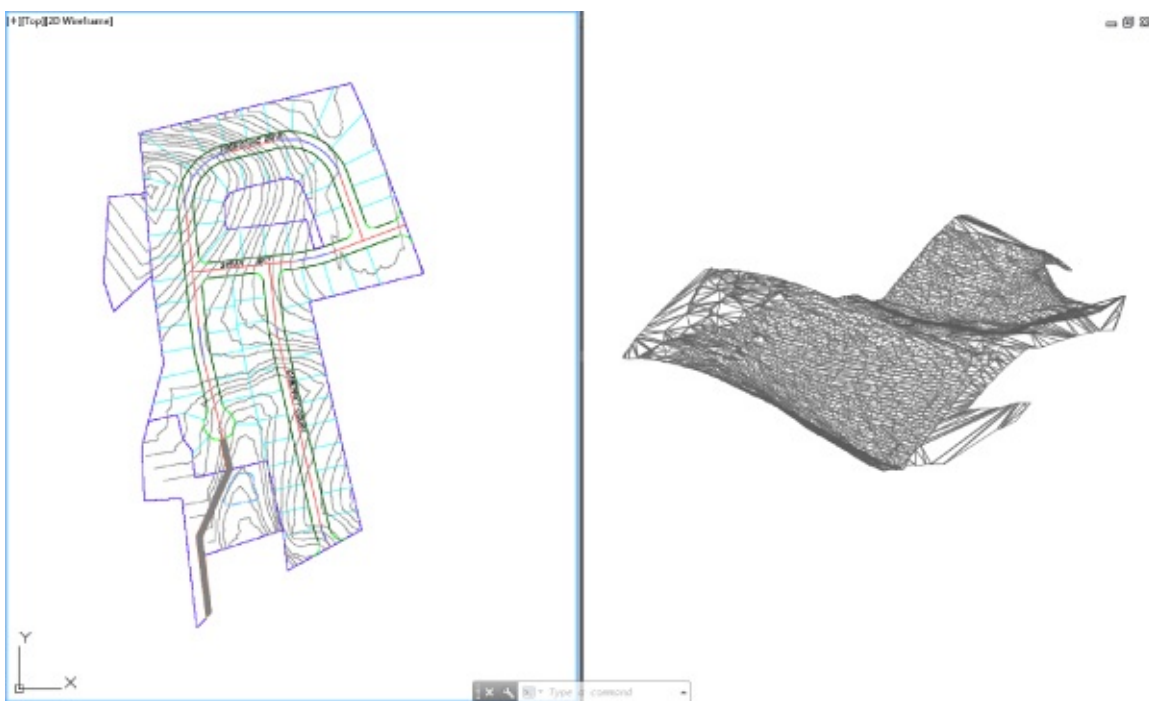


Figure 19.26 The surface showing your new style in plan (left) : and in model (right), as shown in a custom 3D isometric view using the 3D wireframe visual style

You skipped over one portion of the surface contours that many people consider a great benefit of using Civil 3D: depression contours. If this option is turned on via the Contours tab, ticks will be added to the downhill side of any closed contours leading to a low point. This is a stylistic option, and usage varies widely.

You can save and keep this drawing open to continue to the next exercise or use the saved copy of this drawing, `1903_SurfaceStylesContours_FINISHED.dwg` (`1903_SurfaceStylesContours_METRIC_FINISHED.dwg`), available from the book's web page.

Triangles and Points Surface Styles

The next style you create will help facilitate surface editing. To work with the Swap Edge or Delete Line Surface edits, you must be able to see triangles. To work with the Delete Point, Modify Point, and Move Point commands, you must be able to see surface points.

It is important to note that the points you see in the surface style do not refer to survey points. The points you are working with in this exercise are *triangle vertices*. The triangle vertices and survey points will initially be in the same locations for a surface built from points. However, as breaklines are added or edits are made to the triangle vertices, the surface model will differ from the original survey.

1. Open `1903_SurfaceStylesContours_FINISHED.dwg` (`1903_SurfaceStylesContours_METRIC_FINISHED.dwg`).

You can download either file from this book's web page.

2. From the Settings tab of Toolspace, expand Surface ► Surface Styles.
3. Right-click the Exaggerated Existing Contours style you created in the previous exercise, and select Copy, as shown in [Figure 19.27](#).

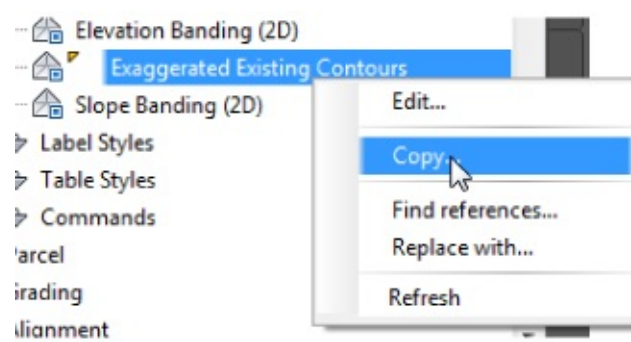


Figure 19.27 Access Copy by right-clicking the style name.

4. On the Information tab, do the following:
 - a. Rename the surface style to **Surface Editing**.
 - b. Remove the text in the description file and type the description **Points and triangles**.
5. On the Points tab, do the following:
 - a. Expand Point Size and set the Point Units to **3'** (or **1 m**).
 - b. Expand Point Display and click the ellipsis for Data Point Symbol.
 - c. Set the point type to the X symbol, as shown in [Figure 19.28](#).

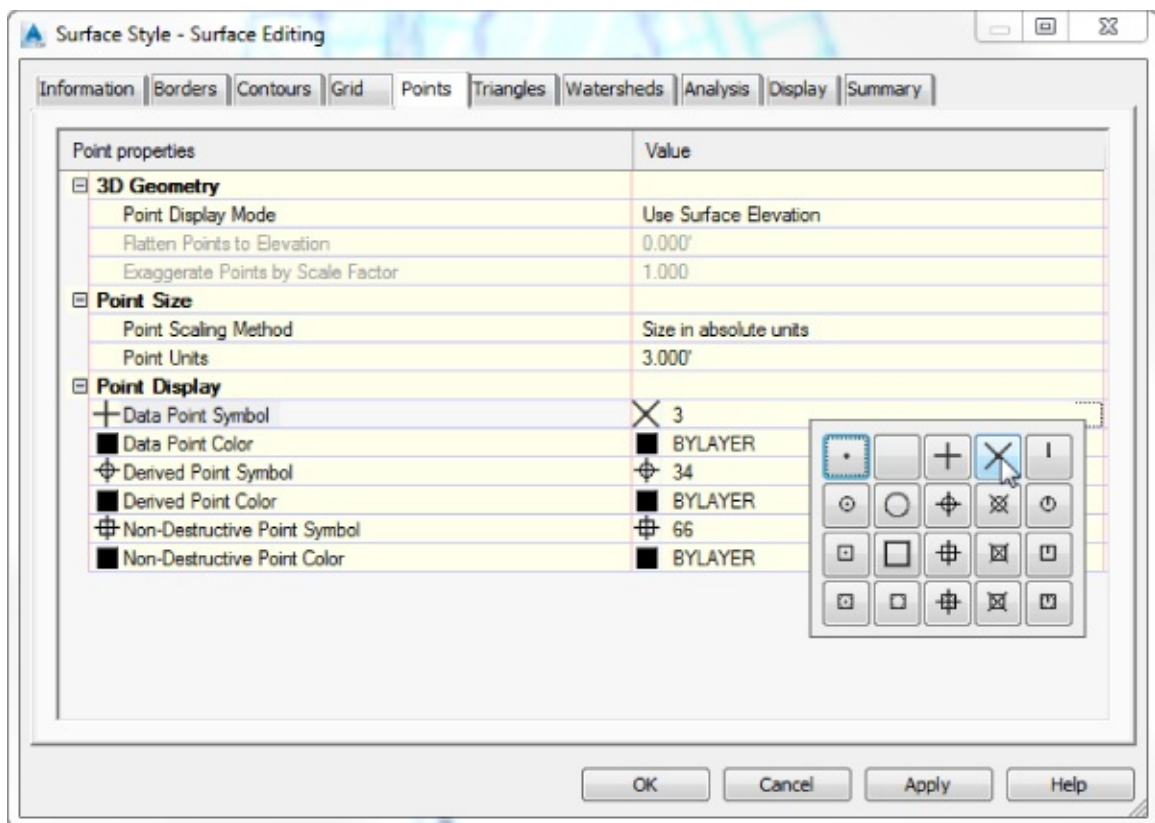


Figure 19.28 Change the Point Display symbol so the points stand out within the style.

6. On the Triangles tab, remove the exaggeration by setting the Triangle display mode back to Use Surface Elevation.
7. On the Display tab with View Direction set to Plan, do the following:
 - a. Use the lightbulb icons to turn off visibility for Minor Contour and turn it on for Points and Triangles.

- b. Click in the Layer column for the Points components to display the Layer Selection dialog.
- c. In the Layer Selection dialog, click the New button to create a new layer for the Points components.
- d. In the Create Layer dialog, set Layer Name to **C-TINN-PNTS**, set Color to Red, and click OK to finish creating the layer.
- e. In the Layer Selection dialog, set the layer to C-TINN-PNTS and click OK.
- f. Click in the Layer column for the Triangles components to display the Layer Selection dialog.
- g. In the Layer Selection dialog, set the Triangles layer to C-TINN-VIEW and click OK.

Your Display tab will resemble [Figure 19.29](#).

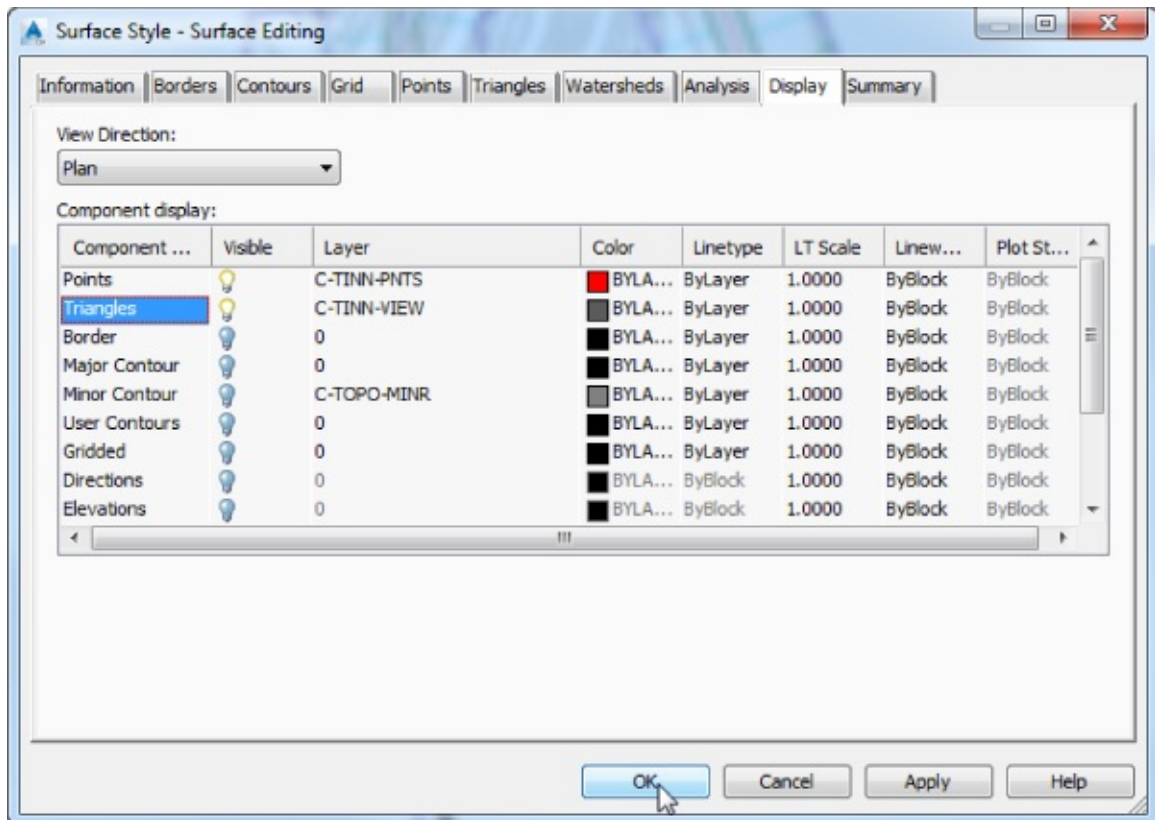


Figure 19.29 Change the Points and Triangles visibility and layers in the Display tab.

8. Click OK to complete the style.
9. Use the same procedure from the previous exercise to apply the Surface Editing style to the surface.
10. Your surface will resemble [Figure 19.30](#).

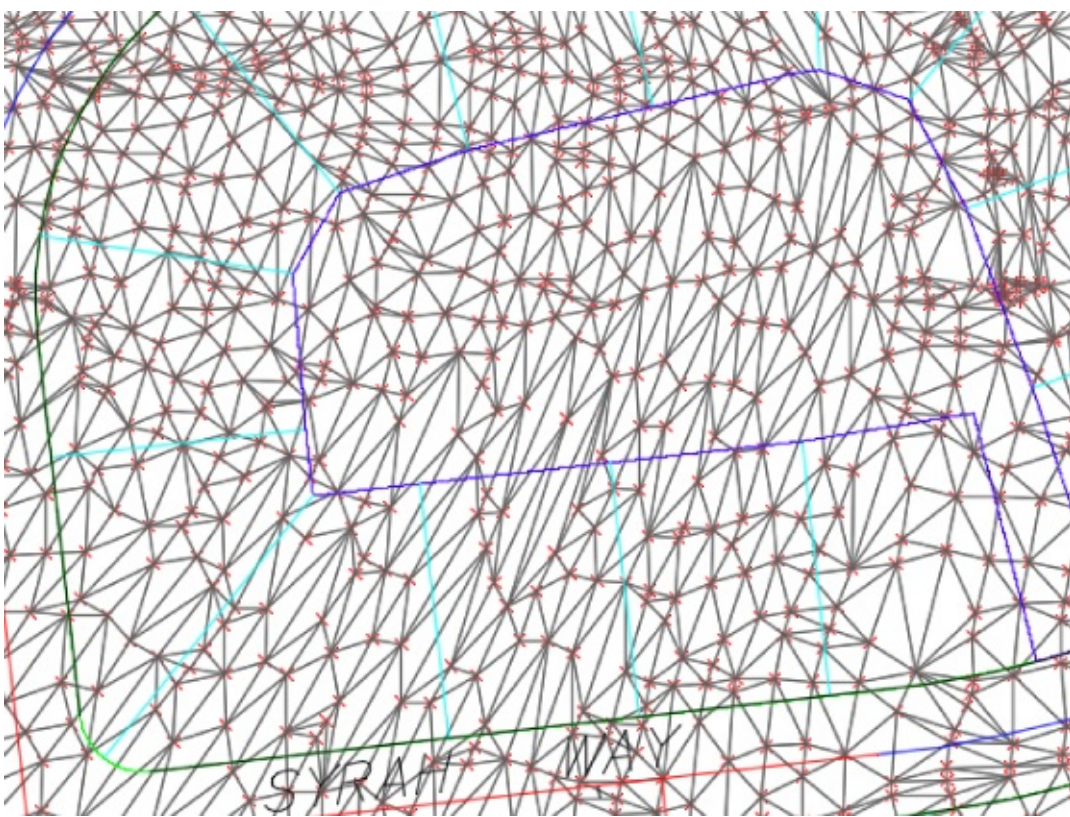


Figure 19.30 Triangles and points shown using the new surface style

With the points and triangles displayed, you can edit the surface, such as deleting points or swapping edges.

You can save and keep this drawing open to continue to the next exercise or use the saved copy of this drawing, 1903_SurfaceStyleTriangles_FINISHED.dwg (1903_SurfaceStyleTriangles_METRIC_FINISHED.dwg), available from the book's web page.

Analysis Styles

Analysis styles are unique in several ways. To see the style applied to your design, you must run the analysis in the surface properties in addition to applying the style to the surface. Although layers can now be configured to these styles, colors and behavior are configured on the Analysis tab. Visibility can be controlled by turning off the layer assigned on the Display tab of the style, turning off the Analysis component in the style, or by assigning another style that doesn't display that component.

You can choose distribution methods to apply to your analysis on the Analysis tab. The distribution method is selected by configuring the Group By option under each analysis type. Here's what they mean:

Equal Interval This method uses a stepped scale, created by taking the minimum and maximum values and then dividing the delta into the number of selected ranges. For example, if the surface has elevations from 0 to 10, with four ranges they will be 0 to 2.5, 2.5 to 5.0, 5.0 to 7.5, and 7.5 to 10. This method can create real anomalies when extremely large or small values skew the total range so that much of the data falls into one or two intervals, with almost no sampled data in the other ranges.

Quantile This method is often referred to as an *equal count distribution* and will create ranges that are equal in sample size. These ranges will not be equal in linear size but in distribution across a surface. For example, if the surface has elevations from 0 to 10 with most of the surface at the higher elevations, with four ranges they may be 0 to 4.78 (25 percent of the surface), 4.78 to 6.25 (25 percent of the surface), 6.25 to 7.95 (25 percent of the surface), and 7.95 to 10 (25 percent of the surface).

This method is best used when the values are relatively equally spaced throughout the total range, with no extremes to throw off the group sizing.

Standard Deviation Standard Deviation is the bell curve that most engineers are familiar with, suited for when the data follows the bell distribution pattern. It generally works well for slope analysis, where very flat and very steep slopes are common, and would make another distribution setting unwieldy.

You looked at an elevations, slopes, and slope arrows analysis earlier in Chapter 4, “Surfaces.” In the following exercise, you will create a surface style for watershed analysis. To apply the new style to the surface, you must also run the analysis.

1. Open `1903_SurfaceStylesTriangles_FINISHED.dwg` (`1903_SurfaceStylesTriangles_METRIC_FINISHED.dwg`).

You can download either file from this book's web page.

2. From the Settings tab of Toolspace, expand Surface ► Surface Styles.
3. Right-click the Exaggerated Existing Contours style you created in the earlier exercise and select Copy.
4. On the Information tab, do the following:
 - a. Rename the surface style to **Watershed Analysis**.
 - b. Remove the current description and type **Display watersheds and slope arrows**.
5. On the Triangles tab, change Triangle Display Mode to Use Surface Elevation.
6. On the Watersheds tab, do the following:
 - a. Expand the Boundary Segment Watershed category.
 - b. Set Use Hatching to False.
 - c. Expand the Multi-Drain Watershed category.
 - d. Set Use Hatching to False.

Your Watersheds tab will look like [Figure 19.31](#).

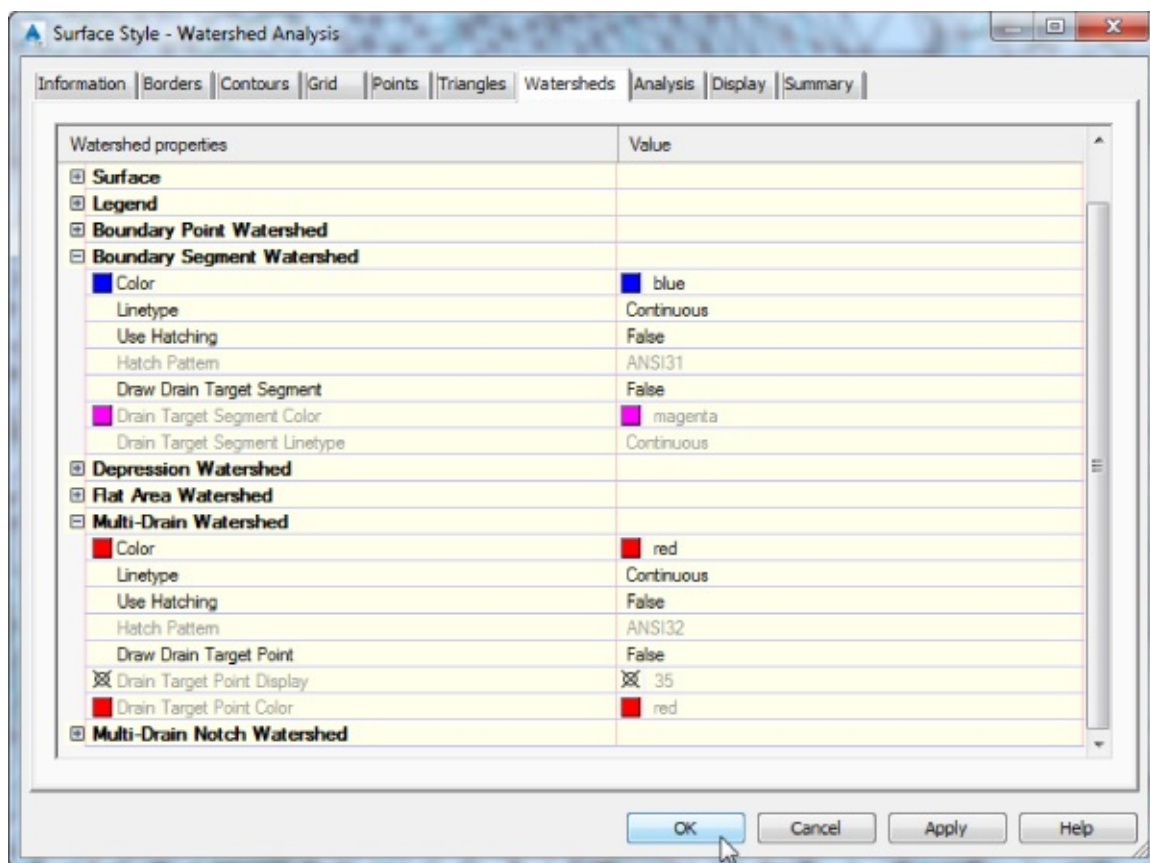


Figure 19.31 Changing the hatch options for watershed areas

7. On the Analysis tab, do the following:
8.
 1. Expand the Slope Arrows category.
 2. Change Scheme to Hydro.
 3. Change Arrow Length to 2' (or 1 m).

The Analysis tab will resemble [Figure 19.32](#).

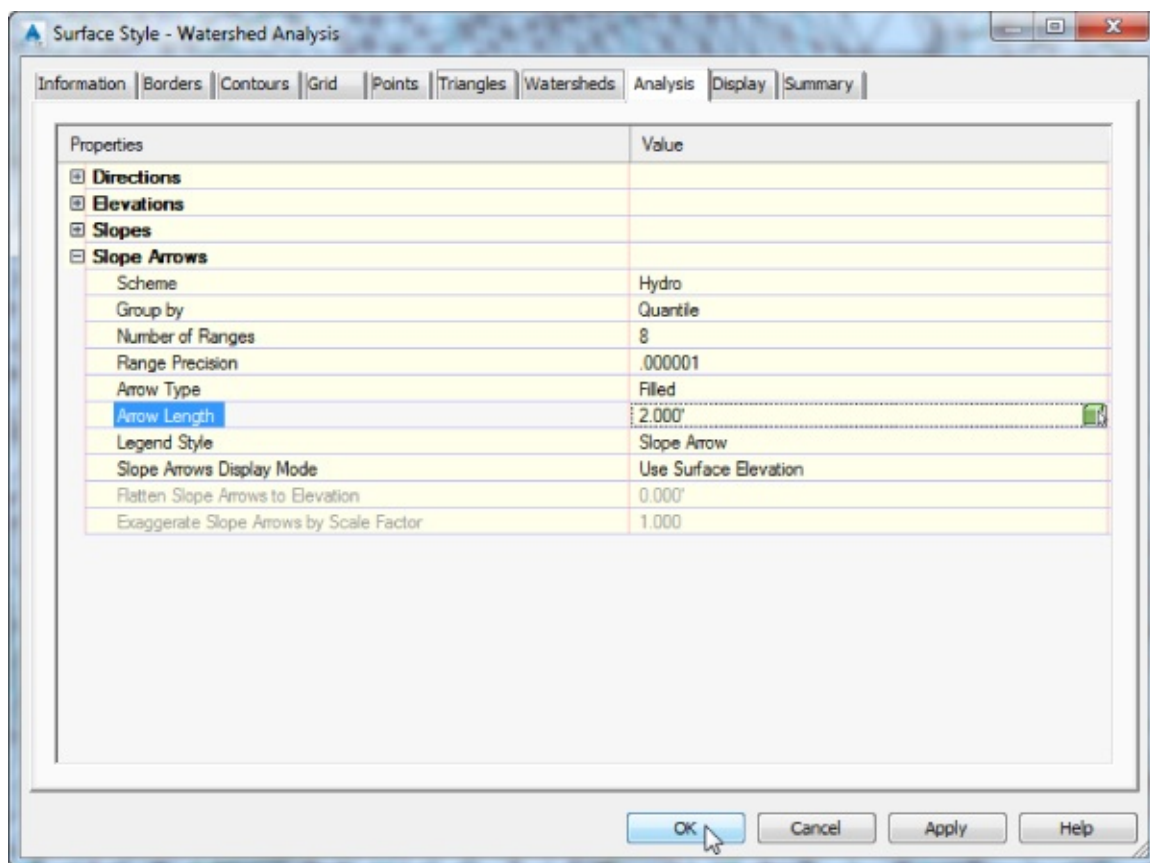



Figure 19.32 Set the color scheme and arrow length on the Analysis tab.

9. On the Display tab with View Direction set to Plan, do the following:
 - a. Turn off visibility for the Minor Contour component, and turn it on for Slope Arrows and Watersheds—you may have to scroll.
 - b. Set the Watershed layer to C-TOPO-WSHD.
10. Click OK to complete the surface style.
11. Select the surface, and from the contextual tab in the Modify panel click Surface Properties.
12. On the Information tab, set Surface Style to Watershed Analysis and click Apply.
13. On the Analysis tab, do the following:
 - a. Set Analysis Type to Watershed.
 - b. Set Merge Depressions to **0.4'** (or **0.1 m**).
 - c. Place a check mark next to Merge Adjacent Boundary Watersheds.
 - d.  Click the Run Analysis arrow in the middle of the dialog to populate the Range Details area. Your Surface Properties Analysis tab should resemble [Figure 19.33](#).

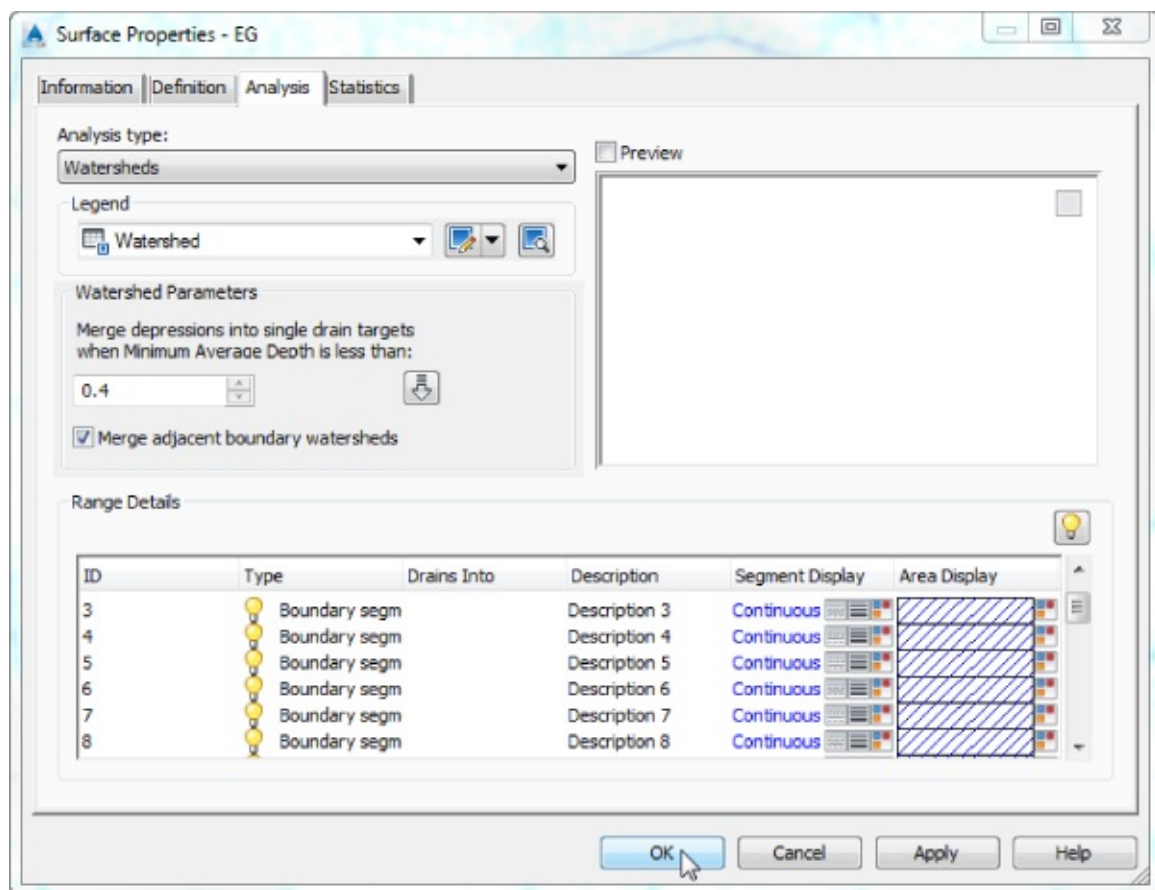


Figure 19.33 You must run the analysis in Surface Properties before the Watershed style kicks in.

14. Click OK to close the Surface Properties dialog.

Your surface model should resemble [Figure 19.34](#).

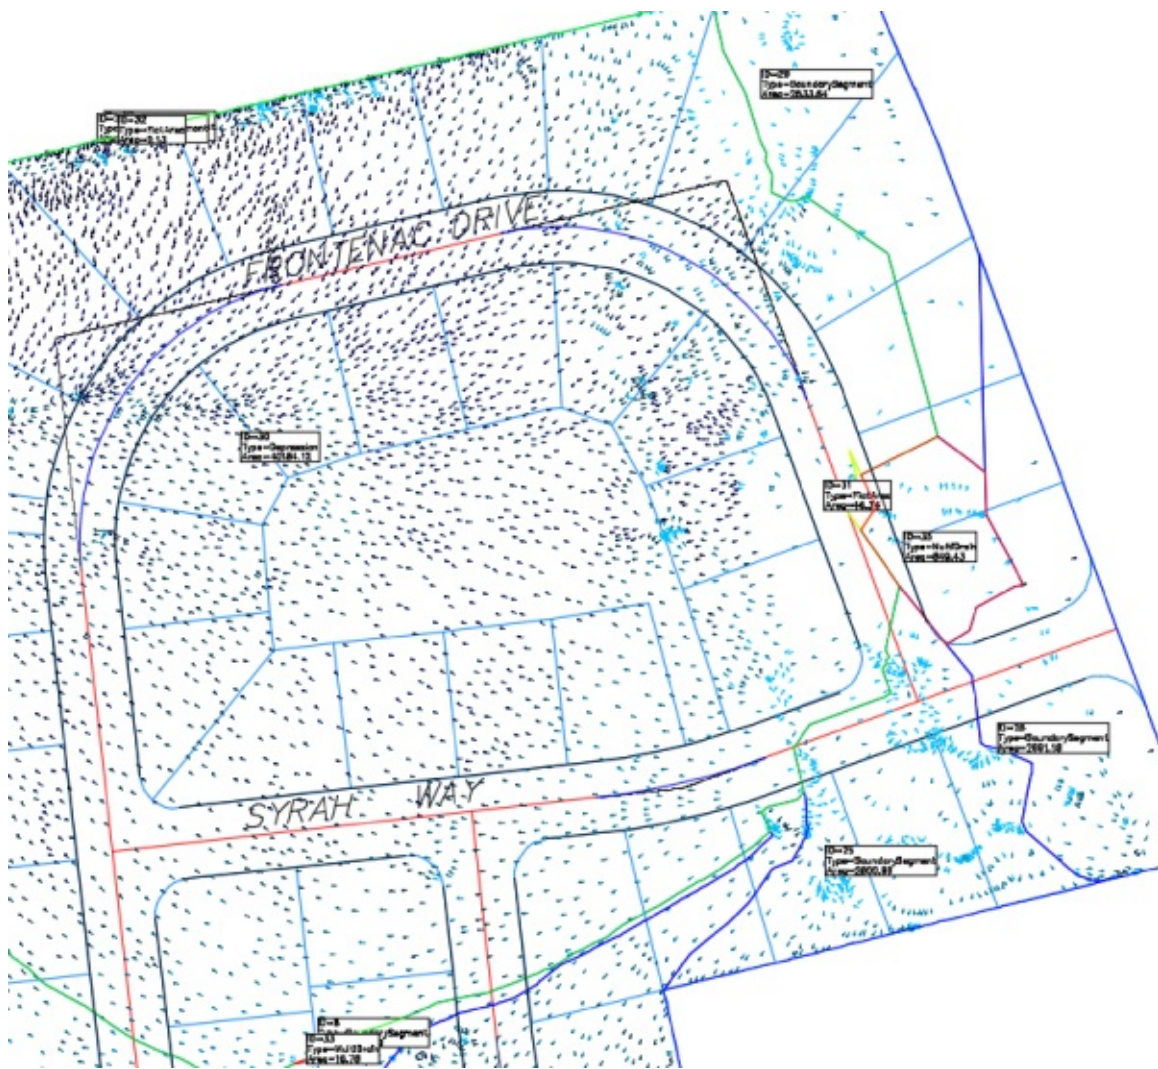


Figure 19.34 The surface set to use the Watershed Analysis style

Now that the watershed analysis has been run, you could provide further information by generating a dynamic Watershed table similar to how you generated a table showing other surface information in Chapter 4.

When this exercise is complete, you can close the drawing. A saved copy of this drawing, 1903_SurfaceStylesWatershed_FINISHED.dwg (1903_SurfaceStylesWatershed_METRIC_FINISHED.dwg), is available from the book's web page.

Creating Pipe and Structure Styles

In Chapter 13, “Pipe Networks,” you learned that the first step to managing pipes and structures was to build a parts list. One of the functions of a parts list is to associate styles to pipes and structures. In this section, you will learn how to create the pipe and structure styles that are used by a parts list.

In your template, you will have many styles assigned to the various parts lists. You will want to have separate styles for water parts, storm sewer parts, and waste water parts. Additionally, you may want to have separate styles for existing and proposed systems. The main difference between the styles for the different systems will be the layers you set in the Display tab.

Pipe Styles

It seems like no two municipalities want pipes displayed the same way on construction documents.

Fortunately, Civil 3D offers many variations for pipe display that will satisfy miscellaneous submittal requirements. With one pipe style, you can control how a pipe is displayed in plan, profile, and section views. You can use multiple pipe styles to graphically differentiate larger pipes from smaller ones. This section explores all the options.

Information Tab This tab allows you to define the name for the style and its description.

Plan Tab The tab you see in [Figure 19.35](#) controls how your pipe is represented when you're working in plan view.

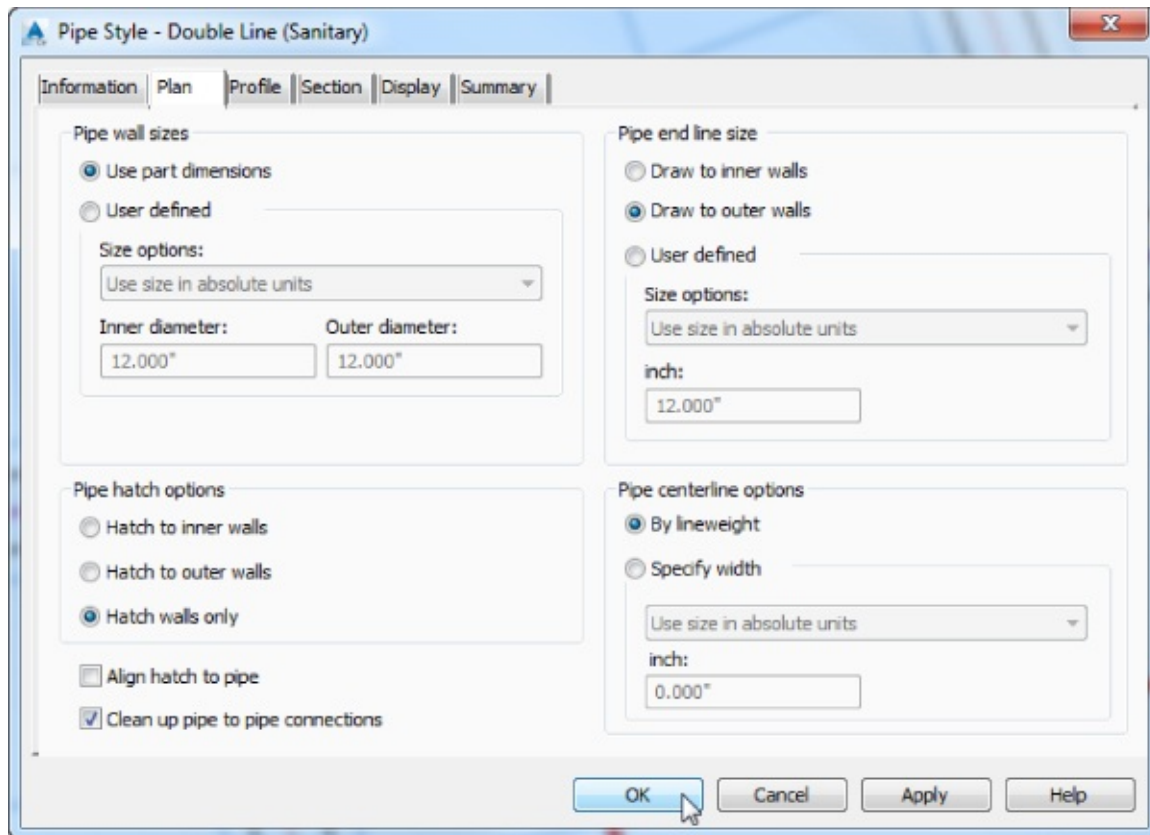


Figure 19.35 The Plan tab in the Pipe Style dialog

Options on the Plan tab include the following:

Pipe Wall Sizes You can choose between having the program apply the part size directly from the part catalog (that is, the literal pipe dimensions as defined in the catalog) and specifying your own constant or scaled dimensions.

Pipe Hatch Options If you choose to show pipe hatching, this part of the tab gives you options to control that hatch. You can hatch the entire pipe to the inner or outer walls, or you can hatch the space between the inner and outer walls only, as shown in [Figure 19.36](#). There are also options to align the hatch to the pipe and to clean up pipe-to-pipe connections.

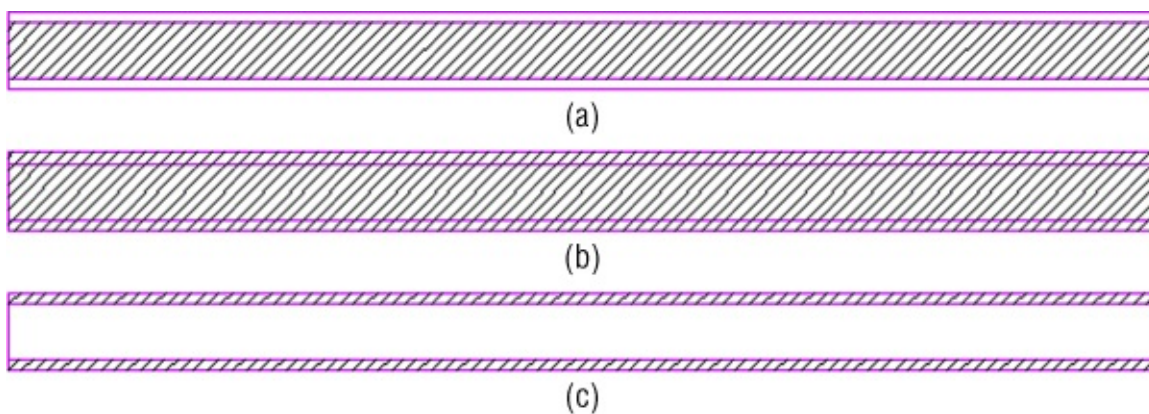


Figure 19.36 Pipe hatch to inner walls (a), outer walls (b), and hatch walls only (c)

Pipe End Line Size If you choose to show an end line, you can control its length with these options. An end line can be drawn connecting the outer walls or the inner walls, or you can specify your own constant or scaled dimensions. The pipes from [Figure 19.36](#) are all shown with pipe end lines drawn to outer walls.

Pipe Centerline Options If you choose to show a centerline, you can display it by the lineweight established in the Display tab, or you can specify centerline widths based on the pipe inner or outer wall dimension, a scaled dimension, or a constant dimension. You could use this option for your waste water pipes in places where the width of the centerline widens or narrows on the basis of the pipe diameter.

Profile Tab The Profile tab (see [Figure 19.37](#)) is almost identical to the Plan tab, except the controls here determine what your pipe looks like in profile view. The only additional settings on this tab are the Crossing Pipe Hatch Options. If you choose to display crossing pipe with a hatch, these settings control the location of that hatch.

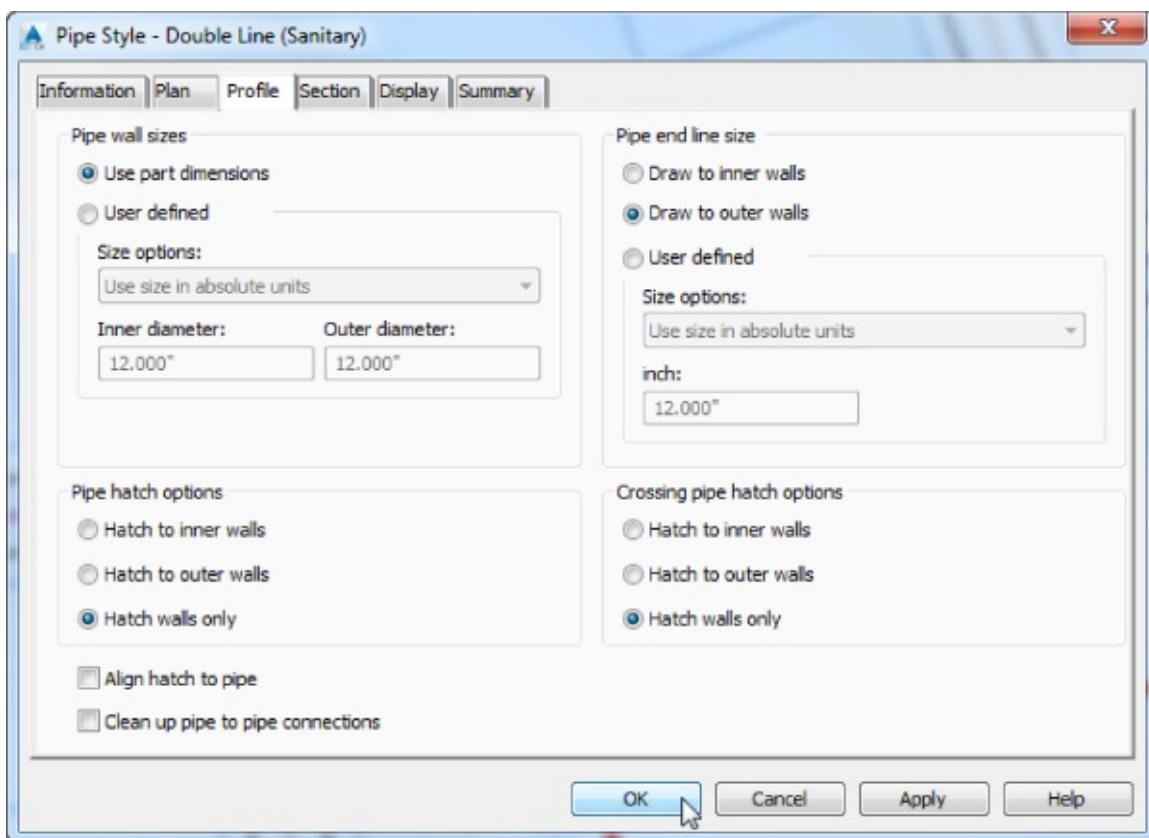


Figure 19.37 The Profile tab in the Pipe Style dialog

Section Tab If you choose to show a hatch on your pipes in section, you control the hatch location on this tab (see [Figure 19.38](#)). There is also the option to display the pipe as sliced pipe, where its display in section view uses the actual position of where the sample line crosses the pipe.


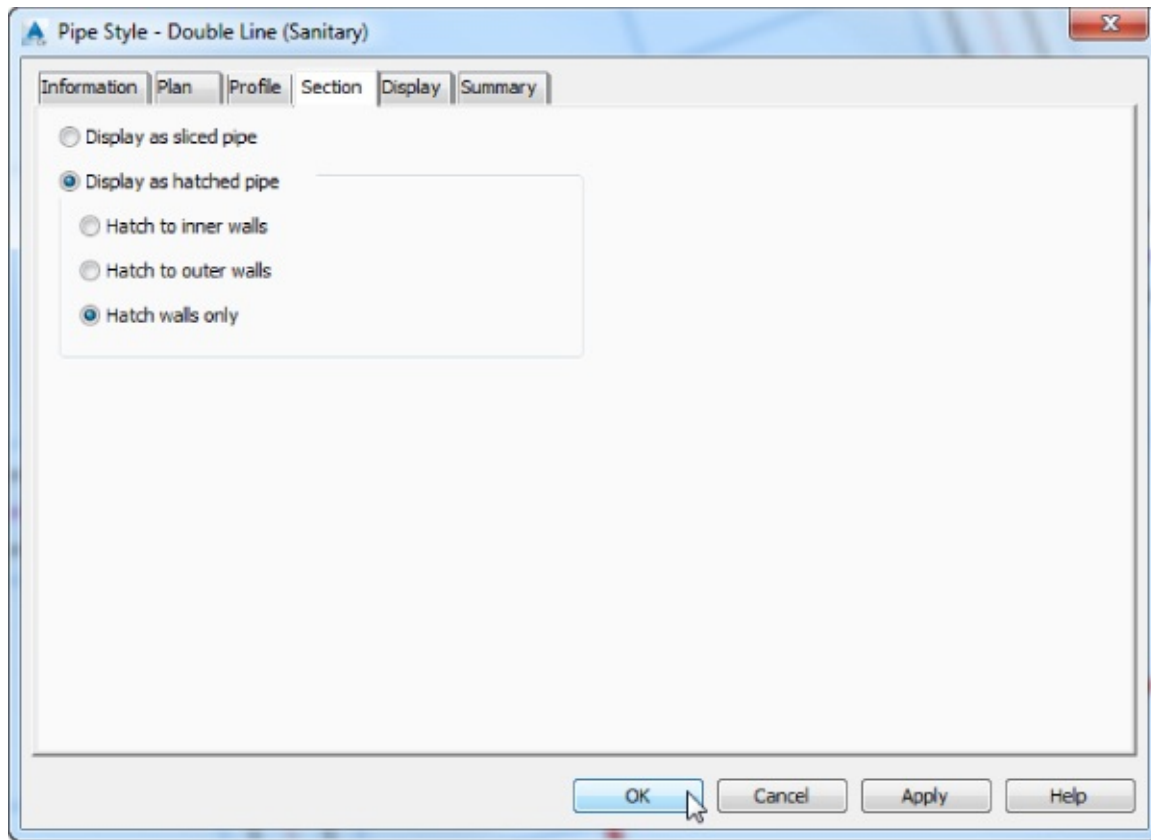


Figure 19.38 The Section tab in the Pipe Style dialog

Pressure Pipe Styles

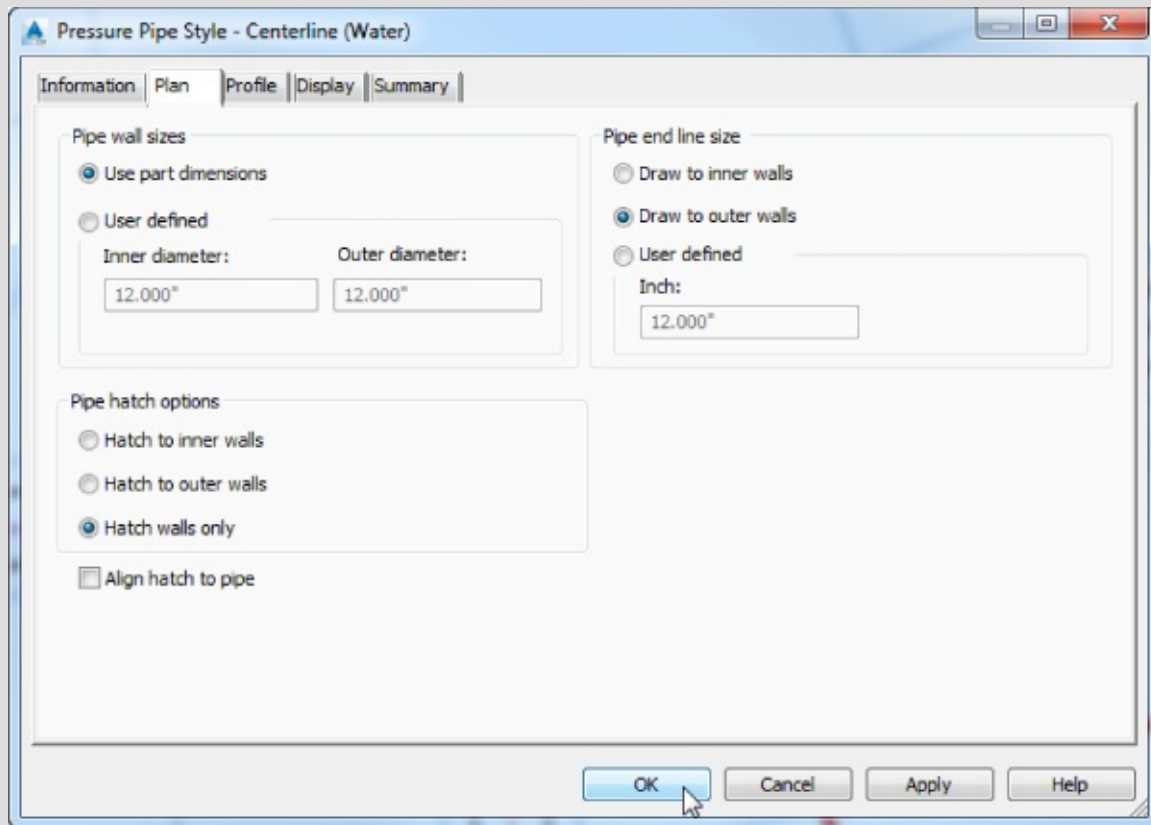Pressure pipes are relatively new in Civil 3D, and with new objects come new styles. The Pressure Pipe Style dialog looks very similar to the Pipe Style dialog, with Plan and Profile tabs that have similar behavior to that discussed for regular pipes.



The two biggest differences are that there is no Section tab and there are no Crossing Pipe Hatch Options on the Plan tab. Also, the Pipe Centerline Options and Clean Up Pipe To Pipe Connections options are not available. There are a few other minor changes to how the user can define sizes.

In the examples that follow, you will create various types of pipe styles.

The first style is for a situation where the pipe must be shown in plan view with a single line, the thickness of which matches the pipe's inner diameter. In profile, the pipe will show the inner diameter lines, and in section, it will show as a hatch-filled ellipse.

1. Open the 1904_PipeStyle.dwg (1904_PipeStyle_METRIC.dwg) file, which you can download from this book's web page.
2. From the Settings tab of Toolspace, expand Pipe > Pipe Styles.
3. Right-click Pipe Styles and select New.
4. On the Information tab, set Name to **Proposed Sanitary CL**.
5. On the Plan tab, do the following:
 - a. Verify that Pipe Centerline Options is set to Specify Width.
 - b. Set Specify Width to Draw To Inner Walls.

6. On the Profile tab, no changes are needed.
7. On the Section tab, verify that Crossing Pipe Hatch Options is set to Hatch To Inner Walls.
8. On the Display tab with the View Direction set to Plan, do the following:
 - a. Turn off the display for all components except Pipe Centerline. You may need to change the column width in order to read the component names.
 - b. Set the Pipe Centerline layer to C-SSWR-PIPE.
9. On the Display tab, change View Direction to Profile and do the following:
 - a. Turn off the display for all components except Inside Pipe Walls.
 - b. Set the layer to C-SSWR-PROF.
10. On the Display tab, change View Direction to Section and do the following:
 - a. Set Crossing Pipe Inside Wall to the C-SSWR-PIPE layer and make it visible.
 - b. Set Crossing Pipe Hatch to the C-SSWR-PIPE-PATT layer and make it visible.
 - c. Turn off Crossing Pipe Outside Wall and Sliced Solid Pipe Walls.
 - d. At the bottom of the dialog, click in the Pattern column for the Crossing Pipe Hatch component type to display the Hatch Pattern dialog.
 - e. Set Type to Solid Fill, as shown in [Figure 19.39](#), and click OK.

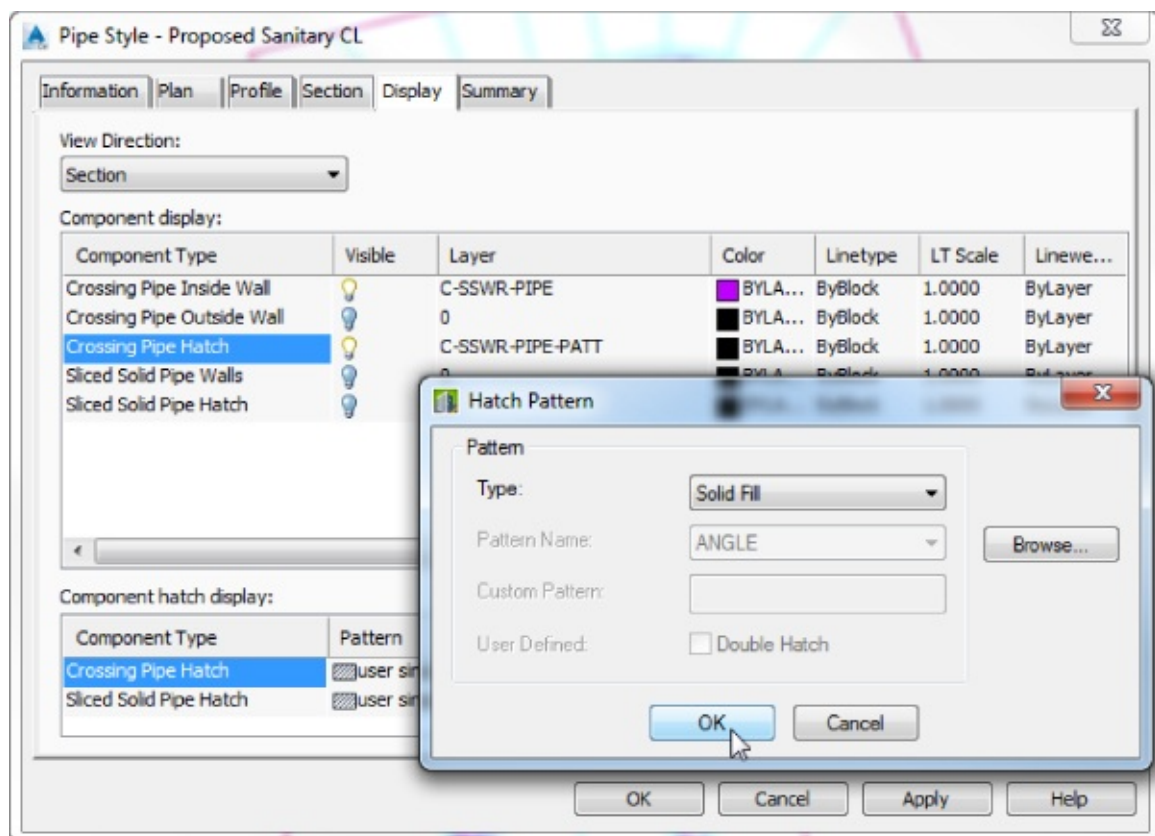


Figure 19.39 Setting the Hatch Pattern display for the Section View Direction

11. Click OK to finish creating a new pipe style.
12. From the Prospector tab of Toolspace, expand and select Pipe Networks > Networks > Sanitary Network > Pipes.

13. Using the Shift key, select all of the pipes in the item list.
14. Right-click the heading of the Style column and select Edit.
15. In the Select Pipe Style dialog, select Proposed Sanitary CL and click OK.
16. Examine the pipe in plan, profile, and cross section, as shown in [Figure 19.40](#).

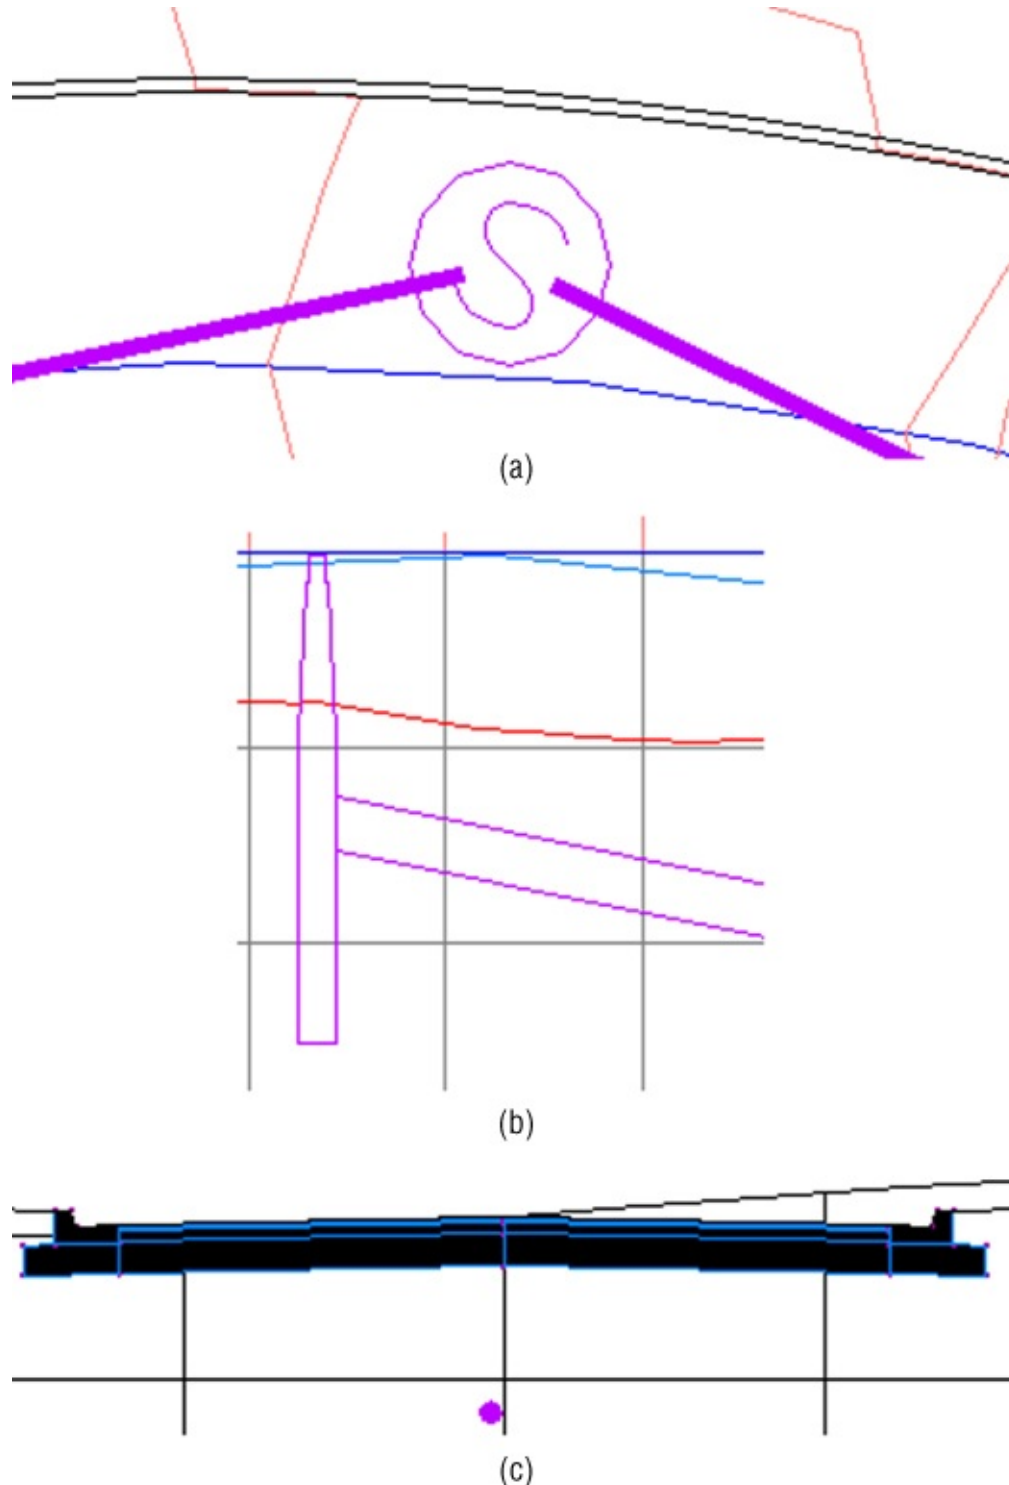


Figure 19.40 Proposed Sanitary CL pipe style shown in plan (a), profile (b), and section (c)

You can save and keep this drawing open to continue to the next exercise or use the saved copy of this drawing, 1904_PipeStyle_FINISHED.dwg (1904_PipeStyle_METRIC_FINISHED.dwg), available from the book's web page.

Hey! Why Does My Pipe Look Like an Octagon?

The Civil 3D program helps itself perform better on large drawings by knocking down the resolution of 3D curved objects, such as the pipe in the cross-section view in the previous steps.



The system variable you can use to make these pipes look nicer is Facet Deviation, or FACETDEV. The default FACETDEV value for any Imperial unit drawing is 0.5 inches. In metric drawings, the default is 10 millimeters. The lower the FACETDEV value, the smoother the 3D curve.

Note that another variable, FACETMAX, controls the maximum number of facets on any curved object. The Civil 3D default of 500 facets is usually more than enough to display a Civil 3D pipe smoothly.

In the next pipe style example, you will create a style that uses several options for hatching pipe walls for a pipe:

1. Open 1904_PipeStyle_FINISHED.dwg (1904_PipeStyle_METRIC_FINISHED.dwg).
2. From the Settings tab of Toolspace, expand Pipe ► Pipe Styles.
3. Right-click Pipe Styles and select New.
4. On the Information tab, set Name to **Proposed Hatch Wall**.
5. On the Plan tab, do the following:
 - a. Verify that Pipe Hatch Options is set to Hatch Walls Only.
 - b. Verify that Align Hatch To Pipe is selected.
6. On the Profile tab, do the following:
 - a. Verify that Pipe Hatch Options is set to Hatch Walls Only.
 - b. Verify that Align Hatch To Pipe is selected.
7. On the Display tab with View Direction set to Plan, do the following:
 - a. Verify that the only components turned on are Inside Pipe Walls, Outside Pipe Walls, Pipe End Line, and Pipe Hatch components.
 - b. Set all four layers to C-SSWR-PIPE.
 - c. Click the Component Hatch Display Scale field and type in a new value of **0.1**.
8. On the Display tab, change View Direction to Profile and do the following:

- a. Verify that the only components turned on are Inside Pipe Walls, Outside Pipe Walls, Pipe End Line, and Pipe Hatch.
 - b. Set all four of these layers to C-SSWR-PROF.
9. Click OK to complete the creation of a new pipe style.
10. From the Prospector tab of Toolspace, expand Pipe Networks > Networks > Sanitary Network > Pipes.
11. Select all of the pipes in the Item list using the Shift key.
12. Right-click the heading of the Style column and select Edit.
13. In the Select Pipe Style dialog, select Proposed Hatch Wall, and click OK.
14. Examine the pipe in plan and profile, as shown in [Figure 19.41](#). It looks very similar in both views.

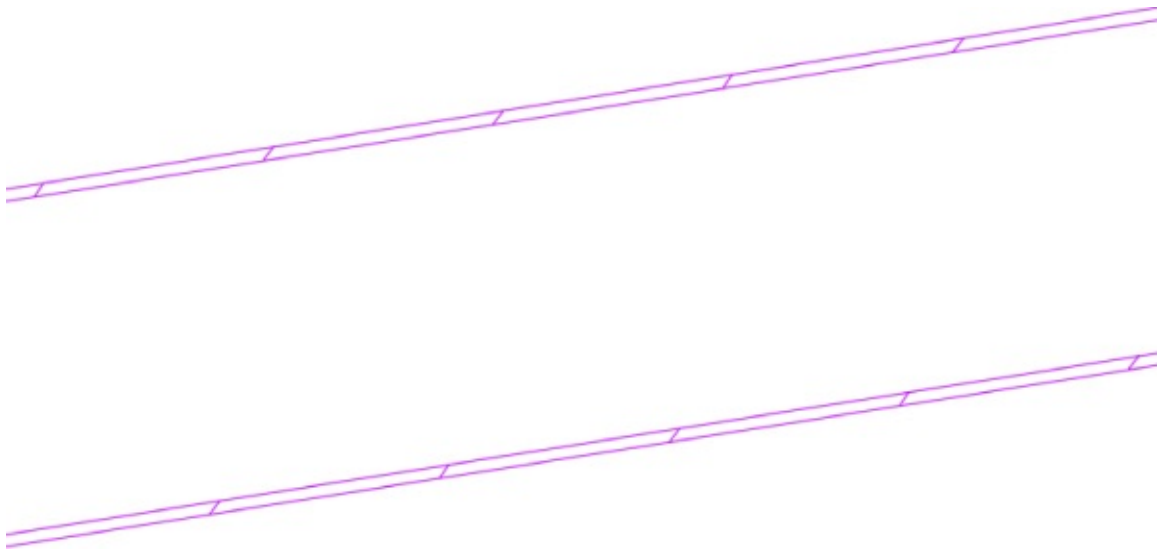


Figure 19.41 Proposed Hatch Wall pipe style shown in plan

Depending on your drawing's scale, it may or may not be worth it to you to add a pipe wall hatch because with thin walls it may be hard to see, as shown in [Figure 19.41](#).

When this exercise is complete, you can save and close the drawing. A saved copy of this drawing, 1904_PipeStyleHatch_FINISHED.dwg (1904_PipeStyleHatch_METRIC_FINISHED.dwg), is available from the book's web page.

You could do this same exercise for a Pressure Pipe style. The only difference would be setting the layers to C-WATR-PIPE instead of C-SSWR-PIPE, or C-WATR-PROF instead of C-SSWR-PROF.

Structure Styles

The following tour through the structure-style interface can be used for reference as you create company-standard styles:

Information Tab This tab allows you to define the name for the style and its description.

Model Tab The Model tab ([Figure 19.42](#)) controls what represents your structure when you're working in 3D. Typically, you want to leave the Use Catalog Defined 3D Part radio button selected so that when you look at your structure, it looks like your flared end section or whatever you've chosen in the parts list.

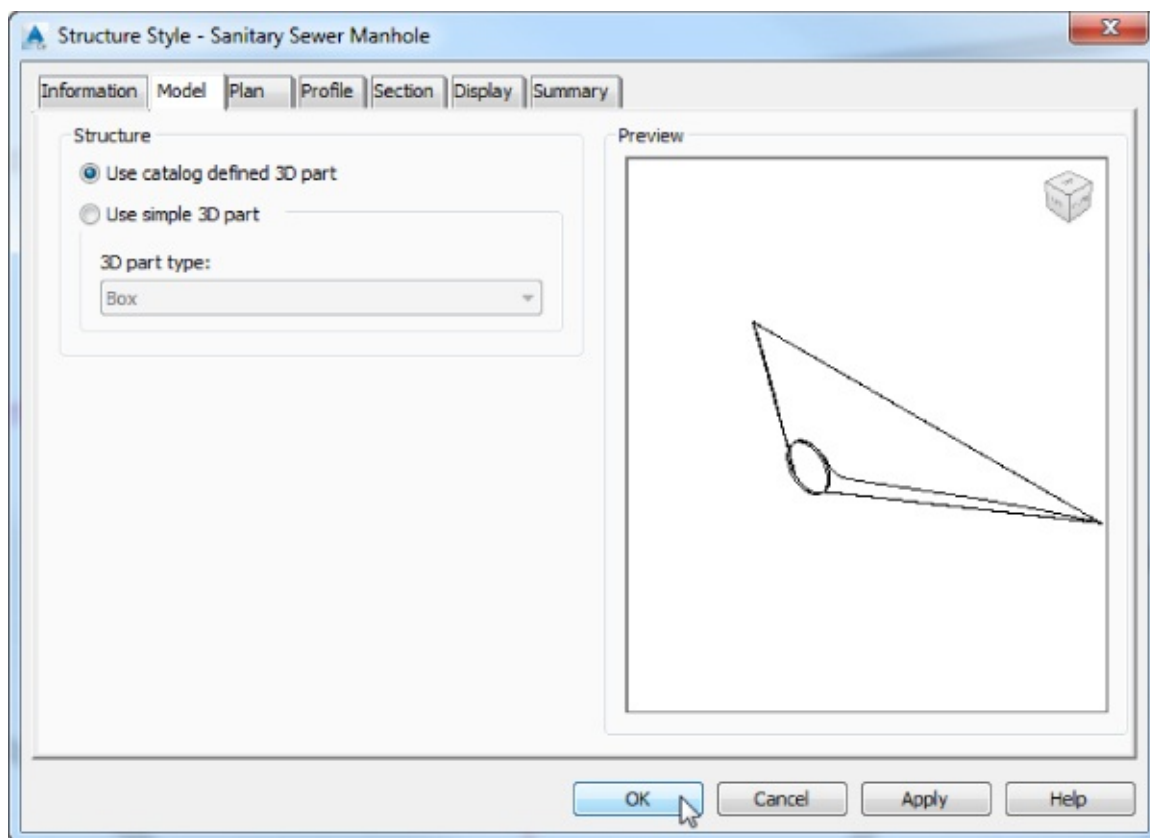


Figure 19.42 The Model tab in the Structure Style dialog

Plan Tab The Plan tab ([Figure 19.43](#)) enables you to compose your object style to match any particular standard.

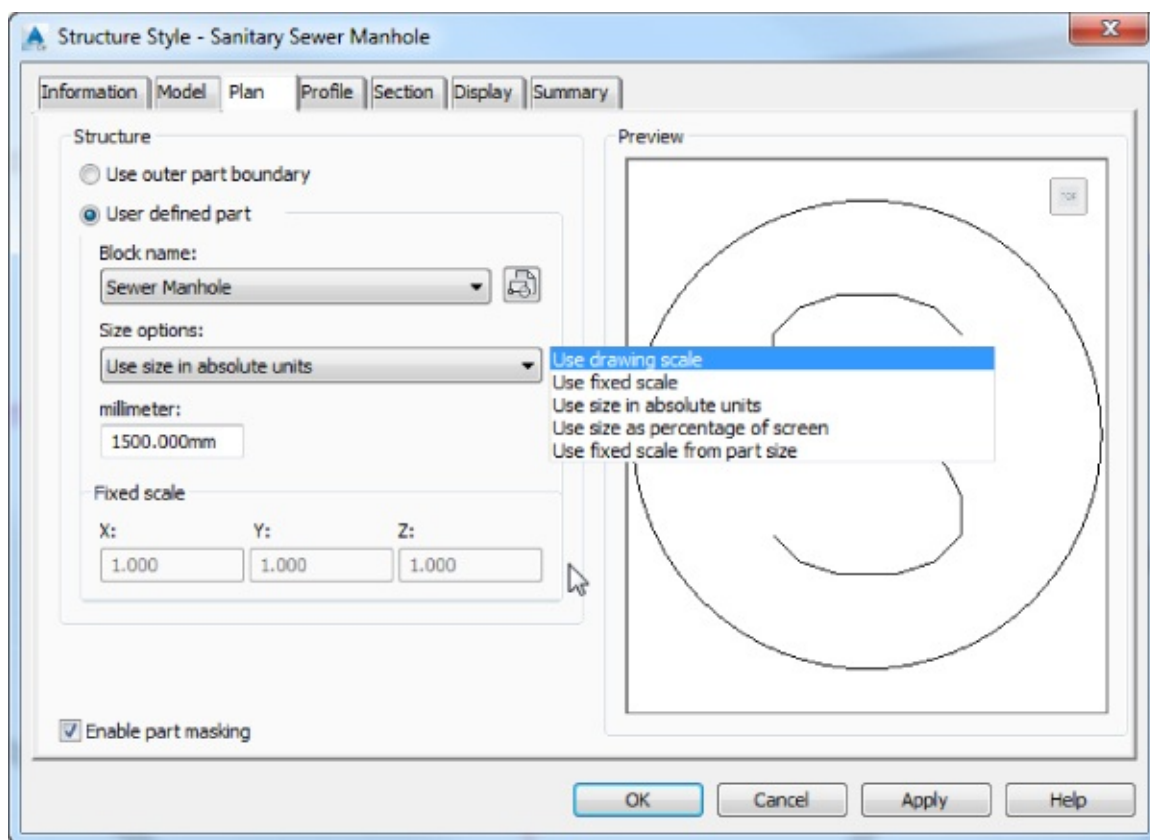


Figure 19.43 The Plan tab in the Structure Style dialog

Options on the Plan tab include the following:

1. **Use Outer Part Boundary** This option uses the limits of your structure from the parts list and shows

you an outline of the structure as it would appear in the plan.

2. **User Defined Part** This option uses any block you specify. In the case of your flared end section, you chose a symbol to match the CAD standard. When using User Defined Part, you also must provide Size Options. The options in this drop-down are similar to what you see in other styles, such as point or marker styles in Civil 3D.

- Use Drawing Scale will treat the object like an annotative block.
- Use Fixed Scale allows you to enter X, Y, and Z scale factors as you would do when inserting a block.
- Use Size In Absolute Units is a common way to represent a manhole at actual size.
- Use Size As Percentage Of Screen keeps the part the same size whether you zoom in close or are far away.
- Use Fixed Scale From Part Size will stretch the block around the part even if the dimensions of both don't match.

3. Enable **Part Masking** This option creates a wipeout or mask inside the limits of the structure. Any pipes that connect to the center of the pipe appear trimmed at the limits of the structure. This will mask the pipes entering and exiting the structure based on where they intersect the actual walls of the structure as modeled. Keep in mind that when using a block, these locations may not match the extents of the block.

4. **Profile Tab** The Profile tab ([Figure 19.44](#)) is where you configure what your structure will look like in profile view.

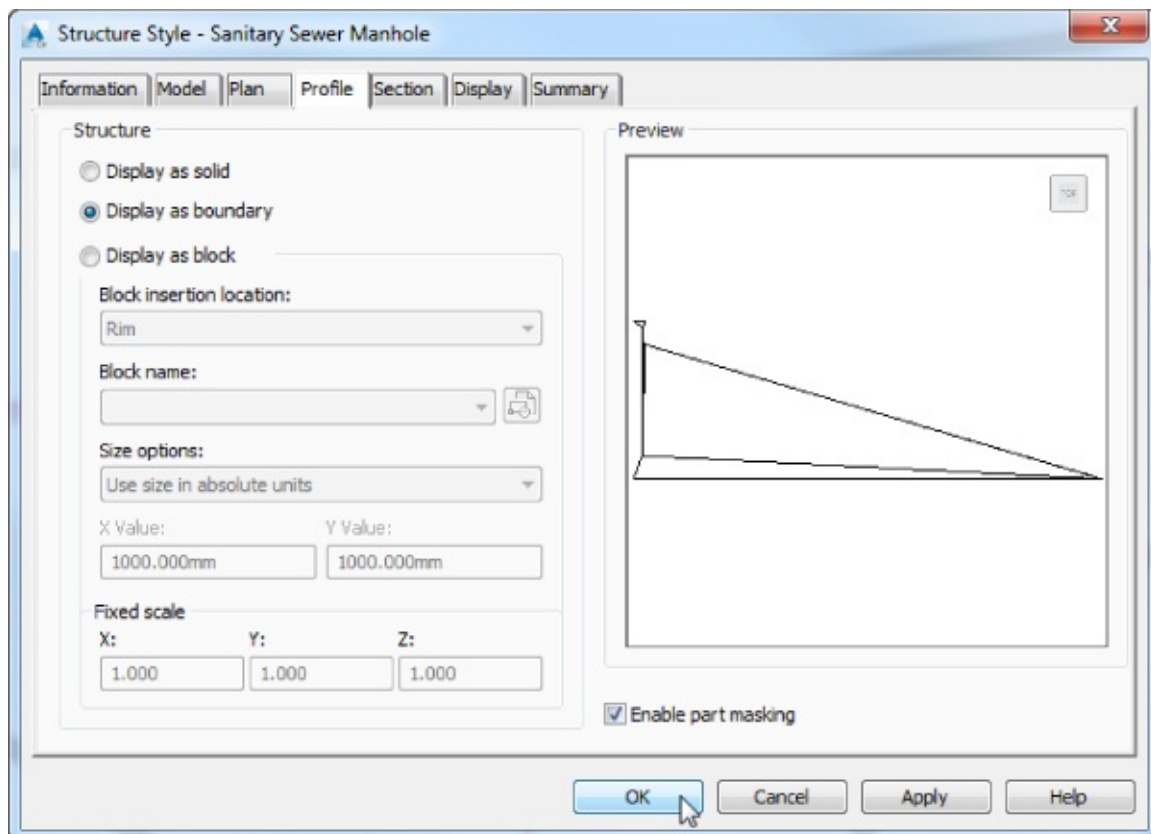


Figure 19.44 The Profile tab in the Structure Style dialog

Options on the Profile tab include the following:

Display As Solid This option uses the limits of your structure from the parts list and shows you the mesh of the structure as it would appear in profile view.

Display As Boundary This option uses the limits of your structure from the parts list and shows you an outline of the structure as it would appear in profile view. You'll use this option for the sanitary manhole.

Display As Block This option uses any block you specify. When using a structure displayed as a block, you also must provide Size Options. The Size Options are the same as the ones described for the Plan tab.

Enable Part Masking This option creates a wipeout or mask inside the limits of the structure. Any pipes that connect to the center of the pipe appear trimmed at the limits of the structure.

Section Tab The Section tab ([Figure 19.45](#)) is where you configure what your structure will look like in section view.

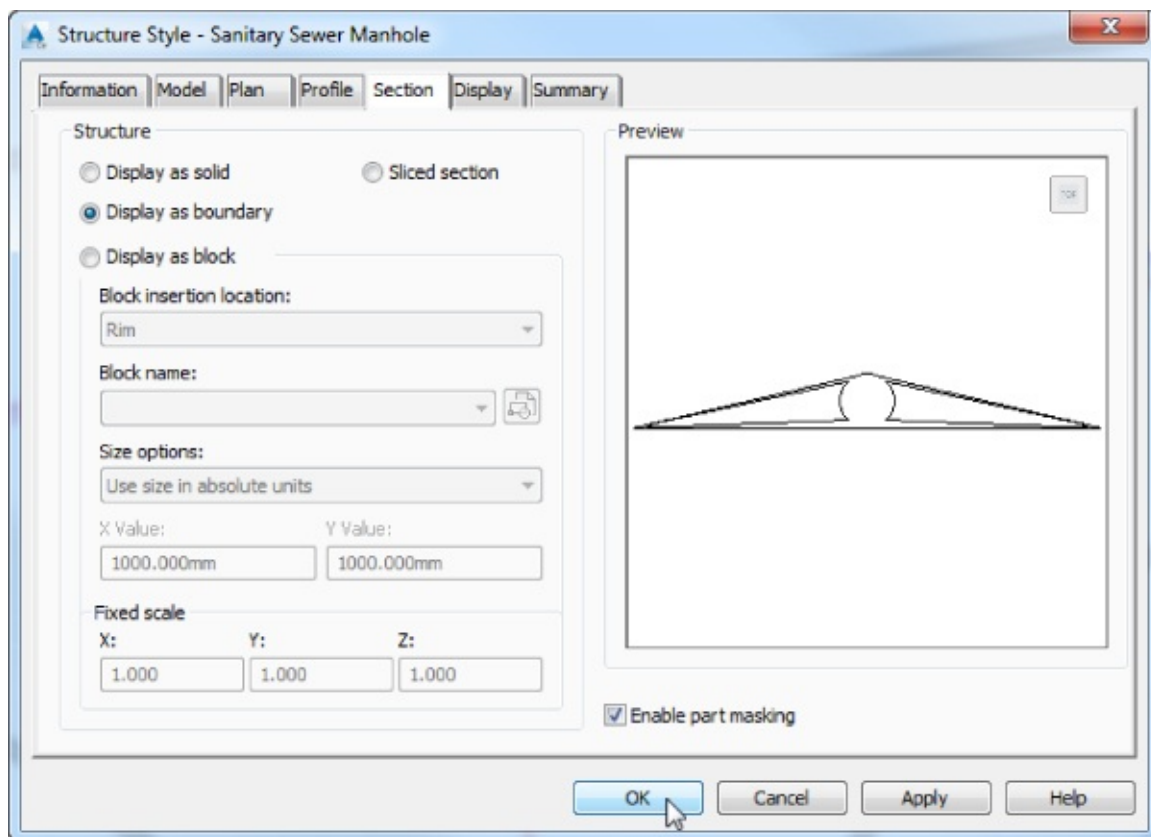


Figure 19.45 The Section tab in the Structure Style dialog

These options look (and behave) very much like the Profile tab options listed earlier with the following exception: the 2015 release allows the option to display the sliced section of the structure.

In the following exercise, you'll create a new structure style that uses a block in plan view to represent a sanitary manhole. Because the block is drawn at actual size, you will use the size option Use Fixed Scale.


1. Open the 1905_StructureStyle.dwg (1905_StructureStyle_METRIC.dwg) file, which you can download from this book's web page.
2. From the Settings tab of Toolspace, expand Structure > Structure Styles.
3. Right-click Structure Styles and select New.
4. On the Information tab, rename the style to **Simple Sanitary Manhole**.

5. On the Plan tab, do the following:
 - a. Verify that User Defined Part is selected.
 - b. Set the Block Name to **_Wipeout_Circle** using the list box.
 - c. Set Size to Use Fixed Scale.
 - d. Set the X and Y scale factors to **3** (**1** for metric).
6. On the Display tab with View Direction set to Plan, set the Structure layer to C-SSWR-STRC.
7. Repeat step 6 with View Direction set to Profile, and then repeat with View Direction set to Section.
8. Click OK to complete the style.
9. From the Prospector tab of Toolspace, expand Pipe Networks > Networks > Sanitary Network > Structures.
10. Using the Shift key, select all of the structures in the Item list.
11. Right-click the heading of the Style column and select Edit.
12. In the Select Structure dialog, select Simple Sanitary Manhole and click OK.
13. To observe the style change in plan, select any one of the structures, right-click, and click Zoom To. Run a regen command to refresh the representation of the data in the file.

When this exercise is complete, you can save and close the drawing. A saved copy of this drawing, 1905_StructureStyle_FINISHED.dwg (1905_StructureStyle_METRIC_FINISHED.dwg), is available from the book's web page.

While this example discussed creating object styles for a structure, you will find that the same procedure is applicable to the Appurtenances and Fittings styles used in pressure pipe networks.

Creating Profile View Styles

 When you are looking at a profile view that contains data, you are seeing many styles displayed. The profiles themselves (existing and proposed) have a profile object style applied to them. The labels consist of many types of styles, as you learned in Chapter 18. Additionally, there are profile view styles and band styles to consider.

This section focuses on the profile view. A profile view controls many aspects of the display. The profile view style consists of some of the following properties:

- Vertical exaggeration
- Grid spacing
- Elevation and station annotation
- Title annotation

[Figure 19.46](#) shows a profile view with some of its basic components labeled. There are many more components in a profile view style.

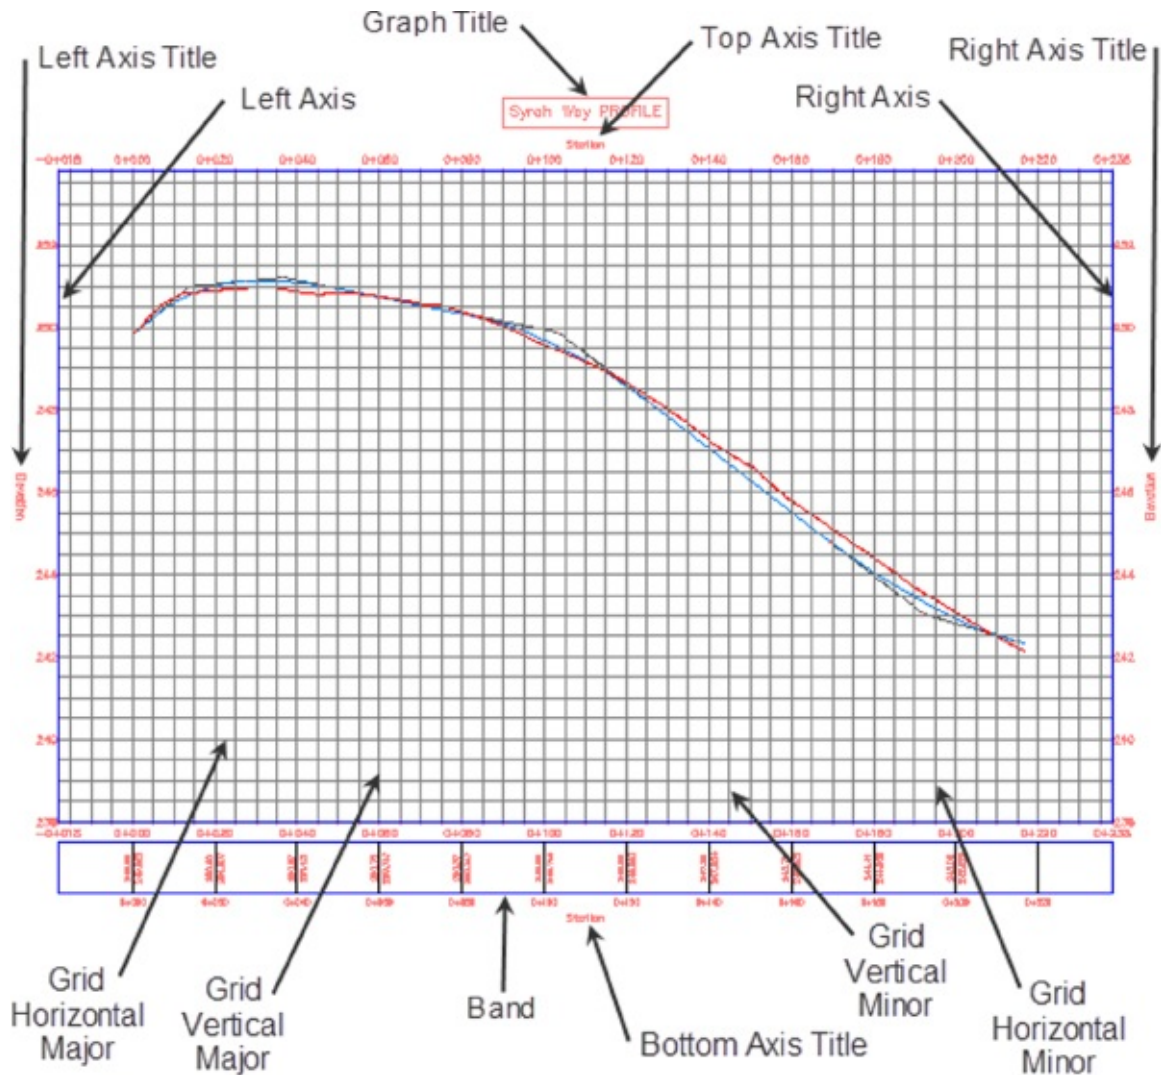


Figure 19.46 Profile view style with some of its basic components labeled

In the example that follows, you will be making major modifications to a profile view style. The profile view you will be practicing with does not contain any bands. Later on in this section, you will learn the ins and outs of band creation and modification.

1. Open the 1906_ProfileViewStyles.dwg (1906_ProfileViewStyles_METRIC.dwg) file.
This file contains a profile view of Cabernet Court with a very ugly style applied to it. You will perform a complete makeover on this style.
2. Zoom in as close as possible so you can see the entire profile view and select the profile view by clicking anywhere on a grid line or axis.
3. From the Profile View contextual tab select Profile View Properties > Edit Profile View Style, as shown in [Figure 19.47](#).

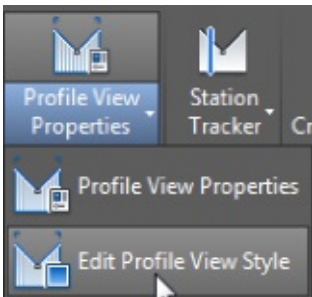


Figure 19.47 Accessing the profile view style

4. Position the dialog on your screen so you can make changes to the style and observe the changes in the profile view behind it.
5. On the Graph tab, change the Vertical Exaggeration value to **10**, as shown in [Figure 19.48](#), and click Apply.

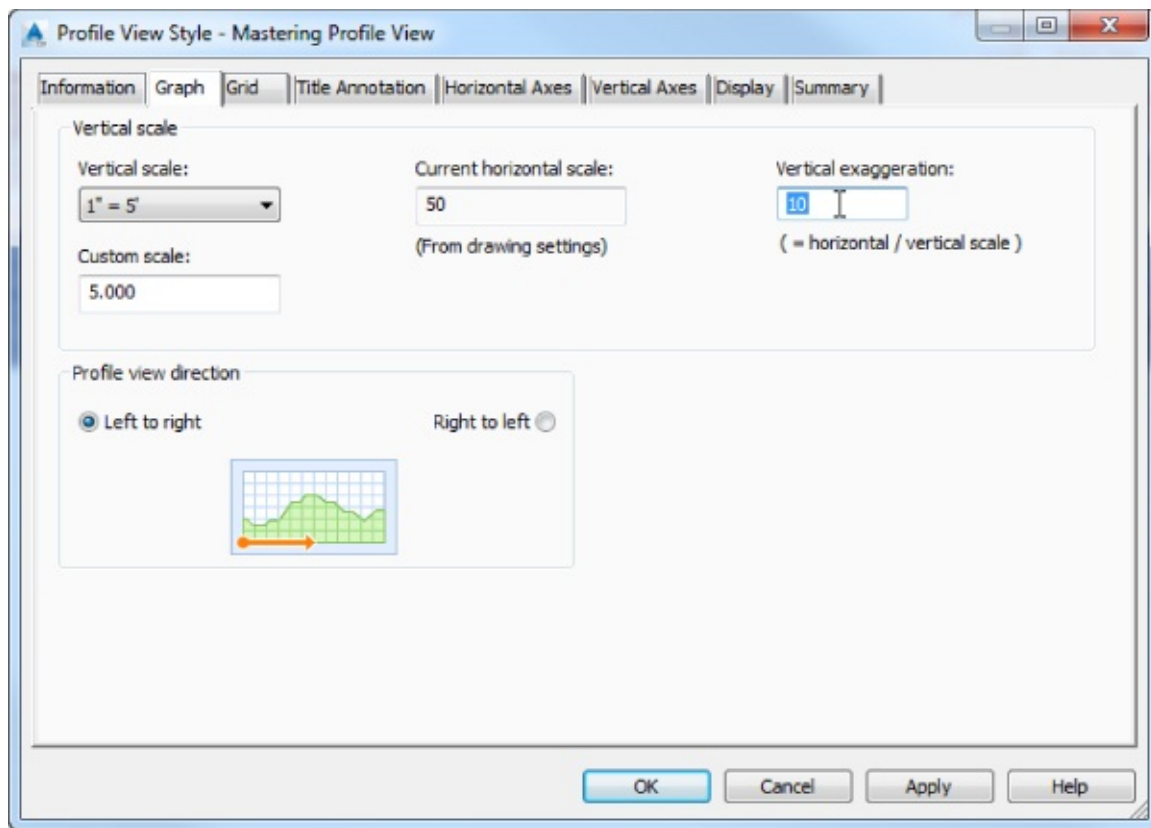


Figure 19.48 Change Vertical Exaggeration on the Graph tab : of the Profile View Style dialog.

When you do, you will notice that the Vertical Scale listed in the dialog automatically changes from 1" = 50' to 1" = 5' (or from 1:500 to 1:50 for metric users). In addition, if you can see your profile view in the background, you should notice that it has expanded vertically by a factor of 10.

6. On the Grid tab, do the following:
 - a. Verify that both the Clip Vertical Grid and Clip Horizontal Grid options are unchecked.

If you need additional information on any of the controls on this tab, click the Help button at the bottom of the dialog.
 - b. Set Grid Padding (Major Grids) to **0.5** for Above Maximum Elevation and **0.5** for Below Datum.

This setting will create additional space above and below the design data at 0.5 times the vertical major tick interval (you will set the major tick interval later).
 - c. Set all values for Axis Offset (Plotted Units) to **0**.
 - d. Click Apply to review changes on the profile view.

This will ensure that the axes and the grid lines coincide around the edges of the view. The settings on the Grid tab should match what are shown in [Figure 19.49](#).

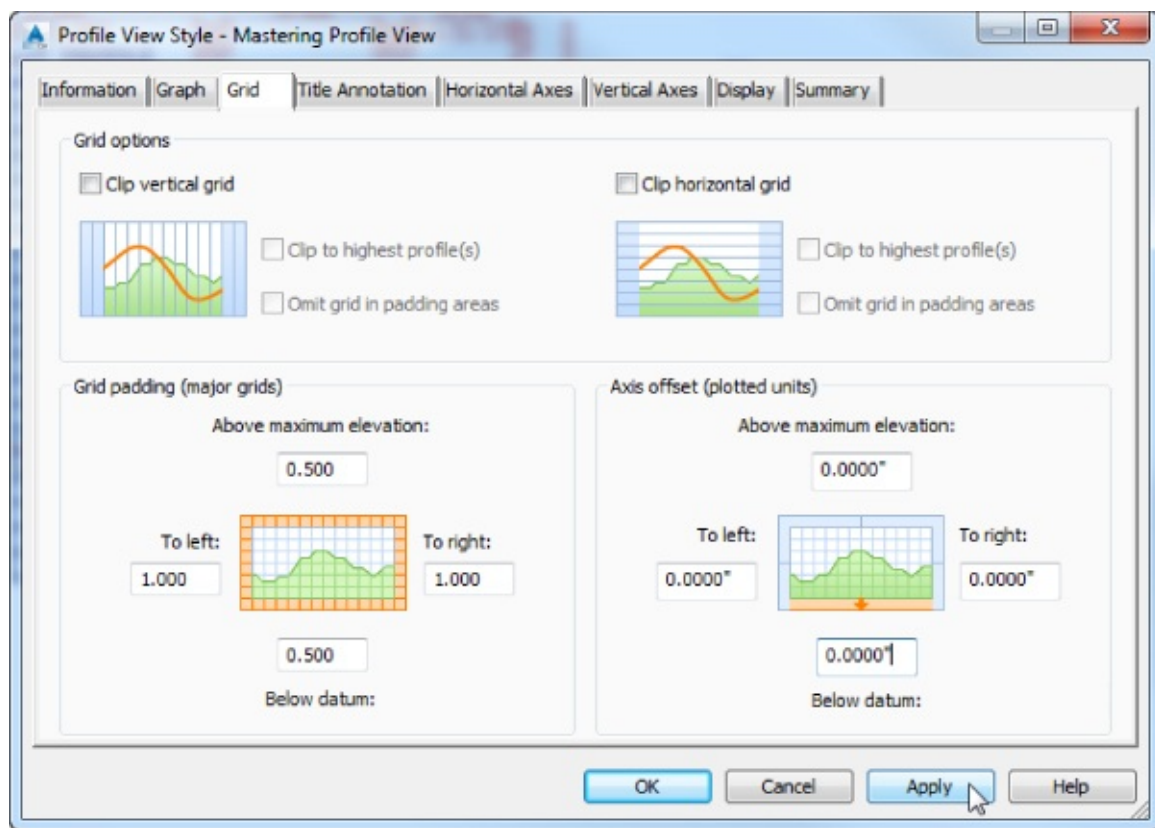



Figure 19.49 The Grid tab of the Profile View Style dialog


7. On the Title Annotation tab, do the following:

- a. In the Graph View Title area, change Text Height to **0.4"** (or **10 mm**).
- b. In the Graph View Title area, click the Edit Mtext button.

c.  In the Text Component Editor dialog, remove all the text in the Text Component EditorS window.

You will be starting over with a blank Text Component Editor dialog.

d. From the Properties drop-down, select Parent Alignment and make these changes:

- Set Capitalization to Upper Case.
-  Click the arrow button to add the Property field to the Text Component Editor window.
- Click in the Text Component Editor window behind the Property field, add a space, and type **PROFILE VIEW**.

e. Click OK to accept the entry in the Text Component Editor dialog.

f. Change the Y Offset for the Title Position to **2"** (or **10 mm**).

8. Click Apply and examine your changes in the background.

The Title Annotation tab should match the settings shown in [Figure 19.50](#).

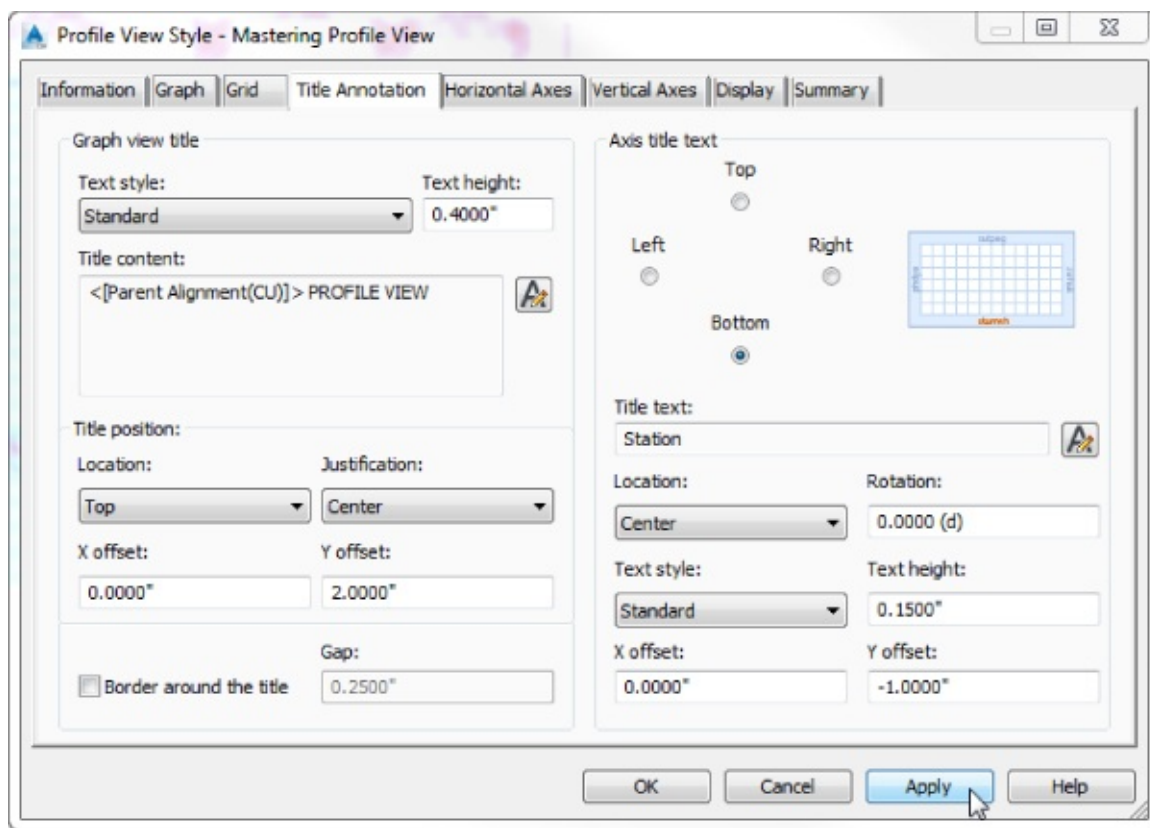


Figure 19.50 Working with the Graph View Title size and placement

Do not bother to adjust any settings for Axis Title Text on the right side of [Figure 19.50](#) because the display will be turned off for all four of these possible elements.

9. On the Horizontal Axes tab, do the following:
 - a. Verify that the Axis To Control radio button is set to Bottom.
 - b. In the Major Tick Details area, set Interval to **100'** (or **20 m**).
 - c. In the Major Tick Details area, click the Edit Mtext button.
 - d. In the Text Component Editor dialog, do the following:
 - Remove all the text in the Text Component Editor window.
 - From the Properties drop-down, select Station Value.
 - Change Precision to **1**.
 - Click the arrow button to add the Property field to the Text Component Editor window.
 - e. Click OK to accept the entry in the Text Component Editor dialog.
 - f. In the Major Tick Details area, change Rotation to **90**.
 - g. In the Major Tick Details area, change the X offset to **0"** (**0 mm**) and the Y offset to **-0.25"** (**-10 mm**).
 - h. In the Minor Tick Details area, set Interval to **50'** (**10 m**).

No other changes are needed in the Minor Tick Details area.

The Horizontal Axes tab should match the settings shown in [Figure 19.51](#).

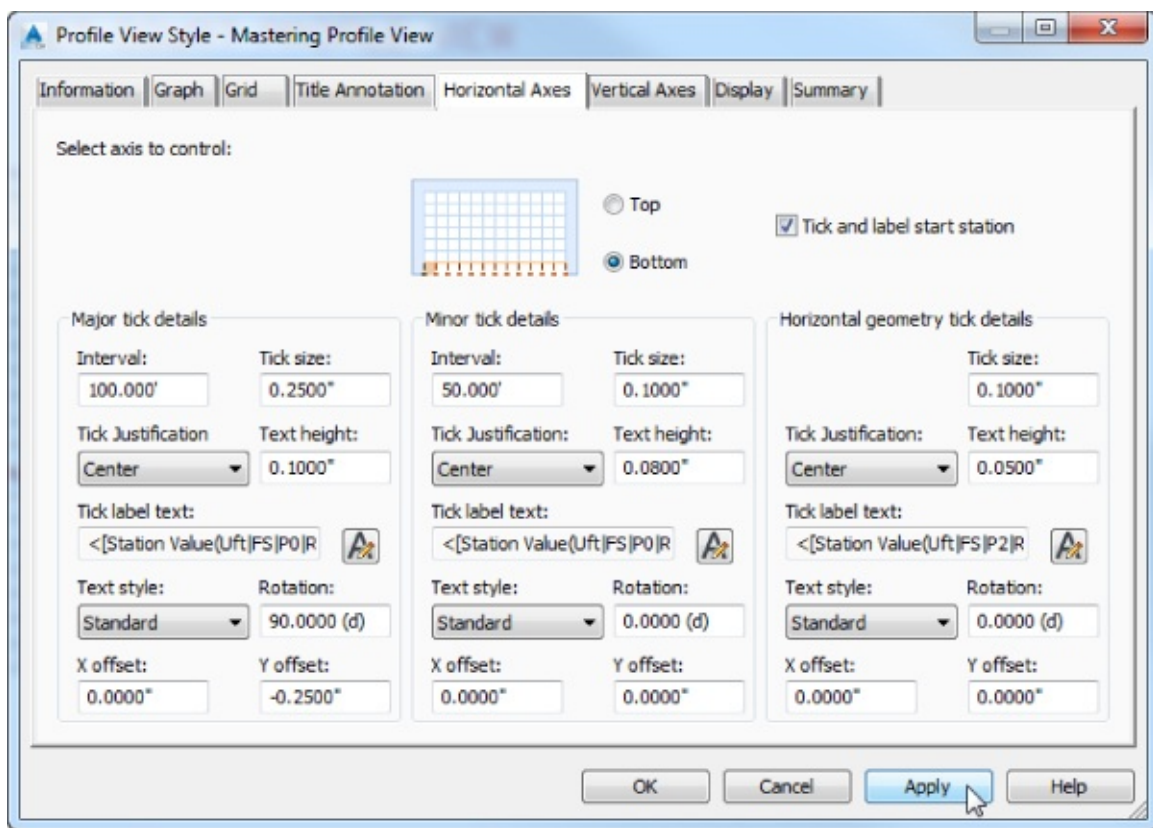


Figure 19.51 The bottom axis controls grid spacing.

10. On the Vertical Axes tab, do the following:


- a. Verify that the Select Axis To Control radio button is set to Left.
- b. In the Major Tick Details area, click the Edit Mtext button.
- c. In the Text Component Editor dialog, do the following:
 - Remove all the text in the Text Component Editor window.
 - From the Properties drop-down, select Profile View Point Elevation.
 - Change Precision to 1.
 - Click the arrow button to add the Property field to the Text Component Editor window.
- d. Click OK to exit the Text Component Editor dialog.
- e. In the Major Tick Details area, change the X offset to **-0.25"** (-5 mm) and the Y offset to **0"** (0 mm).

All the changes made up to this point on the Vertical Axes tab apply to the Left axis. You will now do similar modifications to the Right axis.

- f. Change the Select Axis To Control radio button to Right.
- g. In the Major Tick Details area, click the Edit Mtext button.
- h. In the Text Component Editor dialog, do the following:
 - Remove all the text in the Text Component Editor window.
 - From the Properties drop-down, select Profile View Point Elevation.
 - Change Precision to 1.

- Click the arrow button to add the property value to the Text Component Editor window.
 - i. Click OK to exit the Text Component Editor.
 - j. In the Major Tick Details area, change the X offset to **0.25"** (5 mm) and the Y offset to **0"** (0 mm).
11. Click Apply and examine your changes.

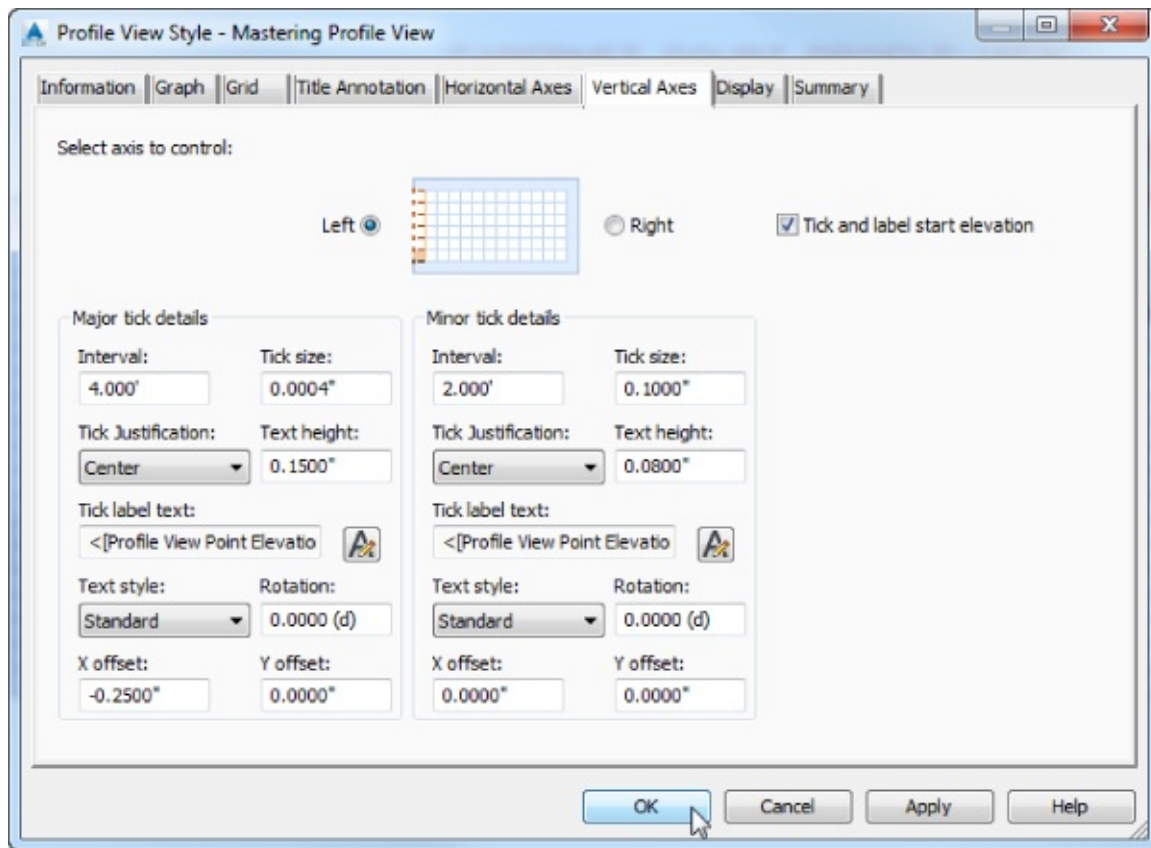[Figure 19.52](#) shows the Vertical Axes tab as yours should look at this point in the exercise.



[Figure 19.52](#) Don't forget to change the settings for both the Left and Right axes in this tab.

12. On the Display tab, do the following:
- a. Select all of the components and use the lightbulb icon to turn off visibility for all of the components.
 - b. Turn back on the visibility for the following components:
 - Graph Title
 - Left Axis
 - Left Axis Annotation Major
 - Right Axis
 - Right Axis Annotation Major
 - Top Axis
 - Bottom Axis
 - Bottom Axis Annotation Major
 - Grid Horizontal Major

- Grid Horizontal Minor
- Grid Vertical Major
- Grid Vertical Minor

13. Click OK to complete the profile view style.

Your profile view should resemble [Figure 19.53](#).

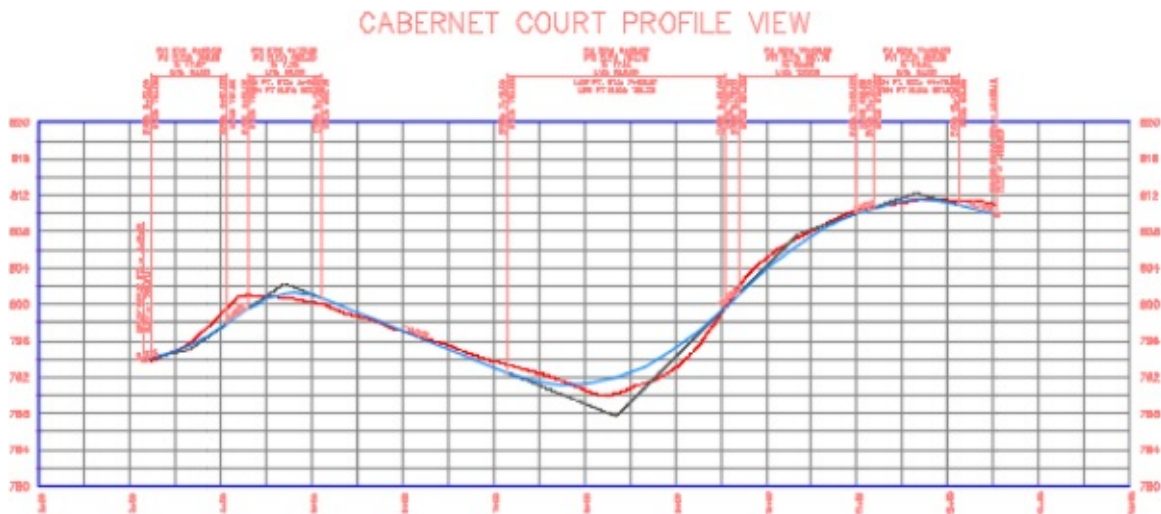


Figure 19.53 The profile view style updated to reflect the changes

When this exercise is complete, you can save and close the drawing. A saved copy of this drawing, 1906_ProfileViewStyles_FINISHED.dwg (1906_ProfileViewStyles_METRIC_FINISHED.dwg), is available from the book's web page.

What Drives Profile View Grid Spacing?

On the Horizontal Axes tab and Vertical Axes tab of the Profile View Style dialog, you may notice that you can control opposing axes separately. Each tab has a toggle for Select Axis To Control: Top or Bottom and Left or Right.

The Bottom and Left options in the respective tabs control grid spacing. For both axes, you will find options for Major Tick Details. The Interval values for the major ticks are the key to getting the grid spacing to look the way you want. Changes to either horizontal or vertical major tick intervals will affect the height and length of the profile view, as well as grid spacing. Changing the Interval value on Minor Tick Details will affect the grid spacing but will not affect the aspect ratio of the profile view.

Here is a common practice for setting major tick interval values for your horizontal and vertical axes:

Vertical Exaggeration value (Grid tab) × Major Tick Interval value (Vertical Axes tab – right or left) = Major Tick Interval value (Horizontal Axes tab – top or bottom)

Therefore, a profile view style with Vertical Exaggeration set to 10 and Vertical Major Tick Intervals set to 5' would yield horizontal major tick intervals set to 50'.

Even if you don't turn on the ticks or grid lines on these axes, the spacing increment will be reflected in the profile view.

Profile View Bands

Data bands are strips of labels and/or schematics that display additional information about the profile or alignment that is referenced in a profile view. The most common band type is the profile data band.

Bands can be applied to both the top and bottom of a profile view, and there are six band types: Profile Data Bands, Vertical Geometry Bands, Horizontal Geometry Bands, Superelevation Data Bands, Sectional Data Bands, and Pipe Network Bands. These band types were discussed in Chapter 7, “Profiles and Profile Views,” but graphic reminders of the various band types are shown in [Figure 19.54](#), [Figure 19.55](#), [Figure 19.56](#), [Figure 19.57](#), [Figure 19.58](#), and [Figure 19.59](#).



Figure 19.54 Profile Data Band showing existing and proposed elevation in addition to major stations



Figure 19.55 Vertical Geometry Band

 


Figure 19.56 Horizontal Geometry Band

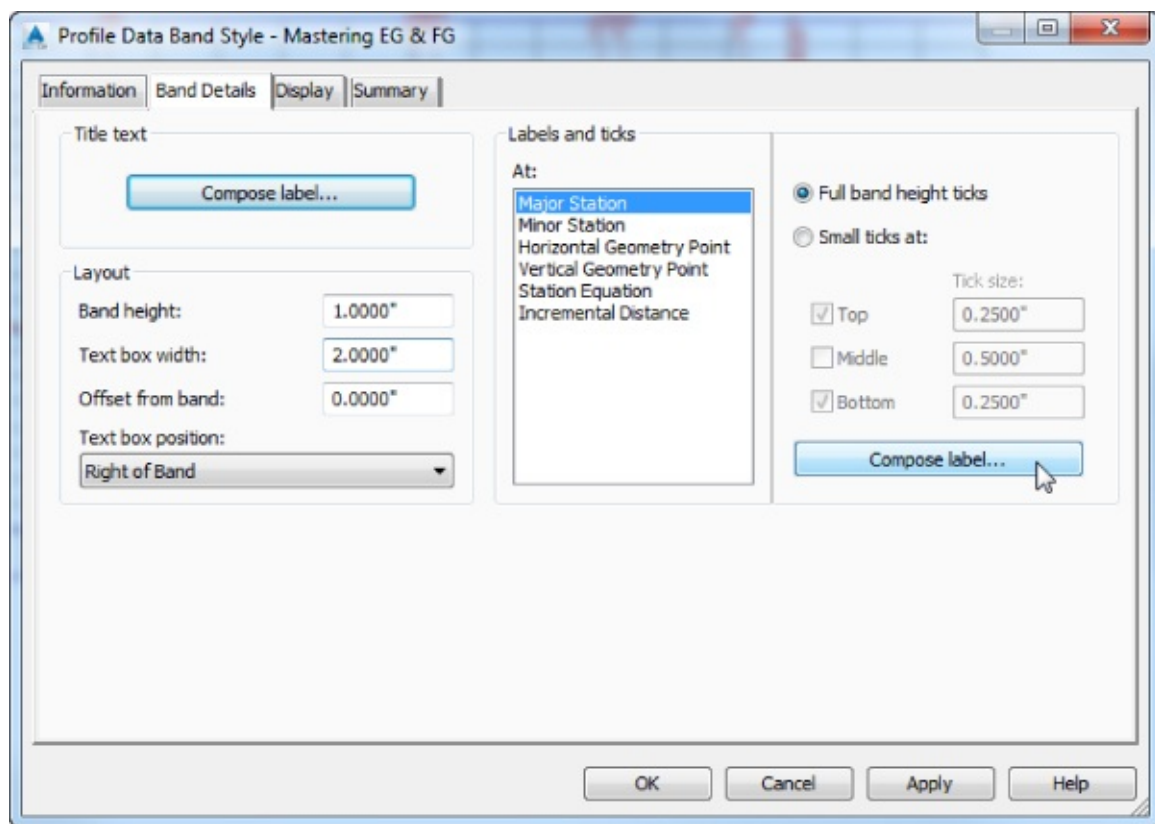
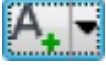


Figure 19.60 The Band Details tab

- c.  On the Layout tab of the Label Style Composer – Major Station dialog, click the Create Text Component button and make these changes:
- Set Name to **Station**.
 - Use the drop-down to change Anchor Point to Band Bottom.
 - Use the drop-down to change Attachment to Top Center.
 - Change the Y offset to **–0.1”** (or **–0.5 mm**).
 - Click the Contents value, which currently reads Label Text, and click the ellipsis to display the Text Component Editor dialog.
 - In the Text Component Editor, remove all text in the Text Component Editor window and select Station Value from the Properties list.
 - Set Precision to **1**.
 - Click the arrow button to add the Property field to the Text Component Editor window.
- d. Click OK to exit the Text Component Editor.
- e. Click the Create Text Component button again, and make these changes:
- Set Name to **Existing El**.
 - Use the drop-down to change Anchor Point to Band Middle.
 - Set Rotation Angle to **90**.
 - Use the drop-down to change Attachment to Bottom Center.
 - Change the X offset to **–0.02”** (or **–0.5 mm**).

- Click the Contents value, which currently reads Label Text, and click the ellipsis to display the Text Component Editor dialog.
 - In the Text Component Editor window, remove the Property field and select Profile1 Elevation from the Properties list.
 - Set Precision to **0.01** (or **0.001** for metric).
 - Click the arrow button to add the Property field to the Text Component Editor window.
- f. Click OK to exit the Text Component Editor.
- g. Click the Copy Component button and make these changes:
- Change Name to **Proposed El.**
 - Verify that Anchor Point is set to Band Middle.
 - Verify that Rotation Angle is set to 90.
 - Use the drop-down to change Attachment to Top Center.
 - Change the X offset to **0.02"** (or **0.5 mm**).
 - Click the Contents value and click the ellipsis to display the Text Component Editor dialog.
 - In the Text Component Editor window, double-click the existing Property field and select Profile2 Elevation from the Properties list.
 - Verify that Precision is 0.01 (or 0.001 for metric).
 - Click the arrow button to add the Property field to the Text Component Editor window.
- h. Click OK to exit the Text Component Editor.
- i. Click OK to finish working with the Major Stations Label Composer and return to the Band Details tab.
5. On the Display tab, use the lightbulb icon to turn off visibility for Minor Tick. Click OK.
6. In the profile view properties, make sure that on the Bands tab for the selected profile view Profile1 is set to EG - Cabernet Court and Profile2 is set to Cabernet Court FG. Click OK.

The completed band should resemble [Figure 19.61](#).

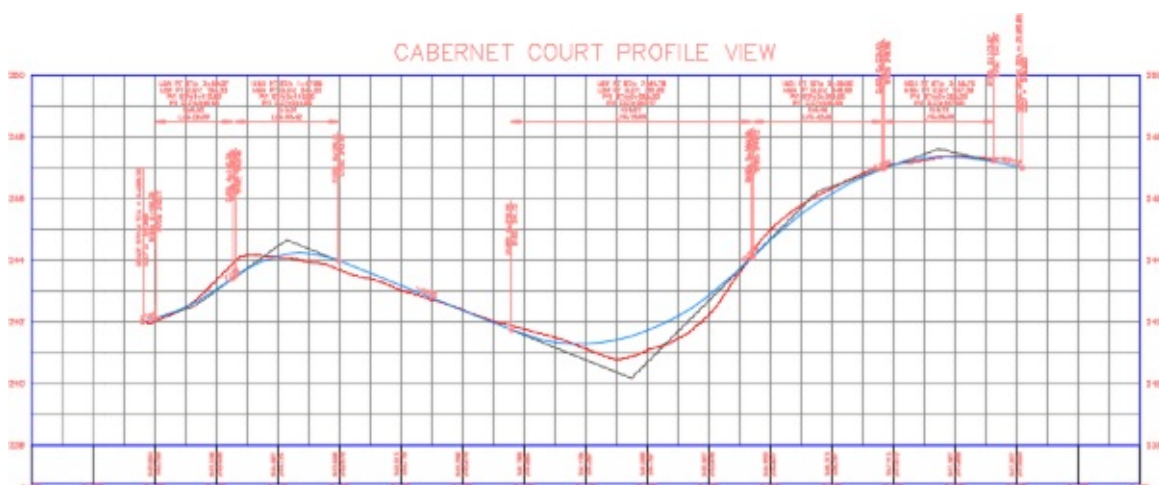


Figure 19.61 Text along the bottom of your profile view in the form of a band

As you can see, profile bands can provide a lot of information in a compact manner. In this example, you provided information only at the major stations, but you could also provide information at minor stations, horizontal geometry points, vertical geometry points, station equations, and incremental distances.

When this exercise is complete, you can save and close the drawing. A saved copy of this drawing, `1906_ProfileViewBand_FINISHED.dwg` (`1906_ProfileViewBand_METRIC_FINISHED.dwg`), is available from the book's web page.

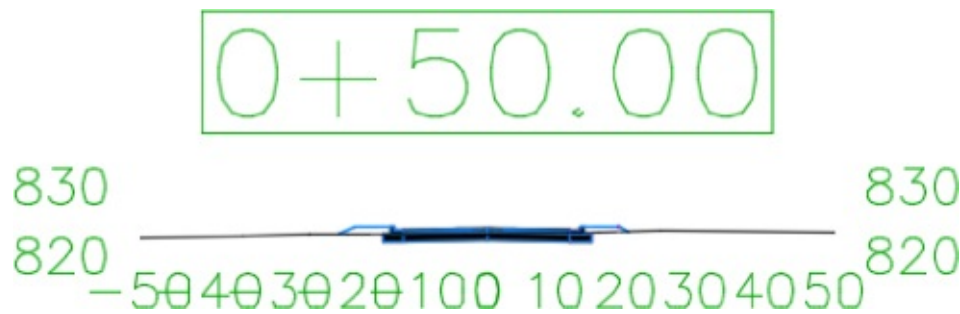
Creating Section View Styles

Section view styles share many of the same concepts as creating profile view styles. In fact, the Section View Style dialog has all the same tabs and looks nearly identical to the Profile View Style dialog.


In this section, you will walk through the creation of a section view style suitable for creating a section sheet:

1. Open the `1907_SectionStyles.dwg` (`1907_SectionStyles_METRIC.dwg`) file.
This file contains section views created with the default settings for section views.
2. From the Settings tab of Toolspace, expand Section View > Section View Styles > Road Section.
3. Right-click Road Section and select Edit.
4. On the Grid tab, set Grid Padding (Major Grids) to **0** for the Above Maximum Elevation and Below Datum options.
5. On the Display tab, turn off the visibility for all components except
 - Graph Title
 - Left Axis Annotation Major
 - Right Axis Annotation Major
 - Bottom Axis Annotation Major
6. Click OK.

Your section views should resemble [Figure 19.62](#).



[Figure 19.62](#) Yes, this is correct! It is a very stripped-down section view.

7. Select one of the views by clicking the station label.
8.  From the Section View contextual tab > Modify View panel, select Update Group Layout.

The section views will rearrange to fit more sections per page.

The section view is so bare bones because the section view grid will come from the group plot style, so the only information you really need is in this simple style.

To continue to the next exercise, you can save and keep this drawing open or use the saved copy of this drawing, `1907_SectionStyles_FINISHED.dwg` (`1907_SectionStyles_METRIC_FINISHED.dwg`), available from the book's web page.

Group Plot Styles

Group plot styles determine how sections are arranged on a sheet. When multiple section views are created, the group plot style uses the Section template file discussed in Chapter 15, “Plan Production,” and places sections inside the paperspace viewport:

1. If your file isn't still open from the previous exercise, open `1907_SectionStyles_FINISHED.dwg` (`1907_SectionStyles_METRIC_FINISHED.dwg`).

You can download either file from this book's web page. This file contains section views created with the default settings.

2. From the Settings tab of Toolspace, expand Section View > Group Plot Styles.
3. Right-click Basic and select Edit.
4. On the Array tab, change the column spacing to **4"** (or **100 mm**). Change the row spacing to **2"** (or **50 mm**), as shown in [Figure 19.63](#).

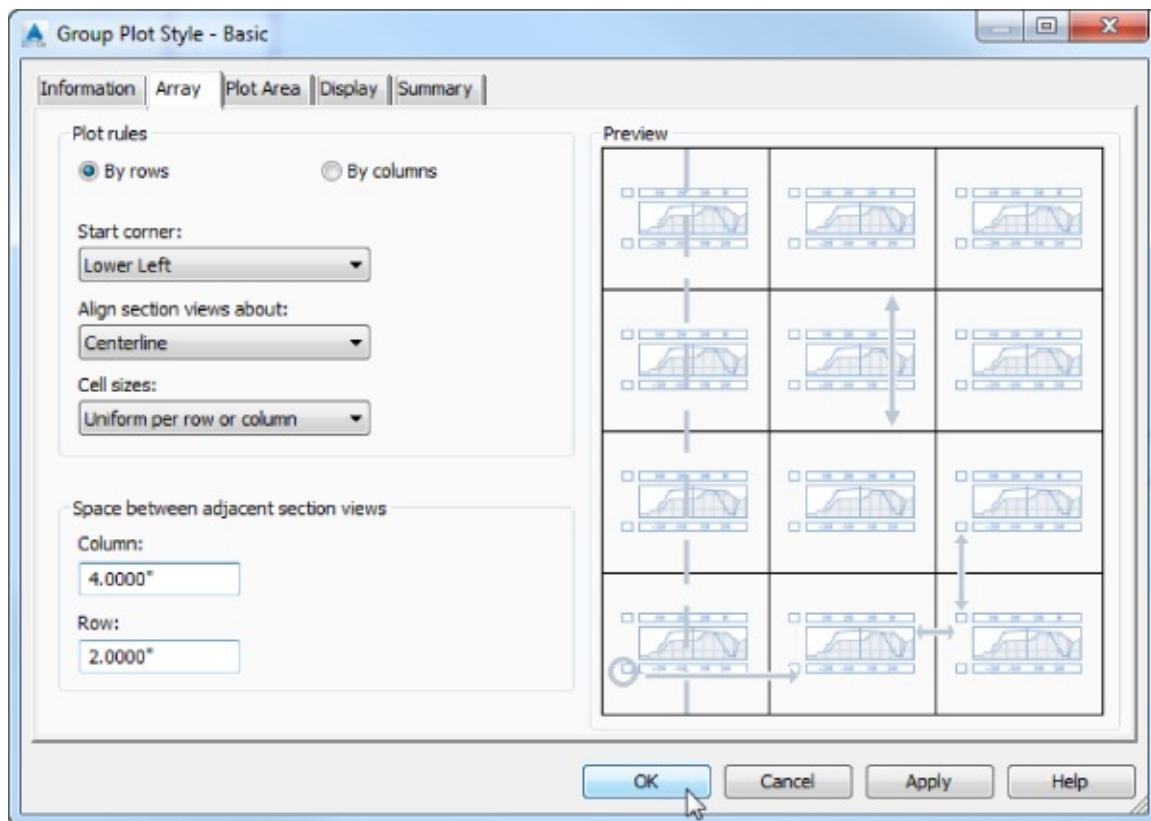


Figure 19.63 The Array tab controls section view spacing.

These spacing changes should allow a more aesthetic arrangement of cross sections per page and ample room for moving the views up and right to fit on the page better in the upcoming steps.

5. On the Plot Area tab, leave all the default settings, as shown in [Figure 19.64](#).

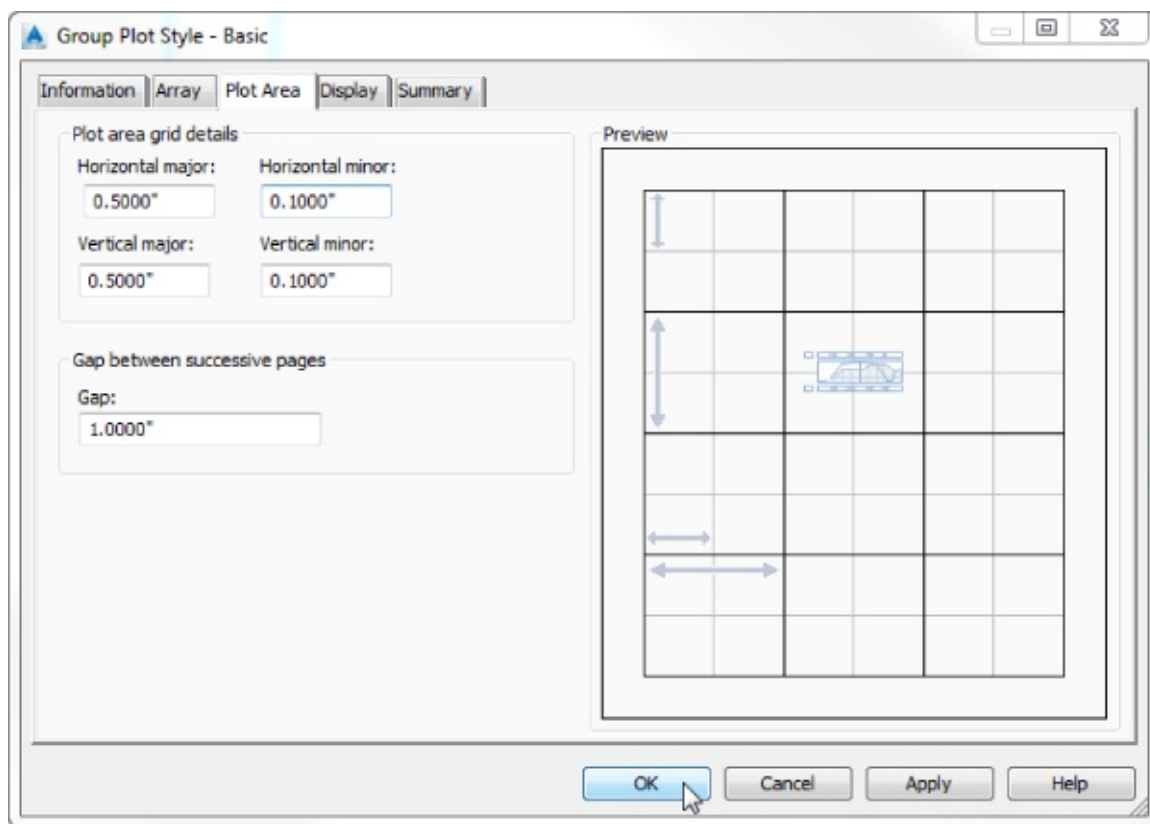


Figure 19.64 Grid spacing on sheets is specified on the Plot Area tab.

This is where you configure grid spacing per sheet.

6. On the Display tab, do the following:
 - a. Verify that the visibility is turned on for Major Horizontal Grid and Major Vertical Grid.
 - b. Verify that the visibility is turned off for Minor Horizontal Grid and Minor Vertical Grid.
 - c. Verify that the layers for all of the grid components are set to C-ROAD-SCTN-GRID.
 - d. Verify that the layers for Print Area and Sheet Border are set to C-ROAD-SCTN-TTLB.
 - e. Set Color for Major Horizontal Grid and Major Vertical Grid to **9**.
 - f. Set Color for Print Area to Cyan and Sheet Border to Green. Your Display tab will look like [Figure 19.65](#).

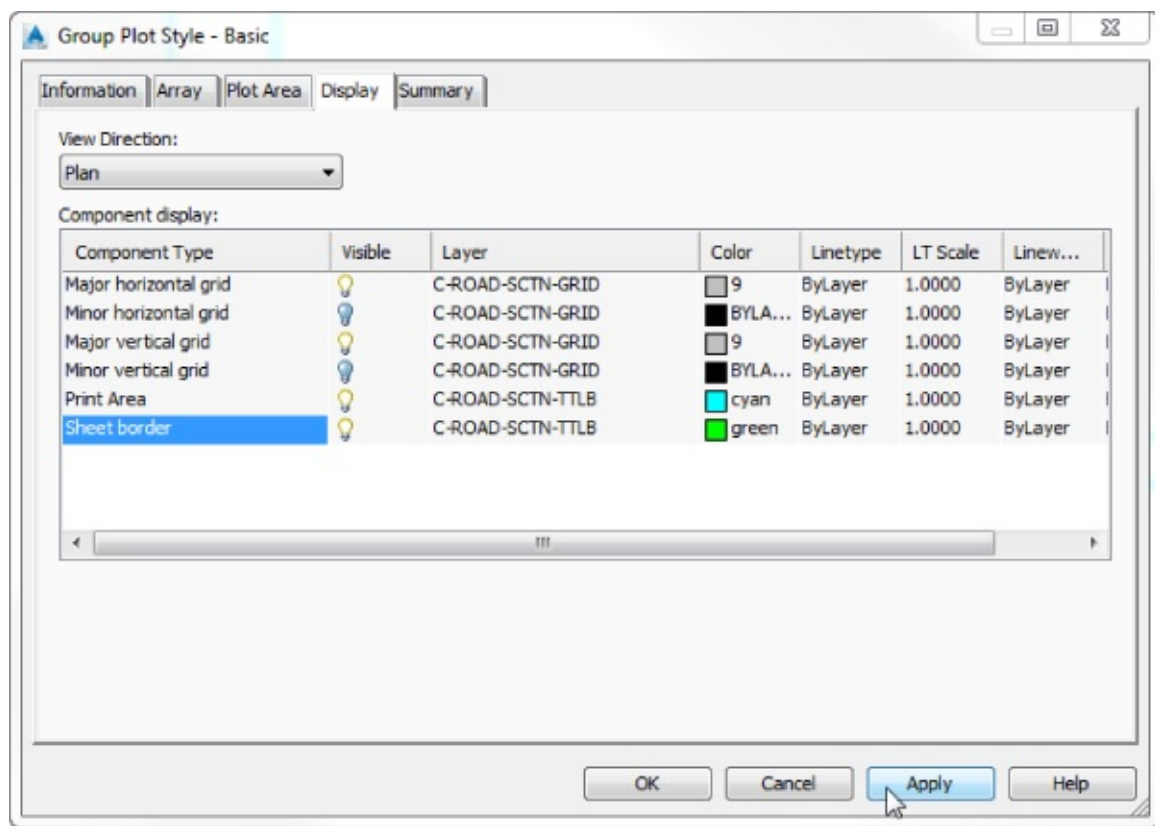


Figure 19.65 The Display components for the group plot style

7. Click OK to complete the group plot style edits.

Your section view sheets should be shaping up to the point where you could almost generate sheets. There may be instances when some text is placed outside the cyan line that represents the viewport border. In the next steps, you will use a nonvisible section band to prevent this from happening and push the views onto the page.

8. From the Settings tab of Toolspace, expand Section View > Band Styles > Section Data.

9. Right-click Section Data and select New.

10. On the Information tab, set Name to **_NO DISPLAY**.

Prefixing the style name with the underscore ensures it will appear at the top of the Style list.

11. On the Band Details tab, do the following:

- a. Set Band Height to **0.2"** (or **5 mm**).
- b. Set Text Box Width to **0.2"** (or **10 mm**).
- c. Set Offset From Band to **0"** (or **0 mm**).

Even though the band will not be visible, the Civil 3D program still accounts for this spacing when placing the views on the sheet. In this step, you are using this to your advantage.

12. On the Display tab, verify that the visibility is turned off for all components.

13. Click OK to finish creating a new section data band style.

14. Select any section view by clicking the station label or the elevation label.

15. From the Section View contextual tab > Modify View panel, choose View Group Properties to display the Section View Group Properties dialog.

6. On the Section Views tab, do the following:
- Click the ellipsis in the Change Band Set column, as shown in [Figure 19.66](#). You may need to widen the column to view the full titles.

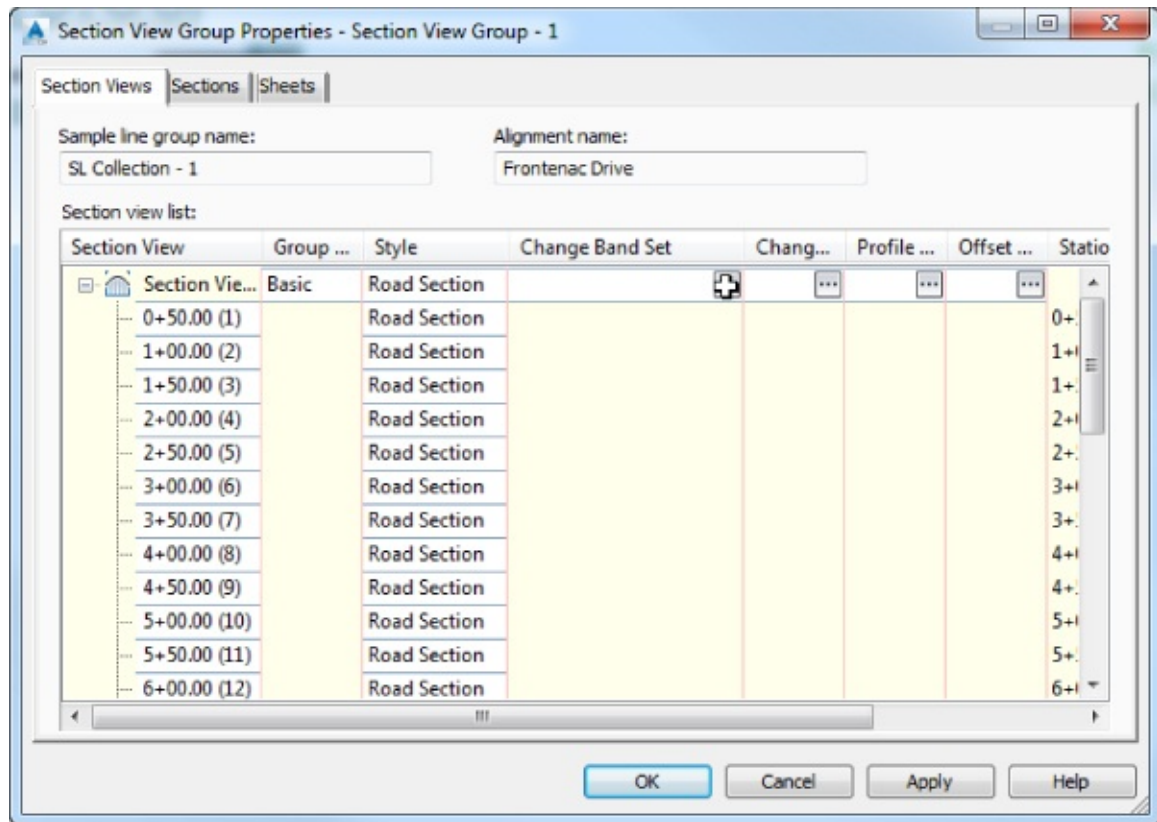


Figure 19.66 Changing the band set in use for all section views

The Section View Group Bands dialog will appear.

- Verify that Band Type is set to Section Data.
- Set the band style as `_NO DISPLAY` and click Add.
- Set the Gap distance to **0**, as shown in [Figure 19.67](#), and click OK to dismiss the Section View Group Bands dialog.

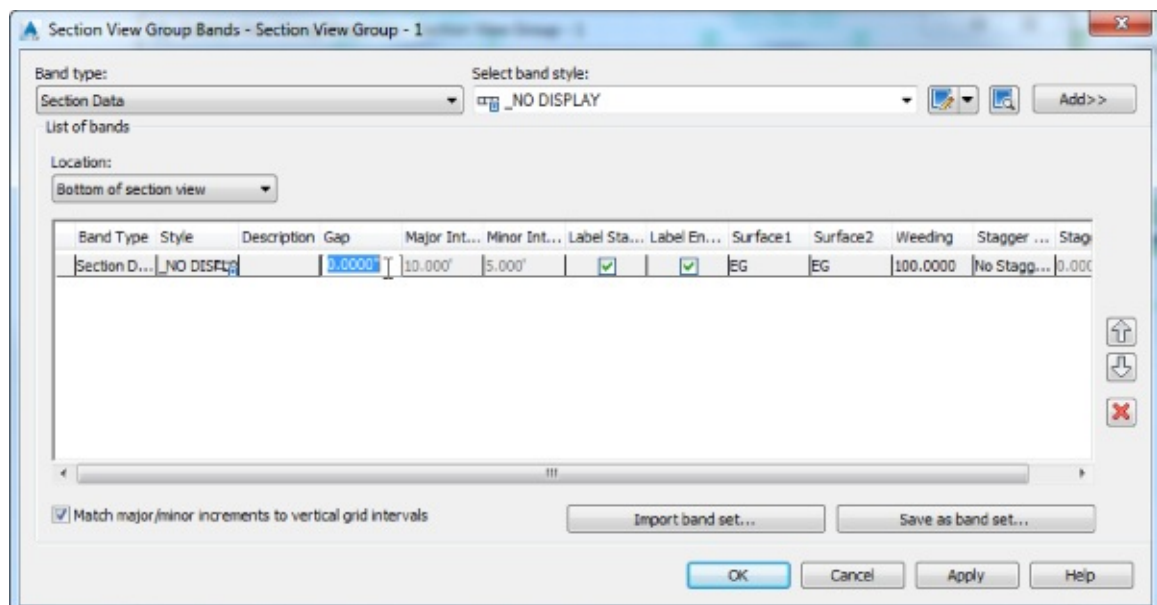


Figure 19.67 Add the data : band and set the gap to 0.

e. Click OK to exit the Section View Group Properties dialog.

17. From the Section View contextual tab ► Modify View panel, select Update Group Layout.

The cross-section sheets should look like [Figure 19.68](#).



[Figure 19.68](#) The completed exercise

When this exercise is complete, you can save and close the drawing. A saved copy of this drawing is available from the book's web page with the filename `1907_GroupPlotStyles_FINISHED.dwg` (`1907_GroupPlotStyles_METRIC_FINISHED.dwg`).

With all of the object styles, you have a great deal of control over every detail, even ones that may seem trivial. Instead of being bogged down trying to understand every option, don't be afraid to use a “trial and error” approach. If you make a change you don't like, you can always edit the style until you get it right.

The Bottom Line

Override object styles with other styles. In spite of the desire to have uniform styles and appearances between objects within a single drawing, project, or firm, there are always going to be changes that need to be made.

Master It Open the `MasterIt_1901.dwg` (`MasterIt_1901_METRIC.dwg`) file and change the alignment style associated with Alignment B to Layout. In addition, change the surface style used for the EG surface to Contours And Triangles, but change the contour interval to 1' and 5' (or **0.5 m** and **2.5 m**) and the color of the triangles to yellow.

Create a new surface style. Almost every set of plans that you send out of the office is going to include a surface, so it is important to be able to generate multiple surface styles that match your company standards. In addition to surface styles for production, you may find it helpful to have styles to use when you are designing that show a tighter contour spacing as well as the points and triangles needed to make some edits.

Master It Open the MasterIt_1902.dwg (MasterIt_1902_METRIC.dwg) file and create a new surface style named **Micro Editing**. Set this style to display contours at 0.5' and 1.0' (or 0.1 m and 0.2 m), as well as triangles and points. Set the EG surface to use this new surface style.

Create a new profile view style. Everyone has their preferred look for a profile view. These styles can provide a lot of information in a small space, so it is important to be able to create a profile view that will meet your needs.

Master It Open the MasterIt_1903.dwg (MasterIt_1903_METRIC.dwg) file and create a new profile view style named **Mastering Profile View**. Set this style to not clip the vertical or horizontal grid. Set the bottom horizontal ticks at 50' and 10' intervals (25 m and 5 m). Set the left and right vertical ticks at 10' and 2' intervals (5 m and 1 m). In addition, turn off the visibility of Graph Title, Bottom Axis Annotation Major, and Bottom Axis Annotation Horizontal Geometry Point. Set the profile view in the drawing to use this new profile view style.

Appendix A

The Bottom Line

Each of The Bottom Line sections in the chapters suggests exercises to deepen skills and understanding. Sometimes there is only one possible solution, but often you are encouraged to use your skills and creativity to create something that builds on what you know and lets you explore one of many possibilities.

Chapter 1: The Basics

Find any Civil 3D object with just a few clicks. By using Prospector to view object data collections, you can minimize the panning and zooming that are part of working in a CAD program. When common subdivisions can have hundreds of parcels or a complex corridor can have dozens of alignments, jumping to the desired one nearly instantly shaves time off everyday tasks.

Master It Open 0103_Example.dwg (0103_Example_METRIC.dwg) from www.sybex.com/go/masteringcivil3d2015, and find parcel number 6 without using any AutoCAD commands or scrolling around on the drawing screen.

Solution

1. In Toolspace, Prospector tab, expand Sites > ROW > Parcels.
2. Right-click Special ROW: 6 and select Zoom To.

Modify the drawing scale and default object layers. Civil 3D understands that the end goal of most drawings is to create hard-copy construction documents. When you set a drawing scale, Civil 3D removes a lot of the mental gymnastics that other programs require when you're sizing text and symbols. When you set object layers for the entire drawing, Civil 3D makes uniformity of drawing files easier than ever to accomplish.

Master It Continue working in the file 0103_Example.dwg (0103_Example_METRIC.dwg). It is not necessary to have completed the previous exercise to continue. Zoom to extents and change the Annotation scale in the Model tab from the 50-scale drawing to a 100-scale drawing. (For metric users, change the scale from 1:250 to 1:1000.)

Solution In the lower-right corner of the application window, select 1" = 100' (1:1000) from the Annotation Scale list. Notice the change in size of the annotation to reflect the new scale.

Navigate the ribbon's contextual tabs. As with AutoCAD, the ribbon is the primary interface for accessing Civil 3D commands and features. When you select an AutoCAD Civil 3D object, the ribbon displays commands and features related to that object. If several object types are selected, the Multiple contextual tab is displayed.

Master It Continue working in the file 0103_Example.dwg (0103_Example_METRIC.dwg). It is not necessary to have completed the previous exercise to continue. Using the ribbon interface, access the Alignment properties for QuickStart Alignment and rename it **Existing CL**.

Solution

1. Select QuickStart Alignment to display the contextual Alignment tab of the ribbon.
2. From the Alignment tab > Modify panel, click Alignment Properties.
3. In the Alignment Properties menu, select the Information tab.
4. Rename the alignment to Existing CL in the Name Section of the tab and click OK.

Create a curve tangent to the end of a line. It's rare that a property stands alone. Often, you must create adjacent properties, easements, or alignments from their legal descriptions.

Master It Open the drawing MasterIt_0101.dwg (MasterIt_0101_METRIC.dwg). Create a curve tangent to the east end of the line labeled in the drawing. The curve should meet the following specifications:

- Radius: 200.00' (60 m)
- Arc Length: 66.58' (20 m)

Solution

1. On the Home tab > Draw panel > Curves Creation drop-down, select Create Curve From End Of Object.
2. Select the east side of the line that is labeled “Create a curve tangent to this line.”
3. On the command line, press ↵ to confirm that you will enter a radius value.
4. On the command line, type **200.00 (60)**, and then press ↵.
5. Type **L** to specify the length, and then press ↵.
6. Type **66.58 (20)**, and then press ↵.

Label lines and curves. Although converting linework to parcels or alignments offers you the most robust labeling and analysis options, basic line- and curve-labeling tools are available when conversion isn't appropriate.

Master It Add line and curve labels to each entity created in MasterIt_0101.dwg or MasterIt_0101_METRIC.dwg. It is recommended that you complete the previous exercise so you will have a curve to work with. Choose a label that specifies the bearing and distance for your lines and length, radius, and delta of your curve. Check your final result against the completed file found on the book's web page named MasterIt_0101_FINISHED.dwg (MasterIt_0101_METRIC_FINISHED.dwg).

Solution

1. Go to the Annotate tab of the ribbon > Labels & Tables panel and click the Add Labels button. Then do the following:
 - Set Feature to Line And Curve.
 - Set Label Type to Multiple Segment.
 - Set Line Label Style to Bearing Over Distance.
 - Set Curve Label Style to Distance – Radius And Delta.
2. Click Add and then select each line and curve by clicking it in the drawing.

The default label should be acceptable. If not, perform the following steps:

1. Select one of the newly placed labels.
2. On the Labels: General Segment Label contextual tab > Modify panel, click Label Properties.
3. In the resulting AutoCAD Properties palette, select an alternative label in the General section.

Chapter 2: Survey

Properly collect field data and import it into Civil 3D. Once survey data has been collected, you will want to pull it into Civil 3D via the survey database. This will enable you to create lines and points that correctly reflect your field measurements.

Master It Open `MasterIt_0201.dwg`, create a new survey database, and import the `MasterIt_0201.txt` (or `MasterIt_0201_METRIC.txt`) file into the drawing. The format of this specific file is PENZD (comma-delimited).

Solution

1. Open `MasterIt_0201.dwg` (or `MasterIt_0201_METRIC.dwg`).
2. On the Survey tab, create a new local survey database.
3. Right-click Import Events, and click Import Survey Data.
4. On the Specify Database page of the wizard, select your new database and click Next.
5. On the Specify Data Source page, configure Data Source Type as Point File, click the plus sign to browse to the `MasterIt_0201.txt` (or `MasterIt_0201_METRIC.txt`) file, configure the point file format as PENZD (comma-delimited), and click Next.
6. On the Specify Network page, click Create New Network to give the new network a name. Select the network and click Next.
7. On the Import Options page, select Mastering Civil 3D as the current figure prefix database and edit the options to insert both the figures and the points. Click Finish.

Your drawing should look like `MasterIt_0201_FINISHED.dwg` (`MasterIt_0201_METRIC_FINISHED.dwg`), which you can download from this book's web page, www.sybex.com/go/masteringcivil3d2015.

Set up description key and figure databases. Proper setup is key to working successfully with the Civil 3D survey functionality.

Master It Create a new description key set and the following description keys using the default styles. Make sure all description keys are going to layer V-NODE:

- CL*
- EOP*
- TREE*
- BM*

Change the description key search order so that the new description key set takes precedence over the default.

Create a figure prefix database called **MasterIt** containing the following codes:

- CL
- EOP
- BC

Test the new description key set and figure prefix database by importing the file `MasterIt_CodeTest_0202.txt` (use the same file for both US and metric units). Note that this file is a comma-delimited PNEZD file.

Solution

1. Open a new drawing based on a Civil 3D template.
2. On the Settings tab, locate the Description Key Sets branch. Right-click Description Key Sets and select New. Give the description key set a name of your choice and click OK.
3. Right-click the new description key set and select Edit Keys. Add the description keys, including the asterisk, as shown in the list.
4. Set the layer for each item in the table to V-NODE.
5. Close the Description Key Editor and save the drawing.
6. Right-click Description Key Sets and select Properties.
7. Move your new description key set to the top of the list using the arrows. Click OK.
8. In the Toolspace ► Survey tab, right-click Figure Prefix Databases and select New.
9. Create a new figure prefix database called **MasterIt**.
10. Expand the Figure Prefix Database branch; then right-click the new figure prefix database and select Manage Figure Prefix Database.
11. Add the required codes to the list. Leave all options as default and click OK.
12. On the Survey tab, right-click Survey Databases, select New Local Survey Database, and give it a name of your choice. Click OK.
13. Right-click Import Events and select Import Survey Data. Import the file `MasterIt_CodeTest_0202.txt`. When importing, verify that the point file format is set to PNEZD (comma delimited) and the current figure prefix database is set to MasterIt. Be sure that Process Linework During Import, Insert Figure Objects, and Insert Survey Points are each set to Yes.

Your file should now contain linework that reflects your efforts. Compare your work with `MasterIt_0202_FINISHED.dwg` (`MasterIt_0202_METRIC_FINISHED.dwg`), which you can download from this book's web page, www.sybex.com/go/masteringcivil3d2015.

Translate surveys from assumed coordinates to known coordinates. Understanding how to manipulate data once it is brought into Civil 3D is important to making your field measurements match your project's coordinate system.

Master It Create a new drawing based on the template of your choice and start a new survey database. Import `MasterIt_0203.fbk` (or `MasterIt_0203_METRIC.fbk`). When you import the file, turn on the Insert Network Object option. Translate the database based on the following settings:

- Base Point 1
- Rotation Angle of 10.3053°

Solution

1. Create a new drawing and a new survey database.
2. Create a new import event and import the MasterIt_0203.fbk (or MasterIt_0203_METRIC.fbk) file into a new network. Turn on the Insert Network Object option.
3. Right-click the survey database, click Translate Survey Network, and rotate the network based on the point number and rotation you were given.
4. Save the drawing and leave it open.

Your drawing should look like MasterIt_0203_FINISHED.dwg (MasterIt_0203_METRIC_FINISHED.dwg), which you can download from this book's web page, www.sybex.com/go/masteringcivil3d2014.

Perform traverse analysis. Traverse analysis is needed for boundary surveys to check for angular accuracy and closure. Civil 3D will generate the reports that you need to capture these results.

Master It Use the survey database and network from the previous “Master It” exercise. Analyze and adjust the traverse using the following criteria:

- Use an Initial Station value of 2 and an Initial Backsight value of 1.
- Use the Compass Rule option for Horizontal Adjustment.
- Use Length Weighted Distribution Method for Vertical Adjustment.
- Use a Horizontal Closure Limit value of 1:20,000.
- Use a Vertical Closure Limit value of 1:20,000.

Solution

1. Continue working in the drawing from the previous “Master It” exercise.
2. Right-click Traverse and create a new traverse from the four points using the initial station and backsight point numbers given.
3. Right-click the new traverse, perform a traverse analysis using the method and closure limits given, and apply the changes to the survey database. Click OK to close the Traverse Analysis dialog.

You can compare your analysis to MasterIt_0204_Balanced Angles.trv, MasterIt_0204_Raw Closure.trv, MasterIt_0204_Vertical Adjustment.trv, and MasterIt_0204.lso (MasterIt_0204_METRIC_Balanced Angles.trv, MasterIt_0204_METRIC_Raw Closure.trv, MasterIt_0204_METRIC_Vertical Adjustment.trv, and MasterIt_0204_METRIC.lso), which you can download from this book's web page, www.sybex.com/go/masteringcivil3d2015.

Chapter 3: Points

Import points from a text file using description key matching. Most engineering offices receive text files containing point data at some time during a project. Description keys provide a way to automatically assign the appropriate styles, layers, and labels to newly imported points.

Master It Open `Masterit_0301.dwg` (`Masterit_0301_METRIC.dwg`), which you can download from the book's web page. Revise the Civil 3D description key set to contain only the parameters listed next.

Code	Point style	Point label style	Format	Layer
GS*	Basic	Elevation Only	Ground Shot	V-NODE
EP*	Basic	Elevation and Description	Road Edge	V-NODE
HYD*	Hydrant (existing)	Elevation and Description	Hydrant	V-NODE-WATR
SW*	Basic	Elevation and Description	Sidewalk	V-NODE
TREE*	Tree	Elevation and Description	Tree	V-NODE-TREE

Import the PENZD (space delimited) file `MasterIt_0301.txt` (`MasterIt_0301_METRIC.txt`). Confirm that the description keys made the appropriate matches by looking at a handful of points of each type. Do the trees look like trees? Do the hydrants look like hydrants?

Save the resulting file for use in the remaining exercises.

Solution

1. Open `Masterit_0301.dwg` (`Masterit_0301_METRIC.dwg`).
2. Switch to the Settings tab of Toolspace, and under the Point collection locate the description key set called Civil 3D.
3. Right-click this set and choose Edit Keys.
4. Delete the first two keys in this set by right-clicking each one and choosing Delete.
5. Revise the remaining key to match the GS specifications listed under the “Master It” instructions.
6. Right-click the GS key, and choose Copy.
7. Edit the copied key to match the name of the first proposed key. Repeat the steps for the remainder of the proposed keys and exit Panorama.
8. On the Home tab ➤ Create Ground Data panel, select Points ➤ Point Creation Tools and then click the Import Points button on the toolbar.
9. Click the white plus icon to add a file to import, and navigate to the `MasterIt_0301.txt` (`MasterIt_0301_METRIC.txt`) file and click Open.
10. Select PENZD (Space Delimited) from the list, check Add Points To Point Group, create a point group with the name of your choosing, and click OK. Click OK again to complete the command.
11. Zoom extents to see the points.

12. Save the file and keep it open for use in the next “Master It” exercise.

Note that each description key parameter (style, label, format, and layer) has been respected. Your hydrants should appear as hydrants on the correct layer, your trees should appear as trees on the correct layer, and so on. Compare your work to MasterIt_0301_FINISHED.dwg (MasterIt_0301_METRIC_FINISHED.dwg).

Create a point group. Building a surface using a point group is a common task. Among other criteria, you may want to filter out any points that tend to have erroneous elevations such as utilities or vegetation.

Master It Create a new point group called Topo that includes all points *except* those with descriptor code of TREE and HYD. Use the DWG created in the previous “Master It” exercise or start with MasterIt_0301_FINISHED.dwg (MasterIt_0301_METRIC_FINISHED.dwg).

Solution

1. In Prospector, right-click Point Groups and choose New.
2. On the Information tab, enter **Topo** as the name of the new point group.
3. Switch to the Exclude tab.
4. Click the With Raw Descriptions Matching check box to turn it on, and enter **TREE*, HYD*** in the field.
5. Click OK to close the box.
6. Save the file.
7. Compare your work to the file MasterIt_0302_FINISHED.dwg (MasterIt_0302_METRIC_FINISHED.dwg).

Export points to LandXML and ASCII format. It's often necessary to export a LandXML or ASCII file of points for stakeout or data-sharing purposes. Unless you want to export every point from your drawing, it's best to create a point group that isolates the desired point collection.

Master It Create a new point group that includes all the points with a raw description of SW. Export this point group via LandXML and a PENZD comma-delimited text file.

Use the DWG created in the previous “Master It” exercise or start with MasterIt_0302_FINISHED.dwg (MasterIt_0302_METRIC_FINISHED.dwg).

Solution

1. In Prospector, right-click Point Groups and choose New.
2. On the Information tab, enter **Sidewalk** as the name of the new point group.
3. Switch to the Include tab.
4. Select the With Raw Descriptions Matching check box, and type **SW*** in the field.
5. Confirm in Prospector that all the points have the description SW, and click OK.
6. Right-click the Sidewalk point group, and choose Export LandXML.
7. Click OK in the Export To LandXML dialog.
8. Choose a location to save your LandXML file, and then click Save.

9. Navigate to the LandXML file to confirm it was created.
10. Right-click the Sidewalk point group, and choose Export Points.
11. Choose the PENZD (comma delimited) format and a destination file, and confirm that the Limit To Points In Point Group check box is selected for the Sidewalk point group. Click OK.
12. Navigate to the ASCII file to confirm it was created.
13. Save the file.
14. Compare your work to the file MasterIt_0303_FINISHED.dwg (MasterIt_0303_METRIC_FINISHED.dwg).

Create a point table. Point tables provide an opportunity to list and study point properties. In addition to basic point tables that list number, elevation, description, and similar options, you can customize point table formats to include user-defined property fields.

Master It Use the DWG created in the previous “Master It” exercise or start with MasterIt_0303_FINISHED.dwg (MasterIt_0303_METRIC_FINISHED.dwg). Create a Centerline point group to include all the centerline points, and create a point table for this point group using the PNEZD format table style.

Solution

1. In Prospector, right-click Point Groups and choose New.
2. On the Information tab, enter **Centerline** as the name of the new point group.
3. Switch to the Include tab.
4. Select the With Raw Descriptions Matching check box, and type **CL*** in the field.
5. Confirm in Prospector that all the points have the description CL, and click OK.
6. Change to the Annotate tab of the ribbon, Labels And Tables panel, and select Add Tables ➤ Add Point Table.
7. Choose the PNEZD format for the table style.
8. Click the Point Groups button, choose the Centerline point group, and click OK. Click OK to insert the table. Leave the defaults as they are.

The command line prompts you to choose a location for the upper-left corner of the point table.
9. Choose a location on your screen somewhere to the right of the project.
10. Zoom in, and confirm your point table.
11. Compare your work to the file MasterIt_0304_FINISHED.dwg (MasterIt_0304_METRIC_FINISHED.dwg).

Chapter 4: Surfaces

Create an existing ground surface using points. The most common way to create a surface model is by adding point data to the definition of a surface.

Master It Open the `MasterIt0401.dwg` or the `MasterIt0401_METRIC.dwg` file. Create a new surface called **Existing**. Add the point group Topo to its definition. Leave the default styles.

Solution

1. On the Home tab ➤ Create Ground data panel of the ribbon, click Surfaces ➤ Create Surface.
2. Name the surface **Existing** and click OK.
3. In Prospector, expand the Surfaces ➤ Existing ➤ Definition branch.
4. Right-click Point Groups and select Add.
5. Select the point group Topo and click OK.

Modify and update a TIN surface. TIN surface creation is mathematically precise, but sometimes the assumptions behind the equations leave something to be desired. By using the editing tools built into Civil 3D, you can create a more realistic surface model.

Master It Continue working in the file from the previous exercise or open the `MasterIt0402.dwg` or the `MasterIt0402_METRIC.dwg` file. Use the irregular-shaped polyline and apply it to the surface as an outer boundary of the surface. Make the boundary a destructive breakline.

Solution

1. Expand the Surfaces ➤ Existing ➤ Definition branch.
2. Right-click Boundaries and select the Add option.
3. Verify that the check box by Non-Destructive Breakline is unchecked and click OK. Select the magenta-colored polyline to complete the boundary addition.

Prepare a slope analysis. Surface analysis tools allow users to view more than contours and triangles in Civil 3D. Engineers working with nontechnical team members can create strong, meaningful, analysis displays to convey important site information using the built-in analysis methods in Civil 3D.

Master It Open the `MasterIt0403.dwg` or the `MasterIt0403_METRIC.dwg` file. Create a slope banding analysis showing slopes under and over 10 percent, and insert a dynamic slope legend to help clarify the result of the analysis.

Solution

1. Select the surface. From the TIN Surface contextual tab ➤ Modify panel, click the Surface Properties icon.
2. On the Information tab, set the Surface Style field to Slope Banding (2D).
3. Switch to the Analysis tab for the Slopes analysis type.
4. Set Ranges Number to **2**, and then click the Run Analysis arrow.
5. Change both the maximum slope for ID 1 and the minimum slope for ID 2 to **10** percent.

6. Click OK to close the Surface Properties dialog.
7. Select the surface to display the TIN Surface contextual tab.
8. From the TIN Surface contextual tab ➤ Labels & Tables panel, choose Add Legend Table.
9. Enter **S** ↵ and then **D** ↵ at the command line, and pick a placement point on the screen to create a dynamic elevations legend.

Label surface contours and spot elevations. Showing a stack of contours is useless without context. Using the automated labeling tools in Civil 3D, you can create dynamic labels that update and reflect changes to your surface as your design evolves.

Master It Open the `MasterIt0404.dwg` or the `MasterIt0404_METRIC.dwg` file. Label the major contours on the surface at 2' and 10' (Background) or 1 m and 5 m (Background).

Solution

1. Select the surface. From the TIN Surface contextual tab ➤ Modify panel, click the Surface Properties icon.
2. On the Information tab, change the style to Contours 2' and 10' (Background) or Contours 1 m and 5 m (Background).
3. Click OK to close the dialog and press Esc to deselect.
4. From the Annotate tab ➤ Labels & Tables panel, click the Add Labels button.
5. Set Feature to Surface and Label Type to Contour – Multiple.
6. Set Major Contour Label Style to Existing Major Labels and Minor Contour Label Style to <none>.
7. Click Add.
8. Pick a point on one side of the site, and draw a contour label line across the entire site. Press Esc to exit the command.

Import a point cloud into a drawing and create a surface model. As laser scan data collection becomes more common and replaces other large-scale data-collection methods, the ability to use point clouds in Civil 3D is critical. Intensity helps postprocessing software determine the ground cover type. While Civil 3D can't do postprocessing, you can see the intensity as part of the point cloud style.

Master It Import an LAS format point cloud file (`MasterIt0405_Denver.las`) into the Civil 3D template (with a coordinate system) of your choice. As you create the point cloud file, set the style to Elevation Ranges. Use a portion of the file to create a Civil 3D surface model. No coordinate system needs to be set for this example.

Solution

1. Start a new file by using the default Civil 3D template of your choice. Save the file before proceeding as `MasterIt0405_DenverUSA.dwg`.
2. In Prospector, right-click Point Clouds and select the Create Point Cloud option to display the Create Point Cloud Wizard.
3. Set the name of the point cloud to **Denver**.

4. Set the point cloud style to Elevation Ranges, and click the Next button.
5. Use the white plus sign to browse to the LAS file.
6. Select MasterIt0405_Denver.las and click Open. Click Finish.

This file contains 4.7 million data points, so be patient while the file imports.

7. When the point cloud has completed processing, zoom extents. Select the bounding box representing the point cloud to display the Point Cloud contextual tab.
8. Select the Add Points To Surface command.
9. Name the surface, set a surface style, and click the Next button.
10. Choose the Window radio button, and click Define Region In Drawing.
11. Define the region by creating a window around the western half of the point cloud.
12. Click Next to see the Summary page, and click the Finish button. Close Panorama. Due to the large size of point cloud files, no finished drawing is available on the web page.

Chapter 5: Parcels

Create parcels from objects. The first step in any parceling project is to create an outer boundary for the site together with all the known linework.

Master It Open the `Masterit_0501.dwg` (`Masterit_0501_METRIC.dwg`) file, which you can download from www.sybex.com/go/masteringcivil3d2015. Convert the polyline segments to parcels and place them in the Subdivision Lots site.

Solution

1. From the Home tab ➤ Create Design panel, select Parcel ➤ Create Parcel From Objects.
2. At the `Select lines, arcs, or polylines to convert into parcels or [Xref]:` prompt, pick all polylines in the drawing either by picking them one by one or by using a selection window and pressing ↵.

The Create Parcels – From Objects dialog appears.

3. Create a new site by using the drop-down menu options within the dialog, and name it **Subdivision Lots**. Click OK to dismiss the Site Properties dialog. From the drop-down menus, select Subdivision Lots, Property, and Parcel Name in the Site, Parcel Style, and Area Label Style selection boxes, respectively.

Keep the default values for the remaining options.

4. Click OK to dismiss the dialog.
5. Save the drawing but keep it open for the next exercise. If you would like to see what the drawing should look like at this point, you can open `Masterit_0501_FINISHED.dwg` (`Masterit_0501_METRIC_FINISHED.dwg`), available from the book's website.

Create a right-of-way parcel using the right-of-way tool. For many projects, the ROW parcel serves as frontage for subdivision parcels. For straightforward sites, the automatic Create ROW tool provides a quick way to create this parcel.

Master It Continue working in the `Masterit_0501.dwg` (`Masterit_0501_METRIC.dwg`) file or you can open `Masterit_0501_FINISHED.dwg` (`Masterit_0501_METRIC_FINISHED.dwg`), available from the book's website. Create a ROW parcel that is offset by 30' (10 m) on either side of the road centerline with no fillets at boundary ends. Then clean up the ROW parcel area on each side of the alignment at the ends. Note: The south side parcel represents the existing main road ROW.

Solution

1. Since the alignment is not part of the Subdivision Lots site, it will need to be moved from siteless mode to the desired site. Therefore, move it to the Subdivision Lots site either by selecting in the drawing, right-clicking, choosing the Move To Site option, and selecting the previously mentioned site, or by using the Prospector options for the alignment.
2. From the Home tab ➤ Create Design panel, select Parcel ➤ Create Right Of Way.
3. At the `Select parcels:` prompt, pick the area labels of your newly created parcels.
4. Press ↵ to stop picking parcels.

The Create Right Of Way dialog appears.

5. Expand the Create Parcel Right Of Way branch, and enter **30' (10 m)** in the Offset From Alignment text Value field.
6. Expand the Cleanup At Parcel Boundaries branch.
7. Select None from the drop-down menu in the Cleanup Method selection box.
8. Expand the Cleanup At Alignment Intersections branch. Verify that Cleanup Method is set to None.
9. Click OK to dismiss the dialog and create the ROW parcels.
10. From the Home tab ➤ Create Design panel, select Parcel Creation Tools. Click the Delete Sub-Entity tool and pick to delete on the North side the two segments inside the ROW and on the south side the parcel segments representing the extension of the alignment ROW inside the existing ROW.
11. Save the drawing but keep it open for the next exercise. If you would like to see what the drawing should look like at this point, you can open `Masterit_0502_FINISHED.dwg` (`Masterit_0502_METRIC_FINISHED.dwg`), available from the book's website.

Create subdivision lots automatically by layout. The biggest challenge when creating a subdivision plan is optimizing the number of lots. The precise sizing parcel tools provide a means to automate this process.

Master It Continue working in the previous drawing or open `Masterit_0502_FINISHED.dwg` (`Masterit_0502_METRIC_FINISHED.dwg`), available from the book's website. Create a series of lots with a minimum of 10,890 sq. ft. (1,012 m²) and 90' (30 m) frontage on each side of the ROW beginning at existing ROW and ending at the ROW intersection with the southeast segments of the two north parcels. Set the Use Minimum Frontage At Offset option to No, and redistribute the remainder and set the Minimum Depth and Width values to 50' (15 m). Leave all other options at their defaults.

Solution

1. From the Home tab's Create Design panel, select Parcel ➤ Parcel Creation Tools.
2. Expand the Parcel Layout Tools toolbar.
3. Change the value of the following parameters by clicking in the Value column and typing in the new values:
 - Minimum Area: **10,890** sq. ft. (**1,012** square meters)
 - Minimum Frontage: **90'** (**30** m)
4. Change the following parameters by clicking in the Value column and selecting the appropriate option from the drop-down menu:
 - Minimum Frontage at Offset: No
 - Minimum Width: 50' (15m)
 - Minimum Depth: 50' (15m)
 - Automatic Mode: On

- Remainder Distribution: Redistribute Remainder

5. Click the Slide Line – Create tool.

The Create Parcels – Layout dialog appears.

6. Select Subdivision, Property, and Parcel Name from the drop-down menus in the Site, Parcel Style, and Area Label Style selection boxes, respectively.

Keep the default values for the rest of the options.

7. Click OK to dismiss the dialog.

8. At the Select Parcel to be subdivided or [Pick]: prompt, pick the west parcel neighboring the ROW by selecting its area label.

9. At the Select start point on frontage: prompt, use your Endpoint Osnap to pick the point on the existing ROW where the west proposed ROW begins.

The parcel jig appears.

10. Move your cursor slowly along the ROW parcel segment, and notice that the parcel jig follows the segment.

11. At the Select end point on frontage: prompt, select the point on the proposed ROW where this ROW parcel meets the southeast line of the north parcel.

12. At the Specify angle or [Bearing azimuth]: prompt, type **90** and press \leftarrow . If you receive the message No Solution Found on your command line, try again. This may mean you snapped to the wrong spot.

13. At the Accept Result? prompt, press \leftarrow to accept the lot layout. Press Esc twice to exit the command.

14. Repeat the steps from 8 to 13 for the east side parcel, with start point at the point on the existing ROW where the east side ROW begins and the end point at the point where the east side ROW meets the southeast segment of the north parcel on this side.

15. Save the drawing but keep it open for the next exercise. If you would like to see what the drawing should look like at this point, you can open Masterit_0503_FINISHED.dwg (Masterit_0503_METRIC_FINISHED.dwg), available from the book's website.

Add multiple-parcel segment labels. Every subdivision plat must be appropriately labeled. You can quickly label parcels with their bearings, distances, direction, and more using the segment labeling tools.

Master It Continue working in the previous drawing, or you can open

Masterit_0503_FINISHED.dwg (Masterit_0503_METRIC_FINISHED.dwg), available from the book's website. Place Bearing Over Distance labels on every parcel line segment and Delta Over Length And Radius labels on every parcel curve segment using the Multiple Segment Labeling tool.

Solution

1. From the Annotate tab > Labels & Tables panel, select Add Labels > Parcel > Add Parcel Labels.

2. From the drop-down menus, in the Add Labels dialog, select Multiple Segment, Bearing Over

Distance, and Delta Over Length And Radius in the Label Type, Line Label Style, and Curve Label Style selection boxes, respectively.

3. Click Add.
4. At the Select parcel to be labeled by clicking on area label: prompt, pick the area label for each of your single-family parcels. After each pick, press ↵ to accept Clockwise as the default.
5. Save the drawing. If you would like to see what the drawing should look like at this point, you can open Masterit_0504_FINISHED.dwg (Masterit_0504_METRIC_FINISHED.dwg), available from the book's website.

Chapter 6: Alignments

Create an alignment from an object. Creating alignments based on polylines is a traditional method of building engineering models. With built-in tools for conversion, correction, and alignment reversal, it's easy to use the linework prepared by others to start your design model. These alignments lack the intelligence of crafted alignments, however, and you should use them sparingly.

Master It Open the Masterit_0601.dwg (Masterit_0601_METRIC.dwg) file, and create alignments from the linework found there, having as alignment style the Layout style, using the All Labels label set, and making sure that the source objects are erased.

Solution

1. From the Home tab ➤ Create Design panel, choose Alignment ➤ Create Alignment From Objects.
2. When prompted to select objects, pick the lines and arc; then press Enter twice to complete the selection process and accept the alignment direction. Make sure that the alignment direction follows the direction of the arrow next to the Start Here annotation.
3. In the Create Alignment From Objects dialog, verify that Alignment Label Set is set to All Labels and Alignment Style is set to Layout.
4. Uncheck the Add Curves Between Tangents option, but make sure that the Erase Existing Entities option is checked, and click OK.

Create a reverse curve that never loses tangency. Using the alignment layout tools, you can build intelligence into the objects you design. One of the most common errors introduced into engineering designs is curves and lines that aren't tangent, requiring expensive revisions and resubmittals. The free, floating, and fixed components can make smart alignments in a large number of combinations available to solve almost any design problem.

Master It Open the Masterit_0602.dwg (Masterit_0602_METRIC.dwg) file, and create an alignment using the linework on the right as a guide. Create a reverse curve with both radii equal to 200 (or 60 for metric users) and with a pass-through point at the intersection of the two arcs.

Solution

1. From the Home tab ➤ Create Design panel, choose Alignment ➤ Alignment Creation Tools.
2. In the Create Alignment - Layout dialog, accept the defaults and click OK to display the Alignment Layout Tools toolbar.
3. Use the Fixed Line (Two Points) tool to trace both lines and press ↵ when complete to end the command.
4. Use the Floating Curve (From Entity, Radius, Through Point) tool to draw an arc from the endpoint of the west line with a radius of 200 (or 60 for metric users) and the Curve Solution Angle to be less than 180 with a pass-through point at the intersection of the two sketched arcs.
5. Press ↵ when complete to end the command.
6. Use the Free Curve Fillet (Between Two Entities, Radius) tool to fillet the floating curve created in the previous step and the last fixed segment with a reverse curve with a radius of

200 (or 60 for metric users) and Curve Solution Angle of less than 180.

7. Close the Alignment Layout Tools toolbar.

Replace a component of an alignment with another component type. One of the goals in using a dynamic modeling solution is to find better solutions, not just the first solution. In the layout of alignments, this can mean changing components along the design path or changing the way they're defined. The ability of Civil 3D to modify alignments' geometric construction without destroying the object or forcing a new definition lets you experiment without destroying the data already based on an alignment.

Master It Convert the first curve along the alignment in the Masterit_0603.dwg (Masterit_0603_METRIC.dwg) file to a floating arc that is constrained by the next segment. Then change the radius of the curves to 150 (or 45 for metric users). Make sure that the tangency is maintained all across the alignment.

Solution

1. Select the alignment to activate the Alignment contextual tab.
2. From the Alignment contextual tab ➤ Modify panel, choose Geometry Editor to display the Alignment Layout Tools toolbar.
3. Select the Alignment Grid View tool.
4. Starting with the first segment, click in the Tangency Constraint field and change it to **Constrained By Next (Floating)**.
5. Repeat for the other segments except the last one, which cannot be modified because it is dependent on the previous constraint.
6. Change the radii of the two curves to **150** (or **45** for metric users). Close Panorama and toolbar when finished.

Create alignment tables. Sometimes there is just too much information displayed on a drawing, and to make it clearer, tables are used to show bearings and distances for lines, curves, and segments. With their dynamic nature, these tables are kept up to date with any changes.

Master It Open the Masterit_0604.dwg (Masterit_0604_METRIC.dwg) file, and generate a line table, a curve table, and a segment table. Use whichever style you want to accomplish this.

Solution For lines:

1. Select the alignment to activate the Alignment contextual tab.
2. From the Alignment contextual tab ➤ Labels & Tables panel, choose Add Labels ➤ Multiple Segment and select the alignment. Press Enter to end the selection process.
3. On the Alignment contextual tab ➤ Labels & Tables panel, choose Add Tables ➤ Add Line.
4. Using the Pick On-Screen button at the bottom of the dialog, select the line segment labels of the alignment. Press Enter to end the selection process.

If a warning comes up regarding child styles, select the Convert All Selected Label Styles To Tag mode.

5. Click OK to accept the settings in the dialog.

6. Place the table anywhere on your drawing. The bearings and distances are now replaced by tag labels.

For curves:

1. If not done during the lines portion of the exercise, select the alignment, and on the Alignment contextual tab ➤ Labels & Tables panel, choose Add Labels Multiple Segments and select the alignment. Press Enter to end the selection process.
2. From the Alignment contextual tab ➤ Labels & Tables panel, select Add Tables ➤ Add Curve.
3. Using the Pick On-Screen button at the bottom of the dialog, select the curve segment labels of the alignment. Press Enter to end the selection process.

If a warning comes up regarding child styles, select the Convert All Selected Label Styles To Tag mode.

4. Click OK to accept the settings in the dialog.
5. Place the table anywhere on your drawing. The bearings and distances are now replaced by tag labels.

For segments:

1. If not done during the lines portion of the exercise, select the alignment, and on the Alignment contextual tab ➤ Labels & Tables panel, choose Add Labels Multiple Segments and select the alignment.
2. From the Alignment contextual tab ➤ Labels & Tables panel, choose Add Tables ➤ Add Segment.
3. In the By Alignment section, select the alignment you want to label and click OK.
4. Place the table anywhere on your drawing. The bearings and distances are now replaced by tag labels.

If a warning comes up regarding child styles, select the Convert All Selected Label Styles To Tag mode.

Chapter 7: Profiles and Profile Views

Sample a surface profile with offset samples. Using surface data to create dynamic sampled profiles is an important advantage of working with a three-dimensional model. Quick viewing of various surface centerlines and grip-editing alignments makes for an effective preliminary planning tool. Combined with offset data to meet review agency requirements, profiles are robust design tools in Civil 3D.

Master It Open the `MasterIt_0701.dwg` (`MasterIt_0701_METRIC.dwg`) file and sample the ground surface along Alignment A, along with offset values at 15' left and 15' right (or 4.5 m left and 4.5 m right) of the alignment. Generate a profile view showing this information using the Major Grids profile view style with no data band sets.

Solution

1. From the Home tab ➤ Create Design panel, choose Profile ➤ Create Surface Profile.
2. Verify that Alignment A and the EG surface are selected and then click the Add button to add the EG surface.
3. Check the Sample Offsets check box and enter **15, -15** (or **4.5, -4.5** for metric users) in the box below the sample offsets and then click the Add button.
4. Click the Draw In Profile View button to open the Create Profile View Wizard.
5. On the General page of the wizard, verify that the profile view style is set to Major Grids.
6. On the Data Bands wizard page, verify that Select Band Set is set to _No Bands.
7. Click the Create Profile View button.
8. Place the profile anywhere on the drawing.
9. Save the drawing but keep it open for the next exercise. If you would like to see what the drawing should look like at this point, you can open `MasterIt_0701_FINISHED.dwg` (`MasterIt_0701_METRIC_FINISHED.dwg`), available from the book's website.

Lay out a design profile on the basis of a table of data. Many programs and designers work by creating pairs of station and elevation data. The tools built into Civil 3D let you input this data precisely and quickly.

Master It Continue in the previous file or open `MasterIt_0701_FINISHED.dwg` (`MasterIt_0701_METRIC_FINISHED.dwg`). Create a layout profile on Alignment A using the Layout profile style and a complete label set with the following information for Imperial users.

Station	PVI Elevation	Curve Length
0+00	822.00	
1+80	825.60	300'
6+50	800.80	

Or use the following information for metric users:

Station	PVI Elevation	Curve Length
0+000	250.400	
0+062	251.640	100 m
0+250	244.840	

Solution

1. Create a surface profile for Alignment A and generate a profile view (if not done in the previous example) or use the `MasterIt_0701_FINISHED.dwg` (`MasterIt_0701_METRIC_FINISHED.dwg`) file.
2. From the Home tab ➤ Create Design panel, choose Profile ➤ Profile Creation Tools.
3. Select a grid line on the profile view that shows the surface profile. The Create Profile – Draw New dialog will open.
4. Verify that Profile Style is set to Layout and Profile Label Set is set to Complete Label Set.
5. Click OK to dismiss the Create Profile – Draw New dialog.
6. In the Profile Layout Tools toolbar, set the Length value of the Curve settings to the specified curve length.
7. Use the Draw Tangents With Curves button and the Transparent Commands toolbar to enter station elevation data.
8. Once you've finished, close the toolbar and, if needed, move the labels to be legible.
9. Save the drawing but keep it open for the next exercise. If you would like to see what the drawing should look like at this point, you can open `MasterIt_0702_FINISHED.dwg` (`MasterIt_0702_METRIC_FINISHED.dwg`), available from the book's website.

Add and modify individual entities in a design profile. The ability to delete, modify, and edit the individual components of a design profile while maintaining the relationships is an important concept in the 3D modeling world. Tweaking the design allows you to pursue a better solution, not just a working solution.

Master It Continue in the previous file or open `MasterIt_0702_FINISHED.dwg` (`MasterIt_0702_METRIC_FINISHED.dwg`). For the layout profile created in the previous exercise, modify the curve so that it is 200' (or 60 m for metric users). Then insert a PVI at Station 4+90, Elevation 794.60 (or at Station 0+150, Elevation 242.840 for metric users) and add a 300' (or 96 m for metric users) parabolic vertical curve at the newly created PVI.

Solution

1. Continue in the drawing you have open from the previous exercise or open the `MasterIt_0702_FINISHED.dwg` (`MasterIt_0702_METRIC_FINISHED.dwg`) file. Pick the Design profile, and from the Profile contextual tab ➤ Modify Profile panel, select the Geometry Editor button.
2. In the Profile Layout Tools toolbar, select the Profile Grid View button.
3. In the Profile Entities tab of Panorama, change the Profile Curve Length field to **200** (or **60** for metric users).

4. In the Profile Layout Tools toolbar, select the Insert PVI button.
5. Using the Profile Station Elevation transparent command, select the profile grid, and enter **490** for the station and **794.60** for the elevation (or **150** for the station and **242.840** for the elevation for metric users). Press Esc twice.
6. Back in the Profile Layout Tools toolbar, click the drop-down arrow next to the Vertical Curve Creation button and select More Free Vertical Curves ➤ Free Vertical Parabola (PVI Based).
7. Pick the newly created PVI and enter **300** (or **96** for metric users) for Curve Length. Press ↵ twice.
8. Close the Profile Grid View and the toolbar, and save the drawing but keep it open for the next exercise. If you would like to see what the drawing should look like at this point, you can open MasterIt_0703_FINISHED.dwg (MasterIt_0703_METRIC_FINISHED.dwg), available from the book's website.

Apply a standard band set. Standardization of appearance is one of the major benefits of using styles in labeling. By applying band sets, you can quickly create plot-ready profile views that have the required information for review.

Master It Continue in the previous file or open MasterIt_0703_FINISHED.dwg (MasterIt_0703_METRIC_FINISHED.dwg). Apply the Cut And Fill band set to the layout profile created in the previous exercise with the appropriate profiles referenced in each of the bands.

Solution

1. Continue in the drawing you have open from the previous exercise or open the MasterIt_0703_FINISHED.dwg (MasterIt_0703_METRIC_FINISHED.dwg) file, pick a grid line in the profile view, and from the Profile View contextual tab ➤ Modify View panel, choose Profile View Properties to display the Profile View Properties dialog.
2. On the Bands tab, click Import Band Set, and select the Cut And Fill band set. Click OK.
3. Select Bottom Of Profile View from the Location drop-down list.
4. Scroll over and change Profile2 to Layout (1) for both rows.
5. Select Top Of Profile View from the Location drop-down list.
6. Scroll over and change Profile2 to Layout (1).
7. Click OK to apply the settings.
8. Save the drawing. If you would like to see what the drawing should look like at this point, you can open MasterIt_0704_FINISHED.dwg (MasterIt_0704_METRIC_FINISHED.dwg), available from the book's website.

Chapter 8: Assemblies and Subassemblies

Create a typical road assembly with lanes, curbs, gutters, and sidewalks. Most corridors are built to model roads. The most common assembly used in these road corridors is some variation of a typical road section consisting of lanes, curbs, gutters, and sidewalks.

Master It Create a new drawing from either the Civil 3D metric or Imperial template. Build a symmetric assembly using LaneSuperelevationAOR, UrbanCurbGutterValley2, and LinkWidthAndSlope for terrace and buffer strips adjacent to the UrbanSidewalk. Use widths and slopes of your choosing.

Solution

1. Create a new drawing from the DWT of your choice.
2. From the Home tab ➤ Create Design panel, choose Assembly ➤ Create Assembly.
3. Name your assembly and set styles as appropriate. Click OK.
4. Pick a location in your drawing for the assembly.
5. Locate the Lanes tab on the Tool Palettes window.
6. Click the LaneSuperelevationAOR button on the Lanes tab.
7. Use the AutoCAD Properties palette to edit the subassembly parameters, and follow the command-line prompts to set the LaneSuperelevationAOR on the left and right sides of your assembly.
8. Repeat the process with UrbanCurbGutterValley2, LinkWidthAndSlope, and UrbanSidewalk.
9. Complete this portion of the exercise by placing a final LinkWidthAndSlope on the outside of the UrbanSidewalk.
10. Save the drawing for use in the next “Master It” exercise.

Edit an assembly. Once an assembly has been created, it can be easily edited to reflect a design change. Often, at the beginning of a project you won't know the final lane width. You can build your assembly and corridor model with one lane width and then change the width and rebuild the model immediately.

Master It Working in the drawing from the preceding exercise, edit the width of each LaneSuperelevationAOR to **14' (4.3 m)**, and change the cross slope of each LaneSuperelevationAOR to **-3.00%**.

Solution

1. Select the right lane subassembly. Be sure this is the only element selected.
2. From the Subassemblies contextual tab ➤ Modify Subassembly panel, choose Subassembly Properties.
3. On the Parameters tab, change the width to **14' (4.3 m)**. Note that width will be listed twice.
4. Change the Default Slope to **-3.00%**.
5. Repeat for the left lane subassembly. Save the drawing for use in the next “Master It” exercise.

Add daylighting to a typical road assembly. Often, the most difficult part of a designer's job is

figuring out how to grade the area between the last engineered structure point in the cross section (such as the back of a sidewalk) and the existing ground. An extensive catalog of daylighting subassemblies can assist you with this task.

Master It Working in the drawing from the preceding exercise, add the DaylightMinWidth subassembly to both sides of your typical road assembly. Establish a minimum width between the outermost subassembly and the daylight offset of 10' (3 m).

Solution

1. Locate the Daylight tab on the tool palette.
2. Click the DaylightMinWidth button on the tool palette.
3. Use the AutoCAD Properties palette to verify that Min Width is set to **10' (3 m)**.
4. Follow the command-line prompts to set the DaylightMinWidth on the right and left sides of your assembly.
5. Press Esc on your keyboard to complete the command.

You should now have daylighting subassemblies visible on both sides of your assembly. To see what the drawing should look like at this point, you can open

0807_MasteringAssemblies_FINISHED.dwg or

0807_MasteringAssemblies_METRIC_FINISHED.dwg.

Chapter 9: Basic Corridors

Build a single baseline corridor from an alignment, profile, and assembly. Corridors are created from the combination of alignments, profiles, and assemblies. Although corridors can be used to model many things, most corridors are used for road design.

Master It Open the `MasterIt_0909.dwg` or `MasteringIt_0909_METRIC.dwg` file. Build a corridor named Corridor A on the basis of the Alignment A alignment, the FG profile, and the Basic Assembly. Set all frequencies to 10' (or 3 m for metric users).

Solution

1. From the Home tab ➤ Create Design panel, choose Corridor.
2. In the Name text box, name your corridor **Corridor A**.
Keep the default values for Corridor Style and Corridor Layer.
3. Verify that Alignment is set to Alignment A and Profile is set to FG.
4. Verify that Assembly is set to Basic Assembly.
5. Verify that Target Surface is set to EG surface.
6. Verify that Set Baseline And Region Parameters is checked.
7. Click OK to accept the settings in the Create Corridor dialog and to display the Baseline And Region Parameters dialog.
8. Click the Set All Frequencies button to display the Frequency To Apply Assemblies dialog.
9. Change the value for all of the frequencies to **10'** (or **3** m for metric users).
10. Click OK to accept the settings in the Frequency To Apply Assemblies dialog.
11. Click OK to accept the settings in the Baseline And Region Parameters dialog.
12. You may receive a dialog warning that the corridor definition has been modified. If you do, select the Rebuild The Corridor option.

A finished copy of this drawing is available from the book's web page with the filename `MasterIt_0909_FINISHED.dwg` or `MasterIt_0909_METRIC_FINISHED.dwg`.

Use targets to add lane widening. Targets are an essential design tool used to manipulate the geometry of the road.

Master It Open the `MasterIt_0910.dwg` or `MasterIt_0910_METRIC.dwg` file. Set Right Lane to target Alignment A-Right.

Solution

1. Select the corridor, and from the Corridor contextual tab ➤ Modify Corridor panel choose Corridor Properties icon.
2. On the Parameters tab, in the Targets column in the baseline row, click the ellipsis button to display the Target Mapping dialog.
3. In the Target Mapping dialog, click <None> in the Width Alignment row for Right Assembly Group to display the Set Width Or Offset Target dialog.

4. Select Alignment A-Right and click Add.
5. Click OK to dismiss the Set Width Or Offset Target dialog.
6. Click OK to accept the settings in the Target Mapping dialog.
7. Click OK to accept the settings in the Corridor Properties dialog and allow the corridor to rebuild.

A finished copy of this drawing is available from the book's web page with the filename `MasterIt_0910_FINISHED.dwg` or `MasterIt_0910_METRIC_FINISHED.dwg`.

Create a corridor surface. The corridor model can be used to build a surface. This corridor surface can then be analyzed and annotated to produce finished road plans.

Master It Open the `MasterIt_0911.dwg` or `MasterIt_0911_METRIC.dwg` file. Create a corridor surface for the Alignment A corridor from Top links. Name the surface Corridor A-Top.

Solution

1. Select the corridor and from the Corridor contextual tab ➤ Modify Corridor panel, choose Corridor Properties icon.
2. On the Surfaces tab, click the Create A Corridor Surface button in the upper-left corner of the dialog.
3. Click the surface item under the Name column and change the default name of your surface to **Corridor A-Top**.
4. Verify that Links has been selected from the drop-down list in the Data Type selection box.
5. Verify that Top has been selected from the drop-down list in the Specify Code selection box.
6. Click the Add Surface Item button to add Top Links to the surface definition.
7. Click OK to accept the settings in the dialog; then choose Rebuild The Corridor when prompted.

The corridor and surface will build.

A finished copy of this drawing is available from the book's web page with the filename `MasterIt_0911_FINISHED.dwg` or `MasterIt_0911_METRIC_FINISHED.dwg`.

Add an automatic boundary to a corridor surface. A surface can be improved with the addition of a boundary. Single-baseline corridors can take advantage of automatic boundary creation.

Master It Open the `MasterIt_0912.dwg` or `MasterIt_0912_METRIC.dwg` file. Use the Automatic Boundary Creation tool to add a boundary using the Daylight code.

Solution

1. Select the corridor, and from the Corridor contextual tab ➤ Modify Corridor panel choose the Corridor Properties icon and switch to the Boundaries tab.
2. Right-click the surface entry and choose Add Automatically ➤ Daylight. Click Daylight to continue.
3. Click OK to accept the settings in the dialog; then choose Rebuild The Corridor when prompted.

The corridor and surface will build.

A finished copy of this drawing is available from the book's web page with the filename MasterIt_0912_FINISHED.dwg or MasterIt_0912_METRIC_FINISHED.dwg.

Chapter 10: Advanced Corridors, Intersections, and Roundabouts

Create corridors with non-centerline baselines. Although for simple corridors you may think of a baseline as a road centerline, other elements of a road design can be used as a baseline. In the case of a cul-de-sac, the EOP, the top of curb, or any other appropriate feature can be converted to an alignment and profile and used as a baseline.

Master It Open the `MasterIt1001.dwg` (`MasterIt1001_METRIC.dwg`) file, which you can download from www.sybex.com/go/masteringcivil3d2015. Add the cul-de-sac alignment and profile to the corridor as a baseline. Create a region under this baseline that applies the Intersection Typical assembly.

Solution

1. Select the corridor. From the Corridor contextual tab ► Modify Corridor panel, click Corridor Properties.
2. Switch to the Parameters tab.
3. Click Add Baseline, choose Cul de Sac EOP in the Create Corridor Baseline dialog, and click OK.
4. In the Profile column, click inside the <Click here...> box, choose Cul de Sac EOP FG in the Select A Profile dialog, and click OK.
5. Right-click the new baseline, and choose Add Region.
6. Select Intersection Typical in the Create Corridor Region dialog and click OK.
7. Click OK to leave the Corridor Properties dialog and rebuild the corridor.

An example of the finished exercise can be found in `MasterIt1001_SolutionA.dwg` (`MasterIt1001_SolutionA_METRIC.dwg`) on the book's web page.

Add alignment and profile targets to a region for a cul-de-sac. Adding a baseline isn't always enough. Some corridor models require the use of targets. In the case of a cul-de-sac, the lane elevations are often driven by the cul-de-sac centerline alignment and profile.

Master It Continue working in the `MasterIt1001.dwg` (`MasterIt1001_METRIC.dwg`) file. You need to have completed the previous exercise before continuing. Add the Second Road alignment and Second Road FG profile as targets to the cul-de-sac region. Adjust Assembly Application Frequency to 5' (1 m) for tangents and curves.

Solution

1. Select the corridor. From the Corridor contextual tab ► Modify Corridor panel, click Corridor Properties.
2. In the Corridor Properties dialog, switch to the Parameters tab.
3. Click the Target Mapping button in the RG – Intersection Typical region.
4. In the Target Mapping dialog:
 - Assign Second Road as Width Alignment for Lane – L.

- Assign Second Road FG profile as Outside Elevation Profile.
 - Click OK.
5. Click OK to leave the Target Mapping dialog.
 6. Click the Frequency button in the same region.
 7. Change the Curve Increment value to 5' (1 m).
 8. Click OK to exit the Frequency To Apply Assemblies dialog.
 9. Click OK to leave the Corridor Properties dialog and rebuild the corridor.

An example of the finished exercise can be found in `MasterIt1001_SolutionB.dwg` (`MasterIt1001_SolutionB_METRIC.dwg`) on the book's web page.

Create a surface from a corridor and add a boundary. Every good surface needs a boundary to prevent bad triangulation. Bad triangulation creates inaccurate contours and can throw off volume calculations later in the process. Civil 3D provides several tools for creating corridor surface boundaries, including an Interactive Boundary tool.

Master It You need to have completed the previous exercise before continuing. Keep working in the `MasterIt1001.dwg` (`MasterIt1001_METRIC.dwg`) file. Create an interactive corridor surface boundary for the entire corridor model.

Solution

1. Select the corridor. From the Corridor contextual tab ➤ Modify Corridor panel, click Corridor Properties.
2. In the Corridor Properties dialog, switch to the Boundaries tab.
3. Select the corridor surface, right-click, and choose Add Interactively.
4. Follow the command-line prompts to add a boundary based on feature lines all the way around the entire corridor.
5. Type C ↵ to close the boundary and end the command.
6. Click OK to leave the Corridor Properties dialog and rebuild the corridor.

An example of the finished exercise can be found in `MasterIt1001_SolutionC.dwg` (`MasterIt1001_SolutionC_METRIC.dwg`) on the book's web page.

Chapter 11: Superelevation

Add superelevation to an alignment. Civil 3D has convenient and flexible tools that will apply safe, correct superelevation to an alignment curve.

Master It Open the `MasterIt1101.dwg` (`MasterIt1101_METRIC.dwg`) file, which you can download from www.sybex.com/go/masteringcivil3d2015. Verify that the design speed of the road is 20 miles per hour (35 km per hour) and apply superelevation to the entire length of the alignment. Use AASHTO 2004 design criteria with an eMax of 6% 2-Lane. Use the option to automatically resolve overlap. For the remainder of the options, use the default settings unless otherwise directed.

Solution

1. Select the alignment. From the Alignment contextual tab ► Modify panel, choose Alignment Properties.
2. On the Design Criteria tab, verify that there is a check mark next to Use Criteria-Based Design.
3. Set the design criteria file using the ellipsis and the Minimum Radius Table to use eMax of 6% on the right side of the dialog.
4. Verify that the design speed is set to 20 mph (35 km/h) on the left side, and click OK.
5. From the Alignment contextual tab, click Superelevation ► Calculate/Edit Superelevation.
6. Click Calculate Superelevation Now.
7. Step through the Superelevation Wizard, taking all the defaults for Roadway Type, Lanes, and Shoulder Control.
8. On the Attainment page, place a check mark next to Automatically Resolve Overlap. Click Finish.

You should now have superelevation applied to the design with no overlap.

Create a superelevation assembly. For superelevation to happen, you need to have an assembly that is capable of superelevation.

Master It Continue working in `MasterIt1101.dwg` (`MasterIt1101_METRIC.dwg`). You must have completed the previous exercise before starting this one. Create an assembly similar to the one in the top image shown earlier in the chapter in [Figure 11.10](#). Set each lane to be **14' (4.5 m)** wide and each shoulder to be **6' (2 m)** wide. Leave all other options at their defaults. If time permits, build a corridor based on the alignment and assembly.

Solution

1. From the Home tab ► Create Design panel, choose Assembly ► Create Assembly.
2. Name the assembly **AOR** and set the assembly type to Undivided Crowned Road. Click OK.
3. Click to place the assembly in the graphic.
4. From the Lanes subassembly palette, click the LaneSuperelevationAOR subassembly and set the lane width to **14' (4.5 m)** in the Properties palette.
5. Click the assembly to place one lane on the right; click again to place the assembly to the left.

Press Esc when complete.

6. Select the right subassembly and set its Use Superelevation parameter to Right Lane Outside. Press Esc to clear the selection.
7. Select the left subassembly and set its Use Superelevation parameter to Left Lane Outside. Press Esc to clear the selection.
8. Place the shoulders on each side using ShoulderExtendAll and setting the width to **6' (2 m)**; then press Esc when finished.
9. If time permits, create a corridor based on the alignment and assembly you just created.
10. Save the drawing.

Create a rail corridor with cant. Cant tools allow users to create corridors that meet design criteria specific to rail needs.

Master It In the drawing `MasterIt1102.dwg` (`MasterIt1102_METRIC.dwg`), create a Railway assembly with the RailSingle subassembly using the default parameters for width and depth. Add a LinkSlopeToSurface generic link with 50 percent slope to each side. Add cant to the alignment in the drawing using the default settings for attainment. Create a corridor from these pieces.

Solution

1. From the Home tab ➤ Create Design panel, choose Assembly ➤ Create Assembly.
2. Name the assembly **Rail** and set the type to Railway. Click OK and place the assembly in the graphic.
3. From the Bridge And Rail subassembly palette, click the RailSingle subassembly.
4. Click the assembly in the drawing to place the rail design.
5. From the Generic palette, click LinkSlopeToSurface.
6. Set the slope to **-50%** and configure a side parameter to place on the left and then the right sides of the assembly.
7. Press Esc to complete the process.
8. Select the alignment. From the Alignment contextual tab ➤ Modify panel, choose Cant ➤ Calculate/Edit Cant.
9. Click Calculate Cant Now, and click Finish.
10. Build a corridor from the alignment, assembly, and the proposed profile (which has been designed for you ahead of time).
11. Set the target surface to Existing Intersection and clear the check box for Set Baseline And Region Parameters.

If you need assistance building your corridor, review Chapters 9 and 10. But hopefully you've figured it out by this point!

Create a superelevation view. Superelevation views are a great place to get a handle on what is going on in your roadway design. You can visually check the geometry as well as make changes to the design.

Master It Open the drawing MasterIt1103.dwg (MasterIt1103_METRIC.dwg). Create a superelevation view for the alignment. Show only the left and right outside lanes as blue and red, respectively.

Solution

1. Select the alignment and choose Superelevation ➤ Create Superelevation View.
2. In the Create Superelevation View dialog, toggle off Left Outside Shoulder and Right Outside Shoulder. The remaining check boxes are for the lane views.
3. Set Left Outside Lane Color to Blue, set Right Outside Shoulder Color to Red, and click OK.
4. Place the view in the graphic.

Chapter 12: Cross Sections and Mass Haul

Create sample lines. Before any section views can be displayed, sections must be created from sample lines.

Master It Open `MasterIt_1201.dwg` (`MasterIt_1201_METRIC.dwg`) and create sample lines along the USH 10 alignment every 50 units (20 for metric users). Sample all data, and set the left and right swath widths to 50 (20 for metric users).

Solution

1. From the Home tab ➤ Profile & Section Views panel, choose Sample Lines.
2. Select the USH 10 alignment and sample all data; then click OK.
3. In the Sample Line toolbar, click the By Range Of Stations option.
4. Create sample lines by station range and set your sampling increments and swaths for both left and right to **50** (20 for metric users); then click OK and ↵ to complete the command.
5. Save the drawing and keep it open for use in the next exercise. (See `MasterIt_1201_FINISHED.dwg` or `MasterIt_1201_METRIC_FINISHED.dwg` for finished versions of this exercise.)

Create section views. Just as profiles can be shown only in profile views, sections require section views to be displayed. Section views can be plotted individually or all at once. You can break them up into groups for plotting into sheets.

Master It In the previous exercise, you created sample lines. In that same drawing, create section views for all the sample lines. For US units, use a cross-section scale of 1" = 20' on an Arch D size layout sheet. For metric units, use a cross-section scale of 1:500 on an ISO A0 size sheet. For all other options, use the default settings and styles.

Solution

1. Continue working in `MasterIt_1201.dwg` (`MasterIt_1201_METRIC.dwg`) if you finished the previous exercise, or open `MasterIt_1201_FINISHED.dwg` (`MasterIt_1201_METRIC_FINISHED.dwg`).
2. For US users, change the annotation scale to 1" = 20'. For metric users, make sure the annotation scale is 1:500.
3. Select one of the sample lines.
4. From the Sample Line contextual tab ➤ Launch Pad panel, click Create Section View ➤ Create Multiple Section Views.
5. On the section placement page, click the ellipsis button to set the Arch D Section 20 Scale option (set ISO A0 Section 1 to **500** for metric users). Click OK.
6. Leave all options at their defaults, and click Create Section Views.
7. Click in the graphic to place the views. Save the drawing and keep it open for use in the next exercise. (See `MasterIt_1202_FINISHED.dwg` or `MasterIt_1202_METRIC_FINISHED.dwg` for finished versions of this exercise.)

Define and compute materials. Materials are required to be defined before any quantities can be

displayed. You learned that materials can be defined from surfaces or from corridor shapes. Corridors must exist for shape selection, and surfaces must already be created for comparison in materials lists.

Master It Using MasterIt_1201.dwg (Master It_1201_METRIC.dwg), create a materials list that compares Existing Intersection with HWY 10 DATUM Surface. Use the Earthworks Quantity takeoff criteria.

Solution

1. Continue working in MasterIt_1201.dwg (MasterIt_1201_METRIC.dwg) if you finished the previous exercise, or open MasterIt_1202_FINISHED.dwg (MasterIt_1202_METRIC_FINISHED.dwg).
2. Select one of the sample lines.
3. From the Sample Line contextual tab ➤ Launch Pad panel, click Compute Materials. Select the alignment and sample line group, and then click OK.
4. In the upper-right corner of the Compute Materials dialog, set the quantity takeoff criteria to Earthworks.
5. Set the Existing Ground surface to Existing Intersection by clicking the <Click Here...> field.
6. Set Datum to HWY 10 DATUM, and click OK. Save the drawing and keep it open for use in the next exercise. (See MasterIt_1203_FINISHED.dwg or MasterIt_1203_METRIC_FINISHED.dwg for finished versions of this exercise.)

Graphically, nothing will appear. Continue to the next exercise to see the results of your work.

Generate volume reports. Volume reports give you numbers that can be used for cost estimating on any given project. Typically, construction companies calculate their own quantities, but developers often want to know approximate volumes for budgeting purposes.

Master It Continue using MasterIt_1201.dwg (MasterIt_1201_METRIC.dwg). Be sure you have completed all the previous “Master It” exercises before continuing. Use the materials list created earlier to generate a volume report. Create a web browser–based report and a total volume table that can be displayed on the drawing.

Solution

1. Continue working in MasterIt_1201.dwg (MasterIt_1201_METRIC.dwg) if you finished the previous exercise, or open MasterIt_1203_FINISHED.dwg (MasterIt_1203_METRIC_FINISHED.dwg).
2. Without any object selected, go to the Analyze tab ➤ Volumes And Materials panel, and click Volume Report.
3. Leave all options at their defaults, and click OK.
4. If asked “Do you want to allow scripts to run?” click Yes.
Your report will be displayed.
5. Close the browser window.
6. In Civil 3D, from the Analyze tab ➤ Volumes And Materials panel, click Total Volume Table.
7. Leave all options at their defaults and click OK. Place the table anywhere on the screen.

8. Save the drawing. (See MasterIt_1204_FINISHED.dwg or MasterIt_1204_METRIC_FINISHED.dwg for finished versions of this exercise.)

Chapter 13: Pipe Networks

Create a pipe network by layout. After you've created a parts list for your pipe network, the first step toward finalizing the design is to use Pipe Network By Layout.

Master It Open the `MasterIt_1301.dwg` or `MasterIt_1301_METRIC.dwg` file. Use Network Creation Tools to create a waste water pipe network named Mastering. Use the Composite surface, and name only structure and pipe label styles. Don't choose an alignment at this time. Create 8" (200 mm) PVC pipes and a manhole called SMH. There are blocks in the drawing to assist you in placing manholes. Begin at the START HERE marker, and place a manhole at each marker location. You can erase the markers when you've finished.

Solution

1. From the Home tab ➤ Create Design panel, select Pipe Network ➤ Pipe Network Creation Tools.
2. In the Create Pipe Network dialog, set the following parameters:
 - Network Name: **Mastering**
 - Network Parts List: Waste Water
 - Surface Name: **Composite**
 - Alignment Name: <none>
 - Structure Label Style: Name Only (Sanitary)
 - Pipe Label Style: Name Only
3. Click OK. The Network Layout Tools toolbar will appear.
4. Set the structure to Concentric Cylindrical Structure NF (Concentric Cylindrical Structure SI) ➤ SMH and the pipe to PVC Pipe (PVC Pipe SI) ➤ 8.0 inch PVC Pipe (200 mm PVC Pipe).
5. Click Draw Pipes And Structures, and use your Insertion Osnap to place a structure at each marker location.
6. Press ↵ to exit the command. Close the toolbar.
7. Move the structure labels as desired.
8. Select a marker, right-click, choose Select Similar, and click Delete.

See `MasterIt_1301_FINISHED.dwg` or `MasterIt_1301_METRIC_FINISHED.dwg` for the result.

Create an alignment from network parts and draw parts in profile view. Once your pipe network has been created in plan view, you'll typically add the parts to a profile view based on either the road centerline or the pipe centerline.

Master It Continue working in the `MasterIt_1301.dwg` or `MasterIt_1301_METRIC.dwg` file. You need to have completed the previous exercise before beginning this one. Create an alignment named Mastering from your pipes so that station zero is located at the START HERE structure. Create a profile view from this alignment, and show the pipes and profiles for the EG and Corridor FG surfaces on the profile view. Use defaults for everything, except change the Corridor FG profile style to FG Profile on the profile view.

Solution

1. Select the structure labeled START HERE to display the Pipe Networks contextual tab, and select Alignment From Network on the Launch Pad panel.
2. Select the last structure in the pipe run, and press \leftarrow to accept the selection.
3. In the Create Alignment dialog, name the alignment **Mastering** and make sure the Create Profile And Profile View check box is selected.
4. Accept the other defaults, and click OK.
5. In the Create Profile From Surface dialog, sample both the EG and Corridor FG surfaces for the profile. Select the surfaces and click Add. Change the Corridor FG profile style to FG Profile.
6. Click Draw In Profile View.
7. In the Create Profile View dialog, click Create Profile View and choose a location in the drawing for the profile view.

A profile view showing your pipes appears. See MasterIt_1302_FINISHED.dwg or MasterIt_1302_METRIC_FINISHED.dwg for the result.

Label a pipe network in plan and profile. Designing your pipe network is only half of the process. Engineering plans must be properly annotated.

Master It Continue working in the MasterIt_1301.dwg or MasterIt_1301_METRIC.dwg file. You need to have completed the previous exercise before beginning this one. Add the Length Description And Slope pipe label style to profile pipes and the Data With Connected Pipes (Sanitary) structure label style to profile structures. Assign the alignment created in the previous “Master It” exercise to all pipes and structures.

Solution

1. Select one of the pipe or structure objects. From the Pipe Networks contextual tab ➤ Labels & Tables panel, select Add Labels ➤ Add Pipe Network Labels.
2. In the Add Labels dialog, change Feature to Pipe Network, and then change Label Type to Entire Network Profile.
 - For pipe labels, choose Length Description And Slope.
 - For structure labels, choose Data With Connected Pipes (Sanitary).
3. Click Add, and choose any pipe or structure in your profile view.
4. Drag or adjust any profile labels as desired.
5. In the Prospector tab of Toolspace, expand Pipe Networks ➤ Networks ➤ Mastering and select Pipes.
6. Select all pipes in Prospector, right-click the Reference Alignment column header, and select Edit.
7. Choose the Mastering alignment and then click OK.
8. Repeat steps 5 through 7 but choose Structures.

See MasterIt_1303_FINISHED.dwg or MasterIt_1303_METRIC_FINISHED.dwg for the result.

Create a dynamic pipe table. It's common for municipalities and contractors to request a pipe or structure table for cost estimates or to make it easier to understand a busy plan.

Master It Continue working in the MasterIt_1301.dwg or MasterIt_1301_METRIC.dwg file. You need to have completed the previous exercise before beginning this one. Create a pipe table for all pipes in your network. Use the default table style.

Solution

1. Select one of the pipe or structure objects. From the Pipe Networks contextual tab, Labels And Tables panel, select Add Tables ➤ Add Pipe.
2. In the Pipe Table Creation dialog, make sure your pipe network is selected.
3. Accept the other defaults, and click OK.
4. Place the table in your drawing.

See MasterIt_1304_FINISHED.dwg or MasterIt1304_METRIC_FINISHED.dwg for the result.

Chapter 14: Grading

Convert existing linework into feature lines. Many site features are drawn initially as simple linework for the 2D plan. By converting this linework to feature line information, you avoid a large amount of rework. Additionally, the conversion process offers the ability to drape feature lines along a surface, making further grading use easier.

Master It Open the `MasterIt_1401.dwg` or `MasterIt_1401_METRIC.dwg` file from the book's web page. Convert the magenta polyline, describing a proposed temporary swale, into a feature line and drape it across the EG surface to set elevations, and set intermediate grade break points.

Solution

1. From the Home tab ➤ Create Design panel, choose Feature Lines ➤ Create Feature Lines From Objects.
2. Select the polyline. Press the Enter key.
3. Toggle on the Assign Elevations check box and then click OK.
4. Select the EG surface in the Assign Elevations dialog.
5. Verify that Insert Intermediate Grade Break Points is on.
6. Click OK to close the dialog and return to your model.

Model a simple breakline with a feature line. Feature lines define linear slope connections or, in other words, breaklines. This can be the flow of a drainage channel, the outline of a building pad, or the back of a street curb. These linear relationships can help define grading in a model or simply enhance understanding of design intent.

Master It Edit the radius of the curve on the feature line you just created to be 100' (30 m). Set the grade from the west end of the feature line to the next PI to 4 percent, and set the remainder to a constant slope to be determined in the drawing. Draw a temporary profile view to verify that the channel is below grade for most of its length.

Solution

1. Select the feature line to activate the Feature Line contextual tab.
2. From the Feature Line contextual tab ➤ Modify panel, toggle on the Edit Geometry panel if not already visible.
3. From the Feature Line contextual tab ➤ Edit Geometry panel, choose the Edit Curve tool.
4. Select the feature line curve.
5. In the Edit Feature Line Curve dialog, change the radius to **100' (30 m)** and click OK.
6. Press the Enter key to end the command.
7. From the Feature Line contextual tab ➤ Modify panel, toggle on the Edit Elevations panel if not already visible.
8. From the Feature Line contextual tab ➤ Edit Elevations panel, select Elevation Editor.
9. Press Esc once so you can view the feature line glyphs.
10. Select station 0+00, which will show the triangular glyph on the western end of the feature.

11. Hold down the Ctrl key and select station 0+86.66 (0+027.08 if metric).
12. Click the Flatten Grade Or Elevations tool to open the Flatten dialog.
13. Select Constant Grade and click OK to close.
14. Select the PI at station 1+35.18 (0+041.78 if metric).
15. Hold down the Ctrl key and select station 2+29.01 (0+069.54 if metric).
16. Click the Flatten Grade Or Elevations tool to open the Flatten dialog.
17. Select Constant Grade and click OK to close.
18. Select the feature line, and from the Feature Line contextual tab ➤ Launch Pad panel, choose Quick Profile.
19. Change the profile view style to Profile View, click OK to accept the rest of the defaults, and pick a point on the screen to draw the quick profile view.
20. Dismiss Panorama to view the Quick Profile.

Model planar site features with grading groups. Once a feature line defines a linear feature, gradings collected in grading groups model the slope projections from that line to other points in space. These projections can be combined to model a site much like a TIN surface, producing a dynamic design tool.

Master It Use grading criteria to define the pilot channel, with grading on both sides of the sketched centerline. Define the channel using a Grading To Distance of 5' (1.5 m) with a slope of 3:1, and connect the channel to the EG surface using a grading with slopes that are 4:1. Generate a surface from the grading group. If prompted, do not weed the feature line.

Solution

1. From the Home tab ➤ Create Design panel, choose Grading ➤ Grading Creation Tools to activate the Grading Creation Tools toolbar.
2. Click the Create A Grading Group tool to create a grading group and name the group.
3. Verify that the Automatic Surface Creation option is checked, and click OK.
4. Click OK to accept the surface creation options.
5. Click the Set The Target Surface tool to set the target surface to EG, and click OK.
6. Change Grading Criteria to Grade To Distance.
7. Click the Create Grading tool, and pick the feature line.
8. If the Weed Feature Line dialog appears, select Continue Grading Without Feature Line Weeding.
9. Pick the left or right side, and enter Y ↵.
10. Enter 5 ↵ (1.5) for the distance.
11. Enter S ↵ to enter slope.
12. Enter 3 ↵ for the slope value.
13. Pick the main feature line again, and grade the other side using the same steps.

14. Change Grading Criteria to Grade To Surface.
15. Create a grading object on both the left and right outer feature lines with slopes of 4:1 for both cut and fill along the full length of the feature lines.
16. Press Esc to complete the gradings.
17. Close the Grading Creation Tools toolbar.

Chapter 15: Plan Production

Create view frames. When you create view frames, you must select the template file that contains the layout tabs that will be used as the basis for your sheets. This template must contain predefined viewports. You can define these viewports with extra vertices so you can change their shape after the sheets have been created.

Master It Open the `MasterIt_1501.dwg` (`MasterIt_1501_METRIC.dwg`) file. Run the Create View Frames Wizard to create view frames for Alignment A in the current drawing. (Accept the defaults for all other values.) These view frames will be used to generate Plan and Profile sheets on ARCH D (ISO A1 for metric users) sheets at 20 scale (1:200 scale for metric users) using the plan and profile template `MasteringPandPTemplate.dwt` or `MasteringPandPTemplate_METRIC.dwt`. All files should be saved in `C:\Mastering\Ch15\`.

Solution

1. From the Output tab ➤ Plan Production panel, choose Create View Frames.
2. On the Alignment page, select Alignment A from the Alignment drop-down list and click Next.
3. On the Sheets page, select the Plan And Profile option.
4. Click the ellipsis button to display the Select Layout As Sheet Template dialog.
5. In the Select Layout As Sheet Template dialog, click the ellipsis button, browse to `C:\Mastering\Ch15\`, select the template named `MasteringPandPTemplate.dwt` (or `MasteringPandPTemplate_METRIC.dwt` for metric users), and click Open.
6. Select the layout named ARCH D Plan And Profile 20 Scale (or ISO A1 Plan And Profile 1 to 200 for metric users), and click OK.
7. Click Create View Frames.
8. Save and leave the drawing open for the next part of this “Master It” series.

You can check your result against the finished drawing as found within the dataset for this chapter under the name of `MasterIt_1501_FINISHED.dwg` (`MasterIt_1501_METRIC_FINISHED.dwg`).

Edit view frames. The grips available to edit view frames allow the user some freedom on how the frames will appear.

Master It Continue working in the previous exercise file or open the `MasterIt_1501_FINISHED.dwg` (`MasterIt_1501_METRIC_FINISHED.dwg`) file, and move the VF- (1) view frame to Sta. 2+20 (or Sta. 0+050 for metric users) to lessen the overlap. Then adjust Match Line 1 (or Match Line 2 for metric users) so that it is now at Sta. 4+25 (or Sta. 0+200 for metric users) and shorten it so that the labels are completely within the view frames.

Solution

1. Click the VF- (1) view frame.
2. Make sure you have Dynamic Input on.
3. Click the diamond grip, and type **220** ↵ (or **50** ↵ for metric users).
4. Press Esc to clear the selection.

5. Click Match Line 1 (or Match Line 2 for metric users) to show its grips.
6. Click the diamond grip, and type **425** ↵ (or **200** ↵ for metric users).
7. Click the triangular grip on one end of the match line and shorten it so that the label is completely within the view frames.
8. Repeat step 7 for the triangular grip on the opposite end of the match line.

The match line is now centered better between the two view frames.

9. Save the drawing.

You can check your result against the finished drawing as found within the dataset for this chapter under the name of `MasterIt_1502_FINISHED.dwg` (`MasterIt_1502_METRIC_FINISHED.dwg`).

Generate sheets and review Sheet Set Manager. You can create sheets in new drawing files or in the current drawing. The resulting sheets are based on the template you chose when you created the view frames. If the template contains customized viewports, you can modify the shape of the viewport to better fit your sheet needs.

Master It Open `MasterIt_1503.dwg` (`MasterIt_1503_METRIC.dwg`) file. Run the Create Sheets Wizard to create plan and profile sheets in the current drawing for Alignment A using the plan and profile template `MasteringPandPTemplate.dwt` or `MasteringPandPTemplate_METRIC.dwt`. Make sure to choose a north arrow and add the sheets to a new sheet set named Alignment A (`Alignment A_METRIC` for metric users). (Accept the defaults for all other values.)

Solution

1. From the Output tab ➤ Plan Production panel, choose Create Sheets.
2. On the View Frame Group And Layouts page, in the Layout Creation area, select All Layouts In The Current Drawing.
3. Verify that the north arrow is selected from the drop-down list.
4. In the Sheet Set section of the wizard under New Sheet Set, key in **Alignment A (Alignment A_METRIC** for metric users).
5. Set the Sheet Set Storage Location to `C:\Mastering\Ch15\FinishedSheets\`.
6. Click Create Sheets.
7. Click OK to save the drawing.
8. Click a location as the profile origin.
9. Dismiss the Panorama Event Viewer.
10. Save the drawing.

You can check your result against the finished drawing as found within the dataset for this chapter under the name of `MasterIt_1503_FINISHED.dwg` (`MasterIt_1503_METRIC_FINISHED.dwg`).

Create section views. More and more municipalities are requiring section views. Whether this is a mile-long road or a meandering stream, Civil 3D can handle it nicely via Plan Production.

Master It Open the MasterIt_1504.dwg (MasterIt_1504_METRIC.dwg) file. Create section views and Plan Production section sheets in a new sheet set for Alignment A using the using the Road Section section view style and the section sheet template MasteringSectionTemplate.dwt or MasteringSectionTemplate_METRIC.dwt. Make sure the sections are set to be generated on ARCH D (ISO A1 for metric users) sheets at 20-scale (1:200 scale for metric users). Also, make sure to provide as Sheet Set name Alignment A_XC (Alignment A_XC_METRIC for metric users). (Accept the defaults for all other values.) All files should be saved in C:\Mastering\Ch15\FinishedSheets.

Solution

1. From the Home tab ➤ Profile & Section Views panel, choose Section Views ➤ Create Multiple Views.
2. On the General page, verify that Section View Style is set to Road Section and click Next.
3. On the Section Placement page, select the Production option.
4. Click the ellipsis button to display the Select Layout As Sheet Template dialog.
5. In this dialog, click the ellipsis button, browse to C:\Mastering\Ch15\, select the template named MasteringSectionTemplate.dwt (or MasteringSectionTemplate_METRIC.dwt for metric users), and click Open.
6. Select the layout named ARCH D Section 20 Scale (or ISO A1 Section 1 to 200 for metric users), and click OK.
7. Click Create Section Views.
8. Click a location as the section origin. The multiple section views are created.
9. From the Output tab ➤ Plan Production panel, choose Create Section Sheets.
10. In the Create Section Sheets dialog, verify that New Sheet Set is selected and named Alignment A_XC (Alignment A_XC_METRIC for metric users) and set Sheet Set Storage Location to C:\Mastering\Ch15\FinishedSheets.
11. Click Create Sheets.
12. Click OK to save the drawing.

You can check your result against the finished drawing as found within the dataset for this chapter under the name of MasterIt_1504_FINISHED.dwg (MasterIt_1504_METRIC_FINISHED.dwg).

Chapter 16: Advanced Workflows

Create a data shortcut folder. The ability to load design information into a project environment is an important part of creating an efficient team. The main design elements of the project are available to the data shortcut mechanism via the working folder and data shortcut folder.

Master It Using the MasterIt1601.dwg (MasterIt1601_METRIC.dwg) drawing, create a new data shortcut folder called Master Data Shortcuts. Use the _Sample Project project template.

Solution

1. Open the MasterIt1601.dwg (MasterIt1601_METRIC.dwg) drawing.
2. On the Manage tab ➤ Data Shortcuts panel, click New Shortcuts Folder.
3. Give the project a name of your choosing, such as **MasterIt**, and place a check mark next to Use Project Template.
4. With _Sample Project highlighted, click OK.

The data shortcut folder is now complete.

Create data shortcuts. To allow sharing of the data, shortcuts must be made before the information can be used in other drawings.

Master It Save the drawing to the Source Drawings folder in the Master Data Shortcuts project you created in the previous exercise. Create data shortcuts to all the available data in the MasterIt1601.dwg (MasterIt1601_METRIC.dwg) file.

Solution

1. Continue working in the drawing from the previous “Master It” exercise.
2. From the Application menu, use Save As to save the drawing to C:\Mastering\MasterIt\Source Drawings.
3. On the Manage tab ➤ Data Shortcuts panel, click Create Data Shortcuts.
4. Place a check mark next to all items that appear in the data listing, and click OK.

Export to earlier releases of AutoCAD. Being able to export to earlier base AutoCAD versions is sometimes necessary.

Master It Using MasterIt1601.dwg (MasterIt1601_METRIC.dwg), export the Civil 3D file so it can be used by a user working in base AutoCAD 2010.

Solution

1. Continue working in the drawing from the previous “Master It” exercise.
2. From the Application menu, select Export ➤ Export Civil 3D Drawing.
3. Do not include drawings in subfolders and do not include sheets.
4. Set Export Settings to use the 2010 file version.
5. Set Source Folder and Destination Folder to C:\Mastering\MasterIt\Source Drawings.
6. Click Export.

7. Click OK and then Cancel to close dialogs when the export is finished.

Export to LandXML. Being able to work with outside clients or even other departments within your firm that do not have Civil 3D is an important part of collaboration.

Master It Using MasterIt1601.dwg (MasterIt1601_METRIC.dwg), create a LandXML file with all of the exportable information.

Solution

1. Continue working in the drawing from the previous “Master It” exercise.
2. From the Output tab ➤ Export panel, click Export To LandXML. Use all the default settings and click OK.
3. Save the file with the default name in the same directory as MasterIt1601.dwg (MasterIt1601_METRIC.dwg).

Chapter 17: Quantity Takeoff

Open and review a list of pay items along with their categorization. The pay item list is the cornerstone of quantity takeoffs. You should download and review your pay item list and compare it against the current reviewing agency list regularly to avoid any missed items.

Master It Using the template of your choice, open the `Getting Started.csv` (or `Getting Started_Metric.csv`) pay item file that you have been working with in the previous exercises and add the 12-, 18-, and 24-Inch Pipe Culvert (or 300 mm, 450 mm, and 600 mm Pipe Culvert) pay items to your Favorites list in the QTO Manager.

Solution

1. Start a new file by using the default Civil 3D template of your choice.
2. Open the QTO Manager.
3. Click the Open button at the top left of the QTO Manager.
4. Verify that the Pay Item File Format drop-down list is set to CSV (Comma Delimited).
5. Click the Open button next to the Pay Item File text box.
6. Navigate to the `Getting Started` folder and select the `Getting Started.csv` file. Metric users should use the `Getting Started_METRIC.csv` file, which is downloadable from the book's web page.
7. Click Open to select this CSV pay item file.
8. Click OK.
9. Enter **12-Inch Pipe** (or **300 mm Pipe**) in the text box to filter.
10. Right-click the 12-Inch Pipe Culvert item (or the 300 mm Pipe Culvert item), and select Add To Favorites.
11. Repeat for the other sizes.

A saved copy of this drawing is available from the book's web page with the filename `MasteringPayItemList_FINISHED.dwg` or `MasteringPayItemList_METRIC_FINISHED.dwg`.

Assign pay items to AutoCAD objects, pipe networks, and corridors. The majority of the work in preparing quantity takeoffs is in assigning pay items accurately. By using the linework, blocks, and Civil 3D objects in your drawing as part of the process, you reduce the effort involved in generating accurate quantities.

Master It Open the `MasteringQTO.dwg` or `MasteringQTO_Metric.dwg` file and assign the CLEARING AND GRUBBING pay item to the polyline that was originally extracted from the border of the corridor. Change the hatch to have a transparency of **80**.

Solution

1. Open the drawing first and then the QTO Manager.
2. Expand the Favorites branch and select the CLEARING AND GRUBBING item.
3. Right-click and select Assign Pay Item To Area.

4. Switch to the Object option by entering **O** ↵ at the command line.
5. Select the polyline representing the limits of corridor surface.
6. Press ↵ again to end the command.
7. Select the hatch to activate the Hatch Editor contextual tab.
8. From the Hatch Editor contextual tab ➤ Properties panel, change Hatch Transparency to **80**. Using Display Order, send the hatch to the back.

Use QTO tools to review what items have been tagged for analysis. By using the built-in highlighting tools to verify pay item assignments, you can avoid costly errors when running your QTO reports.

Master It Verify that the area in the previous exercise has been assigned a pay item.

Solution

1. Turn on Highlight Objects With Pay Items in the QTO Manager.
2. Pan and hover over the hatch to confirm that the tooltip indicates a pay item assignment.

A saved copy of this drawing is available from the book's web page with the filename `MasteringQTO_FINISHED.dwg` or `MasteringQTO_METRIC_FINISHED.dwg`.

Generate QTO output to a variety of formats for review or analysis. The quantity takeoff reports give you a quick understanding of what items have been tagged in the drawing, and they can generate text in the drawing or external reports for uses in other applications.

Master It Display the length of Type C Broken markings in a Quantity Takeoff Report with the Summary (TXT) report style using the `MasteringQTOReporting.dwg` or `MasteringQTOReporting_Metric.dwg` file.

Solution

1. Open the drawing from the Analyze tab ➤ QTO panel, choose Takeoff Command, and click Compute to run the report with default settings.
2. In the lower-left corner of the Quantity Takeoff Report dialog, change the report style to Summary(TXT).xsl.
3. Click the Draw button at the bottom of the dialog.
4. Click near some clean space and you'll be returned to the Quantity Takeoff Report dialog.
5. Click Close to dismiss this dialog, and then click Close again to dismiss the Compute Quantity Takeoff dialog.
6. The calculated amount for Type C Broken Pavement Markings should be 3,163.30' (or 1,000.528 m).

A saved copy of this drawing is available from the book's web page with the filename `MasteringQTOReporting _FINISHED.dwg` or `MasteringQTOReporting_METRIC_FINISHED.dwg`.

Chapter 18: Label Styles

Override individual labels with other styles. In spite of the desire to have uniform labeling styles and appearances between alignments within a single drawing, project, or firm, there are always exceptions. Using the Ctrl+click method for element selection, you can access commands that let you modify labels and even change their styles.

Master It Open the drawing `MasterIt_1801.dwg` (`MasterIt_1801_METRIC.dwg`). Create a copy of the Perpendicular With Tick Major Station style called **Major With Marker**. Change Tick Block Name to **Marker Pnt**. Replace some (but not all) of your major station labels with this new style.

Solution

1. On the Settings tab, expand the Alignment ➤ Label Styles ➤ Station ➤ Major Station branch.
2. Right-click Perpendicular With Tick, and select Copy.
3. On the Information tab, change the name to **Major with Marker**.
4. Change to the Layout tab.
5. Select Tick from the Component drop-down.
6. Click in the Value field next to Block name and click the ellipsis.
7. In the Select a Block dialog, select Marker Pnt and click OK.
8. Click OK to close the Label Style Composer dialog.
9. Open the AutoCAD Properties palette.
10. Ctrl+click one or more major station labels.
11. Change the major station label style to **Major with Marker**.

A saved copy of this drawing, (`MasterIt_1801_FINISHED.dwg` (`MasterIt_1801_METRIC_FINISHED.dwg`), is available from the book's web page.

Create a new label set for alignments. Label sets let you determine the appearance of an alignment's labels and quickly standardize that appearance across all objects of the same nature. By creating sets that reflect their intended use, you can make it easy for a designer to quickly label alignments according to specifications with little understanding of the requirement.

Master It Continue working in the `MasterIt_1801.dwg` (`MasterIt_1801_METRIC.dwg`) file if you completed the previous exercise, or open the `MasterIt_1801_FINISHED.dwg` (`MasterIt_1801_METRIC_FINISHED.dwg`) file. Create a new label set containing only the new major station label defined in the previous exercise, and apply it to all the alignments in that drawing.

Solution

1. On the Settings tab, expand the Alignments ➤ Label Styles ➤ Label Sets branch.
2. Right-click Label Sets Branch, and select New.
3. In the Alignment Label Set dialog, change the name to **Major Only** on the Information tab.
4. Select **Major Stations** in Type and **Major with Marker** in the Major Station Label Style.

Click the Add button.

5. Click OK to close the Alignment Label Set dialog.
6. Select an alignment label, and on the contextual tab ➤ Modify panel click Edit Label Group.
7. In the Alignment Labels dialog, click Import Label Set.
8. In the Select Label Set dialog, use the drop-down to select the **Major Only** label set. Click OK to close the dialog. Click OK again to close the Alignment Labels dialog.
9. Repeat for each alignment.

A saved copy of this drawing, (MasterIt_1802_FINISHED.dwg (MasterIt_1802_METRIC_FINISHED.dwg), is available from the book's web page.

Create and use expressions. Expressions give you the ability to add calculated information to labels or add logic to label creation.

Master It Continue working in the MasterIt_1801.dwg (MasterIt_1801_METRIC.dwg) file or open the MasterIt_1802_FINISHED.dwg (MasterIt_1802_METRIC_FINISHED.dwg) file, and create an expression called Top of Curb that adds 0.5' (0.15 m) to a surface elevation. Use the expression in a spot elevation label that shows both the surface elevation and the expression-based elevation to two decimal precision.

Solution

1. In the Settings tab of Toolspace, expand Surface Label Styles ➤ Spot Elevation, right-click Expressions, and click New.
2. In the New Expression dialog, name the expression **Top of Curb**.
The expression will read {Surface Elevation}+0.5 (for metric {Surface Elevation}+0.15).
3. Use the Properties button to select the Surface Elevation Property field and type **+0.5 (+0.15 for metric)** behind it.
4. Format as Double.
5. Click OK.
6. In the same branch of Settings, right-click Spot Elevation, and select New.
7. In the Label Style Composer dialog, name the label **Top of Curb** on the Information tab.
8. On the Layout tab of the Label Style Composer, click the Value field next to Contents and open the Text Component Editor dialog.
9. Select the existing component and from the left side change the precision to **0**. Click the arrow to update the expression on the right. Without removing the existing text, add the new expression under the surface elevation text, making sure to set the precision to decimal. Press the Enter key to ensure the text appears on two lines with the expression-based label on the bottom.
10. Click OK twice to exit both dialogs.
11. Place the new label in the drawing to check your work.

A saved copy of this drawing, (MasterIt_1803_FINISHED.dwg (MasterIt_1803_METRIC_FINISHED.dwg), is available from the book's web page.

Apply a standard label set to profiles. Standardization of appearance is one of the major benefits of using Civil 3D styles in labeling. By applying label sets, you can quickly create plot-ready profile views that have the required information for review.

Master It Continue working in the MasterIt_1801.dwg (MasterIt_1801_METRIC.dwg) file or open the MasterIt_1803_FINISHED.dwg (MasterIt_1803_METRIC_FINISHED.dwg) file, and apply the Road Profile Labels label set to all layout profiles.

Solution

1. Pick one of the layout profiles, and on the contextual tab ➤ Label panel, select Edit Profile Labels.
2. In the Profile Labels dialog, click Import Label Set.
3. In the Select Label Set dialog, use the drop-down to select the Road Profile Labels label set.
4. Click OK twice to exit both dialogs.
5. Repeat this procedure for all layout profiles.

A saved copy of this drawing, (MasterIt_1804_FINISHED.dwg (MasterIt_1804_METRIC_FINISHED.dwg) is available from the book's web page.

Chapter 19: Object Styles

Override object styles with other styles. In spite of the desire to have uniform styles and appearances between objects within a single drawing, project, or firm, there are always going to be changes that need to be made.

Master It Open the `MasterIt_1901.dwg` (`MasterIt_1901_METRIC.dwg`) file and change the alignment style associated with Alignment B to Layout. In addition, change the surface style used for the EG surface to Contours And Triangles, but change the contour interval to **1'** and **5'** (or **0.5 m** and **2.5 m**) and the color of the triangles to yellow.

Solution

1. Select Alignment B, and from the Alignment contextual tab go to the Modify tab ➤ Alignment Properties.
2. On the Information tab set Alignment Object Style to Layout and click OK. Click Esc to deselect.
3. Select the EG surface, and on the Surface contextual tab go to the Modify tab ➤ Surface Properties.
4. On the Information tab set Surface Style to Contours And Triangles and click OK.
5. From the Settings tab of Toolspace, expand Surface ➤ Surface Styles.
6. Right-click Contours And Triangles and select Edit.
7. On the Contours tab, do the following:
 - a. Expand the Contour Intervals category.
 - b. Set Minor Interval to **1'** (or **0.5 m**).
Notice that the Major Interval automatically adjusts to 5' (or 2.5 m).
 - c.
8. On the Display tab with the View Direction set to Plan, set the color of the Triangles component to yellow.
9. Click OK to complete the revisions to the style. Click Esc to deselect.

Create a new surface style. Almost every set of plans that you send out of the office is going to include a surface, so it is important to be able to generate multiple surface styles that match your company standards. In addition to surface styles for production, you may find it helpful to have styles to use when you are designing that show a tighter contour spacing as well as the points and triangles needed to make some edits.

Master It Open the `MasterIt_1902.dwg` (`MasterIt_1902_METRIC.dwg`) file and create a new surface style named **Micro Editing**. Set this style to display contours at 0.5' and 1.0' (or 0.1 m and 0.2 m), as well as triangles and points. Set the EG surface to use this new surface style.

Solution

1. From the Settings tab of Toolspace, expand Surface ➤ Surface Styles.
2. Right-click Surface Styles and select New.

3. On the Information tab, set Name to **Micro Editing**.
4. On the Contours tab, do the following:
 - a. Expand the Contour Intervals category.
 - b. Set Minor Interval to **0.5'** (or **0.1 m**). Notice that the Major Interval automatically adjusts to 2.5' (or 0.5 m).
 - c. Override the Major Interval and set it to **1.0'** (or **0.2 m**).
5. On the Display tab with View Direction set to Plan, verify that the only components turned on are Points, Triangles, Minor Contours, and Major Contours.
6. Click OK to complete the creation of a new surface style.
7. Select the EG surface, and from the contextual tab, Modify panel, select Surface Properties.
8. On the Information tab set Surface Style to Micro Editing, and click OK.

Create a new profile view style. Everyone has their preferred look for a profile view. These styles can provide a lot of information in a small space, so it is important to be able to create a profile view that will meet your needs.

Master It Open the MasterIt_1903.dwg (MasterIt_1903_METRIC.dwg) file and create a new profile view style named **Mastering Profile View**. Set this style to not clip the vertical or horizontal grid. Set the bottom horizontal ticks at 50' and 10' intervals (25 m and 5 m). Set the left and right vertical ticks at 10' and 2' intervals (5 m and 1 m). In addition, turn off the visibility of Graph Title, Bottom Axis Annotation Major, and Bottom Axis Annotation Horizontal Geometry Point. Set the profile view in the drawing to use this new profile view style.

Solution

1. From the Settings tab of Toolspace, expand Profile View ➤ Profile View Styles.
2. Right-click Profile View Styles and select New.
3. On the Information tab, set Name to **Mastering Profile View**.
4. On the Grid tab, verify that Clip Vertical Grid and Clip Horizontal Grid are not selected.
5. On the Horizontal Axes tab, do the following:
 - a. Verify that the Axis To Control radio button is set to Bottom.
 - b. In the Major Tick Details area, set Interval to **50'** (or **25 m**).
 - c. In the Minor Tick Details area, set Interval to **10'** (or **5 m**).
6. On the Vertical Axes tab, do the following:
 - a. Verify that the Axis To Control radio button is set to Left.
 - b. In the Major Tick Details area, set Interval to **10'** (or **5 m**).
 - c. In the Minor Tick Details area, set Interval to **2'** (or **1 m**).
 - d. Change the Axis To Control radio button to Right.
 - e. In the Major Tick Details area, set Interval to **10'** (or **5 m**).
 - f. In the Minor Tick Details area, set Interval to **2'** (or **1 m**).

7. On the Display tab with View Direction set to Plan, turn off the visibility of Graph Title, Bottom Axis Annotation Major, and Bottom Axis Annotation Horizontal Geometry Point.
8. Click OK to complete the creation of a new Profile View style.
9. Select the profile view in the drawing, and on the Profile View contextual tab, go to the Modify View tab ➤ Profile View Properties.
10. On the Information tab set Profile View Style to Mastering Profile View, and click OK.

Appendix B

Autodesk AutoCAD Civil 3D 2015 Certification

Autodesk certifications are industry-recognized credentials that can help you succeed in your design career, providing benefits to both you and your employer. Getting certified is a reliable validation of skills and knowledge, and it can lead to accelerated professional development, improved productivity, and enhanced credibility.

This Autodesk Official Training Guide can be an effective component of your exam preparation. Autodesk highly recommends (and we agree!) that you schedule regular time to prepare, review the most current exam preparation roadmap and objectives available at www.autodesk.com/certification, use Autodesk Official Training Guides, take a class at an Authorized Training Center (find ATCs near you here: www.autodesk.com/atc), and use a variety of resources to prepare for your certification—including plenty of actual hands-on experience.

Certification Objective

To help you focus your studies on the skills you'll need for the Autodesk Civil 3D 2015 Certified Professional exam, [Table B.1](#) shows the objectives that could potentially appear on an exam and in what chapter you can find information on that topic—and when you go to that chapter, you'll find certification icons like the one in the margin here. The sections and exam objectives listed in the table are from the Autodesk Certification Exam Guide.

Table B.1 Certified Professional Exam sections and objectives

Topic	Learning Objective	Chapter
User Interface	Navigate the user interface	1
	Use the functions on the Prospector tab	1
	Use the functions on the Settings tab	1
Styles	Create and use object styles	19
	Create and use label styles	18
Lines and Curves	Use the Line and Curve commands	1
	Use the Transparent command	1
Points	Create points using the Point Creation command	3
	Create points by importing point data	3
	Use point groups to control the display of points	3
Surfaces	Create and edit surfaces	4
	Use styles and settings to display surface information	4 and 14
	Create a surface by assembling fundamental data	4
	Use styles to analyze surface display results	4

Parcels	Create parcels using the parcel layout tools	5
	Design a parcel layout	5
	Select parcel styles to change the display of parcels	5
	Select styles to annotate parcels	5
Alignments	Create alignments	6
	Design a geometric layout	6
Profiles and Profile Views	Create a surface profile	7
	Design a profile	7
	Create a layout profile	7
	Create a profile view style	19
	Create a profile view	7
Corridors	Design and create a corridor	9
	Derive information and data from a corridor	9
	Design and create an intersection	10
Sections and Section Views	Create and analyze sections and section views	12
Pipe Networks	Design and create a pipe network	13
Grading	Design and create a grading model	14
	Create a grading model feature line	14
Managing and Sharing Data	Use data shortcuts to share/manage data	16
	Create a data sharing setup	16
Plan Production	Generate a sheet set using plan production	15
	Create a sheet set	15
Survey	Use description keys to control the display of points created from survey data	2
	Use figure prefixes to control the display of linework generated from survey data	2
	Create a boundary drawing from field data	2

Good luck preparing for your certification!

WILEY END USER LICENSE AGREEMENT

Go to www.wiley.com/go/eula to access Wiley's ebook EULA.



AUTODESK
Official Press

**Cyndy Davenport
Ishka Voiculescu**

Mastering AutoCAD® Civil 3D® 2015

SYBEX
A Wiley Brand

